Form No. 380-0079 Rev D

TORO®

Count on it.

Parts Catalog

Lynx Smart Satellite Parts Breakout

Model No. LYNX SMART SATELLITE—Serial No. 00000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

380-0079 D

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Lynx Smart Satellite 4
Lynx Smart Satellite - Power Supply 6

© 2019—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Lynx Smart Satellite

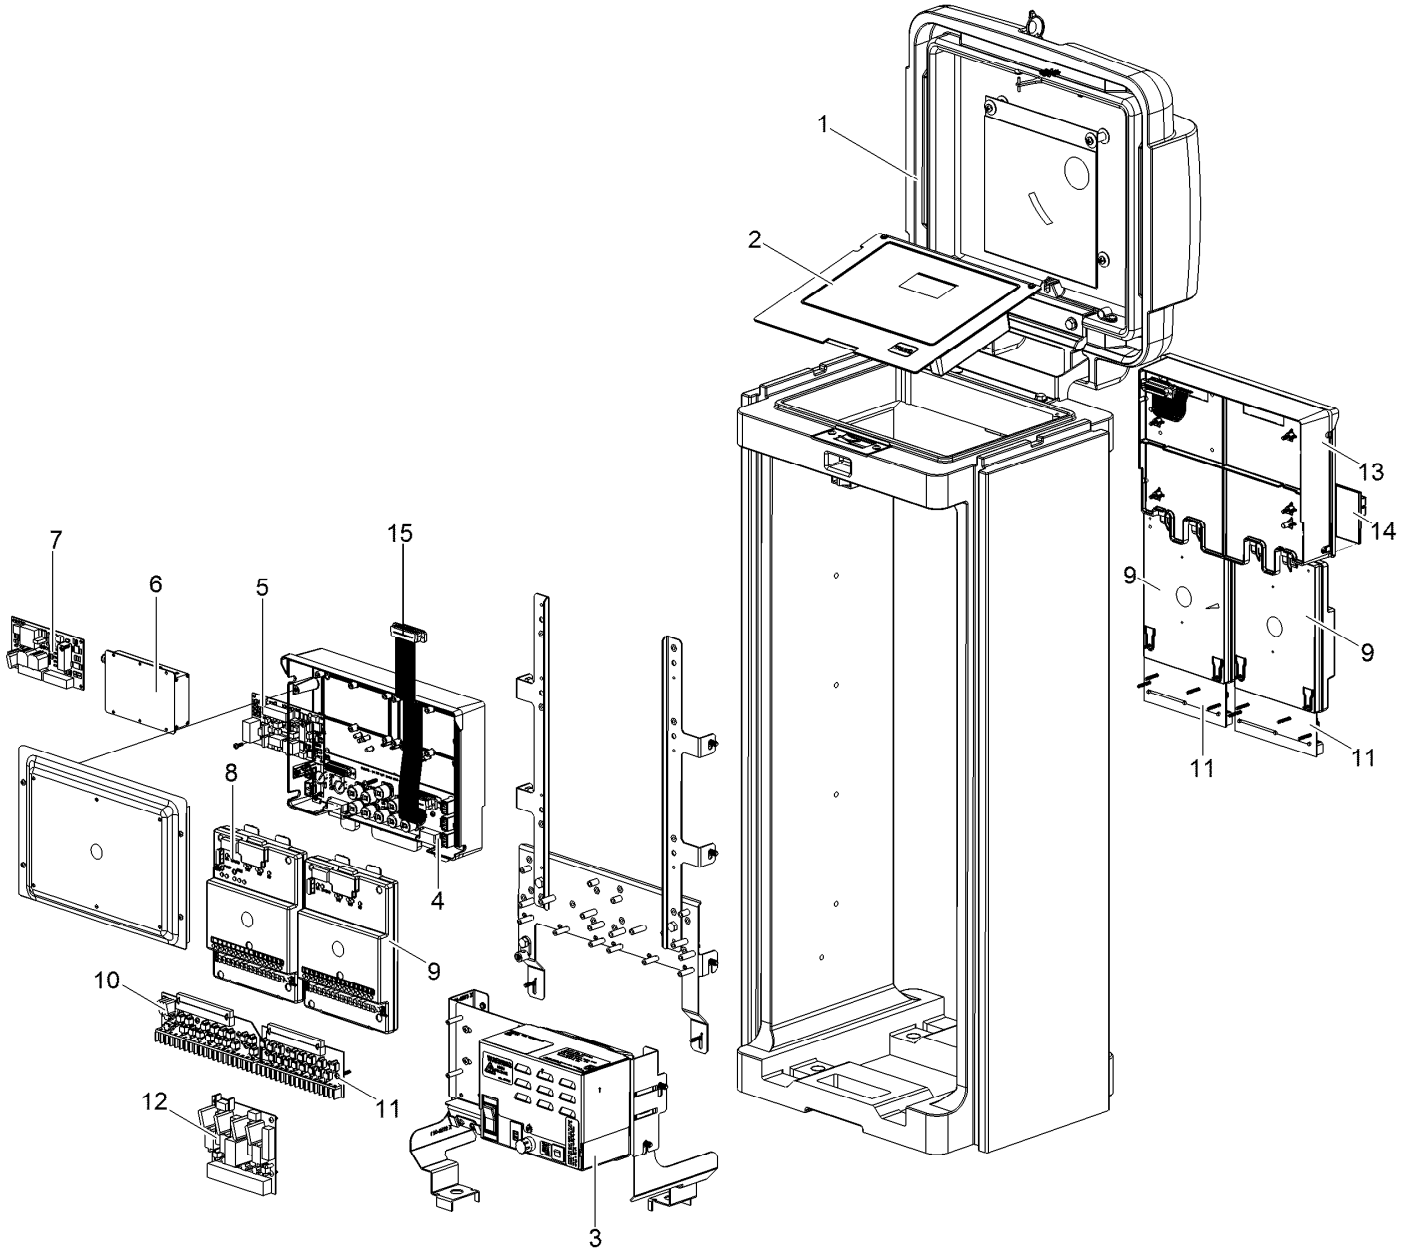

Lynx Smart Satellite (continued)

Ref.	Part Number	Qty.	Description
1	118-0828	1	Plastic Pedestal, Short, Green, Assembly
1	118-0829	1	Plastic Pedestal, Short, Tree Bark, Assembly
1	118-0830	1	Plastic Pedestal, Short, Desert Sand, Assembly
2	118-6363SK	1	Timing Module, Lynx Smart Satellite
3	118-6366SK	1	Power Supply Assembly (See Power Supply Section For Individual Component Listing)
4	118-3045SK	1	Distribution Board Assembly (Front Panel)
5	118-3705SK	1	Modem, Wireline, Pcb, Includes Item 118-7176 (Central Controlled Models Only)
	118-7176	1	Cable, Modem To Tm ●
6	118-6133SK	1	Radio Module, Transceiver (Radio Models Only)
7	118-3339SK	1	Radio Interface Assembly, Include Items 118-4173, 118-4174 And 118-7177 (Radio Models Only)
	118-4173	1	Cable, Radio Interface To Tm ●
	118-4174	1	Cable, Radio Interface To Radio ●
	118-7177	1	Cable, Radio Interface To Power Board ●
8	118-6369SK	1	Pump/Com/Output Module
9	118-6370SK	3	Output Module Assembly
10	118-6035SK	1	Output/Pump Surge Assembly, Level 3
10	118-6034SK	1	Output/Pump Surge Assembly, Level 4
11	118-6032SK	3	Output Surge Assembly, Level 3
11	118-3047SK	3	Output Surge Assembly, Level 4
12	118-4680SK	1	Surge Assembly, Level 3
12	118-1524SK	1	Surge Assembly, Level 4
13	118-4438SK	1	Distribution Panel Assembly, Backside, Includes Item 118-4175
	118-4175	1	Cable, Front-To-Back, Distribution Board ●
14	118-3128SK	1	Distribution Board, Backside
15	118-4172	1	Cable, Tm To Power Board
	118-4440SK	1	Smart Satellite Radio Kit (Includes Antenna And Items 6 & 7) ●

● Not illustrated

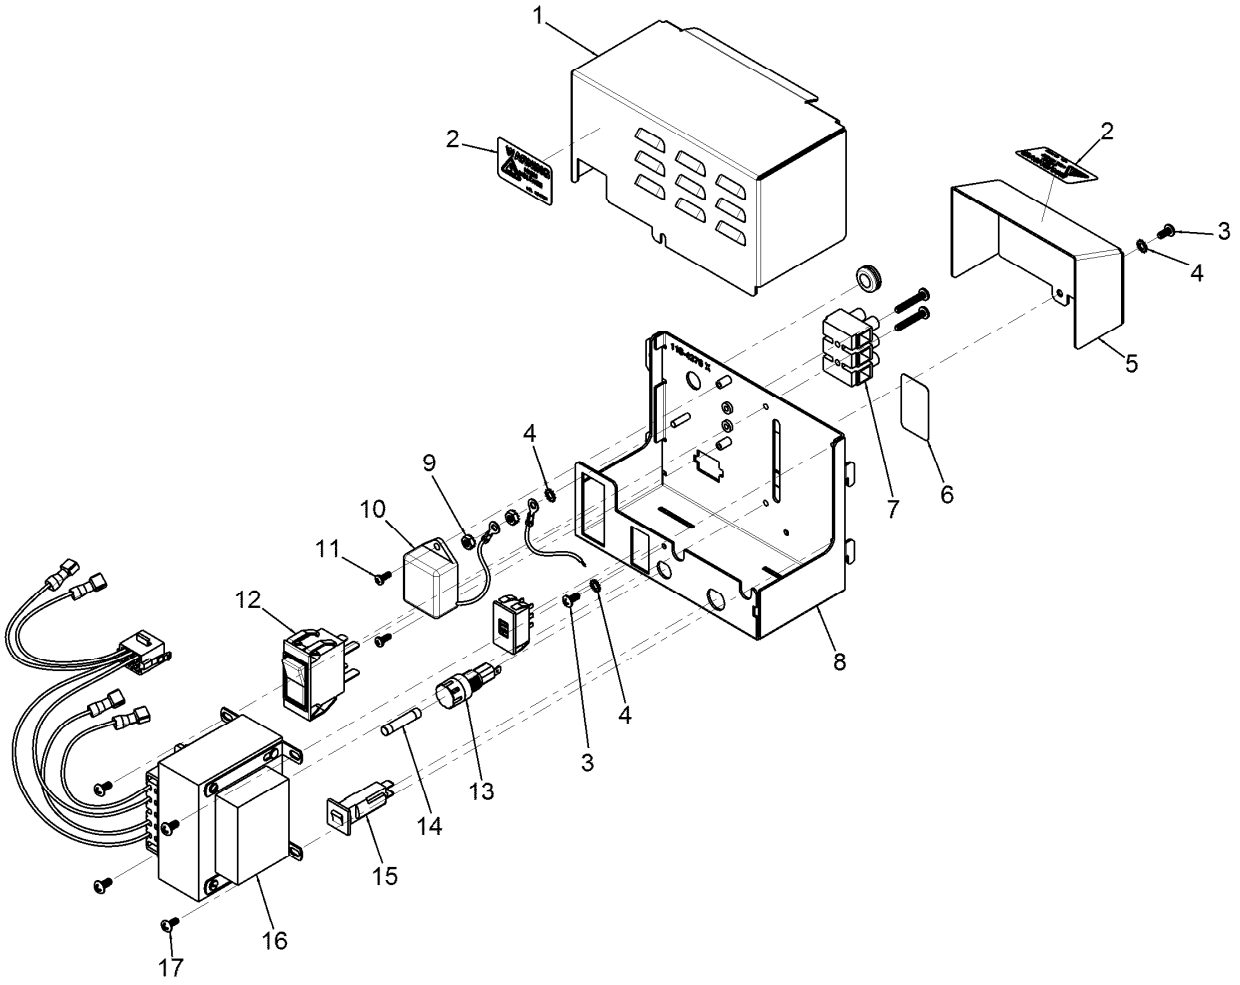

Lynx Smart Satellite - Power Supply

Ref.	*Part Number*	*Qty.*	*Description*
1	118-4269	1	Cover, Power Supply Housing
2	89-0722	2	Label, Warning
3	360-0498	2	Screw, Machine, 8-32 X 1/4
4	363-6505	3	Lock Washer, #8, Steel
5	118-4268	1	Cover, Power Supply Terminal
6	89-7325	1	Label, Terminal Block
7	363-3981	1	Terminal Block, 3-Position, 6 Awg
8	118-4270	1	Bottom, Power Supply Housing
9	363-1483	2	Nut-Hex, K Lock
10	118-0538SK	1	Toro Transient Filter, Ttf
11	363-8690	2	Screw, Machine, 6-32 X 3/8, Phph, Stl
12	363-3361	1	Switch, Circuit Breaker, 1.5A
13	360-0750	1	Holder, Fuse
14	363-2497	1	Fuse, 3.2 Amp
15	363-5270	1	Circuit Breaker, 4.0A
16	102-0409	1	Transformer Assembly
17	3-1453	4	Screw, Machine, 10-32 X 3/8, Phph, SS
	102-0645	1	Power Supply Assy. ●

● Not illustrated

Notes:



Count on it.