Form No. 3323–141

Liquid Propane Gas Kit

for Workman® Vehicles

Model No. 07310—80001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© **The TORO Company — 1999**
All Rights Reserved

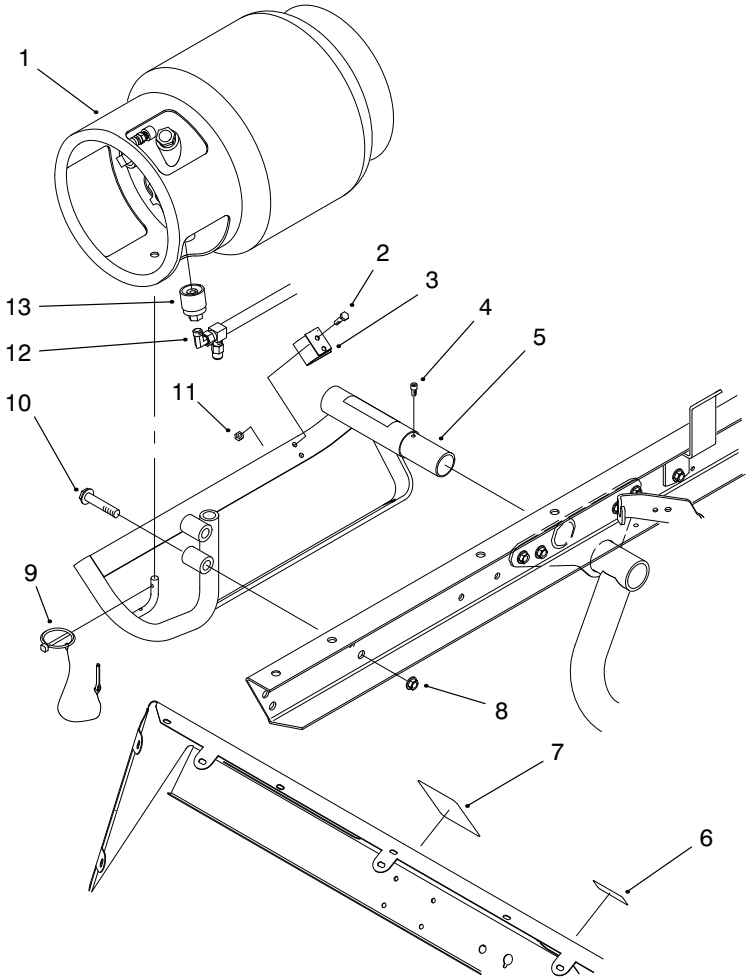


Sheet No.: 0
T–3071

Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	98–2911	1	Tank–20 LB w/Gauge
2	3234–4	4	Screw–HFH
3	98–2957	2	Clip
4	65–5220	2	Screw–Thread Forming
5	94–5297	1	Tank Mount Assembly
6	98–2912	1	Decal–Fuel, LP
7	99–1074	1	Decal–Dash, LP
8	32128–23	2	Nut–Flange
9	99–1062	1	Pin–Lynch
10	3234–40	2	Screw–HFH
11	3296–42	4	Nut–Lock NI
12	98–2905	1	Hose Assembly
13	99–1076	1	Fitting–Female Quick

Ref. No.	Part No.	Qty.	Description

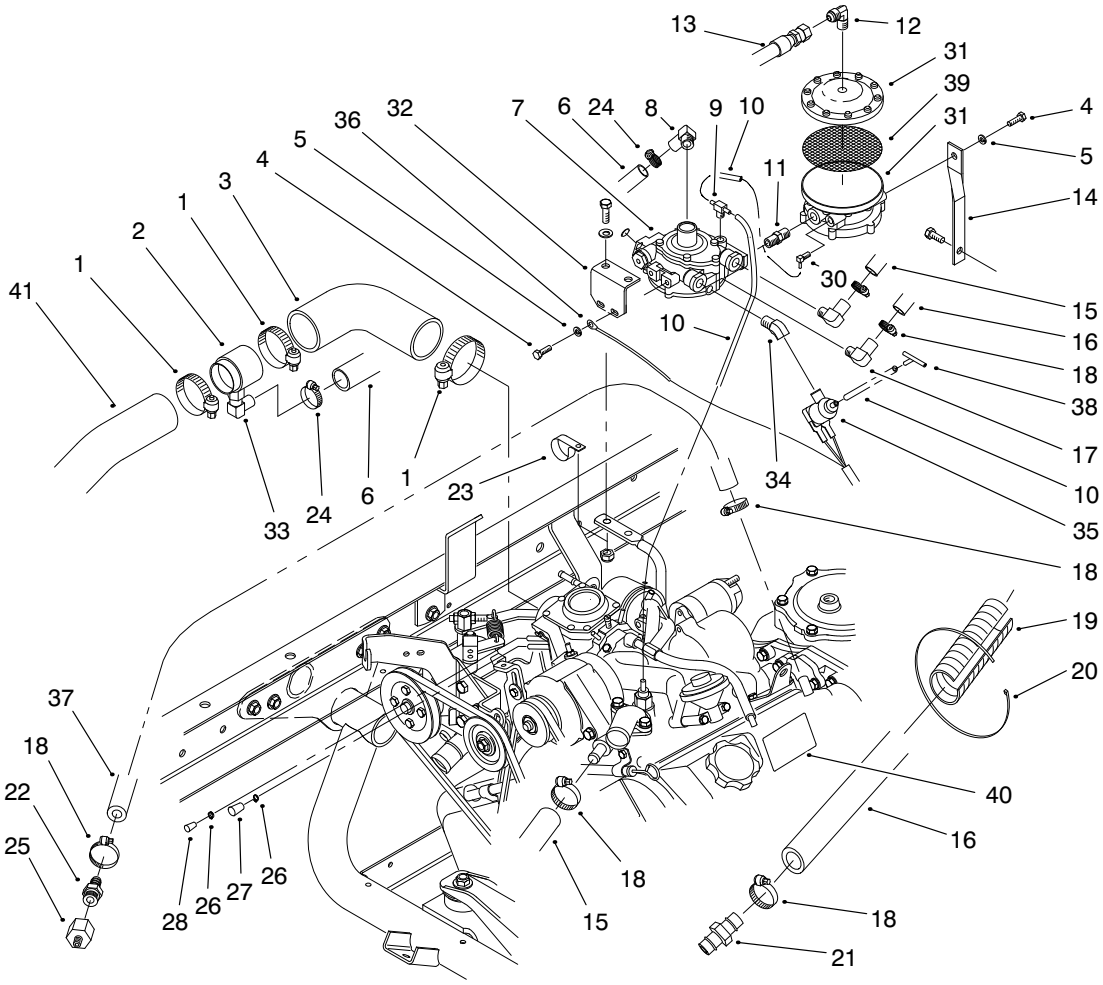

Sheet No.: 0
T–3072

Kit Assembly

Ref. No.	Part No.	Qty.	Description
1	2412–92	3	Clamp–Hose
2	98–2903	1	Hose–Adapter
3	99–1073	1	Elbow–2” Rubber
4	321–3	3	Screw–HH
5	3253–3	3	Washer–Lock/SP
6	99–1077	1	Hose–Vapor 5/8”
7	98–2901	1	Regulator
8	99–1068	1	Elbow–5/8”x3/8”
9	99–1071	1	Fitting–1/4”to1/4”
10	100–4450	3	Hose–Vacuum 5/32”
11	99–1070	1	Fitting–1/4”NPT Nipple
12	99–2908	1	Fitting–3/8” Flare to 1/4”
13	98–2905	1	Hose Assembly
14	98–2907	1	Strap–Support
15	99–1072	1	Hose–Heater 1/2”
16	99–1078	1	Hose–Heater 1/2”
17	99–1067	2	Elbow–1/4” NPT
18	2412–119	6	Clamp–Worm
19	99–1079	2	Tubing–Convoluted, Split
20	3290–378	1	Tie–Cable
21	98–2909	1	Mender–1/2” Hose
22	100–4447	1	Fitting–Hose Barb
23	2412–106	1	Clamp–R
24	2412–129	2	Clamp–Hose

Ref. No.	Part No.	Qty.	Description
25	100–4446	1	Adapter–Expander
26	2412–108	2	Clamp–Worm
27	98–2904	1	Cap–1/4” Vacuum
28	99–1064	1	Cap–3/16” Vacuum
30	99–1066	1	Fitting–1/8” NPT to 1/4”
31	98–2902	1	Fuelock–Vacuum Filter
32	98–2906	1	Bracket–Converter
33	99–1069	1	Fitting–5/8”x3/8” NPT
34	100–4442	1	Fitting–45 Degree Brass
35	100–4424	1	Valve–Starting,LPG
36	100–4423	1	Harness–Wire, Start Valve
37	100–4445	1	Hose–PCV
38	100–4443	1	Connector–Vacuum
39	100–4444	1	Filter–Lock Off
40	99–1102	1	Decal–Engine Label
41	100–4422	1	Hose–Air Intake, LPG


TORO®