Form No. 3323–236

Dethatcher Kit

for Greensmaster® 3000 series

Model No. 04493—91084 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 1999
All Rights Reserved

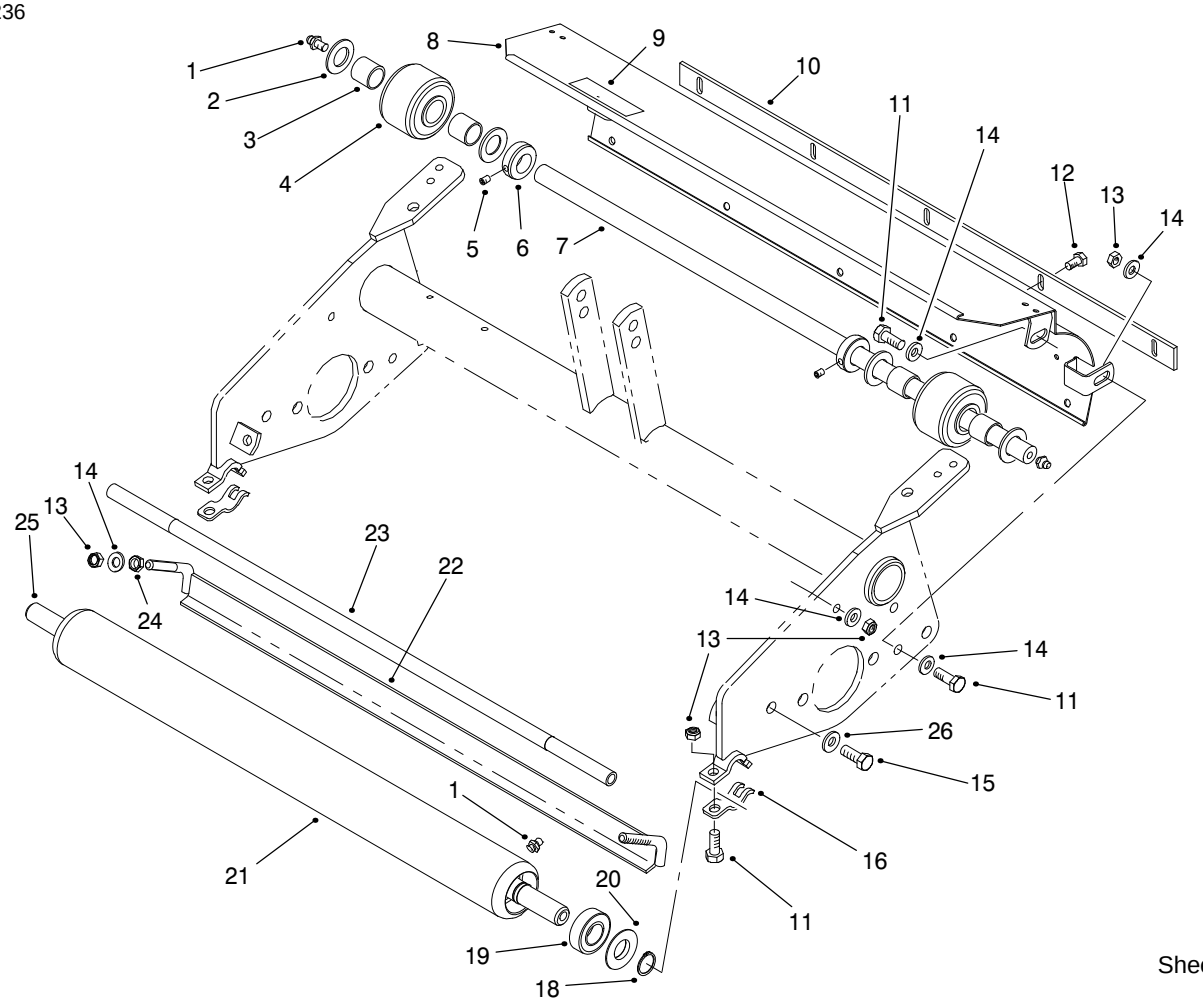


Sheet No.: 0
T–2783–1

Roller Assembly

Ref. No.	Part No.	Qty.	Description
1	302–5	4	Fitting–Grease
2	257–11	4	Washer–Thrust
3	95–7497	4	Bushing–Wheel
4	94–9211	2	Wheel Assembly
5	3245–1	2	Screw–Set
6	94–9213	2	Collar–Shaft (Incl. Ref. #5)
7	94–9210	1	Shaft–Wheel, Rear
8	98–3551	1	Grass Shield Assembly
9	67–7960	1	Decal–Danger, Reel
10	36–7260	1	Bar–Cutoff
11	33114–020	6	Screw–HH
12	32144–73	5	Screw–HHWTF
13	33024–00	8	Nut–Lock
14	3256–74	10	Washer–Flat
15	33115–020	2	Screw–HHF
16	99–8168	2	Collar–Height–of–Cut
18	32151–12	2	Ring–Retaining
19	85–9970	2	Bearing Assembly
20	85–7190	2	Washer–Shield
21	95–5943	1	Rear Roller Assembly (Incl. Ref. #1,18–20 & 25)
22	94–9226	1	Bracket–Scraper
23	98–2196	1	Rod–Shield
24	33014–00	2	Nut–Hex

Ref. No.	Part No.	Qty.	Description
25	95–5946	1	Shaft–Roller
26	3256–24	2	Washer–Flat

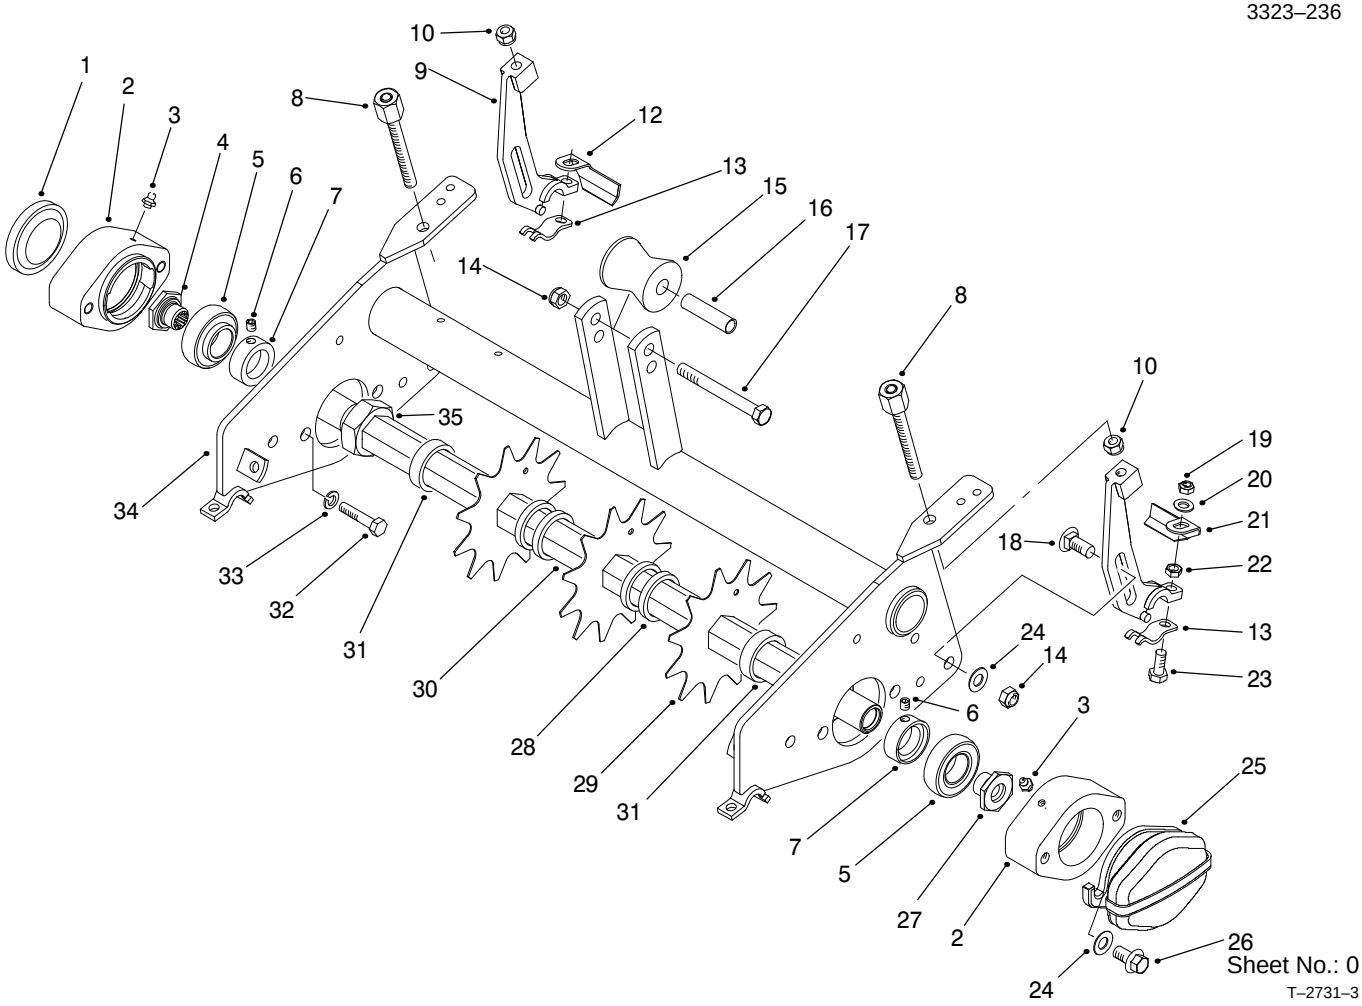

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	2410–30	1	Cap–Plastic
2	95–7148	2	Housing–Bearing
3	302–5	2	Fitting–Grease
4	93–1394	1	Nut–Spline
5	251–337	2	Bearing–Ball
6	3245–35	2	Screw–Set
7	251–77	2	Collar–Lock
8	95–1633	2	Adjustment Assembly (Height–of–Cut)
9	95–1638	2	Bracket–Height–of–Cut Adjustment, Rear
10	3296–5	2	Nut–Lock
12	94–9219	1	Scraper–Roller, Right
13	99–8168	2	Collar–Height–of–Cut
14	33025–00	3	Nut–Lock
15	93–2463	1	Roller–Lift
16	93–2464	1	Spacer–Roller
17	33115–080	1	Screw–HH
18	33125–030	2	Screw–CARR
19	33024–00	2	Nut–Lock
20	3256–74	2	Washer–Flat
21	94–9220	1	Scrapper–Roller, Left
22	33014–00	2	Nut–Hex
23	33114–030	2	Screw–HH
24	3256–24	4	Washer–Flat
25	95–1642–01	1	Weight–Counter

Ref. No.	Part No.	Qty.	Description
26	93–2569	4	Screw–HHF
27	94–9214	1	Nut–Spline, LH
28	17–1600	72	Spacer
29	17–1590	37	Blade–Eleven Tooth
30	94–9202	1	Shaft–Dethatcher
31	17–1580	2	Spacer
32	33115–025	4	Screw–HH
33	48–9590	4	Washer–Lock
34	98–3587–01	1	Frame–Dethatcher
35	67–5840	2	Nut–Jam
*	94–9201	1	Dethatcher Shaft Assembly (Incl. Ref. #28–31 & 35)
*	94–3405	2	Bearing Assembly (Incl. Ref. #5–7)
*	99–8189	4	Plate–Gauge .060
*	99–8188	4	Plate–Gauge .120
*	99–8187	4	Plate–Gauge .250

* Not Illustrated


TORO®