
RADIUS® S-SERIES

Model No. RAS708GEM60RC3—Serial No. 406294345 and Up

Picture below may not reflect actual product.

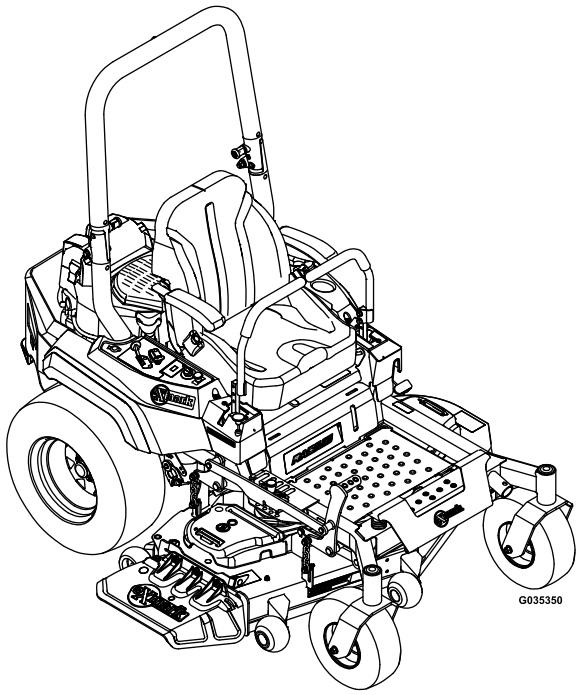

Parts Manual

Part No. 4504-548 Rev. A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

© 2019—Exmark Mfg. Co., Inc.
2101 Ashland Ave
Beatrice, NE 68310

Contact us at www.Exmark.com.
Printed in the USA.
All Rights Reserved




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Complete Deck Assembly 4
Deck Assembly 6
Deck W/Decals Assembly 8
Idler Assembly No. 126-0853 10
Idler Arm Assembly No. 126-0976 12
Main Frame Assembly 14
Caster Tire Assembly 16
Caster Wheel Assembly 18
Roll-Over Protection System Assembly 20
Discharge Tunnel Assembly No. 126-1985 22
Deck Lift Assembly 24
Deck Strut Assembly 26
Motion Control Assembly 28
LH and RH Motion Control Assembly 30
Control Panel Assembly 32
Fuel Assembly 34
Fuel Tank Assembly (cont.) 36
Rear Wheel Assembly 38
Engine Assembly 40
Air Cleaner Assembly No. 93-2190 42
Fuel System Assembly 44
Carburetor Assembly 46
Air Intake and Filtration Assembly 48
Ignition and Cooling Fan 50
Crankcase and Crankshaft Assembly 52
Governor Control Assembly 54
Piston and Cylinder Head Assembly 56
Blower Housing Assembly 58
Gasket and Seal Kit 60
Suspension Assembly 62
Seat Assembly 64
Hydraulic Drive Assembly 66
LH Transaxle Assembly No. 126-2883 68
RH Transaxle Assembly No. 126-2884 70
Electrical Assembly 72
Harness Assembly 74


Complete Deck Assembly

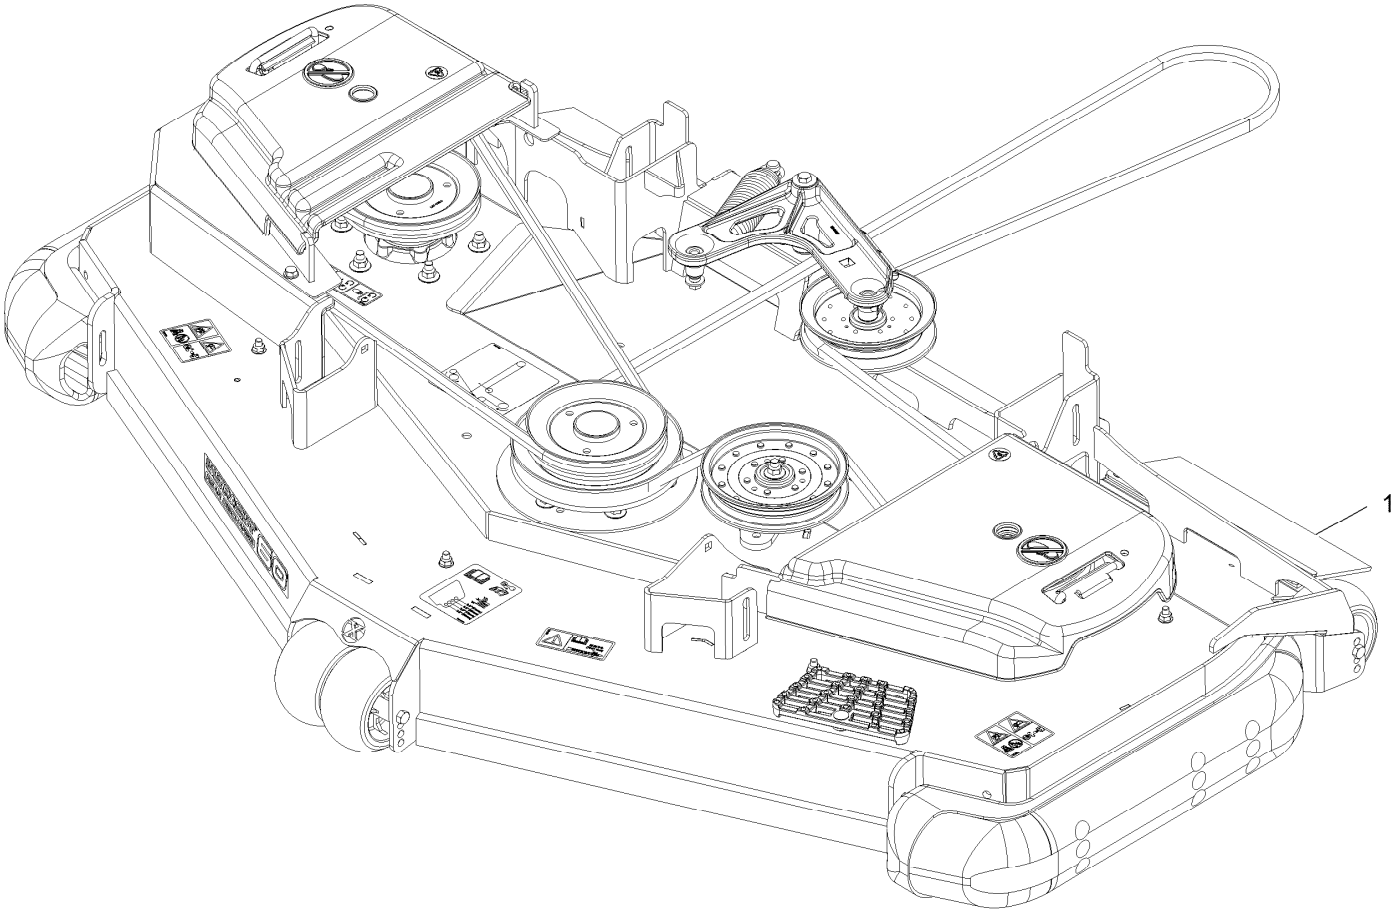

Complete Deck Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	126-8042	1	ASM-Deck Complete 60Rd

Deck Assembly

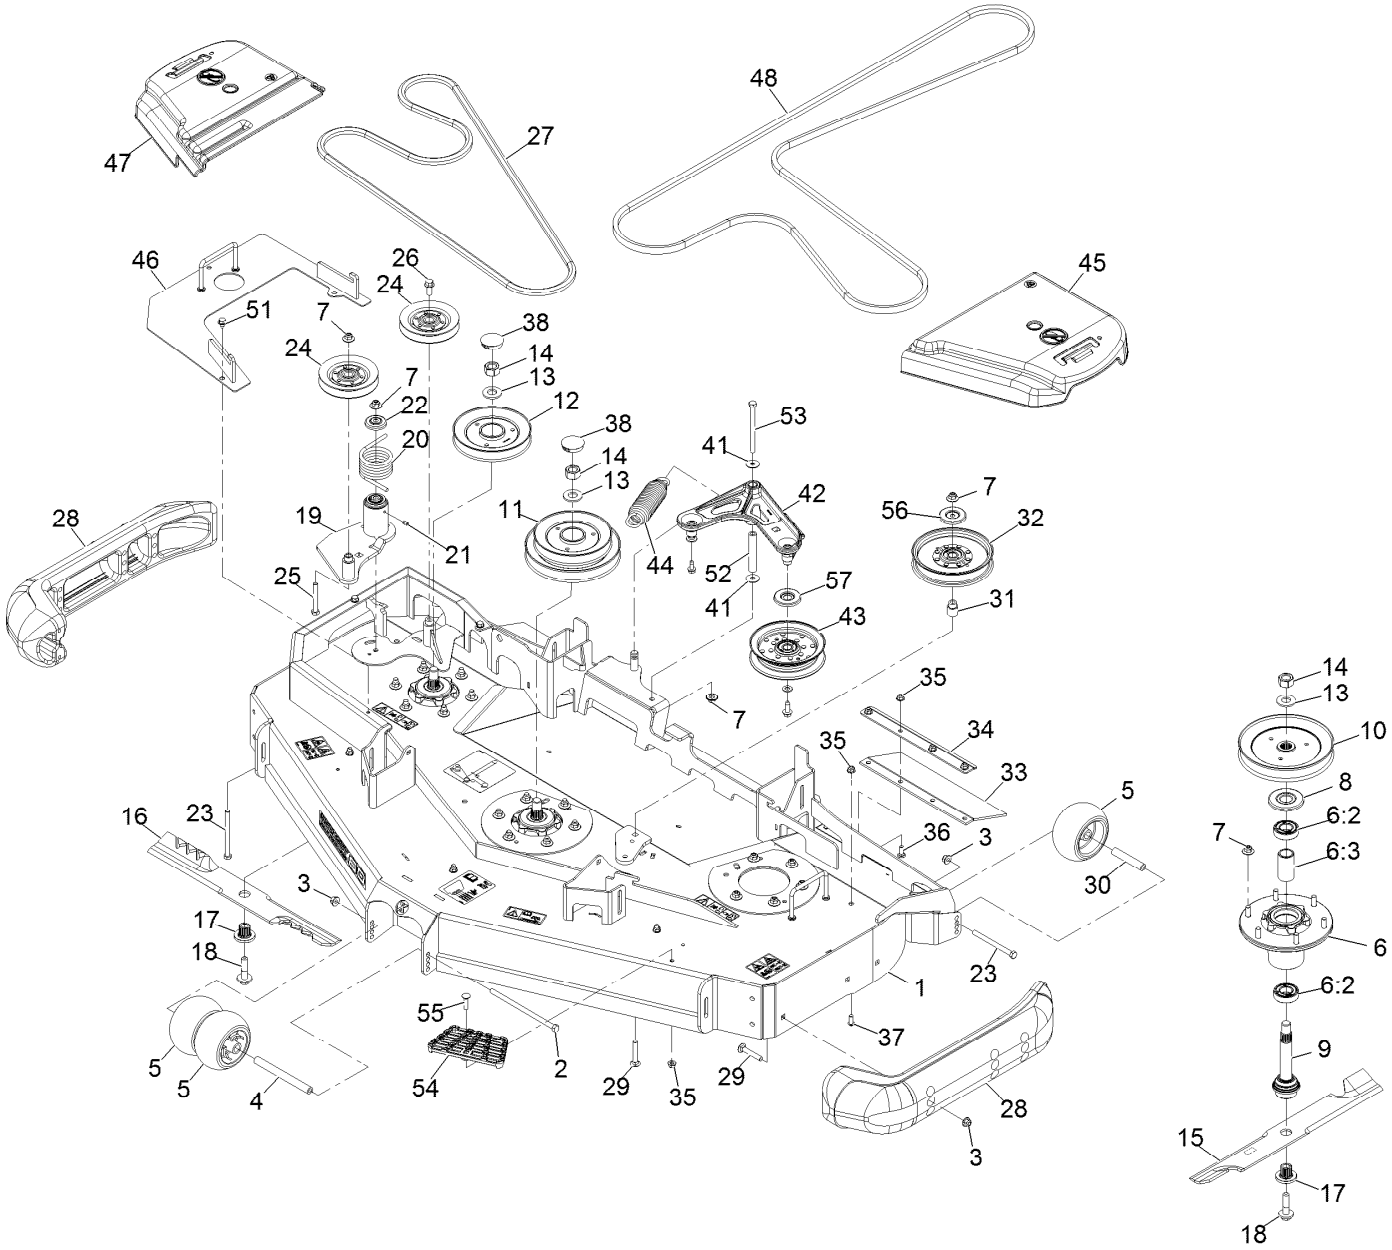

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3682	1	ASM-Deck W/Decals 60Rd
2	108-5388	1	Screw-HH 3/8-16 X 7 3/8
3	104-8301	9	Nut-Nyloc 3/8-16 Flg
4	98-5967	1	Spacer-Wheel
5	1-603299	4	Roller-Scalp, Anti
6	116-3344	3	ASM-Cutter Hsg With Bearings
6:2	116-0720	2	Bearing-Ball
6:3	116-3312	1	Spacer-Bearing
7	109-6658	22	Nut-Nyloc 3/8-16 Flg
8	116-1286	3	Guard,Bearing Top .989
9	116-3341	3	ASM-Spindle And Seal ◆
10	116-0676	1	Sheave,Blade Drive 7.25
11	126-0352	1	Sheave, Double 60Rd
12	126-0354	1	Sheave-Rd Rev Drive Series 4
13	103-2802	3	Washer-Spring Disc 3/4
14	116-7306	3	Nut-Hex ▲
15	103-6403	2	Blade, Notched
15	103-6388	2	Blade, Low Lift ●
15	116-5174	2	Blade-Extreme 2, 20.50" ●
16	116-8196	1	Blade-Low Lift 20.5, Rd60 ●
16	116-8181	1	Blade-Extreme 2-20.50, Rd60
17	103-3037	3	Bushing, Splined
18	109-9220	3	Screw-Sems 1/2-20 X 2.19 ■❑
19	126-0853	1	Idler ASM
20	108-1921	1	Spring-Torsion
21	302-19	1	Zerk-1/4-28 Str
22	103-2916	1	Guard-Top
23	323-23	3	Screw-HH 3/8-16 X 4-1/2
24	126-1478	2	Sheave
25	323-13	1	Screw-HH 3/8-16 X 2 3/4
26	3234-11	1	Screw-HH Flg 3/8-16 X 1
27	116-8187	1	Belt
28	112-1479	2	Skid-Bumper, Deck
29	3231-7	7	Bolt-Carriage 3/8-16 X 2 1/4
30	98-7912	2	Tube-Spanner
31	1-633456	1	Bushing, Idler
32	126-9189	1	Idler-Pulley, Flat 6.00X1.00
33	116-8191	2	Guard-Tire
34	126-0413-01	2	Support-Outer Flap
35	104-8300	15	Nut-Nyloc 5/16-18 Flg
36	3230-16	8	Bolt-Carriage 5/16-18 X 7/8
37	3274-55	6	Screw-Button Head 5/16-18 X 3/4
38	116-2253	2	Plug,Black Nylon 1.75
41	52-2860	2	Washer
42	126-0976	1	Idler Arm ASM
43	126-9196	1	Idler-Pulley, Flat
44	116-6317	1	Spring-Extension
45	126-1989	1	Cover-Belt, LH
46	126-5116-01	1	Cover-Drive, Reverse
47	116-0094	1	Cover-Belt, RH
48	126-6628	1	Belt-V
51	9266934	3	Screw-HWH 5/16 X 1/2 Tf
52	116-5111	1	Bushing
53	323-38	1	Screw-HH 3/8-16 X 4 3/4
54	126-4781-03	1	Step-Deck
55	3230-3	1	Bolt-Carriage 5/16-18 X 1 1/4
56	126-8043	1	Shield-Dust
57	126-9195	1	Shield-Guard, Dust

● Optional Equipment


■ Torque to 50-60 ft-lb

▲ Torque to 130-160 ft-lb

◆ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize) to spindle shaft

❑ Apply lubricant to threads as needed to prevent seizing. Copper based anti-seize preferable. Grease is an acceptable substitute.


Deck W/Decals Assembly

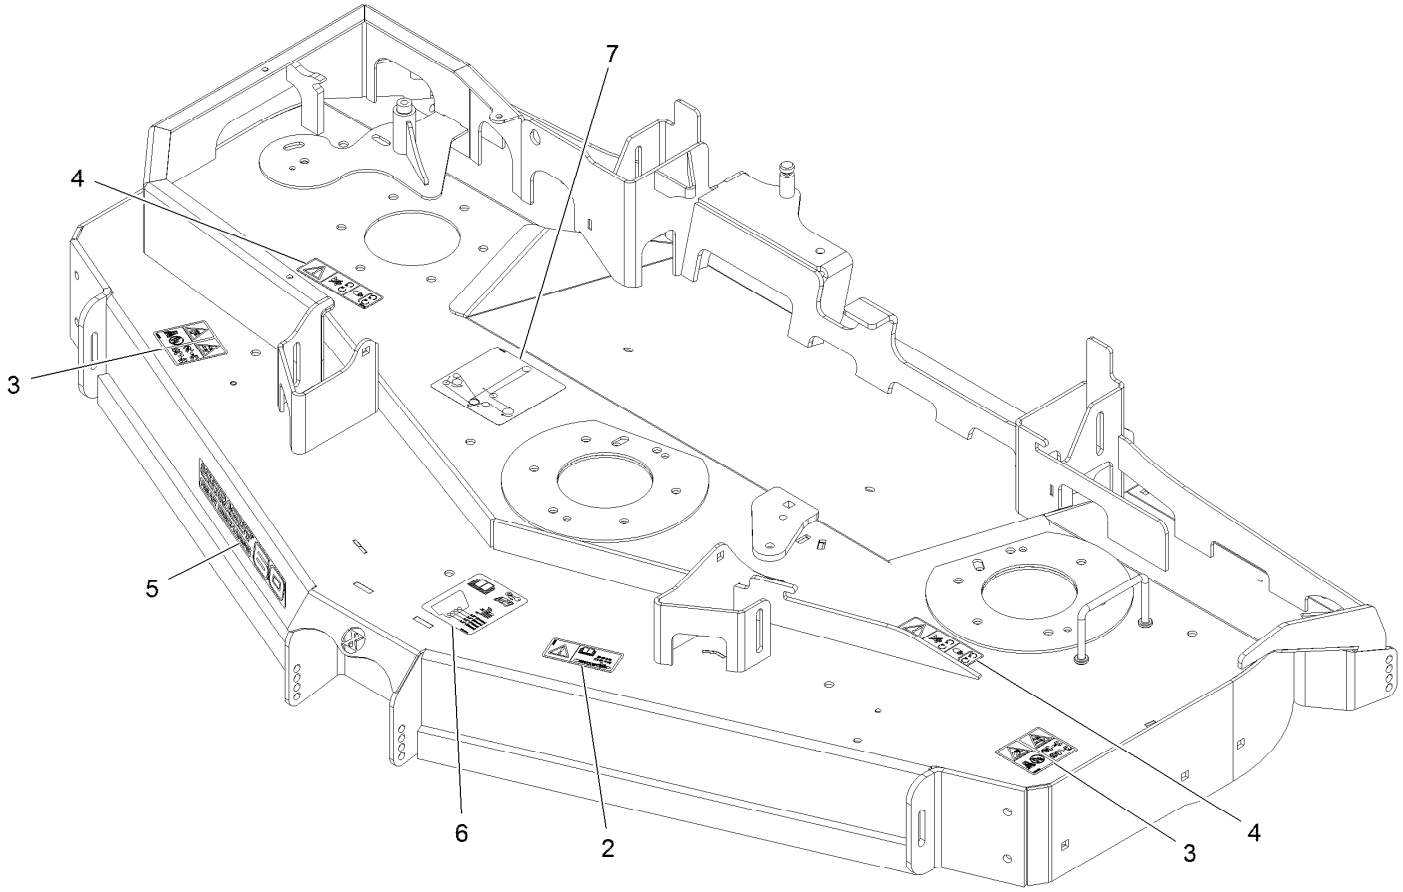

Deck W/Decals Assembly (continued)

Ref.	Part Number	Qty.	Description
2	116-8283	1	Decal-Bolt Torque
3	135-0664	2	Decal-Danger, Thrown Object
4	112-9028	2	Decal-Cover, Missing
5	126-6596	1	Decal, 60Rd
6	109-6036	1	Decal-Roller, Anti-Scalp
7	126-0768	1	Decal-Routing, Belt

Idler Assembly No. 126-0853

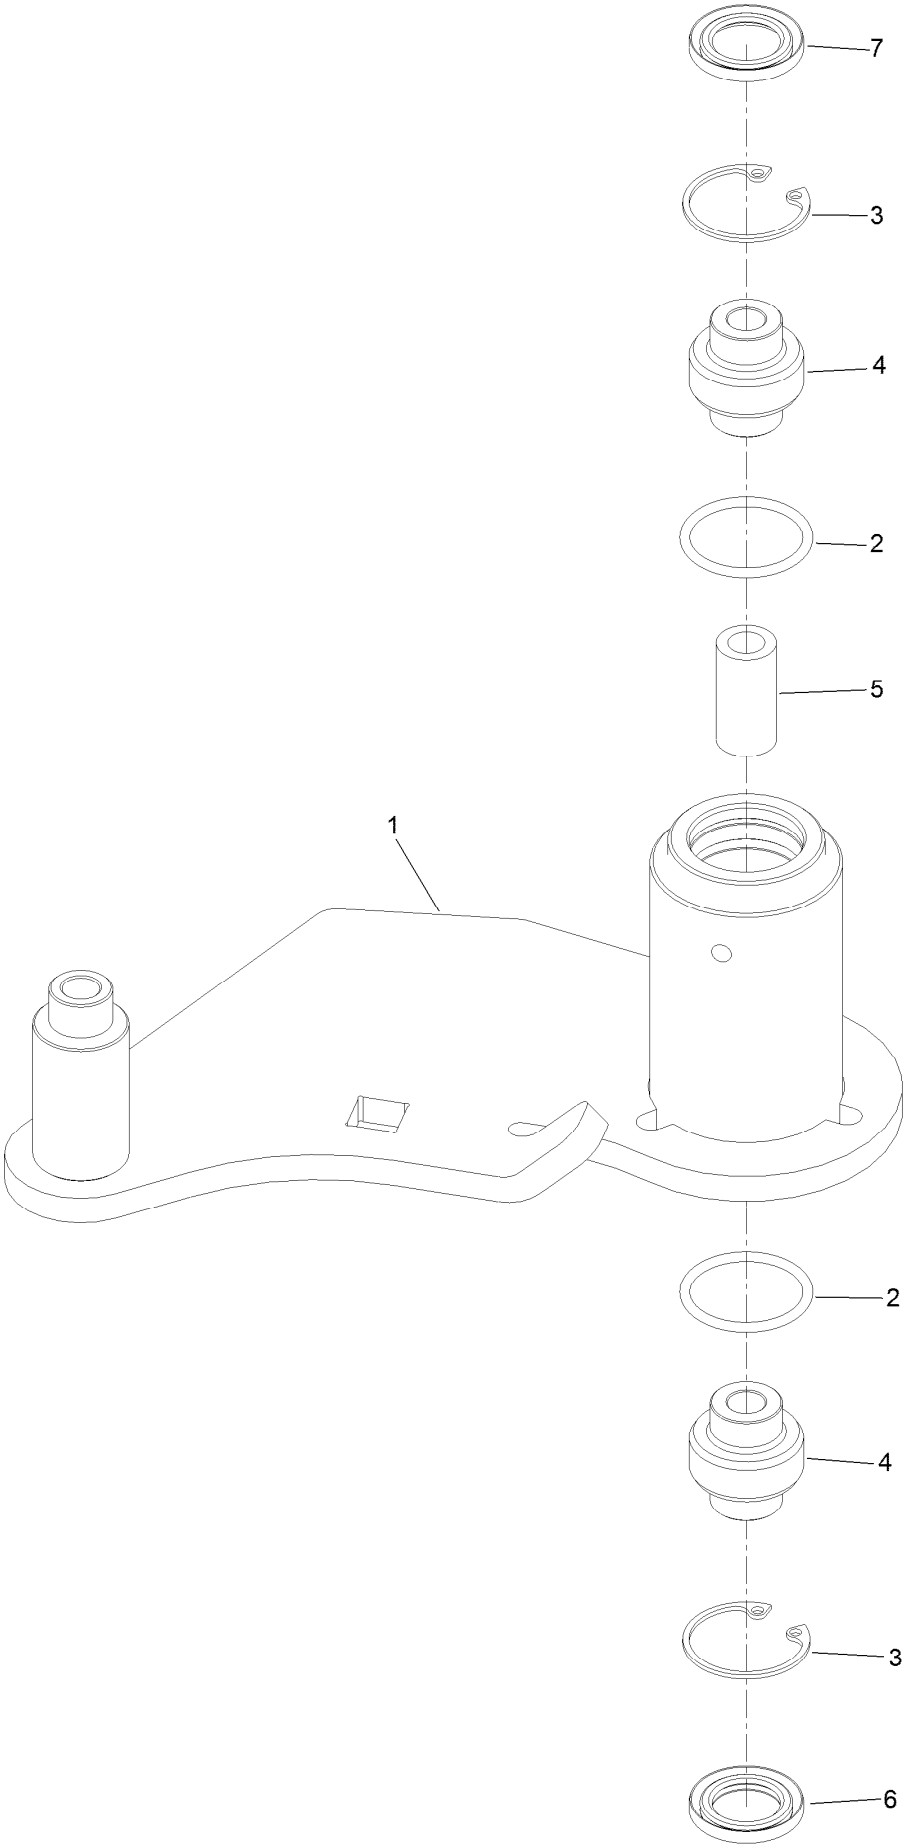


Idler Assembly No. 126-0853 (continued)

Ref.	Part Number	Qty.	Description
1		1	Idler-Deck ●
2	106-7159	2	O-Ring
3	32120-10	2	Ring-Snap
4	103-3504	2	Bearing-Spherical
5	108-6544	1	Spacer
6	103-3505	1	Seal-Lip, Double
7	103-3506	1	Seal-Lip, Single

● Not serviced separately


Idler Arm Assembly No. 126-0976

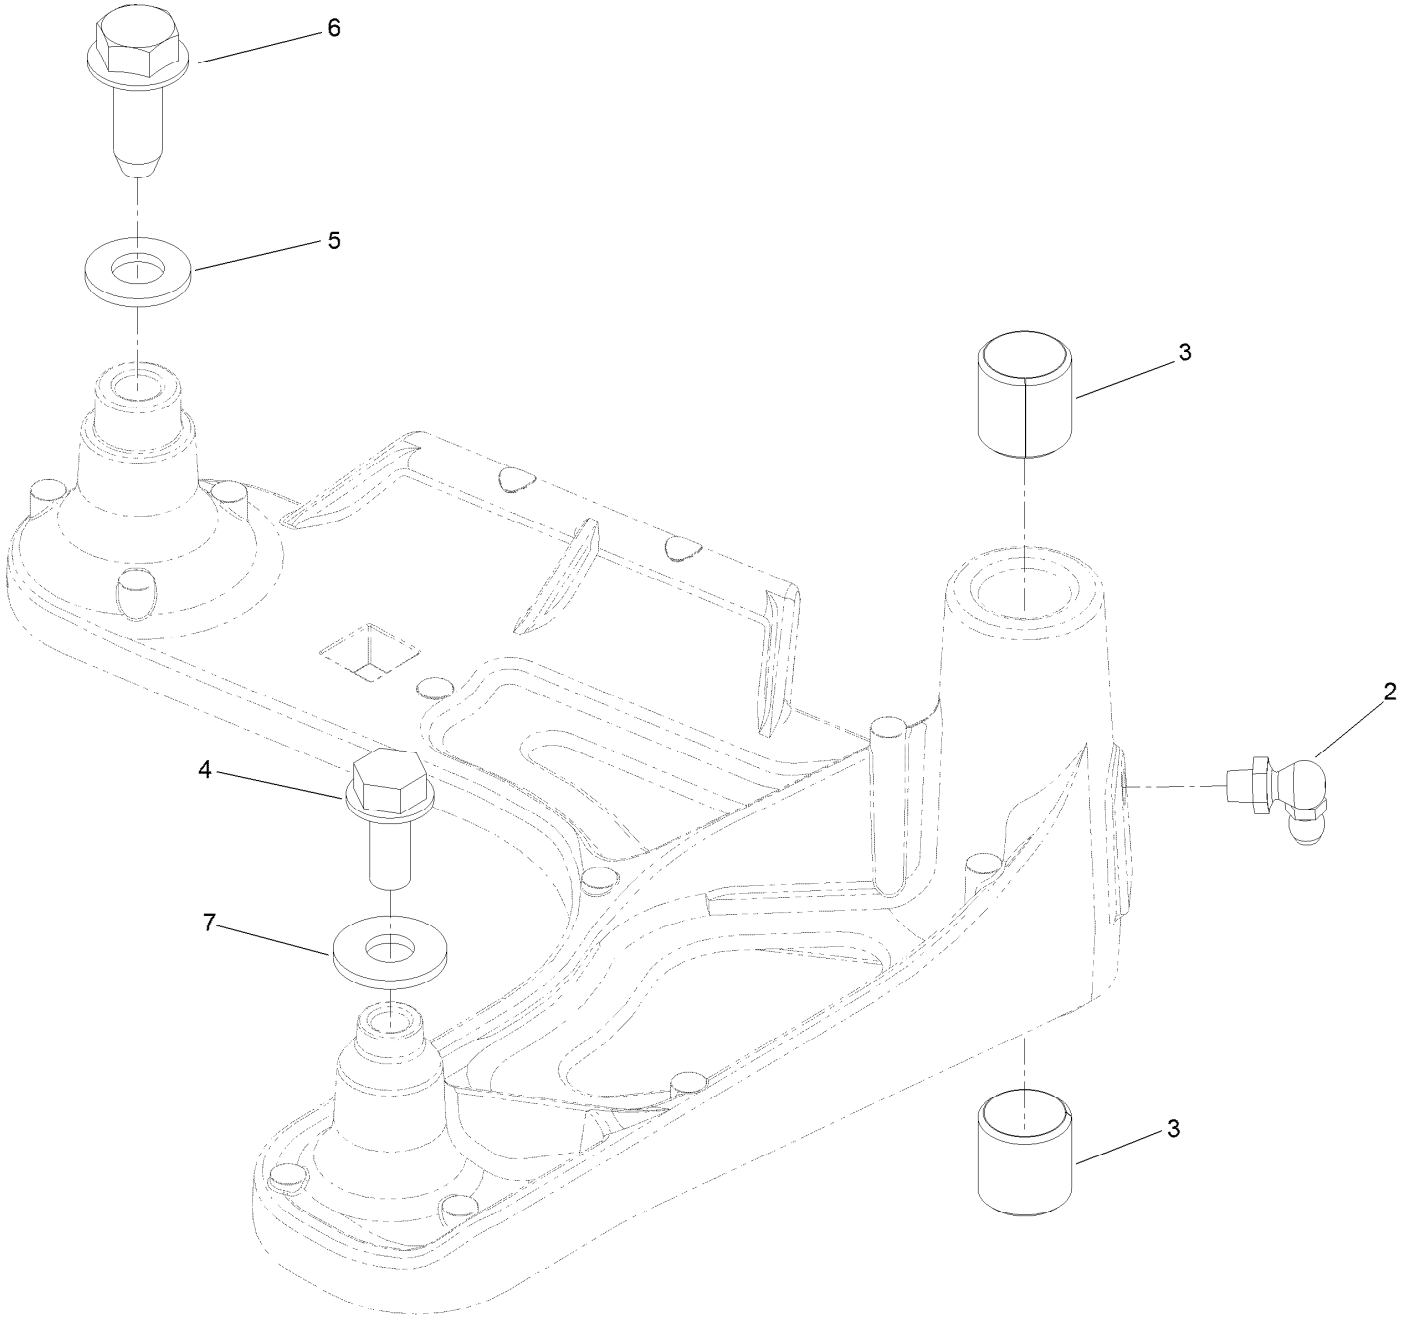

Idler Arm Assembly No. 126-0976 (continued)

Ref.	Part Number	Qty.	Description
2	302-40	1	Fitting-Grease, 90 DEG
3	1-513034	2	Sleeve-Bearing
4	32144-11	1	Screw-HWH
5	3256-24	1	Washer-Flat
6	126-1696	1	Screw-Forming, Thread
7	3256-3	1	Washer-Flat


Main Frame Assembly

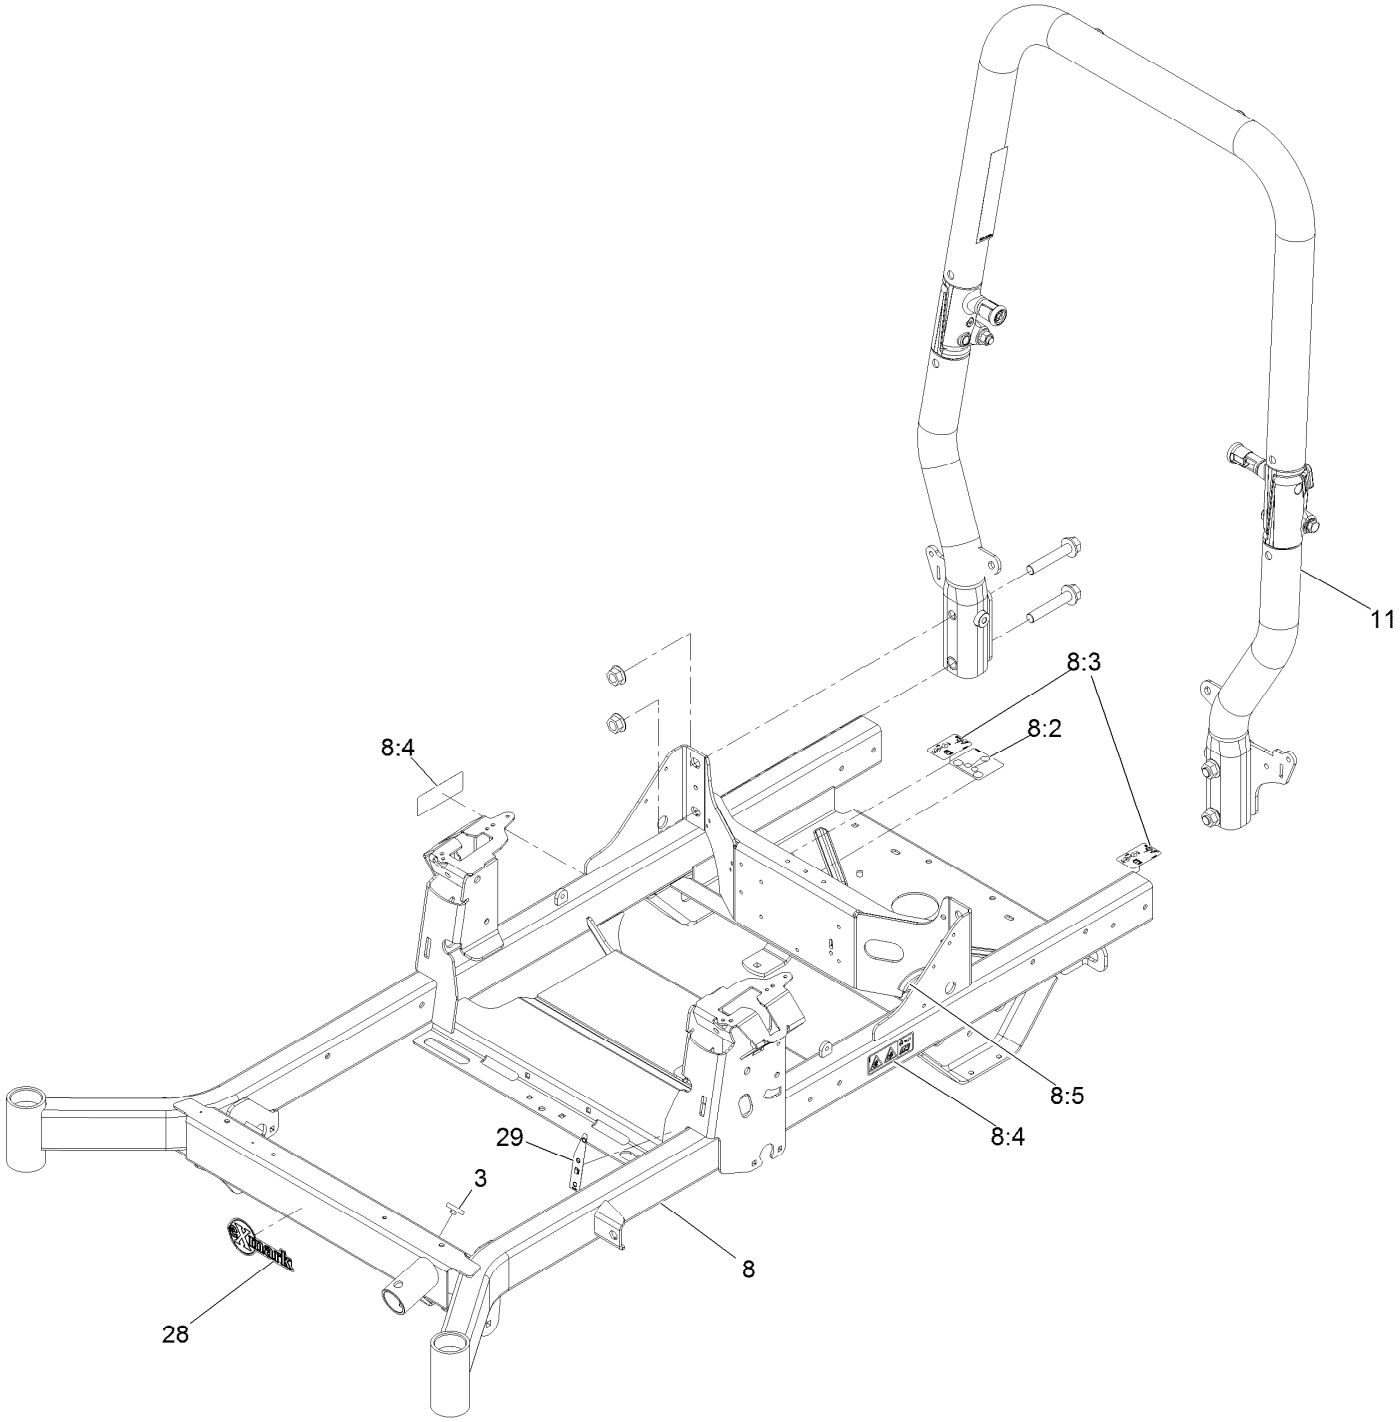

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
3	109-9233	2	Bumper-Push-In, Rubber
8	136-9004	1	Frame-60Rd,Suspension
8:2	109-6014	1	Decal-Routing, Belt
8:3	116-8588	2	Decal-Release, Drive
8:4	126-4363	2	Decal-Warning
8:5	127-6618	1	Strip-Seal
11	136-8985	1	ASM-ROPS Tapered
28	126-6575	1	Decal-Exmark Logo
29	136-8992	1	Decal-Fill, Fuel

Caster Tire Assembly

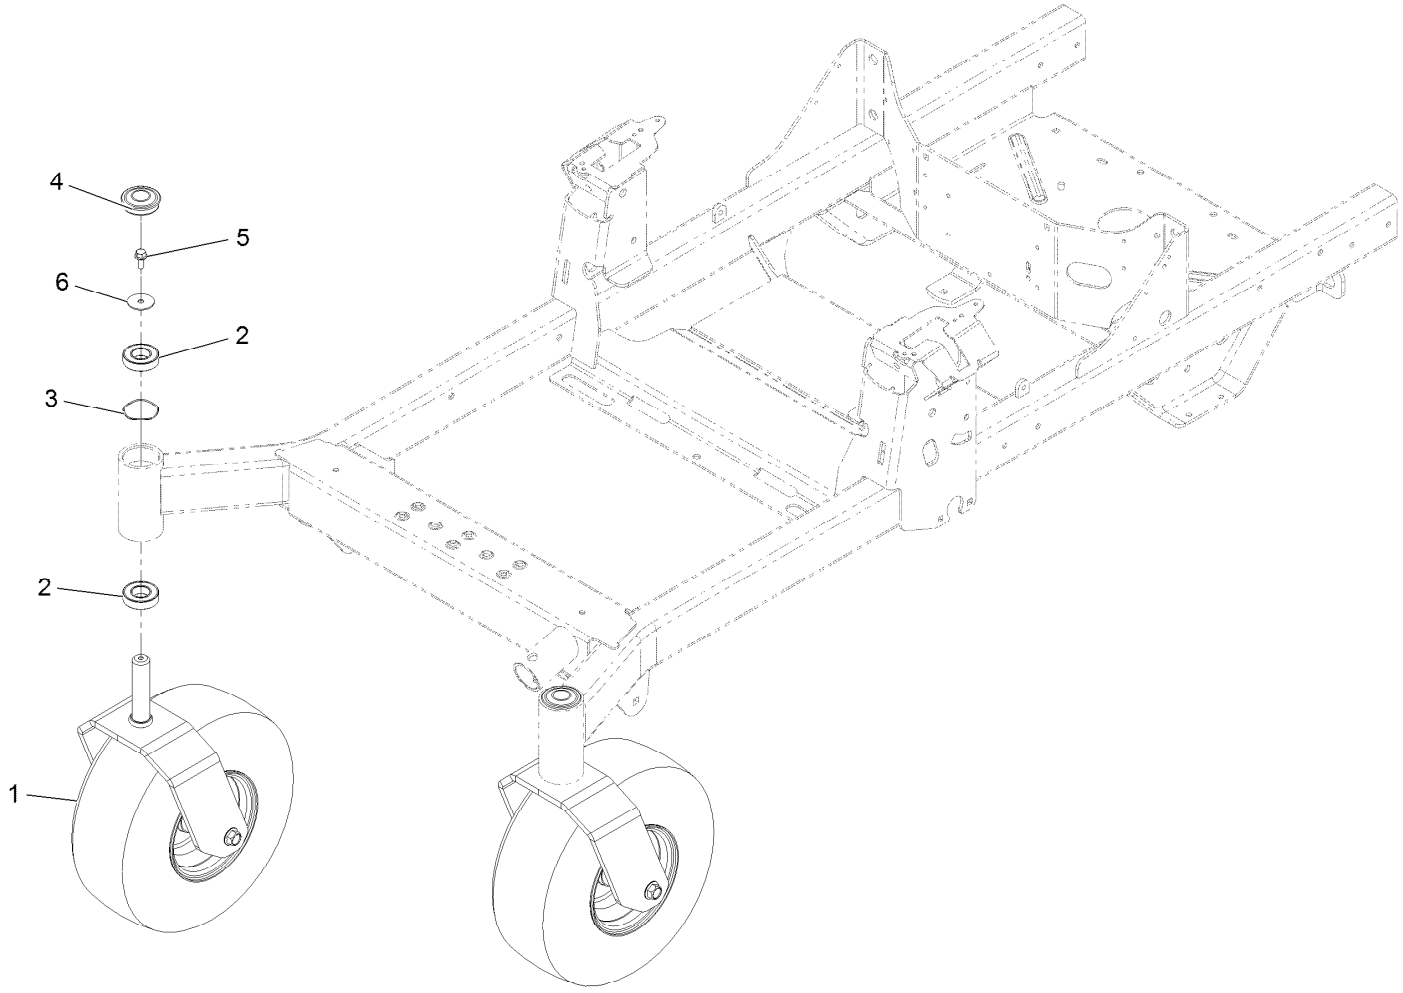


Caster Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	Front Caster W/Fork ASM ●
2	109-3678	4	Bearing-Ball
3	126-5897	2	Spring
4	116-4348	2	Cap-Grease
5	3234-5	2	Screw-HH Flg 5/16-18 X 3/4
6	3256-68	2	Washer-Flat

● Not serviced separately


Caster Wheel Assembly

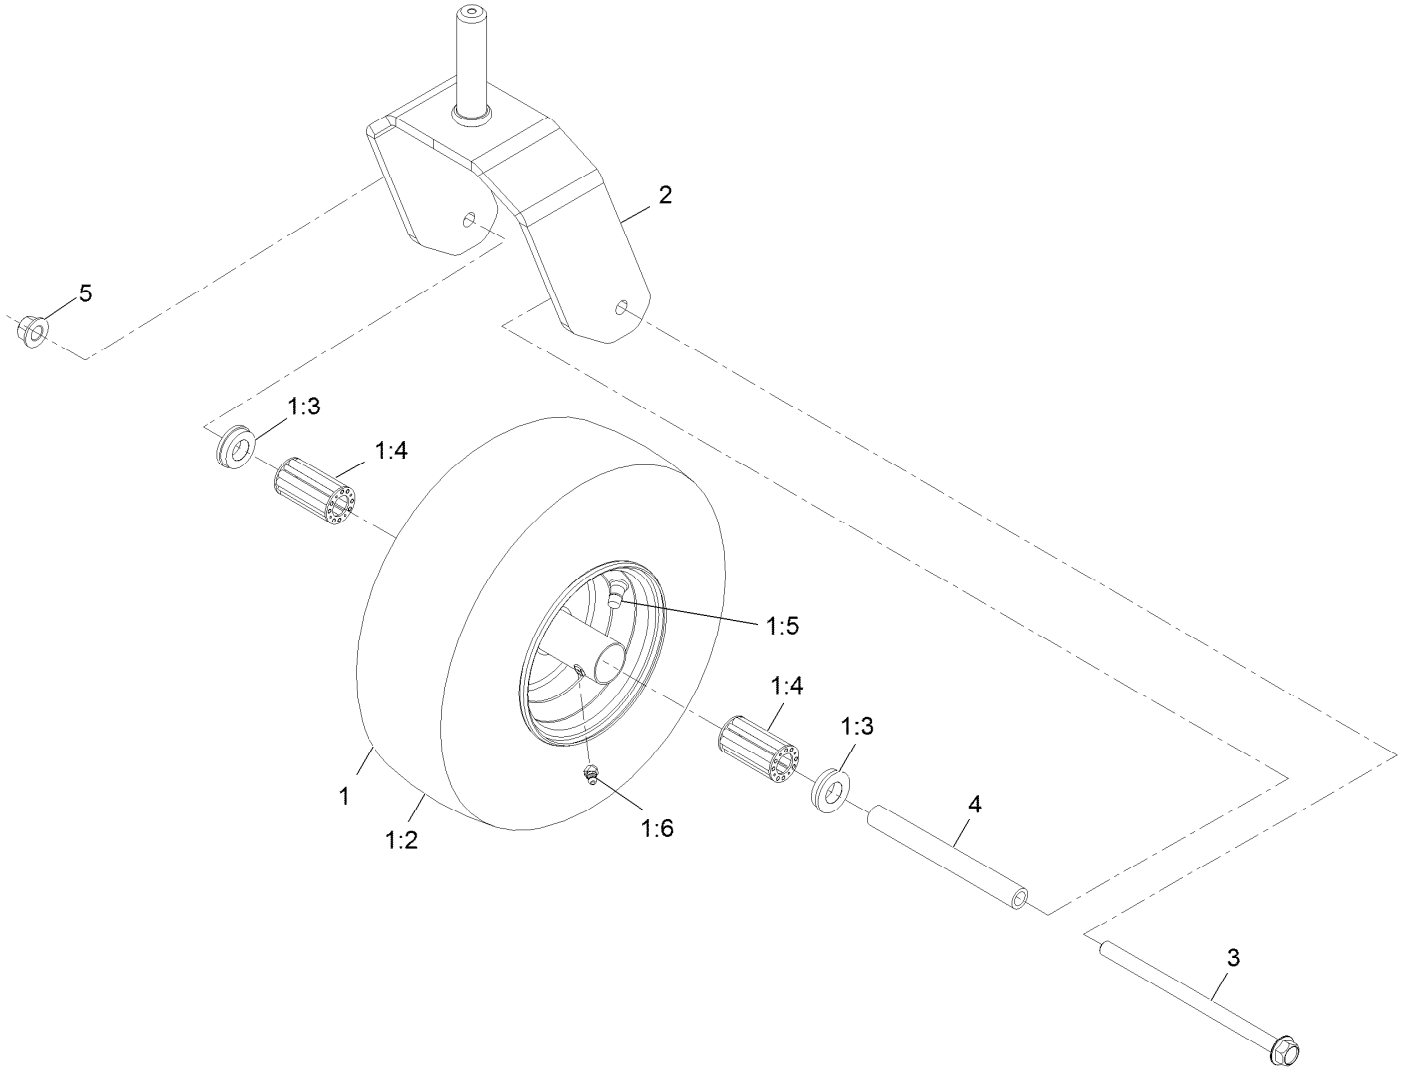

Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3289	1	ASM-Wheel And Tire 13X6.50-6
1:2	126-5959	1	Tire
1:3	130-0705	2	Bushing-Flange
1:4	135-4489	2	Bearing-Roller, Wheel
1:5	5108	1	Valve
1:6	120-7125	1	Fitting-Zerk
2	126-4312-01	1	Fork-Caster
3	126-5389	1	Screw-HHF
4	127-0068	1	Spanner-Wheel, Caster
5	99-5107	1	Nut-Lock 1/2-13


Roll-Over Protection System Assembly

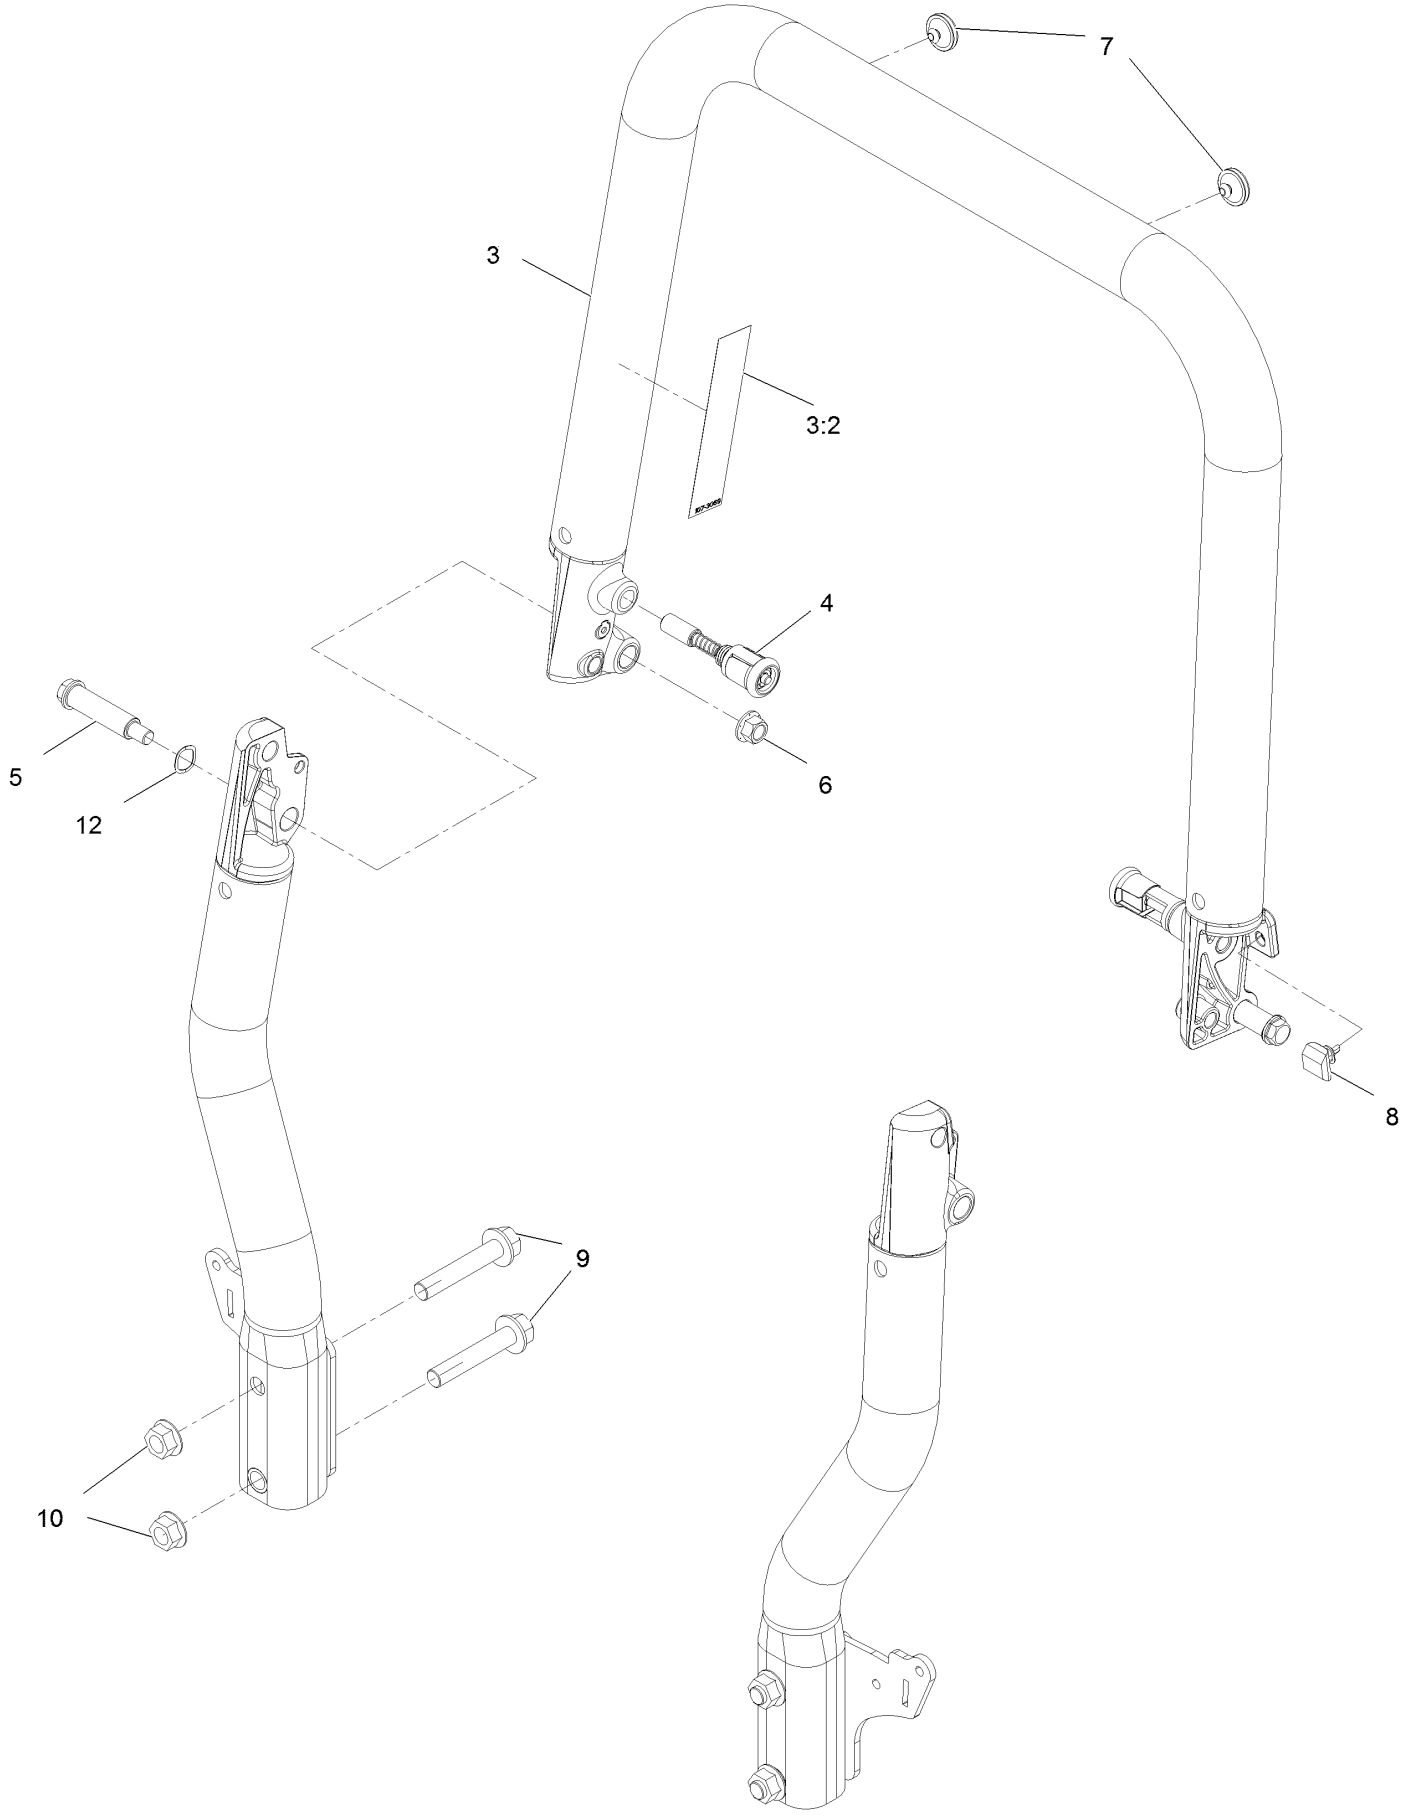

Roll-Over Protection System Assembly (continued)

Ref.	Part Number	Qty.	Description
3	126-7838	1	Top Tube ASM
3:2	107-3069	1	Decal-Warning
4	116-0104	2	Pin-Spring
5	126-9209	2	Bolt-Shoulder
6	99-5107	2	Nut-Lock
7	135-0504	2	Bumper-ROPS
8	126-9966	2	Bumper-ROPS
9	126-9488	4	Screw-HHF
10	32128-50	4	Nut-Flange
12	119-4164	2	Washer-Wave


Discharge Tunnel Assembly No. 126-1985

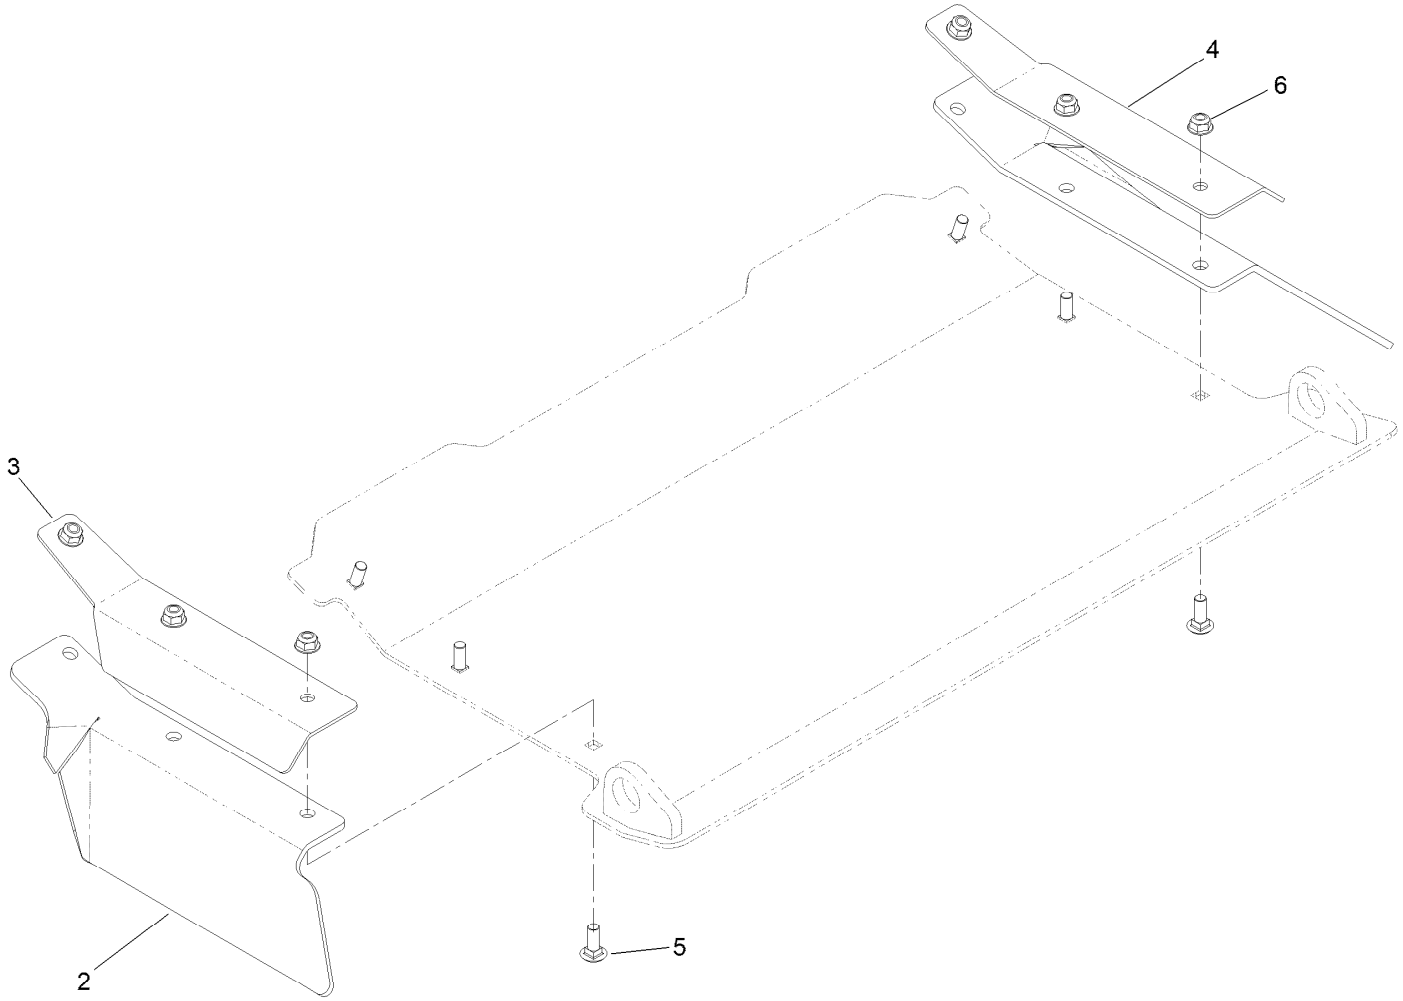

Discharge Tunnel Assembly No. 126-1985 (continued)

Ref.	Part Number	Qty.	Description
2	125-9368	2	Flap-Rubber
3	125-9366-03	1	Bracket-Flap, LH
4	125-9367-03	1	Bracket-Flap, RH
5	3230-16	6	Screw-CARR
6	104-8300	6	Nut-HF, NI


Deck Lift Assembly

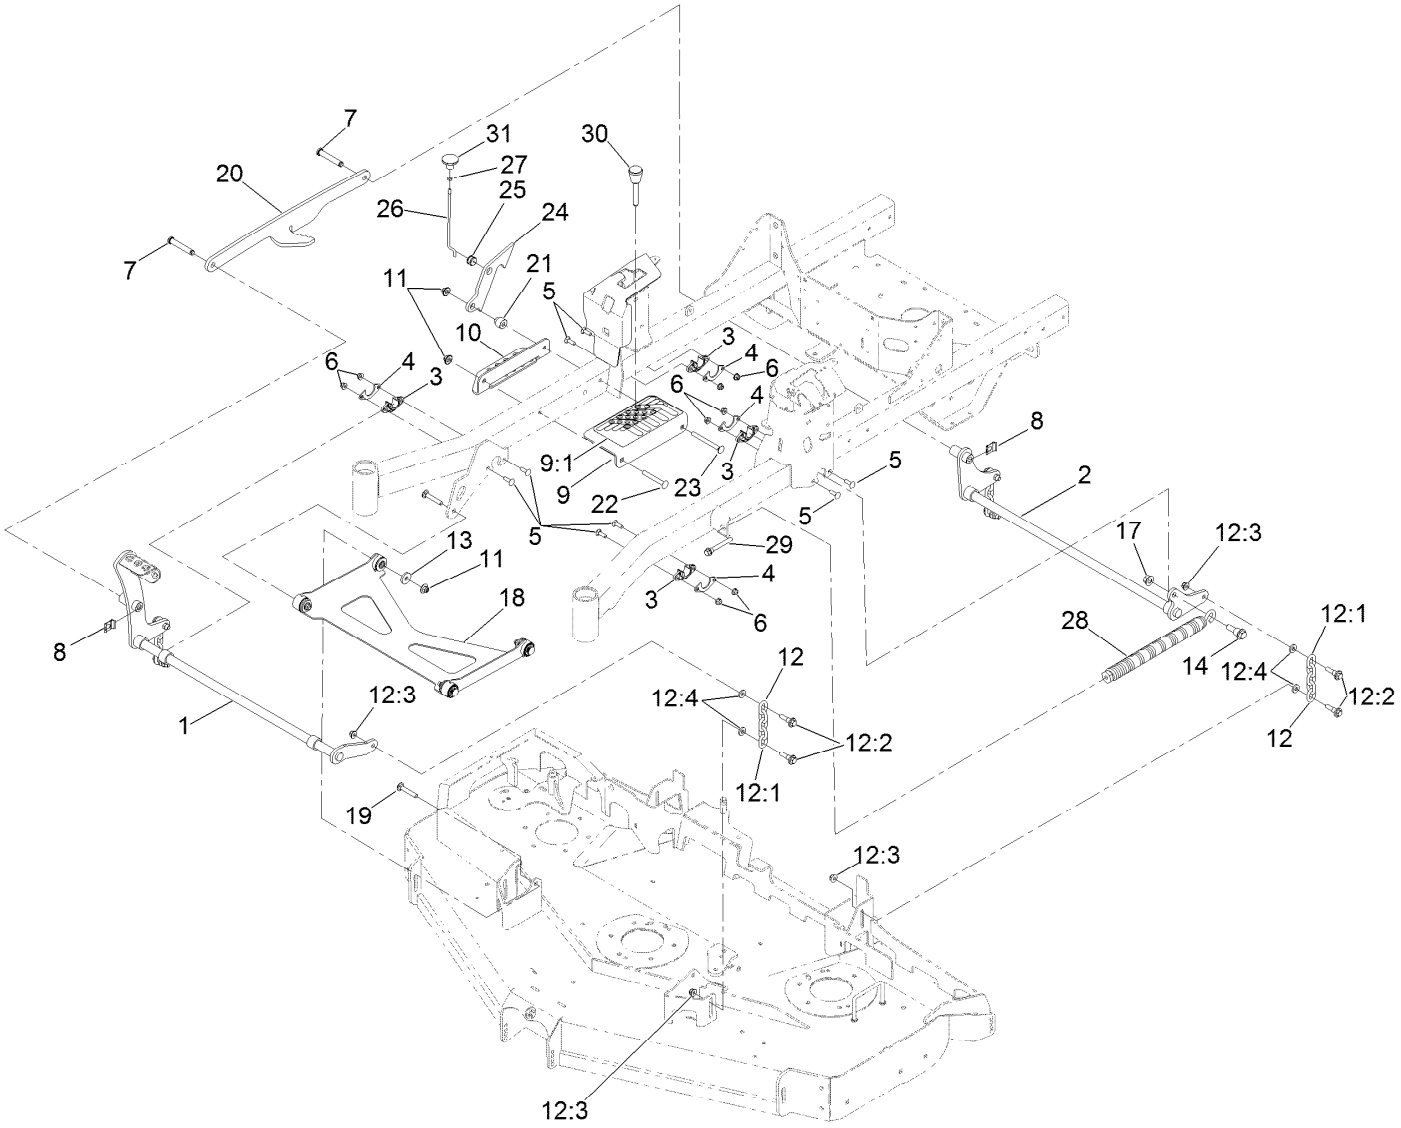

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3342-03	1	Shaft-Lift, Deck
2	126-3343-03	1	Shaft-Lift, Deck (Rear)
3	115-5065	4	Bushing-Flange
4	116-2887	4	Gusset-Lift, Deck
5	3230-22	8	Screw-CARR
6	104-8300	8	Nut-HF, NI
7	126-9181	2	Pin-Clevis
8	138-8491	2	Clip-Pin
9	126-4535	1	Bracket ASM
9:1	126-4784	1	Decal-HOC
10	126-4640-03	1	Angle-HOC, Lower
11	109-6658	4	Nut-Flange, NI
12	126-8877	4	Deck Chain ASM
12:1	1-633447	1	Chain-Lift, Deck
12:2	130-0742	2	Bolt-Shoulder
12:3	104-8301	2	Nut-HF, NI
12:4	43-0940	2	Spacer
13	1-373034	2	Washer
14	116-0780	1	Screw-Shoulder, HHF
17	99-5107	1	Nut-Lock
18	126-8365	1	Deck Strut ASM
19	3231-7	2	Screw-CARR
20	126-4639-03	1	Link-Lift
21	126-5221	1	Spacer-Stepped
22	3231-42	1	Screw-CARR
23	135-0313	1	Screw-CARR
24	126-5222	1	Plate-Lock, Transport
25	126-5593	1	Grommet
26	126-5223	1	Rod-Lock, Transport
27	3218-1	1	Nut-Jam
28	116-0886	1	Spring-Extension
29	92-7674	1	Bolt-Shoulder
30	126-5401	1	Pin-HOC
31	126-7019	1	Knob


Deck Strut Assembly

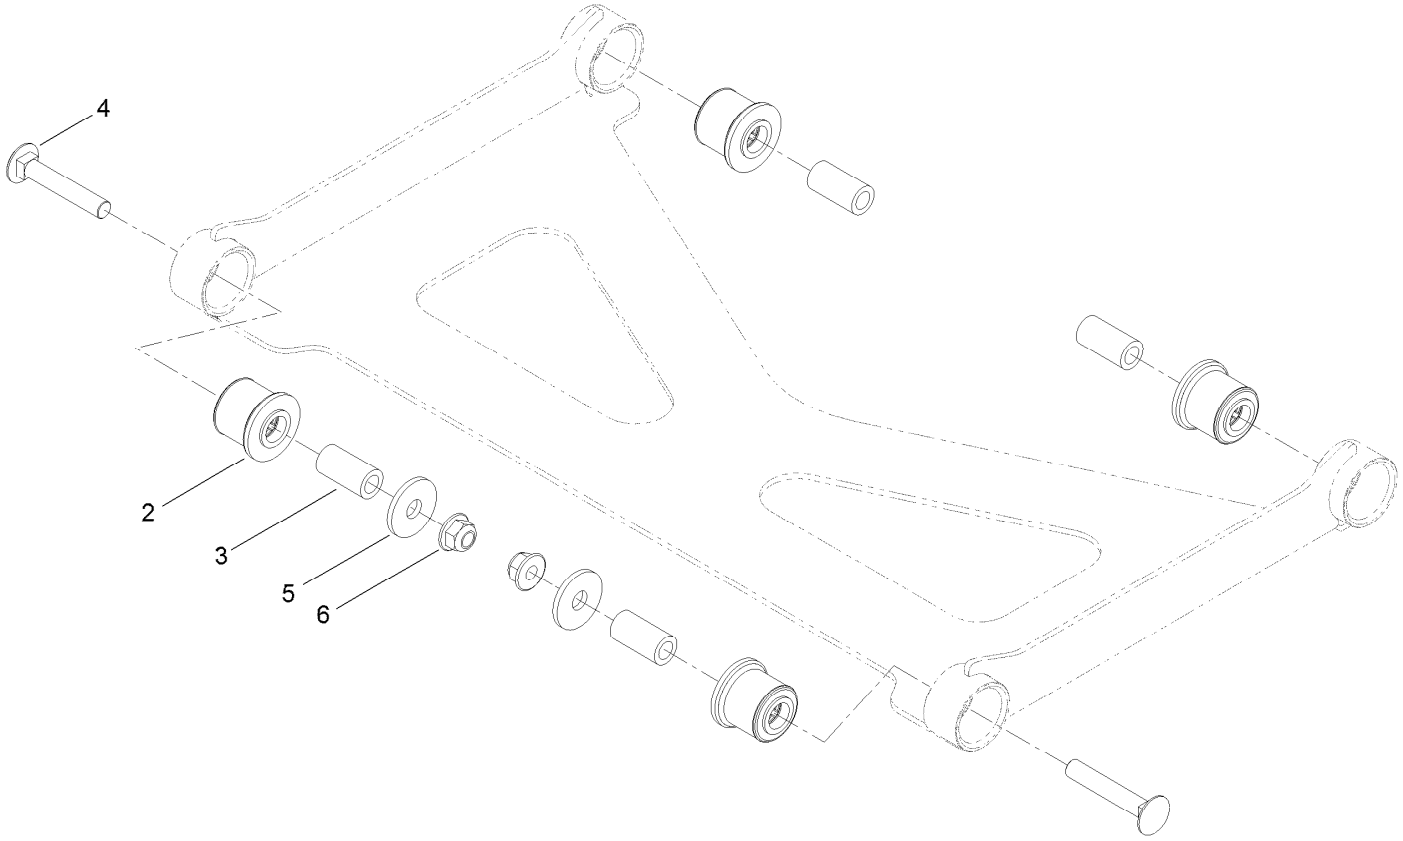

Deck Strut Assembly (continued)

Ref.	Part Number	Qty.	Description
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer
4	3231-7	2	Screw-CARR
5	2844	2	Washer
6	104-8301	2	Nut-HF, NI

Motion Control Assembly

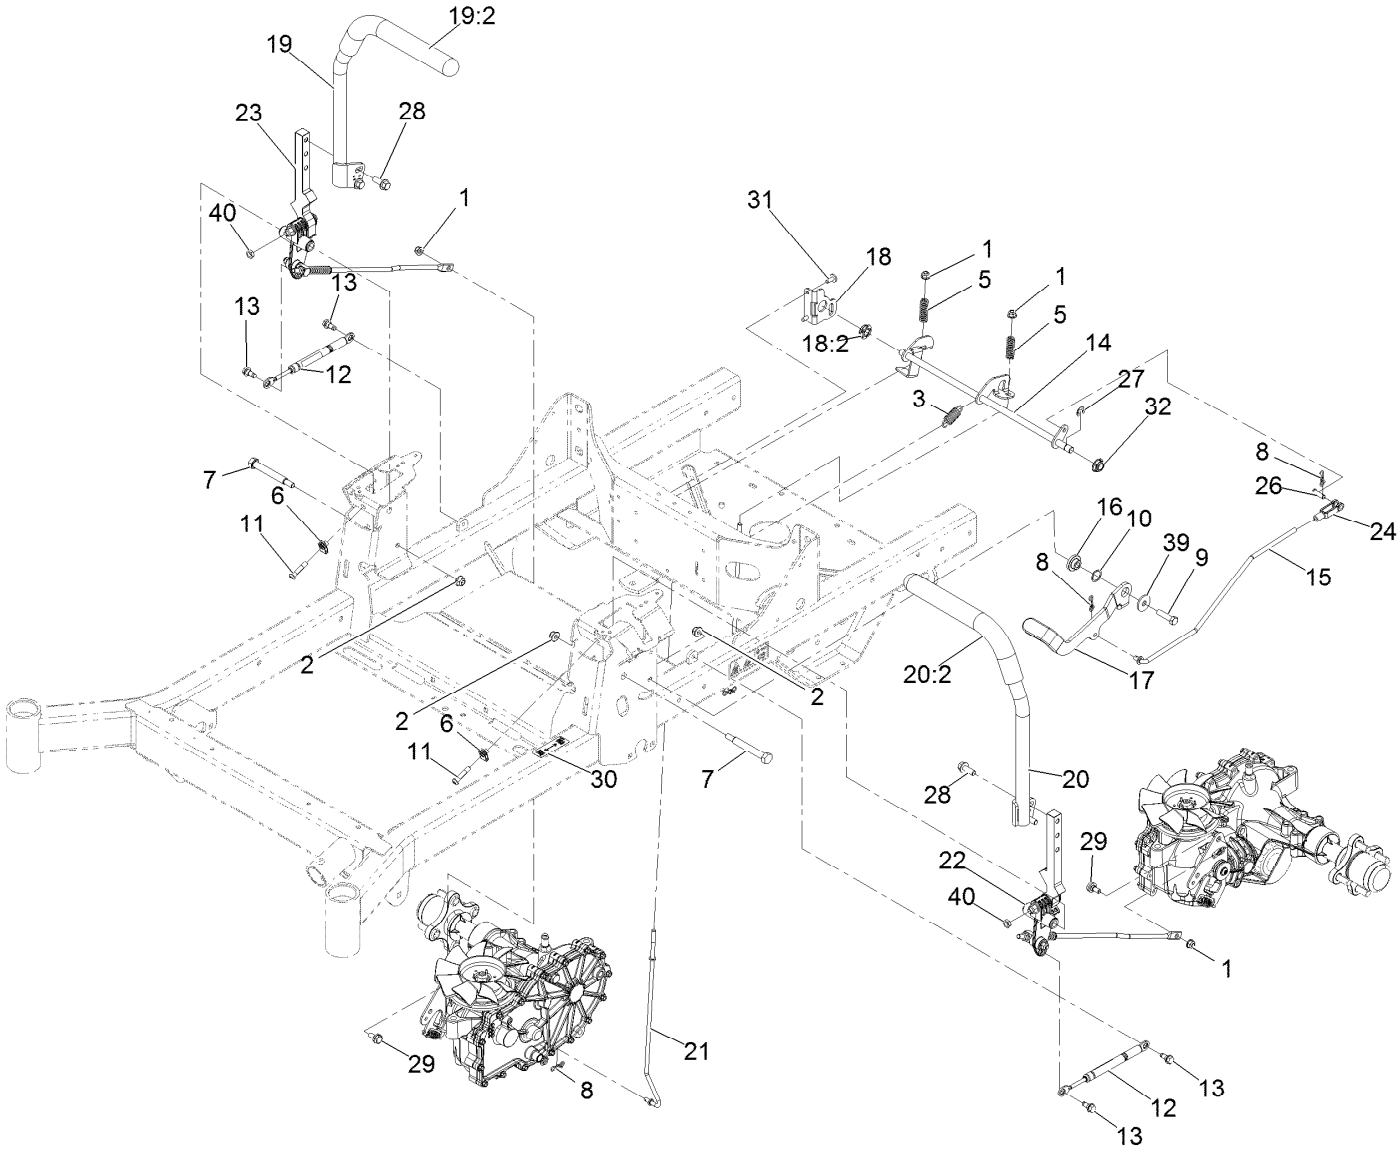


Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	4	Nut-Nyloc 5/16-18 Flg
2	104-8301	3	Nut-Nyloc 3/8-16 Flg
3	107-1045	1	Spring-Extension
5	109-7694	2	Spring-Compression
6	112-3306	2	Nut
7	115-5099	2	Bolt-Pivot
8	119-1415	4	Pin-Cotter, Locking
9	323-8	1	Screw-HH 3/8-16 X 1 1/2
10	119-4164	1	Washer-Wave
11	126-4299	2	Screw-HSBH
12	126-4322	2	Damper
13	126-4424	4	Screw-Shoulder
14	126-5813	1	Shaft-Brake
15	126-5819	1	Linkage-Brake, Upper
16	126-5989	1	Pivot-Flange
17	126-9490	1	Lever-Brake (With Grip)
18	126-6456	1	Bracket-Brake
18:2	126-5820	1	Bearing-Spherical
19	138-6015	1	RH Extended Control Handle ASM
19:2	126-7359	1	Grip
20	138-6017	1	LH Extended Control Handle ASM
20:2	126-7359	1	Grip
21	126-7217	2	Linkage-Brake, Lower
22		1	LH Motion Control ASM ●
23		1	RH Motion Control ASM ●
24	1-303105	1	Yoke-Adjustable
26	1-808280	1	Pin-Clevis 5/16 X 1 49/64
27	32120-47	1	Ring-Retaining
28	3234-42	4	Screw HHF 3/8-16 X 1
29	37-8771	2	Screw-Shoulder 5/16-18 X 5/8
30	115-9625	1	Decal-Brake, Parking
31	126-6266	2	Screw-1/4-20 X .65 Torx Plus
32	126-5820	1	Bearing-Spherical
39	2844	1	Washer
40	3218-3	2	Nut-Jam 3/8-16

● Not serviced separately


LH and RH Motion Control Assembly

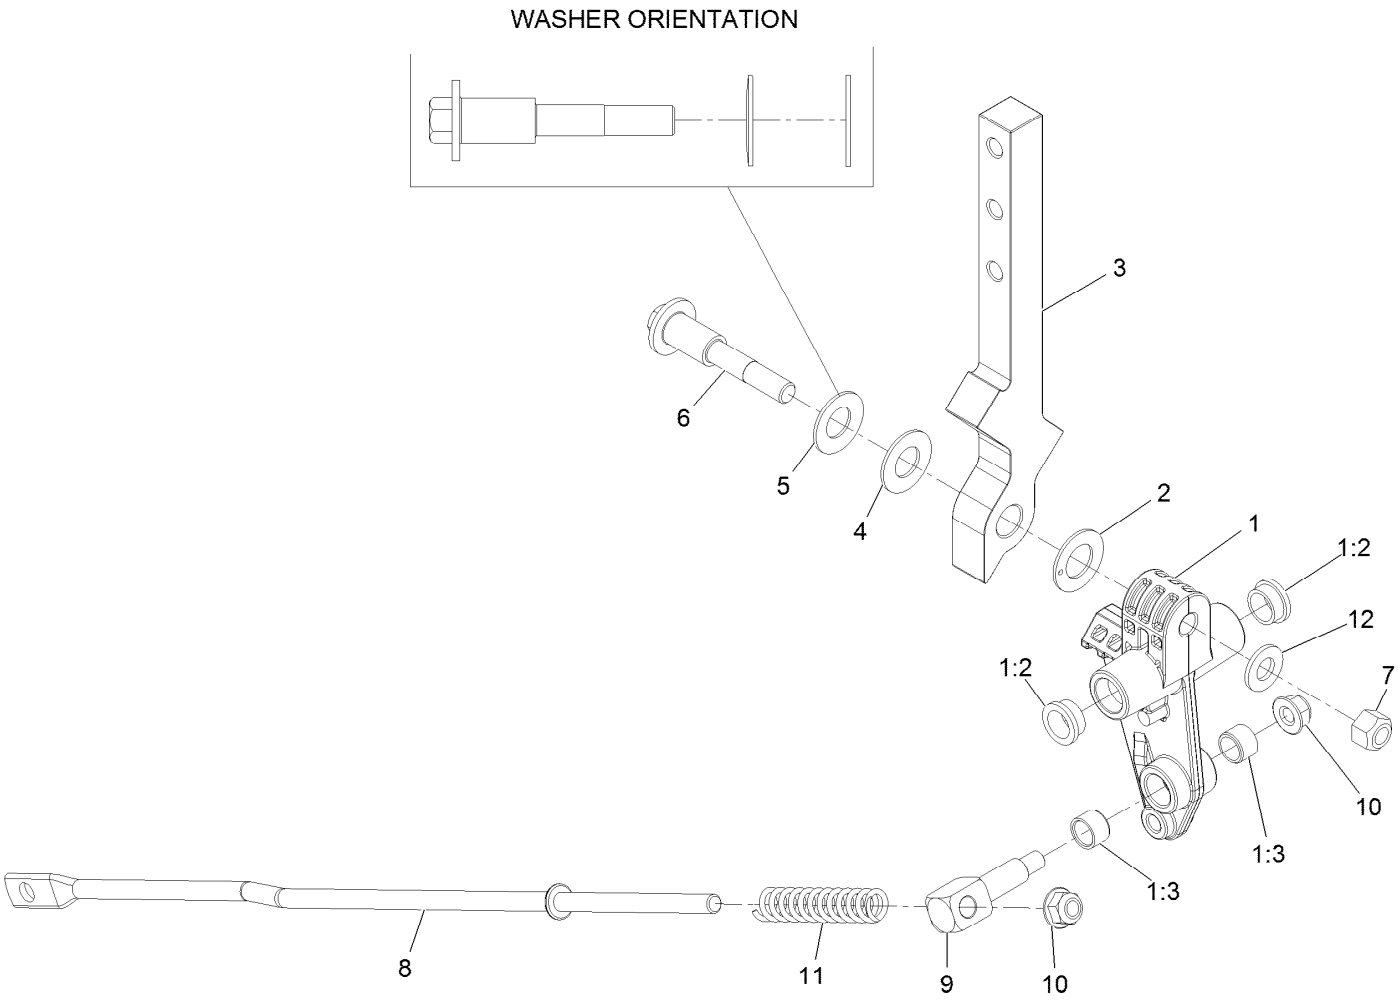

LH and RH Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3773	1	Control Arm ASM
1:2	126-8909	2	Bushing
1:3	1-413152	2	Bushing-Sleeve
2	126-7296	1	Washer-Friction
3	126-8182	1	Arm-Control
4	117-1240	1	Washer
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	32152-2	1	Nut-Hex 3/8-16 Lock
8	126-5435	1	Link-Control
9	126-5434	1	Swivel
10	104-8300	2	Nut-Nyloc 5/16-18 Flg
11	126-8195	1	Spring-Return, Neutral
12	3256-24	1	Washer-3/8 SAE


Control Panel Assembly

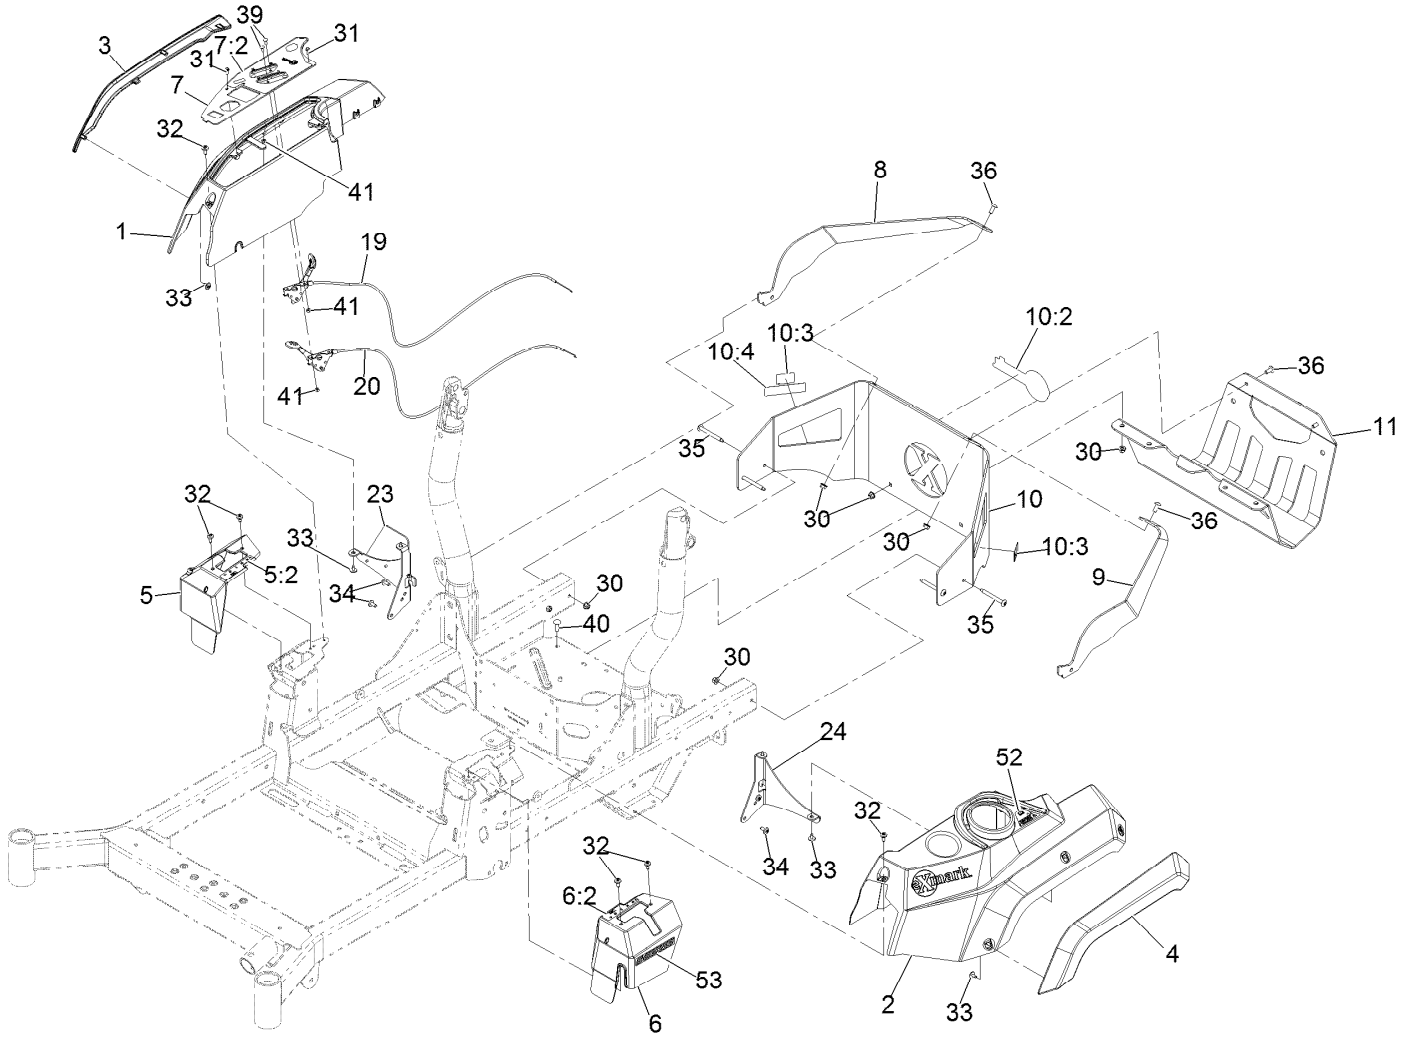

Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4959	1	Console-Exmark, RH
2	126-4960	1	Console, LH
3	126-4741	1	Fender-RH
4	126-4742	1	Fender-LH
5	126-7371	1	Cover-Control, Motion (RH)
5:2	126-6183	1	Decal-Control, Motion (RH)
6	126-7372	1	Cover-Control, Motion (LH)
6:2	126-6194	1	Decal-Control, Motion (LH)
7	135-7845	1	ASM-Control Panel W/Exmark Decal
7:2	135-7816	1	Decal-Control Panel
8	126-6015-03	1	Support-Upper, RH
9	126-6016-03	1	Support-Upper, LH
10	126-7802	1	Rear Guard ASM
10:2	126-6877	1	Decal, Exmark Logo
10:3	106-5517	2	Decal-Warning
10:4	133-8062	1	Decal-Arrestor, Spark
11	135-5084-03	1	Guard-Muffler [black]
19	126-6945	1	Cable-Control, Choke
20	126-6944	1	Cable-Control, Throttle
23	126-9945	1	Support-Console, RH
24	126-5532-03	1	Bracket-Console, LH
30	104-8300	10	Nut-HF, NI
31	117-5036	2	Screw-Plastic, HWH
32	120-7950	6	Screw
33	126-5544	10	Screw-Torx
34	126-6266	4	Screw-Tph
35	126-6267	4	Screw-Torx
36	126-6268	4	Screw-Torx
39	1-807513	4	Bolt-CARR
40	3230-22	2	Screw-CARR
41	3296-2	4	Nut-Lock, NI
52	126-9939	1	Decal-Fill, Fuel
53	126-9296	2	Decal-S-Series


Fuel Assembly

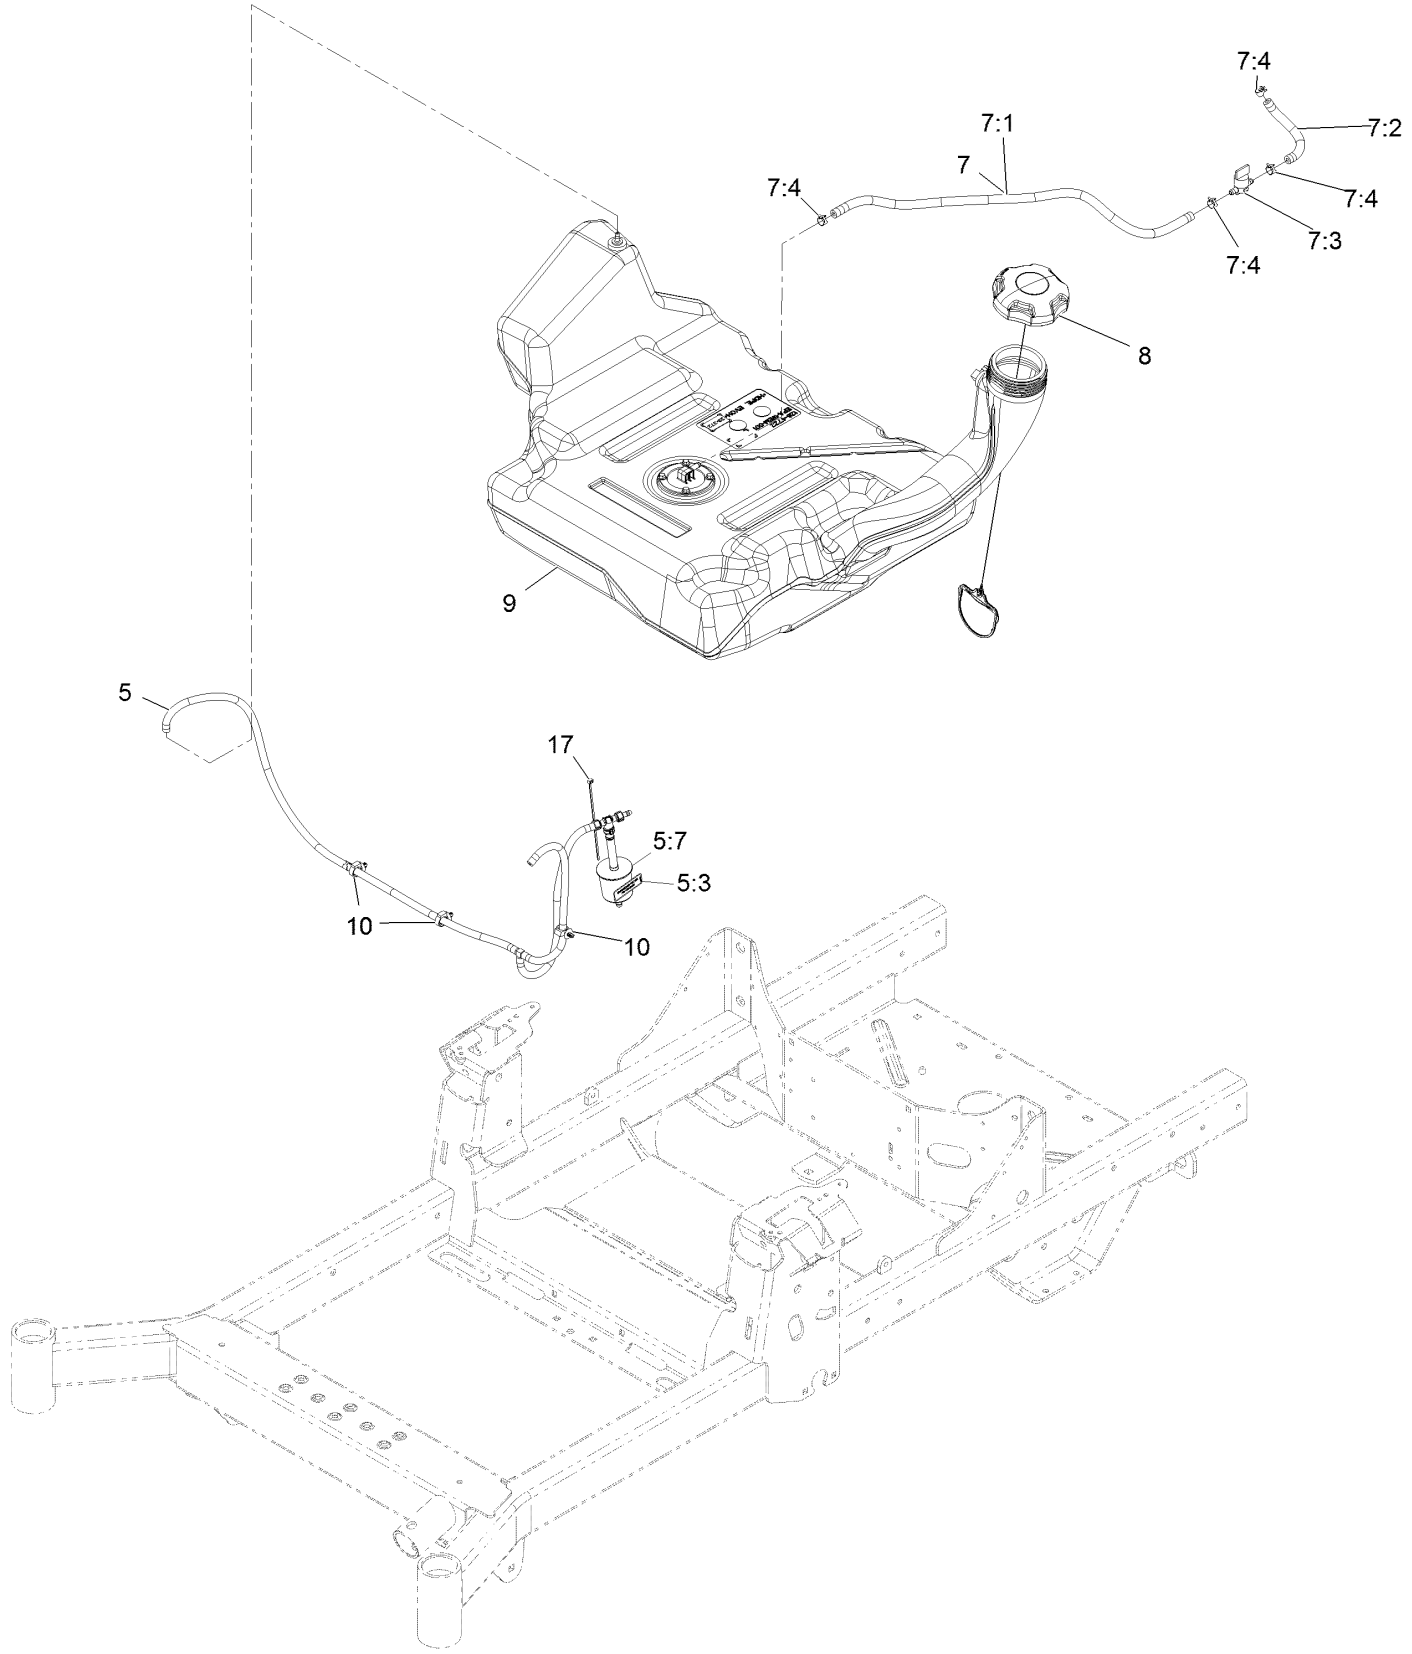

Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
5	126-8738	1	Vent Hose ASM
5:3	116-4769	1	Decal-Filter, Emissions
5:7	120-2235	1	Filter-Fuel
7	126-8740	1	Fuel Hose ASM
7:1	109-0302	1	Hose-Fuel Line 24"
7:2	109-0678	1	Hose-Fuel
7:3	1-603770	1	Valve-Fuel
7:4	2412-98	4	Clamp-Hose
8	135-4801	1	Cap-Fuel, Ratcheting
9	126-4724	1	Tank-Fuel
10	126-5523	3	Clip
17	1-303287	1	Tie-Cable 5 1/2 (Small)


Fuel Tank Assembly (cont.)

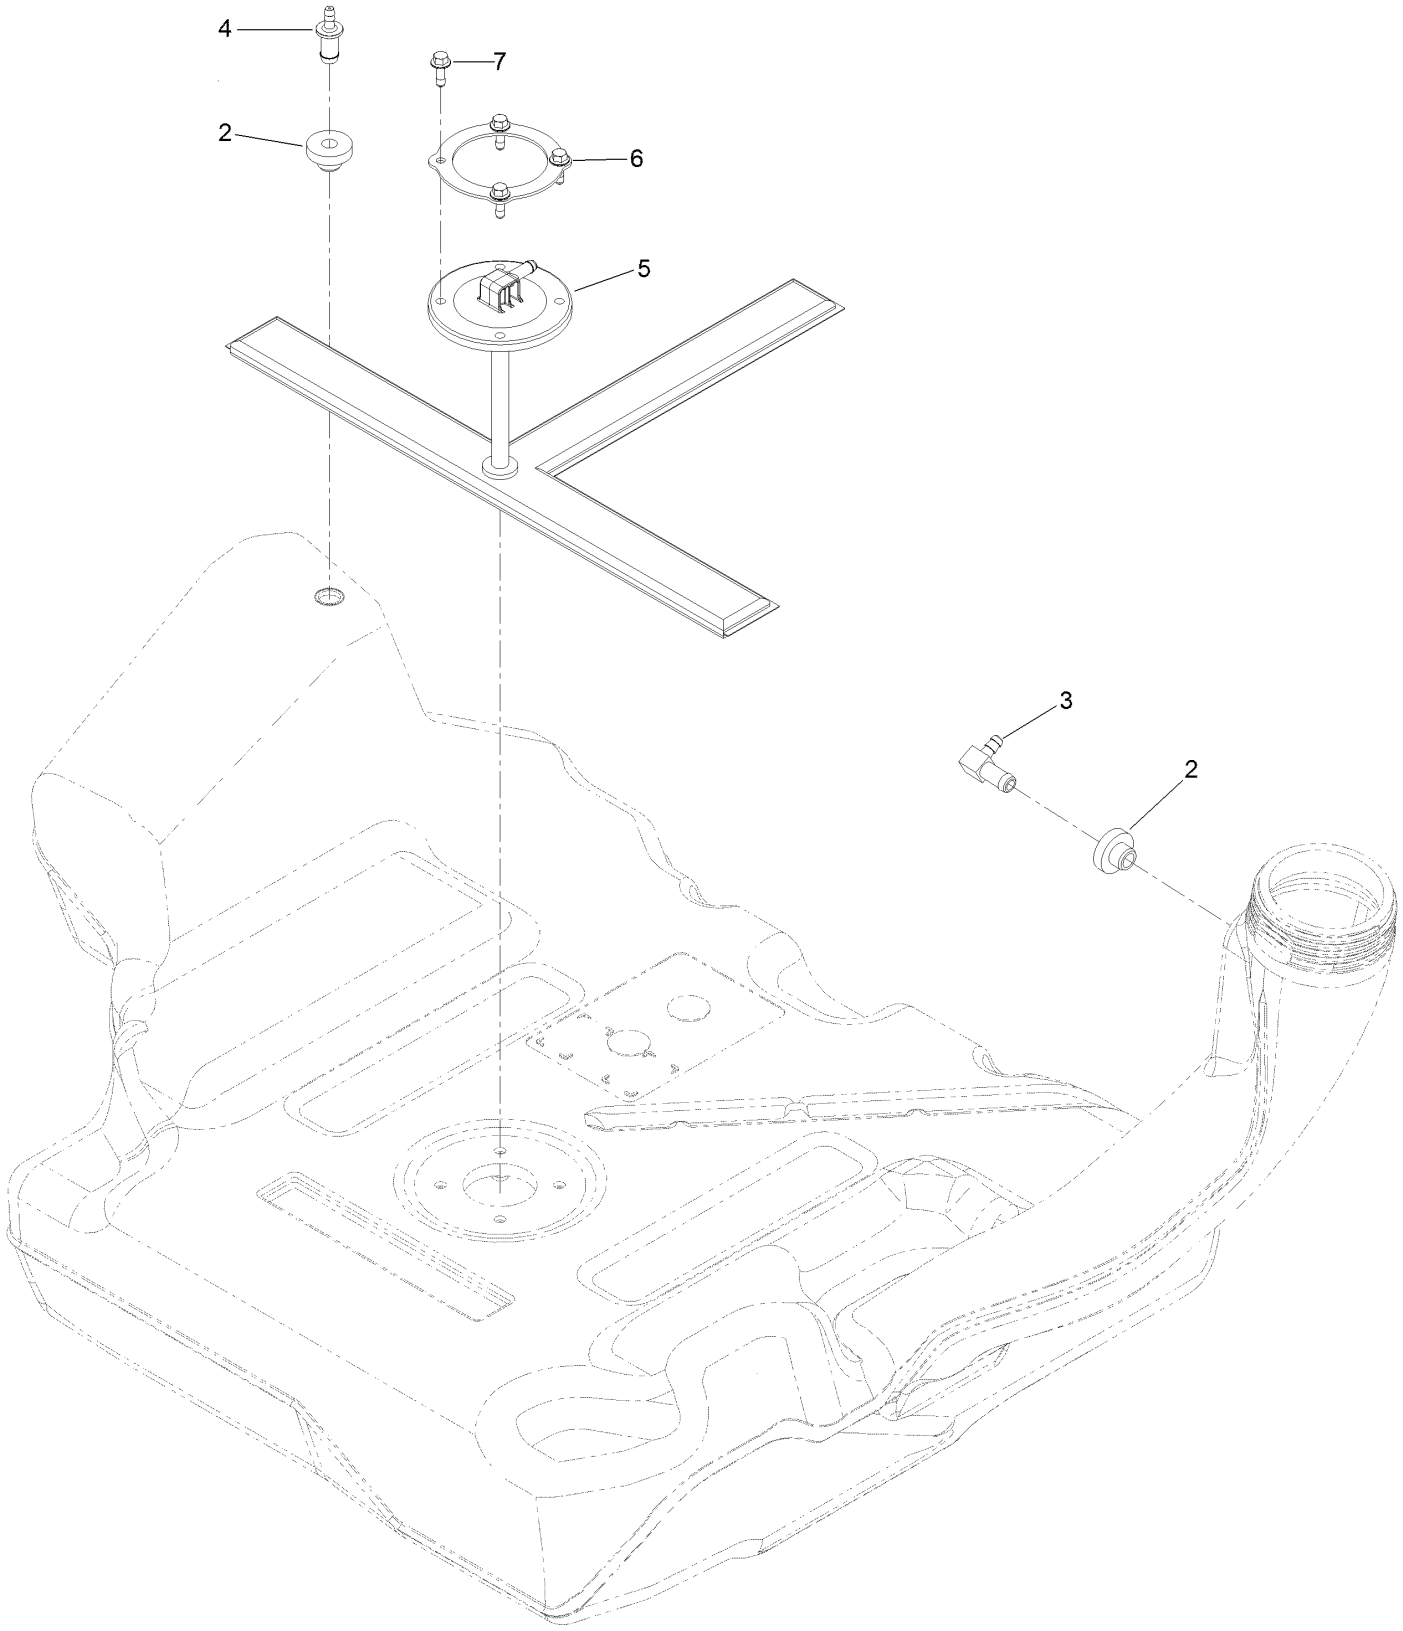

Fuel Tank Assembly (cont.) (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	2	Bushing
3	126-9057	1	Fitting-90 DEG
4	116-4630	1	Fitting-Orifice, Straight
5	126-5528	1	Pickup-Fuel
6	126-5527	1	Ring-Retainer
7	126-5525	4	Bolt


Rear Wheel Assembly

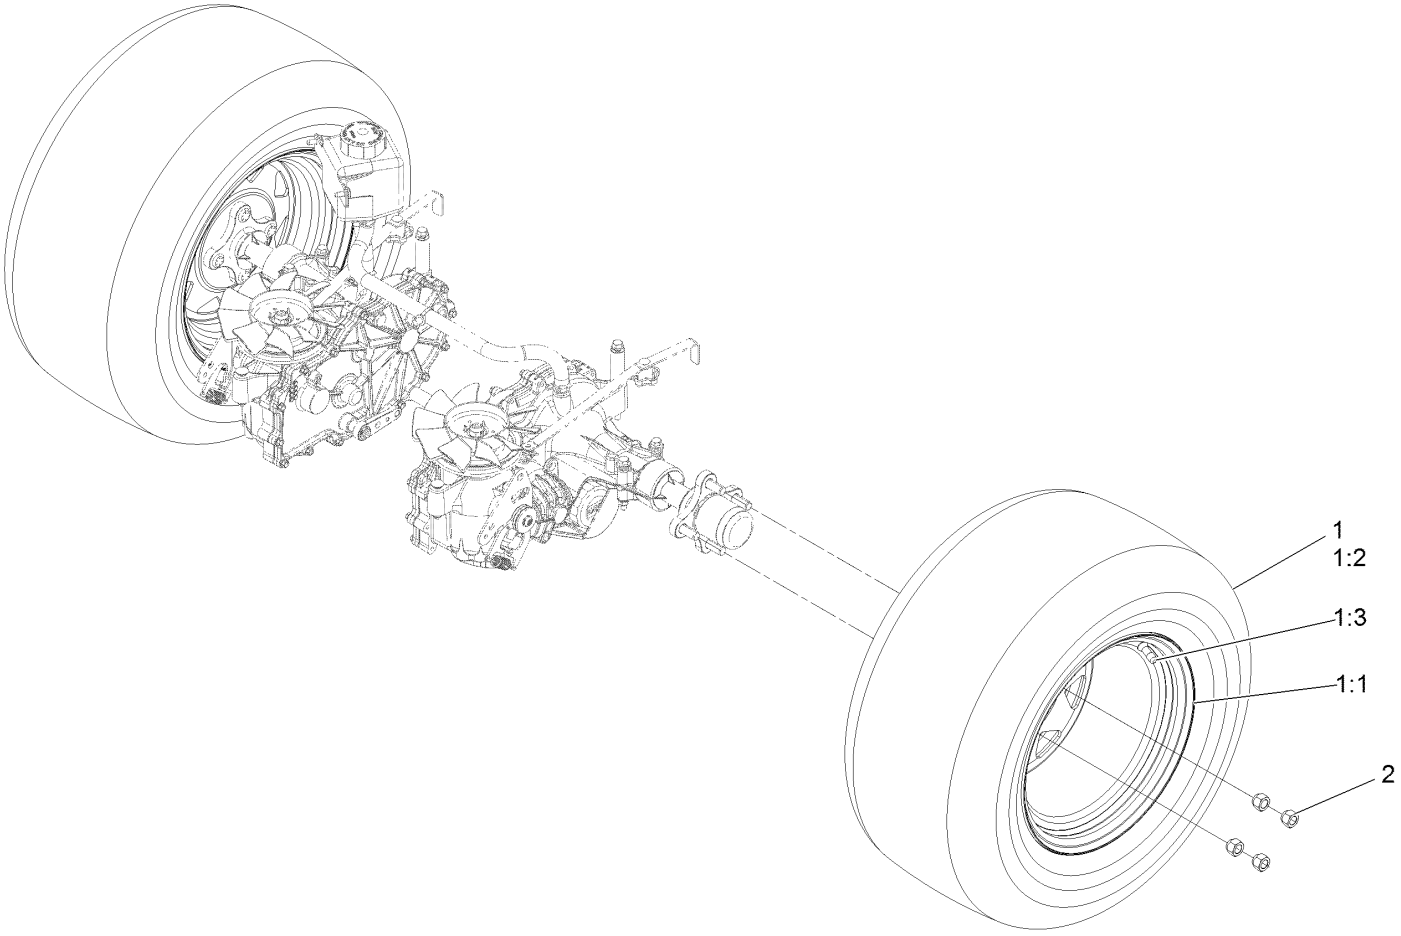

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-7835	2	Wheel And Tire ASM
1:1	126-2877	1	Wheel Rim 12X8.5
1:2	120-3269	1	Tire
1:3	232-27	1	Stem-Valve
2	242-50	8	Nut-Lug 1/2-20

Engine Assembly

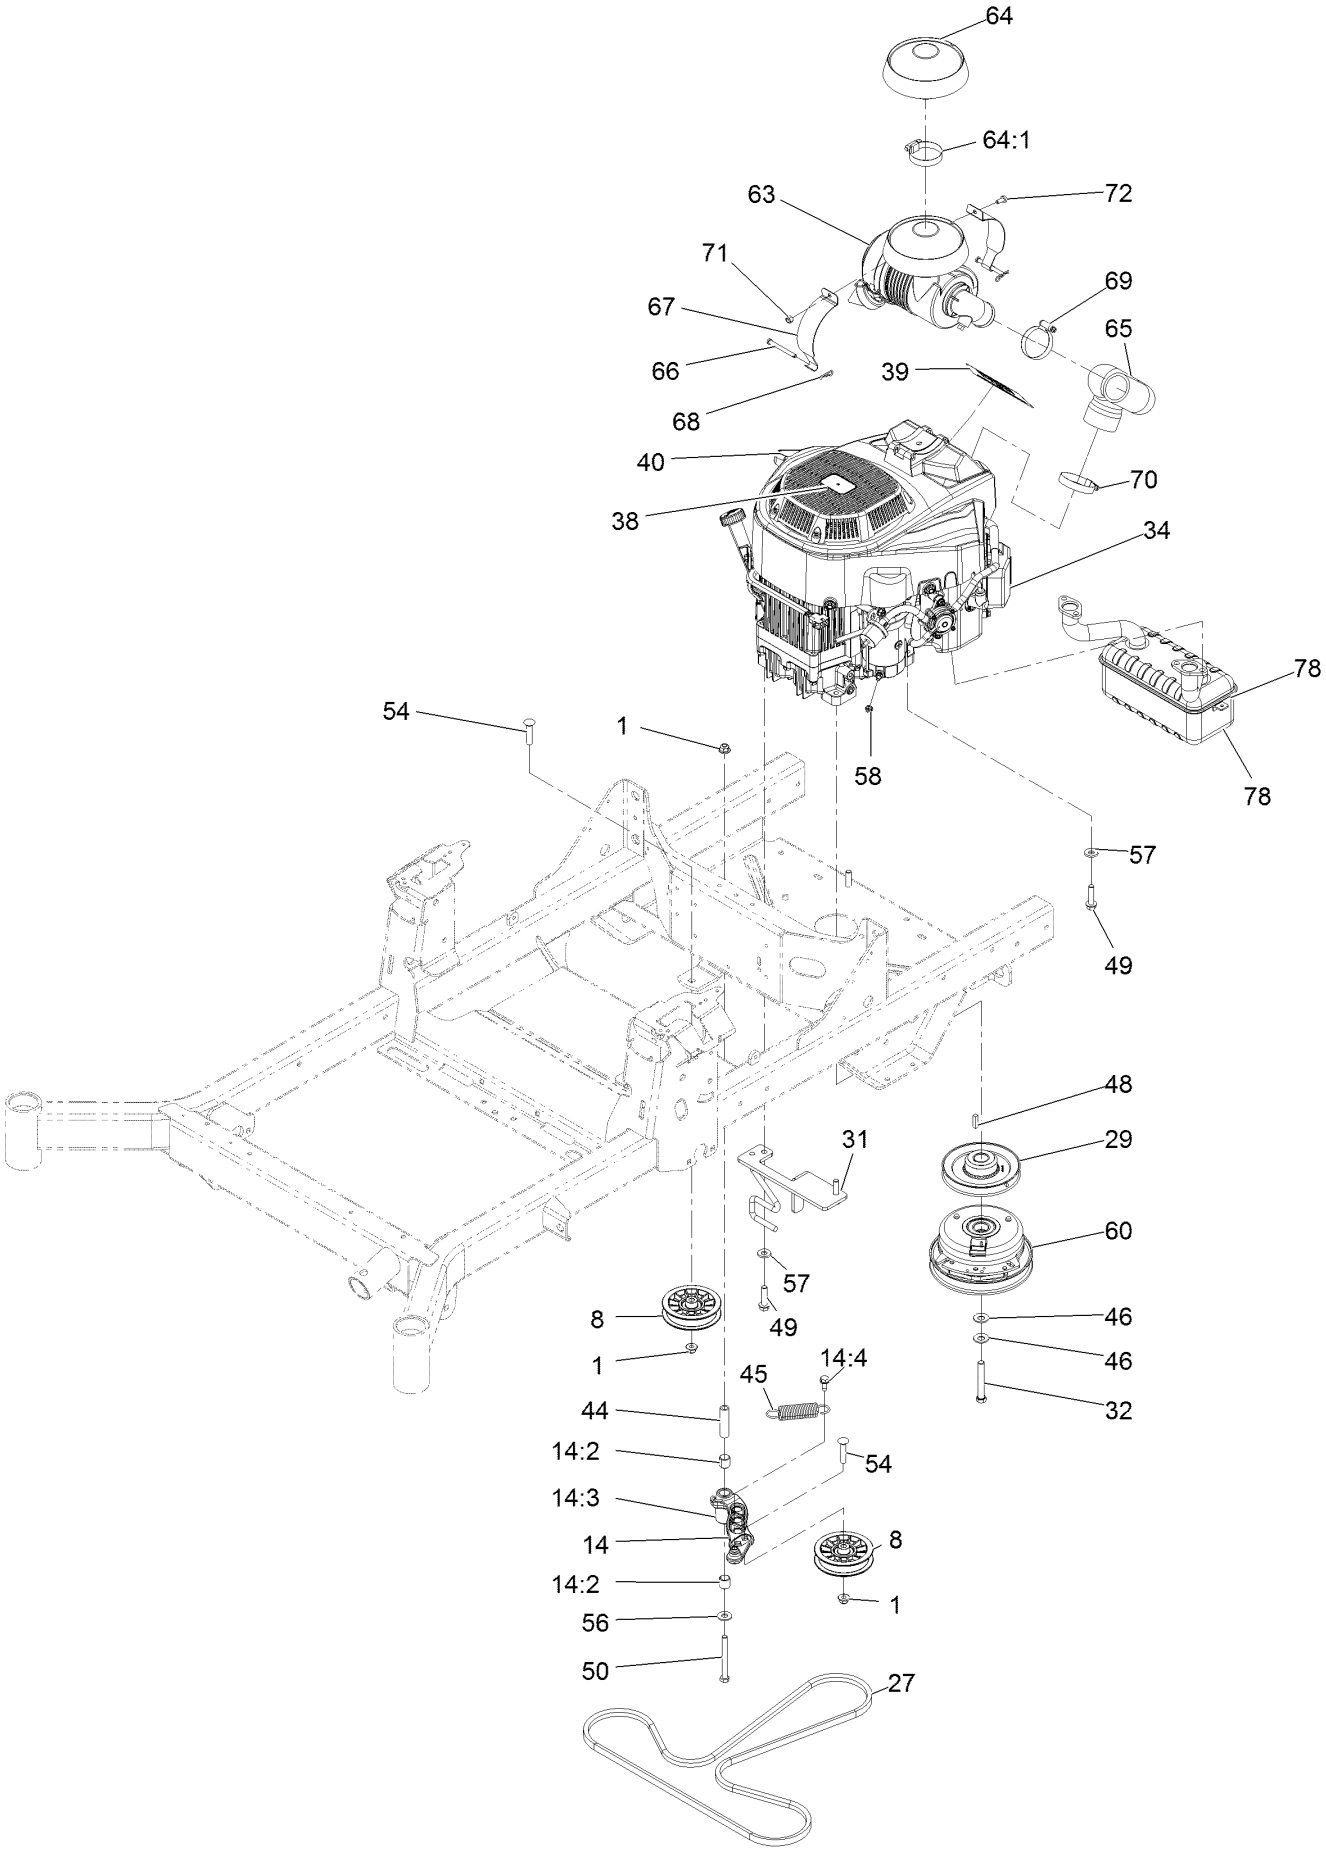


Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8301	3	Nut-Nyloc 3/8-16 Flg
8	116-2456	2	Pulley-Flat Idler
14	126-0973	1	Idler Arm ASM
14:2	1-513034	2	Sleeve-Bearing
14:3	302-40	1	Zerk-90° 1/4-28
14:4	32144-11	1	Screw-HWH 5/16-18 X 3/4 Tf
27	126-5993	1	Belt-V
29	138-6007	1	Sheave-Engine
31	126-6688-03	1	Anchor-Clutch
32	126-7198	1	Screw-HH 7/16-20 X 3 W/Loctite ●
34	136-7823	1	Engine-2P77F-HD
38	131-1078	1	Decal
39	135-6448	1	Decal-Engine 708 V-Twin
40	131-1097	1	Decal-Drain, Oil
44	1-603384	1	Bushing-Pivot, Idler
45	1-603402	1	Spring-Extension
46	1-603610	2	Washer-Spring Disc 7/16
48	1-807259	1	Key-Machine 1/4 X 1/4 X 1
49	32144-102	4	Screw-HWH 3/8-16 X 1 1/2 Taptite
50	323-15	1	Screw-HH 3/8-16 X 3 1/2
54	3231-29	2	Bolt-Carriage 3/8-16 X 1 3/4
56	3256-4	1	Washer-3/8 Std
57	98-5975	4	Washer-Spring Disc 3/8
58	33003-00	1	Nut-Hex M6-1 Flg
60	126-8925	1	Clutch - 1.00 HD
63	93-2190	1	Air Cleaner ASM
64	136-7859	1	Rain Cap Kit
64:1	1-643009	1	Clamp-Hose
65	136-9242	1	Hose-Intake
66	137-2011	2	Pin-Clevis
67	136-9243	2	Strap-Canister, Air
68	1-806003	2	Hairpin-Cotter
69	1-643009	1	Clamp-Hose
70	2412-130	1	Clamp-Hose
71	137-3088	1	Nut-Hex
72	137-3041	1	Screw-HH
78	130-6851	1	Muffler

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


Air Cleaner Assembly No. 93-2190

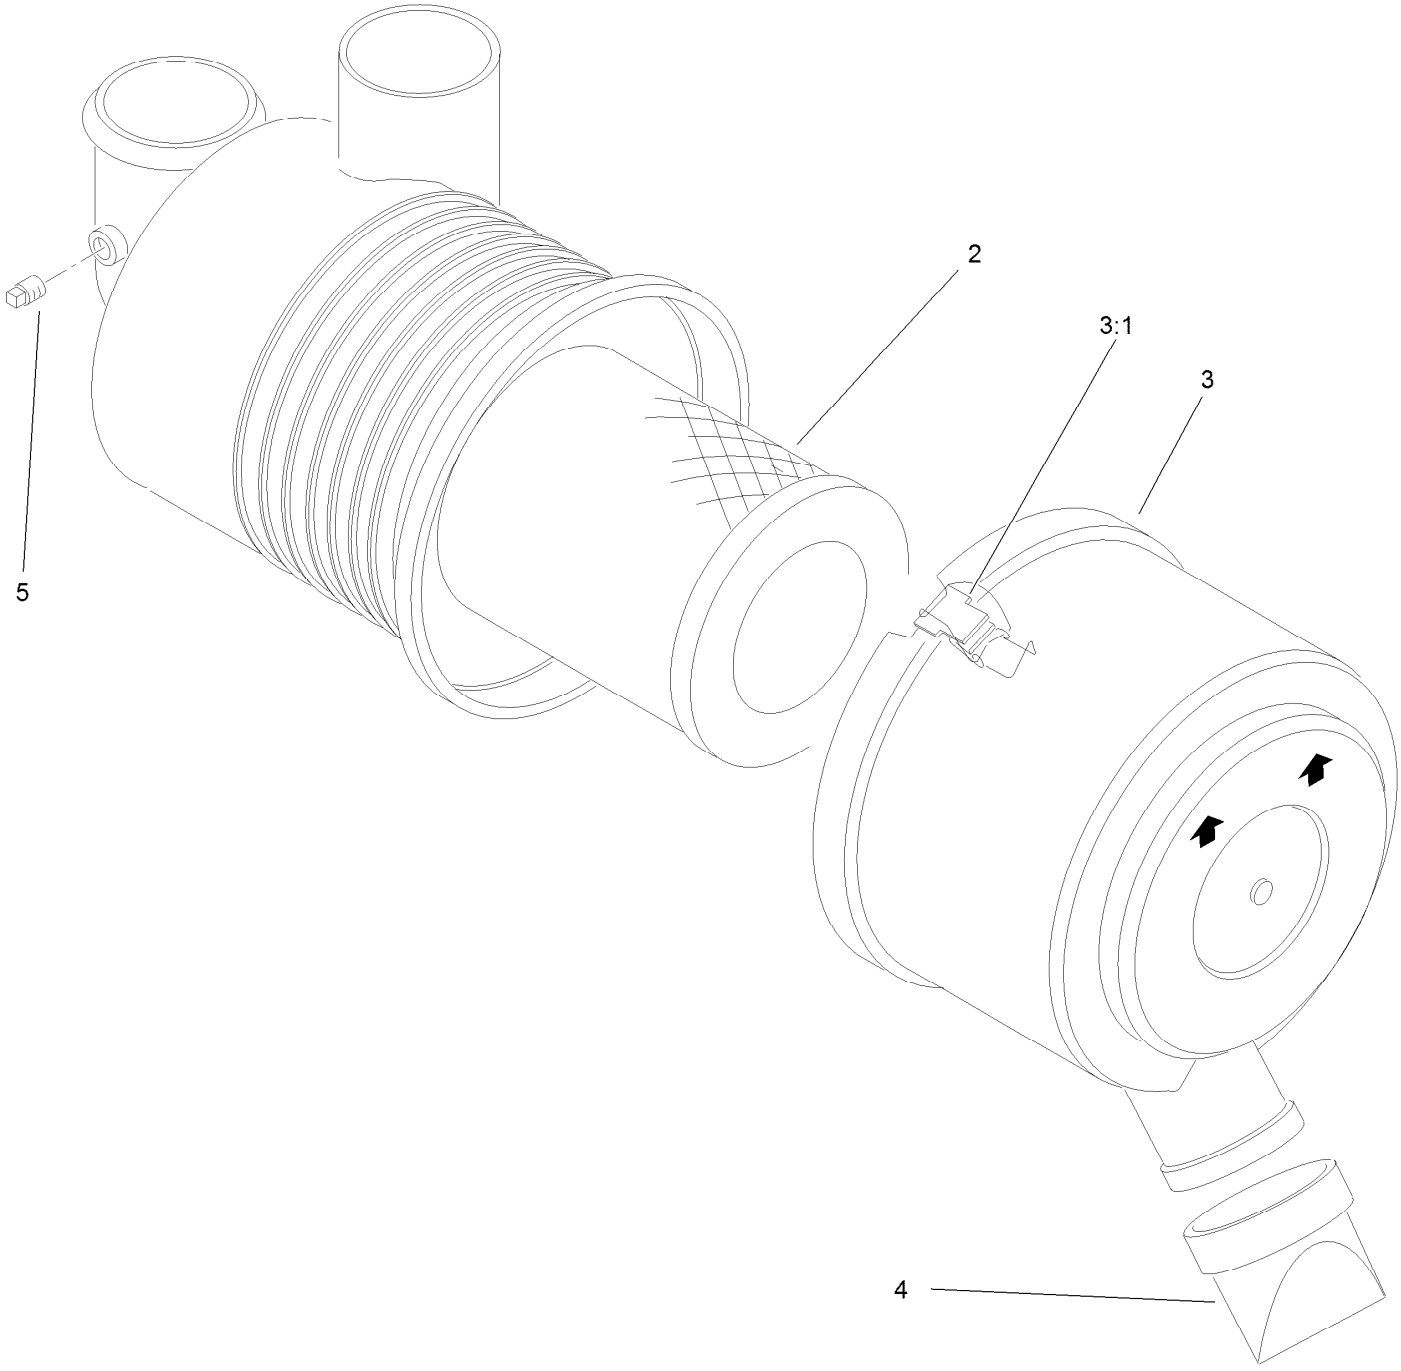



Air Cleaner Assembly No. 93-2190 (continued)

Ref.	Part Number	Qty.	Description
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

Fuel System Assembly

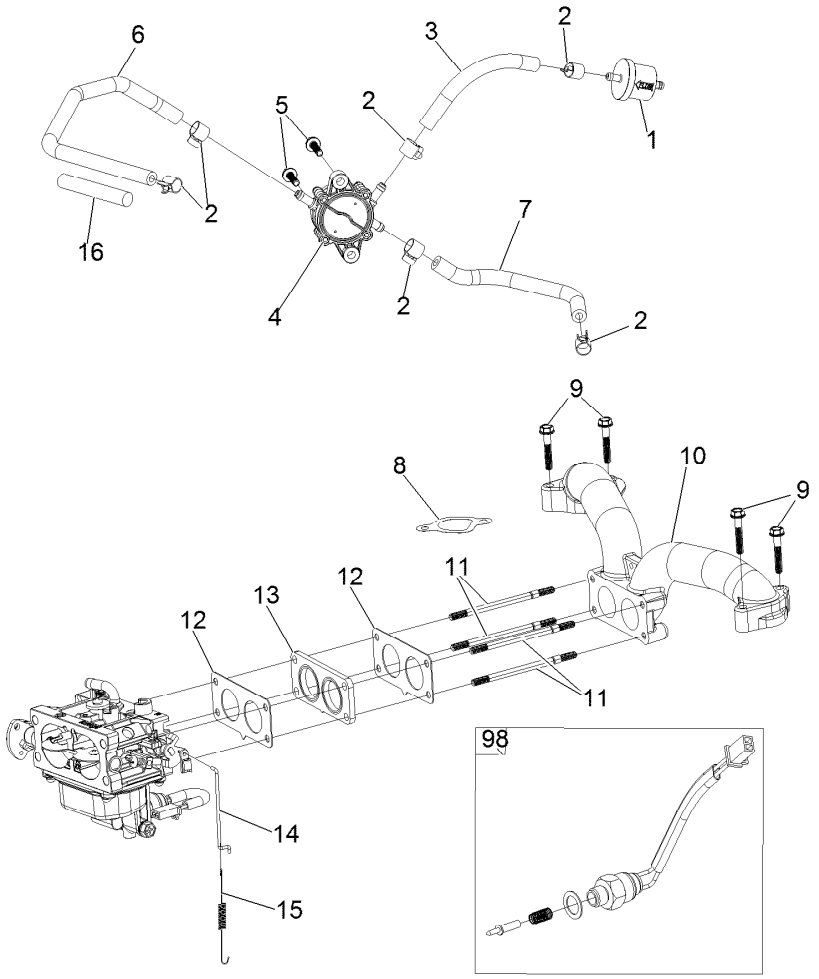

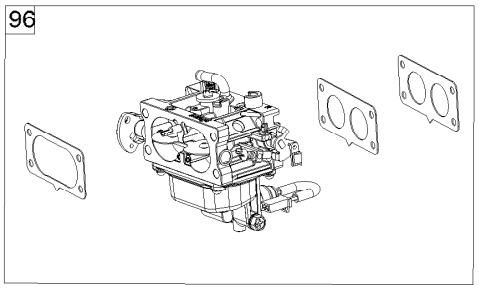

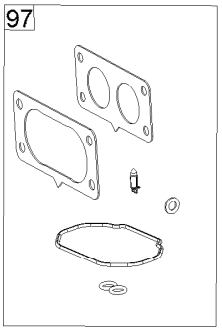


Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-1563	1	Filter-Fuel
2	120-4251	6	Clamp-Fuel Line
3	120-4371	1	Line-Fuel
4	127-9206	1	Pump-Fuel
5	120-4225	2	Screw-HHF
6	127-9205	1	Hose-Fuel
7	127-9207	1	Hose-Fuel
8	127-9230	2	Gasket-Intake
9	120-4284	4	Screw-HHF
10	127-9244	1	Manifold-Intake
11	127-9245	4	Stud
12	127-9246	2	Gasket-Carburetor
13	127-9247	1	Insulator-Carburetor
14	133-9963	1	Linkage-Throttle
15	133-9964	1	Spring-Return, Throttle
16	127-9355	1	Sleeve-Fuel Line Protector
96	136-7842	1	Carburetor Replacement Kit ASM
97	127-9290	1	Carburetor Repair Kit
98	127-9292	1	Solenoid Kit
99	136-7838	1	High Altitude Kit ●

● Not illustrated

Carburetor Assembly

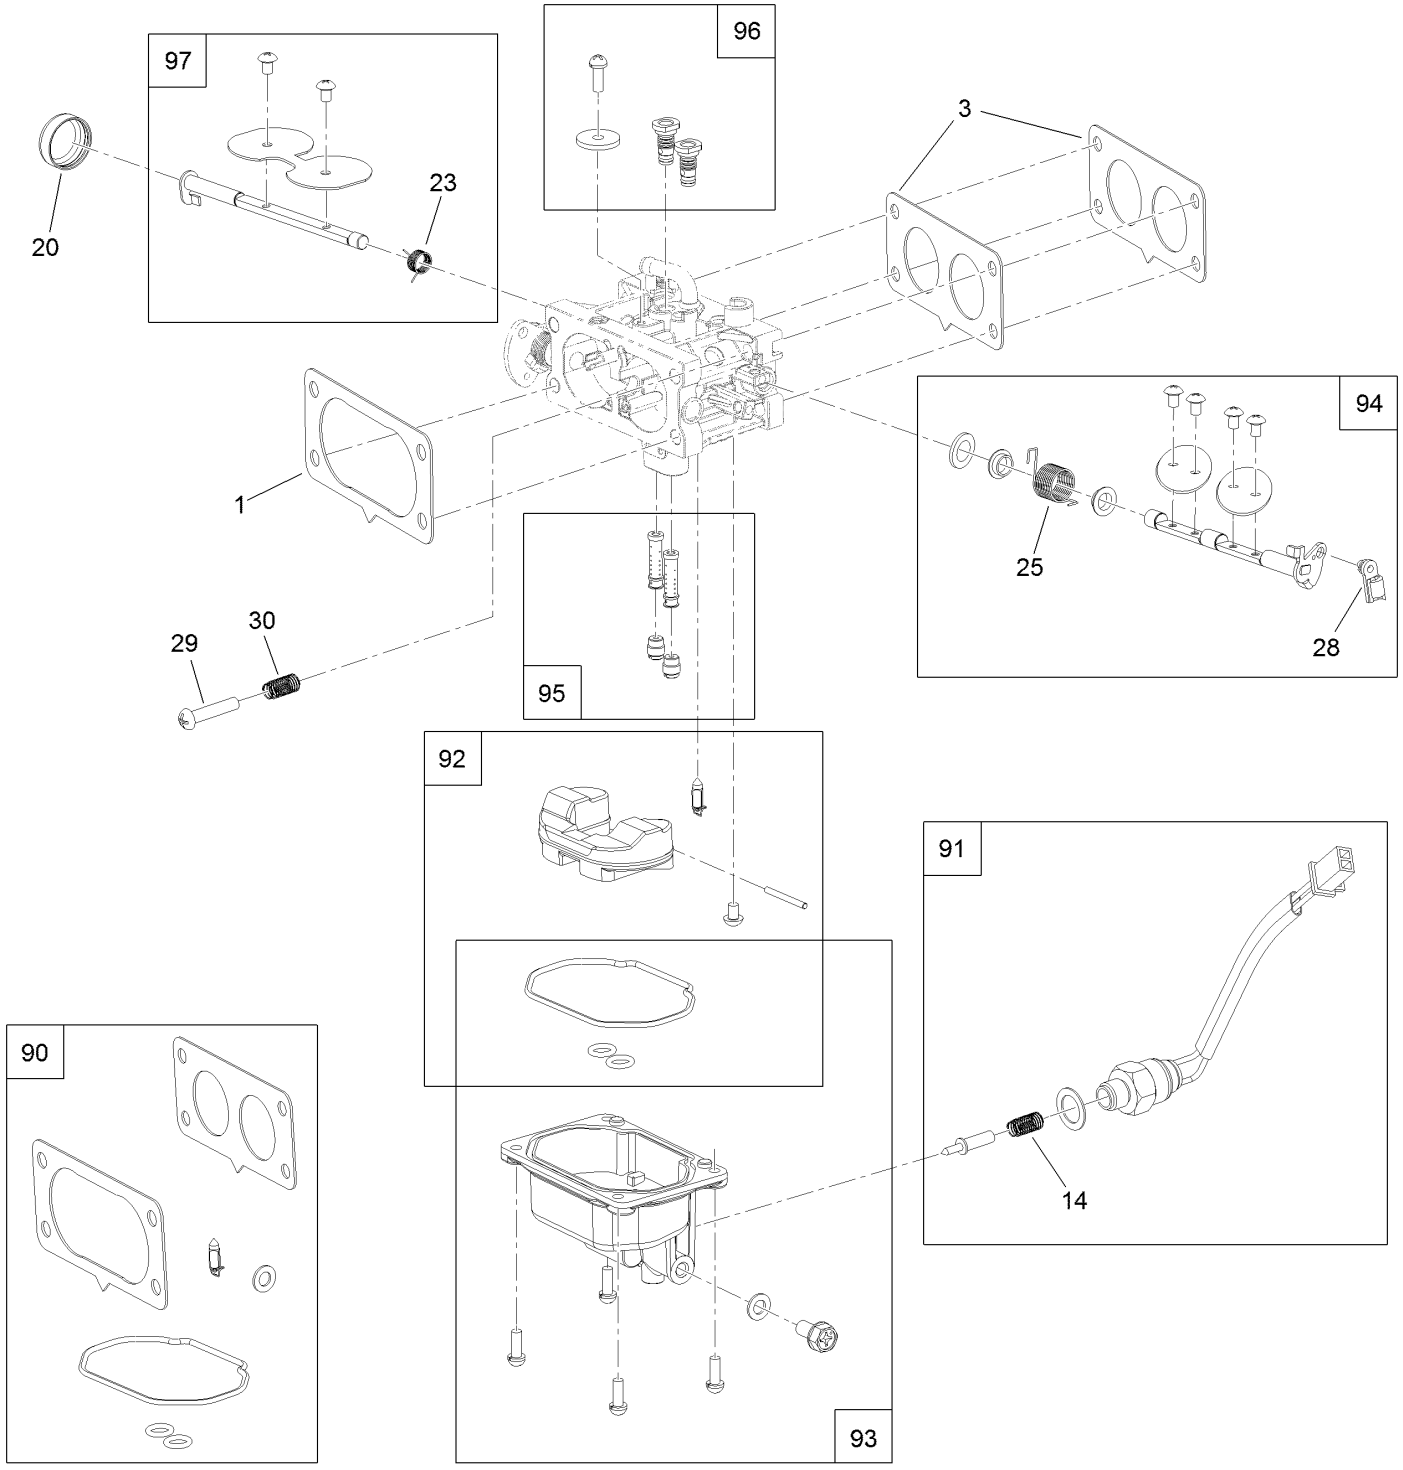


Carburetor Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9251	1	Gasket-Carburetor
3	127-9246	2	Gasket-Carburetor
14	127-9319	1	Spring
20	127-9325	1	Cover-Shaft, Choke
23	127-9328	1	Spring
25	127-9330	1	Spring
28	127-9333	1	Clamp-Lock
29	127-9334	1	Screw-PPH
30	127-9335	1	Spring

Ref.	Part Number	Qty.	Description
90	127-9290	1	Carburetor Repair Kit
91	127-9292	1	Solenoid Kit
92	127-9340	1	Float Kit
93	127-9341	1	Bowl Kit
94	133-9817	1	Throttle Shaft Kit
95	136-7846	1	Nozzle And Jet Kit
96	136-7899	1	Idle Jet Kit
97	127-9345	1	Choke Shaft Kit


Air Intake and Filtration Assembly

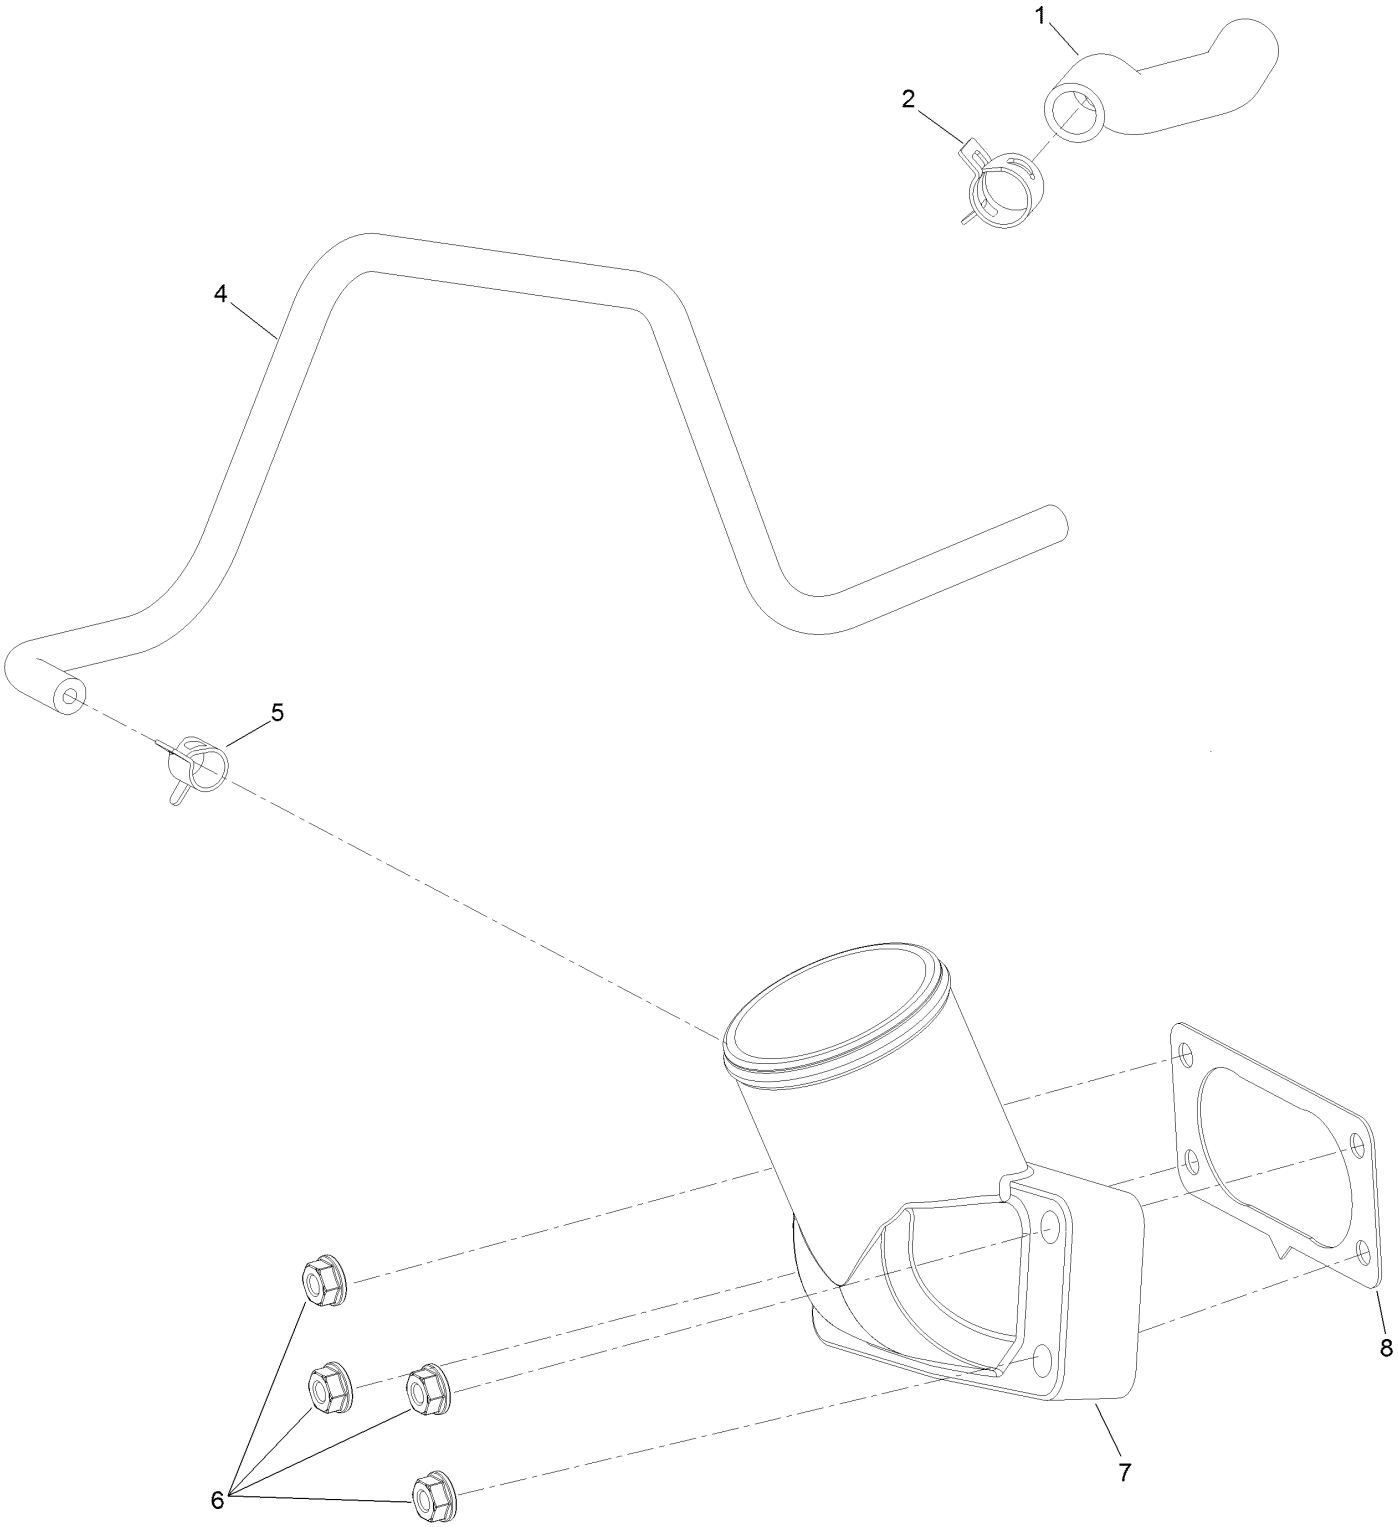

Air Intake and Filtration Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9235	1	Tube-Breather
2	127-9234	2	Clamp-Hose
4	127-9253	1	Hose-Fuel
5	127-9187	1	Clamp-Hose
6	120-4236	4	Nut-Flange
7	136-9241	1	Manifold-Intake
8	127-9251	1	Gasket-Carburetor


Ignition and Cooling Fan

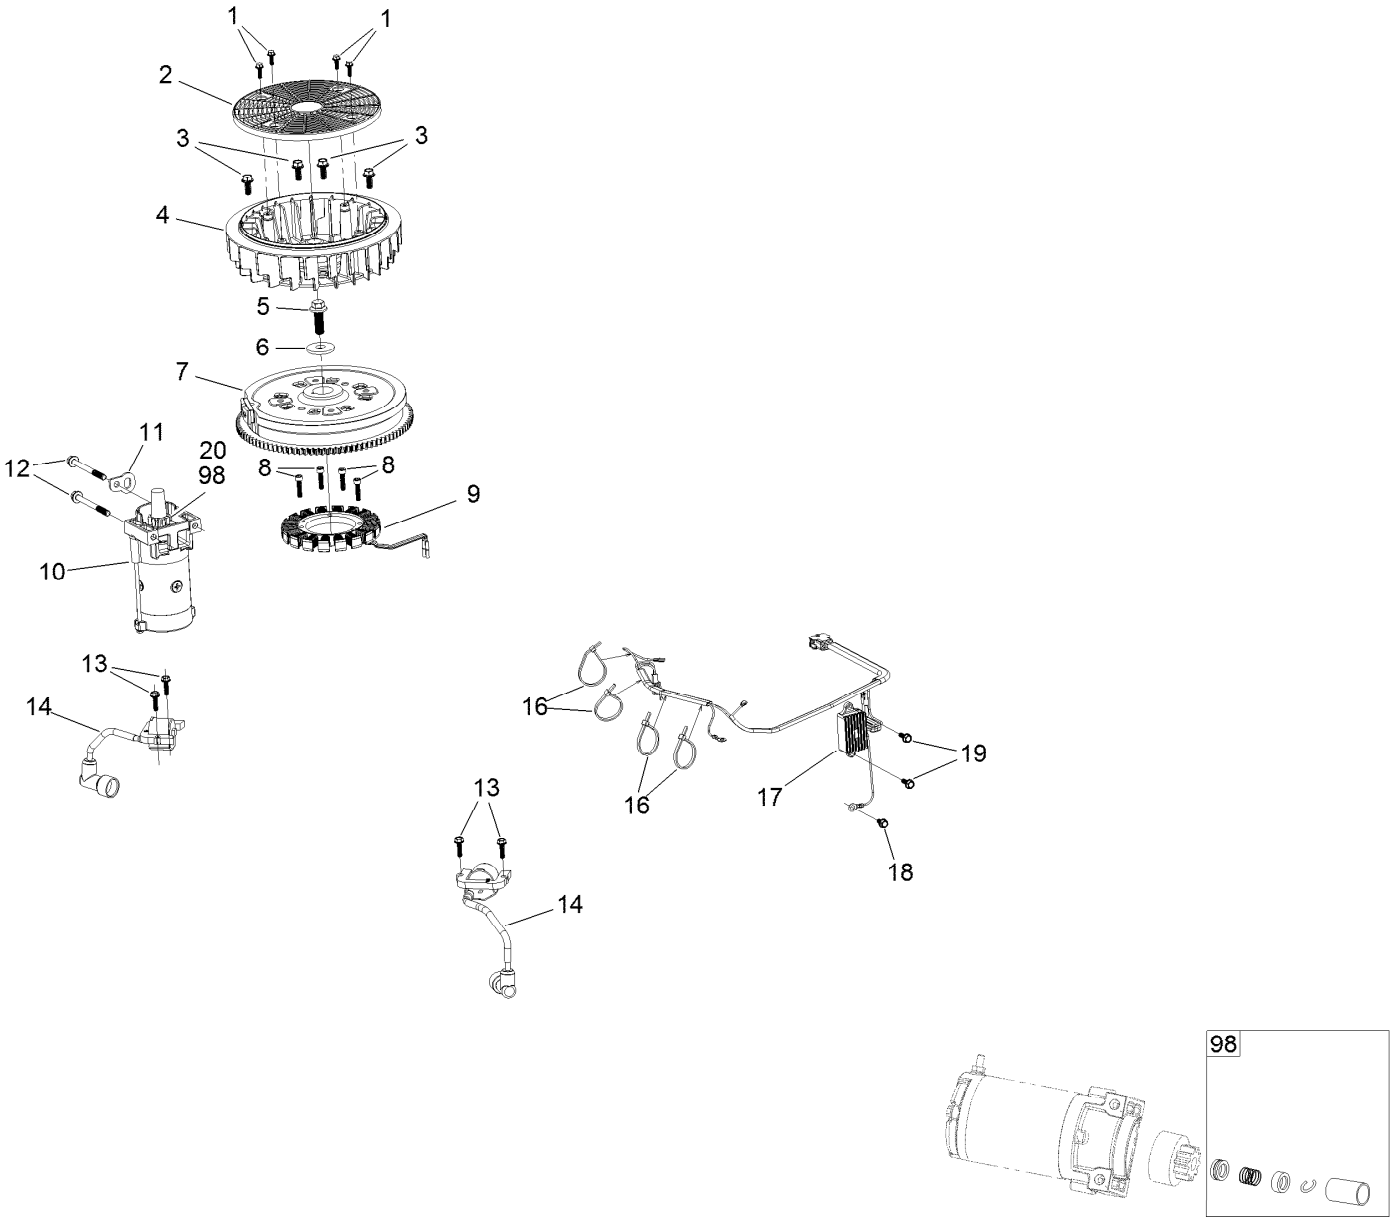

Ignition and Cooling Fan (continued)

Ref.	Part Number	Qty.	Description
1	127-9197	4	Screw-HWH
2	127-9198	1	Screen-Rotating
3	127-9199	4	Screw-HWH
4	127-9200	1	Fan-Cooling
5	127-9201	1	Screw-HWH
6	127-9202	1	Washer-Spring
7	127-9306	1	Flywheel
8	127-9210	4	Screw-HSH
9	136-7876	1	Alternator
10	136-7880	1	Motor-Starter
11	127-9208	1	Bracket-Lift
12	120-4231	2	Screw-HHF
13	121-0007	4	Bolt-Flange
14	136-7883	2	Ignition Coil ASM
16	127-9220	4	Tie-Zip
17	136-7879	1	Regulator-Voltage, W/Harness
18	120-4216	1	Screw-HHF
19	120-4232	2	Screw-HHF
20	133-1562	1	Pinion-Starter
98	133-1566	1	Starter Repair Kit


Crankcase and Crankshaft Assembly

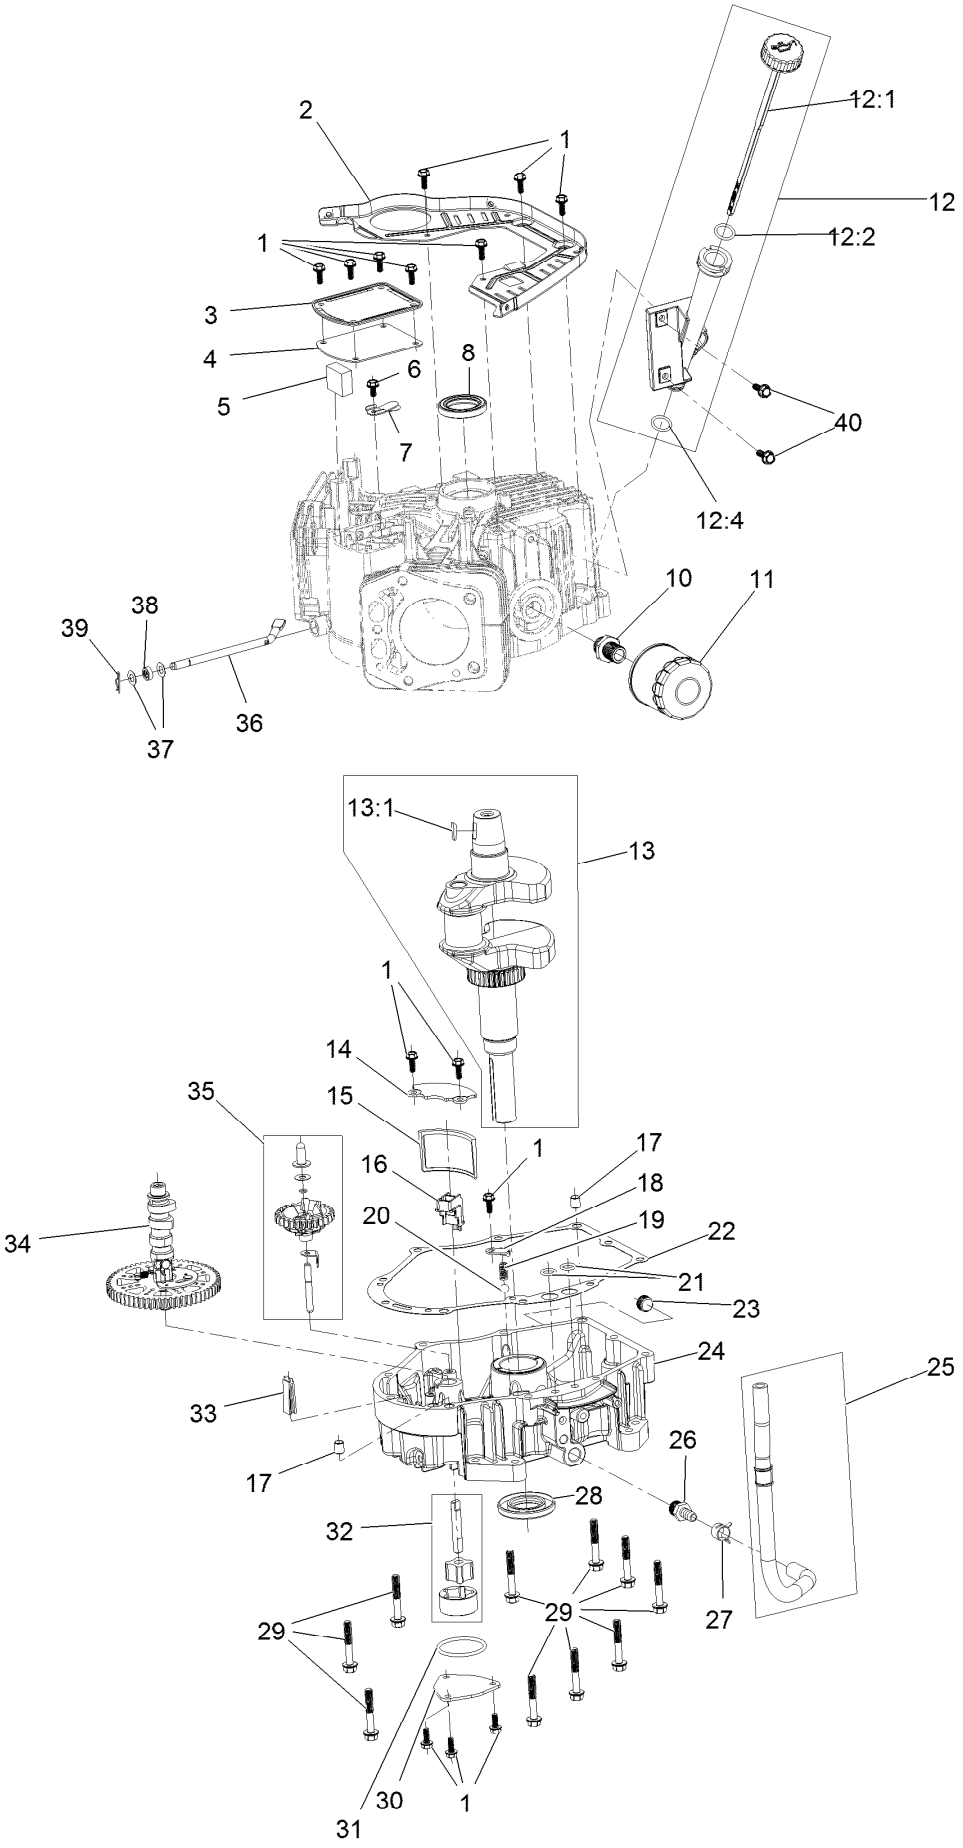

Crankcase and Crankshaft Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-4232	14	Screw-HHF
2	127-9212	1	Baffle
3	127-9213	1	Cover-Breather
4	127-9214	1	Gasket-Breather
5	127-9215	1	Filter-Breather
6	120-4216	1	Screw-HHF
7	127-9217	1	Valve-Breather
8	120-4267	1	Seal-Oil
10	136-7884	1	Adaptor-Filter, Oil
11	136-7848	1	Filter-Oil
12	127-9218	1	Oil Tube ASM
12:1	127-9283	1	Dipstick
12:2	127-9284	1	O-Ring
12:4	127-9286	1	O-Ring
13	127-9255	1	Crankshaft
13:1	120-4320	1	Key-Woodruff
14	127-9261	1	Cover-Screen, Oil
15	127-9262	1	Screen-Oil
16	127-9263	1	Retainer-Screen
17	120-4274	2	Pin-Dowel
18	127-9264	1	Plate-Retainer
19	127-9265	1	Spring
20	127-9266	1	Valve-Ball
21	120-4262	2	O-Ring
22	127-9267	1	Gasket-Cover, Crankcase
23	133-9805	1	Plug-Drain
24	133-9806	1	Cover-Crankcase
25	127-9293	1	Oil Drain Hose ASM
26	127-9275	1	Fitting-Hose
27	127-9276	1	Clamp-Hose
28	127-9271	1	Seal
29	121-0473	10	Screw-HHF
30	127-9274	1	Cover-Oil Pump
31	127-9273	1	O-Ring
32	127-9272	1	Oil Pump ASM
33	120-4275	1	Deflector-Oil, Rubber
34	133-1568	1	Camshaft
35	136-7882	1	Governor ASM
36	127-9238	1	Shaft-Governor
37	120-4258	2	Washer-Plain
38	120-4257	1	Seal-Oil
39	120-4256	1	Pin-Hair
40	120-4232	2	Screw-HHF


Governor Control Assembly

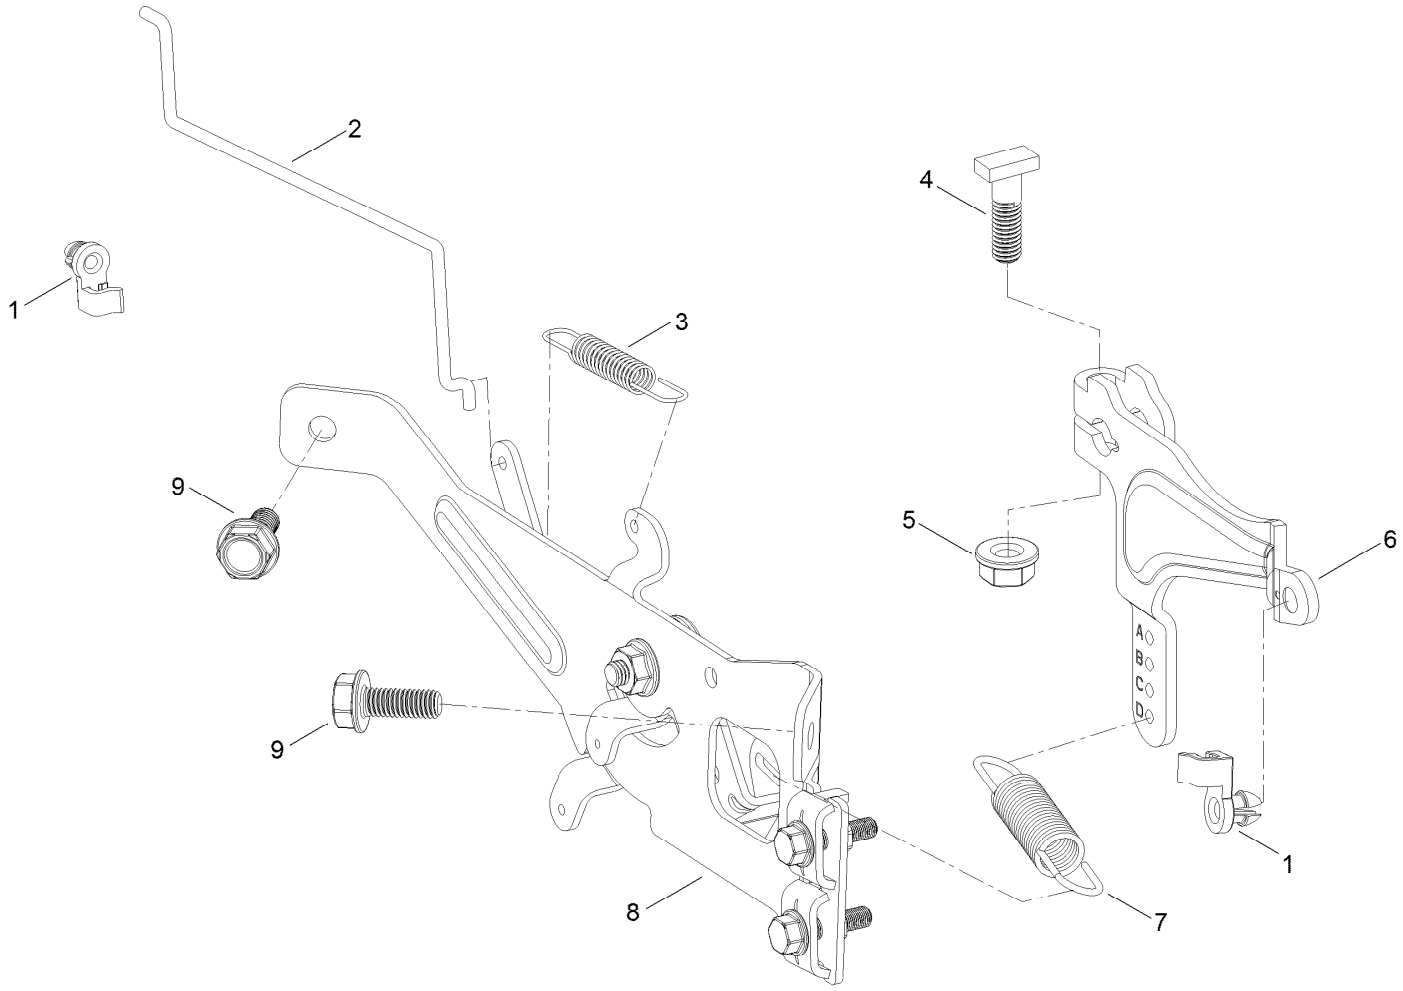

Governor Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9250	2	Clip-Linkage
2	127-9242	1	Linkage-Choke
3	127-9241	1	Spring-Governor
4	120-4238	1	Bolt-Arm, Governor
5	120-4236	1	Nut-Flange
6	133-9961	1	Arm-Governor
7	133-9962	1	Spring-Governor
8	133-1570	1	Control Plate ASM
9	120-4232	2	Screw-HHF


Piston and Cylinder Head Assembly

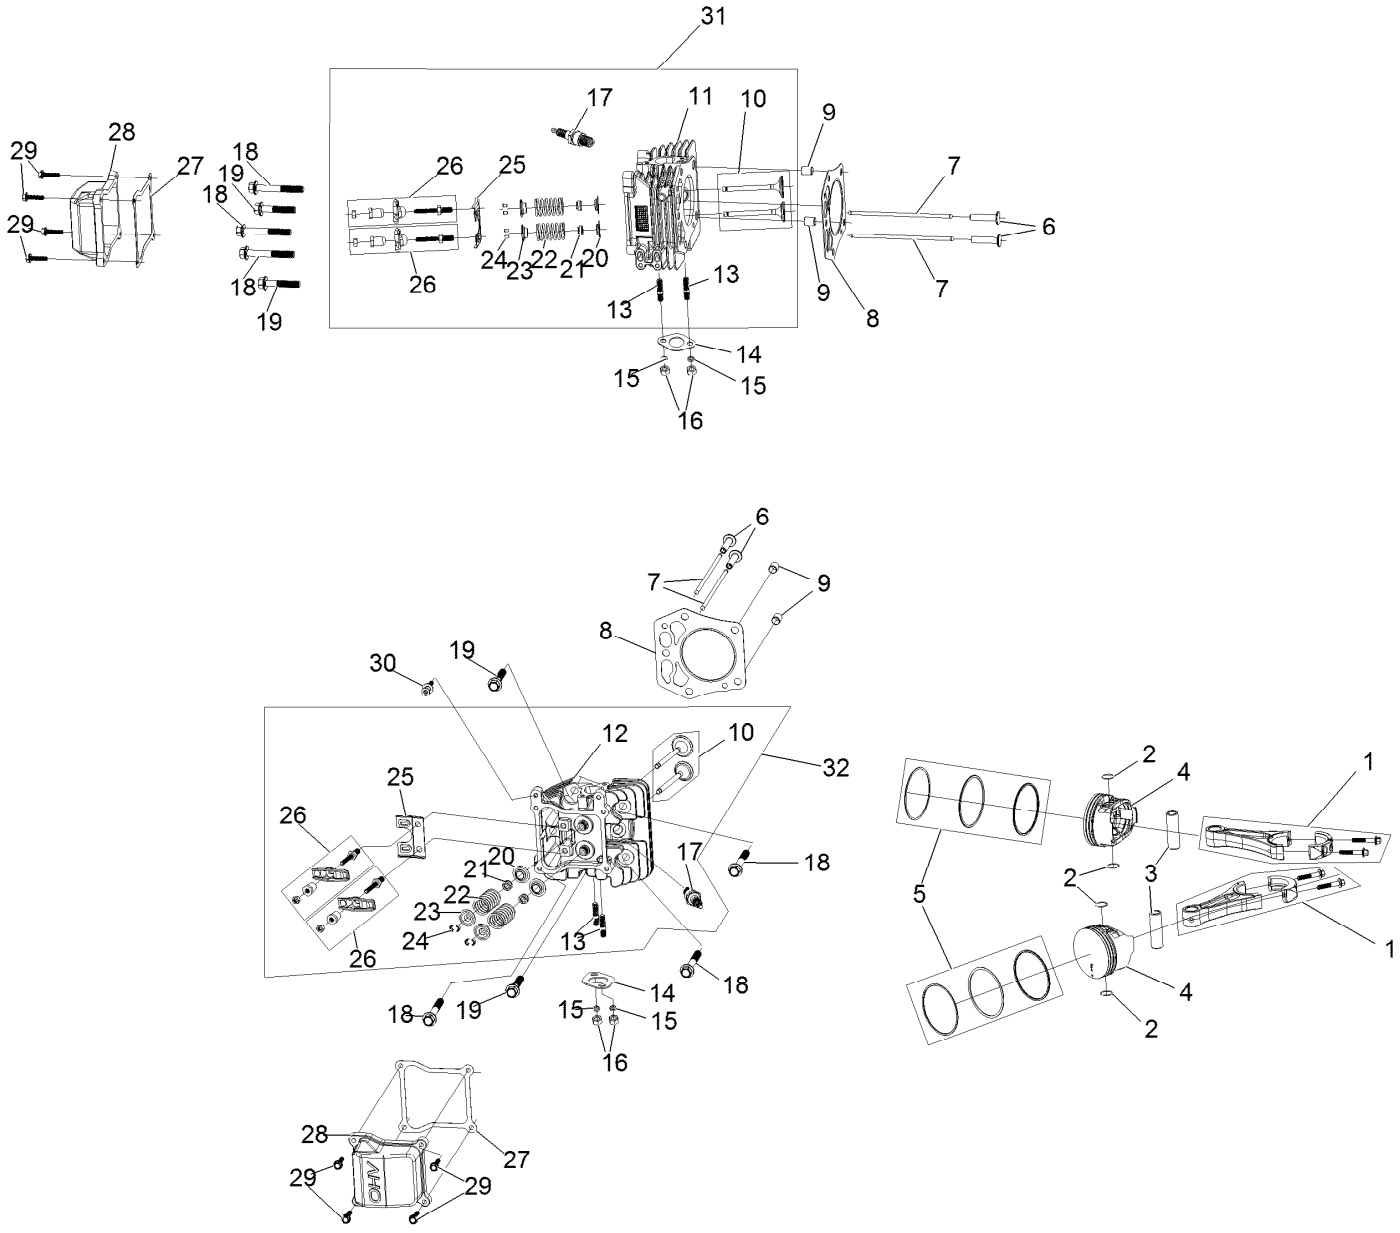

Piston and Cylinder Head Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9256	2	Connecting Rod ASM
2	127-9258	4	Clip-Pin, Piston
3	127-9257	2	Pin-Piston
4	127-9259	2	Piston
5	127-9260	2	Piston Ring Set
6	127-9224	4	Lifter-Valve
7	127-9225	4	Rod-Push
8	127-9226	2	Gasket-Head, Cylinder
9	127-9227	4	Pin-Dowel
10	127-9228	2	Valve Set
11	133-9802	1	Head-Cylinder, Right
12	133-9804	1	Head-Cylinder, Left
13	121-0464	4	Stud-Exhaust
14	120-4317	2	Gasket-Exhaust
15	127-9279	4	Washer-Lock, Split
16	121-0199	4	Nut-HH
17	81-3250	2	Spark Plug
18	127-9231	6	Screw-HWH
19	127-9232	4	Screw-HWH
20	120-4303	4	Seat-Spring, Valve
21	120-4304	4	Seal-Stem, Valve
22	120-4305	4	Spring-Valve
23	120-4306	4	Retainer-Spring, Valve
24	120-4307	8	Keeper-Valve
25	127-9233	2	Plate-Guide, Push Rod
26	136-7881	4	Rocker Arm ASM
27	127-9295	2	Gasket-Valve Cover
28	127-9050	2	Cover-Valve
29	120-4225	8	Screw-HHF
30	120-4214	1	Screw-Shoulder, HH
31	136-7891	1	Complete Right Head ASM
32	136-7892	1	Complete Left Head ASM

Blower Housing Assembly

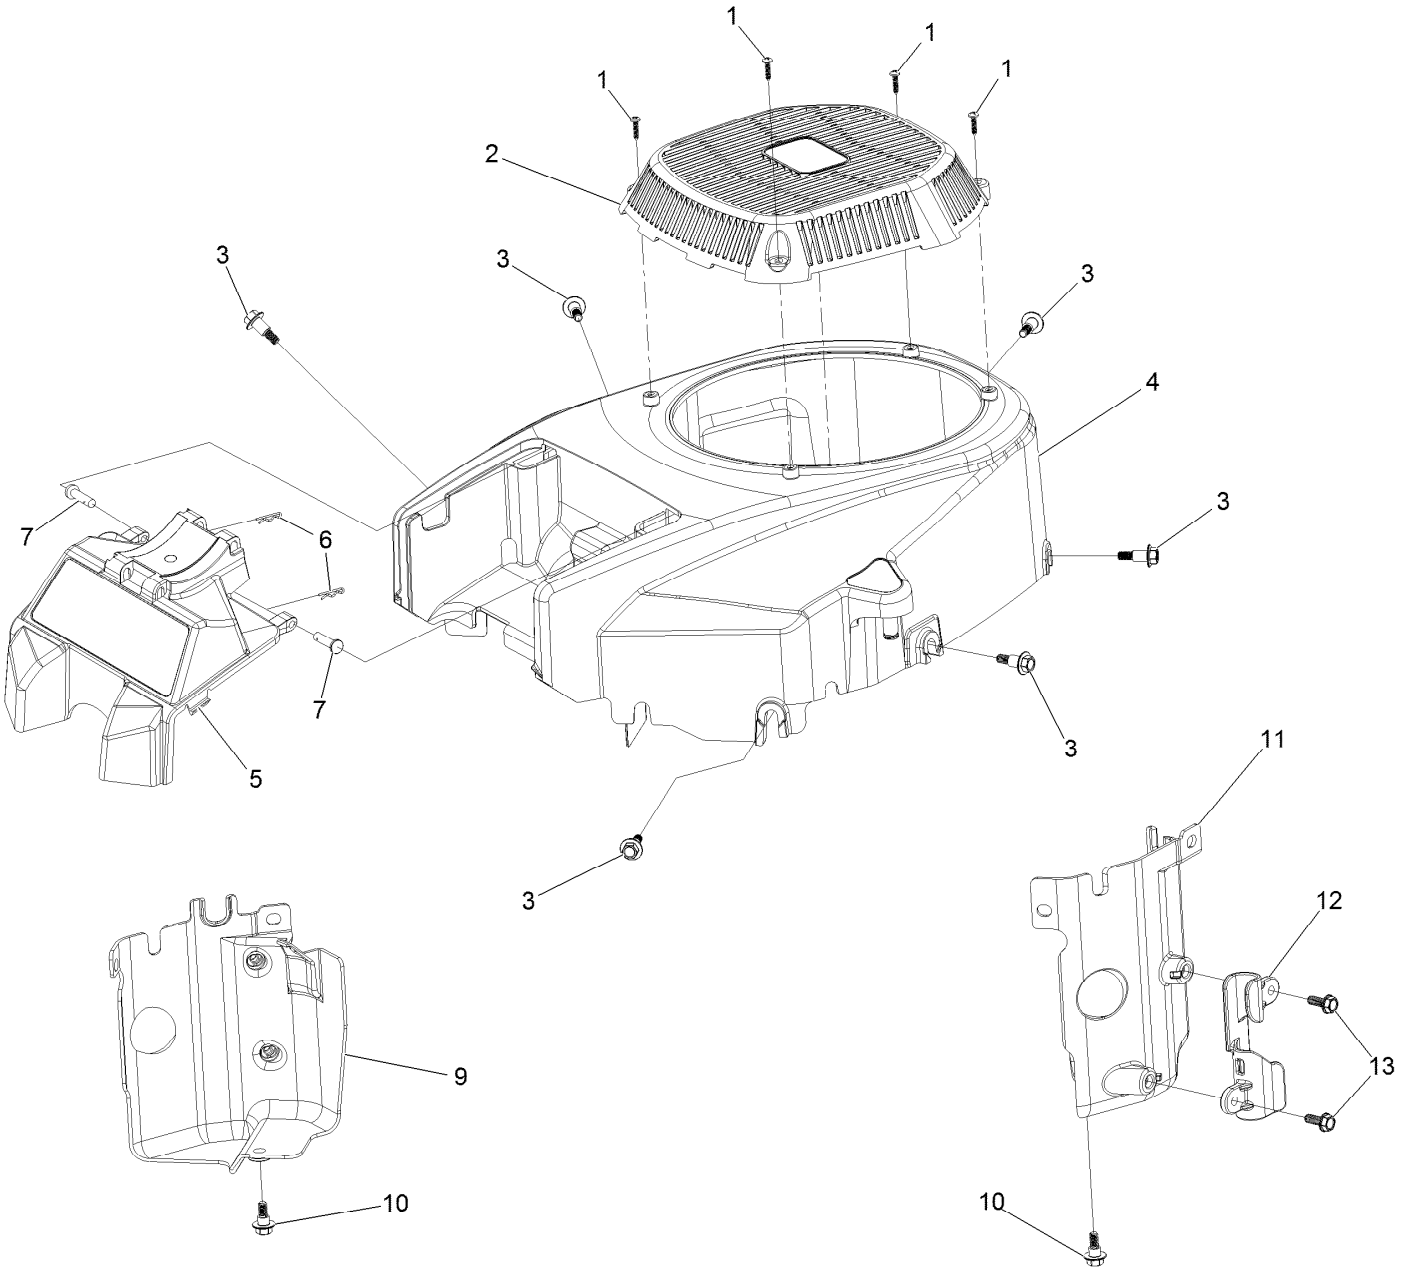


Blower Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-1571	4	Screw-PPH, Plastic
2	127-9045	1	Cover-Fan
3	127-9196	6	Screw-Shoulder, HWH
4	133-1572	1	Shroud-Engine
5	136-5585	1	Support-Filter
6	127-9280	2	Pin-Hair
7	127-9282	2	Pin
9	136-7877	1	Baffle-Air, Left
10	120-4210	2	Screw-Shoulder, HHF
11	136-7878	1	Baffle-Air, Right
12	127-9287	1	Cleat-Hose
13	120-4232	2	Screw-HHF

Gasket and Seal Kit


1

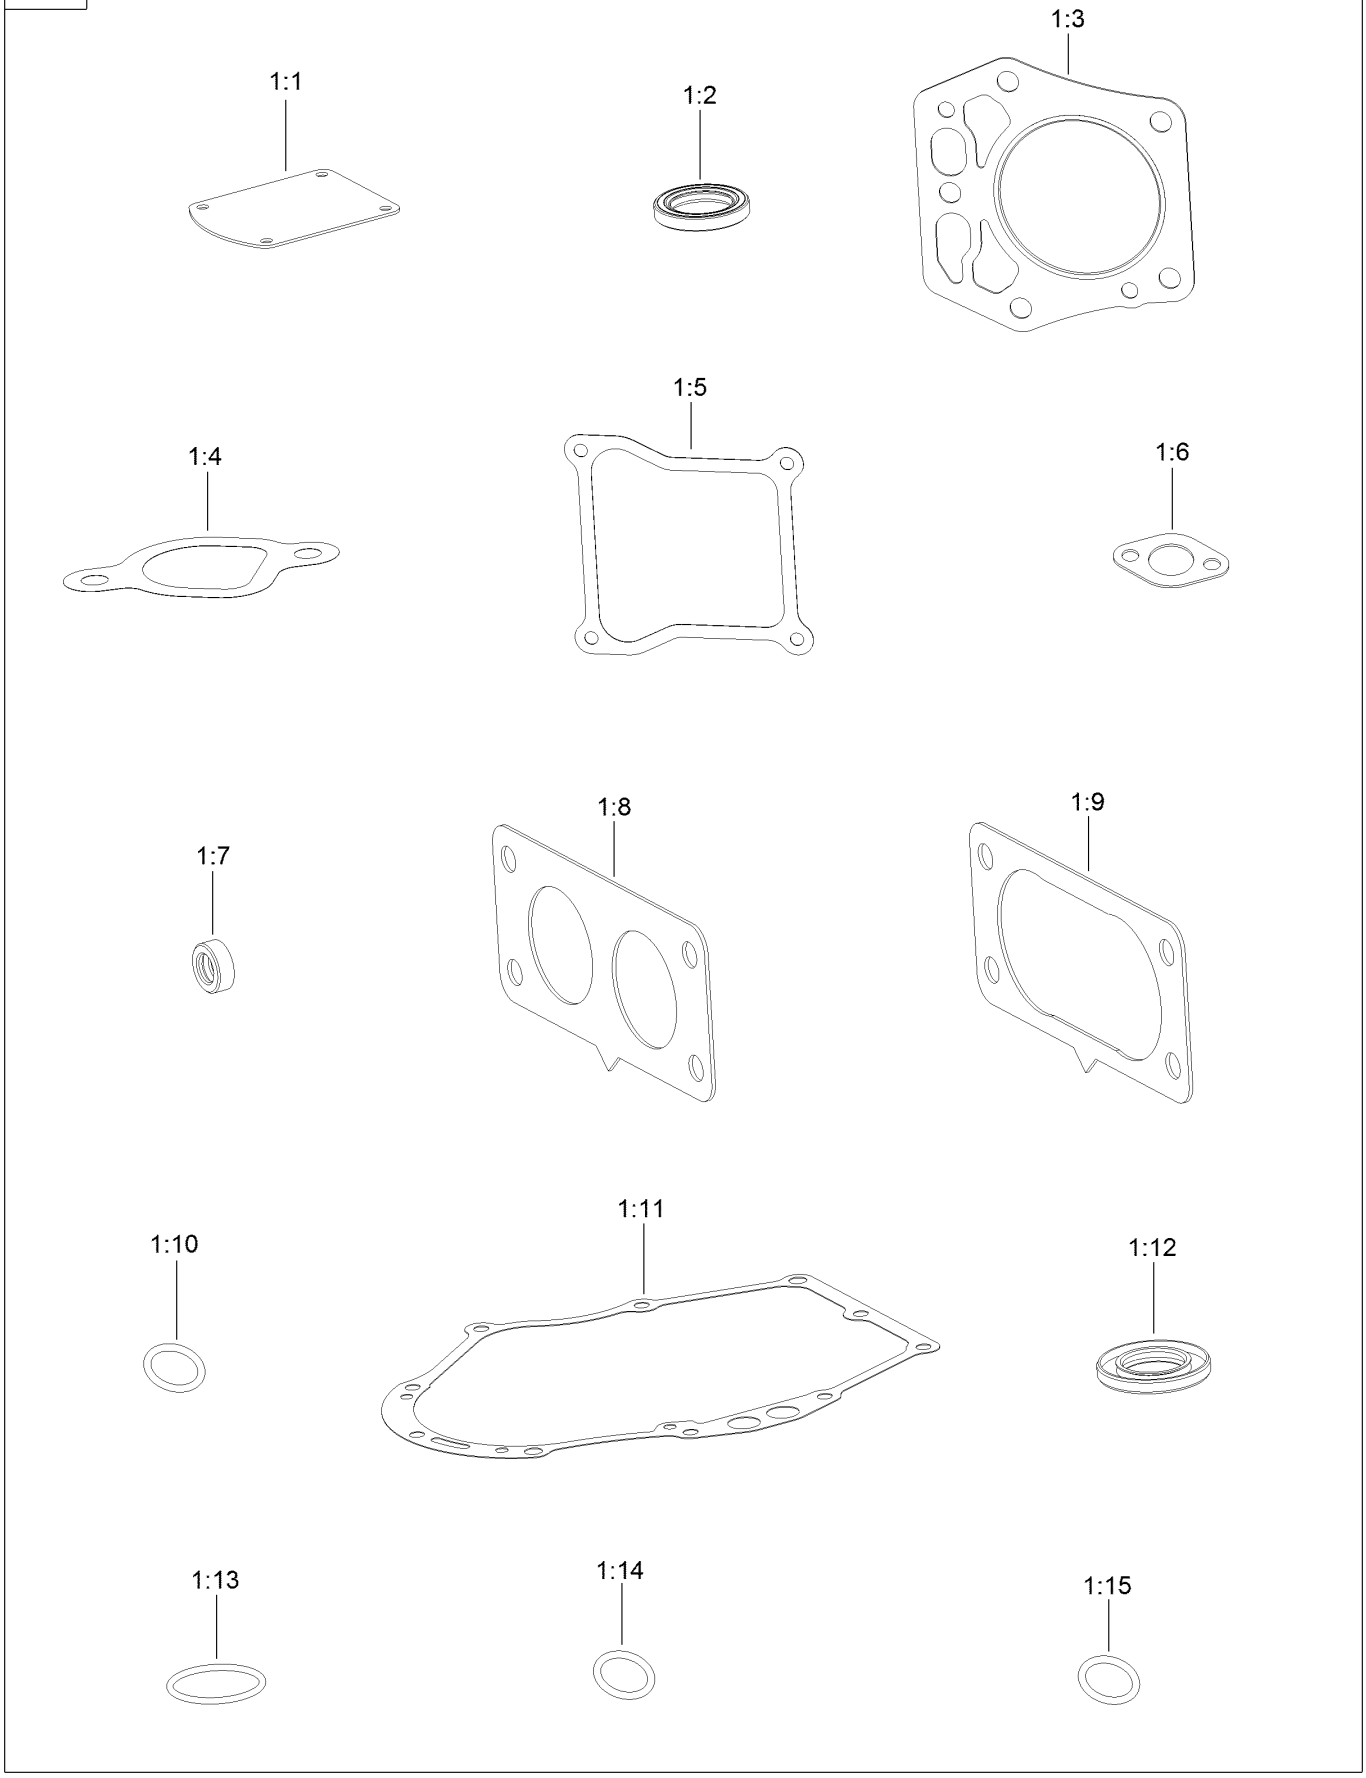

Gasket and Seal Kit (continued)

Ref.	Part Number	Qty.	Description
1	127-9296	1	Gasket And Seal Kit
1:1	127-9214	1	Gasket-Breather
1:2	120-4267	1	Seal-Oil
1:3	127-9226	2	Gasket-Head, Cylinder
1:4	127-9230	2	Gasket-Intake
1:5	127-9295	2	Gasket-Valve Cover
1:6	120-4317	2	Gasket-Exhaust
1:7	120-4257	1	Seal-Oil
1:8	127-9246	2	Gasket-Carburetor
1:9	127-9251	1	Gasket-Carburetor
1:10	120-4262	2	O-Ring
1:11	127-9267	1	Gasket-Cover, Crankcase
1:12	127-9271	1	Seal
1:13	127-9273	1	O-Ring
1:14	127-9284	1	O-Ring
1:15	127-9286	1	O-Ring


Suspension Assembly

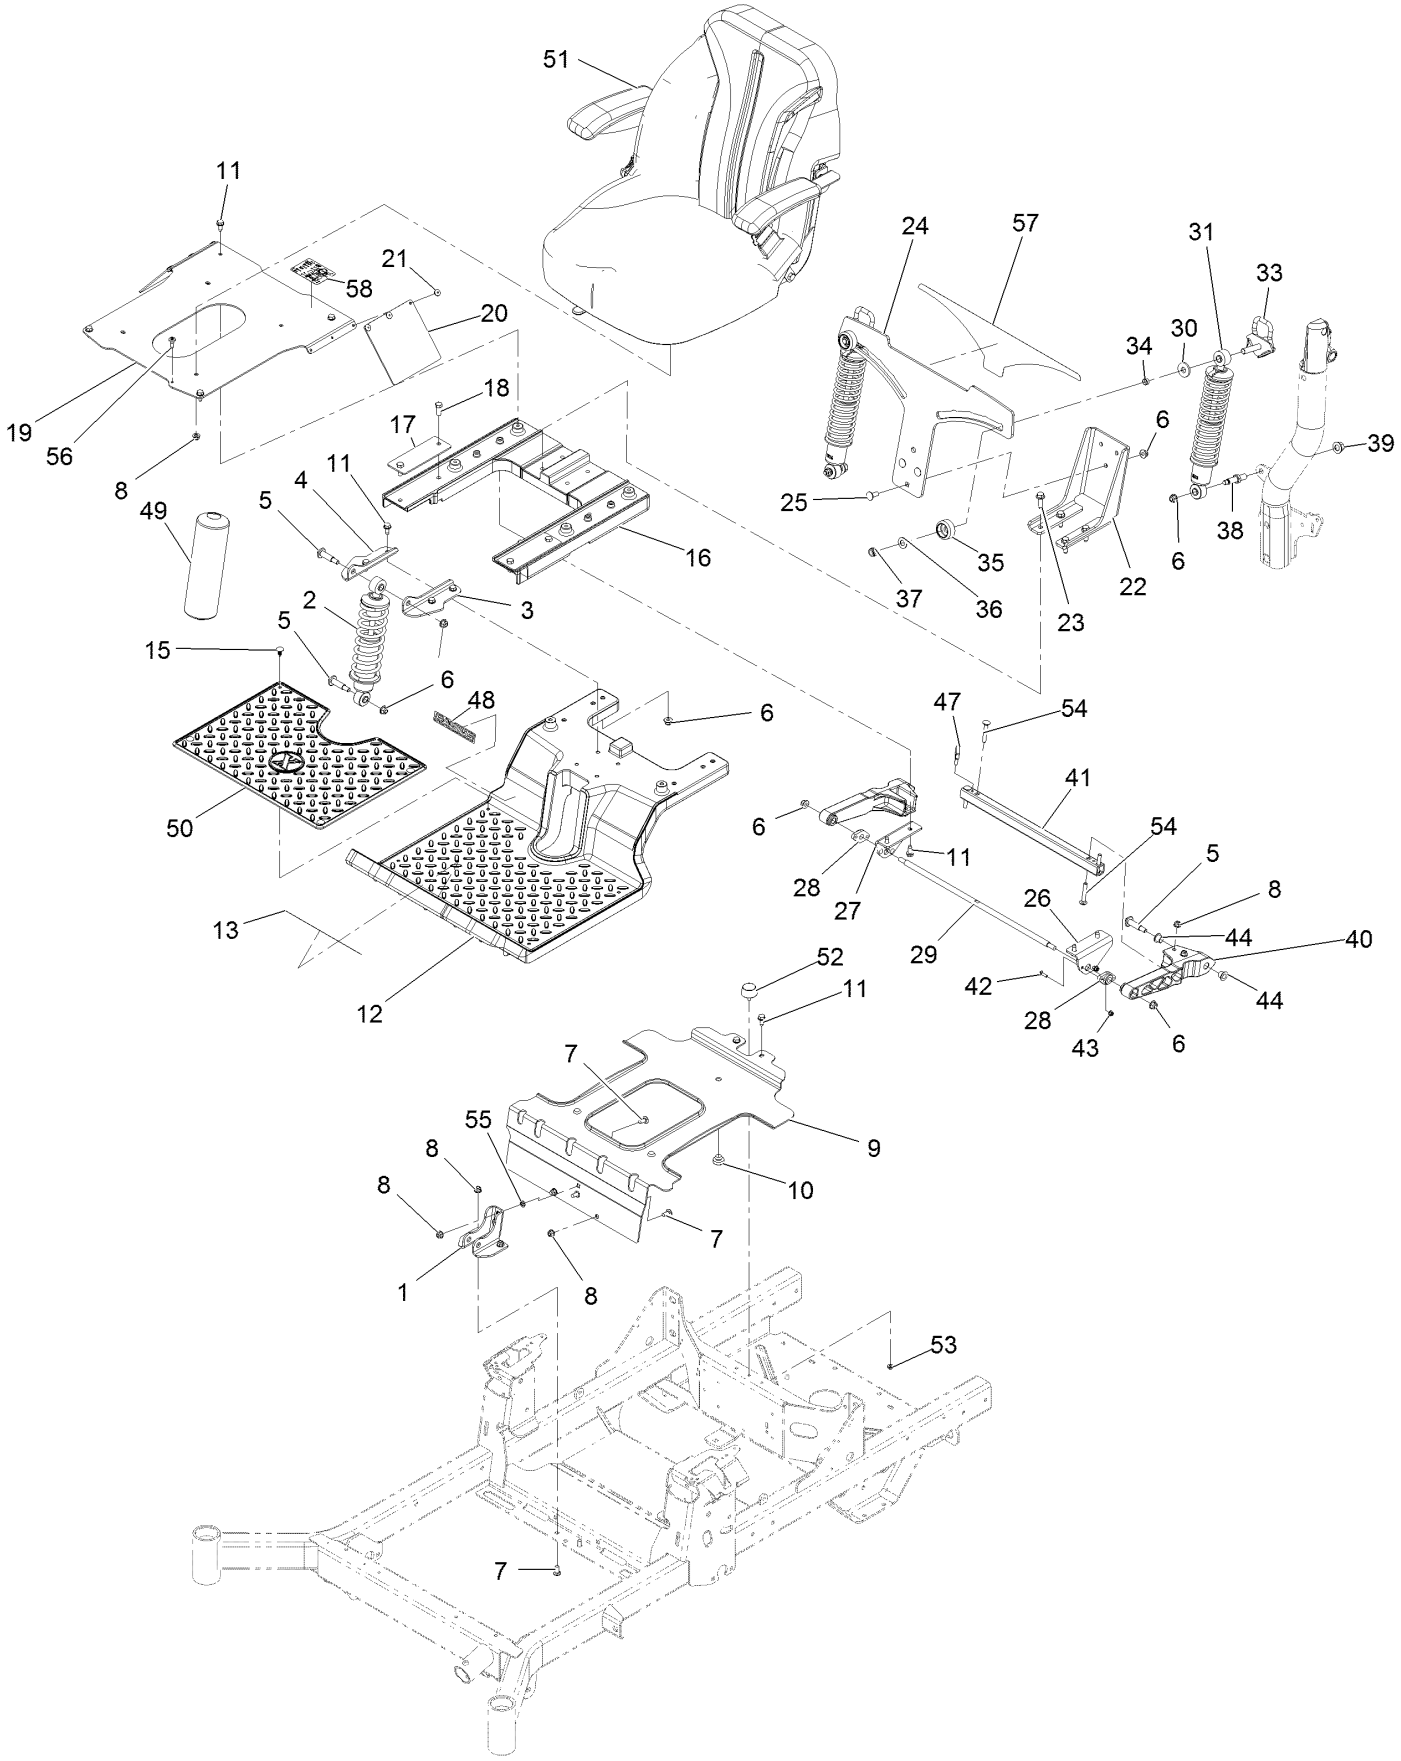

Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-1864-03	1	Bracket-Shock, Front Lower
2	136-8971	1	Shock/Spring
3	133-9318-03	1	Bracket-Shock Mount, Upper (LH)
4	133-9319-03	1	Bracket-Shock Mount, Upper (RH)
5	136-9028	4	Bolt-Shoulder, HWH
6	104-8301	13	Nut-Nyloc 3/8-16 Flg
7	3230-23	6	Bolt-Carriage 5/16-18 X 3/4 Short Neck
8	104-8300	14	Nut-Nyloc 5/16-18 Flg
9	136-8963-03	1	Bracket-Tank
10	135-0505	3	Bumper-Seat
11	32144-70	14	Screw-HWH 5/16-18 X 3/4 Tf
12	133-7083-01	1	Subframe-Front
13	132-0871	1	Decal-Danger
15	117-2382	4	Plug-Plastic
16	137-7031-01	1	Subframe-Rear
17	133-7089-03	2	Plate-Backer
18	323-6	4	Screw-HH 3/8-16 X 1
19	136-8962-03	1	Plate-Seat
20	136-8967	2	Flap-Rubber
21	132-5064	6	Rivet-Pop
22	136-8955-03	1	Bracket-Mount, Lower
23	32144-109	4	Screw-HWH 3/8-16 X 1 1/4 Taptite
24	136-1744-03	1	Plate-Mounting, Adj Shock
25	3231-22	3	Bolt-Carriage 3/8-16 X 1
26	136-1741-03	1	Bracket-Arm, Trailing (LH)
27	136-1742-03	1	Bracket-Arm, Trailing (RH)
28	127-0146	2	Bearing-Flange
29	136-1739	1	Rod-Pivot
30	131-4699	2	Washer-Plastic
31	133-5154	2	Shock/Spring ASM
33	136-5634	2	Cam Lock ASM
34	133-5109	2	Bearing-Sleeve
35	136-5636	2	Knob-Lock, Cam
36	3-6803	2	Washer-Adjusting
37	3296-45	2	Nut-Nyloc 1/2-13 Thin
38	133-4401	2	Bolt-Shoulder
39	99-5107	2	Nut-Lock 1/2-13
40	136-8979	2	Trailing Arm
41	137-9754-03	1	Tube-Arm, Trailing
42	3229-20	4	Screw-CARR
43	120-4578	4	Nut-HF
44	125-5239	4	Bushing-Flange
47	105-1853	1	Clamp-Hose
48	136-8966	1	Decal-Radius Logo
49	136-8972	1	Cover-Shock
50	136-8957	1	Floor Mat
51	135-3442	1	ASM-Seat Exmark
52	131-8834	1	Bumper
53	104-7201	1	Nut-Nyloc 1/4-20 Flg
54	3230-6	4	Bolt-Carriage 3/16-18 X 2
55	117-2749	2	Nut-Push
56	135-2015	1	Screw-Shoulder
57	136-8952	1	Decal-Adjustment, Ride
58	136-9024	1	Decal-Aid, Service


Seat Assembly

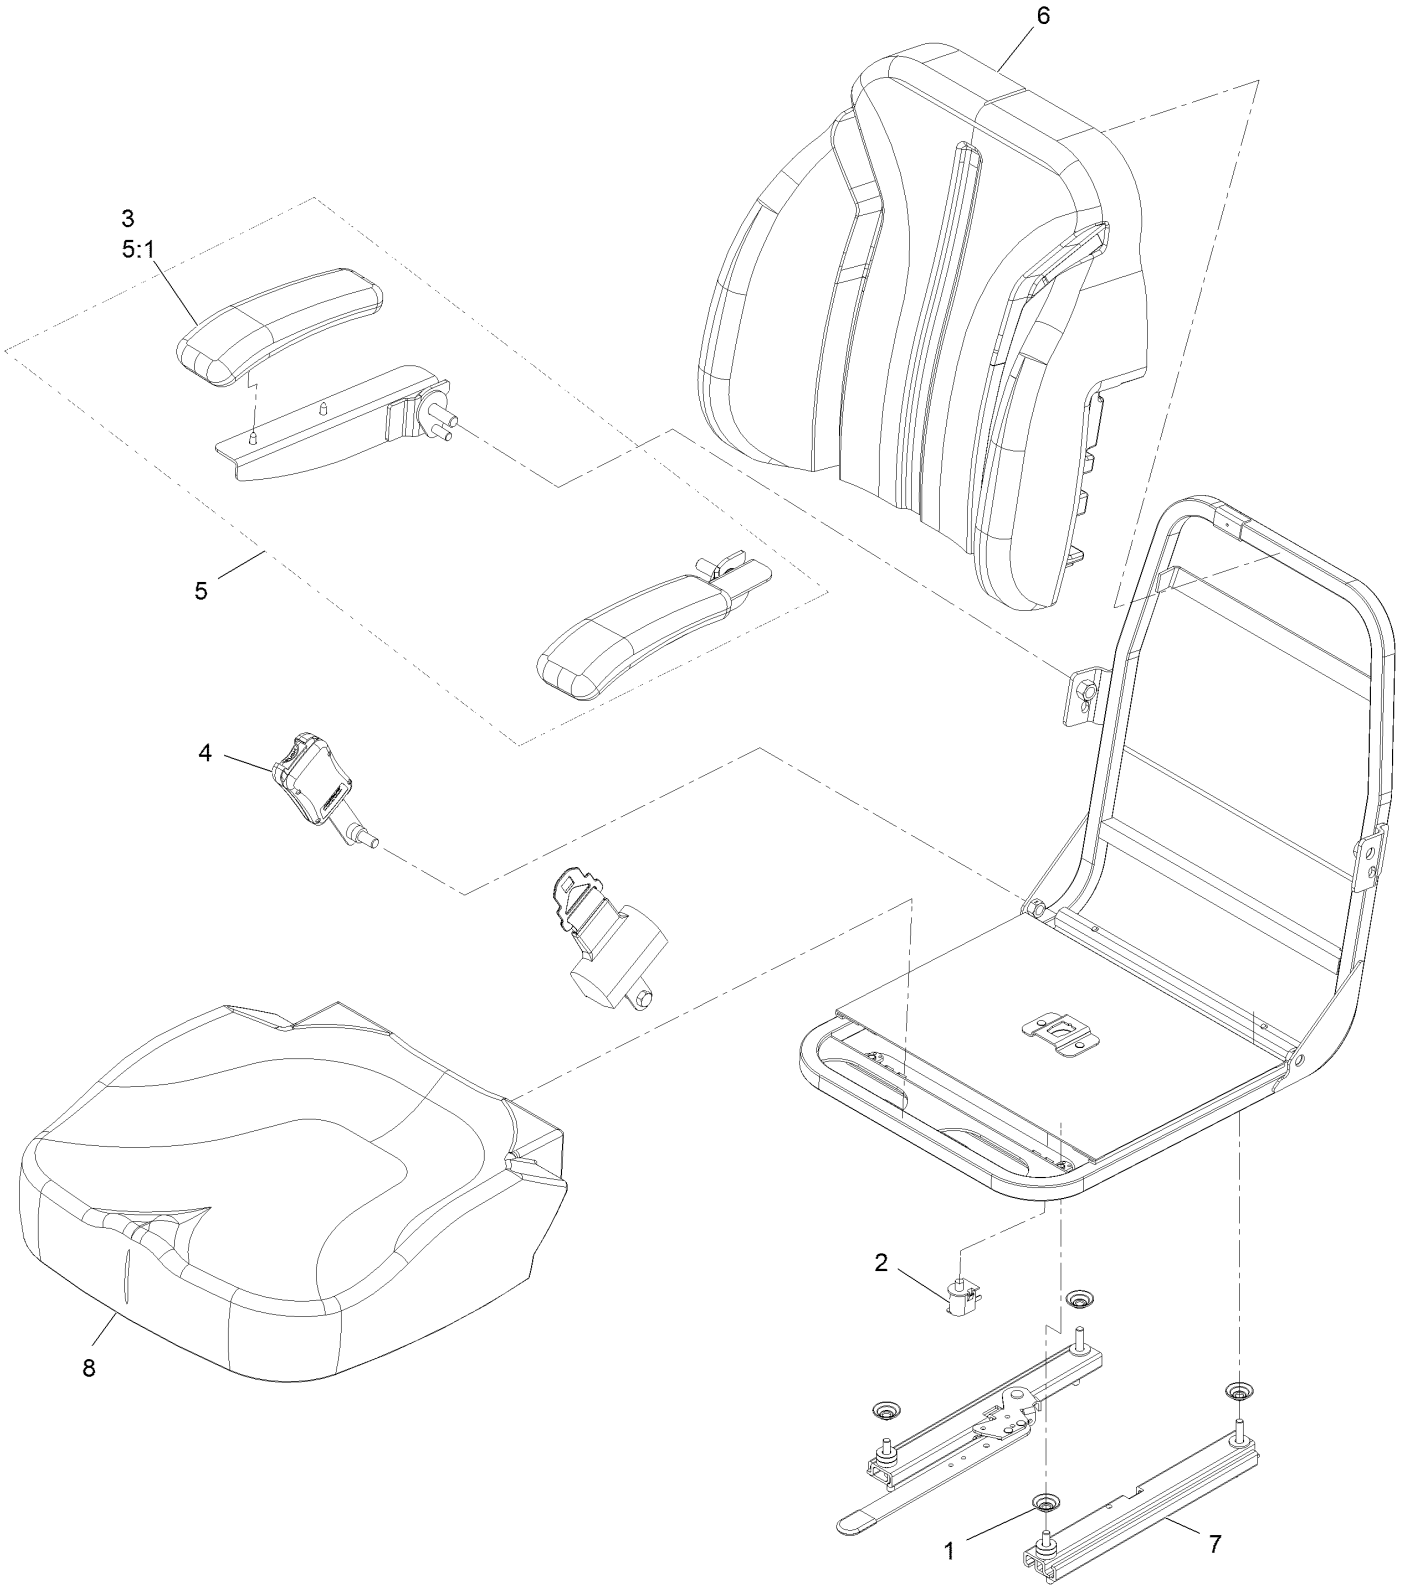

Seat Assembly (continued)

Ref.	Part Number	Qty.	Description
1	136-9002	4	Spacer-Mounting
2	82-2190	1	Switch
3	110-4163	2	Cushion-Rest, Arm
4	126-9091	1	Seat Belt Kit
5	126-2058	1	Armrest Kit
5:1	110-4163	2	Cushion-Rest, Arm
6	126-8552	1	Cover-Seat Back Svc
7	126-2177	1	Track-Seat
8	136-9000	1	Cover-Seat Bottom Svc

Hydraulic Drive Assembly

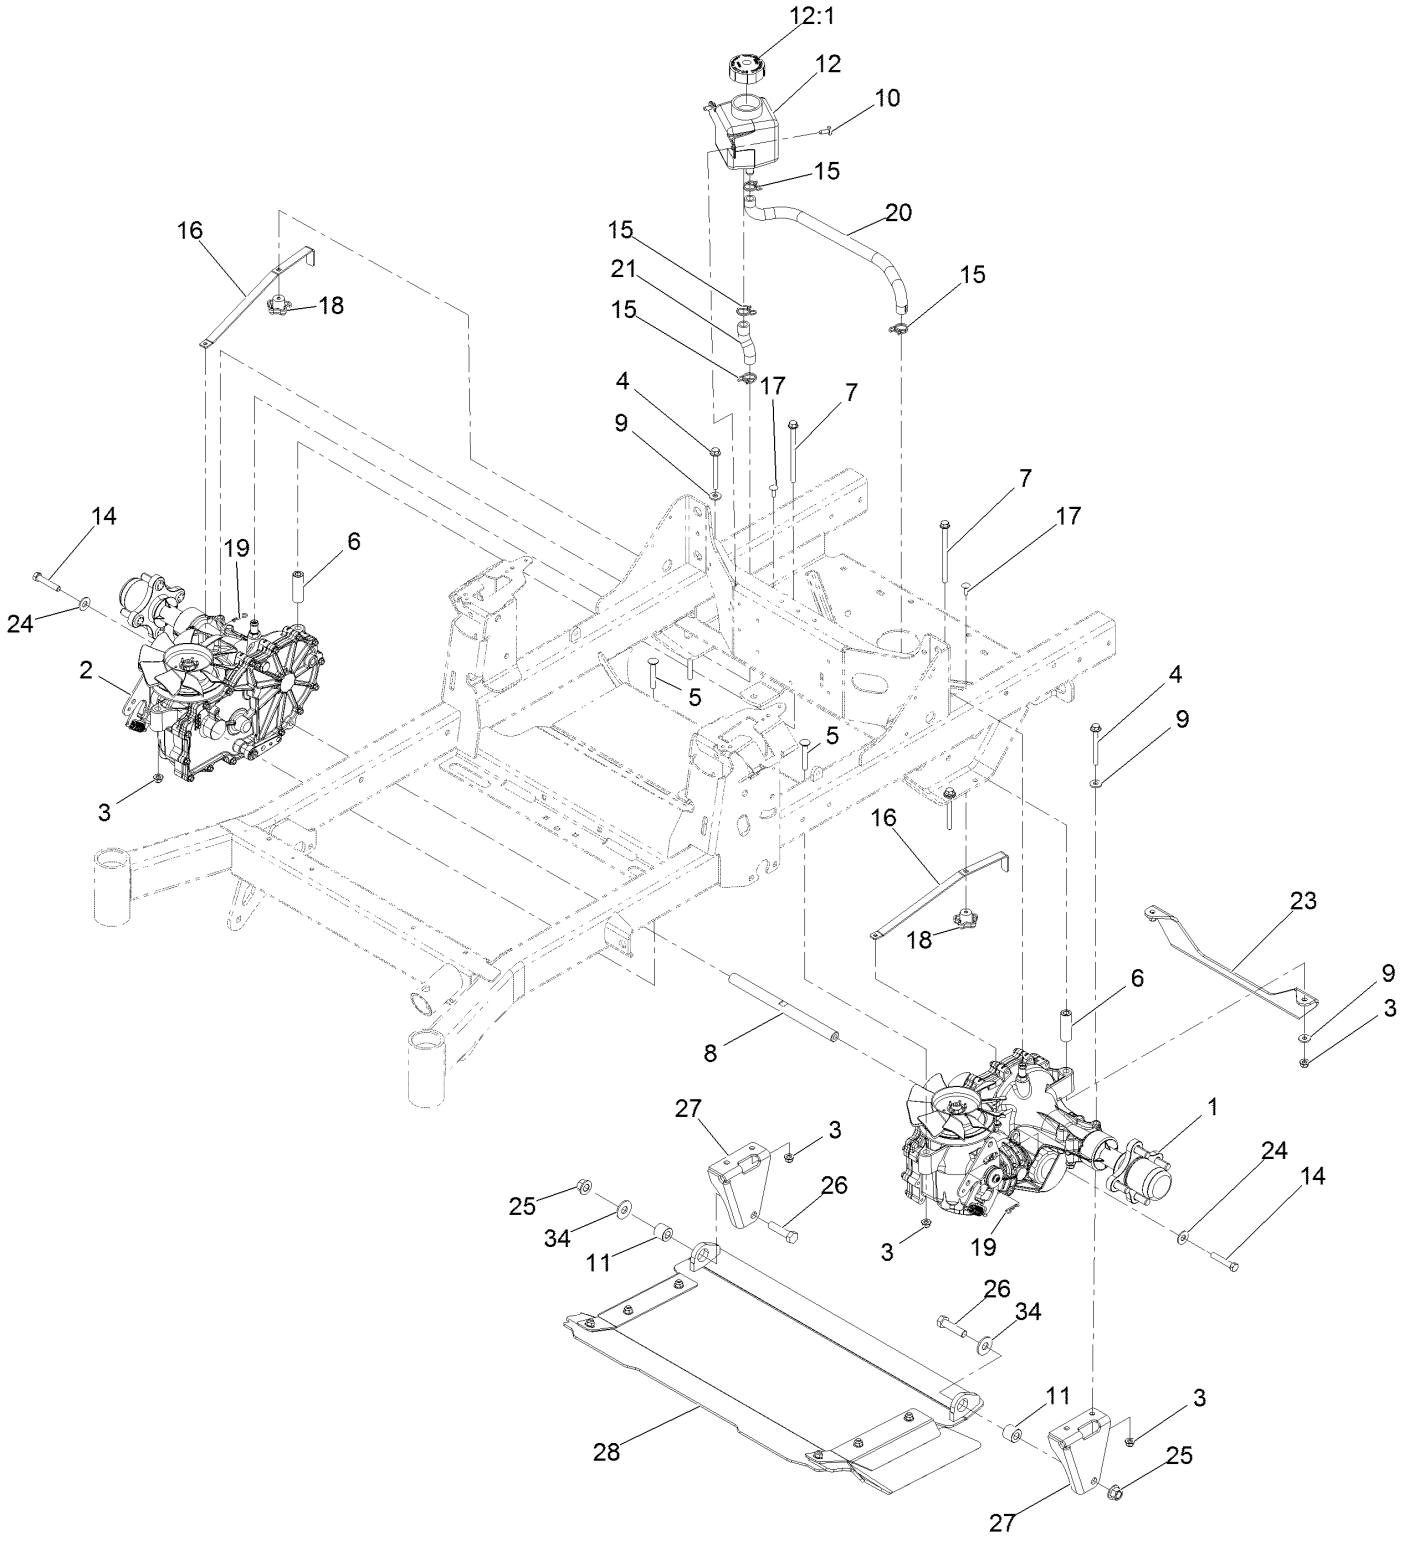


Hydraulic Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2883	1	LH Transaxle ASM
2	126-2884	1	RH Transaxle ASM
3	104-8300	8	Nut-Nyloc 5/16-18 Flg
4	126-4687	4	Screw-HHF
5	3230-7	2	Bolt-Carriage 5/16-18 X 2 1/4
6	116-5809	2	Spacer-Hydro
7	126-5896	2	Screw HHF
8	116-6833	1	Shaft-Spacer
9	1-303334	6	Washer-Spring Disc 5/16
10	126-6266	2	Screw-1/4-20 X .65 Torx Plus
11	126-1705	2	Bushing-Sleeve
12	109-2250	1	Tank-HYD
12:1	109-3320	1	Cap-Reservoir, HYD
14	94-7972	2	Screw-HH W/Loctite ●
15	126-0327	4	Clamp-Hose
16	109-5395	2	Arm-Bypass, Hydro
17	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
18	108-6402	2	Knob-Handle
19	1-806003	2	Hairpin-Cotter
20	133-1325	1	Hose-Hydraulic
21	133-1320	1	Hose-Hydraulic
23	126-5672-03	1	Support-Transmission
24	3256-4	2	Washer-3/8 Std
25	99-5107	2	Nut-Lock 1/2-13
26	325-8	2	Screw-HH 1/2-13 X 1 1/4
27	126-1988-03	2	Bracket-Mount, Discharge
28	126-1985	1	Discharge Tunnel ASM
34	3256-6	2	Washer

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

LH Transaxle Assembly No. 126-2883

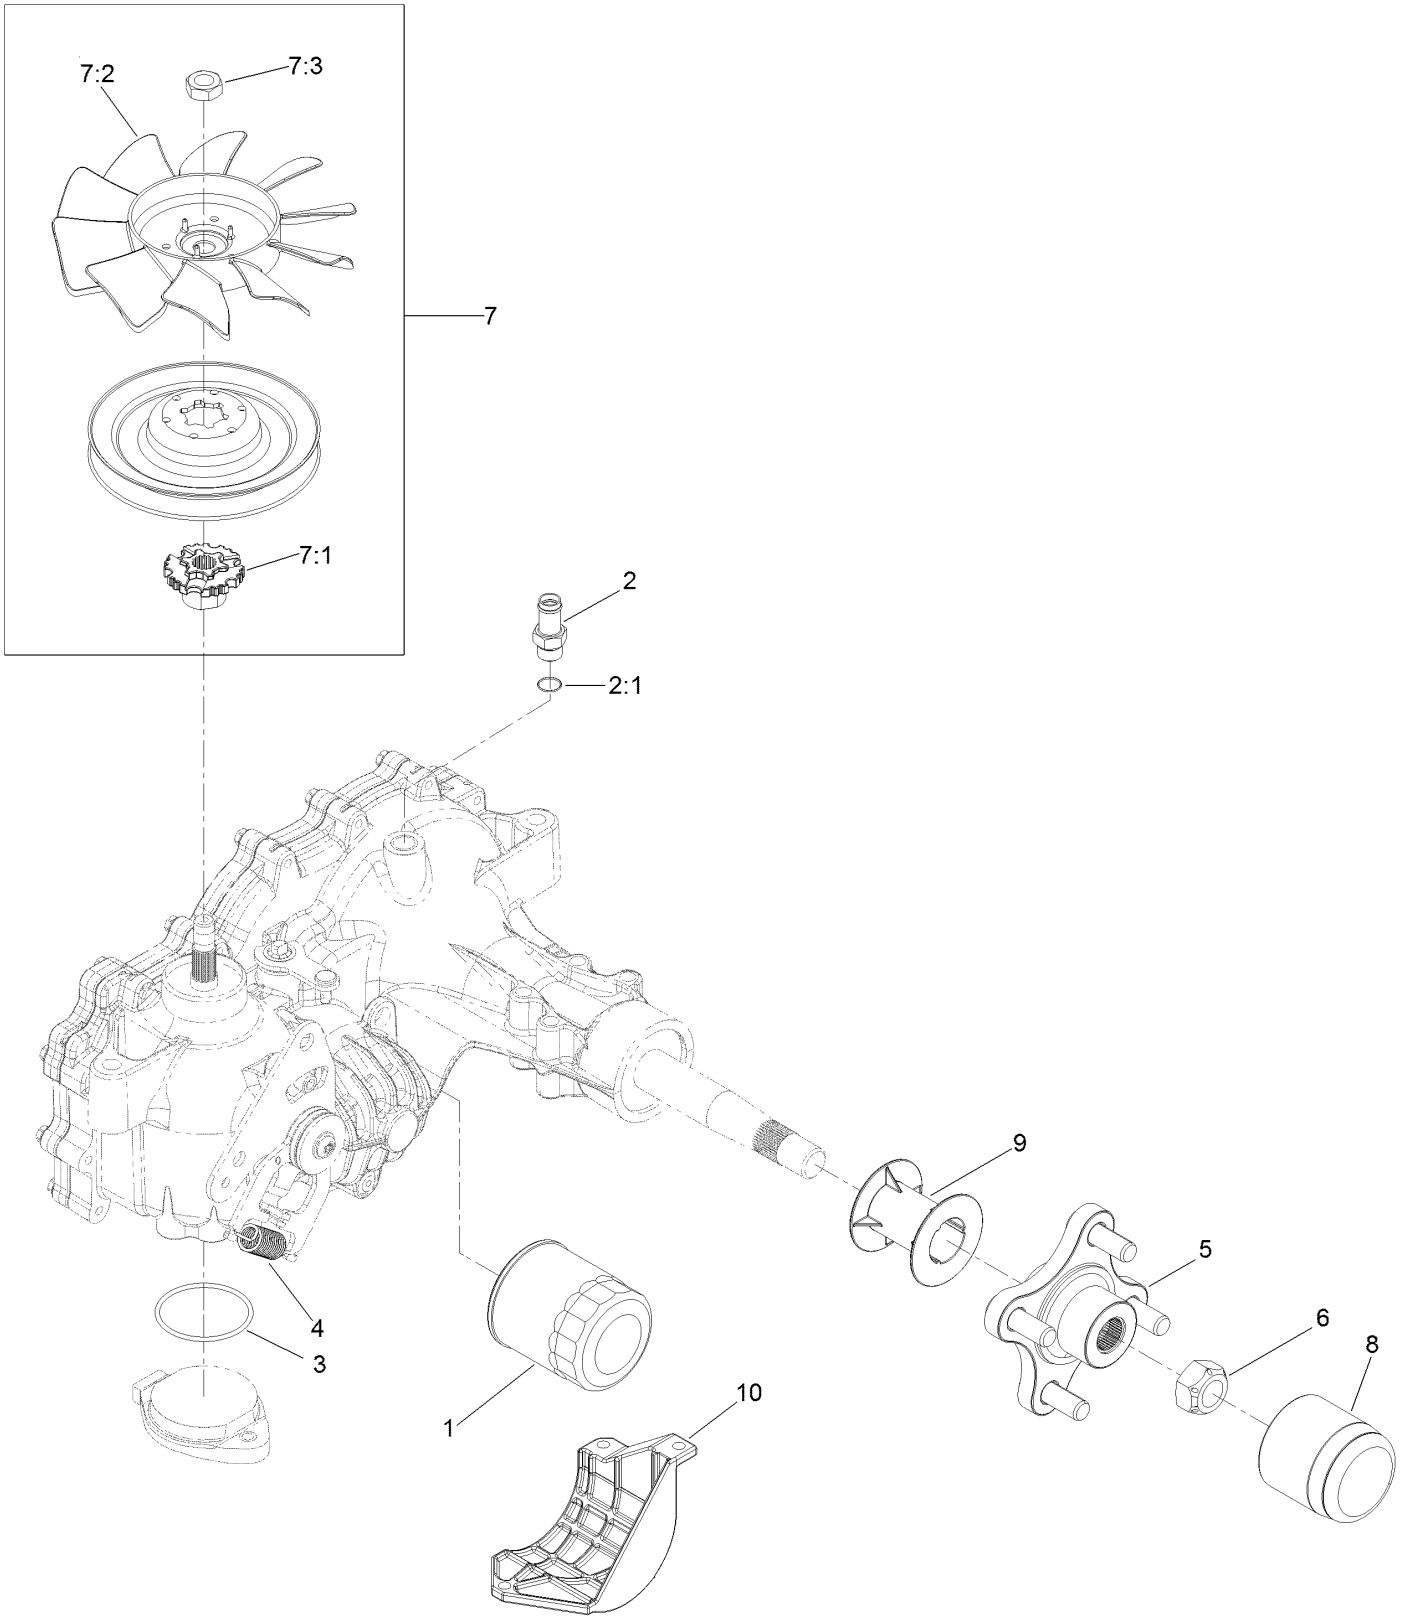


LH Transaxle Assembly No. 126-2883 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7979	1	Guard-Filter, LH
99	135-3604	1	Brake Shaft Seal Kit ●
99	121-3243	1	Seal Kit ●

● Not illustrated

RH Transaxle Assembly No. 126-2884

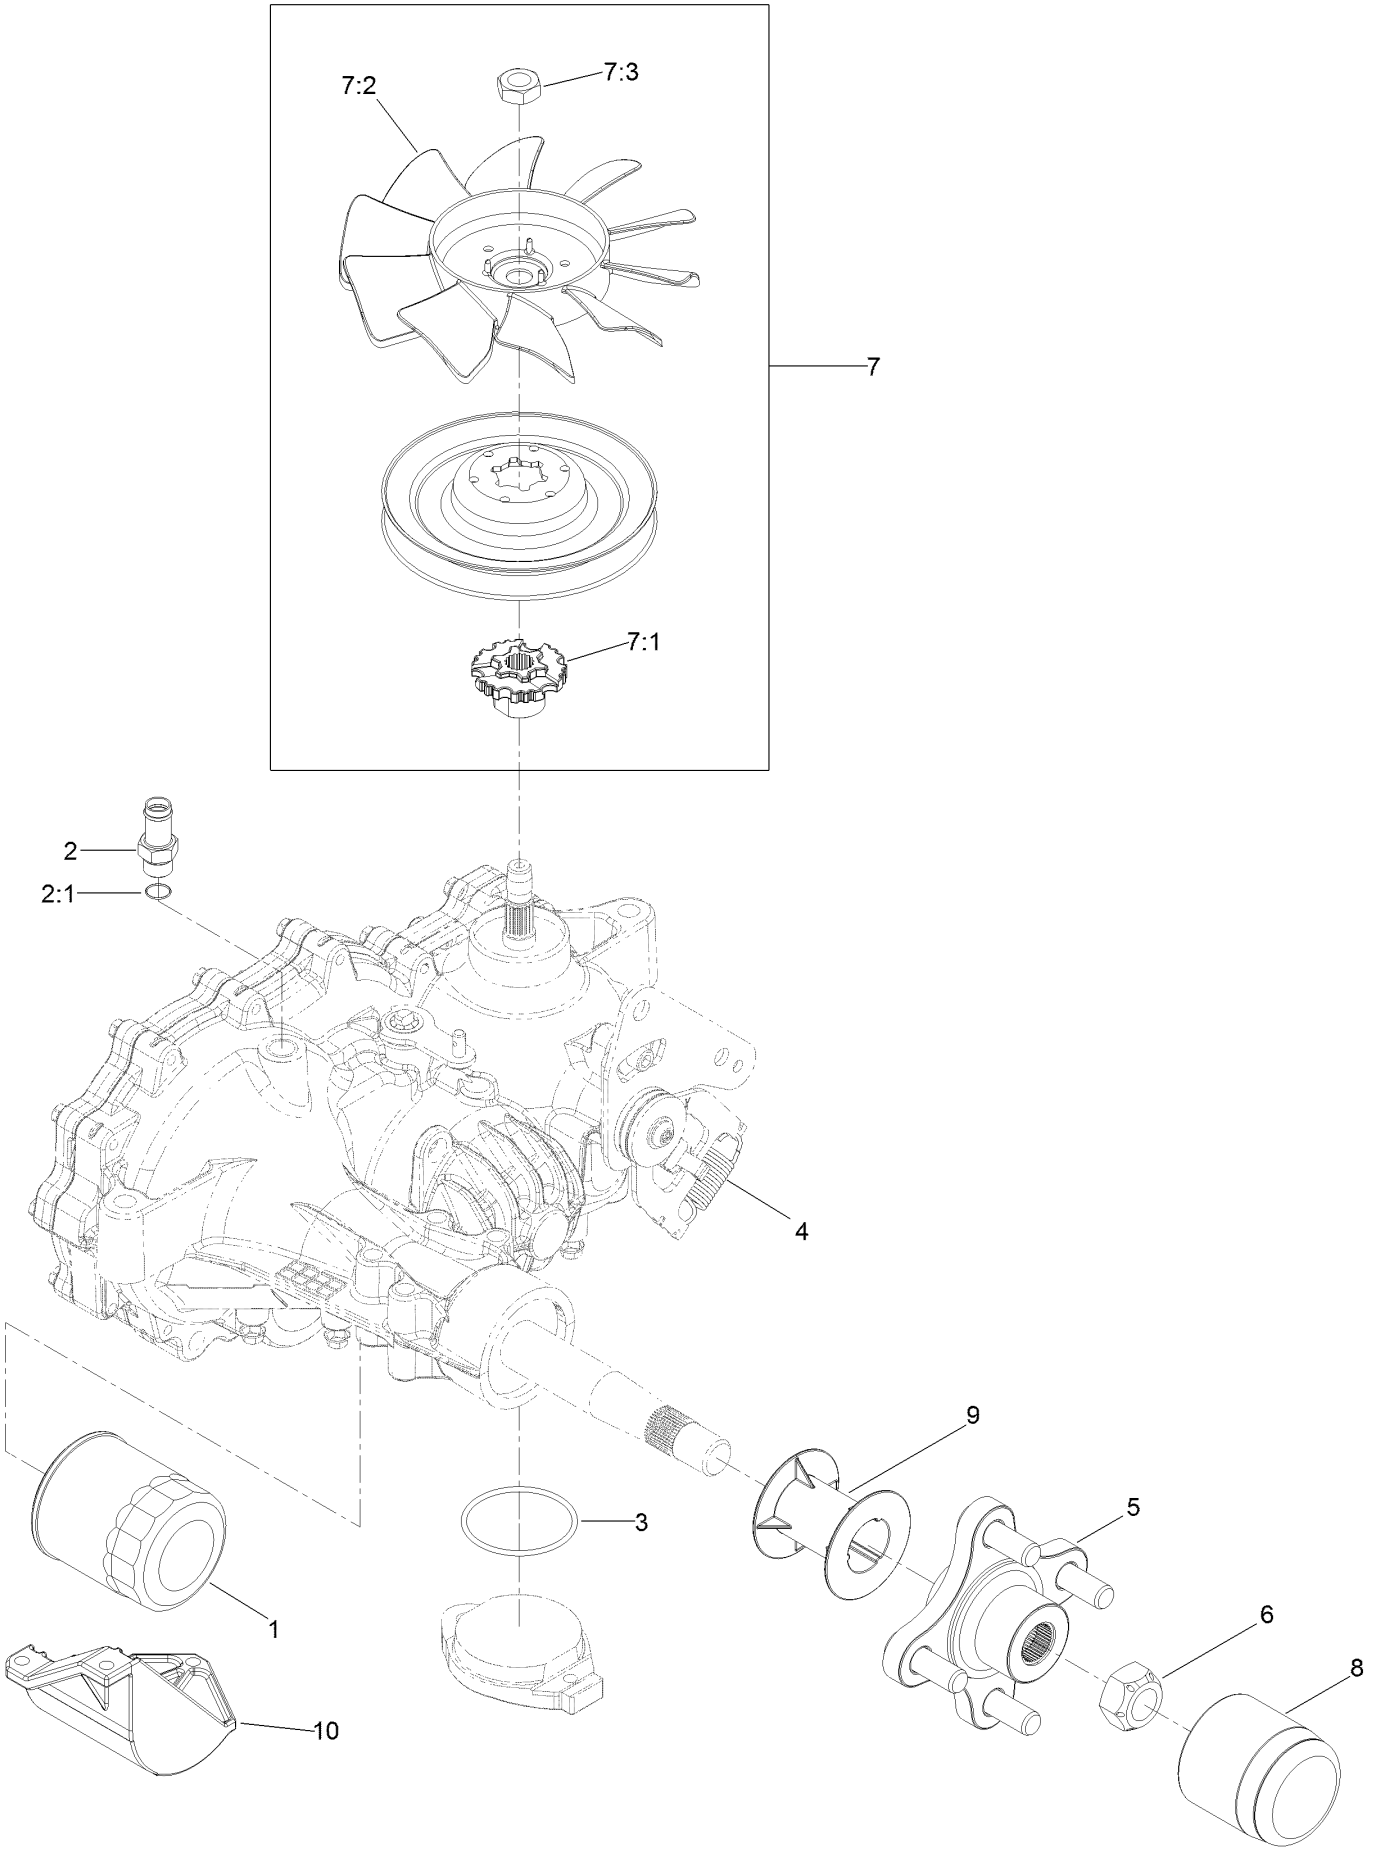


RH Transaxle Assembly No. 126-2884 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7981	1	Guard-Filter, RH
11	121-3243	1	Seal Kit ●
99	135-3604	1	Brake Shaft Seal Kit ●

● Not illustrated

Electrical Assembly

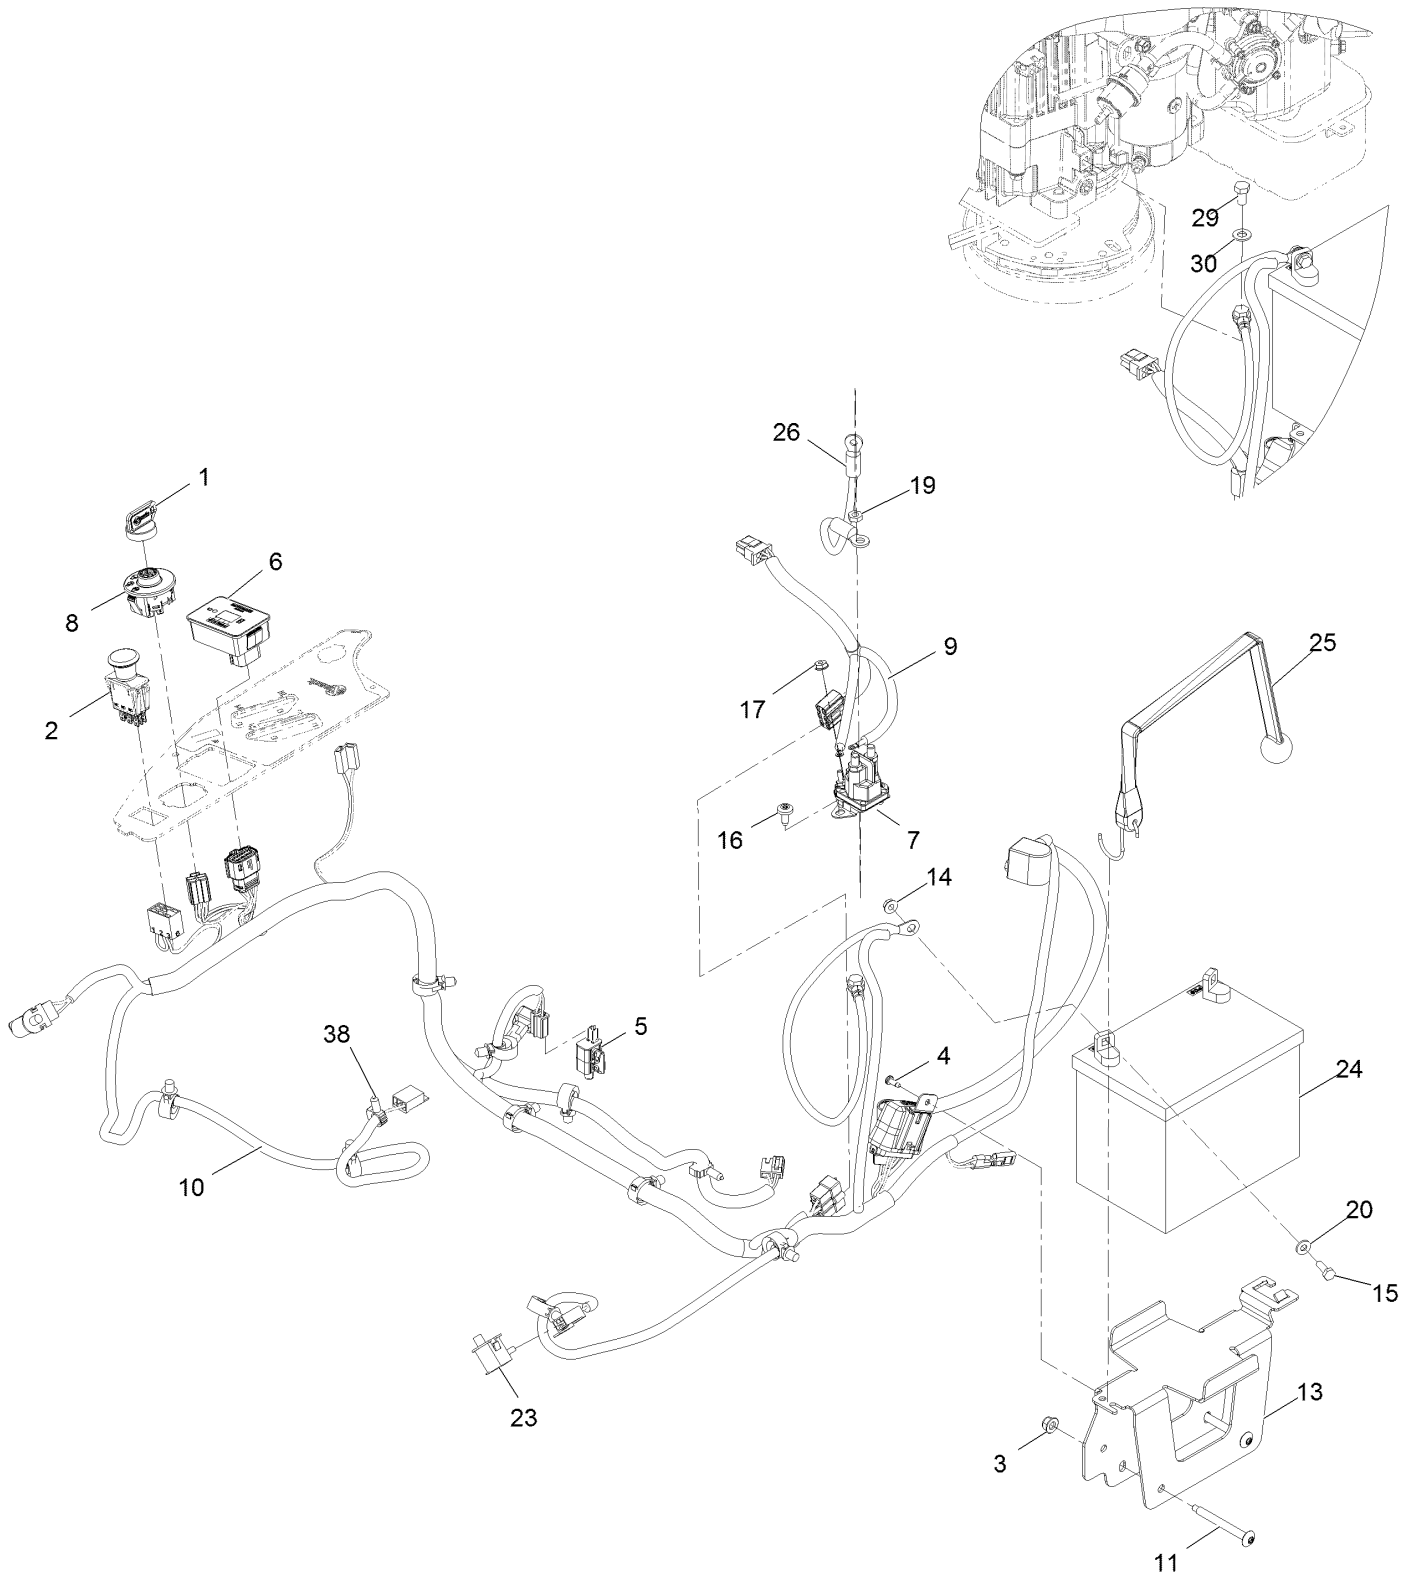


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-603511	1	Key-Ignition
1	103-2106	1	Key-Exmark Logo
2	103-5221	1	Switch-PTO
3	104-8300	2	Nut-Nyloc 5/16-18 Flg
4	105-6849	1	Screw-Tph #10-24 X 1/2 Tf
5	110-6765	1	Switch
6	116-5609	1	Module ASM
7	117-1197	1	Solenoid
8	137-4100	1	Switch-Ignition
9	126-5036	1	Adapter-Harness, Wire
10	126-5803	1	Harness-Wire ▲
11	126-6267	2	Screw-Truss HD 5/16-18 X 2 3/4 Torx Plus
13	126-6725-03	1	Tray-Battery
14	32128-33	2	Nut-Whizlock 1/4-20
15	321-4	2	Screw-HH 1/4-20 X 3/4
16	126-6266	2	Screw-1/4-20 X .65 Torx Plus
17	32149-8	2	Nut-Keps 10-32 Unf Yz
19	3220-2	1	Nut-Jam 5/16-24
20	3256-22	2	Washer-1/4 SAE
23	82-2190	2	Switch
24		1	Battery ●■
25	126-7627	1	Strap-Bungee
26	100-3540	1	Cable-Battery, Positive
29	135-2868	1	Screw-HH
30	3256-23	1	Washer-5/16 SAE
38	32180-037	1	Clip-Harness

● Obtain locally. ■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Harness Assembly

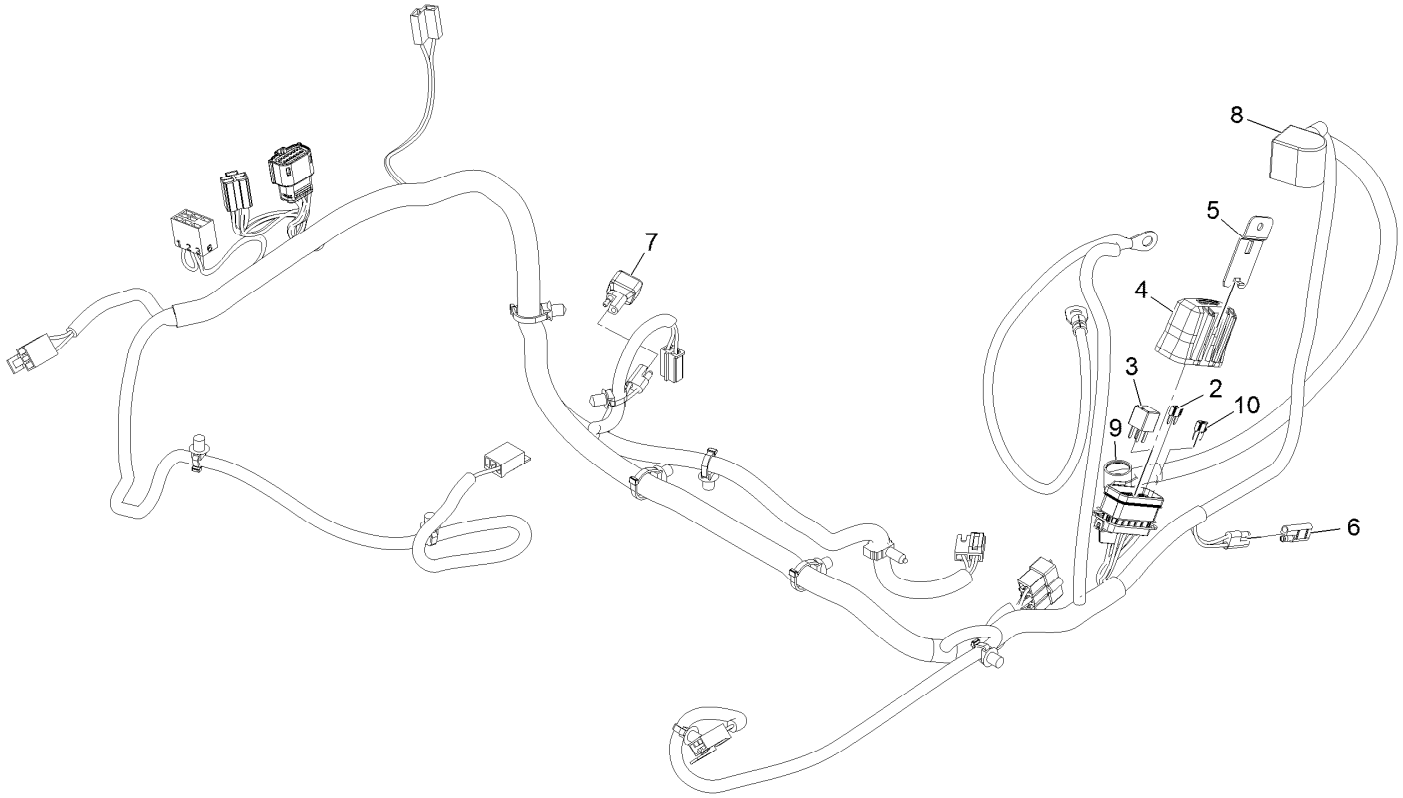

Harness Assembly (continued)

Ref.	Part Number	Qty.	Description
2	121-8868	1	Fuse-Mini Blade, 20 Amp
3	126-3991	1	Relay-Micro
4	32180-176	1	Cover-Block, Fuse
5	32180-177	1	Clip-Mounting
6	116-0053	1	Cap-Plug
7	103-3895	1	Diode
8	126-8876	1	Insulator-Battery
9	1-543393	1	Insulator-Solenoid
10	121-8867	1	Fuse-Mini Blade, 15 Amp

Notes:

Notes:

Notes:

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.



EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2019 Exmark Mfg. Co., Inc.
All Rights Reserved

2101 Ashland Ave
Beatrice, NE 68310
(402) 223-6375
Fax (402) 223-5489

Part No. 4504-548 Rev. A
Printed in the USA.





www.exmark.com