
RADIUS® E-SERIES

Model No. RAE708GEM60300—Serial No. 406294345 and Up

Picture below may not reflect actual product.

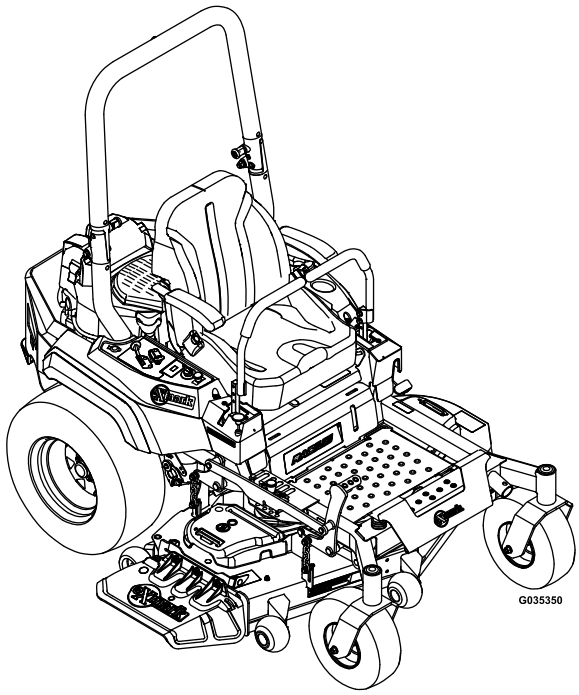

Parts Manual

Part No. 4504-552 Rev. A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

© 2019—Exmark Mfg. Co., Inc.
2101 Ashland Ave
Beatrice, NE 68310

Contact us at www.Exmark.com.
Printed in the USA.
All Rights Reserved




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Complete Deck Assembly 4
Deck Assembly 6
Deck W/Decals Assembly 8
Idler Arm W/Bearings Assembly 10
Main Frame Assembly 12
Caster Tire Assembly 14
Caster Wheel Assembly 16
Roll-Over Protection System Assembly 18
Control Panel Assembly 20
Motion Control Assembly 22
LH and RH Motion Control Assembly 24
Deck Lift Assembly 26
Deck Strut Assembly 28
Seat Assembly 30
Seat Assembly (cont) 32
Fuel Assembly 34
Fuel Tank Assembly (cont.) 36
Engine Assembly 38
Fuel System Assembly 40
Carburetor Assembly 42
Air Intake and Filtration Assembly 44
Ignition and Cooling Fan 46
Crankcase and Crankshaft Assembly 48
Governor Control Assembly 50
Piston and Cylinder Head Assembly 52
Blower Housing Assembly 54
Gasket and Seal Kit 56
Rear Wheel Assembly 58
Transaxle Assembly 60
LH Transaxle Assembly 62
RH Transaxle Assembly 64
Electrical Assembly 66
Harness Assembly 68


Complete Deck Assembly

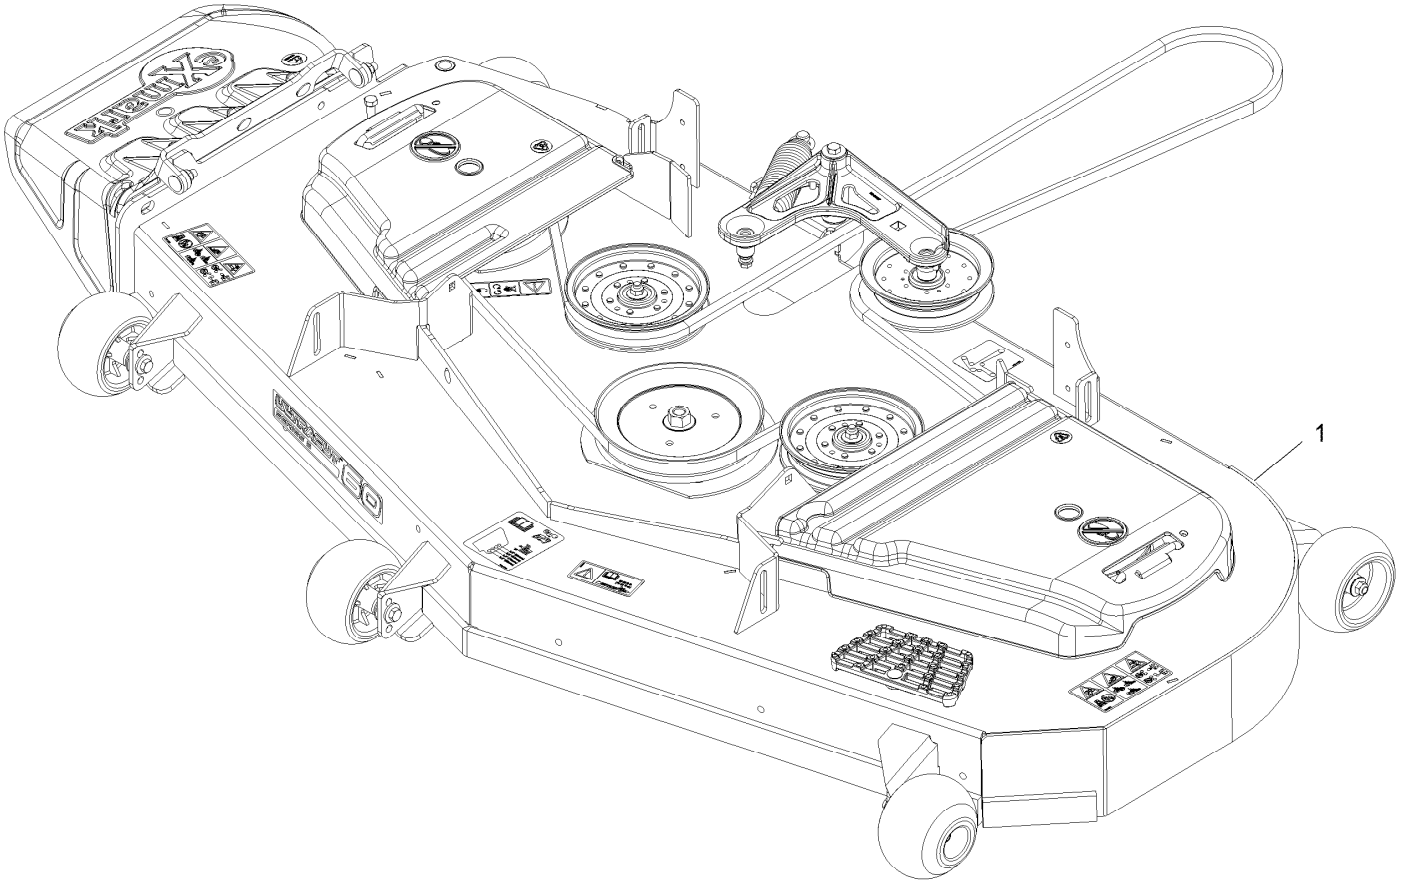

Complete Deck Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	126-8040	1	ASM-Deck Complete 603

Deck Assembly

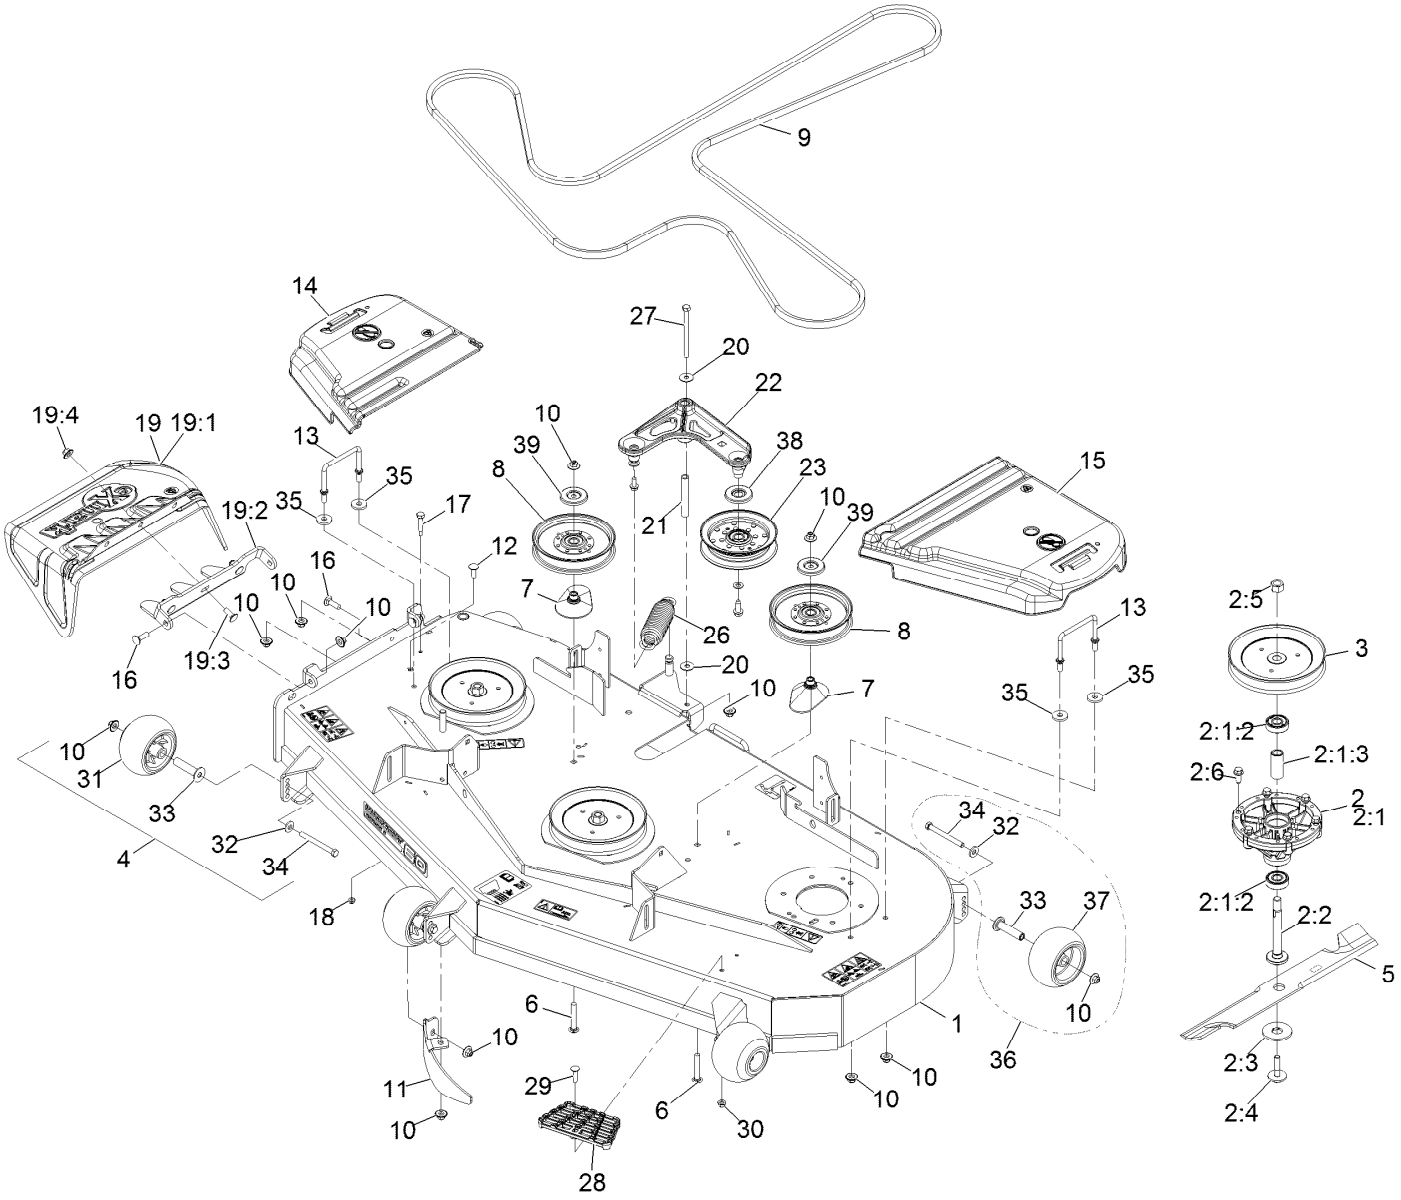

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3581	1	ASM-Deck W/Decals 603
2	126-4630	3	ASM, Cutter Housing Complete
2:1	126-4627	1	ASM-Cutter Housing
2:1:2	116-4004	2	Bearing
2:1:3	116-4876	1	Spacer-Bearing
2:2	109-7431	1	Spindle-Hex Pilot ❑
2:3	126-4530	1	Washer-Hex Blade Drive
2:4	116-0005	1	Bolt-Blade, Sem ■ ❍
2:5	3219-6	1	Nut-Hex ▲
2:6	126-1696	6	Screw-Forming, Thread
3	126-5007	3	Sheave,Blade Drive 7.25
4	116-9981	3	Kit, Anti-Scalp Roller
5	103-6403	3	Blade, Notched
5	116-5174	3	Blade-Extreme 2, 20.50" ●
5	103-6393	3	Blade, Mulching ◆
5	103-6388	3	Blade, Low Lift ●
5	103-6383	3	Blade, Solid ●
6	3231-44	2	Screw-CARR
7	109-2872	2	Spacer-Pulley
8	126-9189	2	Idler-Pulley, Flat 6.00X1.00
9	126-6627	1	Belt-V
10	109-6658	16	Nut-Flange, NI
11	126-4708-01	1	Dogleg-603
12	3231-22	1	Screw-CARR
13	109-6982	2	Wireform-Cover
14	116-0094	1	Cover-Belt, RH
15	109-6938	1	Cover-Belt, LH
16	3231-25	3	Bolt-CARR
17	611792	1	Bolt-Shoulder
18	104-7201	1	Nut-HF
19	109-7188	1	ASM,Discharge Chute
19:1	109-2738	1	Chute, Discharge
19:2	109-8675-01	1	Bracket,Discharge Chute
19:3	3231-22	3	Screw-CARR
19:4	109-6658	3	Nut-Flange, NI
20	52-2860	2	Washer
21	116-5111	1	Bushing
22	126-0976	1	Idler Arm ASM
23	126-9196	1	Idler-Pulley, Flat
26	116-6317	1	Spring-Extension
27	323-38	1	Screw-HH
28	126-4781-03	1	Step-Deck
29	3230-3	1	Screw-CARR
30	104-8300	1	Nut-HF, NI
31	103-8415	3	Roller-Anti-Scalp
32	98-5975	5	Washer-Belleville
33	116-8131	5	Axle, Roller
34	116-9362	5	Screw-HH
35	1-373034	4	Washer
36	126-7840	2	Kit-Antiscalp Roller
37	1-603299	2	Roller-Scalp, Anti
38	126-9195	1	Shield-Guard, Dust
39	126-8043	2	Shield-Dust

● Optional Equipment

■ Torque to 50-60 ft-lb


▲ Torque to 75-85 ft-lb

◆ Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

❑ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize) to spindle shaft

❍ Apply lubricant to threads as needed to prevent seizing. Copper based anti-seize preferable. Grease is an acceptable substitute.


Deck W/Decals Assembly

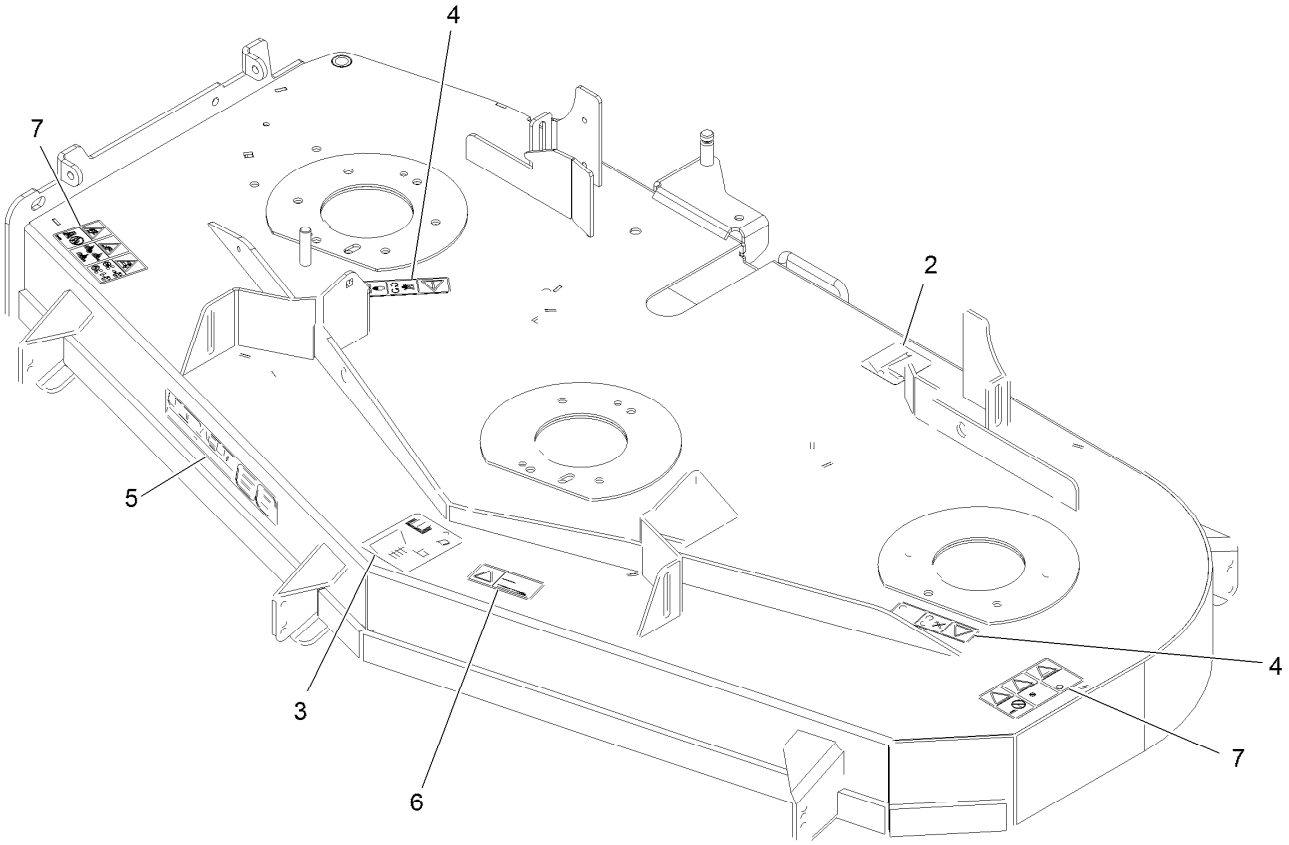

Deck W/Decals Assembly (continued)

Ref.	Part Number	Qty.	Description
2	109-6035	1	Decal-Routing, Belt
3	109-6036	1	Decal-Roller, Anti-Scalp
4	112-9028	2	Decal-Cover, Missing
5	126-7034	1	Decal-Ultracut 60 Series 3
6	116-8283	1	Decal-Bolt Torque
7	126-6464	2	Decal-Danger Thrown Objects


Idler Arm W/Bearings Assembly

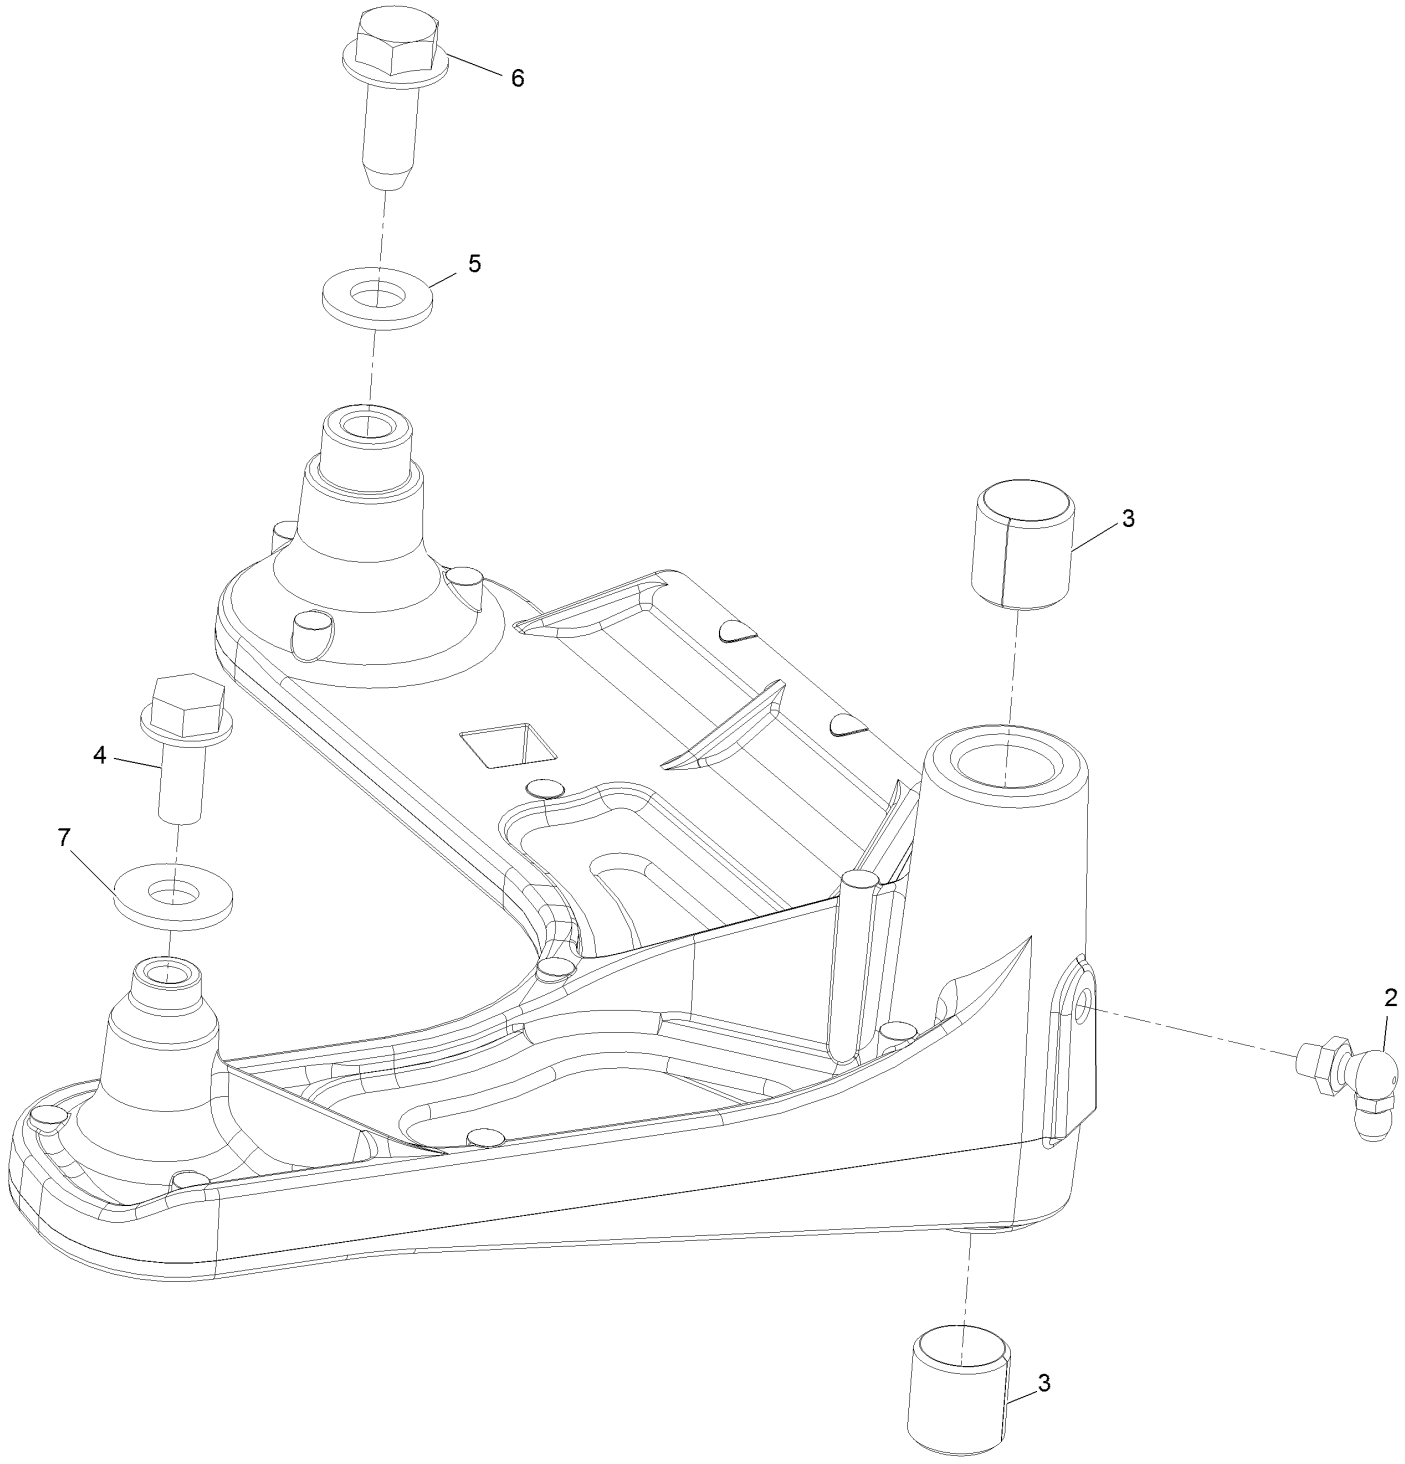

Idler Arm W/Bearings Assembly (continued)

Ref.	Part Number	Qty.	Description
2	302-40	1	Zerk-90° 1/4-28
3	1-513034	2	Sleeve-Bearing
4	32144-11	1	Screw-HWH 5/16-18 X 3/4 Tf
5	3256-24	1	Washer-3/8 SAE
6	126-1696	1	Screw-Forming, Thread
7	3256-3	1	Washer-5/16 Std


Main Frame Assembly

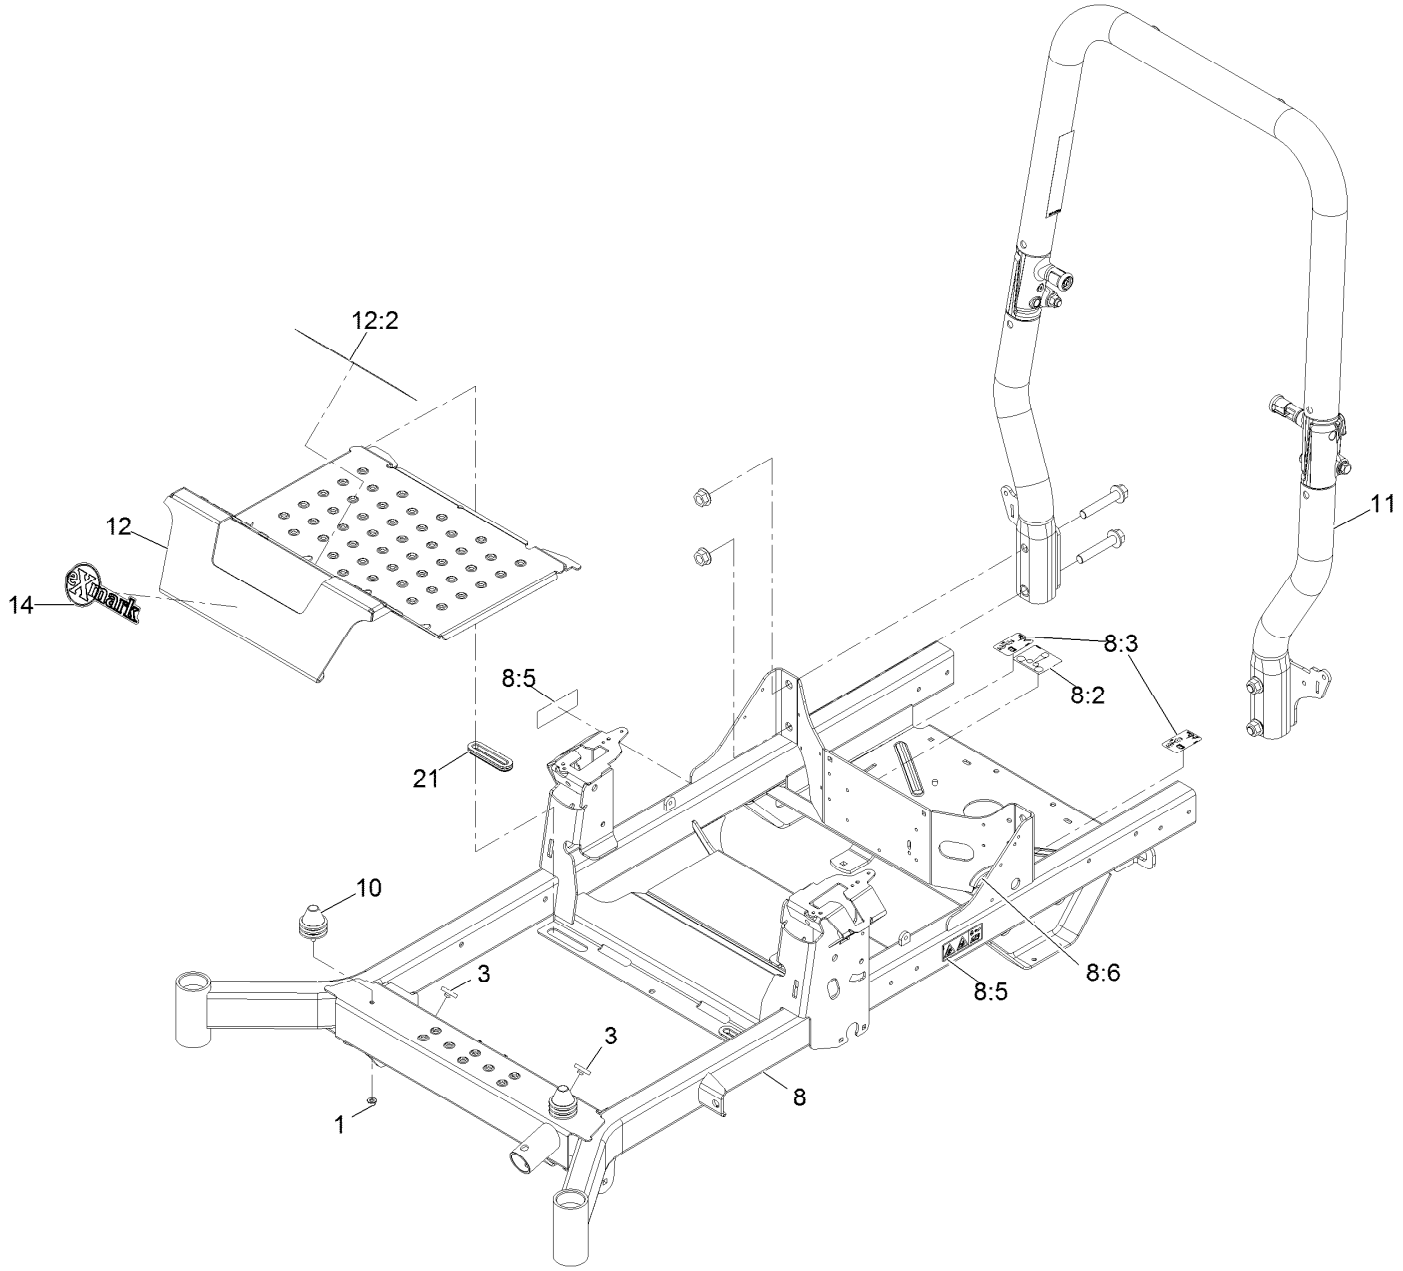

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	2	Nut-Nyloc 5/16-18 Flg
3	109-9233	2	Bumper-Push-In, Rubber
8	126-4425	1	Frame ASM
8:2	109-6014	1	Decal-Routing, Belt
8:3	116-8588	2	Decal-Release, Drive
8:5	126-4363	2	Decal-Warning
8:6	127-6618	1	Strip-Seal
10	126-5491	2	Isolator
11	126-9525	1	ASM-ROPS Tapered
12	126-5872	1	Pan-Floor
12:2	126-8383	1	Decal-Danger
14	126-8819	1	Decal-Exmark Logo
21	126-7065	2	Grommet-Rubber

Caster Tire Assembly

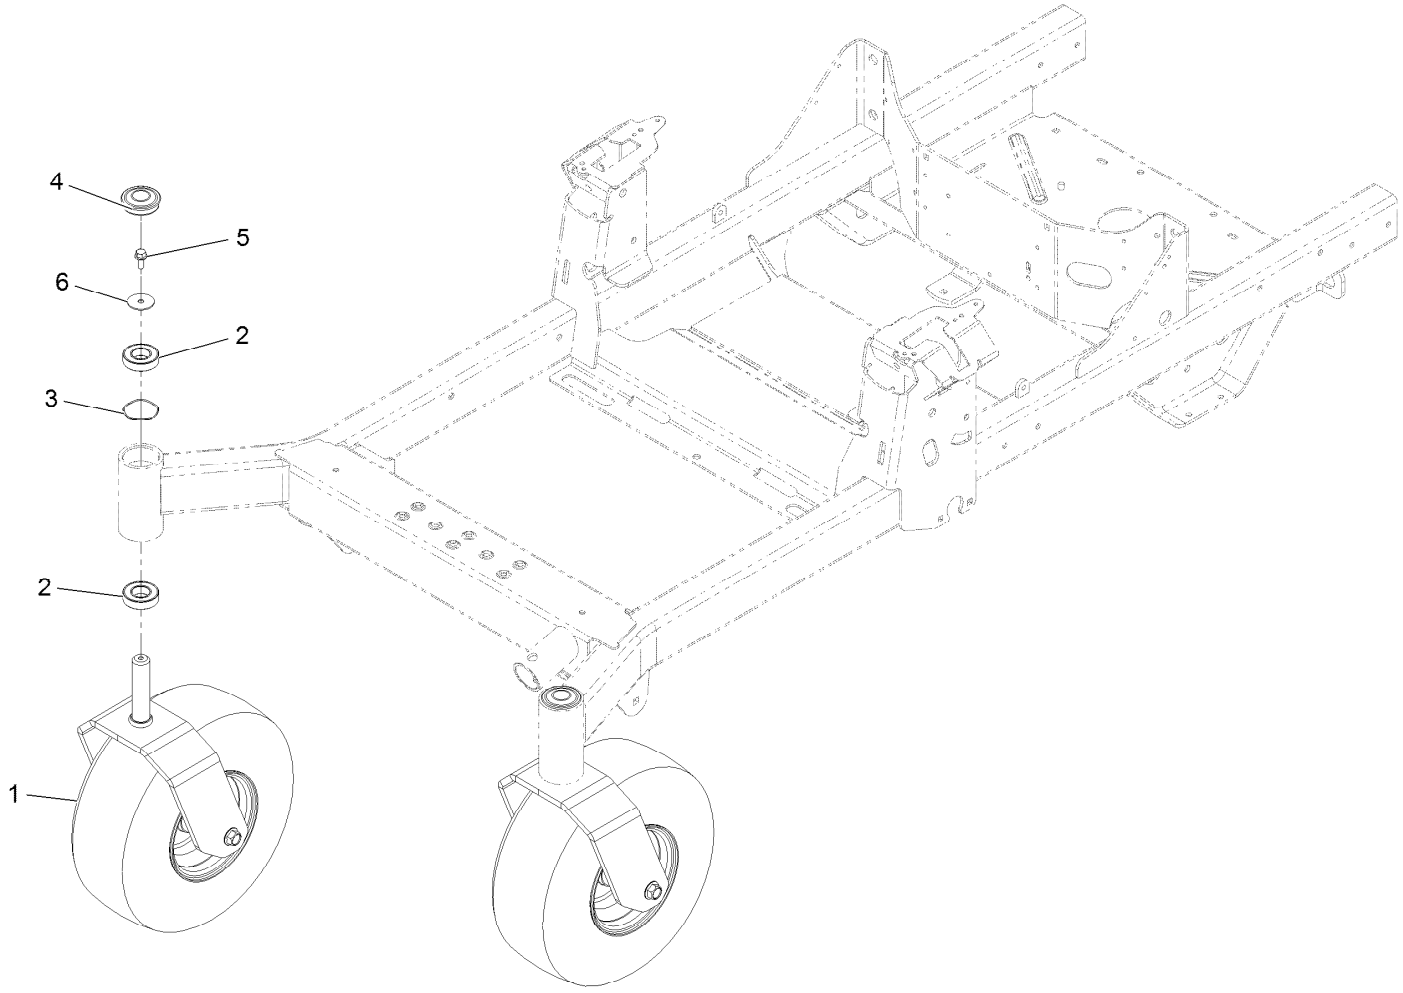


Caster Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	ASM-Front Caster W/Fork ●
2	109-3678	4	Bearing-Ball
3	126-5897	2	Spring
4	116-4348	2	Cap-Grease
5	3234-5	2	Screw-HH Flg 5/16-18 X 3/4
6	3256-68	2	Washer-Flat

● Not serviced separately


Caster Wheel Assembly

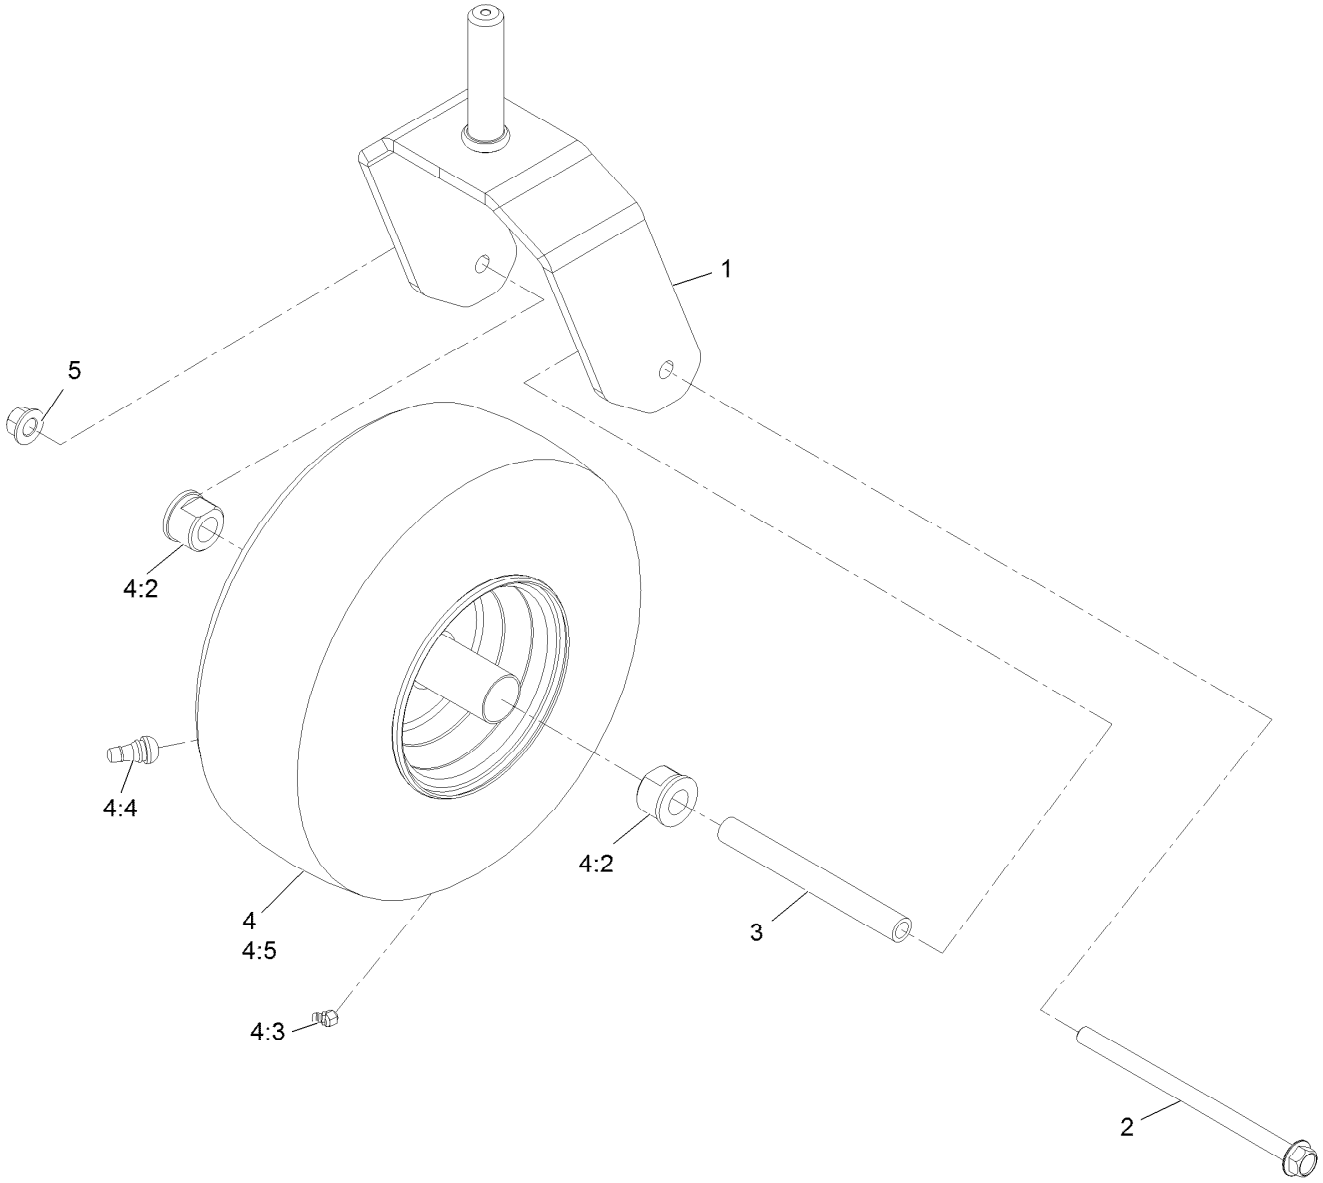

Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4312-01	1	Fork-Caster
2	126-5389	1	Screw-HHF
3	127-0068	1	Spanner-Wheel, Caster
4	126-4860	1	ASM, Tire & Wheel
4:2	114-1640	2	Bushing-Flange
4:3	302-5	1	Zerk 1/4-28 Str Thrd Forming
4:4	5108	1	Valve
4:5	126-5959	1	Tire
5	99-5107	1	Nut-Lock 1/2-13


Roll-Over Protection System Assembly

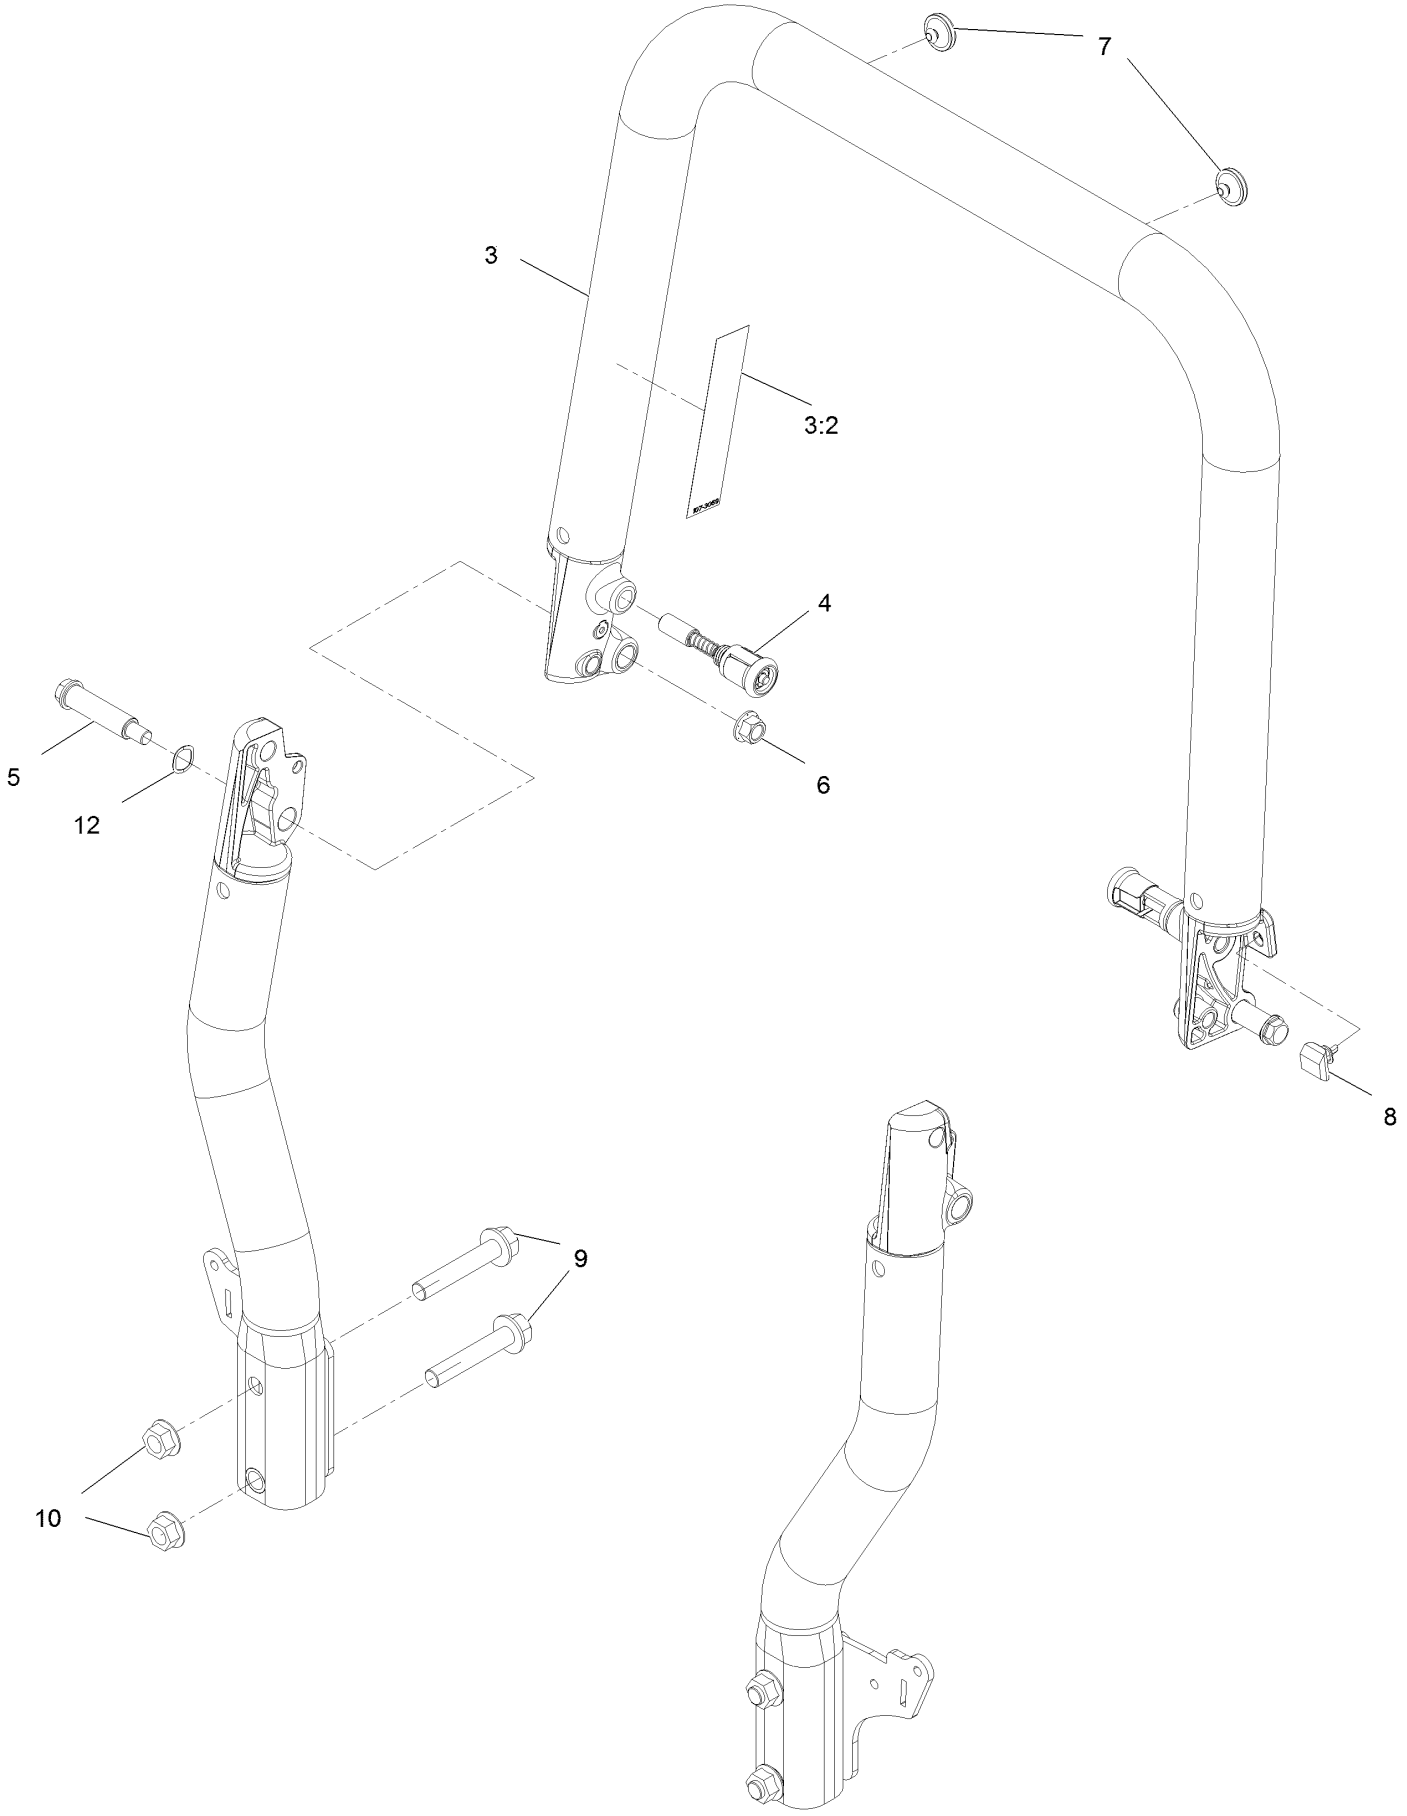

Roll-Over Protection System Assembly (continued)

Ref.	Part Number	Qty.	Description
3	126-7838	1	Top Tube ASM
3:2	107-3069	1	Decal-Warning
4	116-0104	2	Pin-Spring
5	126-9209	2	Bolt-Shoulder
6	99-5107	2	Nut-Lock
7	135-0504	2	Bumper-ROPS
8	126-9966	2	Bumper-ROPS
9	126-9488	4	Screw-HHF
10	32128-50	4	Nut-Flange
12	119-4164	2	Washer-Wave


Control Panel Assembly

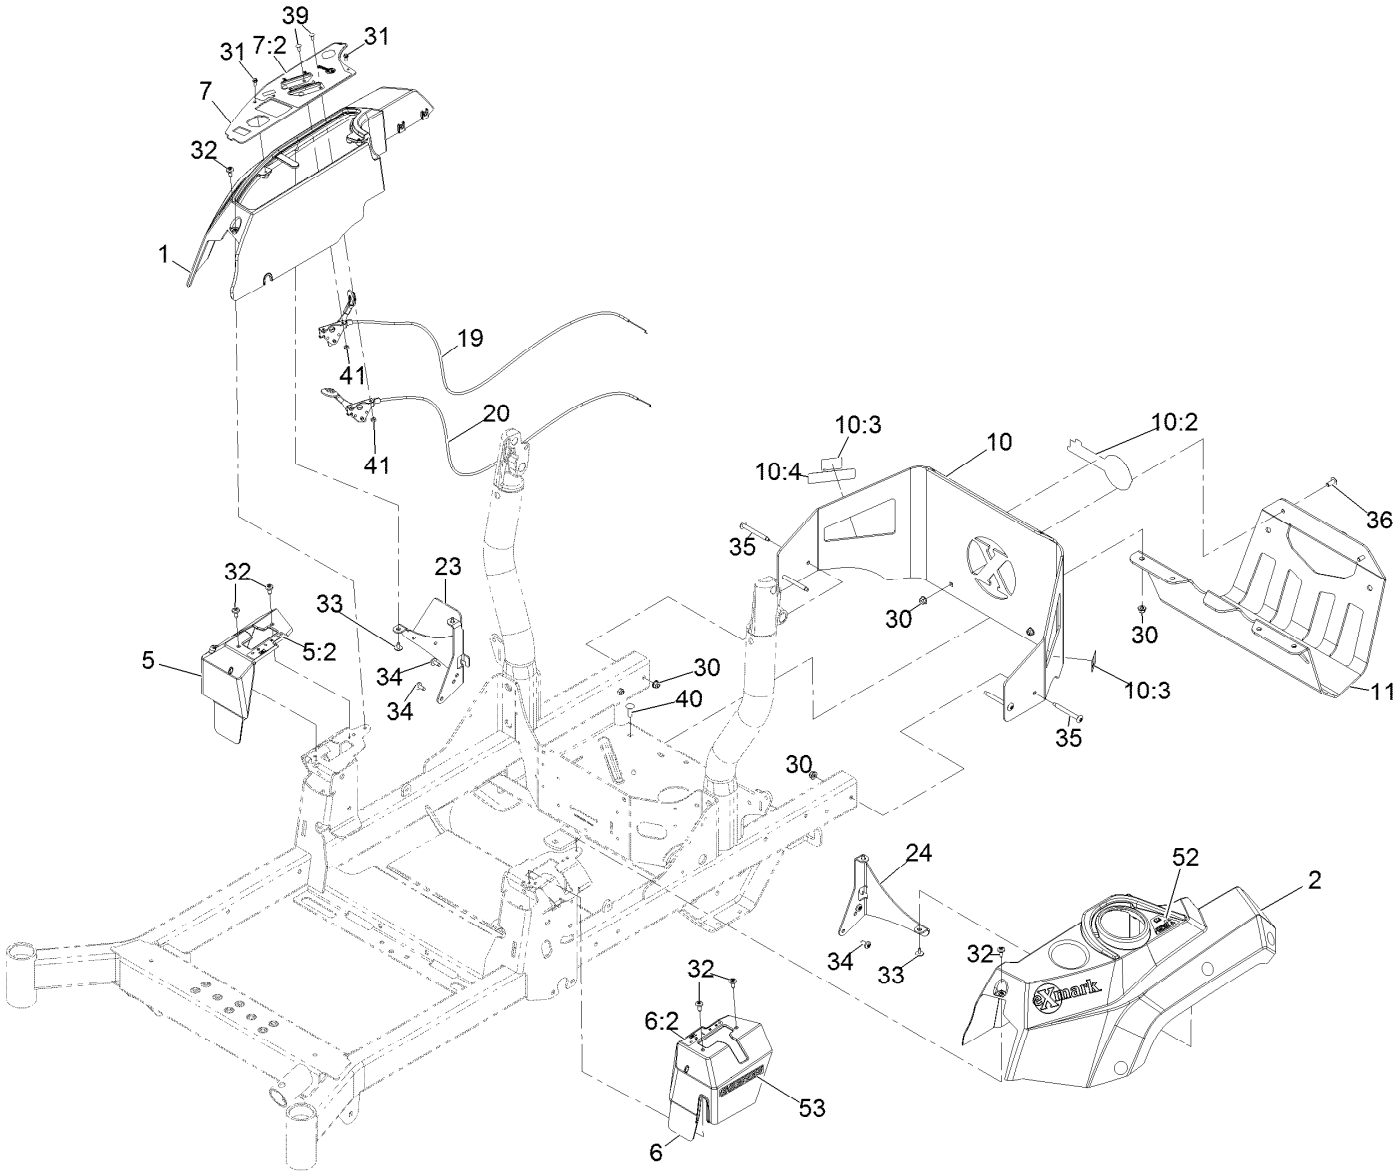

Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-6025	1	Console, RH
2	126-6026	1	Console, LH
5	126-7371	1	Cover-Control, Motion (RH)
5:2	126-6183	1	Decal-Control, Motion (RH)
6	126-7372	1	Cover-Control, Motion (LH)
6:2	126-6194	1	Decal-Control, Motion (LH)
7	135-7845	1	ASM-Control Panel W/Exmark Decal
7:2	135-7816	1	Decal-Control Panel
10	126-7802	1	Rear Guard ASM
10:2	126-6877	1	Decal, Exmark Logo
10:3	106-5517	2	Decal-Warning
10:4	133-8062	1	Decal-Arrestor, Spark
11	135-5084-03	1	Guard-Muffler [black]
19	126-6945	1	Cable-Control, Choke
20	126-6944	1	Cable-Control, Throttle
23	126-9945	1	Support-Console, RH
24	126-5532-03	1	Bracket-Console, LH
30	104-8300	8	Nut-Nyloc 5/16-18 Flg
31	117-5036	2	Screw-HWH #10-14 X 1/2
32	120-7950	6	Screw-1/4-20 X 1/2 Tf Torx Plus
33	126-5544	4	Screw-HWH #10-14 X 1/2 Torx
34	126-6266	4	Screw-1/4-20 X .65 Torx Plus
35	126-6267	4	Screw-Truss HD 5/16-18 X 2 3/4 Torx Plus
36	126-6268	2	Screw-Truss HD 5/16-18 X 3/4 Torx Plus
39	1-807513	4	Bolt-Carriage #10-24 X 1/2
40	3230-22	2	Bolt-Carriage 5/16-18 X 1 Sp
41	3296-2	4	Nut-Nyloc #10-24
52	126-9939	1	Decal-Fill, Fuel
53	126-9295	2	Decal-E-Series

Motion Control Assembly

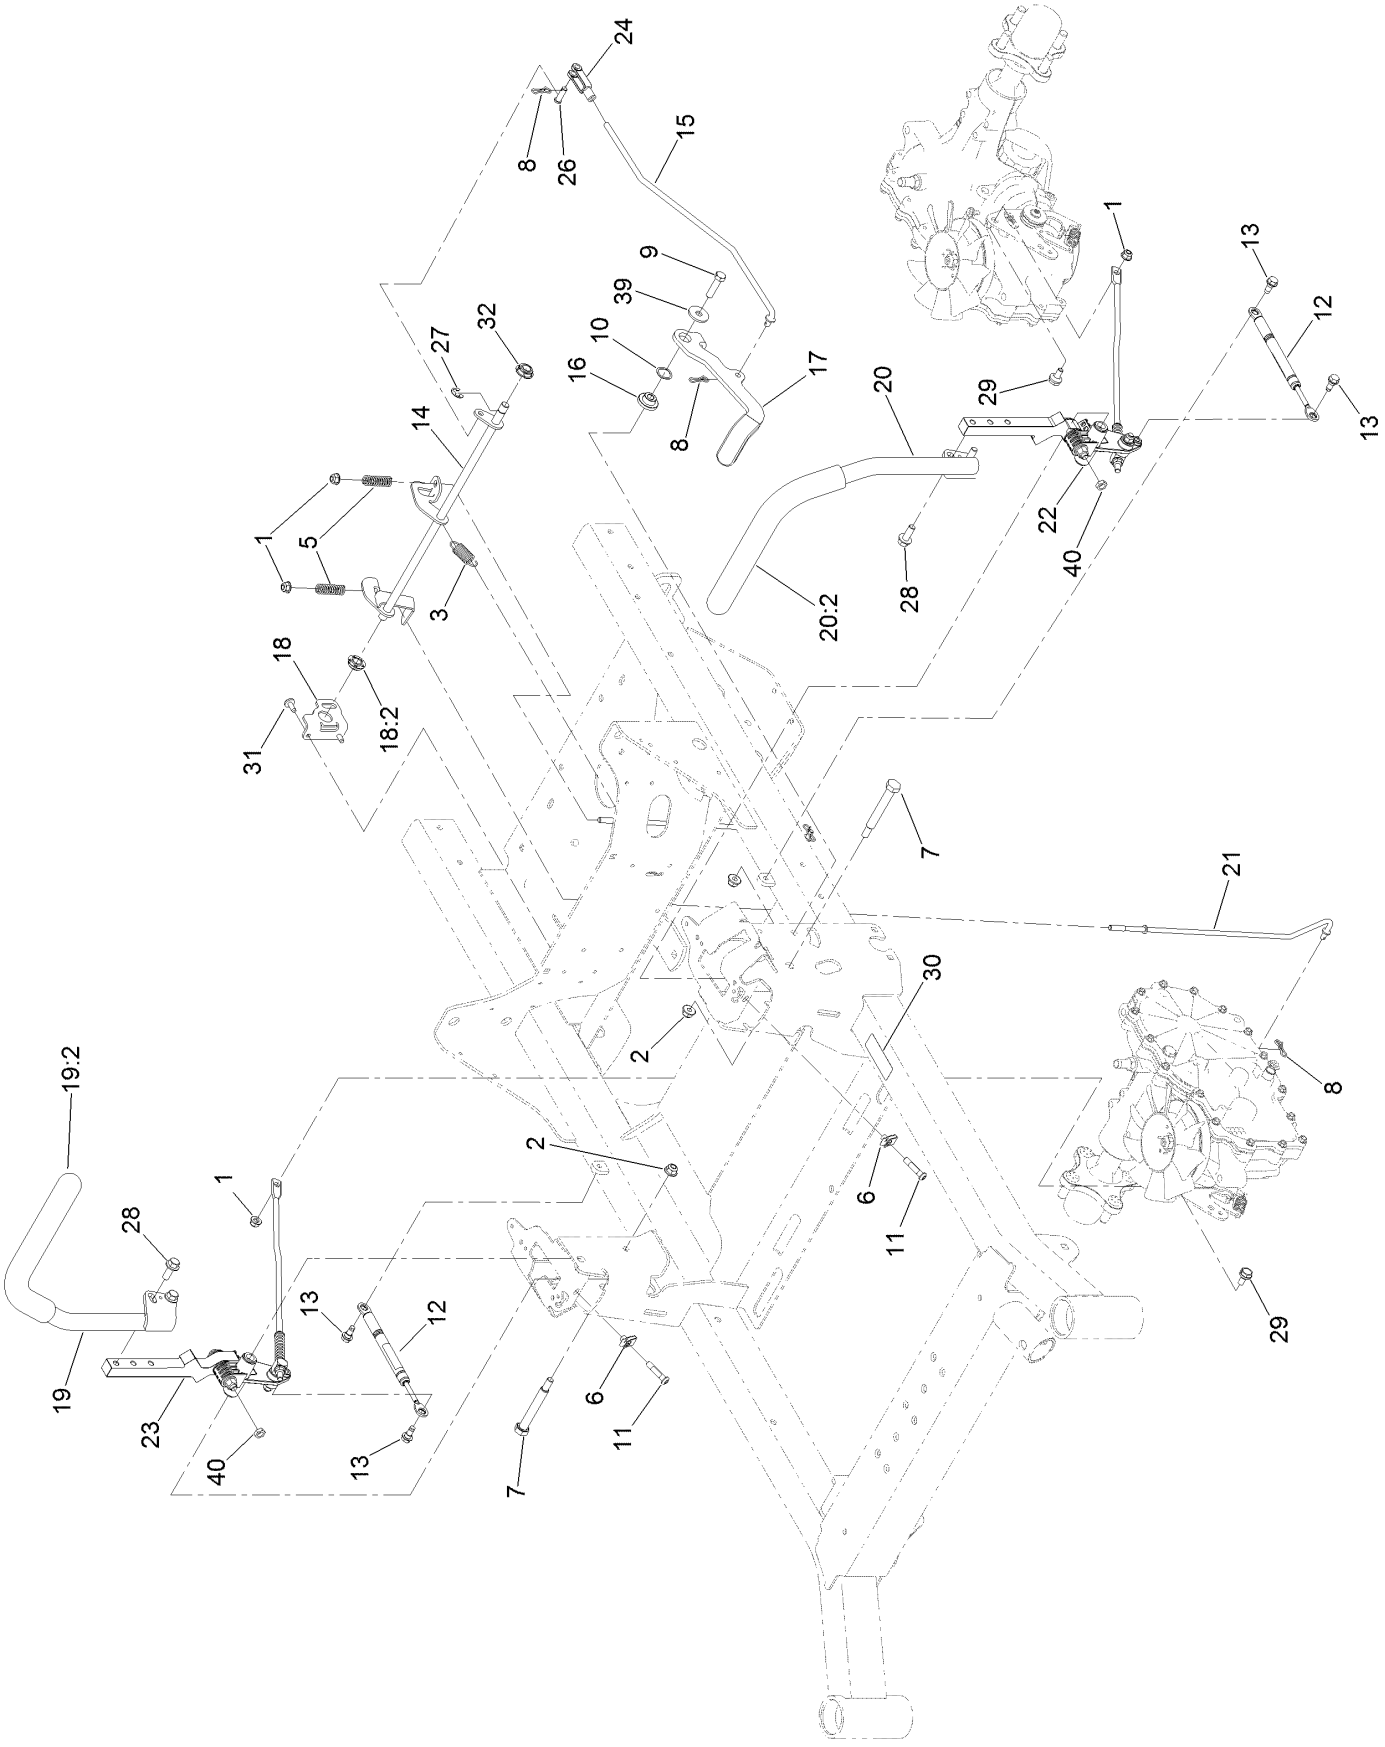


Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	4	Nut-HF, NI
2	104-8301	3	Nut-HF, NI
3	107-1045	1	Spring-Extension
5	109-7694	2	Spring-Compression
6	112-3306	2	Nut
7	115-5099	2	Bolt-Pivot
8	119-1415	4	Pin-Cotter, Locking
9	323-8	1	Screw-HH
10	119-4164	1	Washer-Wave
11	126-4299	2	Screw-HSBH
12	126-4322	2	Damper
13	126-4424	4	Screw-Shoulder
14	126-5813	1	Shaft-Brake
15	126-5819	1	Linkage-Brake, Upper
16	126-5989	1	Pivot-Flange
17	126-9490	1	Lever-Brake (With Grip)
18	126-6456	1	Bracket-Brake
18:2	126-5820	1	Bearing-Spherical
19	126-9191	1	RH Control Handle ASM
19:2	126-7359	1	Grip
20	126-9192	1	LH Control Handle ASM
20:2	126-7359	1	Grip
21	126-7217	2	Linkage-Brake, Lower
22		1	LH Motion Control ASM ●
23		1	RH Motion Control ASM ●
24	1-303105	1	Yoke-Adjustable
26	1-808280	1	Pin-Clevis
27	32120-47	1	Ring-Retaining, External
28	3234-42	4	Screw-HHF
29	37-8771	2	Bolt-Shoulder, HF
30	115-9625	1	Decal-Brake, Parking
31	126-6266	2	Screw-Torx
32	126-5820	1	Bearing-Spherical
39	2844	1	Washer
40	3218-3	2	Nut-Jam

● Not serviced separately


LH and RH Motion Control Assembly

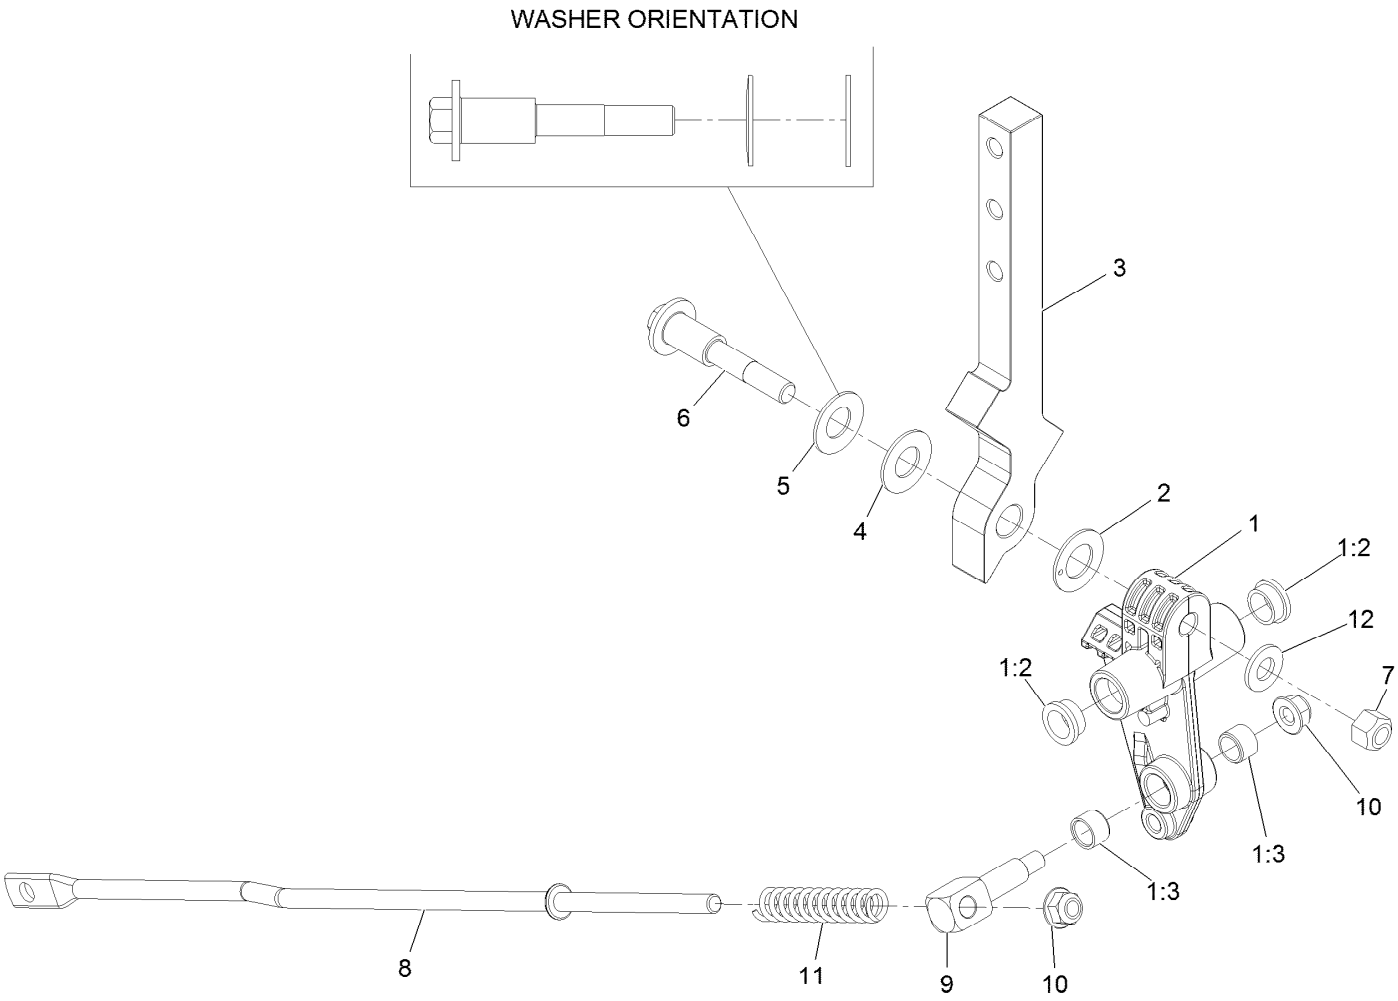

LH and RH Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3773	1	Control Arm ASM
1:2	126-8909	2	Bushing
1:3	1-413152	2	Bushing-Sleeve
2	126-7296	1	Washer-Friction
3	126-8182	1	Arm-Control
4	117-1240	1	Washer
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	32152-2	1	Nut-Hex 3/8-16 Lock
8	126-5435	1	Link-Control
9	126-5434	1	Swivel
10	104-8300	2	Nut-Nyloc 5/16-18 Flg
11	126-8195	1	Spring-Return, Neutral
12	3256-24	1	Washer-3/8 SAE


Deck Lift Assembly

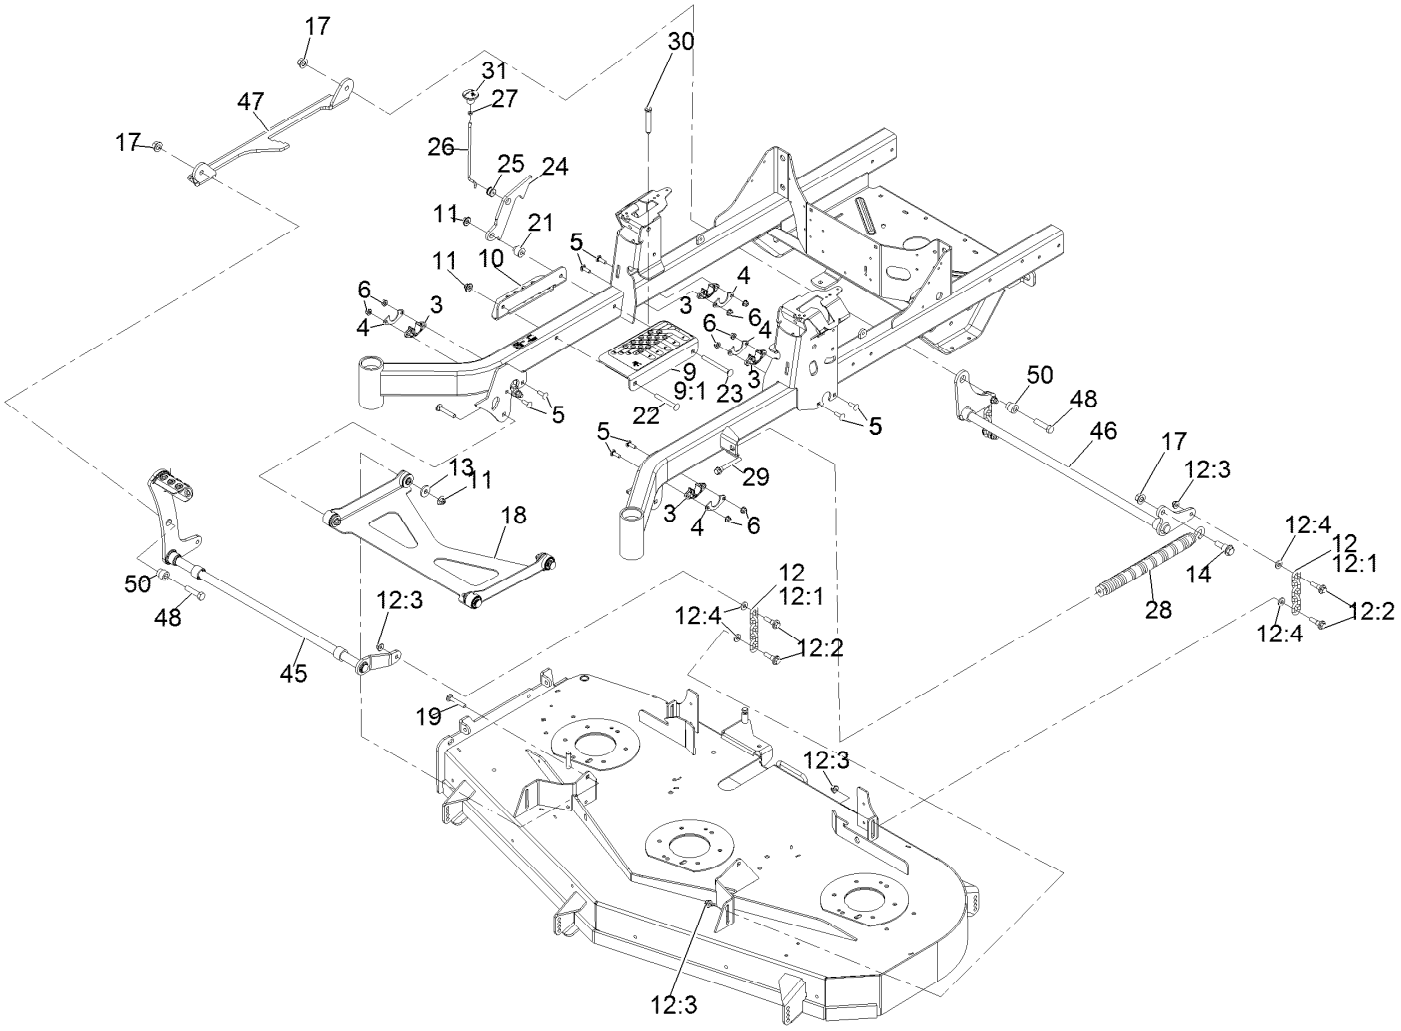

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
3	115-5065	4	Bushing-Flange
4	116-2887	4	Gusset-Lift, Deck
5	3230-22	8	Bolt-Carriage 5/16-18 X 1 Sp
6	104-8300	8	Nut-Nyloc 5/16-18 Flg
9	126-4535	1	Bracket ASM
9:1	126-4784	1	Decal-HOC
10	126-4640-03	1	Angle-HOC, Lower
11	109-6658	4	Nut-Nyloc 3/8-16 Flg
12	126-8877	4	Deck Chain ASM
12:1	1-633447	1	Chain-Lift, Deck
12:2	130-0742	2	Bolt-Shoulder
12:3	104-8301	2	Nut-Nyloc 3/8-16 Flg
12:4	43-0940	2	Spacer
13	1-373034	2	Washer
14	116-0780	1	Screw-Shoulder HHF 1/2-13 X 1.12
17	99-5107	3	Nut-Lock 1/2-13
18	126-8365	1	Deck Strut ASM
19	3231-7	2	Bolt-Carriage 3/8-16 X 2 1/4
21	126-5221	1	Spacer-Stepped
22	3231-42	1	Bolt-Carriage 3/8-16 X 3
23	135-0313	1	Screw-CARR
24	126-5222	1	Plate-Lock, Transport
25	126-5593	1	Grommet
26	126-5223	1	Rod-Lock, Transport
27	3218-1	1	Nut-Jam 1/4-20
28	116-0886	1	Spring-Extension
29	92-7674	1	Screw-Shcs 3/8-16 X 2.212
30	126-5401	1	Pin-HOC
31	126-7019	1	Knob
45	135-5083-03	1	Shaft-Decklift Front
46	135-5081-03	1	Shaft-Decklift Rear
47	135-5079-03	1	Link-Decklift
48	325-8	2	Screw-HH 1/2-13 X 1 1/4
50	135-5617	2	Spacer-Stepped


Deck Strut Assembly

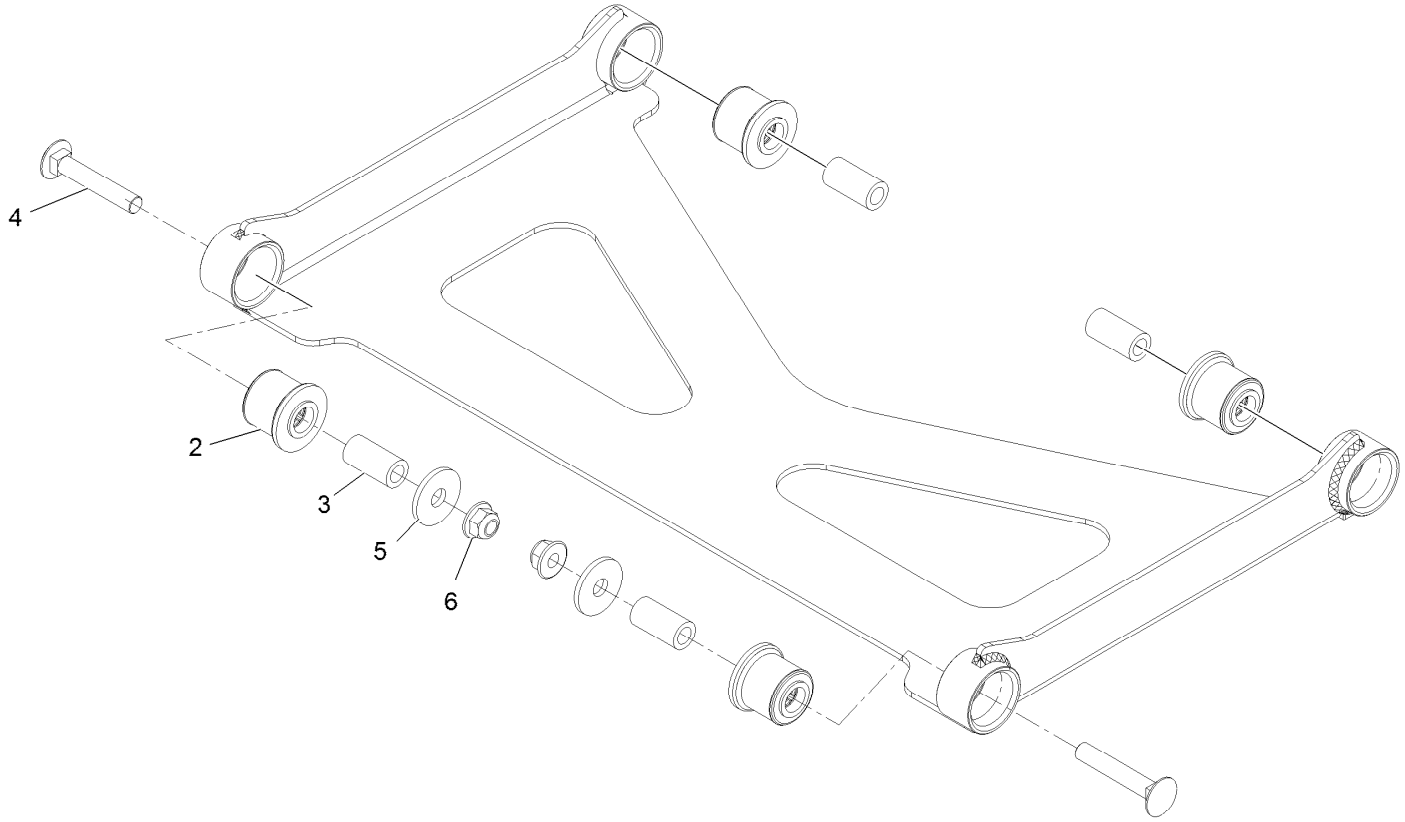

Deck Strut Assembly (continued)

Ref.	Part Number	Qty.	Description
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer
4	3231-7	2	Bolt-Carriage 3/8-16 X 2 1/4
5	2844	2	Washer
6	104-8301	2	Nut-Nyloc 3/8-16 Flg


Seat Assembly

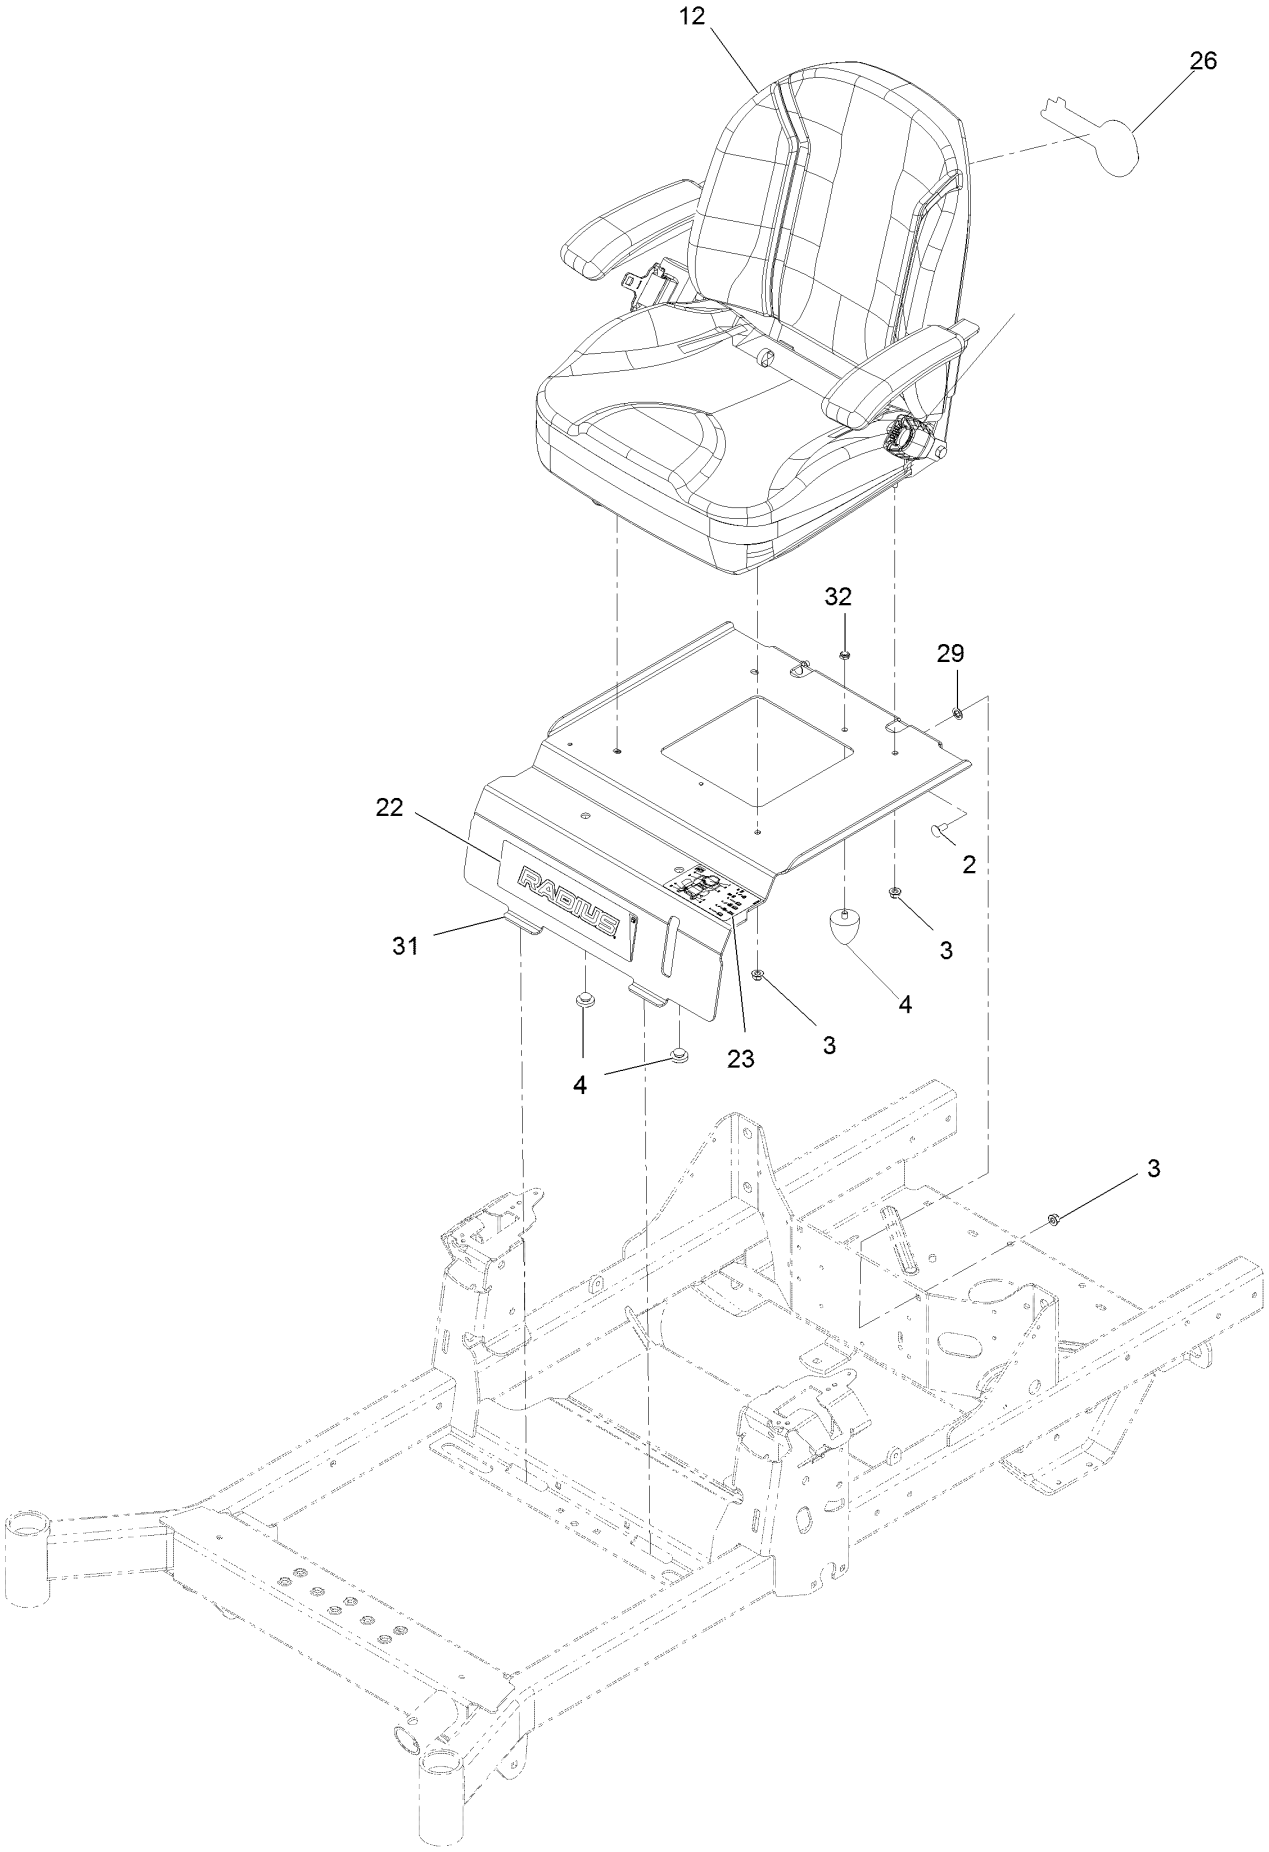

Seat Assembly (continued)

Ref.	Part Number	Qty.	Description
2	3230-22	2	Bolt-Carriage 5/16-18 X 1 Sp
3	104-8300	6	Nut-Nyloc 5/16-18 Flg
4	135-0505	2	Bumper-Seat
4	135-7047	1	Bumper-Rubber
12	126-8290	1	ASM-Seat Exmark
22	126-9082	1	Decal-Radius Logo
23	126-8151	1	Decal-Aid, Service
26	126-6877	1	Decal, Exmark Logo
29	135-7125	2	Washer-Retaining
31	135-6017-03	1	Plate-Fixed Seat [black]
32	3296-47	1	Nut-Nyloc 5/16-18 Thin


Seat Assembly (cont)

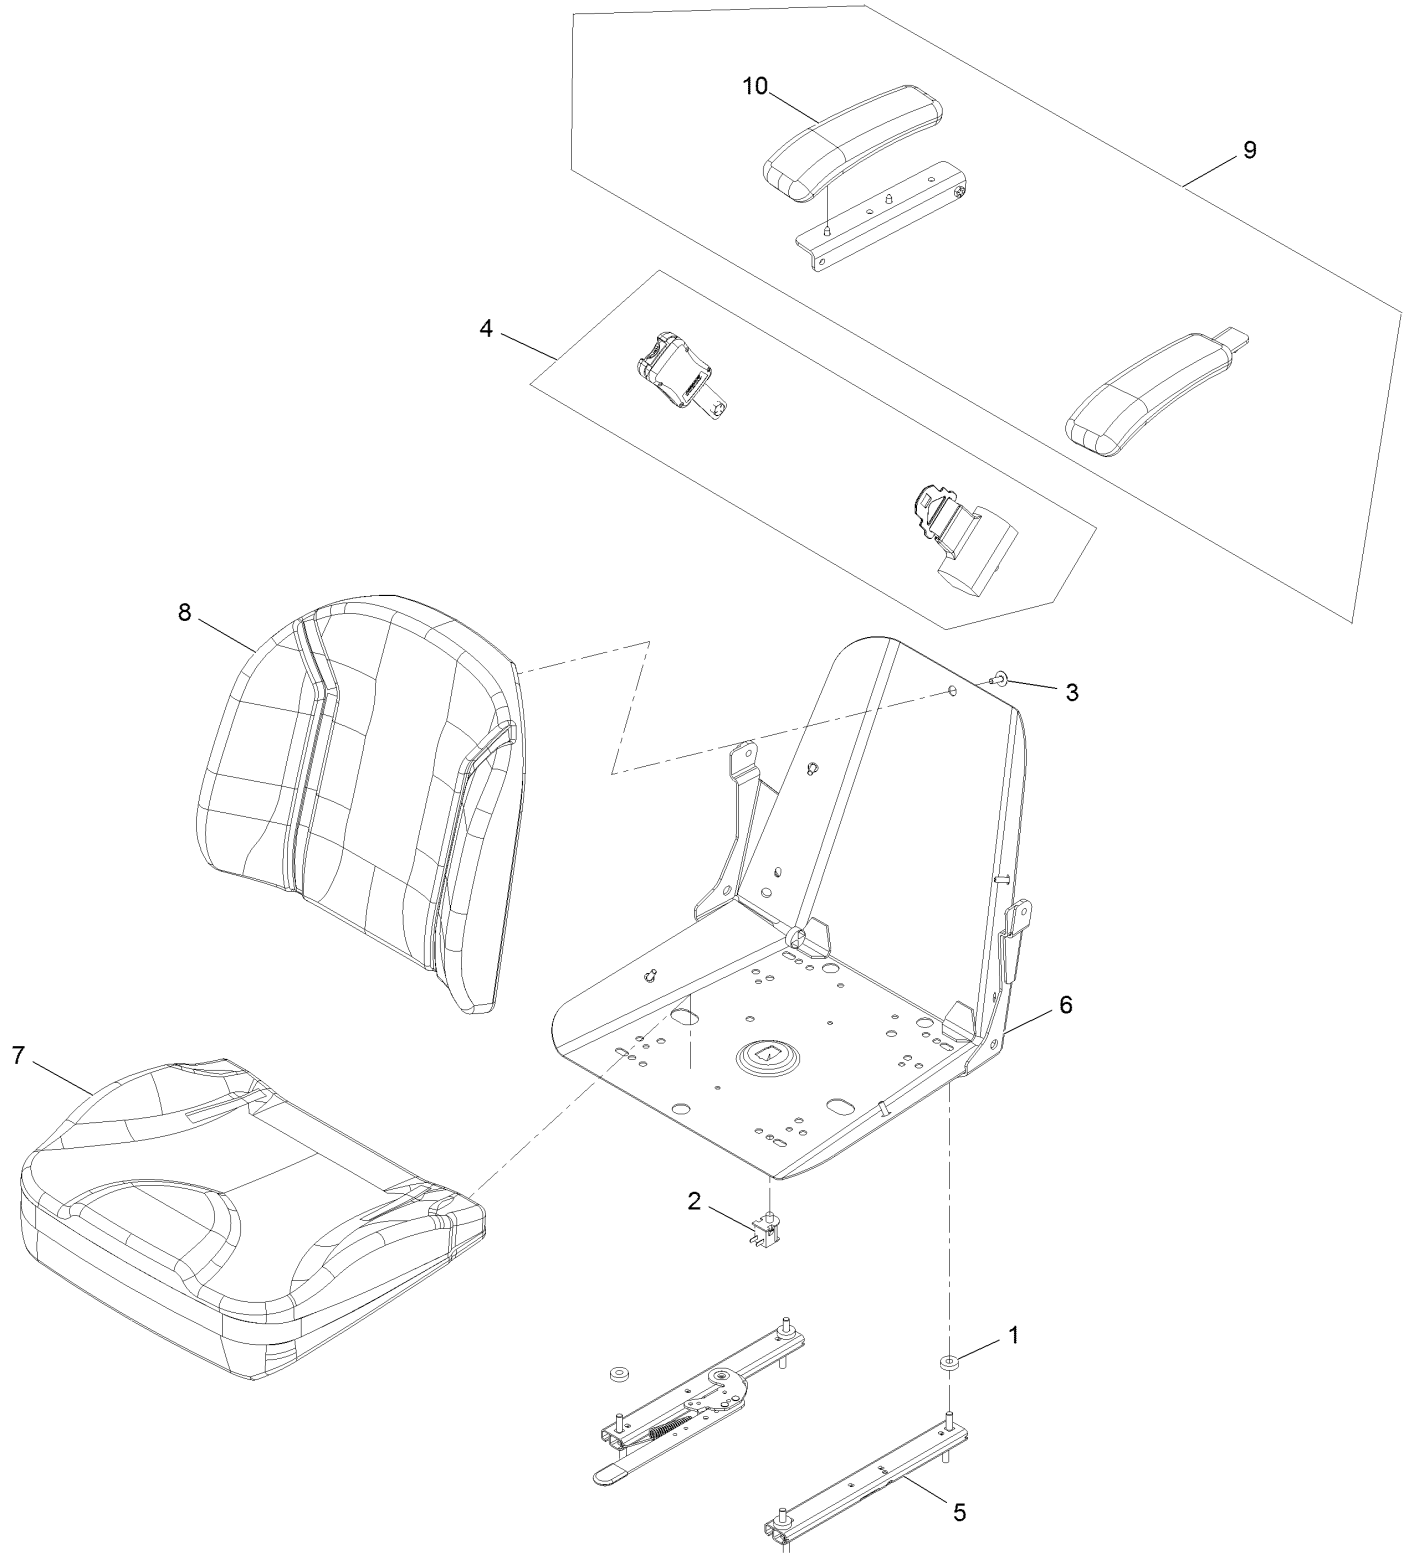

Seat Assembly (cont) (continued)

Ref.	Part Number	Qty.	Description
1	26-4840	4	Spacer-Pin, Mounting
2	82-2190	1	Switch
3	103-8383	5	Screw-HWH 1/4-20 X 3/4 Taptite
4	126-7355	1	Kit-Seat Belt
5	126-4499	1	ASM-Seat Track Svc
6	126-5664	1	Frame-Seat Svc
7	126-5900	1	Cover-Seat Bottom Svc
8	131-4150	1	Cushion-Seat, Back
9	131-4155	1	Armrest Kit
10	110-4163	1	Cushion-Rest, Arm


Fuel Assembly

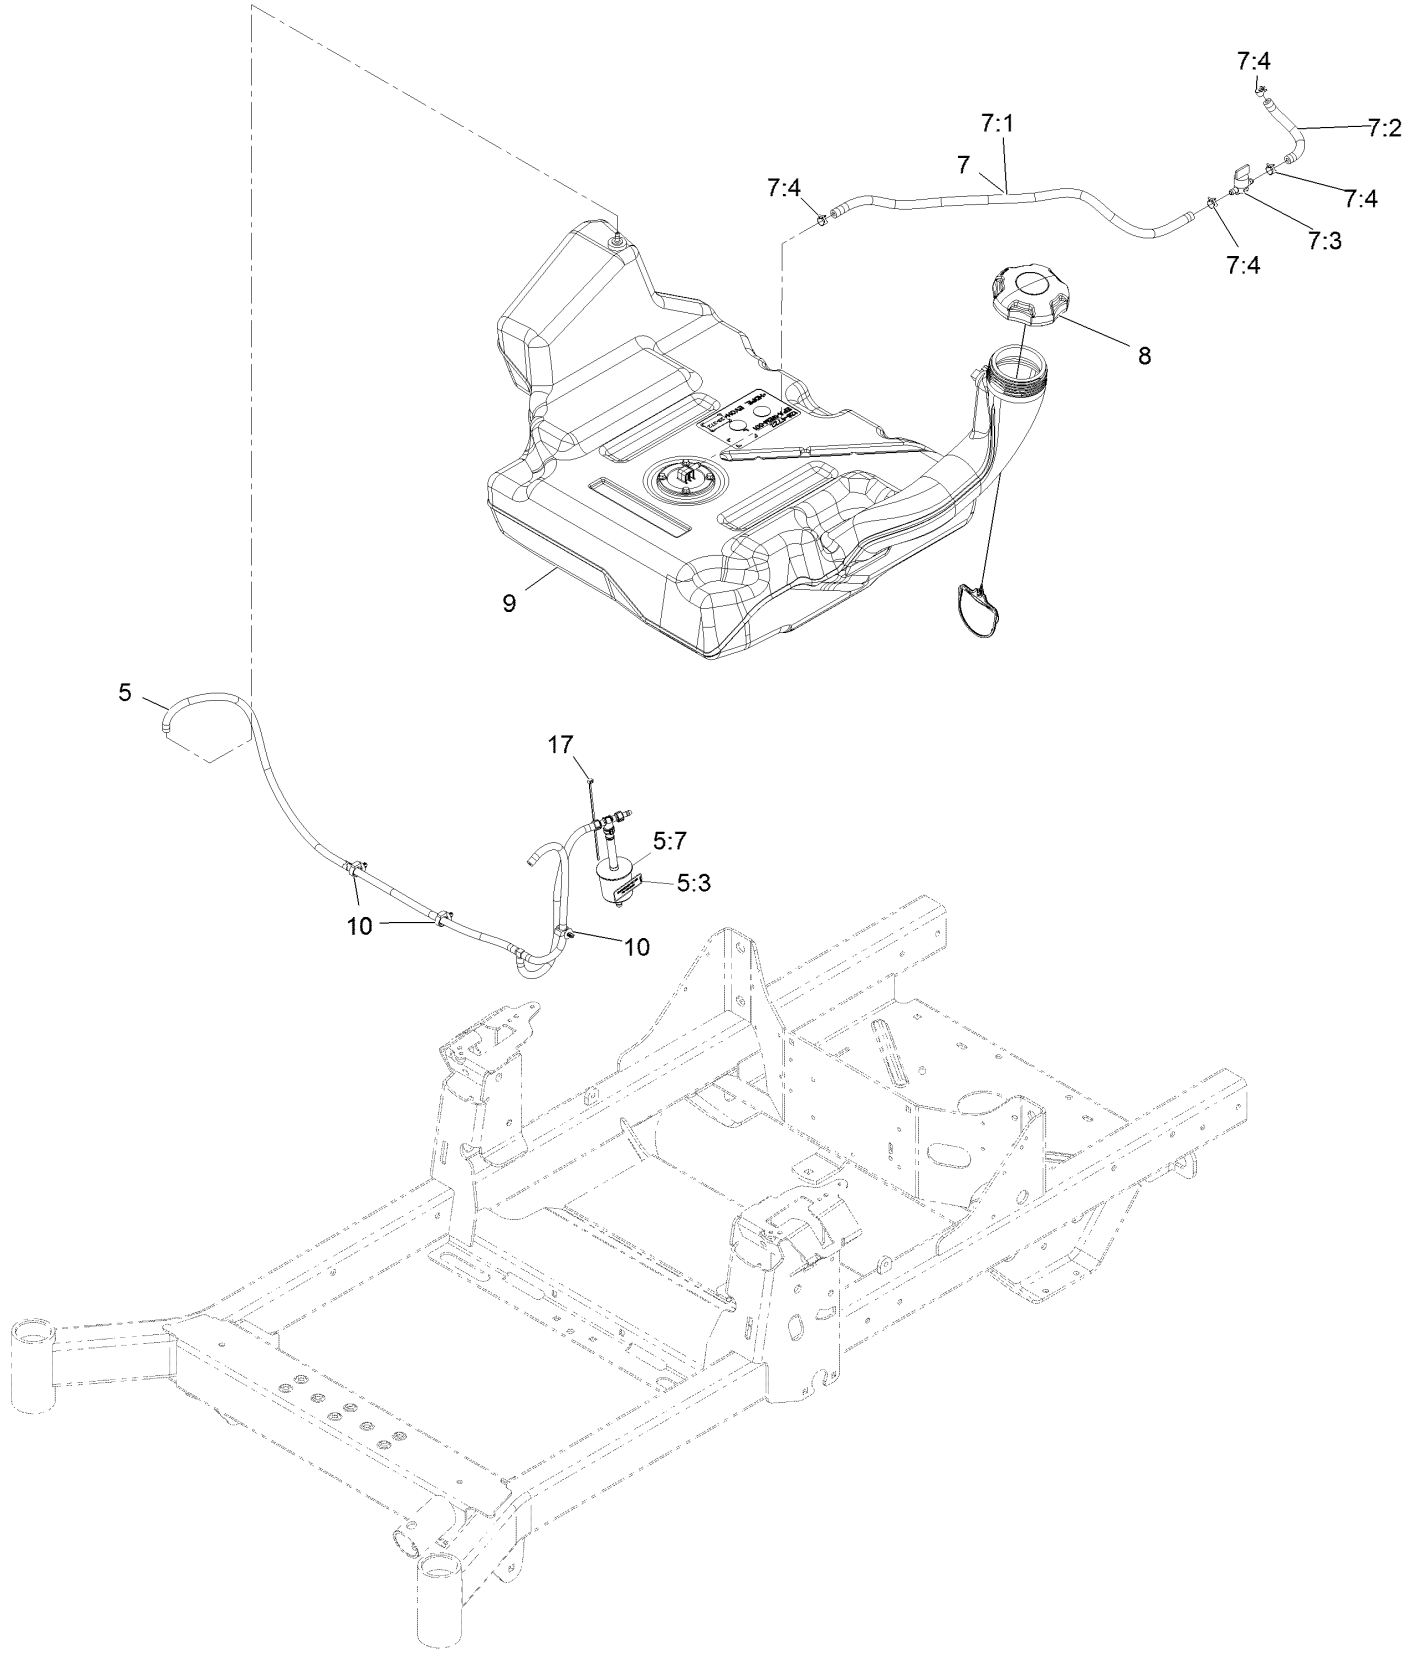

Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
5	126-8738	1	Vent Hose ASM
5:3	116-4769	1	Decal-Filter, Emissions
5:7	120-2235	1	Filter-Fuel
7	126-8740	1	Fuel Hose ASM
7:1	109-0302	1	Hose-Fuel Line 24"
7:2	109-0678	1	Hose-Fuel
7:3	1-603770	1	Valve-Fuel
7:4	2412-98	4	Clamp-Hose
8	135-4801	1	Cap-Fuel, Ratcheting
9	126-4724	1	Tank-Fuel
10	126-5523	3	Clip
17	1-303287	1	Tie-Cable 5 1/2 (Small)


Fuel Tank Assembly (cont.)

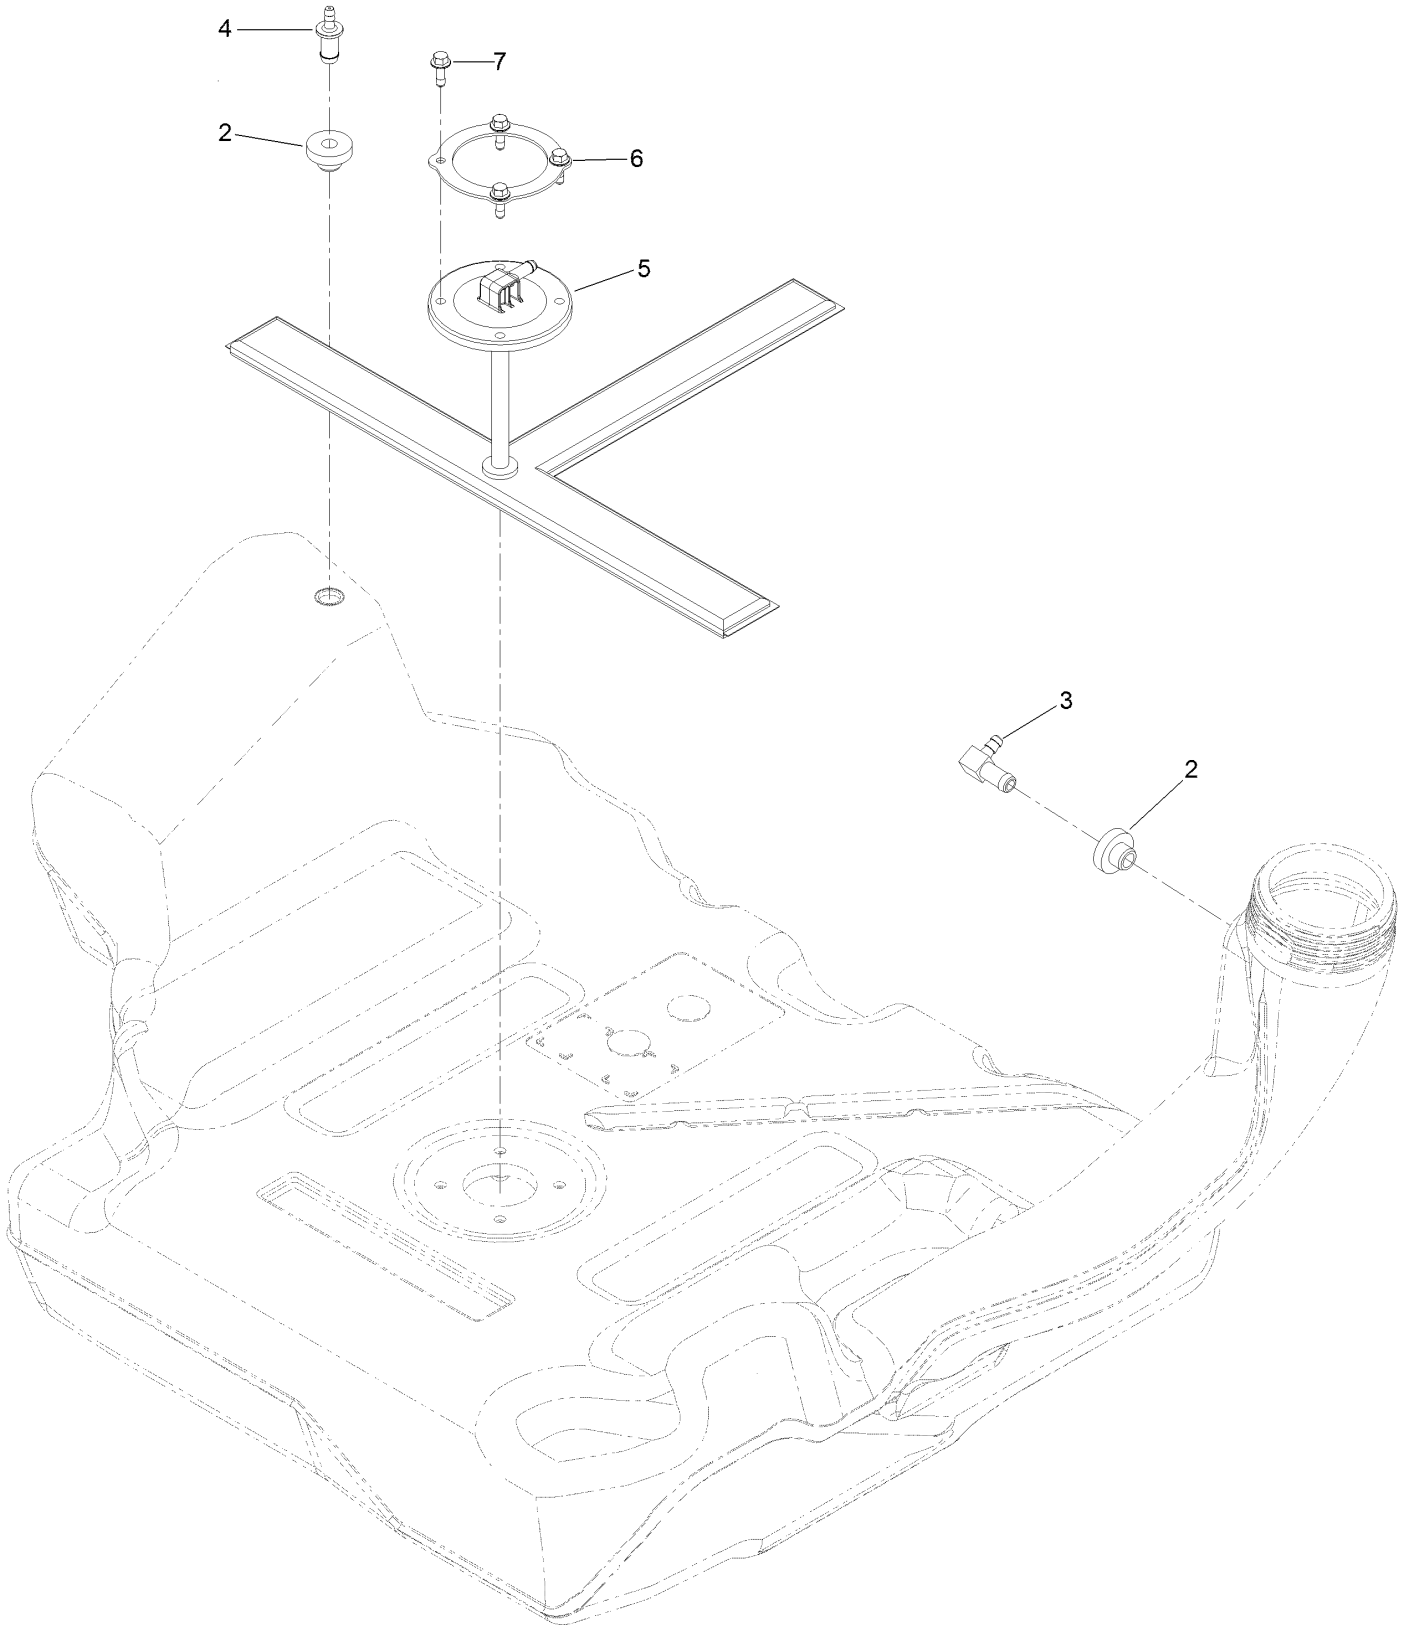

Fuel Tank Assembly (cont.) (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	2	Bushing
3	126-9057	1	Fitting-90 DEG
4	116-4630	1	Fitting-Orifice, Straight
5	126-5528	1	Pickup-Fuel
6	126-5527	1	Ring-Retainer
7	126-5525	4	Bolt

Engine Assembly

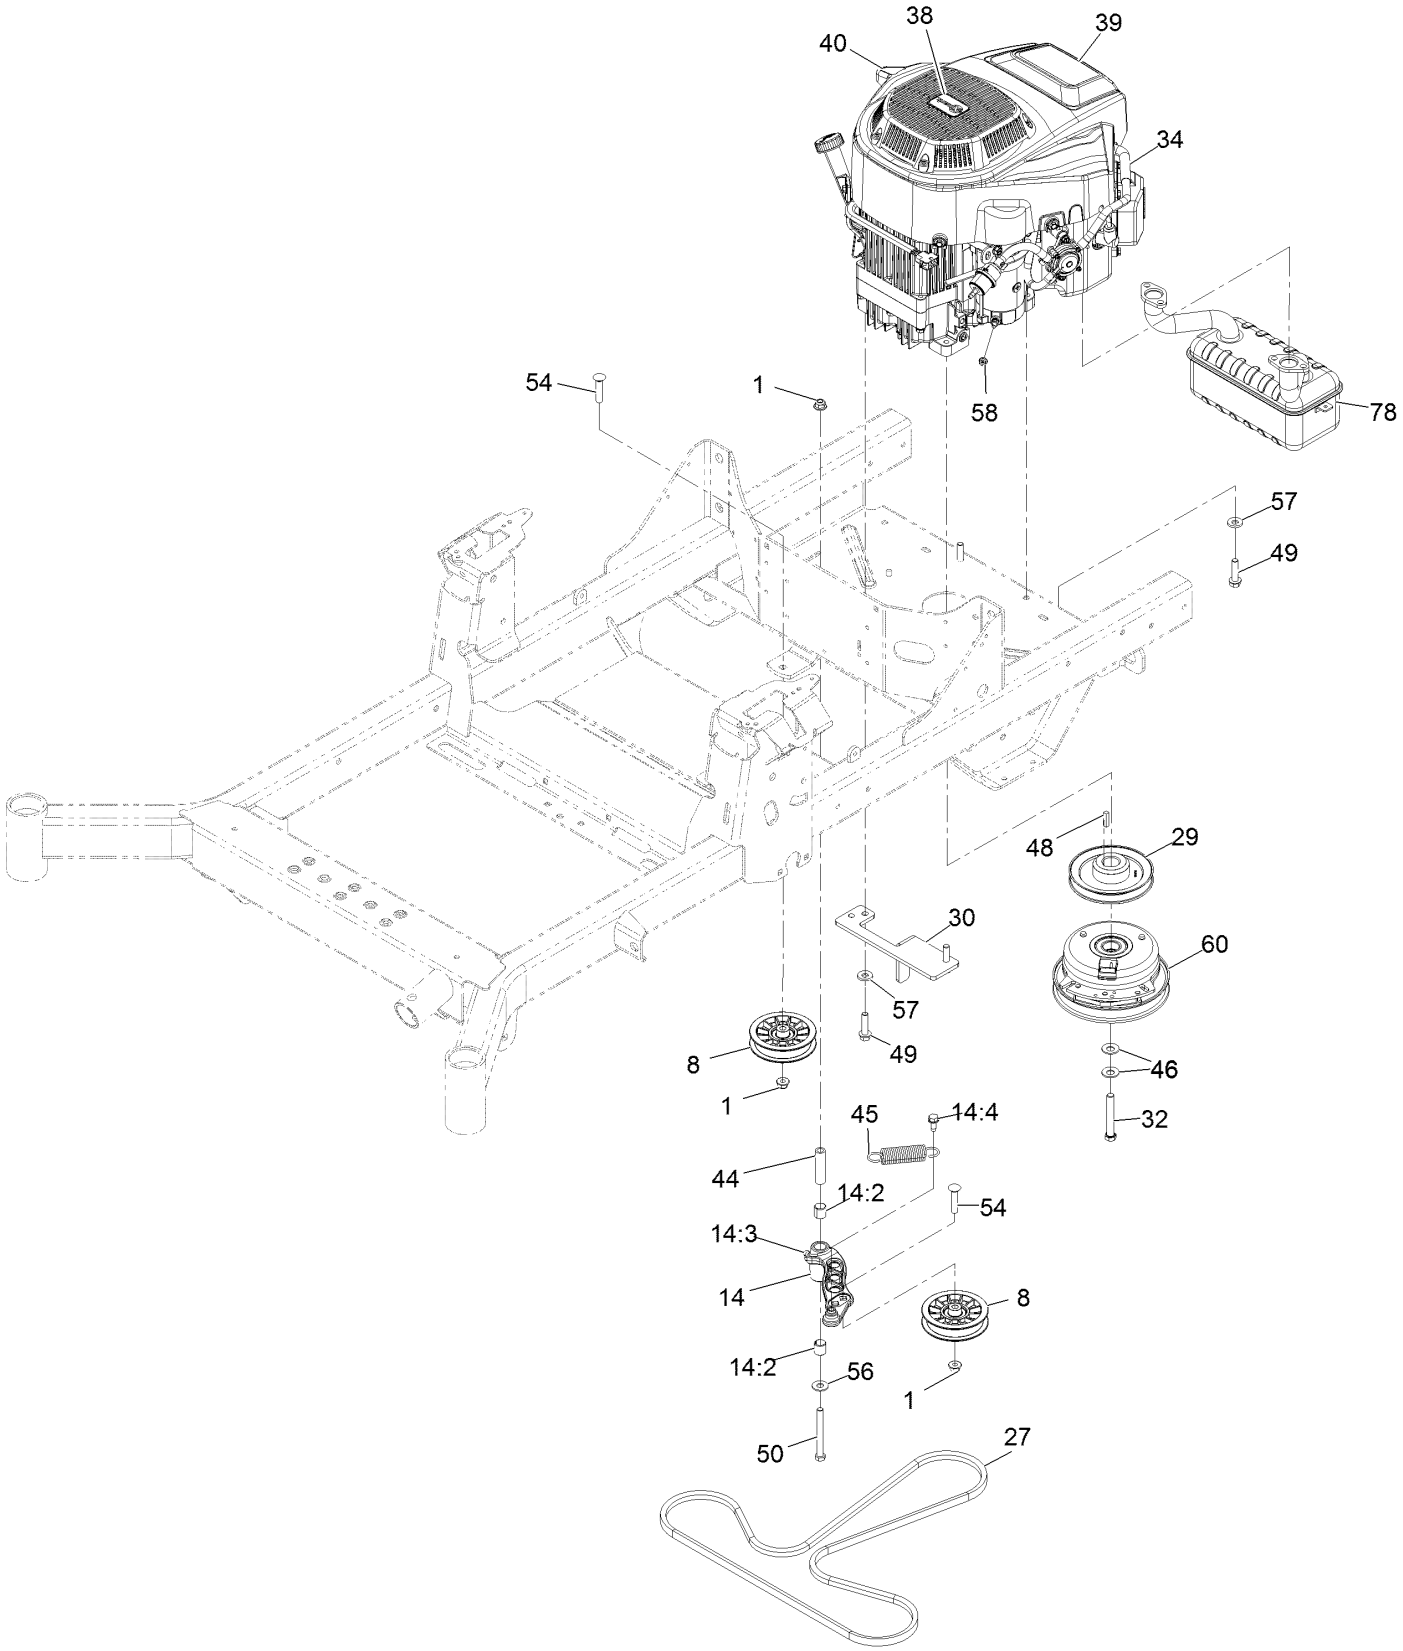



Engine Assembly (continued)


Ref.	Part Number	Qty.	Description
1	104-8301	3	Nut-Nyloc 3/8-16 Flg
8	116-2456	2	Pulley-Flat Idler
14	126-0973	1	Idler Arm ASM
14:2	1-513034	2	Sleeve-Bearing
14:3	302-40	1	Zerk-90° 1/4-28
14:4	32144-11	1	Screw-HWH 5/16-18 X 3/4 Tf
27	126-5993	1	Belt-V
29	135-0134	1	Sheave-Engine
30	126-6687-03	1	Anchor-Clutch
32	126-7198	1	Screw-HH 7/16-20 X 3 W/Loctite ●
34	136-7818	1	Engine-2P77F
38	131-1078	1	Decal
39	135-6447	1	Decal-Engine 708 V-Twin Exmark
40	131-1097	1	Decal-Drain, Oil
44	1-603384	1	Bushing-Pivot, Idler
45	1-603402	1	Spring-Extension
46	1-603610	2	Washer-Spring Disc 7/16
48	1-807259	1	Key-Machine 1/4 X 1/4 X 1
49	32144-102	4	Screw-HWH 3/8-16 X 1 1/2 Taptite
50	323-15	1	Screw-HH 3/8-16 X 3 1/2
54	3231-29	2	Bolt-Carriage 3/8-16 X 1 3/4
56	3256-4	1	Washer-3/8 Std
57	98-5975	4	Washer-Spring Disc 3/8
58	33003-00	1	Nut-Hex M6-1 Flg
60	126-8925	1	Clutch - 1.00 HD
78	130-6851	1	Muffler


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Fuel System Assembly

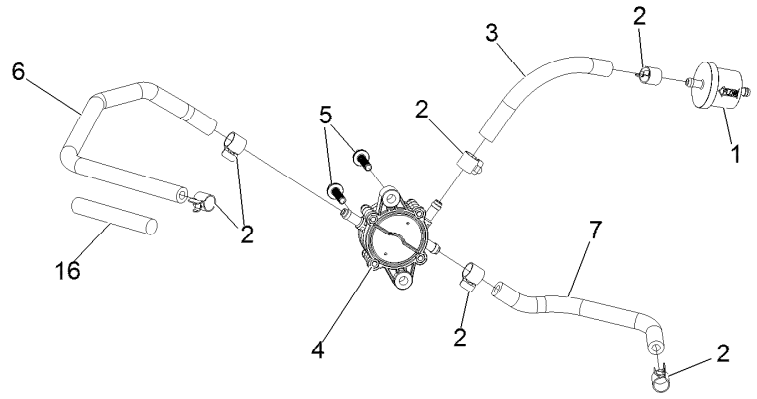

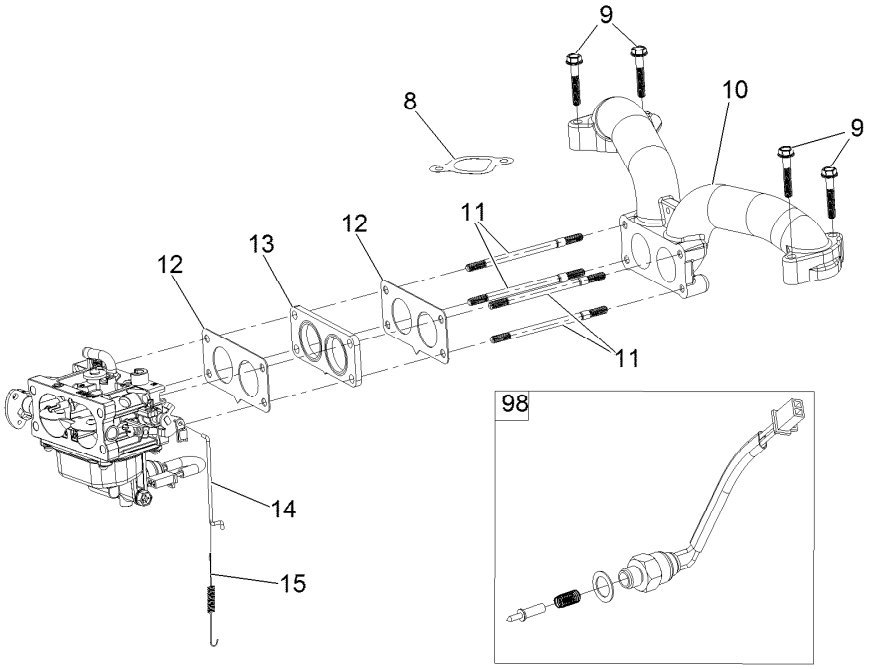

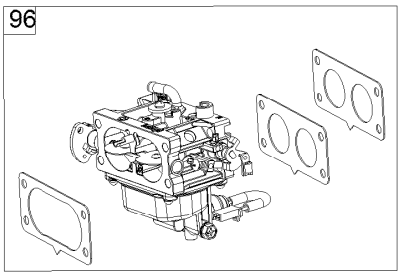

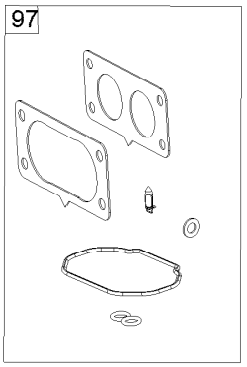


Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-1563	1	Filter-Fuel
2	120-4251	6	Clamp-Fuel Line
3	120-4371	1	Line-Fuel
4	127-9206	1	Pump-Fuel
5	120-4225	2	Screw-HHF
6	127-9205	1	Hose-Fuel
7	127-9207	1	Hose-Fuel
8	127-9230	2	Gasket-Intake
9	120-4284	4	Screw-HHF
10	127-9244	1	Manifold-Intake
11	127-9245	4	Stud
12	127-9246	2	Gasket-Carburetor
13	127-9247	1	Insulator-Carburetor
14	133-9963	1	Linkage-Throttle
15	133-9964	1	Spring-Return, Throttle
16	127-9355	1	Sleeve-Fuel Line Protector
96	136-7840	1	Carburetor Replacement Kit
97	127-9290	1	Carburetor Repair Kit
98	127-9292	1	Solenoid Kit
99	136-7837	1	High Altitude Kit ●

● Not illustrated

Carburetor Assembly

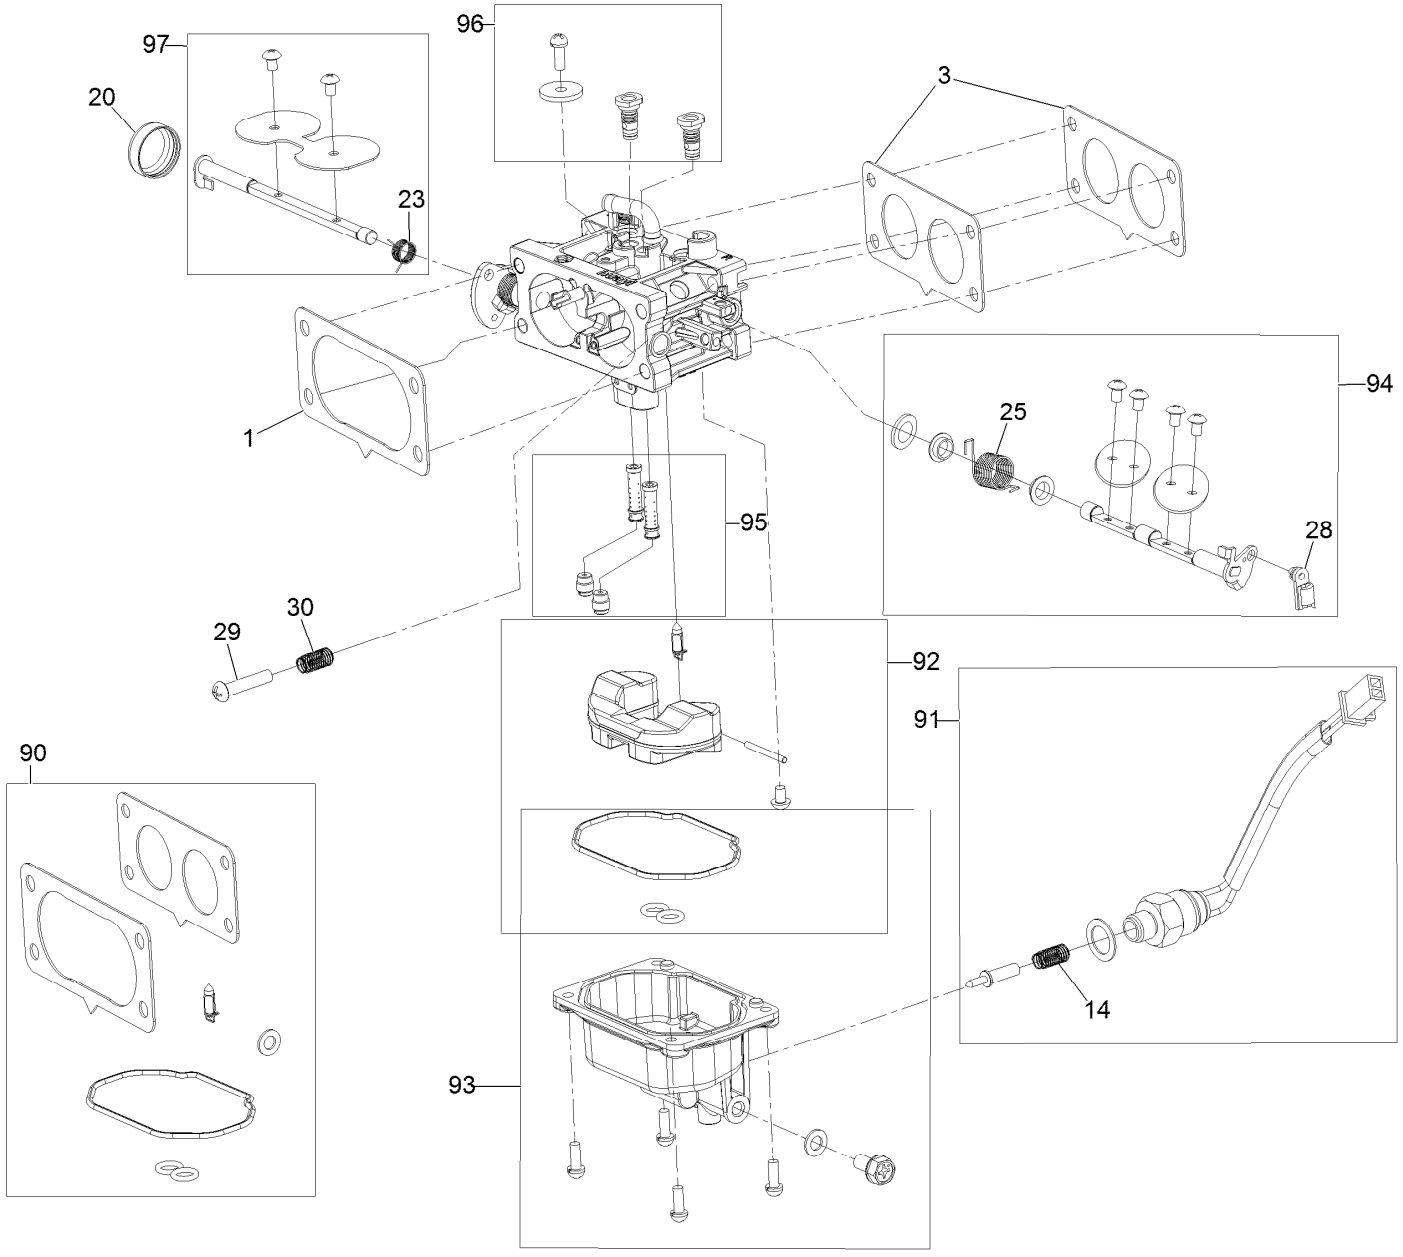


Carburetor Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9251	1	Gasket-Carburetor
3	127-9246	2	Gasket-Carburetor
14	127-9319	1	Spring
20	127-9325	1	Cover-Shaft, Choke
23	127-9328	1	Spring
25	127-9330	1	Spring
28	127-9333	1	Clamp-Lock
29	127-9334	1	Screw-PPH
30	127-9335	1	Spring

Ref.	Part Number	Qty.	Description
90	127-9290	1	Carburetor Repair Kit
91	127-9292	1	Solenoid Kit
92	127-9340	1	Float Kit
93	127-9341	1	Bowl Kit
94	133-9817	1	Throttle Shaft Kit
95	136-7844	1	Nozzle And Jet Kit
96	136-7899	1	Idle Jet Kit
97	127-9345	1	Choke Shaft Kit


Air Intake and Filtration Assembly

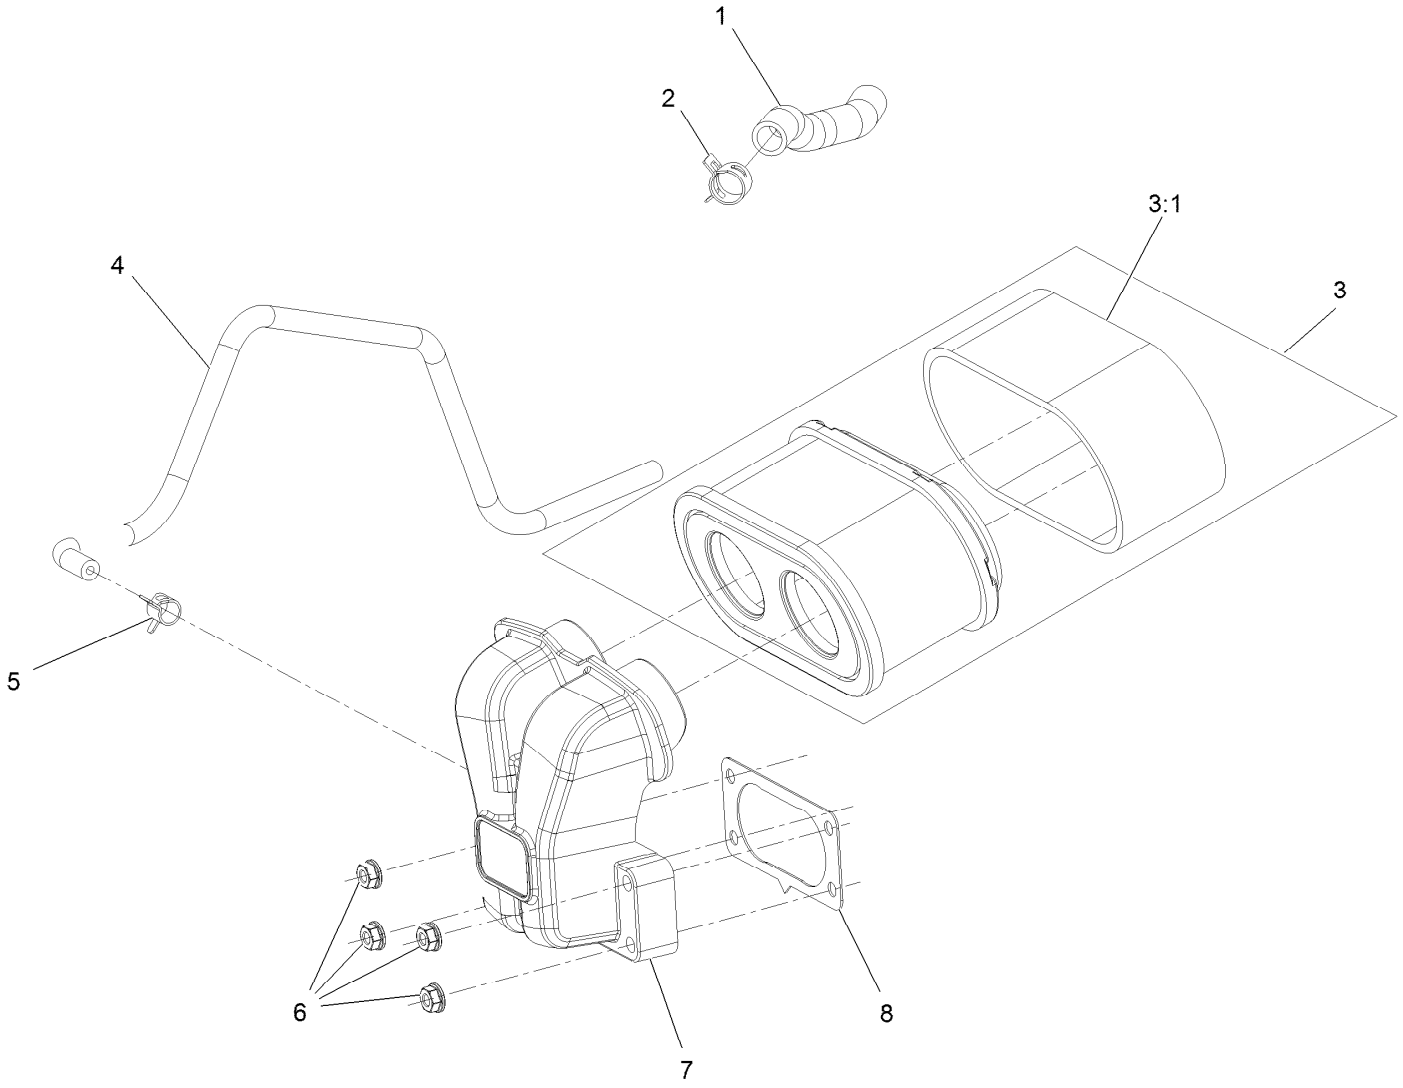

Air Intake and Filtration Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9235	1	Tube-Breather
2	127-9234	2	Clamp-Hose
3	136-7806	1	Air Filter Kit
3:1	136-7804	1	Prefilter
4	127-9253	1	Hose-Fuel
5	127-9187	1	Clamp-Hose
6	120-4236	4	Nut-Flange
7	127-9047	1	Manifold-Filter, Air
8	127-9251	1	Gasket-Carburetor


Ignition and Cooling Fan

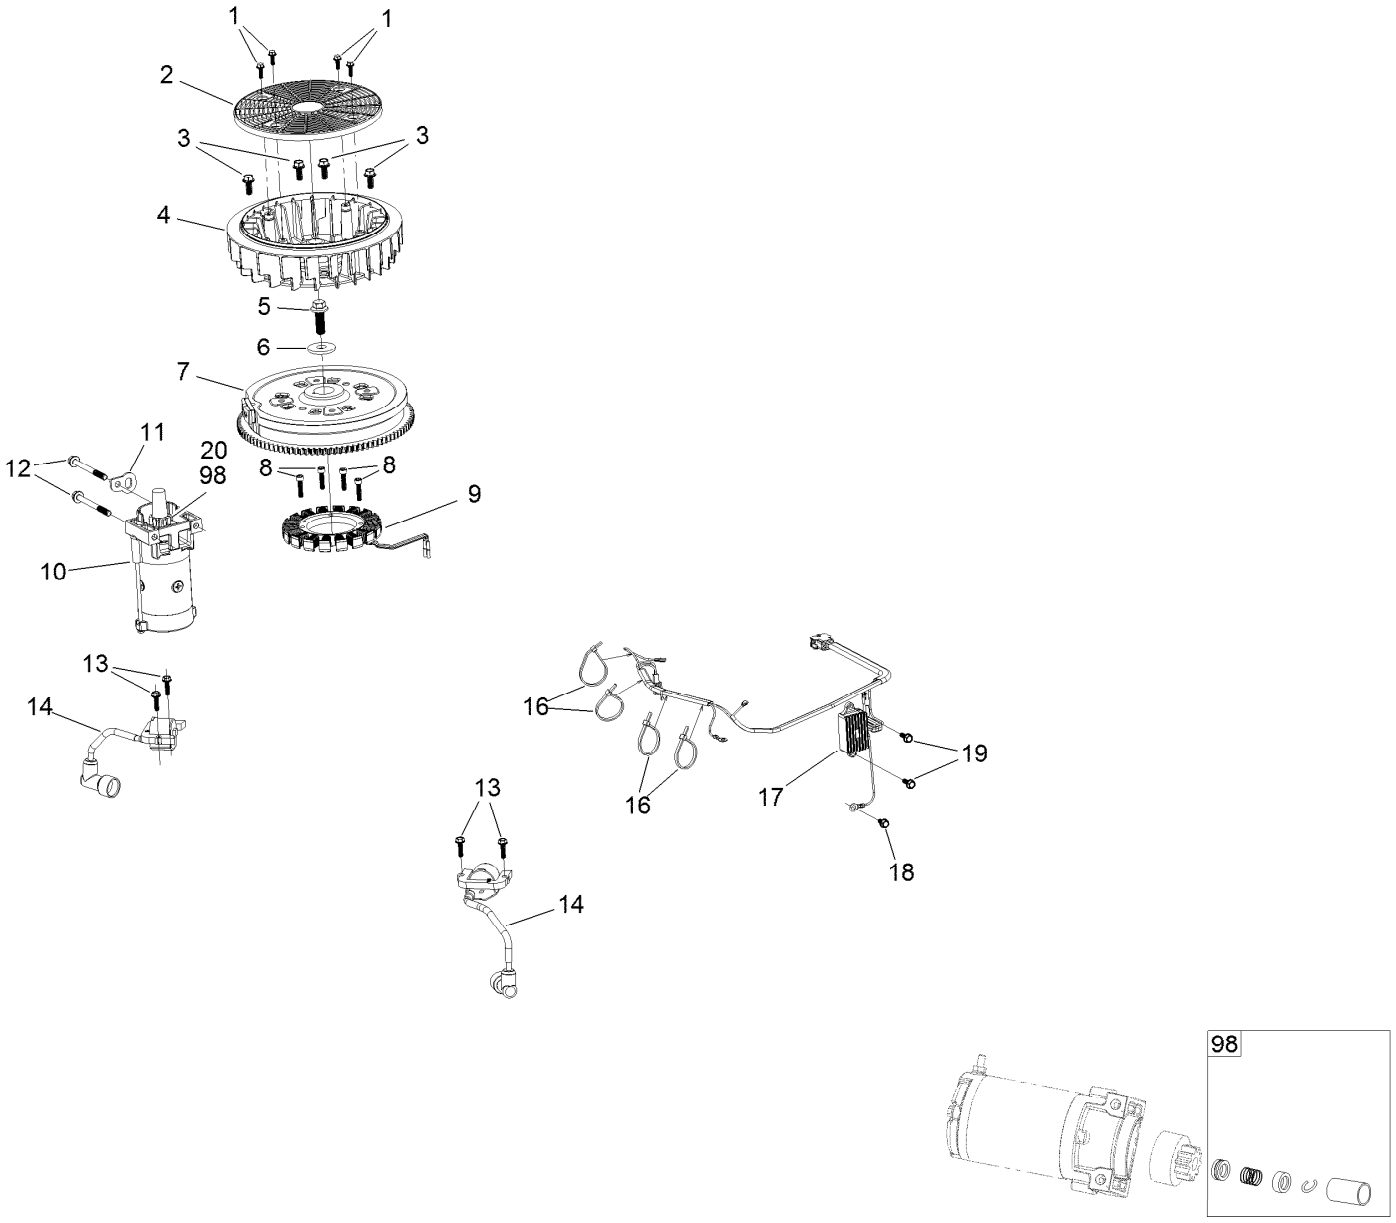

Ignition and Cooling Fan (continued)

Ref.	Part Number	Qty.	Description
1	127-9197	4	Screw-HWH
2	127-9198	1	Screen-Rotating
3	127-9199	4	Screw-HWH
4	127-9200	1	Fan-Cooling
5	127-9201	1	Screw-HWH
6	127-9202	1	Washer-Spring
7	127-9306	1	Flywheel
8	127-9210	4	Screw-HSH
9	136-7876	1	Alternator
10	136-7880	1	Motor-Starter
11	127-9208	1	Bracket-Lift
12	120-4231	2	Screw-HHF
13	121-0007	4	Bolt-Flange
14	136-7883	2	Ignition Coil ASM
16	127-9220	4	Tie-Zip
17	136-7879	1	Regulator-Voltage, W/Harness
18	120-4216	1	Screw-HHF
19	120-4232	2	Screw-HHF
20	133-1562	1	Pinion-Starter
98	133-1566	1	Starter Repair Kit


Crankcase and Crankshaft Assembly

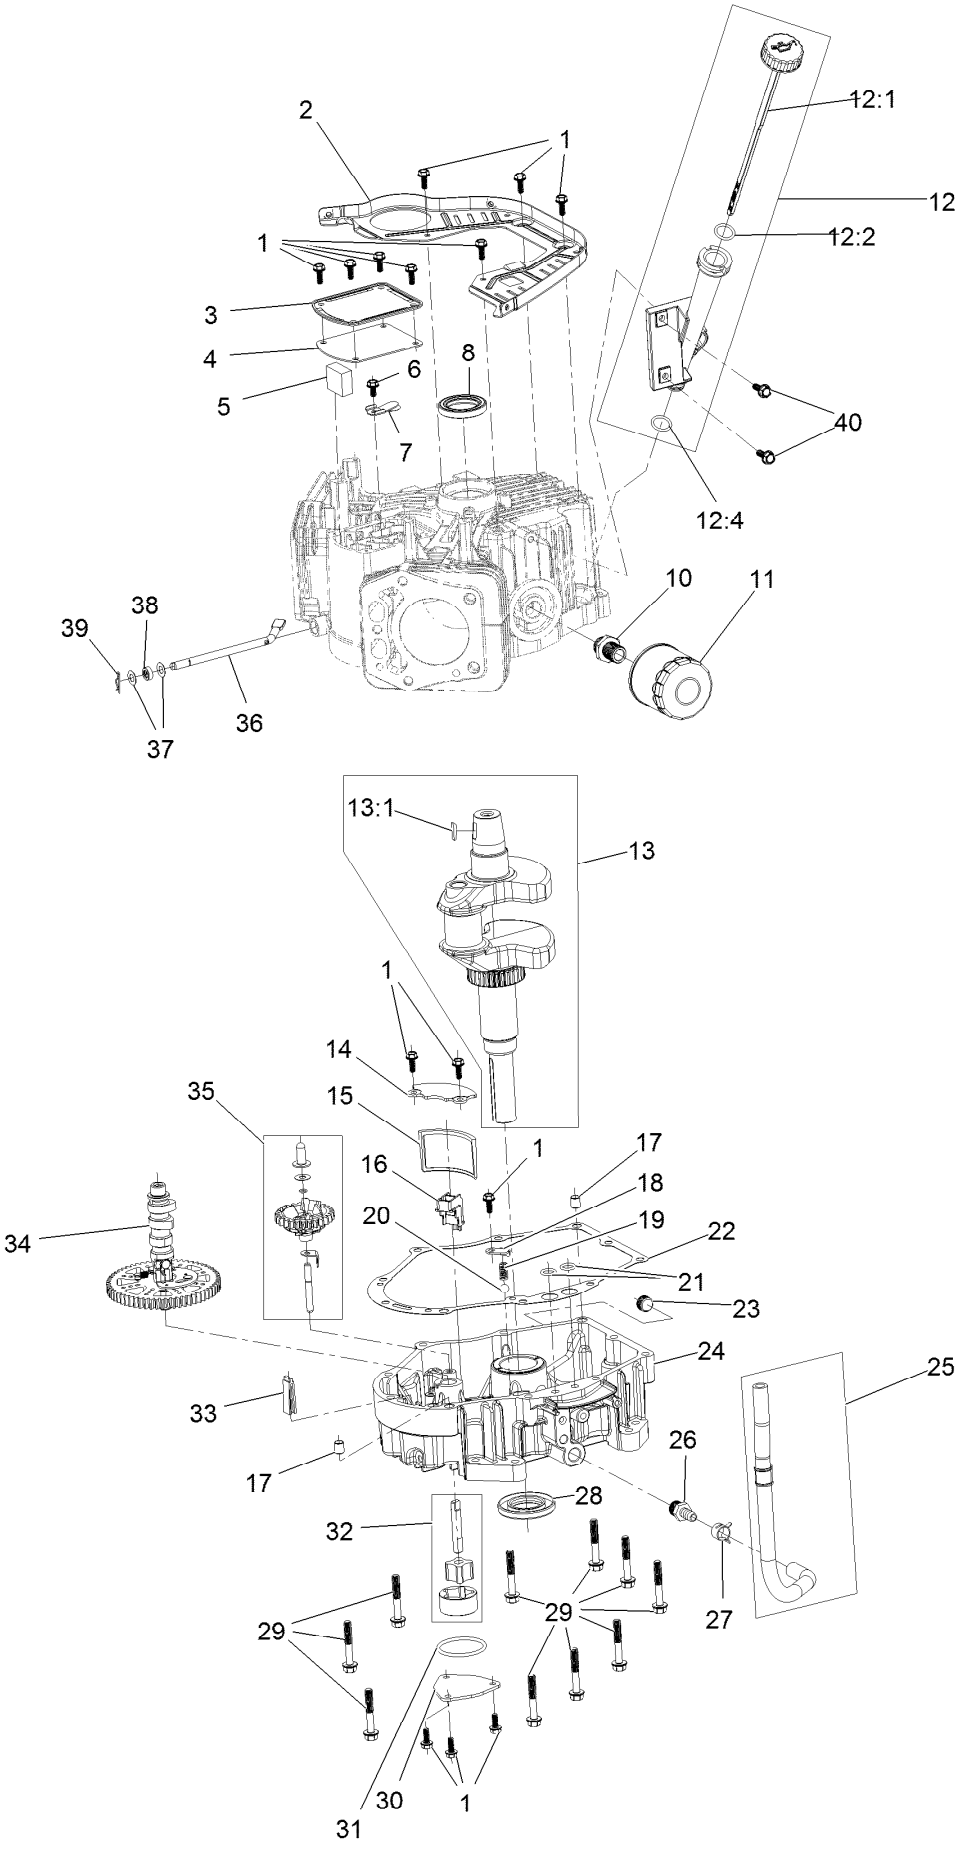

Crankcase and Crankshaft Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-4232	14	Screw-HHF
2	127-9212	1	Baffle
3	127-9213	1	Cover-Breather
4	127-9214	1	Gasket-Breather
5	127-9215	1	Filter-Breather
6	120-4216	1	Screw-HHF
7	127-9217	1	Valve-Breather
8	120-4267	1	Seal-Oil
10	136-7884	1	Adaptor-Filter, Oil
11	136-7848	1	Filter-Oil
12	127-9218	1	Oil Tube ASM
12:1	127-9283	1	Dipstick
12:2	127-9284	1	O-Ring
12:4	127-9286	1	O-Ring
13	127-9255	1	Crankshaft
13:1	120-4320	1	Key-Woodruff
14	127-9261	1	Cover-Screen, Oil
15	127-9262	1	Screen-Oil
16	127-9263	1	Retainer-Screen
17	120-4274	2	Pin-Dowel
18	127-9264	1	Plate-Retainer
19	127-9265	1	Spring
20	127-9266	1	Valve-Ball
21	120-4262	2	O-Ring
22	127-9267	1	Gasket-Cover, Crankcase
23	133-9805	1	Plug-Drain
24	133-9806	1	Cover-Crankcase
25	127-9293	1	Oil Drain Hose ASM
26	127-9275	1	Fitting-Hose
27	127-9276	1	Clamp-Hose
28	127-9271	1	Seal
29	121-0473	10	Screw-HHF
30	127-9274	1	Cover-Oil Pump
31	127-9273	1	O-Ring
32	127-9272	1	Oil Pump ASM
33	120-4275	1	Deflector-Oil, Rubber
34	133-1568	1	Camshaft
35	136-7882	1	Governor ASM
36	127-9238	1	Shaft-Governor
37	120-4258	2	Washer-Plain
38	120-4257	1	Seal-Oil
39	120-4256	1	Pin-Hair
40	120-4232	2	Screw-HHF


Governor Control Assembly

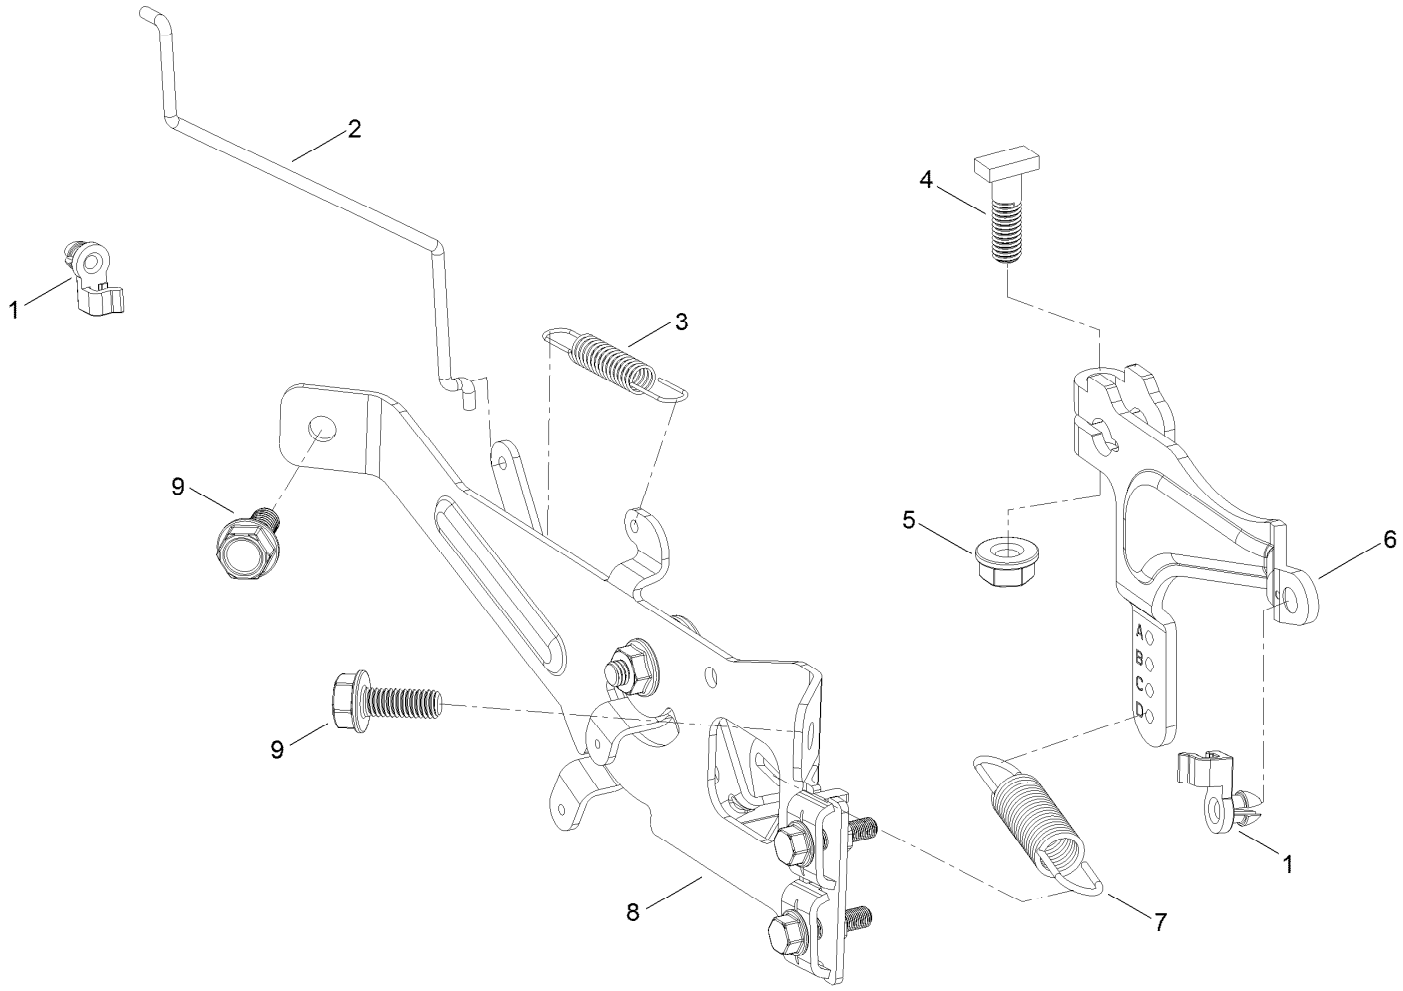

Governor Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9250	2	Clip-Linkage
2	127-9242	1	Linkage-Choke
3	127-9241	1	Spring-Governor
4	120-4238	1	Bolt-Arm, Governor
5	120-4236	1	Nut-Flange
6	133-9961	1	Arm-Governor
7	133-9962	1	Spring-Governor
8	133-1570	1	Control Plate ASM
9	120-4232	2	Screw-HHF


Piston and Cylinder Head Assembly

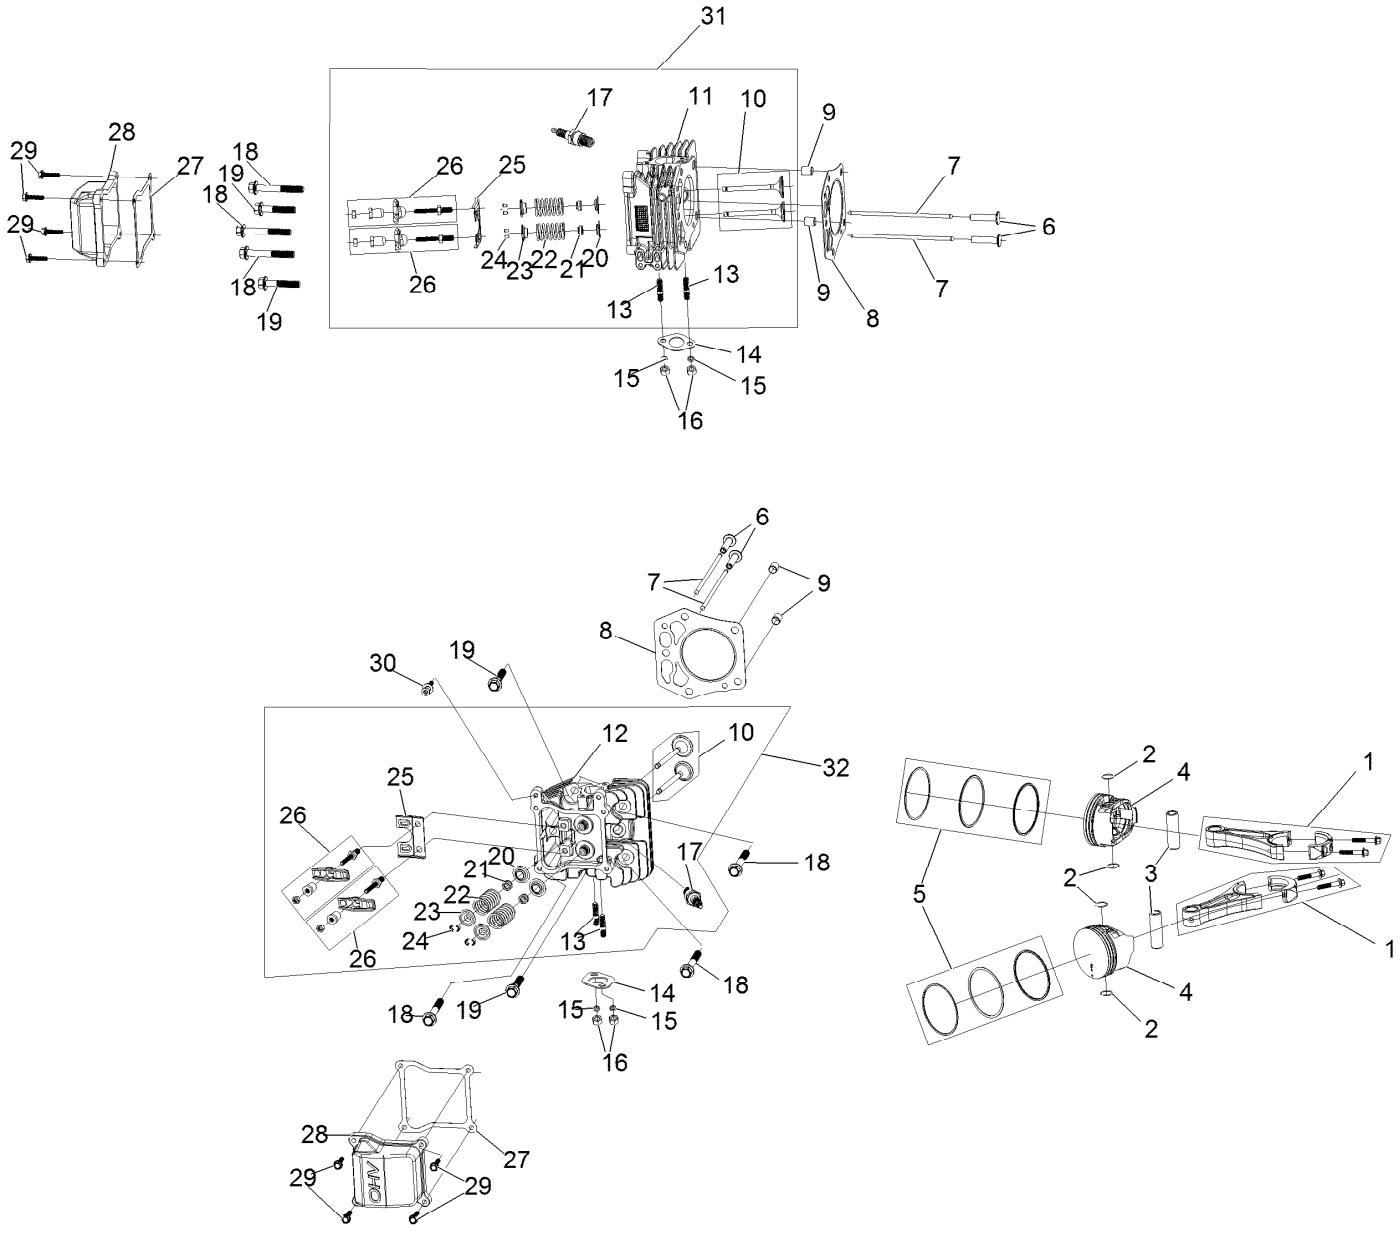

Piston and Cylinder Head Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9256	2	Connecting Rod ASM
2	127-9258	4	Clip-Pin, Piston
3	127-9257	2	Pin-Piston
4	127-9259	2	Piston
5	127-9260	2	Piston Ring Set
6	127-9224	4	Lifter-Valve
7	127-9225	4	Rod-Push
8	127-9226	2	Gasket-Head, Cylinder
9	127-9227	4	Pin-Dowel
10	127-9228	2	Valve Set
11	133-9802	1	Head-Cylinder, Right
12	133-9804	1	Head-Cylinder, Left
13	121-0464	4	Stud-Exhaust
14	120-4317	2	Gasket-Exhaust
15	127-9279	4	Washer-Lock, Split
16	121-0199	4	Nut-HH
17	81-3250	2	Spark Plug
18	127-9231	6	Screw-HWH
19	127-9232	4	Screw-HWH
20	120-4303	4	Seat-Spring, Valve
21	120-4304	4	Seal-Stem, Valve
22	120-4305	4	Spring-Valve
23	120-4306	4	Retainer-Spring, Valve
24	120-4307	8	Keeper-Valve
25	127-9233	2	Plate-Guide, Push Rod
26	136-7881	4	Rocker Arm ASM
27	127-9295	2	Gasket-Valve Cover
28	127-9050	2	Cover-Valve
29	120-4225	8	Screw-HHF
30	120-4214	1	Screw-Shoulder, HH
31	136-7891	1	Complete Right Head ASM
32	136-7892	1	Complete Left Head ASM

Blower Housing Assembly

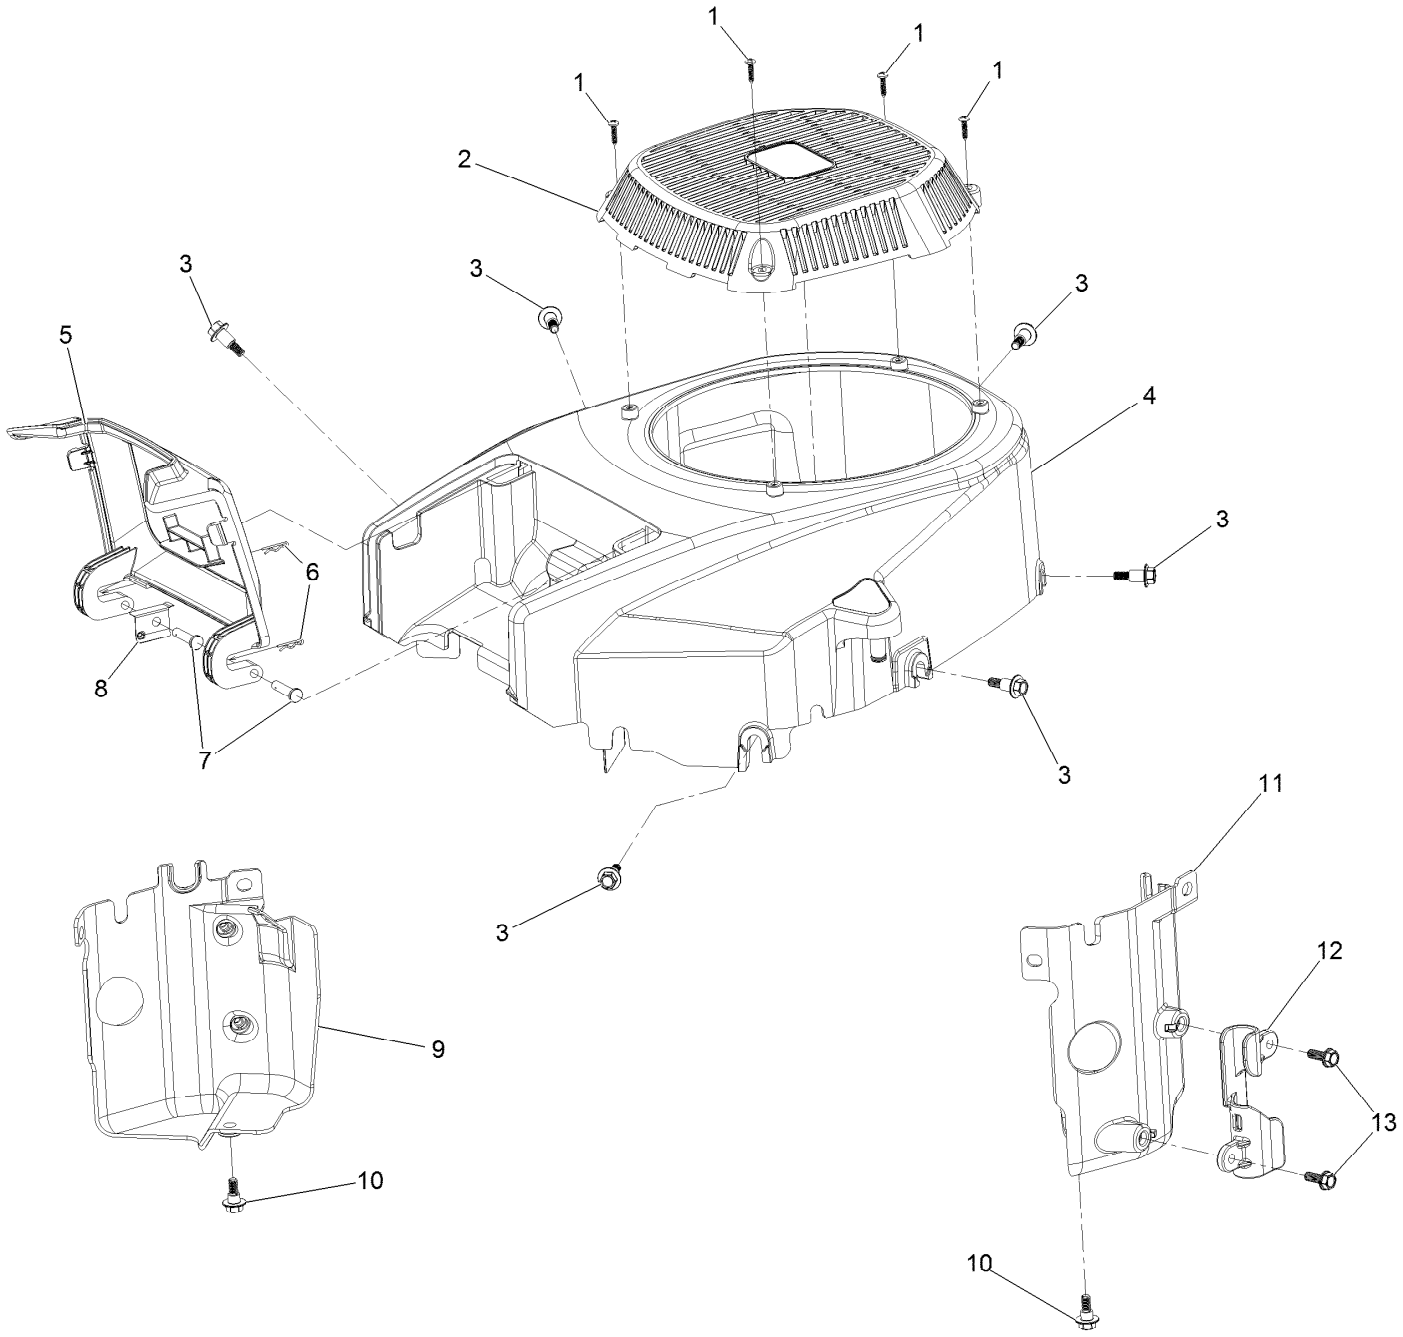


Blower Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-1571	4	Screw-PPH, Plastic
2	127-9045	1	Cover-Fan
3	127-9196	6	Screw-Shoulder, HWH
4	133-1572	1	Shroud-Engine
5	127-9046	1	Door-Filter, Air
6	127-9280	2	Pin-Hair
7	127-9282	2	Pin
8	127-9281	1	Plate-Spring
9	136-7877	1	Baffle-Air, Left
10	120-4210	2	Screw-Shoulder, HHF
11	136-7878	1	Baffle-Air, Right
12	127-9287	1	Cleat-Hose
13	120-4232	2	Screw-HHF

Gasket and Seal Kit


1

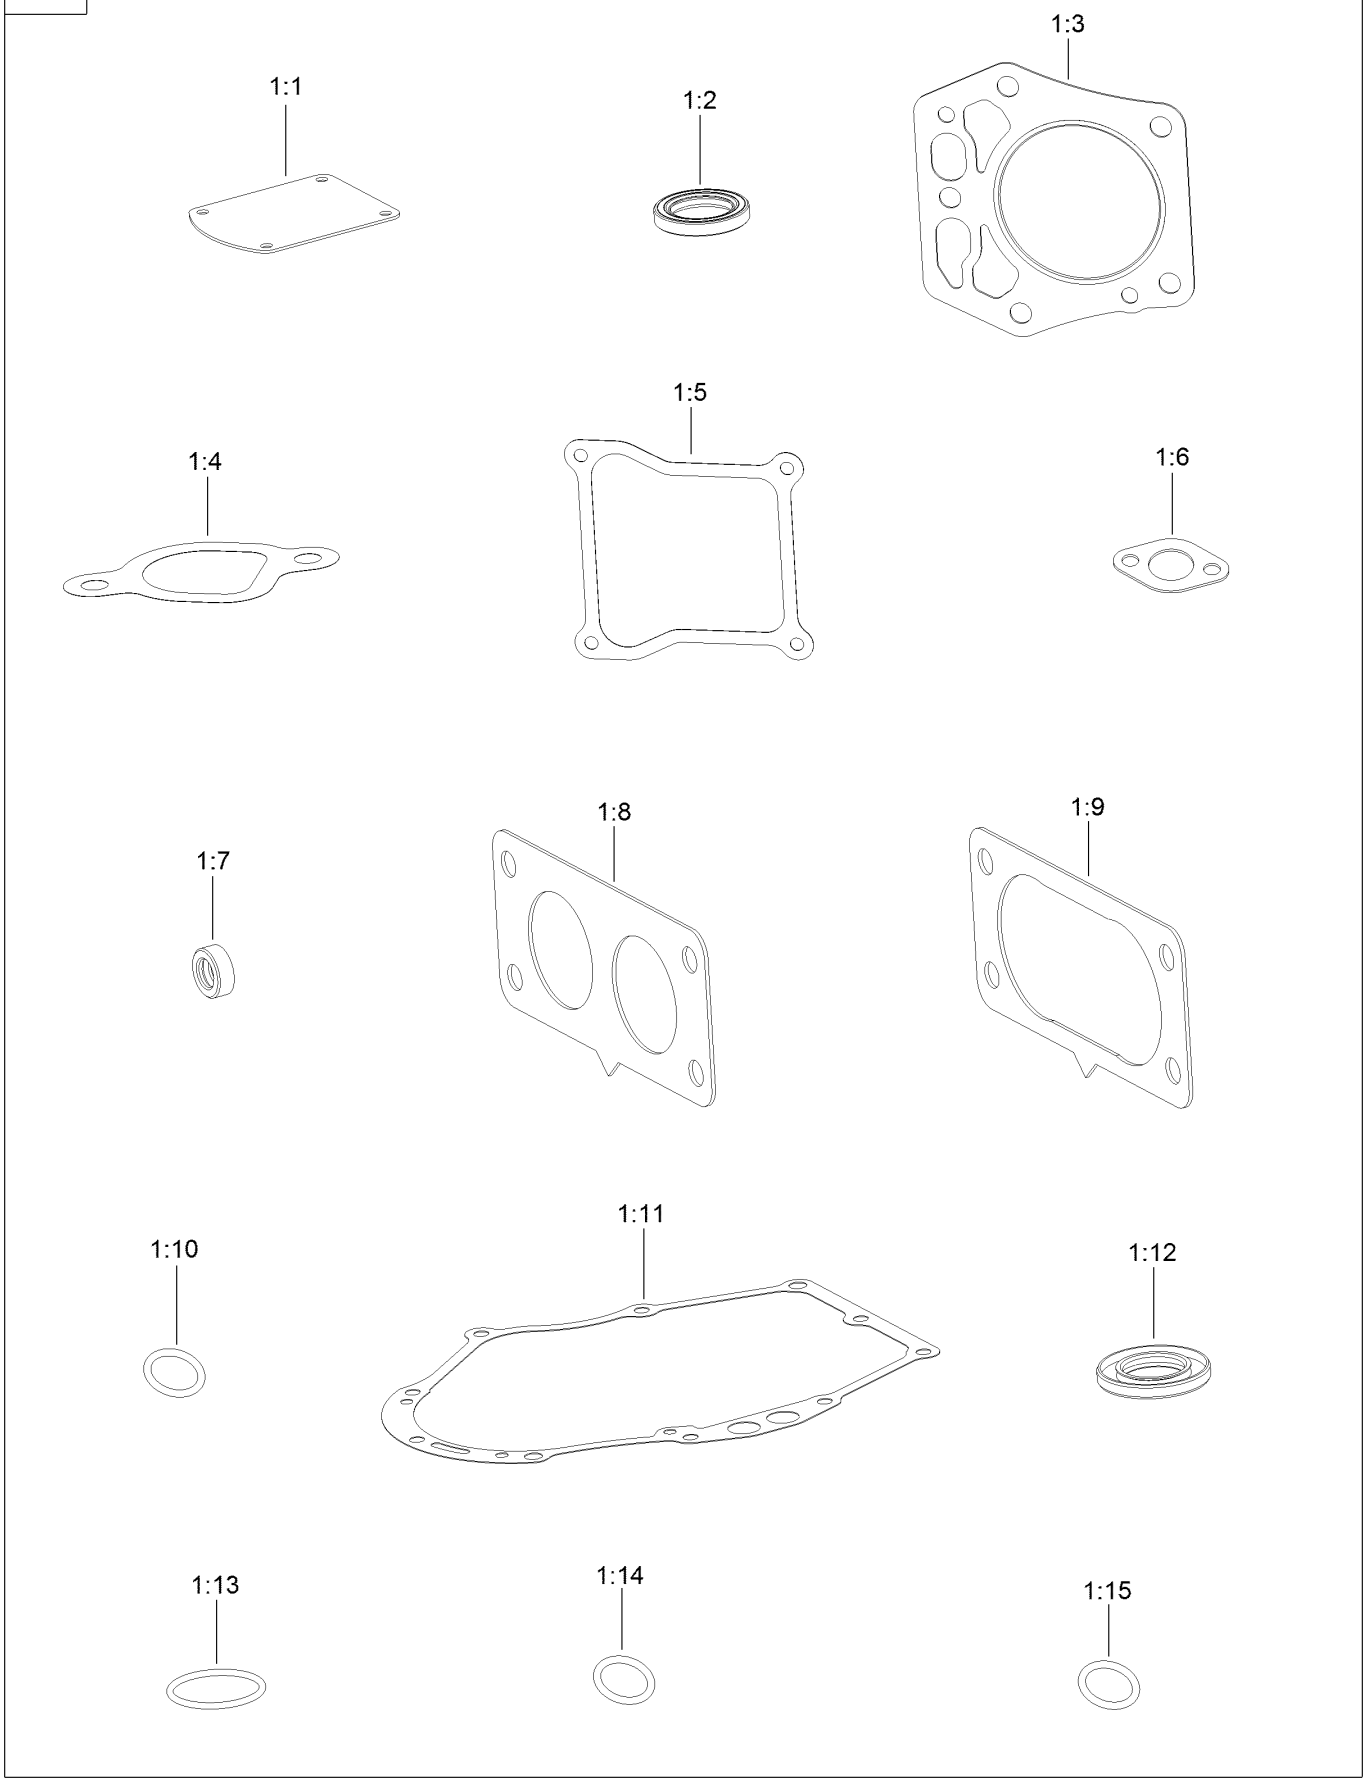

Gasket and Seal Kit (continued)

Ref.	Part Number	Qty.	Description
1	127-9296	1	Gasket And Seal Kit
1:1	127-9214	1	Gasket-Breather
1:2	120-4267	1	Seal-Oil
1:3	127-9226	2	Gasket-Head, Cylinder
1:4	127-9230	2	Gasket-Intake
1:5	127-9295	2	Gasket-Valve Cover
1:6	120-4317	2	Gasket-Exhaust
1:7	120-4257	1	Seal-Oil
1:8	127-9246	2	Gasket-Carburetor
1:9	127-9251	1	Gasket-Carburetor
1:10	120-4262	2	O-Ring
1:11	127-9267	1	Gasket-Cover, Crankcase
1:12	127-9271	1	Seal
1:13	127-9273	1	O-Ring
1:14	127-9284	1	O-Ring
1:15	127-9286	1	O-Ring


Rear Wheel Assembly

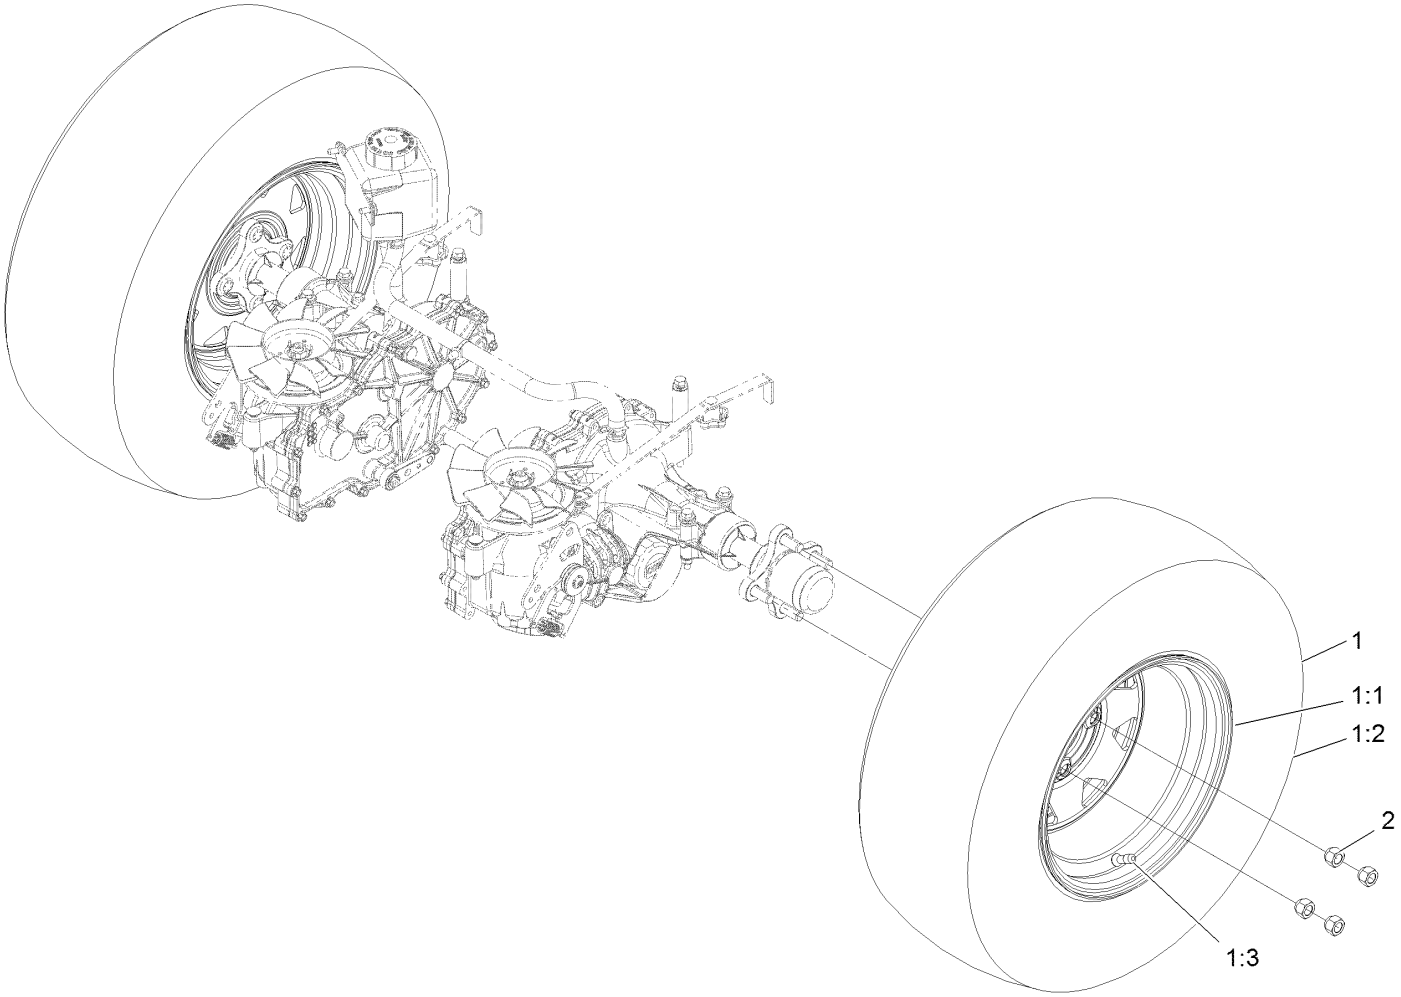

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4866	2	Wheel And Tire ASM
1:1	126-2877	1	Wheel Rim 12X8.5
1:2	126-4874	1	Tire
1:3	232-27	1	Stem-Valve
2	242-50	8	Nut-Lug

Transaxle Assembly

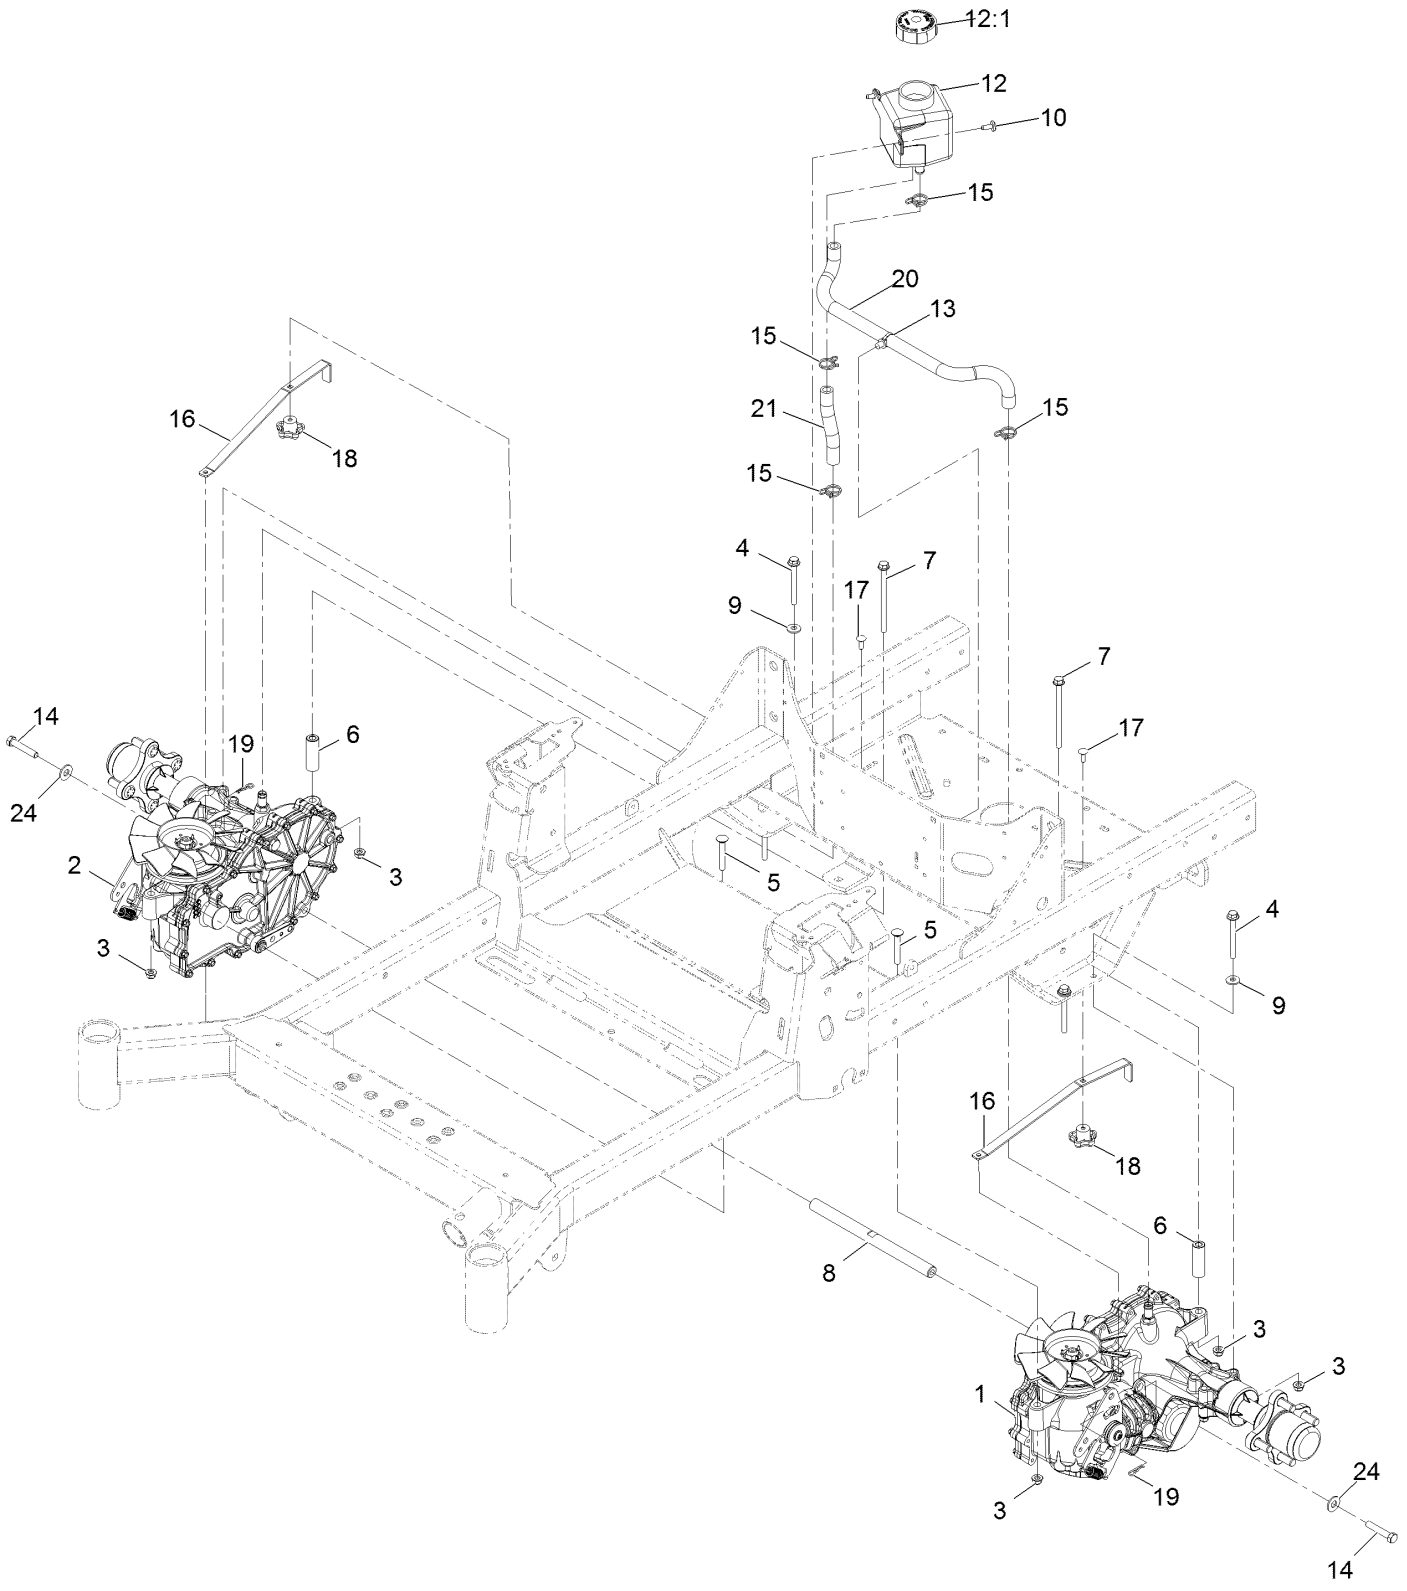


Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-0140	1	LH Transaxle ASM
2	135-0139	1	RH Transaxle ASM
3	104-8300	8	Nut-Nyloc 5/16-18 Flg
4	126-4687	4	Screw-HHF
5	3230-7	2	Bolt-Carriage 5/16-18 X 2 1/4
6	116-5809	2	Spacer-Hydro
7	126-5896	2	Screw HHF
8	116-6833	1	Shaft-Spacer
9	1-303334	4	Washer-Spring Disc 5/16
10	126-6266	2	Screw-1/4-20 X .65 Torx Plus
12	109-2250	1	Tank-HYD
12:1	109-3320	1	Cap-Reservoir, HYD
13	32180-118	1	Clip-Tie
14	94-7972	2	Screw-HH W/Loctite ●
15	126-0327	4	Clamp-Hose
16	109-5395	2	Arm-Bypass, Hydro
17	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
18	108-6402	2	Knob-Handle
19	1-806003	2	Hairpin-Cotter
20	126-5668	1	Hose-Hydraulic
21	126-5669	1	Hose-Hydraulic
24	3256-4	2	Washer-3/8 Std

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

LH Transaxle Assembly

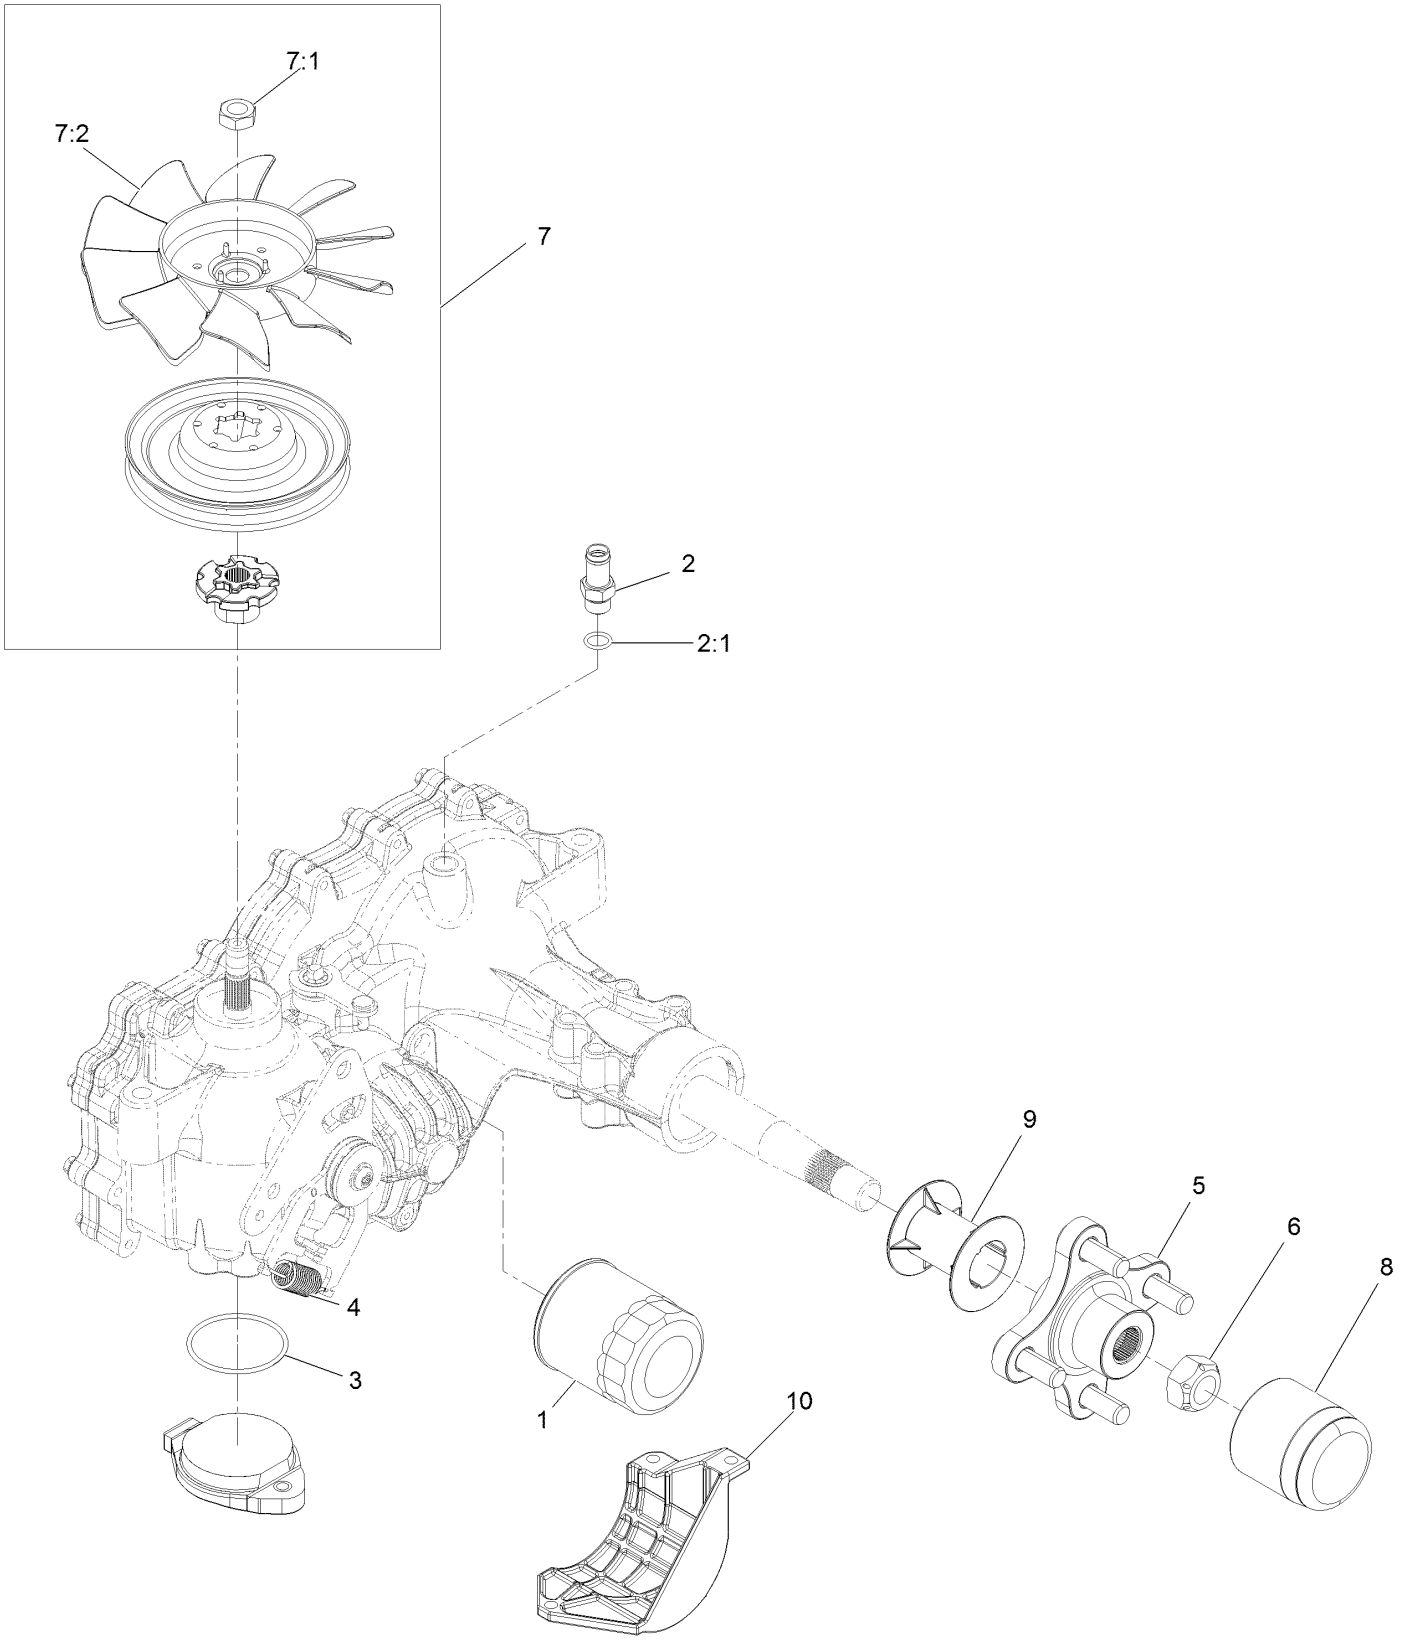


LH Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Filter-Hydraulic
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O-Ring-Charge Seal Cover
4	109-5592	1	Spring
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	135-7347	1	Fan And Pulley Kit
7:1	116-9714	1	Nut-HJ
7:2	126-0226	1	Fan
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7979	1	Guard-Filter, LH
99	135-3604	1	Brake Shaft Seal Kit
99	109-3537	1	Seal Kit ●

● Not illustrated

RH Transaxle Assembly

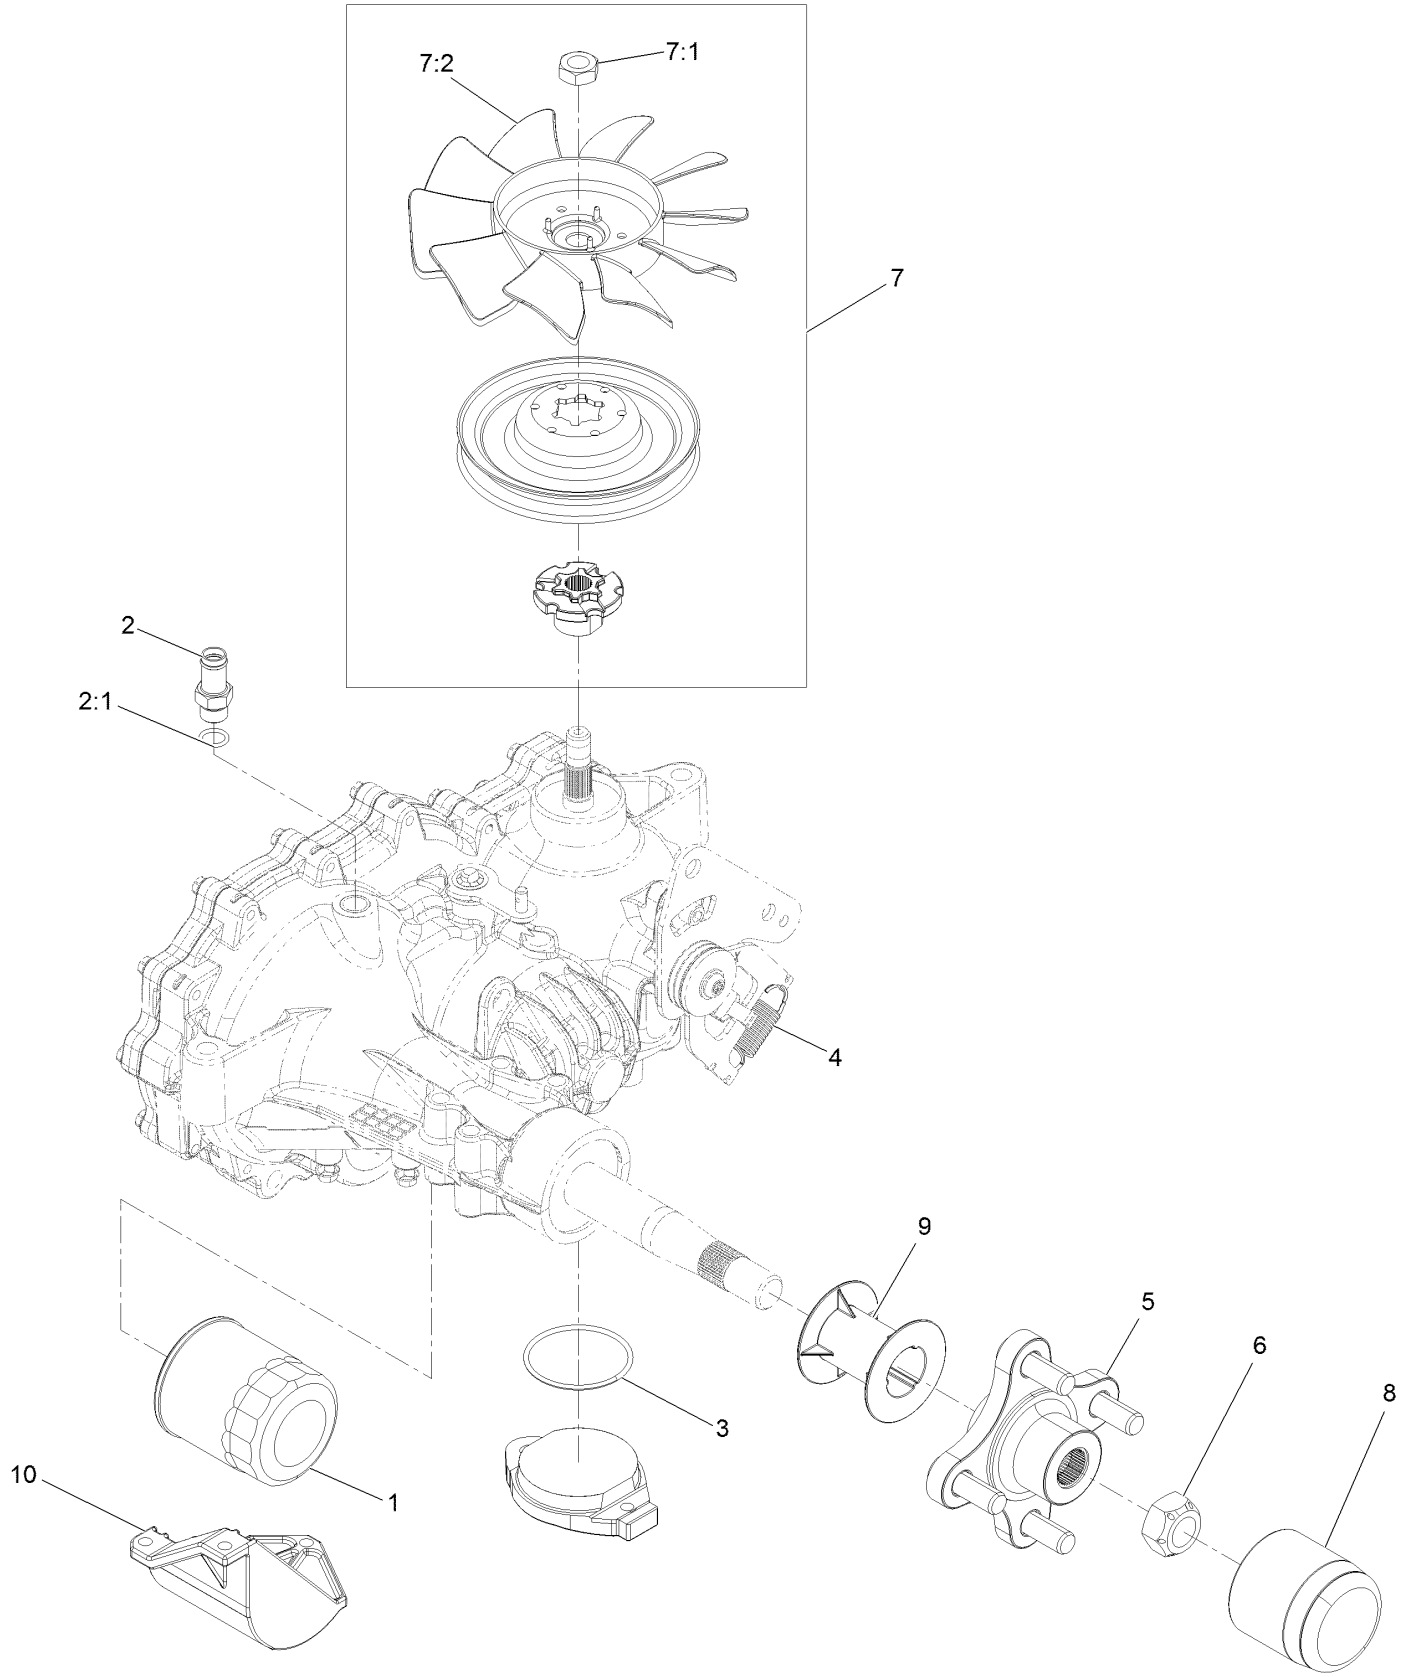


RH Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Filter-Hydraulic
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O-Ring-Charge Seal Cover
4	109-5592	1	Spring
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	135-7347	1	Fan And Pulley Kit
7:1	116-9714	1	Nut-HJ
7:2	126-0226	1	Fan
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7981	1	Guard-Filter, RH
99	135-3604	1	Brake Shaft Seal Kit
99	109-3537	1	Seal Kit ●

● Not illustrated

Electrical Assembly

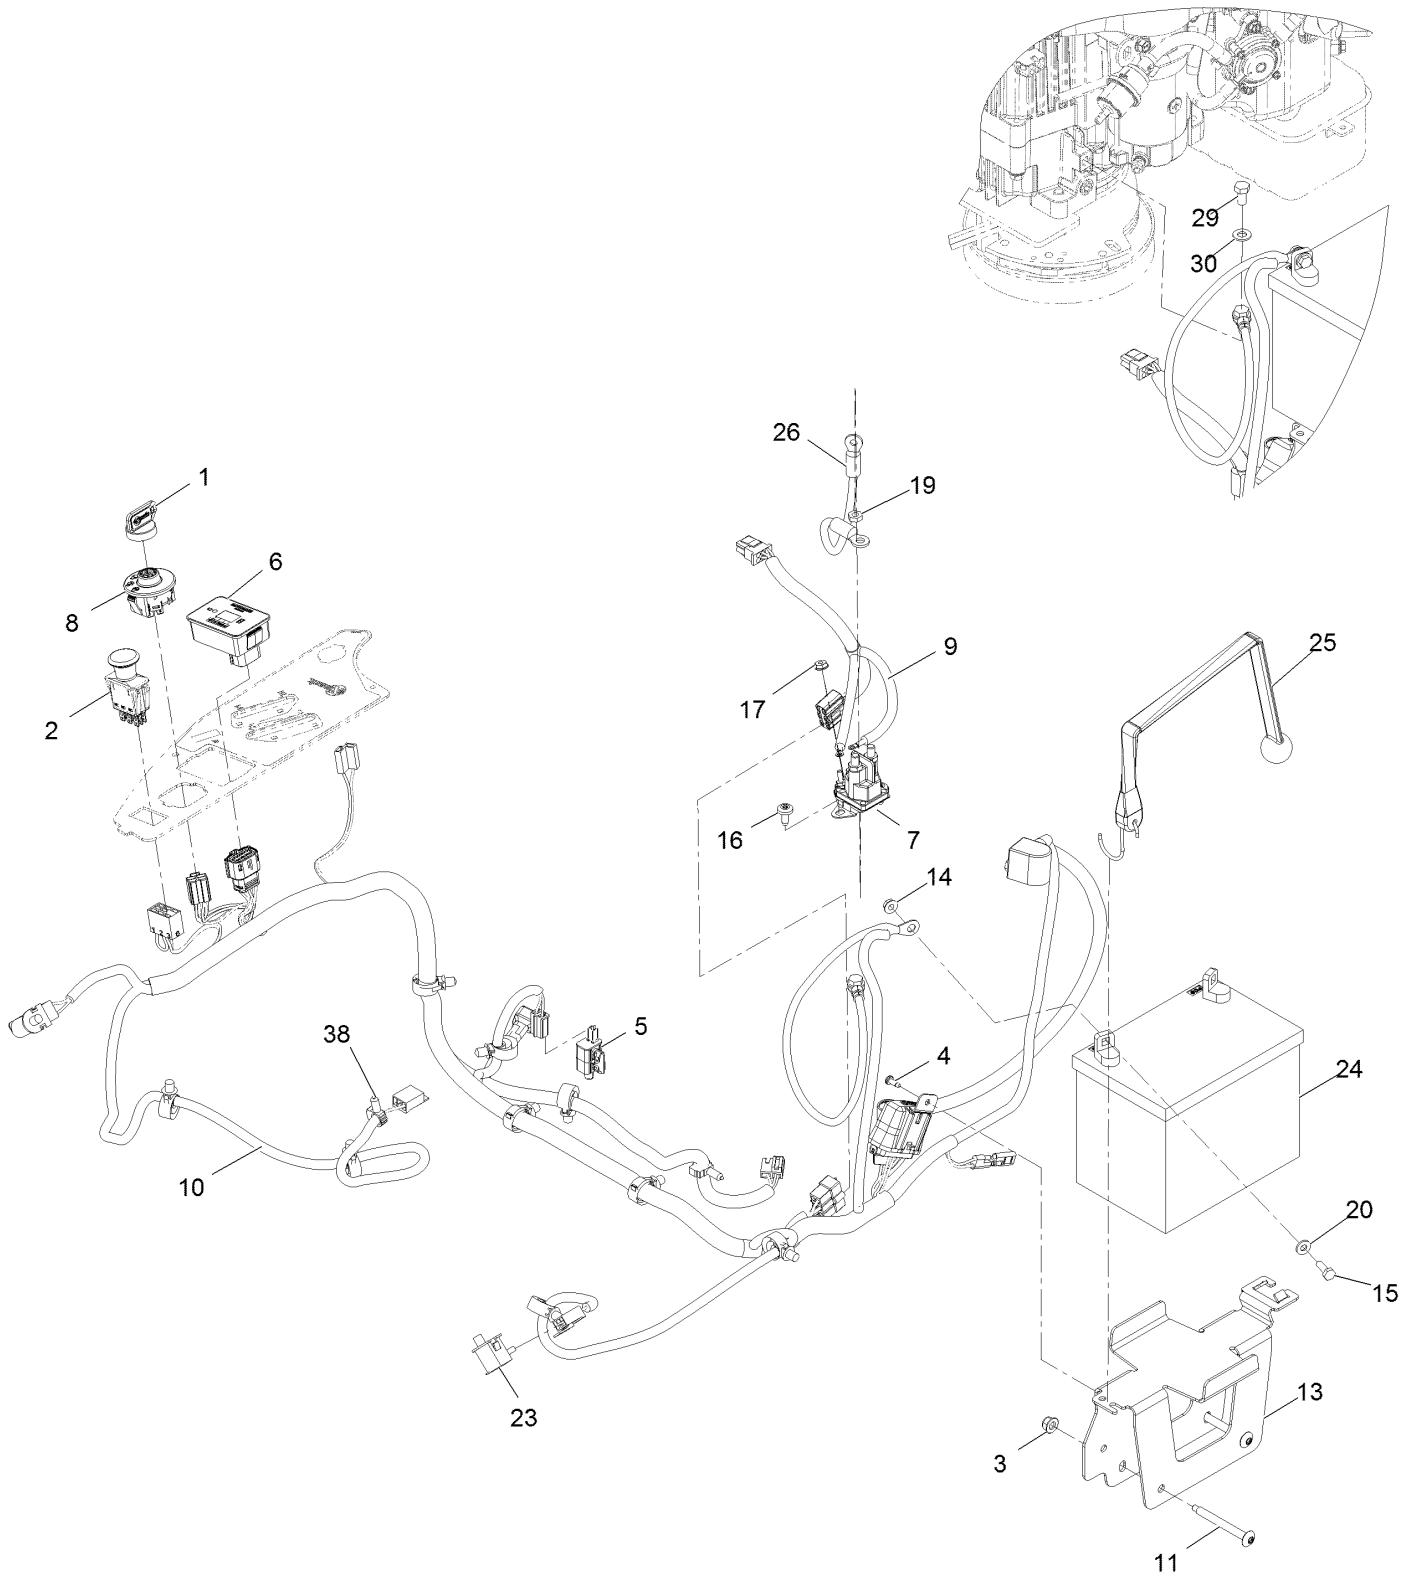


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-603511	1	Key-Ignition
1	103-2106	1	Key-Exmark Logo
2	103-5221	1	Switch-PTO
3	104-8300	2	Nut-Nyloc 5/16-18 Flg
4	105-6849	1	Screw-Tph #10-24 X 1/2 Tf
5	110-6765	1	Switch
6	116-5609	1	Module ASM
7	117-1197	1	Solenoid
8	137-4100	1	Switch-Ignition
9	126-5036	1	Adapter-Harness, Wire
10	126-5803	1	Harness-Wire ▲
11	126-6267	2	Screw-Truss HD 5/16-18 X 2 3/4 Torx Plus
13	126-6725-03	1	Tray-Battery
14	32128-33	2	Nut-Whizlock 1/4-20
15	321-4	2	Screw-HH 1/4-20 X 3/4
16	126-6266	2	Screw-1/4-20 X .65 Torx Plus
17	32149-8	2	Nut-Keps 10-32 Unf Yz
19	3220-2	1	Nut-Jam 5/16-24
20	3256-22	2	Washer-1/4 SAE
23	82-2190	2	Switch
24		1	Battery ●■
25	126-7627	1	Strap-Bungee
26	100-3540	1	Cable-Battery, Positive
29	135-2868	1	Screw-HH
30	3256-23	1	Washer-5/16 SAE
38	32180-037	1	Clip-Harness

● Obtain locally. ■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Harness Assembly

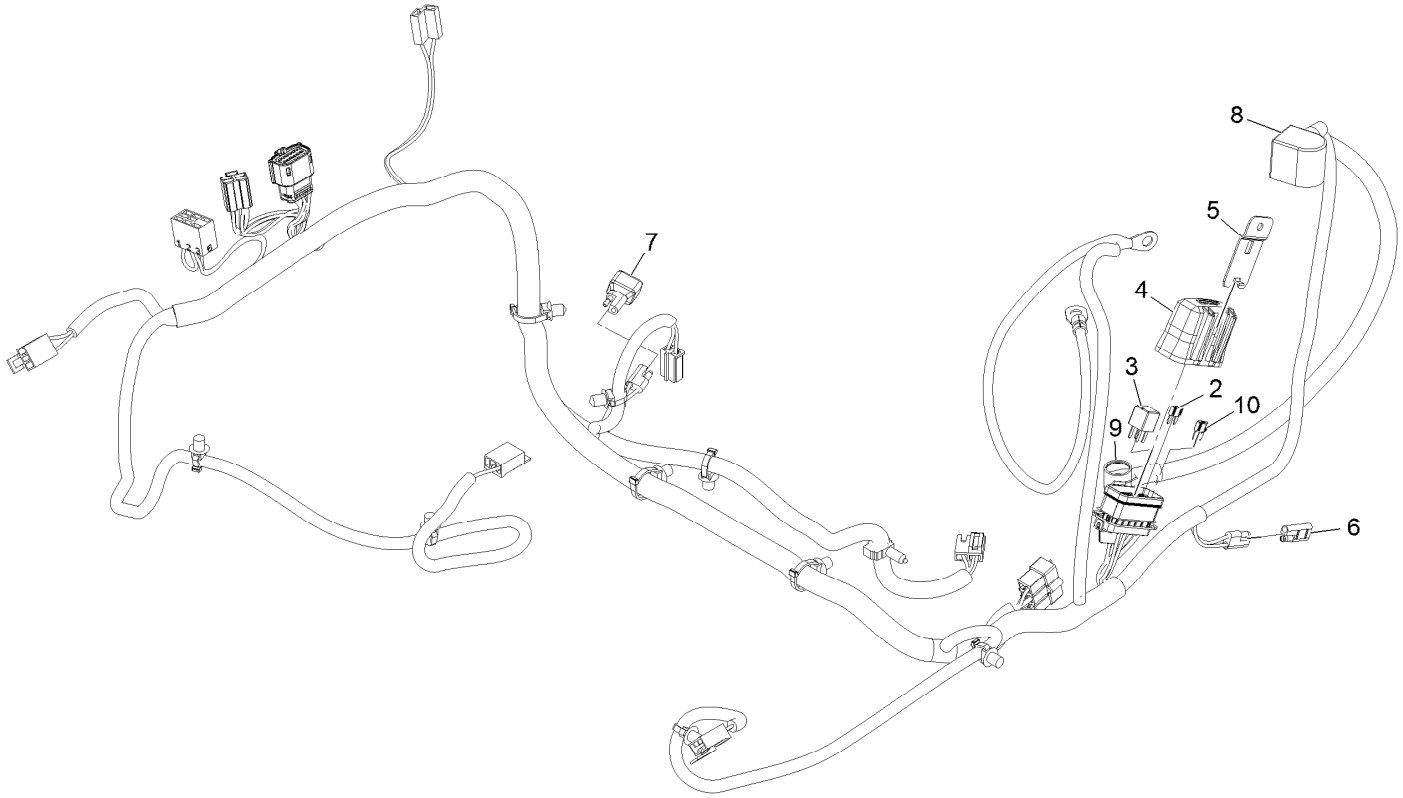

Harness Assembly (continued)

Ref.	Part Number	Qty.	Description
2	121-8868	1	Fuse-Mini Blade, 20 Amp
3	126-3991	1	Relay-Micro
4	32180-176	1	Cover-Block, Fuse
5	32180-177	1	Clip-Mounting
6	116-0053	1	Cap-Plug
7	103-3895	1	Diode
8	126-8876	1	Insulator-Battery
9	1-543393	1	Insulator-Solenoid
10	121-8867	1	Fuse-Mini Blade, 15 Amp

Notes:

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.



EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2019 Exmark Mfg. Co., Inc.
All Rights Reserved

2101 Ashland Ave
Beatrice, NE 68310
(402) 223-6375
Fax (402) 223-5489

Part No. 4504-552 Rev. A
Printed in the USA.





www.exmark.com