Form No. 3323–283

Hydraulic Breaker

For Toro® Siteworks Systems

Model No. 22441 – 200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000
All Rights Reserved

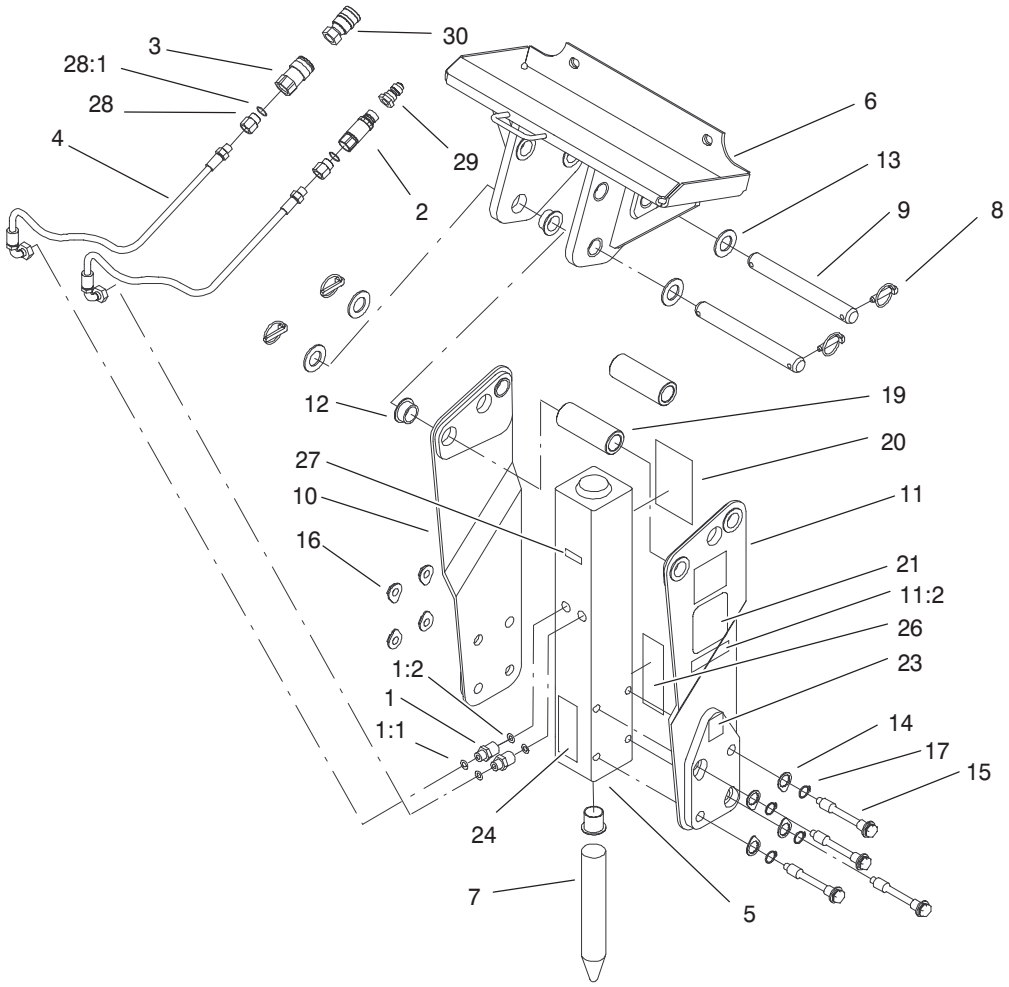


Sheet No.:1

Breaker Assembly

Ref. No.	Part No.	Qty.	Description
1	340–6	2	Fitting–Straight
1:1	237–30	1	O–Ring
1:2	237–80	1	O–Ring
2	100–4701	1	Nipple–Connect, Pressure
*2:1	100–6120	1	Kit–Seal
3	100–4234	1	Coupler–Face, Flush
*3:1	100–6119	1	Kit–Seal
4	99–1652	2	Hose – Hydraulic
5	99–4309	1	Power Head – Breaker
6	99–4310	1	Assembly – Attach Plate
7	99–4312	1	Tool Bit
8	99–4314	4	Pin – Lynch
9	99–4315	2	Pin – Mounting
10	99–4365	1	Side Plate Service–LH
10:2	99–4353	1	Decal–Ce Composite
11	99–4366	1	Side Plate Service–RH
11:2	99–4353	1	Decal–Ce Composite
12	99–4318	10	Bushing – Breaker
13	99–4319	4	Washer
14	99–4339	4	Lock Plate
15	99–4340	4	Bolt–Side Plate
16	99–4341	4	Nut – Side Plate
17	99–4342	4	Snap Ring
19	99–4345	2	Spacer

Ref. No.	Part No.	Qty.	Description
20	99–4348	1	Decal–Maintenance
21	99–4349	1	Decal – Siteworks Logo
23	99–4351	2	Decal–Us Flag
24	99–4352	1	Decal–Not Underwater
26	99–4354	1	Decal–Grease
27	99–4356	1	Decal–Nitrogen
28	100–4617	2	Adapter–Hyd
28:1	237–80	1	O–Ring
29	100–4702	1	Disconnect–Quick, Male
30	100–4703	1	Disconnect–Quick, Female
*30:1	100–4165	1	Seal
*99	99–4363	1	Tool–Line Cut Chisel
*99	99–4364	1	Tool–line Cut,Asphalt

* Not illustrated

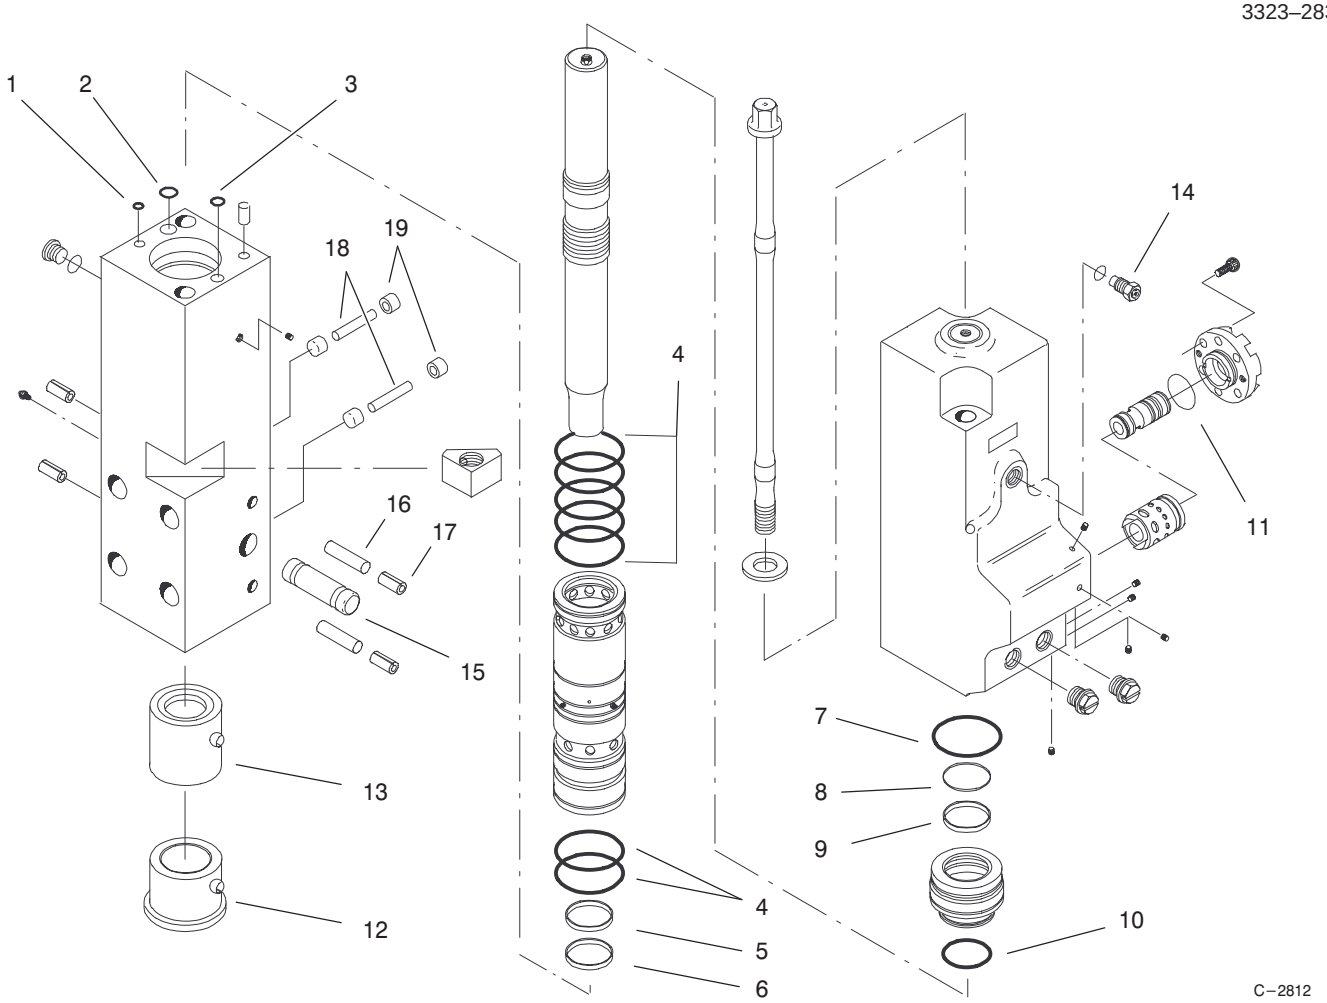

Seal Kit Assembly

Ref. No.	Part No.	Qty.	Description
†1		1	O–Ring
†2		1	O–Ring
†3		1	O–Ring
†4		7	O–Ring
†5		1	Seal–Rod
†6		1	Wiper–Rod
†7		1	O–Ring
†8		1	Modified Quad Ring
†9		1	Seal– Rod
†10		1	O–Ring
†11		1	O–Ring
12	99–4382	1	Bushing–Lower
13	99–4383	1	Bushing–Upper
14	99–4384	1	Valve–Charge
15	99–4385	1	Retainer–Tool
16	99–4386	2	Pin–Dowel
17	99–4387	4	Pin–Spiral
18	99–4388	2	Pin–Retainer
19	99–4389	4	Spring–Retainer
*	99–4370	1	Seal Kit (Incl. Ref. #1–11)

Ref. No.	Part No.	Qty.	Description

† Not Serviced Separately


TORO®