Form No. 3323–412

Proline 21”

Recycler® /Rear Bagging Mower

Model No. 22172–200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 1999
All Rights Reserved

Contents

Description	Page
Housing Assembly	3
Housing Assembly (cont.)	4
Front Tire & Wheel Assembly	5
Gear Case Assembly	6
Engine & BBC Assembly	7
Cylinder/Crankcase	8
Valve/Camshaft	9
Control Equipment	10
Fuel Tank/Fuel Valve	11
Electric Equipment	12
Carburetor	13
Piston/Crankshaft	14
Air Filter/Muffler	15
Cooling Equipment	16
Lubrication Equipment	17
Starter	18
Handle Assembly	19
Panel & Controls Assembly	20
Rear Axle Assembly	21
Rear Wheel & Tire Assembly	22
Bagging Assembly	23


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Discharge Kit	Model No. 59199		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

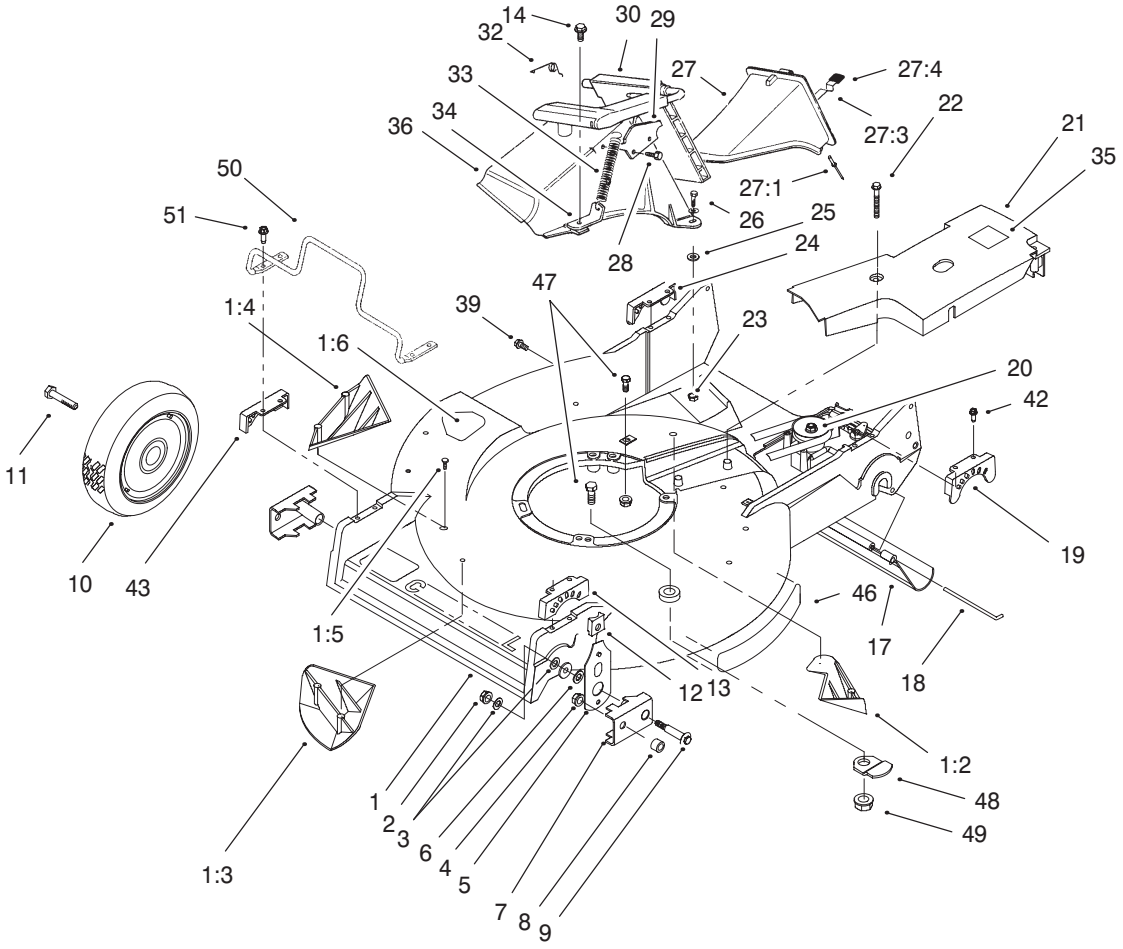


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	98–7146	1	Housing – Service
1:2	92–1750	1	Kicker – Rear, Sp
1:3	92–1720	1	Kicker – Front
1:4	92–1730	1	Kicker – R.h.
1:5	32144–111	6	Screw–Plask
1:6	43–8480	1	Decal–Danger
2	3296–6	2	Nut–Lock NI
3	40–1940	4	Washer–Wheel Bolt
4	32152–2	2	Nut–Conelock
5	66–7560	2	Front Spring Arm ASM
6	257–3	2	Washer–Thrust
7	61–8300	2	Pivot Arm Wa – Front
8	52–2480	2	Spacer–Wheel
9	27–6232	2	Bolt–Wheel
10	53–7720	2	Wheel & Tire ASM
11	323–12	2	Screw–HH
12	25–7740	2	Knob–Arm
13	49–8760	1	Quadrant–LH Front
14	46–6811	1	Screw/Washer
17	44–0580	1	Shield – Trailing
18	33–3208	1	Rod–Shield
19	49–8740	1	Quadrant–LH Rear
20	74–1861	1	Gear Case ASM (Service)
21	99–6298	1	Cover–Belt,Sp (Commercial)

Ref. No.	Part No.	Qty.	Description
22	37–7260	2	Screw–HH
23	3296–42	2	Nut–Lock NI
24	49–8750	1	Quadrant–RH Rear
25	3256–22	2	Washer–Flat
26	321–7	2	Screw–HH
27	77–0500	1	Discharge Plug Assembly
27:1	3295–35	1	Rivet–Alum
27:3	76–4640	1	Latch–Disc. Plug
27:4	76–4650	1	Grip–Latch
28	46–8090	2	Screw–Plastite
29	93–3154	1	Latch–Plate
30	93–7351	1	ASM – Discharge Door
32	80–3770	1	Spring–Door Ret
33	76–4660	1	Spring–Door
34	71–9350	1	Bracket–Spring
35	52–2620	1	Label–Sp Grease
36	82–9152	1	Tunnel–Discharge
39	46–6810	1	Screw & Washer ASM
42	49–2040	4	Screw–Taptite
43	49–8770	1	Quadrant–RH Front
46	92–7988	1	Decal – Recycler
47	323–6	3	Screw–HH
48	84–8930	2	Shield–Retainer
49	3296–39	3	Nut–Lock NI

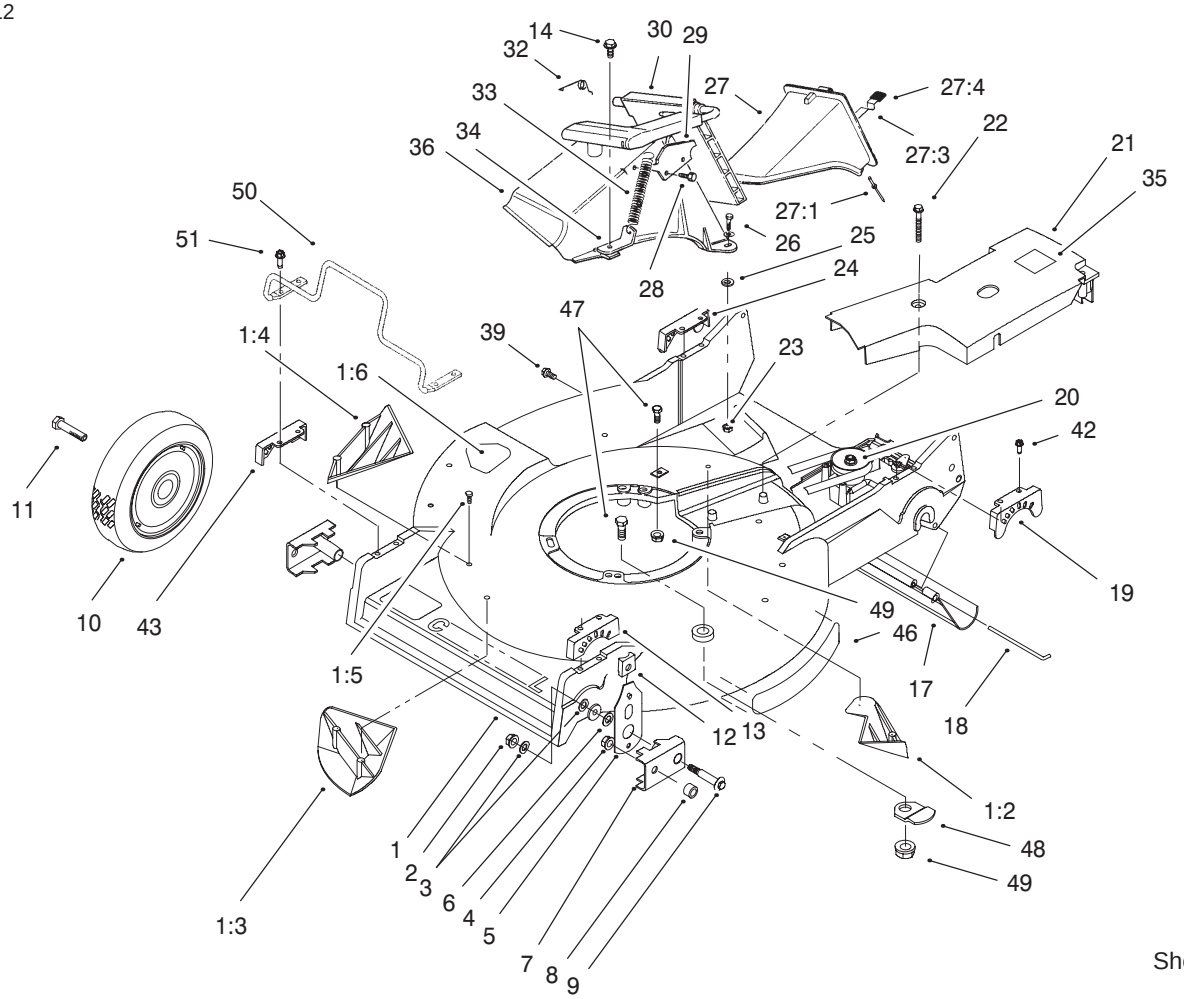


Sheet No.:2

Housing Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
50	99–6722	1	Guard Engine
51	32144–86	4	Screw–HH

Ref. No.	Part No.	Qty.	Description

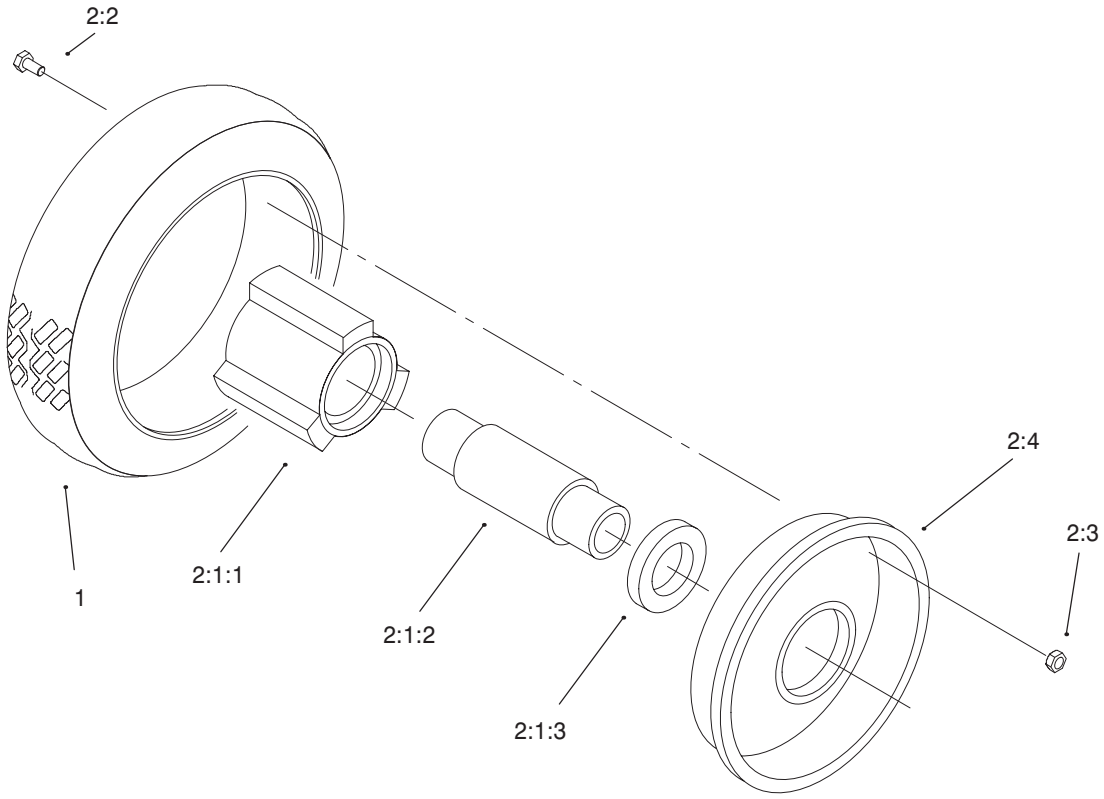


Sheet No.:2b

Front Tire & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	53–7740	1	Tire
2		1	Wheel ASM HP
2:1		1	Hub & Brg ASM
2:1:1	52–2410	1	Hub–Bearing Supt
2:1:2	52–2440	1	Spacer–Bearing
2:1:3	52–2450	2	Bearing–Wheel
2:2	321–2	4	Screw–HH
2:3	3296–42	4	Nut–Lock NI
2:4	53–7780–06	2	Plate–Wheel Half

Ref. No.	Part No.	Qty.	Description

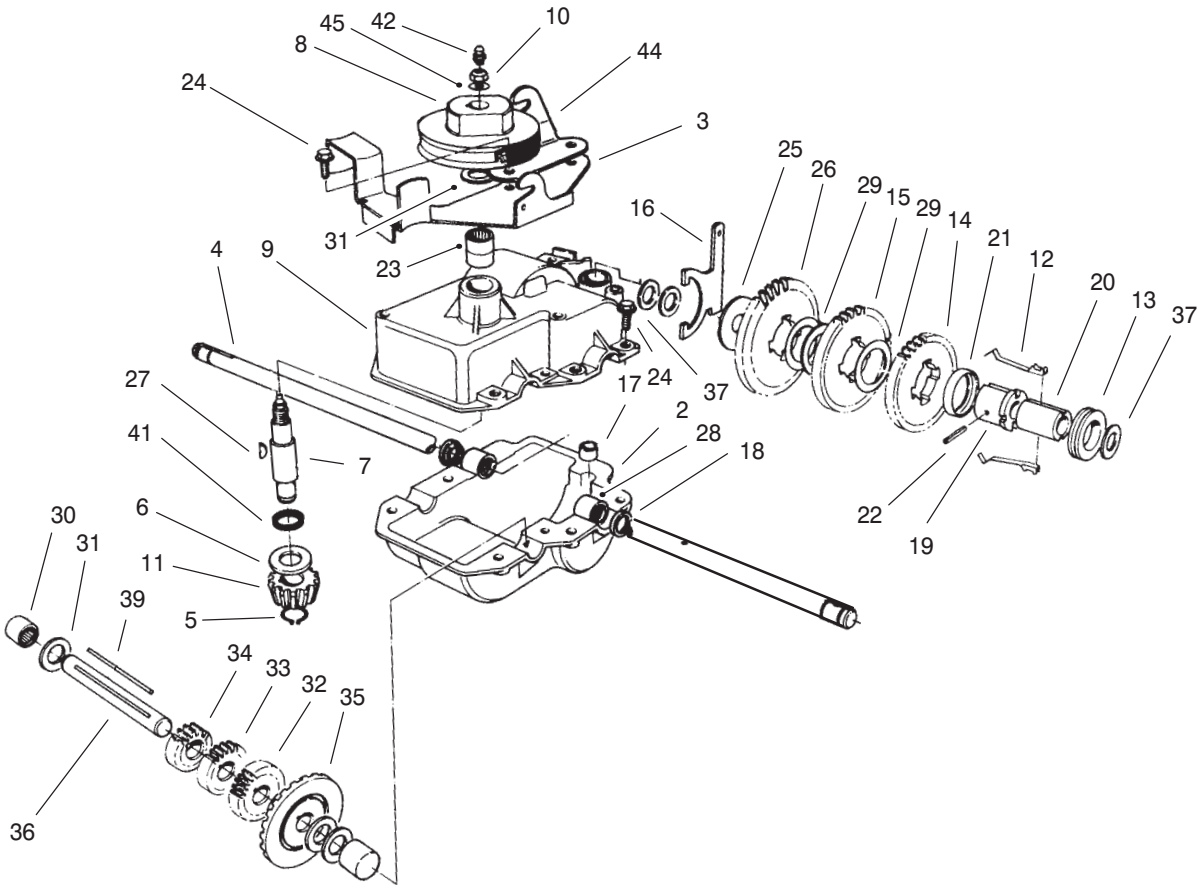


Sheet No.:2a

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
2	74–1920	2	Case–Lower Gear
3	49–8461–03	1	Bracket–Belt Guide
4	74–1890	2	Shaft–Output
5	32151–57	2	Ring–Retaining
6	47–2910	2	Washer–Thrust
7	13–5149	1	Input Shaft w/Zerk
8	39–6740	2	Pulley
9	74–1880	2	Case–Upper Gear
10	3296–5	2	Nut–Lock NI
11	39–6660	2	Pinion–Bevel
12	29–9330	4	Key
13	29–9340	2	Collar–Shift
14	42–4740	2	Gear–38 Tooth
15	29–9271	2	Gear–42 Tooth
16	60–8870	2	Yoke–Shift
17	29–9570	2	Bushing–Yoke
18	47–6730	4	Seal–Oil
19	55–8010	2	Sleeve–Gear
20	39–6720	2	Sleeve
21	55–8020	2	Retainer–Key
22	3285–19	2	Pin–Groove
23	47–7270	4	Bearing
24	49–2040	14	Screw–Taptite
25	29–9690	2	Washer
26	46–3560	2	Gear
27	3257–1	4	Key–Woodruff

Ref. No.	Part No.	Qty.	Description
28	48–2060	4	Bearing–Roller
29	36–4770	6	Washer
30	252–103	4	Bearing–Closed
31	36–4792	8	Washer–Thrust
32	39–6650	2	Gear–18t
33	46–3550	2	Gear
34	46–3540	2	Gear
35	74–1760	2	Gear–Bevel
36	53–7950	2	Shaft–Intermediate
37	36–4780	6	Washer
39	39–7842	2	Key
41	47–7260	2	Seal
42	302–63	2	Zerk
44	74–1750–03	1	Brk–Traction Engage
45	3256–45	2	Washer–Flat
*	74–1861	1	Gear Case ASM (Service)

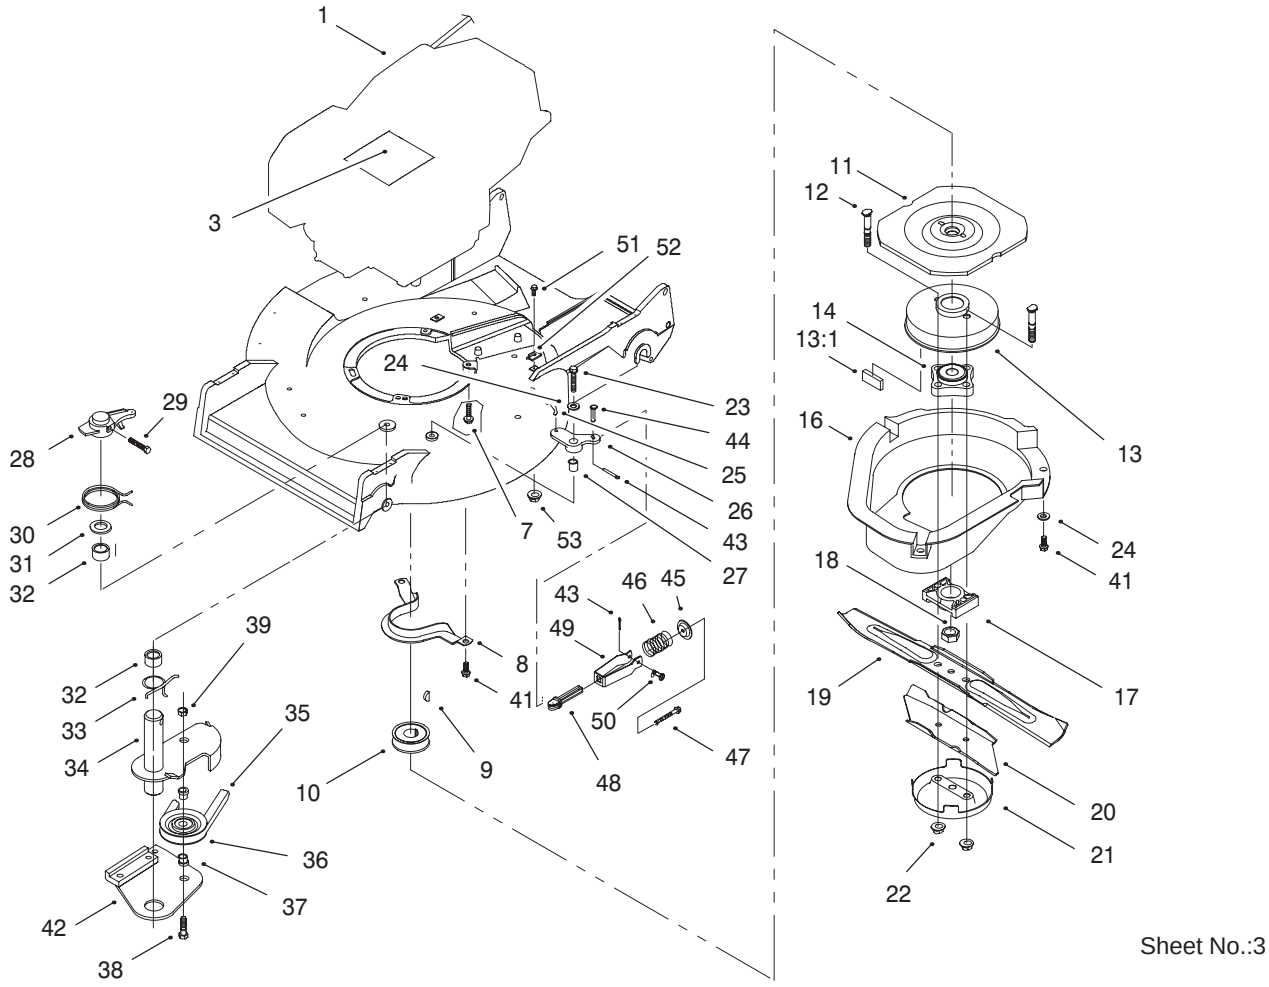


Sheet No.:3

Engine & BBC Assembly

Ref. No.	Part No.	Qty.	Description
1	100–6499	1	Engine–4cyc Bbc
3	99–6297	1	Decal Engine
7	100–2835	3	Screw–Engine Mount
8	66–0570–03	1	Brkt–Belt Guide
9	3257–17	1	Key–Hi–Pro
10	56–6180	1	Driver–Pulley
11	56–6160	1	Flywheel *B
12	42–3190	2	Bolt–Blade
13	94–9431	1	ASM – Brake Drum
13:1	52–3480	2	Dampner–Vibration
14	42–6890	1	Hub ASM (Bbc)
16	46–5693	1	Shield–Bbc
17	62–4280	1	Spacer–Blade
18	3296–33	1	Nut–Lock NI
19	14–9419	1	Blade w/Decal
20	91–2255–03	1	Stiffener–Blade Bbc
21	80–2770	1	Anti–Scalp Cup
22	54–9190	2	Nut–Lock
23	32104–107	1	Screw–HH
24	3256–23	1	Washer–Flat
25	49–2810	1	Link – Control
26	49–7960	1	Bellcrank
27	49–7950	1	Sleeve–Bellcrank
28	49–2820	1	Lever
29	32104–96	1	Screw–HH
30	49–7970	1	Spring–Torsion

Ref. No.	Part No.	Qty.	Description
31	70–1160	1	Washer – Pm
32	68–9780	2	Bearing
33	85–6880	1	Spring–Torsion
34	84–9130	1	Brake Plate Wa
35	42–0884	1	V–Belt
36	46–5650	1	Pulley–Idler
37	46–5631	2	Hub–Idler Pulley
38	322–6	1	Screw–HH
39	3296–47	1	Nut–Lock NI
41	32144–70	3	Screw–Taptite
42	84–9180	1	Brake Plate Assembly
43	3272–1	2	Pin–Cotter
44	84–9050	1	Pin–Spring
45	65–5280	1	Retainer–Spring
46	84–9100	1	Spring–Bbc
47	46–7040	1	Screw–Thd Form
48	84–8870	1	Guide–Spring
49	84–8880–03	1	Bracket–Spring
50	84–9040	1	Pin–Cable
51	322–6	1	Screw–HH
52	62–3720	1	Cable Clamp
53	3296–58	1	Nut–Lock NI

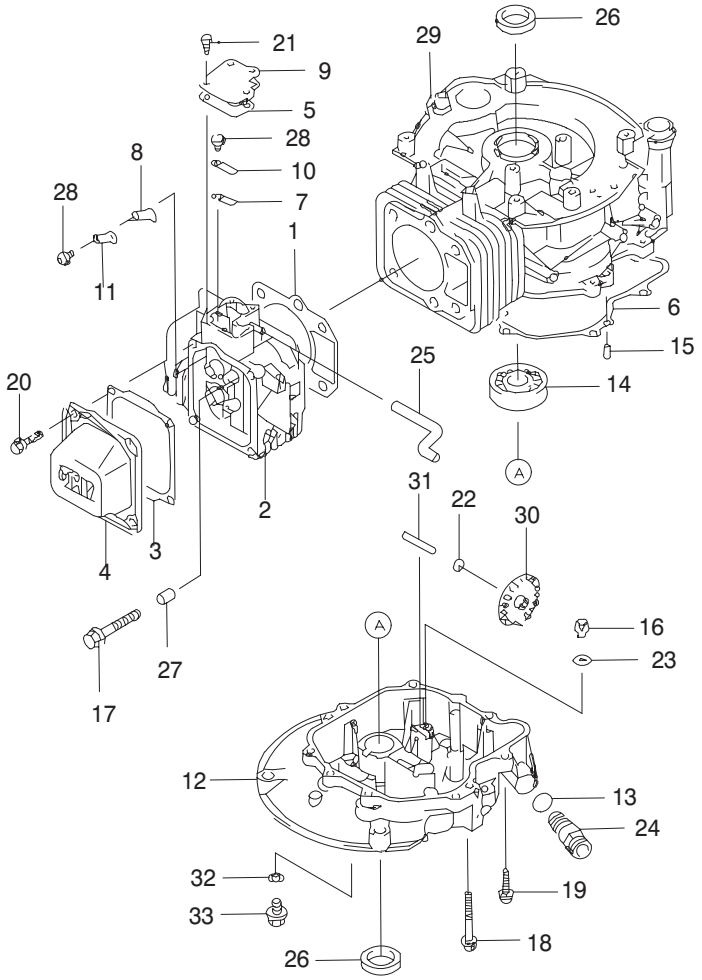


Sheet No.:3a

Cylinder/Crankcase

Ref. No.	Part No.	Qty.	Description
1	100–2742	1	Gasket–Head
2	100–2743	1	Head–Complete–Cyl nder
3	100–2744	1	Gasket Rocker Case
4	100–2745	1	Case–Rocker
5	100–2746	1	Gasket Cover
6	100–2747	1	Gasket Crankcase Cover
7	100–2748	1	Plate
8	100–2749	1	Plate
9	100–2779	1	Cover
10	100–2780	1	Valve
11	100–2781	1	Valve
12	100–2782	1	Cover–Crankcase
13	100–2840	1	O–Ring
14	100–2841	1	Ball Bearing
15	93–8516	2	Pin
16	100–2842	1	Bolt Upset Wsp
17	Kw10035	4	Bolt, Flanged 8x45
18	Kw10033	1	Bolt, Flanged 8x12
19	100–2610	6	Bolt Flanged
20	100–2804	4	Bolt–Flanged
21	100–2609	4	Bolt Flanged
22	100–2843	1	Washer 6x12x1.6
23	100–2844	1	Washer 5x16x0.8
24	100–2854	1	Plug

Ref. No.	Part No.	Qty.	Description
25	100–2846	1	Tube
26	100–2847	2	Seal Oil
27	100–2848	2	Pin
28	93–8549	2	Screw
29	100–2849	1	Crankcase Complete
30	99–6728	1	Oil Slinger
31	99–6729	1	Shaft
32	99–6730	1	Gasket
33	100–2855	1	Bolt Flanged

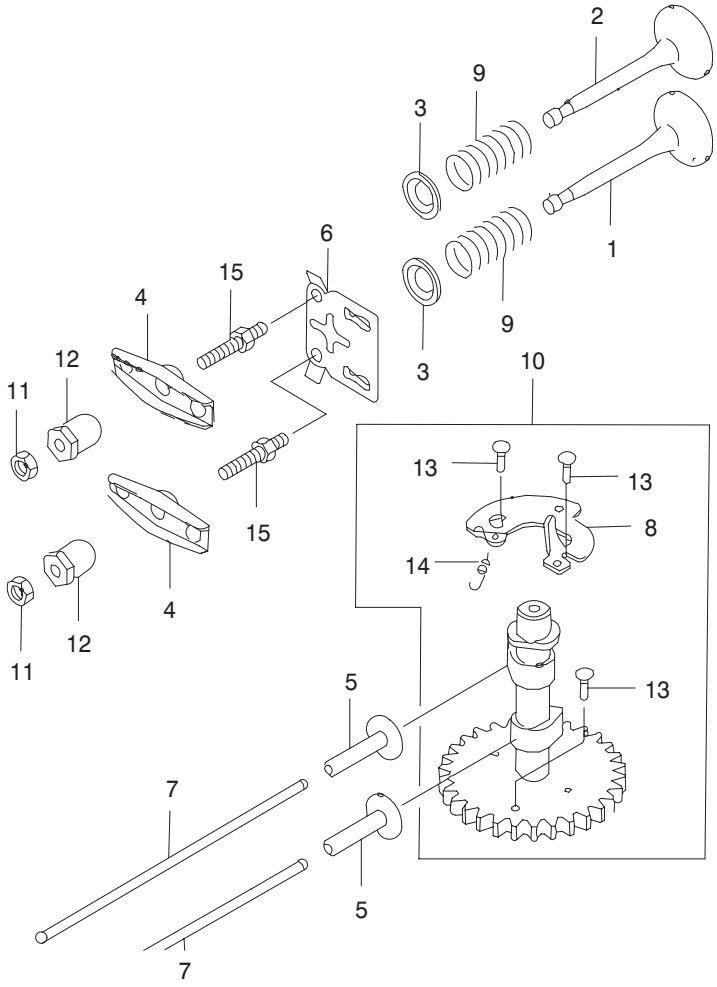


Sheet No.:3k

Valve/Camshaft

Ref. No.	Part No.	Qty.	Description
1	100–2727	1	Valve–Intake
2	100–2728	1	Valve–Exhaust
3	100–2729	2	Retainer–Valve Spring
4	100–2730	2	Arm–Rocker
5	100–2731	2	Tappet
6	100–2732	1	Guide
7	100–2733	2	Rod–Push
8	100–2734	1	Decompressor
9	100–2735	2	Spring–Engine Valve
10	100–2736	1	Camshaft–Complete
11	93–8533	2	Nut
12	93–8534	2	Nut
13	100–2739	3	Pin
14	100–2740	1	Spring
15	100–2741	2	Bolt

Ref. No.	Part No.	Qty.	Description

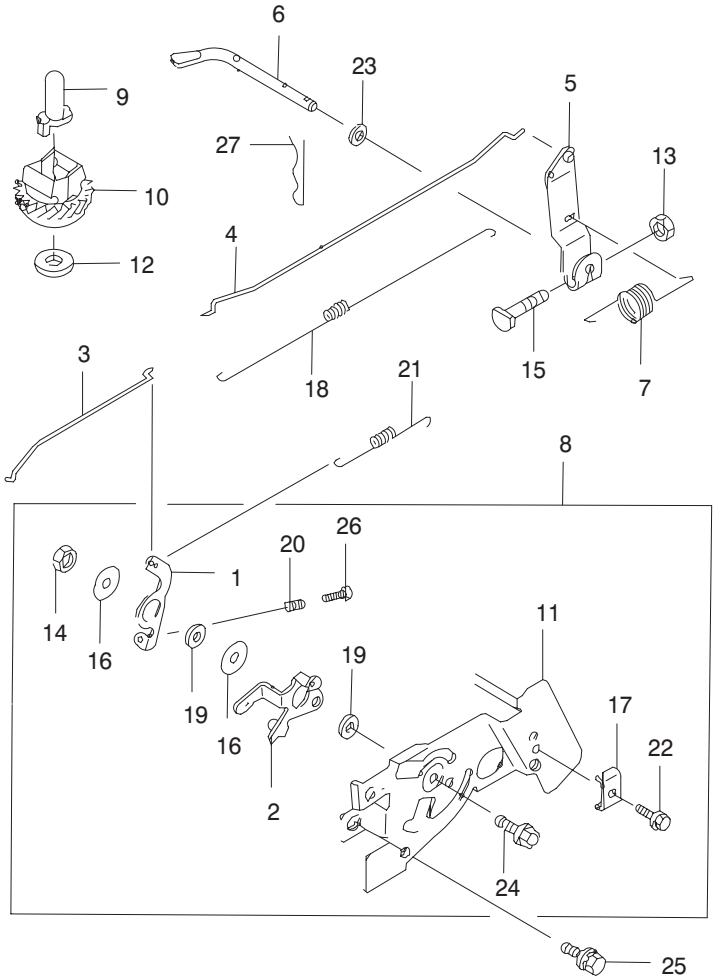


Sheet No.:3b

Control Equipment

Ref. No.	Part No.	Qty.	Description
1	100–2700	1	Lever
2	100–2701	1	Lever
3	100–2702	1	Link–Choke
4	100–2703	1	Link
5	100–2704	1	Arm–ASM
6	100–2705	1	Arm–Pivot
7	100–2706	1	Spring–Governor
8	100–2707	1	Panel–ASM Control
9	100–2708	1	Sleeve
10	93–8611	1	Governor ASM
11	100–2710	1	Panel–Control
12	93–8608	1	Washer
13	93–8631	3	Nut
14	93–8595	1	Nut
15	94–6842	1	Washer
16	100–2715	2	Washer 6x9x1.2
17	95–9849	1	Clamp
18	100–2717	1	Spring Link
19	100–2718	2	Collar 6x13x2.3
20	93–8588	1	Spring
21	100–2720	1	Spring
22	95–9853	1	Bolt
23	93–8608	1	Washer
24	95–9837	1	Bolt – Flanged
25	100–2724	2	Bolt–Upset–Wsp

Ref. No.	Part No.	Qty.	Description
26	100–2725	1	Screw–Pan
27	93–8607	1	Pin–Snap

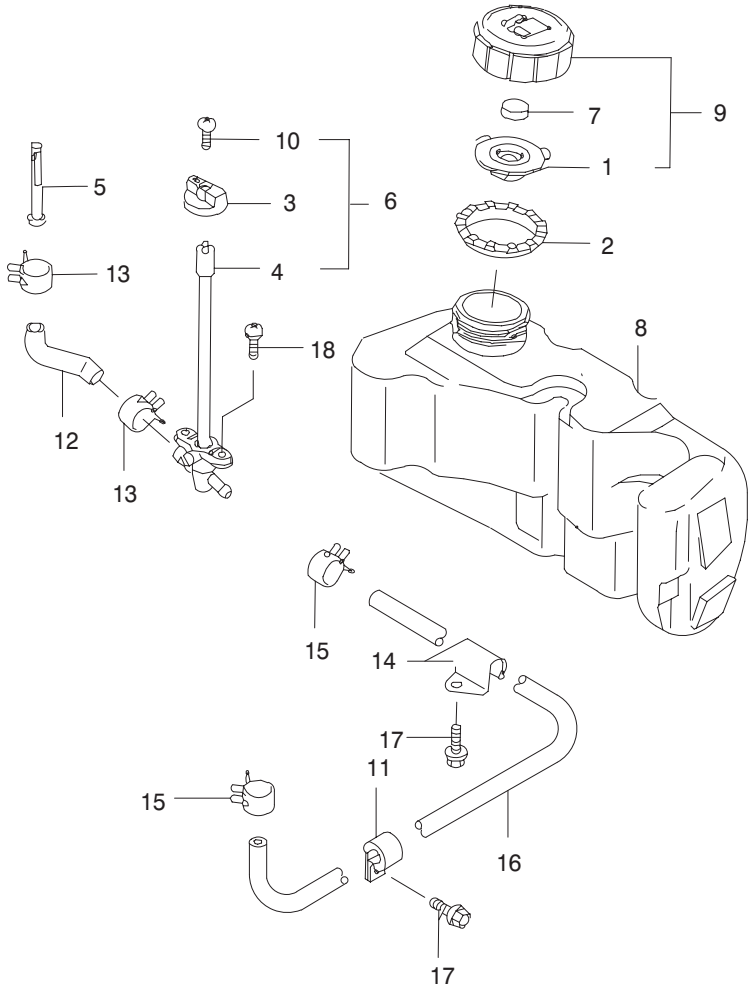


Sheet No.:3c

Fuel Tank/Fuel Valve

Ref. No.	Part No.	Qty.	Description
1	100–2808	1	Gasket
2	100–2809	1	Guide
3	100–2810	1	Lever
4	100–2811	1	Filter Complete
5	100–2812	1	Filter Fuel
6	100–2814	1	Filter Fuel
7	100–2813	1	Element–Breather
8	100–2815	1	Tank Complete Fuel
9	100–2816	1	Cap–ASM–Tank
10	100–2817	1	Screw
11	100–2818	1	Clamp
12	100–2819	1	Tube
13	100–2820	2	Clamp
14	100–2821	1	Clamp
15	100–2822	2	Clamp
16	100–2823	1	Tube 4.8x10.3x433
17	100–2804	2	Bolt–Flanged
18	100–2825	2	Screw–Pan–Wp

Ref. No.	Part No.	Qty.	Description

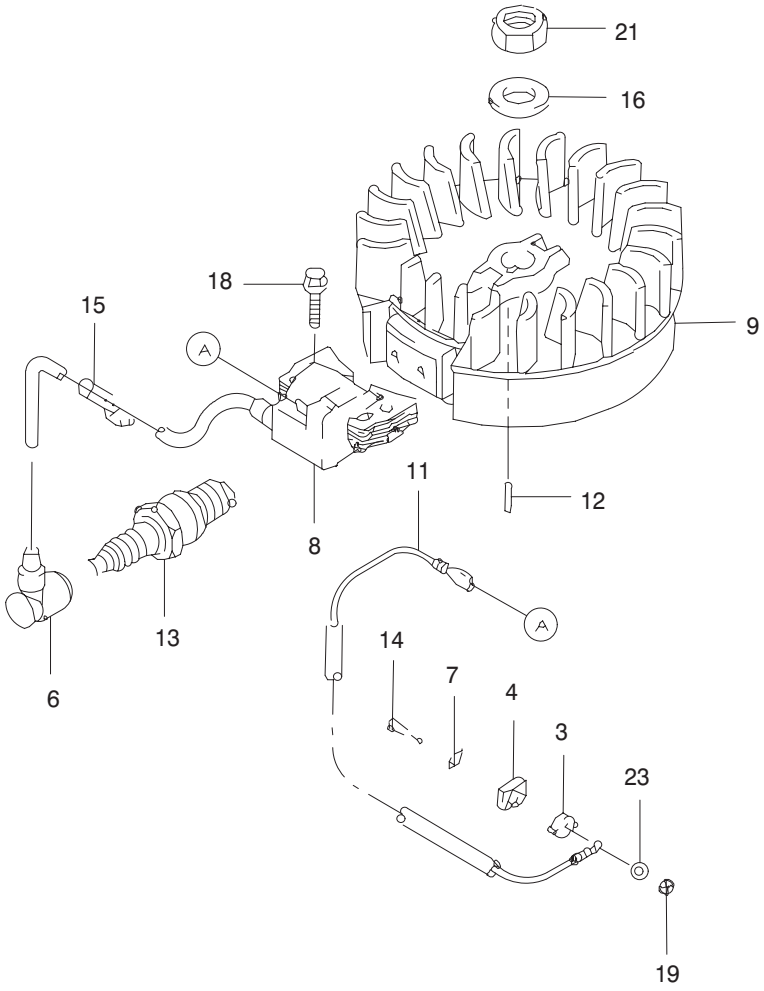


Sheet No.:3d

Electric Equipment

Ref. No.	Part No.	Qty.	Description
3	100–2652	1	Cover
4	100–2653	1	Insulator
6	Kw10087	1	Cap Plug
7	100–2796	1	Terminal
8	100–2657	1	Coil ASM Ignition
9	100–2658	1	Flywheel Complete
11	100–2660	1	Wire Lead L=300mm
12	93–8571	1	Key
13	100–2662	1	Plug–Spark Bpr5es(Ngk)
14	100–2663	1	Bolt 4x20
15	100–2664	1	Clamp
16	100–2665	1	Washer
18	100–2610	2	Bolt Flanged
19	100–2668	1	Nut Hex
21	93–8568	1	Nut
23	100–2798	1	Washer Plain

Ref. No.	Part No.	Qty.	Description

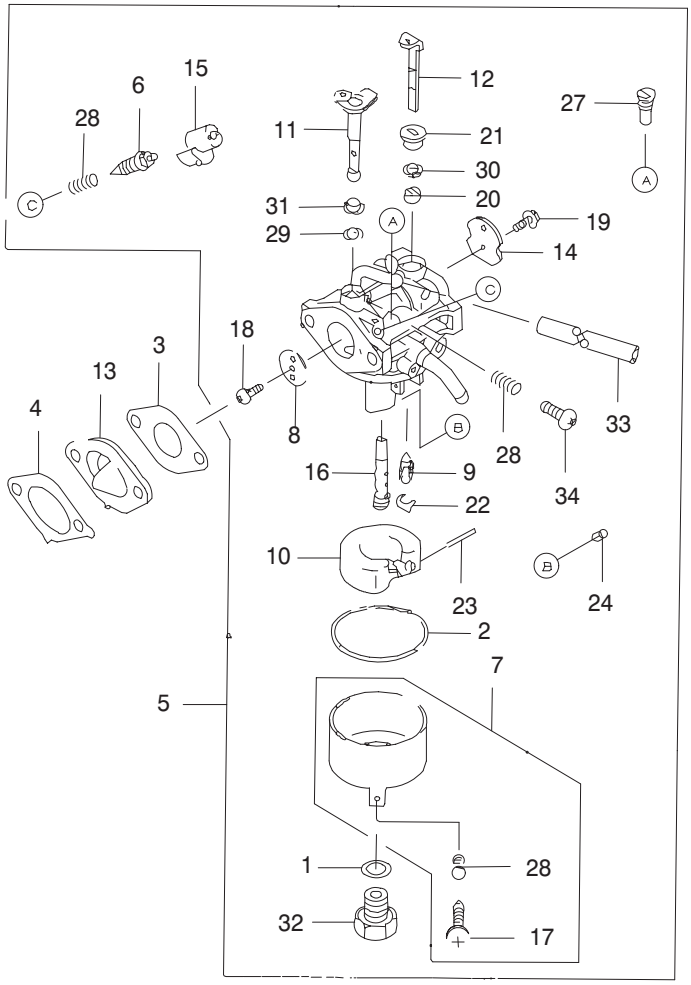


Sheet No.:3e

Carburetor

Ref. No.	Part No.	Qty.	Description
1	100–2611	1	Gasket
2	100–2612	1	Gasket
3	100–2613	1	Gasket Carburetor
4	100–2614	1	Gasket Insulator
5	100–2615	1	Carburetor ASM
6	100–2616	1	Screw Pilot Air
7	100–2617	1	Chamber Float
8	100–2618	1	Valve Throttle
9	100–2619	1	Valve Float
10	100–2620	1	Float
11	100–2621	1	Shaft Carburetor Throttle
12	100–2622	1	Shaft Carburetor Choke
13	100–2623	1	Insulator
14	100–2624	1	Valve
15	100–2625	1	Limiter
16	100–2626	1	Nozzle Main
17	100–2627	1	Screw
18	100–2628	1	Screw
19	100–2629	2	Screw
20	100–2630	1	Collar
21	100–2631	1	Collar
22	Kw10297	1	Clip
23	100–2633	1	Pin
24	100–2634	1	Jet Main #62.5

Ref. No.	Part No.	Qty.	Description
27	100–2635	1	Jet Pilot #37.5
28	100–2636	3	Spring
29	100–2637	1	Seal
30	100–2638	1	Seal
31	100–2639	1	Collar
32	100–2640	1	Bolt
33	100–2641	1	Tube 4x7x125
34	100–2642	1	Screw Pan

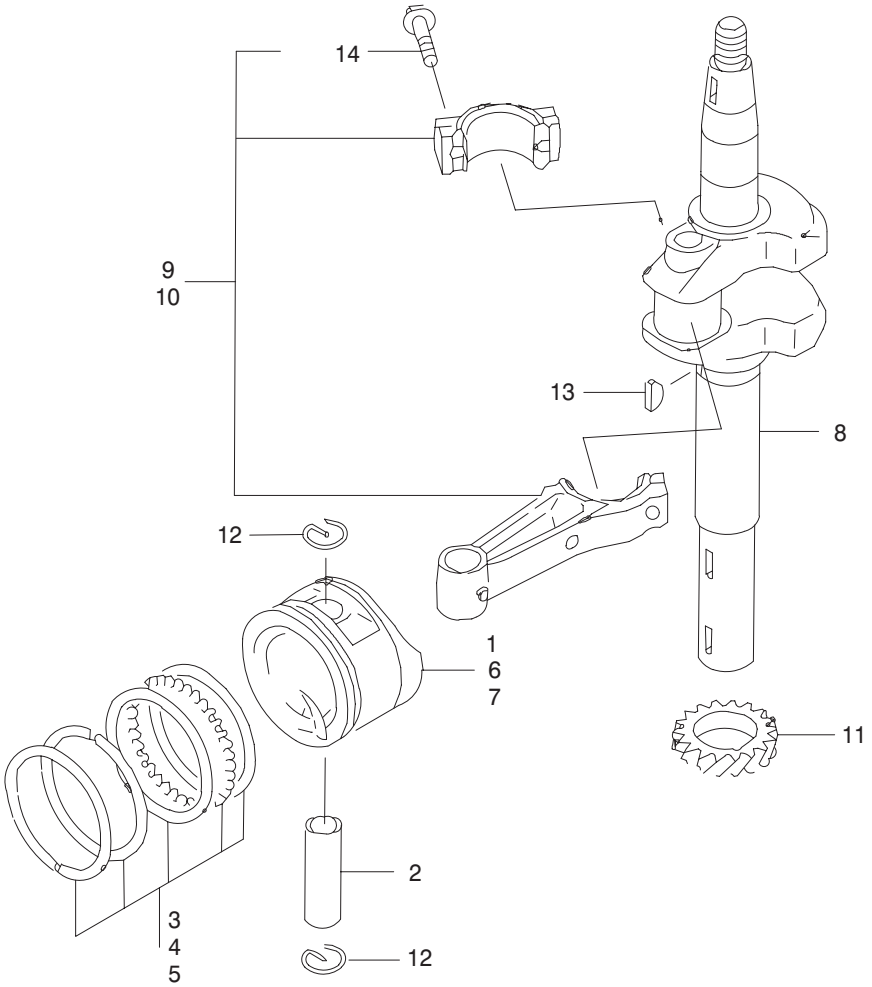


Sheet No.:3f

Piston/Crankshaft

Ref. No.	Part No.	Qty.	Description
1	100–2672	1	Piston Engine
2	100–2673	1	Pin–Piston
3	100–2674	1	Ring Set Piston
4	100–2675	1	Ring Set Piston L0.25
5	100–2676	1	Ring Set Piston L0.50
6	100–2677	1	Piston Engine L0.25
7	100–2678	1	Piston Engine L0.50
8	100–2828	1	Crankshaft
9	100–2680	1	Rod ASM Connecting
10	100–2681	1	Rod ASM Connecting U/S=0.50
11	100–2682	1	Gear–Helical
12	100–2683	2	Ring–Snap
13	93–8526	1	Key
14	93–8527	2	Bolt–Rod

Ref. No.	Part No.	Qty.	Description

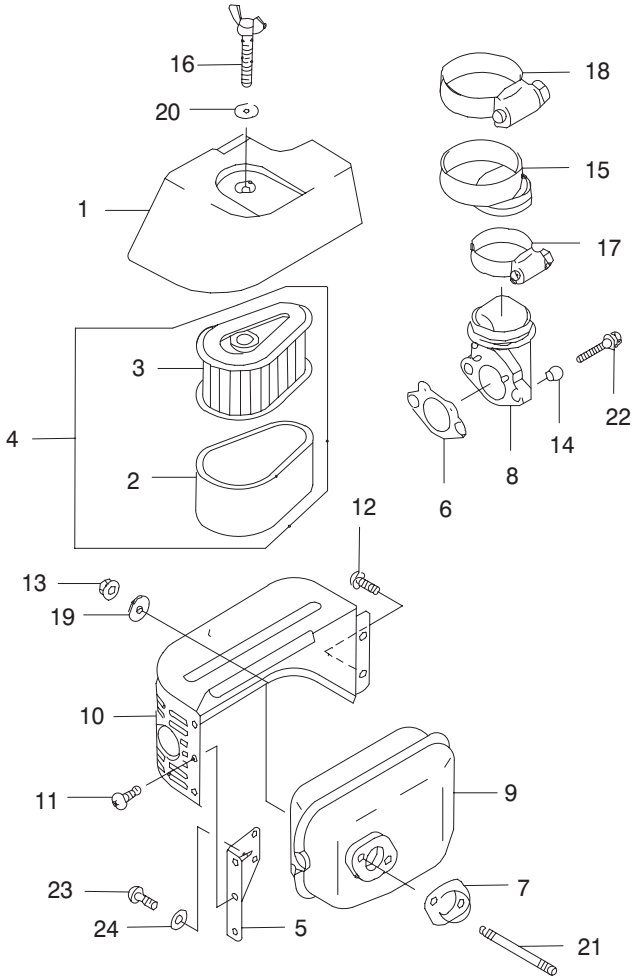


Sheet No.:3g

Air Filter/Muffler

Ref. No.	Part No.	Qty.	Description
1	100–2691	1	Cap Air Filter
2	100–2692	1	Element Air Filter
3	100–2693	1	Element Air Filter
4	100–2694	1	Element ASM Air Filter
5	100–2695	1	Bracket
6	100–2696	1	Gasket Intake Pipe
7	100–2697	1	Gasket Muffler
8	100–2698	1	Pipe–Intake
9	100–2699	1	Muffler Complete
10	100–2750	1	Cover Muffler
11	93–8549	3	Screw
12	95–9716	2	Screw
13	93–8631	2	Nut
14	100–2754	2	Spacer 6.2x7.8x8
15	100–2755	1	Tube
16	100–2756	1	Bolt
17	100–2757	1	Clamp
18	100–2758	1	Clamp
19	100–2759	2	Washer 7x21x2.3
20	100–2760	1	Washer 6.5x18x2.0
21	100–2761	2	Bolt–Stud
22	100–2762	2	Bolt Upset Wp
23	100–2763	2	Screw Pan
24	93–8639	2	Washer

Ref. No.	Part No.	Qty.	Description

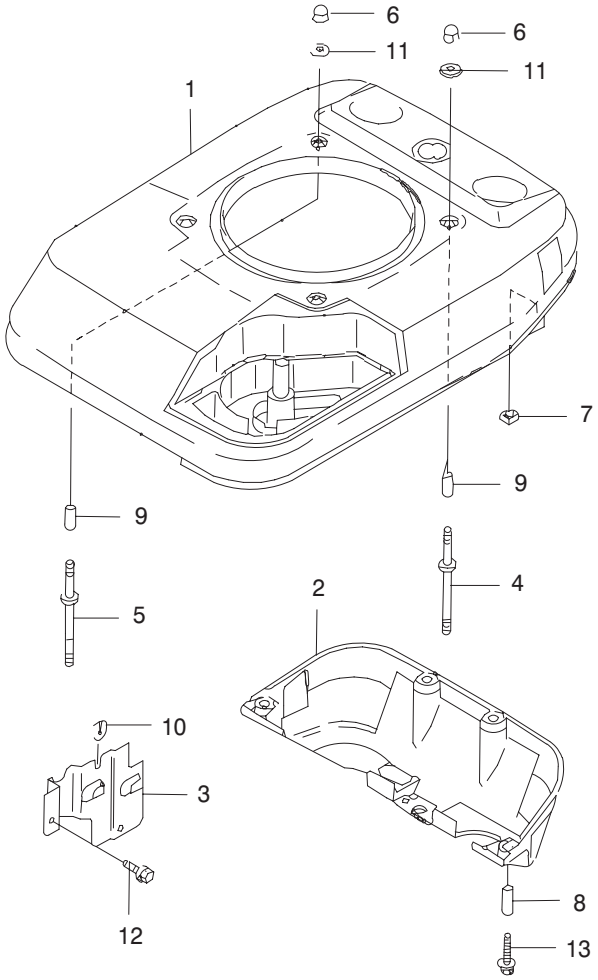


Sheet No.:3h

Cooling Equipment

Ref. No.	Part No.	Qty.	Description
1	100–2600	1	Cover Upper
2	100–2793	1	Cover Lower
3	100–2794	1	Cover
4	100–2601	3	Stud
5	100–2602	1	Stud
6	100–2603	4	Nut
7	100–2604	4	Nut 6mm
8	100–2606	4	Spacer 6.2x7.8x17
9	100–2605	4	Spacer 6.2x7.8x22
10	100–2607	1	Grommet
11	100–2760	4	Washer 6.5x18x2.0
12	100–2609	2	Bolt Flanged
13	100–2610	4	Bolt Flanged

Ref. No.	Part No.	Qty.	Description

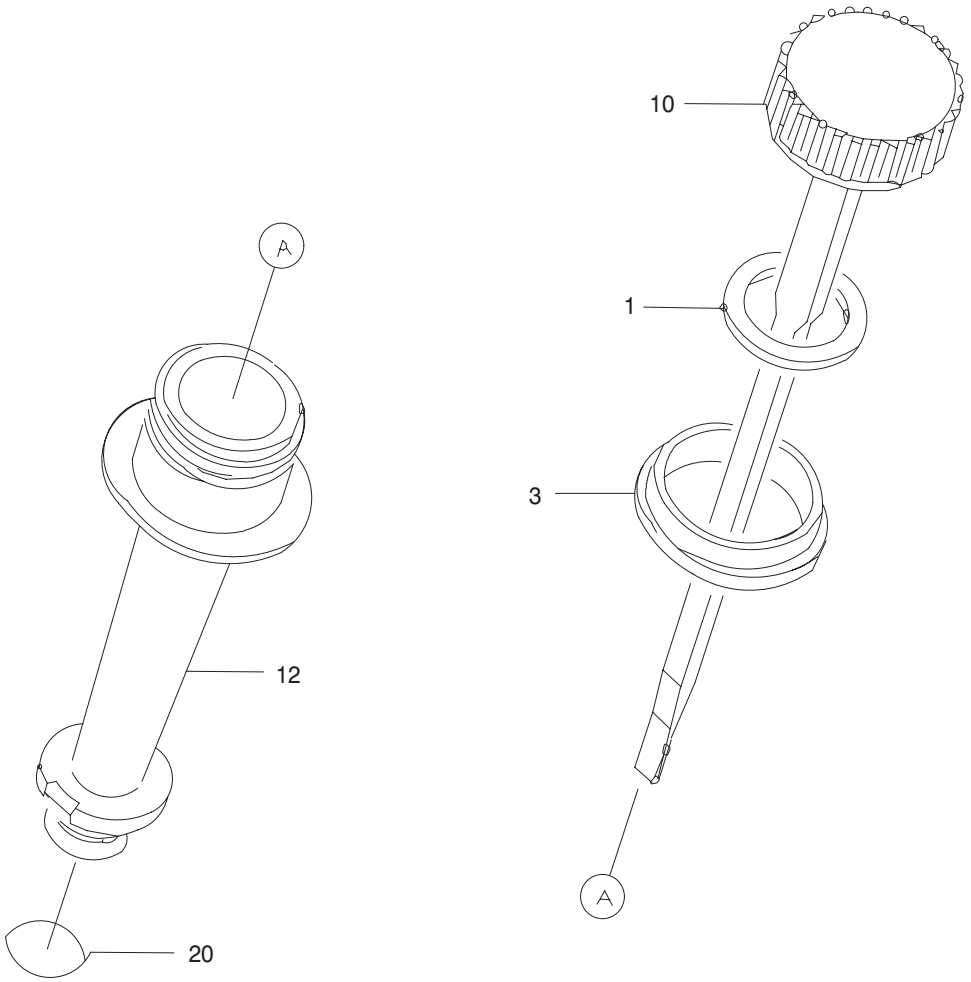


Sheet No.:3i

Lubrication Equipment

Ref. No.	Part No.	Qty.	Description
1	Kw10010	1	Gasket
3	100–2687	1	Guide
10	100–2688	1	Gauge
12	100–2689	1	Filler
20	100–2690	1	O–Ring
*21	100–2831	1	O Ring
*22	100–2830	1	Cover
*23	100–2804	3	Bolt–Flanged

Ref. No.	Part No.	Qty.	Description

* Not illustrated

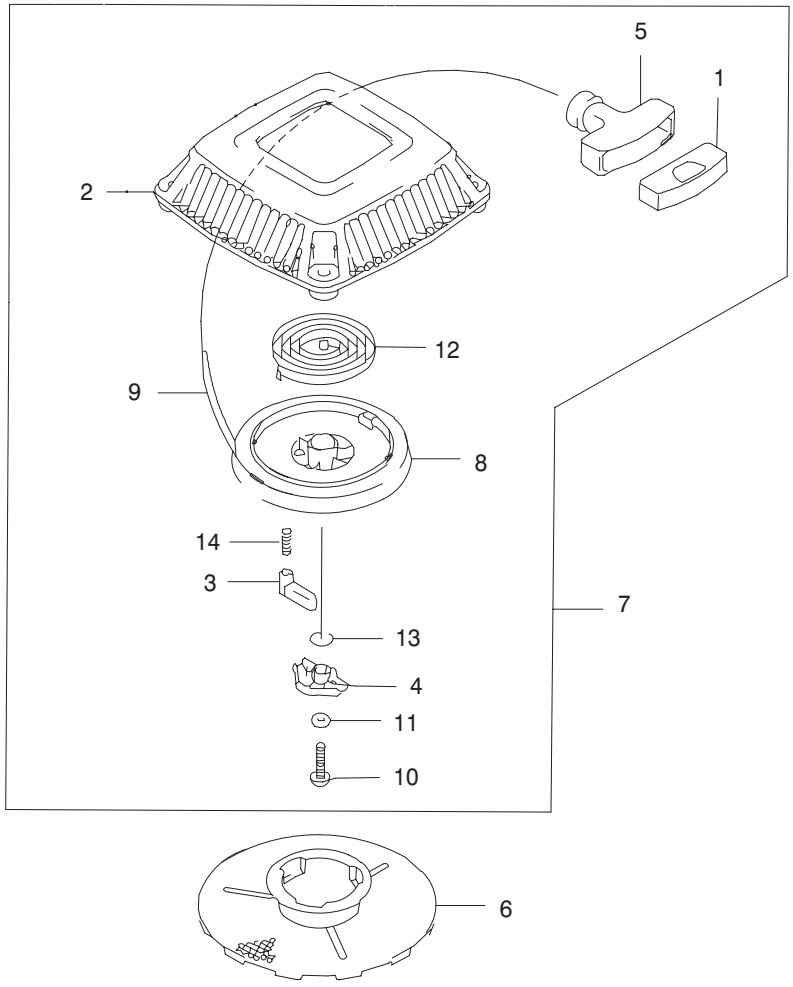


Sheet No.:3j

Starter

Ref. No.	Part No.	Qty.	Description
1	94–9044	1	Cap – Grip
2	100–2766	1	Holder
3	100–2767	1	Pawl Recoil Starter
4	100–2768	1	Retainer–Spring
5	100–2769	1	Grip Recoil Starter
6	100–2770	1	Pulley–Starting
7	100–2837	1	Starter Recoil
8	100–2772	1	Reel Recoil Starter
9	100–2773	1	Rope 3.8x1400
10	100–2774	1	Screw 5x18
11	100–2775	1	Washer 5x12.8x1.2
12	100–2776	1	Spring Recoil
13	100–2777	1	Spring
14	93–8555	1	Spring–Return

Ref. No.	Part No.	Qty.	Description

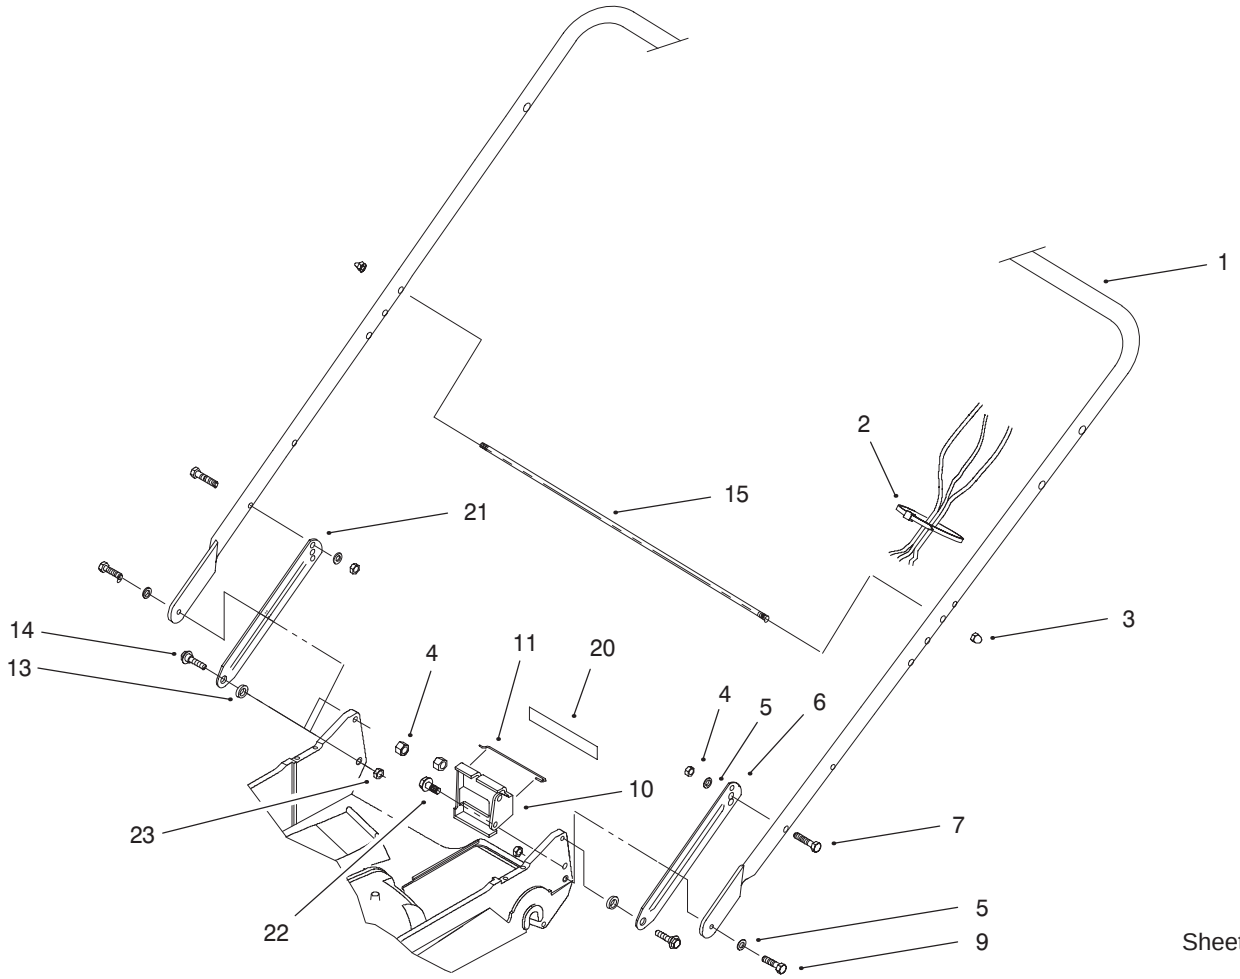


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98–2385–03	1	Handle
2	3290–378	3	Tie–Cable
3	32111–7	2	Nut–Cap
4	3296–29	4	Nut–Lock NI
5	3290–456	4	Washer–Belleville
6	100–3298–03	1	Latch–LH Handle
7	322–7	2	Screw–HH
9	322–6	2	Screw–HH
10	74–1741–03	1	Brkt–Traction Adj.
11	46–7030	1	Retainer–Cable
13	3–3287	2	Spacer–Handle Latch
14	27–7210	2	Screw–Shoulder
15	48–2810	1	Rod–Bag Support
20	74–1970	1	Decal – Gear Position
21	100–3297–03	1	Latch–RH Handle
22	32144–70	1	Screw–Taptite
23	3296–47	2	Nut–Lock NI

Ref. No.	Part No.	Qty.	Description

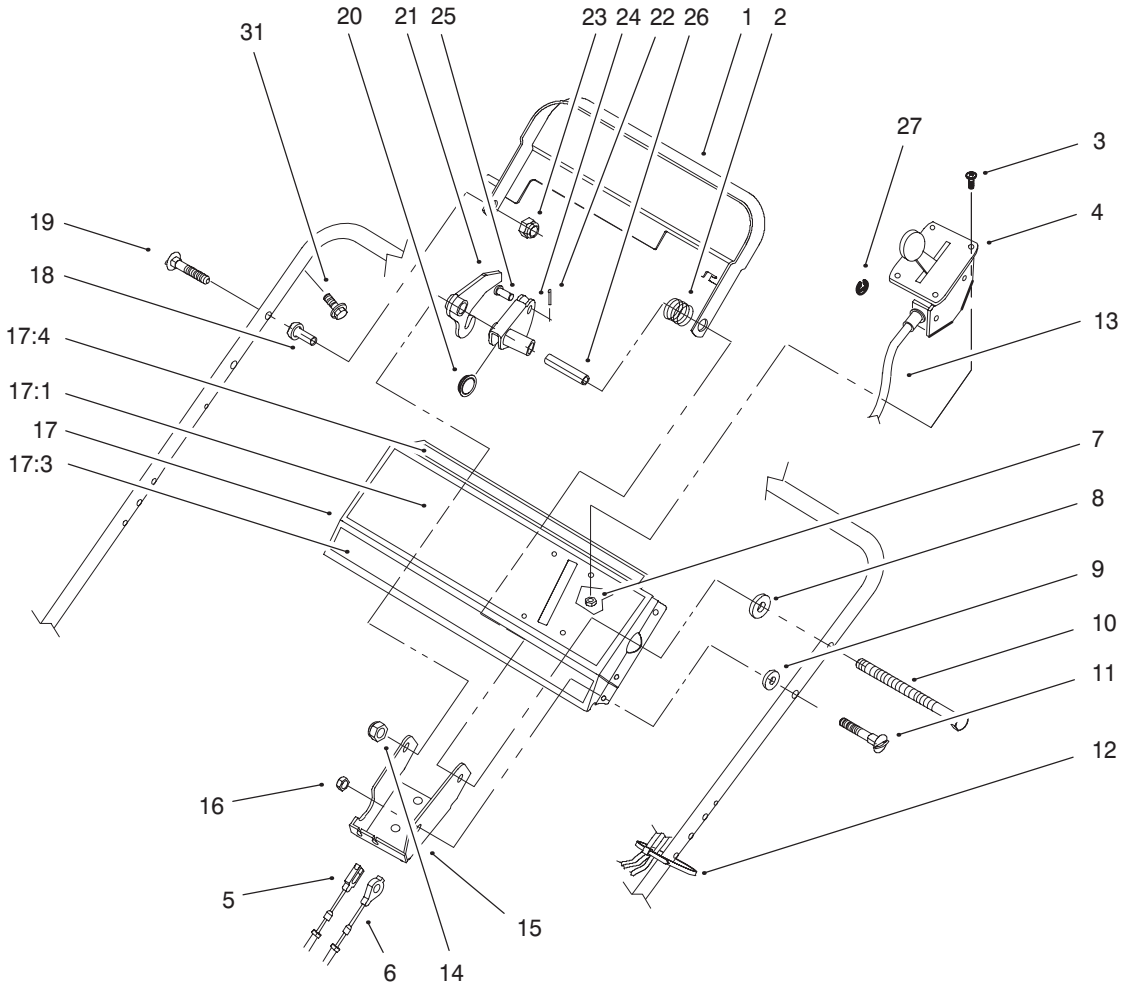


Sheet No.:5

Panel & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	84–8940–03	1	Control Bar Wa
2	85–6750	1	Spring–Control
3	3250–12	4	Screw–PPH
4	85–6770	1	Control–Throttle
5	84–9120	1	Cable–Traction
6	84–9110	1	Cable–Clutch
7	3296–2	4	10–24 Lt Esna
8	71–9310	1	Spacer
9	71–9320	1	Spacer
10	322–19	1	Screw–HH
11	46–6430	1	Screw–Handle
12	3290–378	1	Tie–Cable
13	100–2839	1	Cable–Throttle
14	3296–29	1	Nut–Lock NI
15	92–1778–03	1	Bracket–Control
16	3296–42	1	Nut–Lock NI
17	14–7709	1	Panel w/Decals
17:1	85–6730	1	Decal–Panel
17:3	85–6720	1	Decal–Proline Panel
17:4	63–9060	1	Decal–Danger
18	49–1631	1	Spacer–Support
19	17–9427	1	Screw–Hdle
20	86–9320	1	Bushing–Nylon Flange
21	84–9000	1	Traction Lever Wa
22	3272–1	1	Pin–Cotter
23	3296–58	1	Nut–Lock NI


Ref. No.	Part No.	Qty.	Description
24	84–8990	1	Bbc Lever Wa
25	84–9040	1	Pin–Cable
26	84–9030	1	Spacer–Control Bracket
27	32151–86	1	E–Ring – Throt & Tract
31	32104–76	6	Screw–Acorn Slot

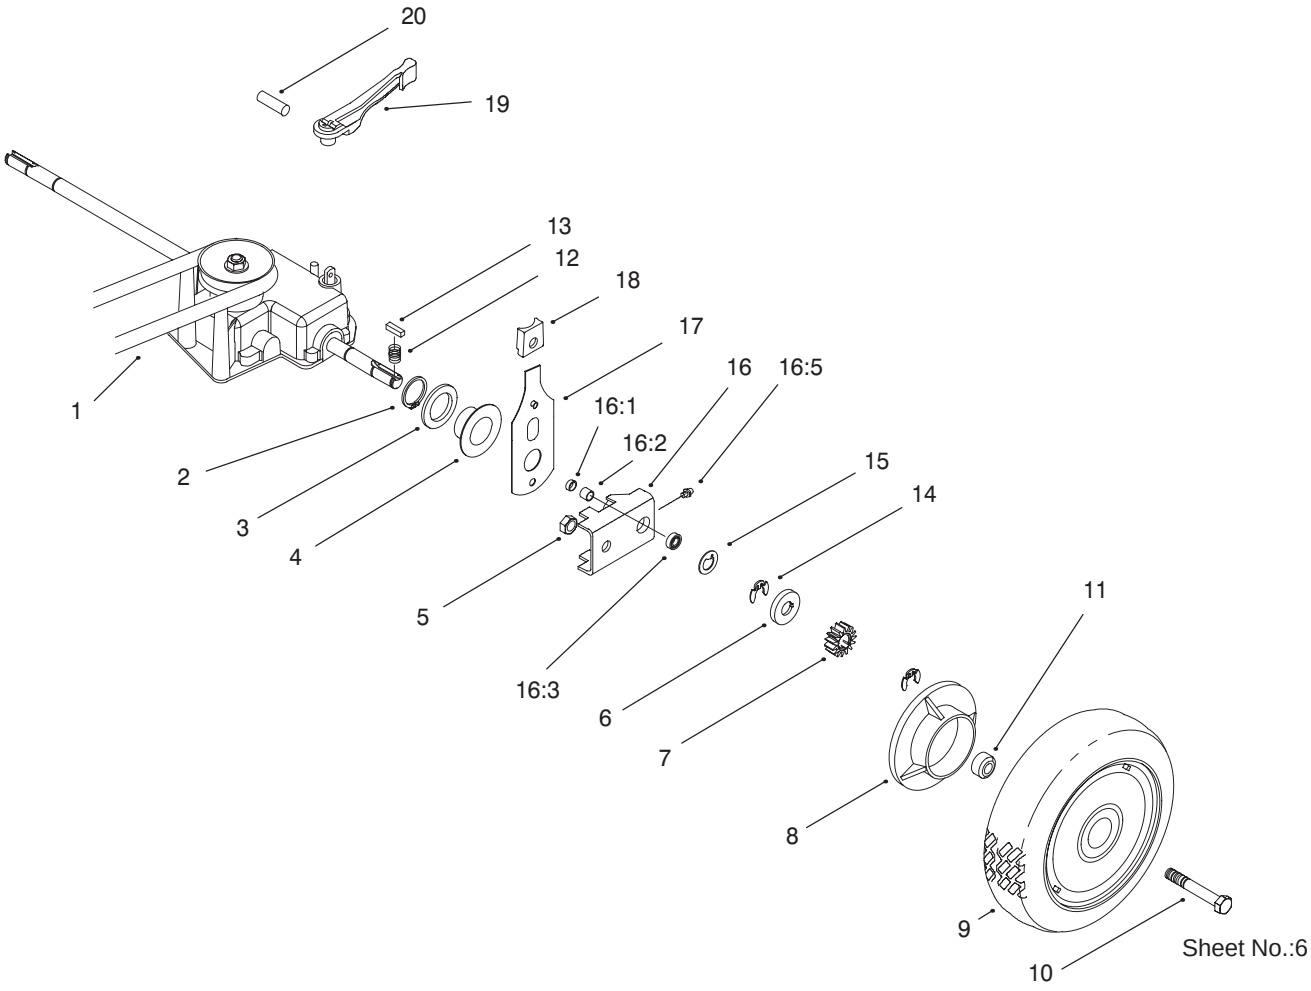

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	36–8070	1	V–Belt
2	32151–36	2	Ring–Retaining
3	74–1810	2	Washer
4	48–2170	2	Cap–End
5	32152–2	2	Nut–Conelock
6	62–3830	2	Washer–Outer Thrust
7	39–9160	2	Gear–Pinion
8	74–1640	2	Cover–Wheel
9	74–1720	2	Wheel & Tire ASM Sp
10	323–13	2	Screw–HH
11	74–1650	2	Spacer–Wheel Cover
12	39–9650	2	Spring–Comp
13	612066	2	Key Burg–Nort
14	32151–68	4	Ring–Retaining
15	49–7700	2	Washer–Outer Thrust
16	74–1851	2	Pivot Arm Assembly
16:1	47–6730	1	Seal–Oil
16:2	48–2060	1	Bearing–Roller
16:3	52–2450	1	Bearing–Wheel
16:5	92–6316	1	Zerk – Special Drive
17	66–7561	2	Rear Spring Arm ASM
18	25–7740	2	Knob–Arm
19	74–1960	1	Lever–Shift
20	32121–99	1	Pin–Coil

Ref. No.	Part No.	Qty.	Description

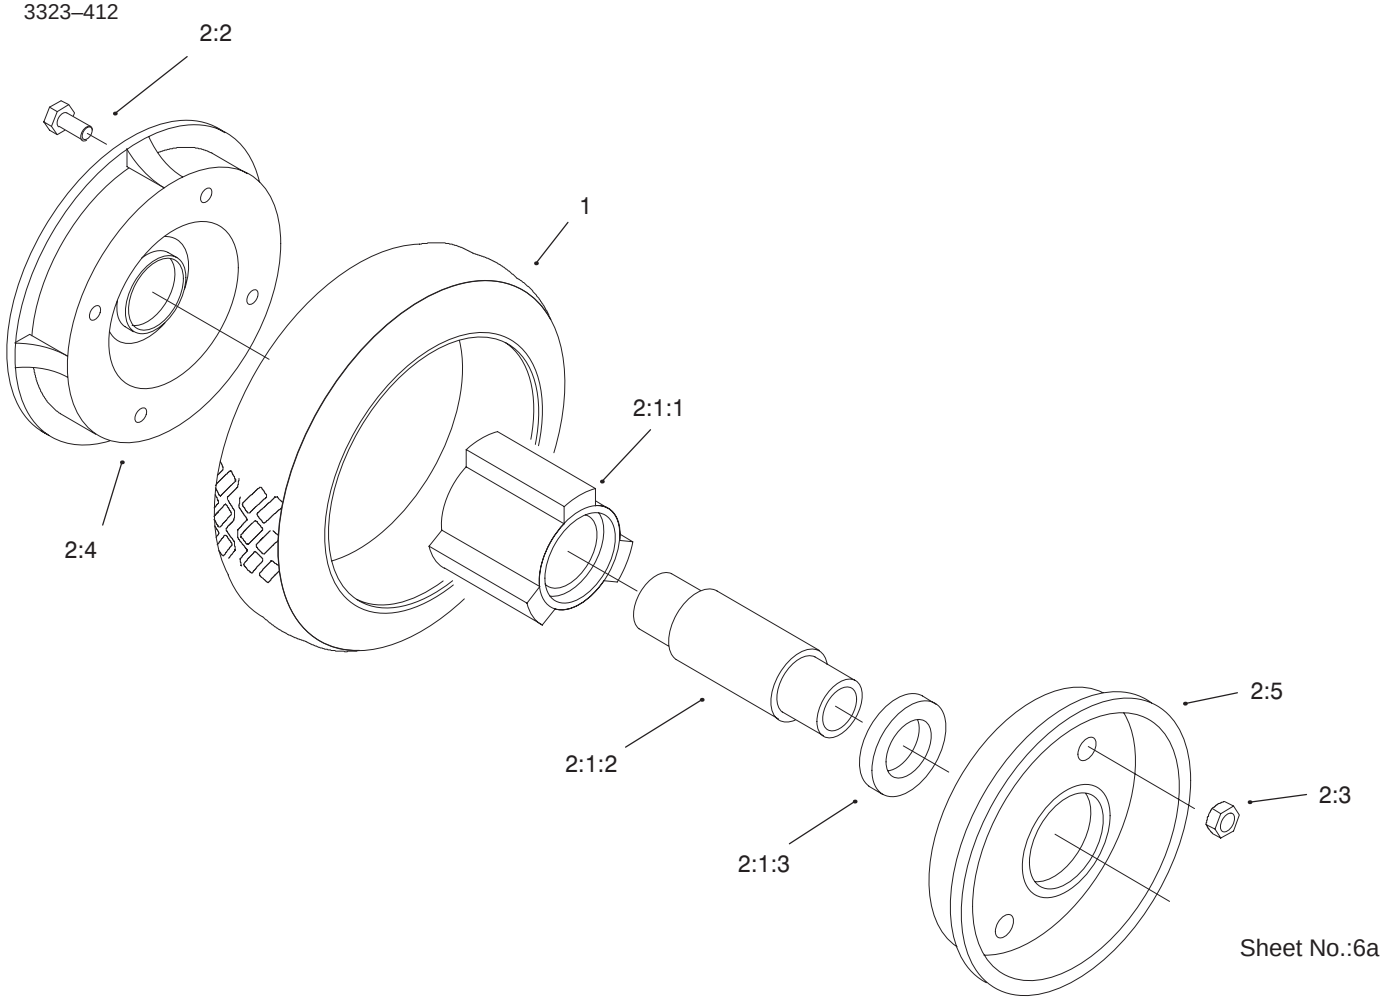


Sheet No.:6a

Bagging Assembly

Ref. No.	Part No.	Qty.	Description
1	53–7740	1	Tire
*2		1	Wheel ASM Sp
*2:1		1	Hub & Brg ASM
2:1:1	52–2410	1	Hub–Bearing Supt
2:1:2	52–2440	1	Spacer–Bearing
2:1:3	52–2450	2	Bearing–Wheel
2:2	321–2	4	Screw–HH
2:3	3296–42	4	Nut–Lock NI
2:4	53–7780–06	1	Plate–Wheel Half
2:5	92–4957–06	1	Wheel Half/Gear ASM

Ref. No.	Part No.	Qty.	Description

* Not illustrated

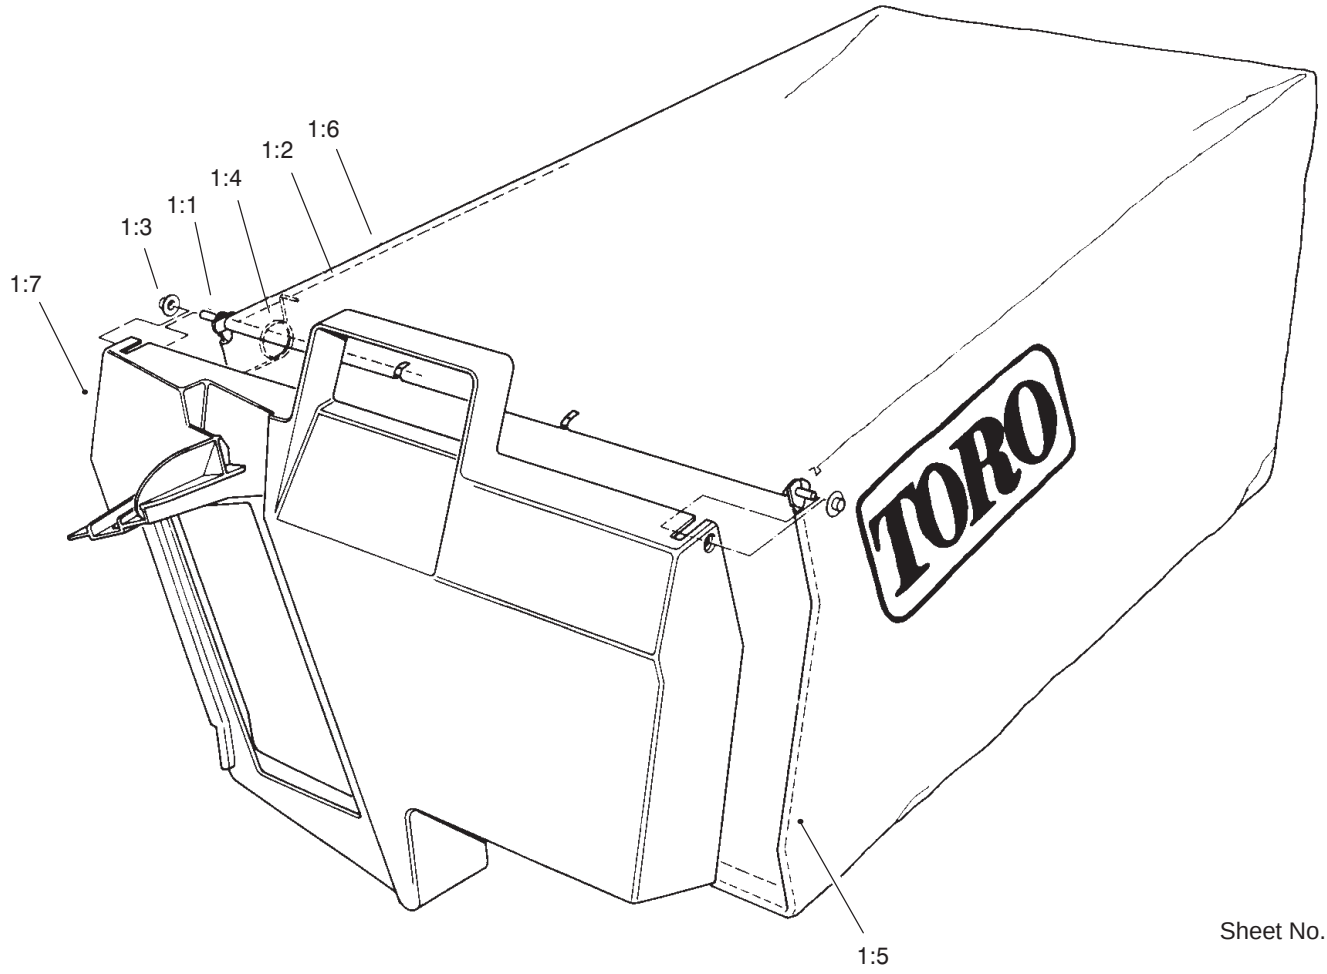

Sheet No.:6b

Bagging Assembly

Ref. No.	Part No.	Qty.	Description
*	99–2535	1	Grass Bag Assy–Service Only
1:1	33–4820	1	Hinge–Bag Door
1:2	42–4030	1	Frame–Upper Bag
1:3	3290–422	2	Nut–Push
1:4	36–6910	2	Spring
1:5	42–4020	1	Frame–Bag
1:6	98–9222	1	ASM – Grass Bag
1:7	48–2840	1	Door–grass Bag

Ref. No.	Part No.	Qty.	Description

*Not illustrated


TORO®