Form No. 3323–466

LAWN-BOY®

Silver Series®

21” Walk–Behind Mower

Model No. 10335–200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© Lawn-Boy, Inc. — 2000
All Rights Reserved

Contents

Description	Page
Housing, Handle Brkt & Wheel Assembly	3
Gear Case Assembly	4
Gear Case & Wheel Assembly	5
Engine & Blade Assembly	6
Handle & Controls Assembly	7
Grass Bagging Assembly	8
Carburetor No. 640119	9
Engine LEV120–361003A	10–12
Recoil Starter Assembly 590702	13
Recoil Starter Assembly 590739 (Optional)	14
Maintenance	15


Accessories

Description	Model / Part No.
Side Bagging Kit	Model No. 89817
Leaf Bag	Model No. 89804
Leaf Shredder Kit	Model No. 89860
Leaf Bag Kit w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

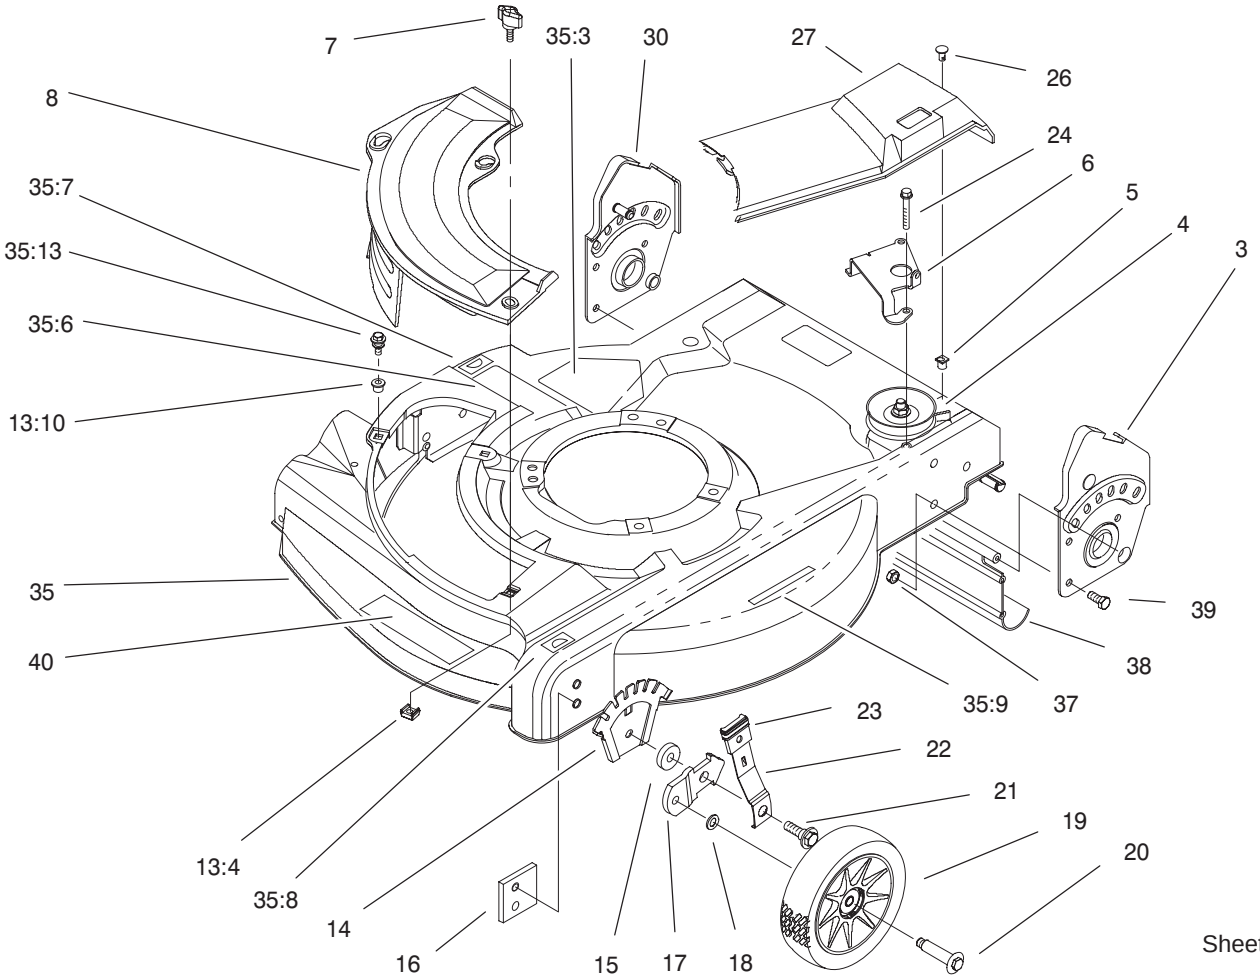


Sheet No.:2

Housing, Handle Brkt & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
3	92–7724	1	LH Handle Bracket ASM
4	92–7735	1	Gear Case Assembly
5	605120	1	Grommet
6	92–7728–03	1	Guide – Transmission
7	98–8332	1	Knob
8	92–8630	1	Plate–Mulch
14	92–4881–03	2	Plate – Height Adjustment
15	92–4890	2	Washer – Wheel
16	92–7731	2	Plate – Baffle
17	95–7403–03	2	Bracket–Wheel Height Adjustment
18	40–1940	2	Washer
19	684776	2	Wheel & Tire ASM
20	92–1099	2	Bolt–Shoulder
21	614672	2	Bolt–Shoulder
22	614687	2	Arm–Front Spring
23	92–1008	4	Knob–Lever, Height Adjustment
24	65–5221	2	Screw–Thread Forming
26	92–9665	1	Screw
27	95–7068	1	Cover – Drive
30	92–7723	1	RH Handle Bracket ASM

Ref. No.	Part No.	Qty.	Description
35	98–4477	1	ASM–Hsg/Baffle w/Decals
35:3	43–8480	1	Decal–Danger
35:4	613765	1	Nut–Cage
35:6	99–6018	1	Decal – Warning
35:7	92–2914	1	Decal – HOC, RH
35:8	92–2915	1	Decal – HOC, LH
35:9	93–7250	1	Decal–Warning
35:10	94–1610	2	Grommet – Plastic
35:13	614677	2	Screw– Sems
37	3296–29	6	Nut–Lock, NI
38	92–8647	1	Shield – Trailing
39	322–3	6	Screw–HH
40	100–6385	1	Decal–Deck
*	95–7052	1	Plate – Chute Opening

* Not illustrated

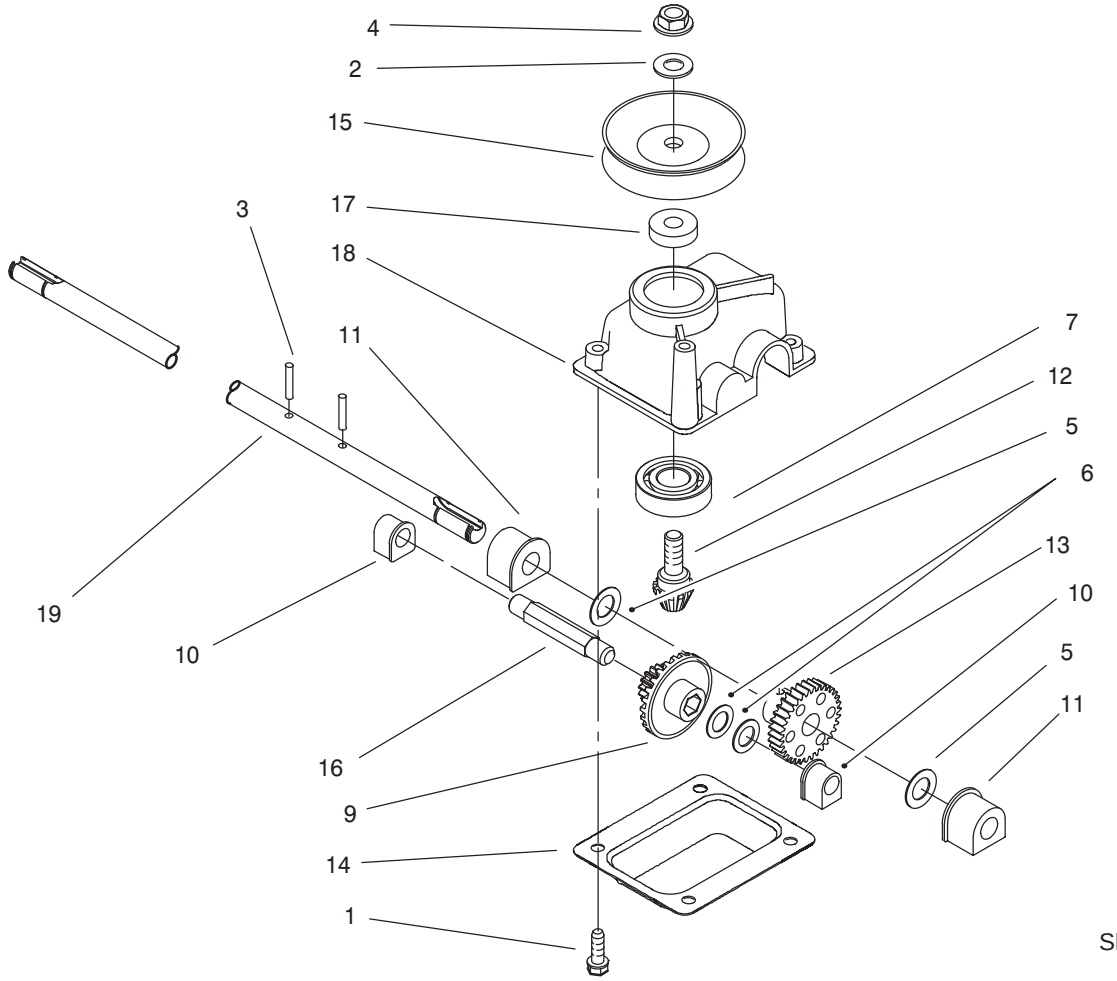


Sheet No.:A1

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	32144–4	4	Screw–HH
2	3256–24	1	Washer–Flat
3	3285–19	2	Pin–Groove
4	3296–5	1	Nut–Lock, NI
5	36–4780	2	Washer
6	36–4791	2	Washer–Thrust
7	38–7820	1	Bearing–Ball
9	55–3760	1	Gear–15t Spur, 37t Bevel
10	60–8750	2	Bushing
11	60–8850	2	Bushing–Output
12	60–8890	1	Gear–Bevel, Pinion
13	614596	1	Gear–34t
14	614668–03	1	Cover–Gear Case
15	614669	2	Half–Pulley
16	614696	1	Shaft–Intermediate
17	62–6660	1	Spacer
18	92–7727	1	Gearcase
19	93–0239	1	Shaft – Output


Ref. No.	Part No.	Qty.	Description

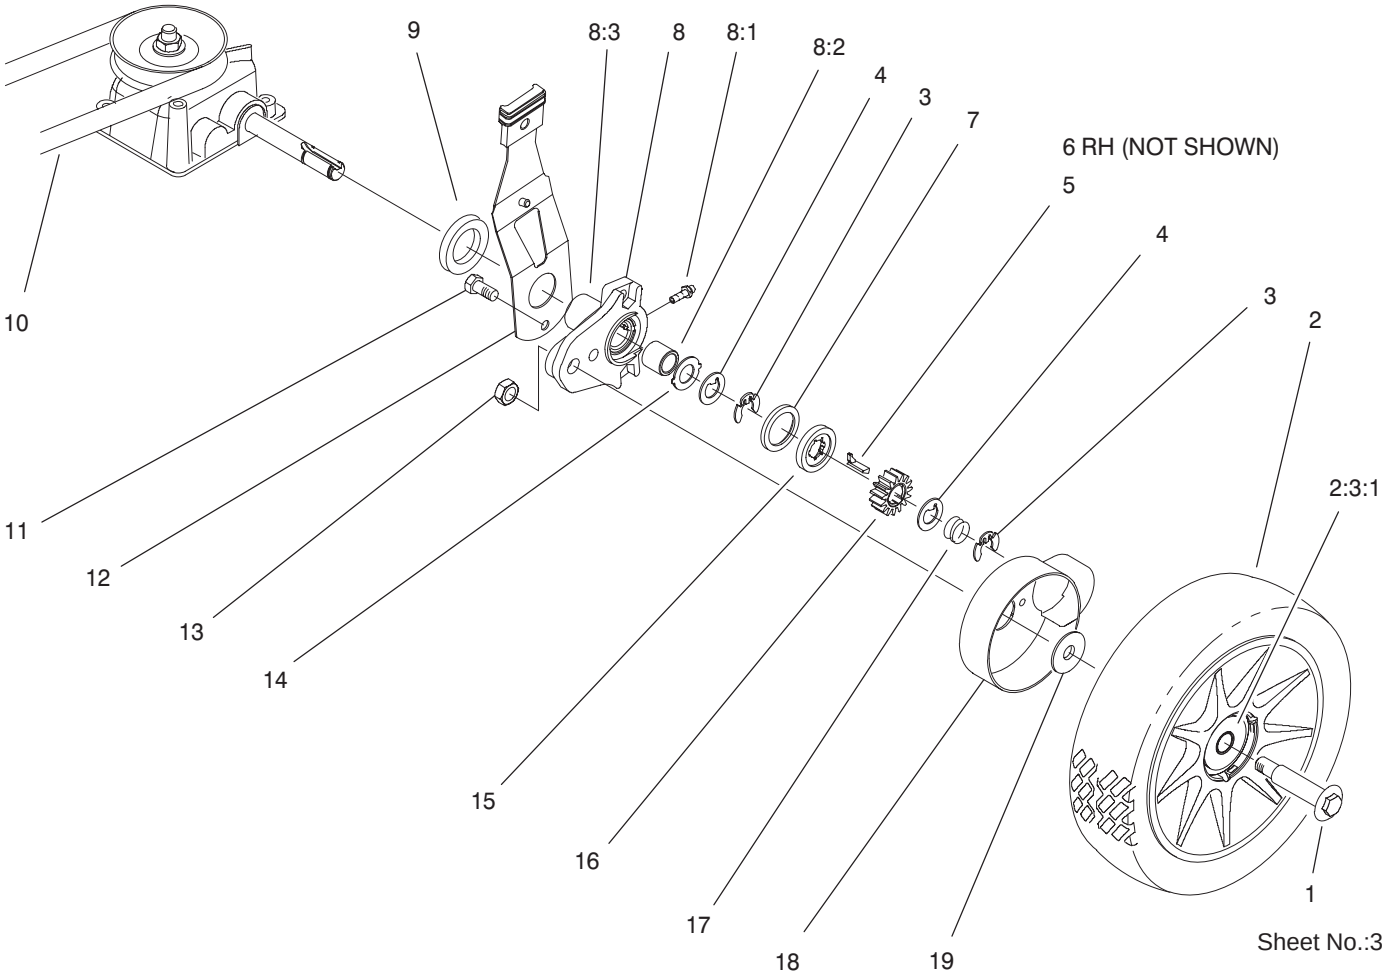

Gear Case & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	92–1057	2	Bolt–Shoulder
2	92–1042	2	8” Wheel & Tire ASM
2:3:1	27–6250	2	Bushing
3	65–2720	4	Ring–Klip, Sp
4	65–4740	4	Washer–Thrust, Keyed
5	66–6050	1	Key–Rocking, LH
6	66–6040	1	Key–Rocking, RH
7	65–4710	2	Ring–Friction
8	92–7746	2	Arm ASM–Rear Height Adjustment
8:1	302–56	1	Fitting–Zerk
8:2	47–2900	1	Bushing
8:3	70–9760	1	Bushing
9	614447	2	Spacer–Axle Shaft
10	93–7381	1	V–Belt
11	32144–85	2	Screw–HH
12	92–1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65–4730	2	Washer–Arm, Pivot
15	65–4760	2	Washer
16	65–4750	2	Gear–Pinion
17	65–4720	2	Spring–Compression
18	94–1609	2	Cover–Wheel
19	614426	2	Washer–Stepped

Ref. No.	Part No.	Qty.	Description

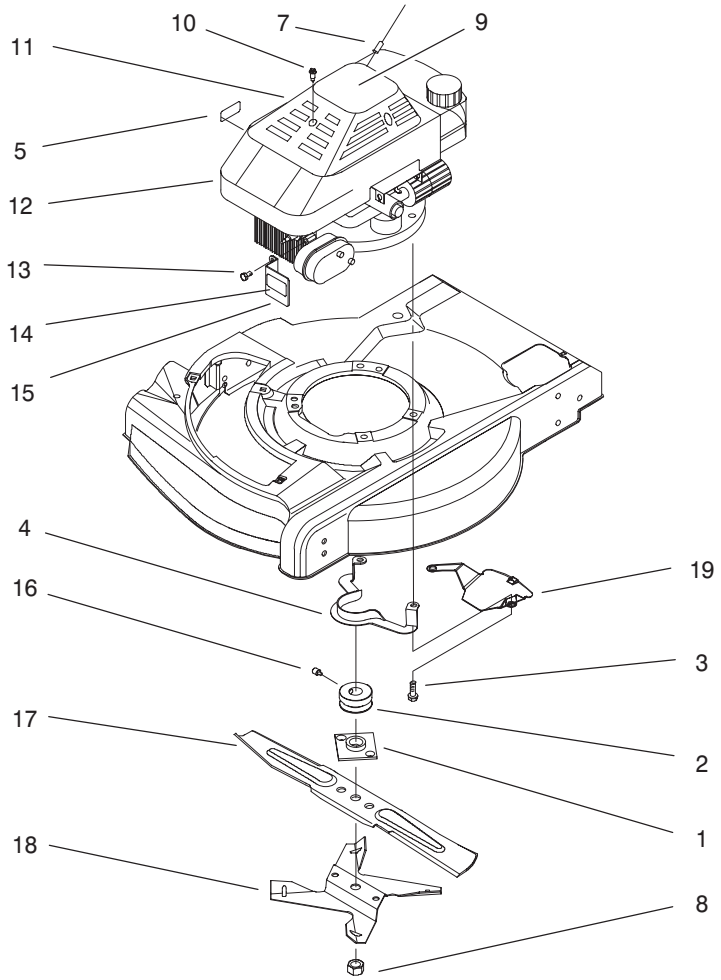


Sheet No.:4

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM
2	92–9575	1	Pulley
3	95–1726	3	Screw–Taptite w/Patch
4	92–1024–03	1	Guide–Belt
5	92–4851	1	Decal– Oil Instr.
7	92–1701	1	Rope – Stop
8	603164	1	Nut–Blade
9	95–5591	1	Decal – Recoil
10	92–4852	4	Screw – Recoil Cover
11	92–4854	1	Cover – Starter
12	94–6088–02	1	Shroud – Engine
13	32144–85	1	Screw–HH
14	65–2690	1	Decal–Surface, Hot
15	94–6066–03	1	Guard – Muffler
15	95–5569	1	ASM – Muffler Guard
16	104–0214	1	Screw–Set,Cone Point
17	612543	1	Blade
18	99–6351–03	1	Fan – Mulching
19	93–4196–03	1	Shield – Grass

Ref. No.	Part No.	Qty.	Description

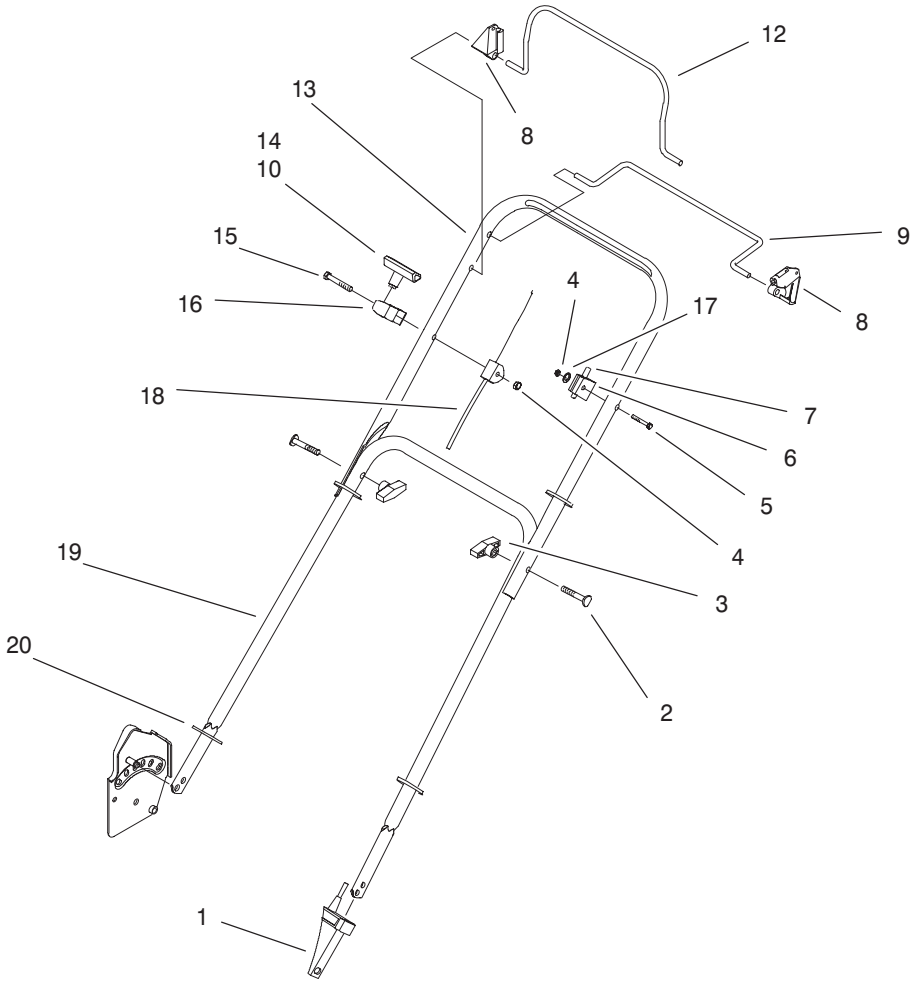


Sheet No.:5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	93–7380	1	Anchor – Cable
2	614697	2	Screw
3	98–7134	2	Knob–Handle
4	3296–73	2	Nut–Lock, NI
5	92–2266	1	Screw–Handle
6	92–7729	1	Anchor–Upper Sp Cable
7	100–5982	1	Cable–Ground Speed
8	92–5412	2	Stop–Pivot
9	92–1001–03	1	Bail–Control
10	92–5424	1	Staple–Handle
12	93–4184–03	1	Bail – Brake
13	100–2888–05	1	Handle–Upper
14	92–4853	1	Handle–Starter
15	321–50	1	Screw–HH
16	93–7383	1	Rope – Guide
17	3256–1	1	Washer–Flat
18	100–5989	1	Brake Cable ASM.
19	614643–05	1	Section–Lower Handle
20	93–3653	1	Guard – Handle

Ref. No.	Part No.	Qty.	Description

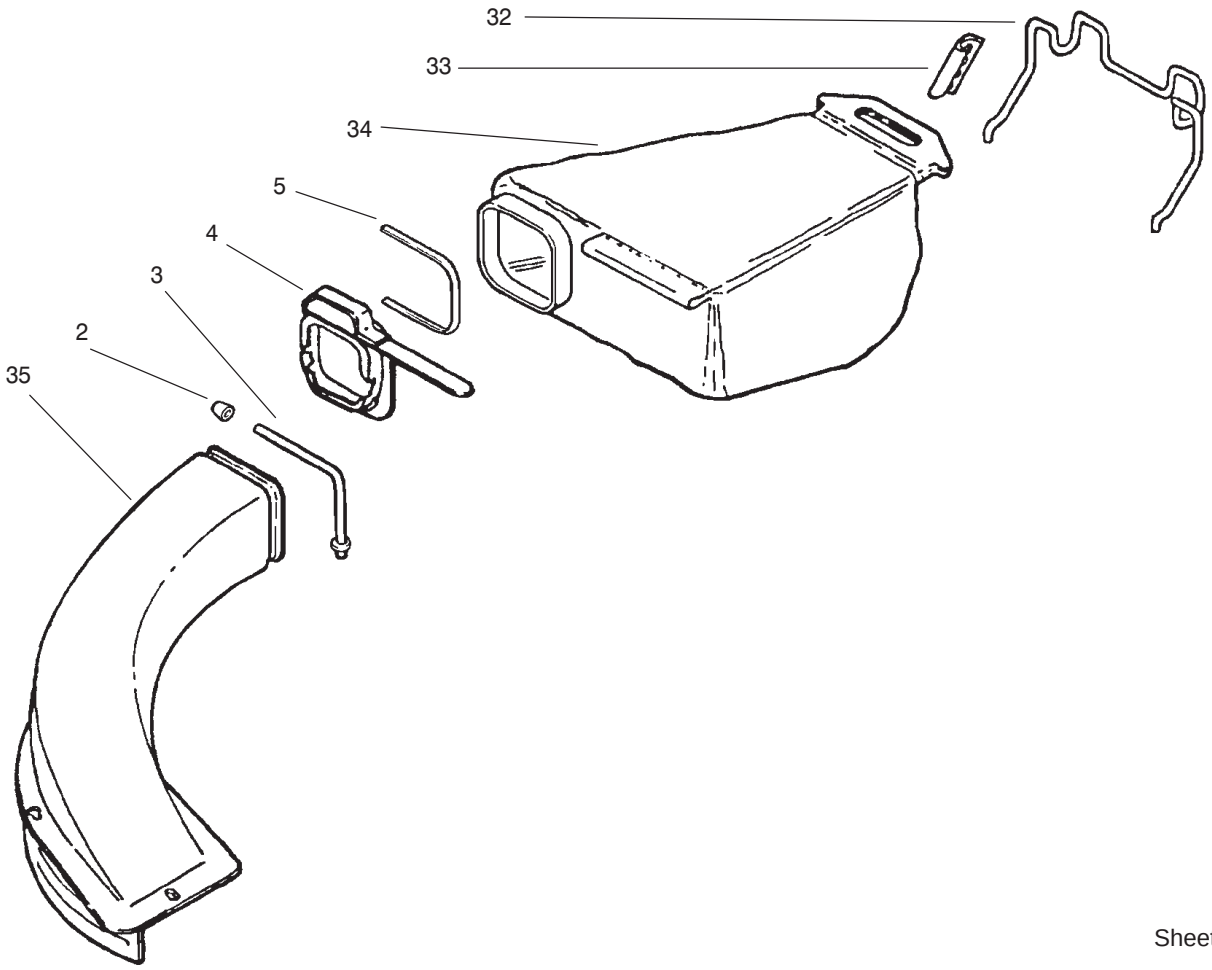


Sheet No.:A2

Grass Bagging Assembly

Ref. No.	Part No.	Qty.	Description
2	614589	1	Nut–Cap
3	614591	1	Support–Chute
4	684727–03	1	ASM–Adapter
5	614700	1	Tie Strap
32	613455	1	Wire Hanger,
33	613462–03	2	Clamp–Hanger
34	100–6361	1	Bag & Adapter ASM.
35	684729	1	Chute & Support
*	100–6362	1	Replacement Bag ASM.


Ref. No.	Part No.	Qty.	Description

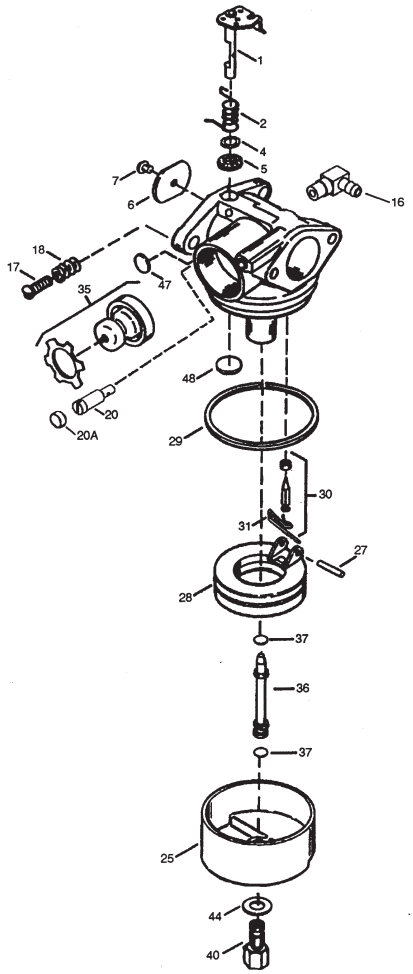

Carburetor No. 640119

Ref. No.	Part No.	Qty.	Description
0	640119	1	Carburetor
1	631615	1	Throttle Shaft & Lever Assembly
2	631767	1	Throttle Return Spring
4	631184	1	Dust Seal Washer
5	631183	1	Dust Seal (Throttle)
6	640070	1	Throttle Shutter
7	650506	1	Shutter Screw
16	631807	1	Fuel Fitting
17	651025	1	Throttle Crack Screw/Idle Speed Screw
18	630766	1	Tension Spring
20	640016	1	Idle Restrictor Screw
20A	640053	1	Idle Restrictor Screw Cap
25	631867	1	Float Bowl
27	631024	1	Float Shaft
28	632019	1	Float
29	631028	1	Float Bowl ”O” Ring
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)
31	631022	1	Spring Clip
35	36045A	1	Primer Bulb/Retainer Ring
36	632735	1	Main Nozzle Tube
37	632547	2	O–Ring, Main Nozzle Tube
40	640028	1	High Speed Bowl Nut
44	27110	1	Bowl Nut Washer
47	630748	1	Welch Plug, Idle Mixture Well
48	631027	1	Welch Plug, Atmospheric Vent

Engine LEV120–361003A

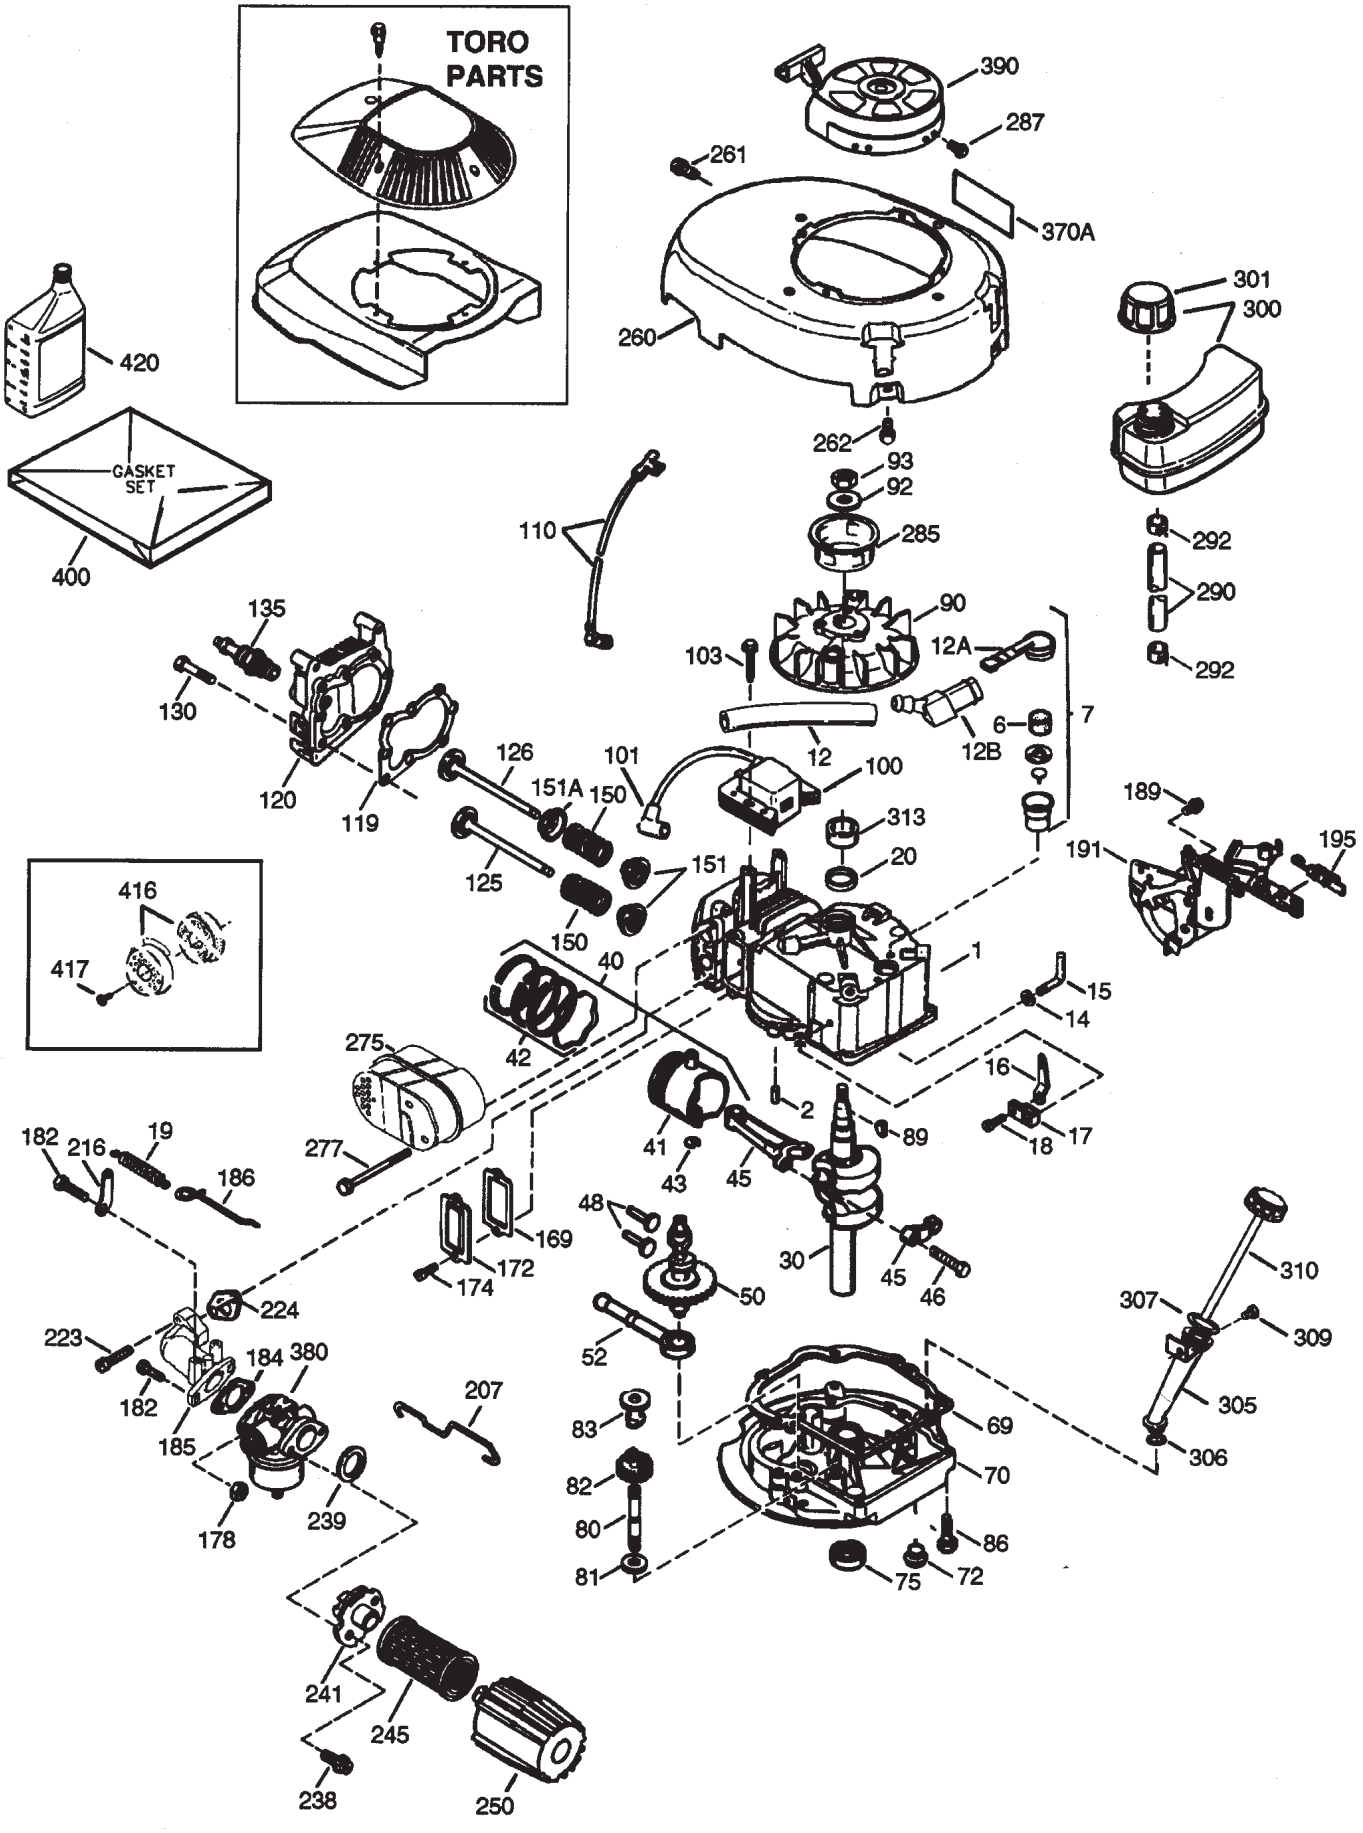

Engine LEV120–361003A


Ref. No.	Part No.	Qty.	Description
1	36774	1	Cylinder (Incl. 2 & 20)
2	26727	2	Dowel Pin
6	33734	1	Breather Element
7	36557	1	Breather Body ASM (Incl. 6 & 12A)
12	36775	1	Breather Tube
12A	36558	1	Breather Cover & Tube (Incl. 12B)
12B	36694	1	Breather Tube Elbow
14	28277	1	Washer
15	30589	1	Governor Rod (Incl. 14)
16	34839A	1	Governor Lever
17	31335	1	Governor Lever Clamp
18	651018	1	Screw
19	36281	1	Extension Spring
20	32600	1	Oil Seal
30	36597	1	Crankshaft
40	40027	1	Piston, Pin & Ring Set (Std.)
40	40028	1	Piston, Pin & Ring Set (.010” OS)
41	40025	1	Piston & Pin ASM (Std.) (Incl. 43)
41	40026	1	Piston & Pin ASM (.010” OS) (Incl. 43)
42	40006	1	Ring Set (Std.)
42	40007	1	Ring Set (.010” OS)
43	20381	2	Piston Pin Retaining Ring
45	36777	1	Connecting Rod ASM (Incl. 46)
46	32610A	2	Connecting Rod Bolt
48	27241	2	Valve Lifter
50	36778	1	Camshaft (MCR)
52	29914	1	Oil Pump ASM
69	35261	1	Mounting Flange Gasket
70	36995	1	Mounting Flange (Incl. 72 thru 83)
72	36083	1	Oil Drain Plug
75	27897	1	Oil Seal
80	30574A	1	Governor Shaft
81	30590A	1	Washer
82	30591	1	Governor Gear ASM (Incl. 81)
83	30588A	1	Governor Spool
86	650488	6	Screw
89	611004	1	Flywheel Key
90	611112	1	Flywheel
92	650815	1	Belleville Washer
93	650816	1	Flywheel Nut
100	34443B	1	Solid State Ignition
101	610118	1	Spark Plug Cover
103	651007	2	Screw, Torx T–15
110	37047	1	Ground Wire
119	36787	1	Cylinder Head Gasket
120	36825	1	Cylinder Head

Ref. No.	Part No.	Qty.	Description
125	36779	1	Exhaust Valve (Std.) (Incl. 151)
125	36780	1	Exhaust Valve (1/32” OS) (Incl. 151)
126	36781	1	Intake Valve (Std.) (Incl. 151)
126	36782	1	Intake Valve (1/32” OS) (Incl. 151)
130	6021A	6	Screw
135	35395	1	Resistor Spark Plug (RJ19LM)
150	35991	2	Valve Spring
151	31673	2	Valve Spring Cap
151A	40017	1	Intake Valve Seal
169	36783	1	Valve Cover Gasket
172	36784	1	Valve Cover
174	30200	2	Screw
178	29752	2	Nut & Lock Washer
182	6201	2	Screw
184	26756	1	Carburetor To Intake Pipe Gasket
185	36785	1	Intake Pipe
186	32653	1	Governor Link
189	650839	2	Screw
191	36559	1	S.E. Brake Bracket (Incl. 195)
195	610973	1	Terminal
207	34336	1	Throttle Link
216	33086	1	R.P.M. Adjusting Lever
223	650451	2	Screw
224	36786	1	Intake Pipe Gasket
238	650932	2	Screw
239	34338	1	Air Cleaner Gasket
241	35797	1	Air Cleaner Collar
245	35066	1	Air Cleaner Filter
250	35986	1	Air Cleaner Cover
260	36999	1	Blower Housing
261	30200	2	Screw
262	650831	2	Screw
275	36790	1	Muffler
277	650988	2	Screw
285	35000A	1	Starter Cup
287	650926	2	Screw
290	34357	1	Fuel Line
292	26460	2	Fuel Line Clamp
300	35586	1	Fuel Tank (Incl. 292 & 301)
301	36246	1	Fuel Cap
305	35819A	1	Oil Fill Tube
306	36996	1	”O”–Ring
307	35499	1	”O”–Ring
309	651014	1	Screw
310	36259	1	Dipstick
313	34080	1	Spacer
370A	36261	1	Lubrication Decal
380	640119	1	Carburetor (Incl. 184)

Engine LEV120–361003A

Ref. No.	Part No.	Qty.	Description
390	590702	1	Rewind Starter (NOTE: This engine could have been built with 590739 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange. Refer to service bulletin 116.)
400	36792B	1	Gasket Set (Incl. Items Marked PK in Notes) Incl. part # 26756 (1), 28833 (1) 34338 (1), 36783 (1), 36786 (1) 36787 (1), 36832 (1), 36996 (1), 37130 (1).
416	36085	1	Spark Arrestor Kit (Incl. 417) (Optional)
417	650760	1	Screw (Optional)
420	730225	1	SAE 30 4–Cycle Engine Oil (Quart)


Ref. No.	Part No.	Qty.	Description

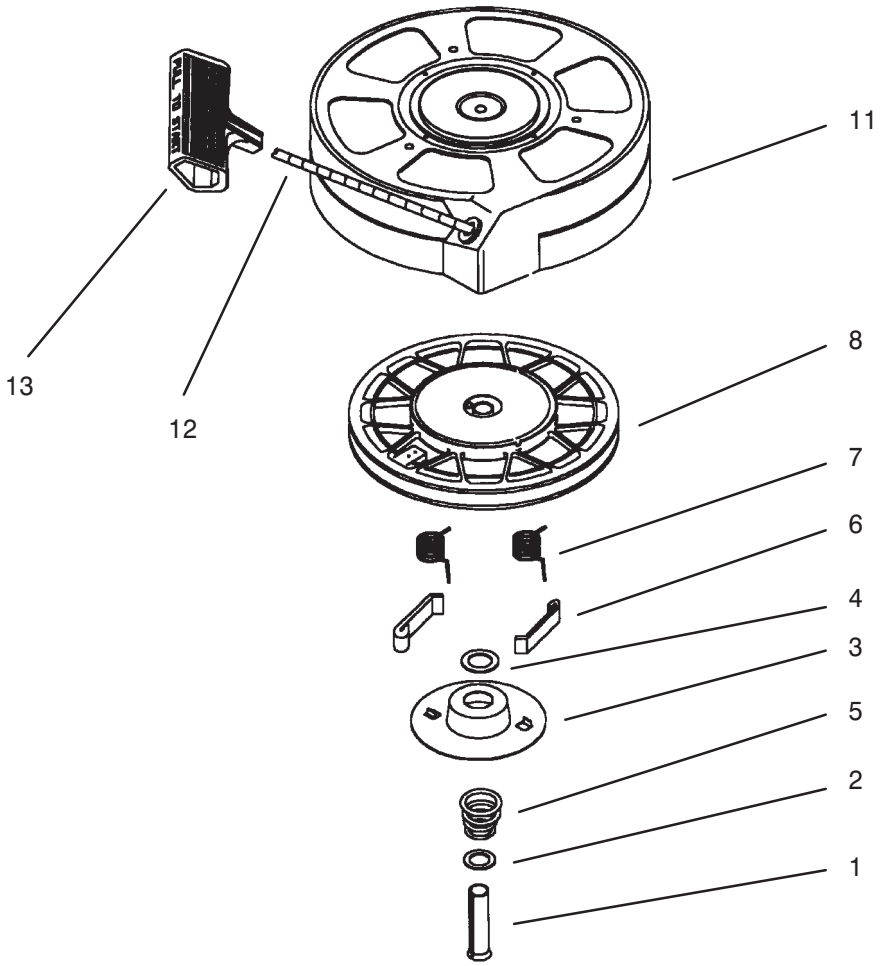

Recoil Starter Assembly 590702

Ref. No.	Part No.	Qty.	Description
0	590702	1	Recoil Starter
1	590599A	1	Spring Pin (Incl. 4)
2	590600	1	Washer
3	590696	1	Retainer
4	590601	2	Washer
5	590697	1	Brake Spring
6	590698	2	Starter Dog
7	590699	2	Dog Spring
8	590700	1	Pulley & Rewind Spring ASM
11	590703	1	Starter Housing ASM (40 degree grommet)
12	590535	1	Starter Rope (98” X 9/64” dia.)
13	590701	1	Starter Handle

Ref. No.	Part No.	Qty.	Description

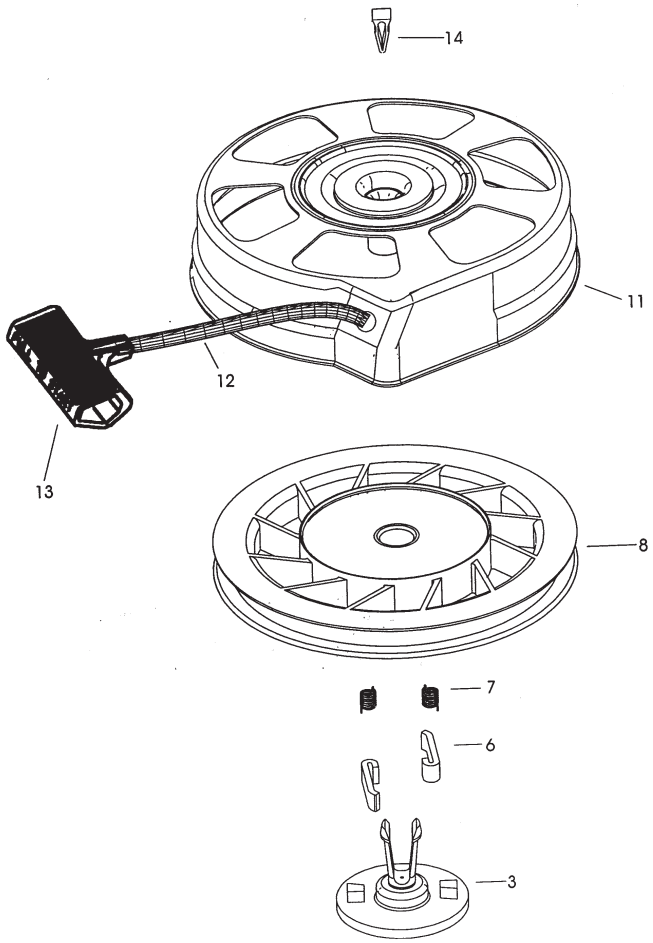

Recoil Starter Assembly 590739 (Optional)

Ref. No.	Part No.	Qty.	Description
0	590739	1	Rewind Starter
3	590740	1	Retainer
6	590616	2	Starter Dog
7	590617	2	Dog Spring
8	590618A	1	Pulley & Rewind Spring ASM
11	590638	1	Starter Housing ASM (40 degree grommet)
12	590535	1	Starter Rope (Length 98” x 9/64” dia.)
13	590701	1	Starter Handle
14	590741	1	Locking Tab

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

LAWN-BOY®