Form No. 3323–468

LAWN-BOY®

Silver Pro Series™

Walk–Behind Mower

Model No. 10247–200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© Lawn-Boy, Inc. — 1999
All Rights Reserved

Contents

Description	Page
Housing, Handle Bracket & Wheel Assembly	3
Engine & Blade Assembly	4
Handles & Controls Assembly	5
Engine Assembly	6
Engine Assembly (cont.)	7
Short Block Assembly	8
Carburetor Assembly	9
Maintenance	10–11


Accessories

Description	Model / Part No.
Side Bagging Kit	Model No. 89817
Rear Bagging Kit	Model No. 89800
Leaf Bag	Model No. 89804
Leaf Shredder Kit	Model No. 89860
Leaf Bag Kit w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

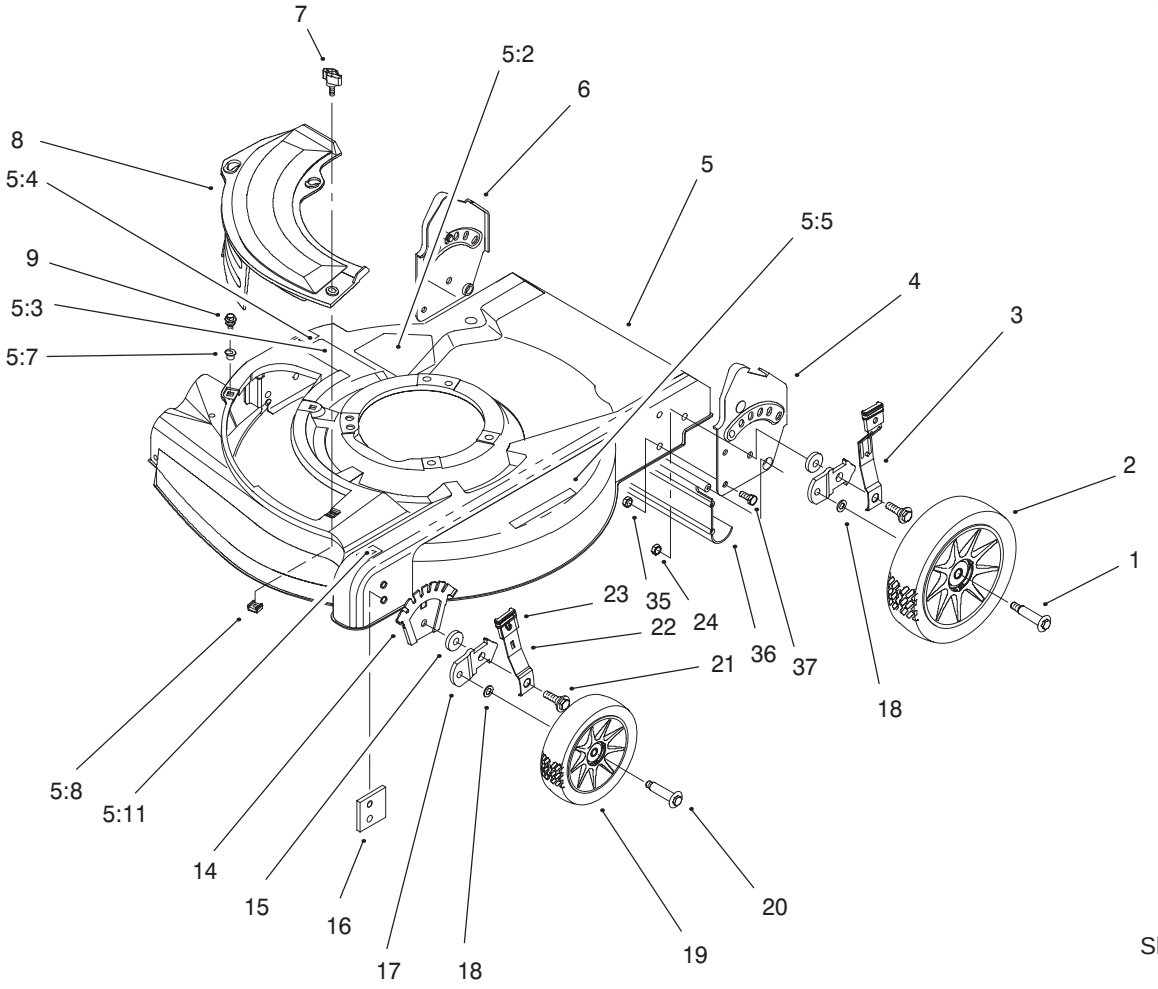


Sheet No.:2

Housing, Handle Bracket & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	614650	2	Bolt–Shoulder
2	684777	2	8” Wheel & Tire ASM
3	92–1005	2	Spring Arm ASM – Rear
4	92–7743	1	LH Handle Brkt ASM
5	98–4471	1	ASM–Hsg/Baffle w/Decals
5:2	43–8480	1	Decal–Danger
5:3	99–6018	1	Decal–Warning
5:4	92–2914	1	Decal – HOC R
5:5	93–7250	1	Decal–Warning
5:7	94–1610	2	Grommet – Plastic
5:8	613765	1	Nut–Cage
5:11	92–2915	1	Decal – HOC L
6	92–7742	1	RH Handle Brkt ASM
7	98–8332	1	Knob
8	92–8630	1	Plate–Mulch
9	614677	2	Screw– Sems
14	92–4881–03	2	Plate – Hght Adj
15	92–4890	4	Washer – Wheel
16	92–7731	2	Plate – Baffle
17	95–7403–03	4	Bracket–Wheel Ht Adj
18	40–1940	4	Washer–Wheel Bolt
19	684776	2	6” Wheel & Tire ASM
20	92–1099	2	Bolt–Shoulder 6” Wheel

Ref. No.	Part No.	Qty.	Description
21	614672	4	Bolt–Shoulder
22	614687	2	Arm–Front Spring
23	92–1008	4	Knob–Height Adj Lever
24	3296–39	2	Nut–Lock NI
*31	95–7052	1	Plate – Chute Opening
35	3296–29	4	Nut–Lock NI
36	92–8647	1	Shield – Trailing
37	322–3	4	Screw–HH

*Not illustrated

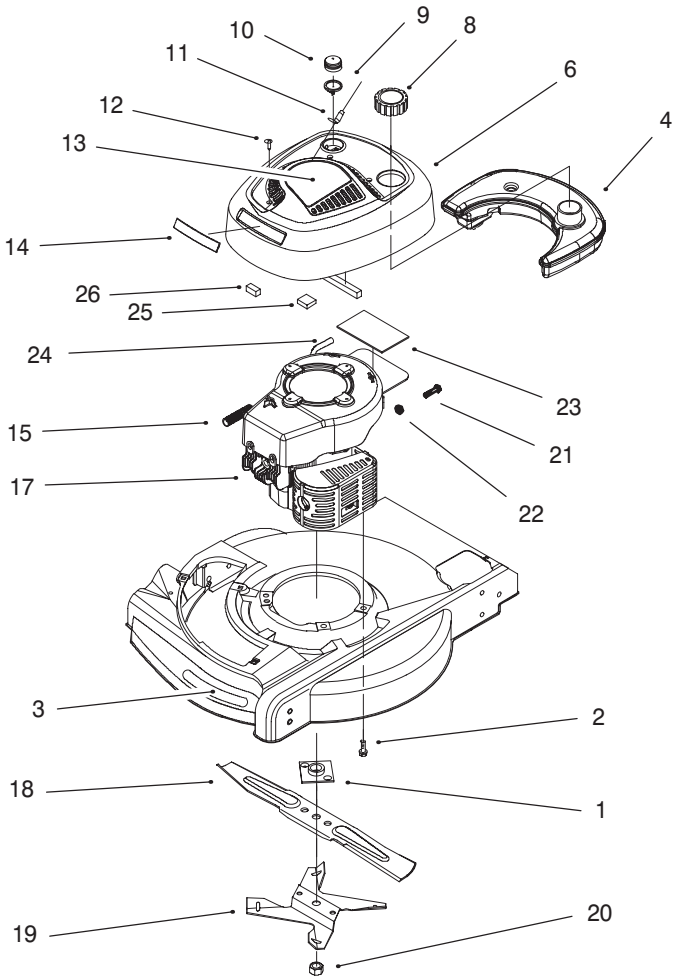


Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM
2	611774	3	Screw–HH
3	100–6388	1	Decal–Deck
4	95–1897	1	Tank
6	100–6398	1	ASM–Shroud/Recoil Cover
8	98–8344	1	Assembly – Cap, Fuel/Oil
9	44–2750	1	Body–Primer
10	66–7460	1	Bulb–Primer
11	92–1701	1	Rope – Stop
12	95–7621	3	Screw–Pan Sems
13	95–7417	1	Decal – Recoil
14	92–8615	1	Applique–Shroud
15	93–4306	1	Spring – Compression
17		1	Engine Ay HP E Silver
18	612543	1	Blade–21” Whirl
19	99–6351–03	1	Fan – Mulching
20	603164	1	Nut–Blade
21	314576	1	Screw–Sems
22	306531	1	Nut–Hex
23	98–1386	1	Pad–Foam
24	612782	1	Line–Gas
25	99–1521	1	Strip–Foam
26	99–1522	2	Strip–Foam

Ref. No.	Part No.	Qty.	Description

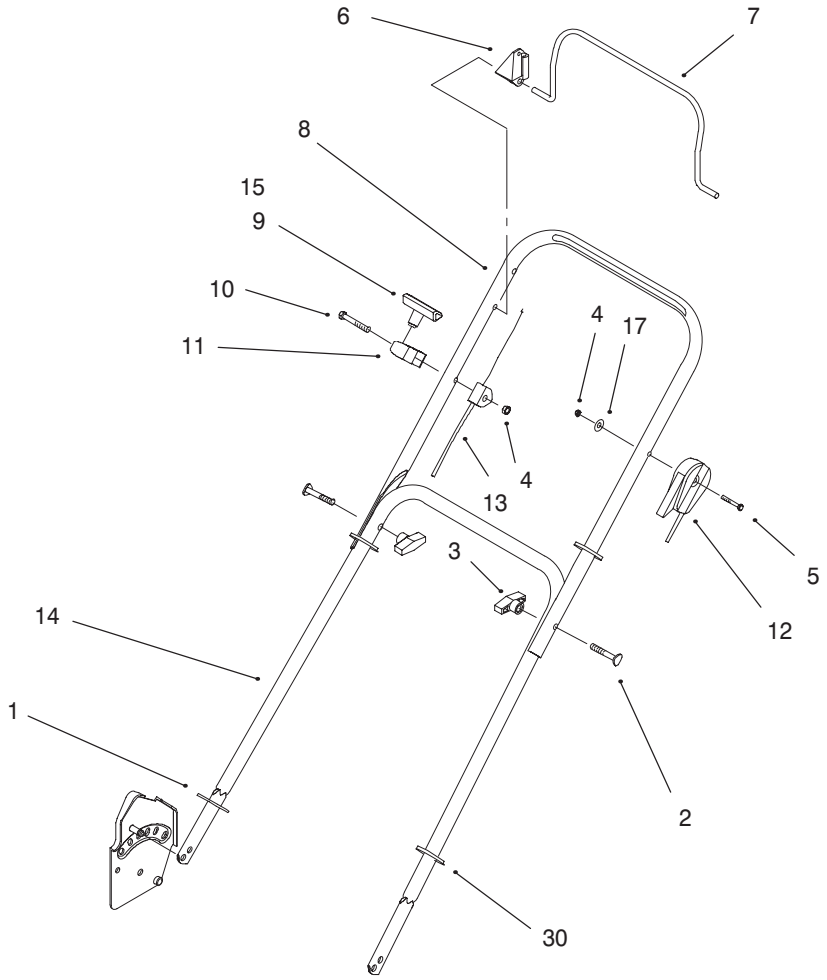


Sheet No.:4

Handles & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	93–3653	1	Guard – Handle
2	614697	2	Screw–HH
3	98–7134	2	Knob–Handle
4	3296–73	2	Nut–Lock NI
5	321–48	1	Screw–HH
6	92–5412	1	Stop–Pivot
7	93–4184–03	1	Bail – Brake
8	100–2888–05	1	Handle – Upper
9	612825	1	Handle–Start Eat
10	321–50	1	Screw–HH
11	93–7383	1	Rope – Guide
12	100–5987	1	Cable – Throttle
13	100–5983	1	Cable – Flywheel Brake
14	614643–05	1	Section–Lower Handle
15	612824	1	Starter–Clip Eat
17	92–8632	1	Washer
30	614249	3	Tie Strap

Ref. No.	Part No.	Qty.	Description

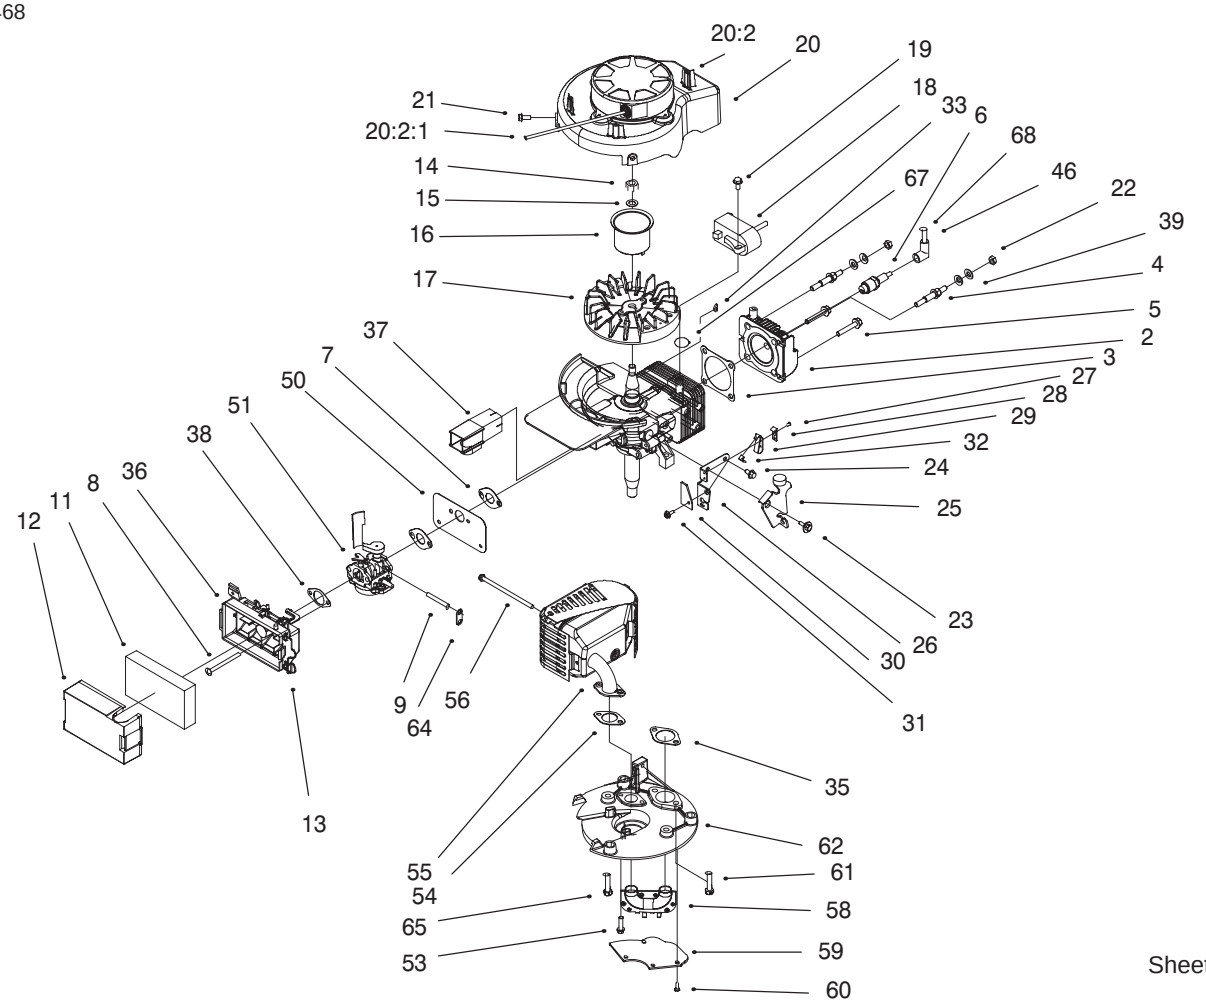


Sheet No.:A1

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95–7636	1	E–S/Block Ser. S
2	94–5776	1	Head–(Mach)
3	94–5778	1	Gasket–Head
4	94–5779	2	Stud Ex
5	94–5780	2	Bolt – Head
6	50–1170	1	Plug–Spark
7	94–5795	2	Gasket–Intake
8	612507	2	Screw Xe
9	95–1861	1	Hose–Primer
11	95–5574	1	Filter–Air
12	95–5577	1	Cover–Air Filter
13	610383	1	Retainer–Fil. Ev
14	130743	1	Nut Xev
15	316959	1	Washer–Lock Xev
16	95–1786	1	Cup–Starter
17	95–1866	1	Flywheel Machined
18	92–1152	1	Ignition–Cd Ev
19	613208	4	Screw–Cd Mtg Xev
20	95–1868	1	Shroud–Recoil
20:2	99–6713	1	Recoil And Decal ASM
20:2:1	613773	1	Rope
21	700094	2	Screw–HH
22	146501	2	Nut Ex
23	95–1870	1	Screw–Shoulder
24	95–1871	1	Screw–HWH
25	93–4312	1	Brake Plate Ay Ev

Ref. No.	Part No.	Qty.	Description
26	84–7820	1	Plate–Brake Mtg
27	3290–459	2	Rivet–Plastic Ev
28	92–2925	1	Strap–Insulation
29	60–9010	1	Strap–Ground Ev
30	100–2929	1	Stop–Gr Strap Ev
31	12–5450	1	Screw–Special Vex
32	98–7037	1	Wire – Lead E
33	607199	1	Key Xev
35	95–1778	1	Gasket–Exhaust
36	95–5588	1	Base Ay–(Air Filter)
37	95–5578	1	Tunnel E
38	95–7613	1	Gasket–Filter
39	3290–456	4	Washer–Belleville
46	684698	1	Cover & Term. Ay S
50	98–1388	1	Shield – Carb. E
51	98–7042	1	Carburetor ASM With Gaskets
53	613208	1	Screw–Hex Washer Hd
54	98–1392	1	Gasket
55	100–9514	1	Muffler & Guard ASM
56	611228	1	Bolt–Console E
58	98–1557	1	Pipe–Transfer
59	98–1591	1	Cover–Muffler
60	700822	4	Screw–HH
61	322–17	2	Screw–HH

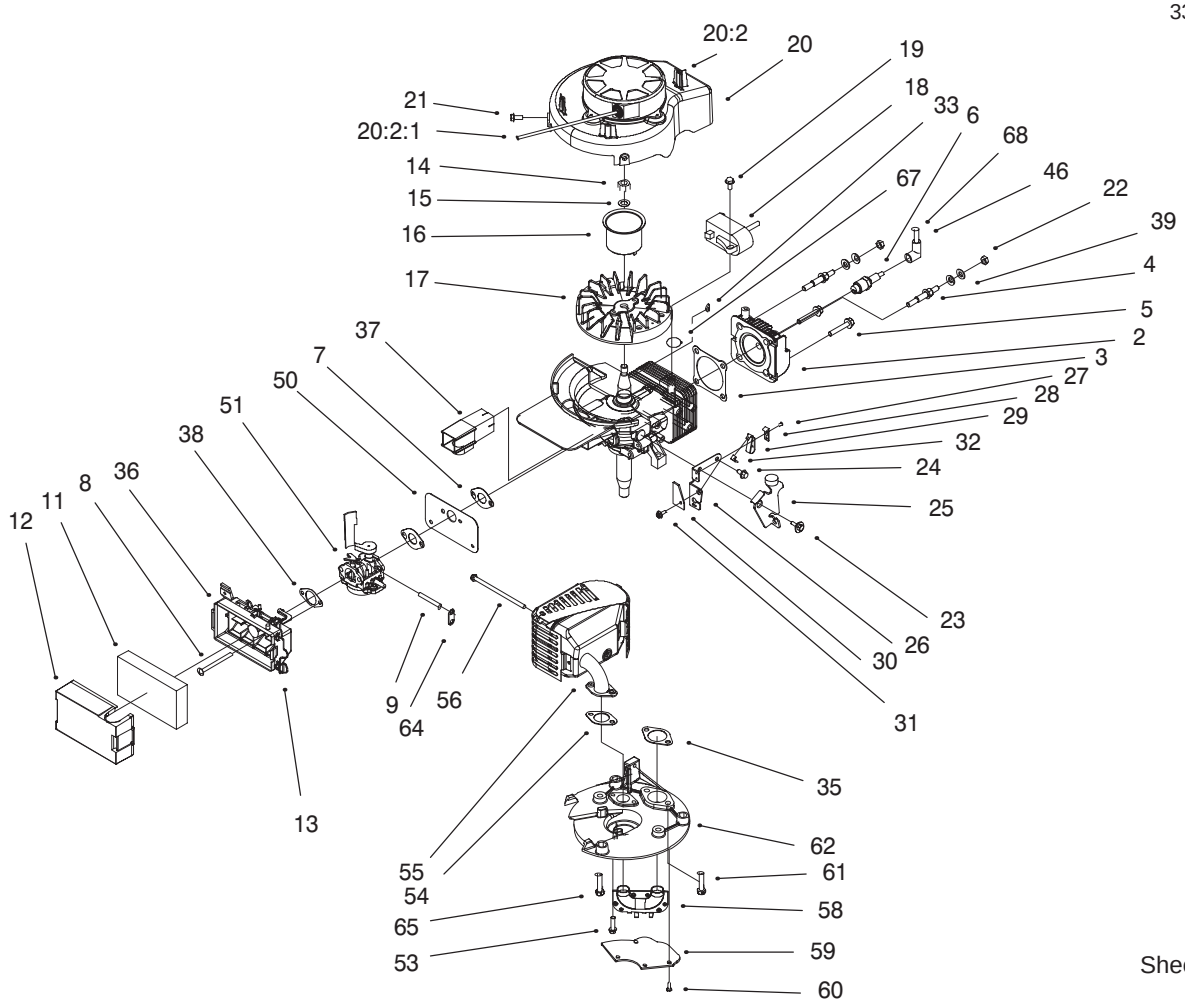


Sheet No.:A1

Engine Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
62	98–1384	1	Plate–Muffler
64	95–7615	1	Hose–Retainer
65	322–7	2	Screw–HH
67	317893	1	Strap–Tie Xef
68	681678	1	Ht Lead&cover Xev

Ref. No.	Part No.	Qty.	Description

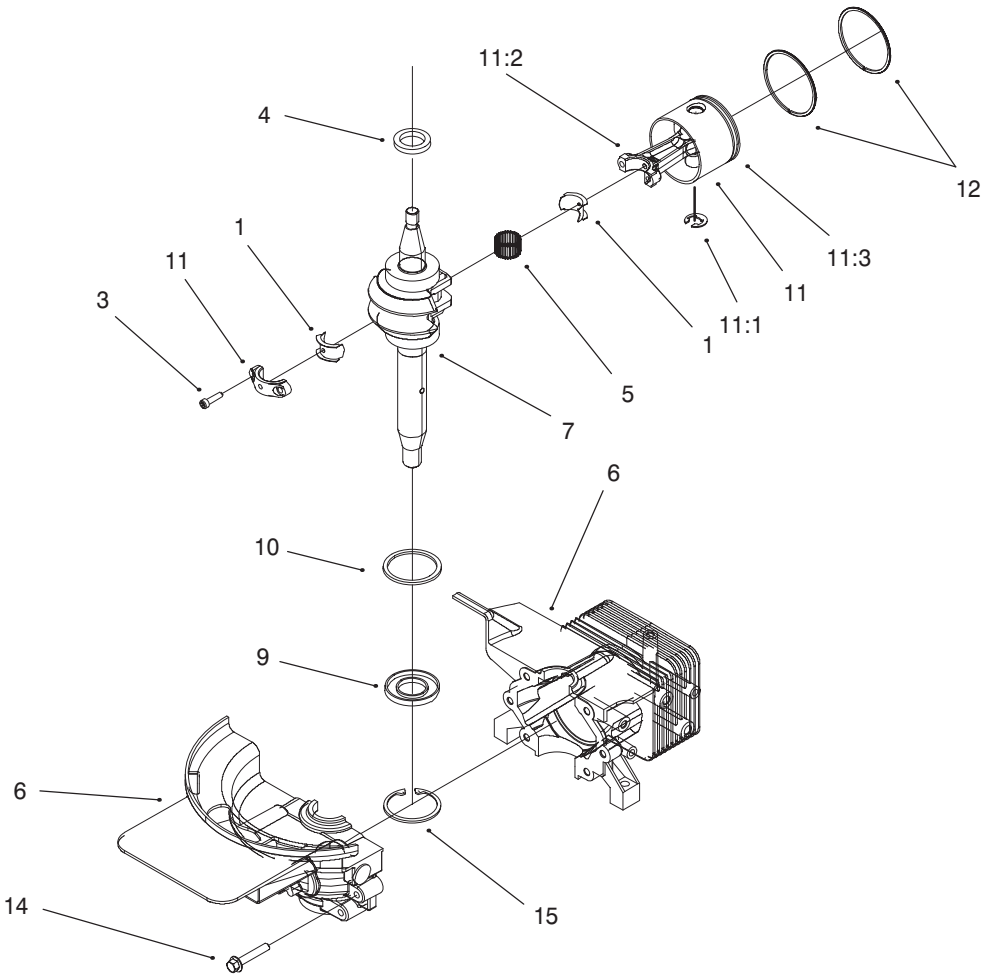


Sheet No.:A5

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner Ay
2	610372	2	Sealer–Loctite
2	609790	2	Sealant–50cc #2
3	611393	4	Screw–Rod
4	611396	1	Seal– Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
7	99–2920	1	Crankshaft And Bearing ASM For Service
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11		1	Piston&rod Ay
11:1	303712	2	Ring– Retaining
11:2	95–7629	1	Connecting Rod ASM(Serial No. 200000001 –200004820)
11:2	100–2915	1	Connecting Rod ASM (Serial No. 200004821 & Up)

Ref. No.	Part No.	Qty.	Description
11:3	95–7628	1	Piston ASM With Piston Rings (Serial No. 200000001 –200004820
11:3	100–2916	1	Piston ASM With Piston Rings (Serial No. 200004821 & Up)
12	95–7626	1	Ring Set – Service (Serial No. 200000001 –200004820
12	100–2917	1	Ring Set – Service (Serial No. 200004821 & Up)
14	94–5781	12	Screw
15	98–7046	1	Ring – Retaining

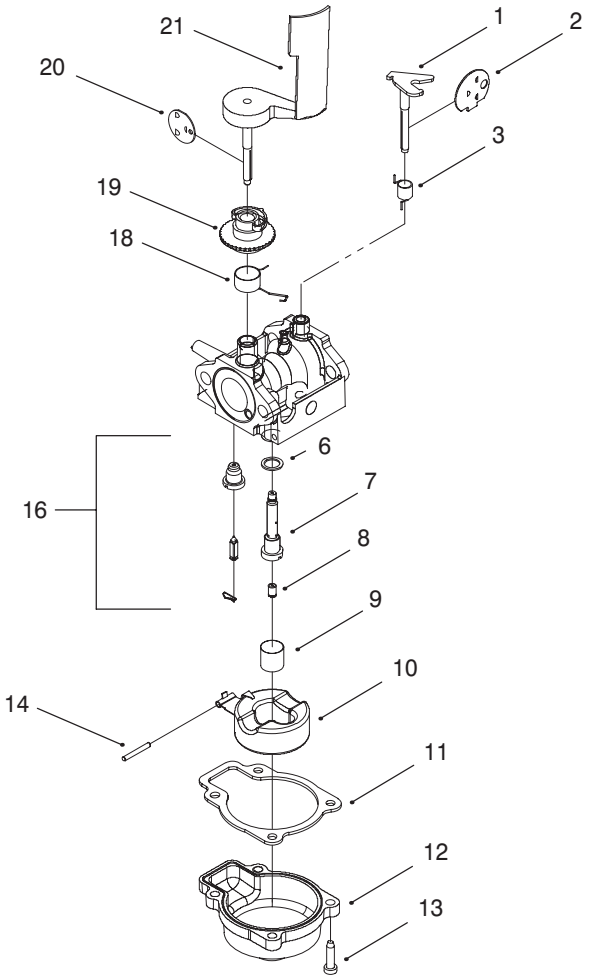

Sheet No.:A6

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	95–5581	1	Shaft–Choke
2	94–5788	1	Disc – Choke
3	95–5583	1	Spring–Choke
6	612383	1	Washer
7	98–7001	1	Nozzle
8	98–1357	1	Jet – Main 77.5
9	94–5787	1	Filter – Fuel
10	95–1899	1	Float&arm Ay
11	98–1362	1	Gasket
12	92–9691	1	Chamber–Float
13	608850	4	Screw–HH
14	92–6389	1	Pin
16	92–9697	1	Val/Seat–Float
18	98–7011	1	Spring–Gov.
19	610834	1	Airvane–Collar
20	98–7047	1	Disc–Throttle
21	92–6376	1	Air Vane&shaft

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

Maintenance Record

Date								


TORO®