FORM NO. 3323−568


TORO®

MODEL NO. 07403−80001 & UP

PARTS CATALOG

120 Volt AC Generator

Workman®

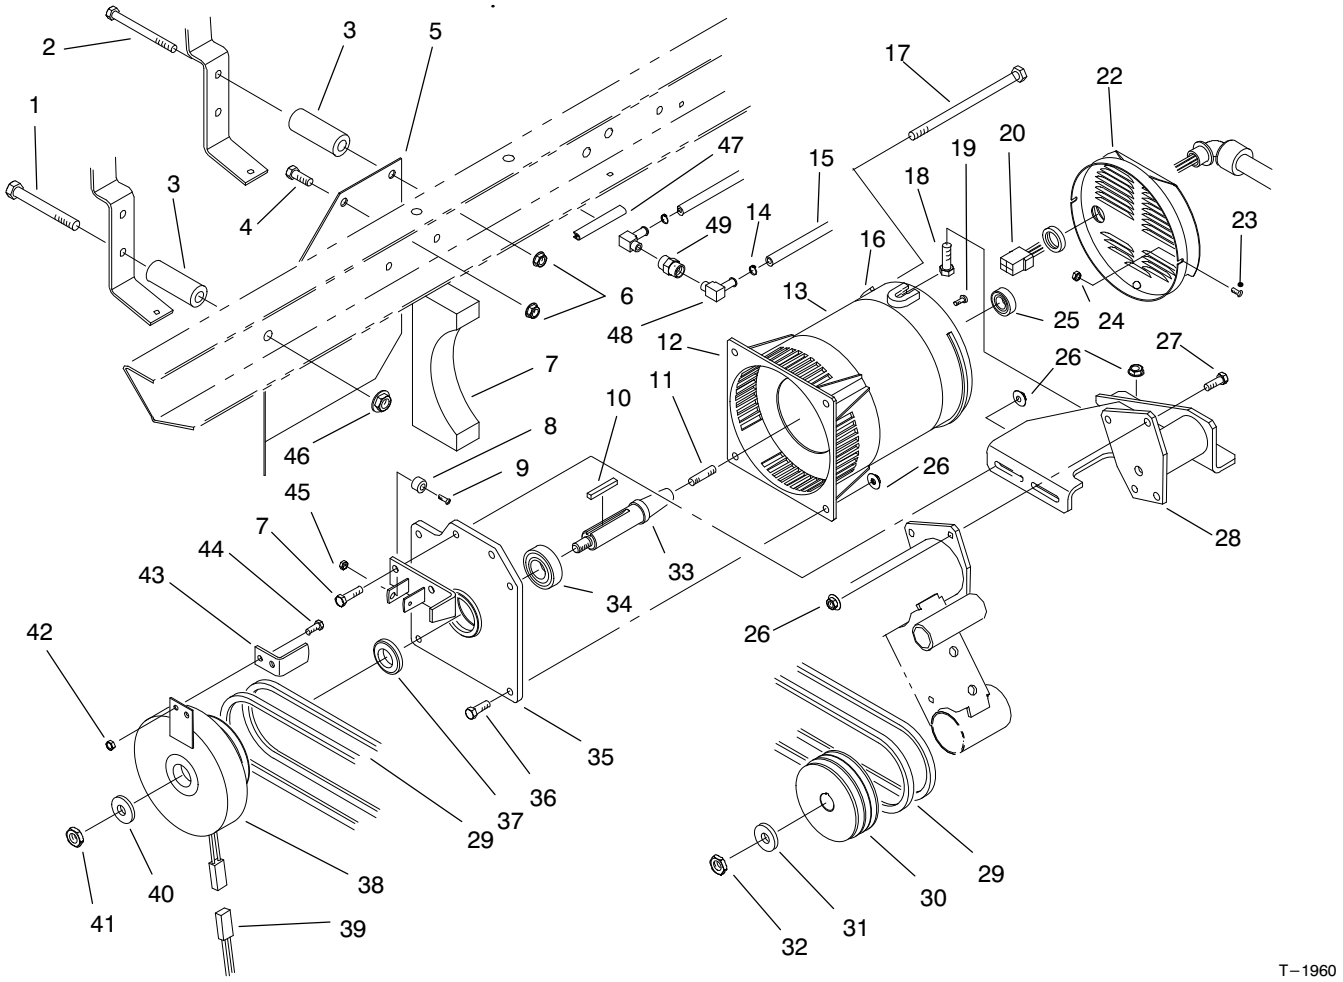


Generator Assembly

Ref. No.	Part No.	Description	No. Used
1	325−17	Screw − Cap Hex. Hd.	2
2	323−16	Screw − Cap Hex. Hd.	2
3	92−2855	Tube − Spacer, Fuel Tank	4
4	323−4	Screw − Cap Hex. Hd.	2
5	92−2856	Shield − Generator	1
6	3290−357	Nut − Flange	4
7	92−2857	Baffle − Generator	1
8	66−2910	Bumper − Rubber	2
9	3250−39	Screw − Pan Phil. Hd.	2
10	7−0238	Key − Square	1
11	92−2840	Screw − Rotor	1
12	93−3944	Bracket − Fan	1
13	93−3943	Cover − Stator	1
14	92−2379	Clamp − Hose	2
15	93−3949	Tube − Fuel	1
16	92−2899	Bracket − Bearing, Rear	1

Ref. No.	Part No.	Description	No. Used
17	92−2898	Bolt − Stator	4
18	322−5	Screw − Cap Hex. Hd.	1
19	93−3942	Screw − Ground	1
20	92−2887	Connector	1
22	92−2847	Cover W.A. − Rear	1
23	93−7654	Screw	2
24	93−7655	Nut	2
25	93−3945	Bearing	1
26	32128−20	Nut − Lock, Flange	12
27	322−6	Screw − Cap Hex. Hd.	6
28	92−2833	Mount W.A. − Generator	1
29	92−2845	Belt Set − Generator	1
30	92−2846	Pulley − Drive, Fan	1
31	3256−28	Washer − Flat	1
32	3296−15	Nut − Hex.	1
33	100−4515	Shaft − Generator	1

© The TORO Company − 1999
All Rights Reserved

TPS

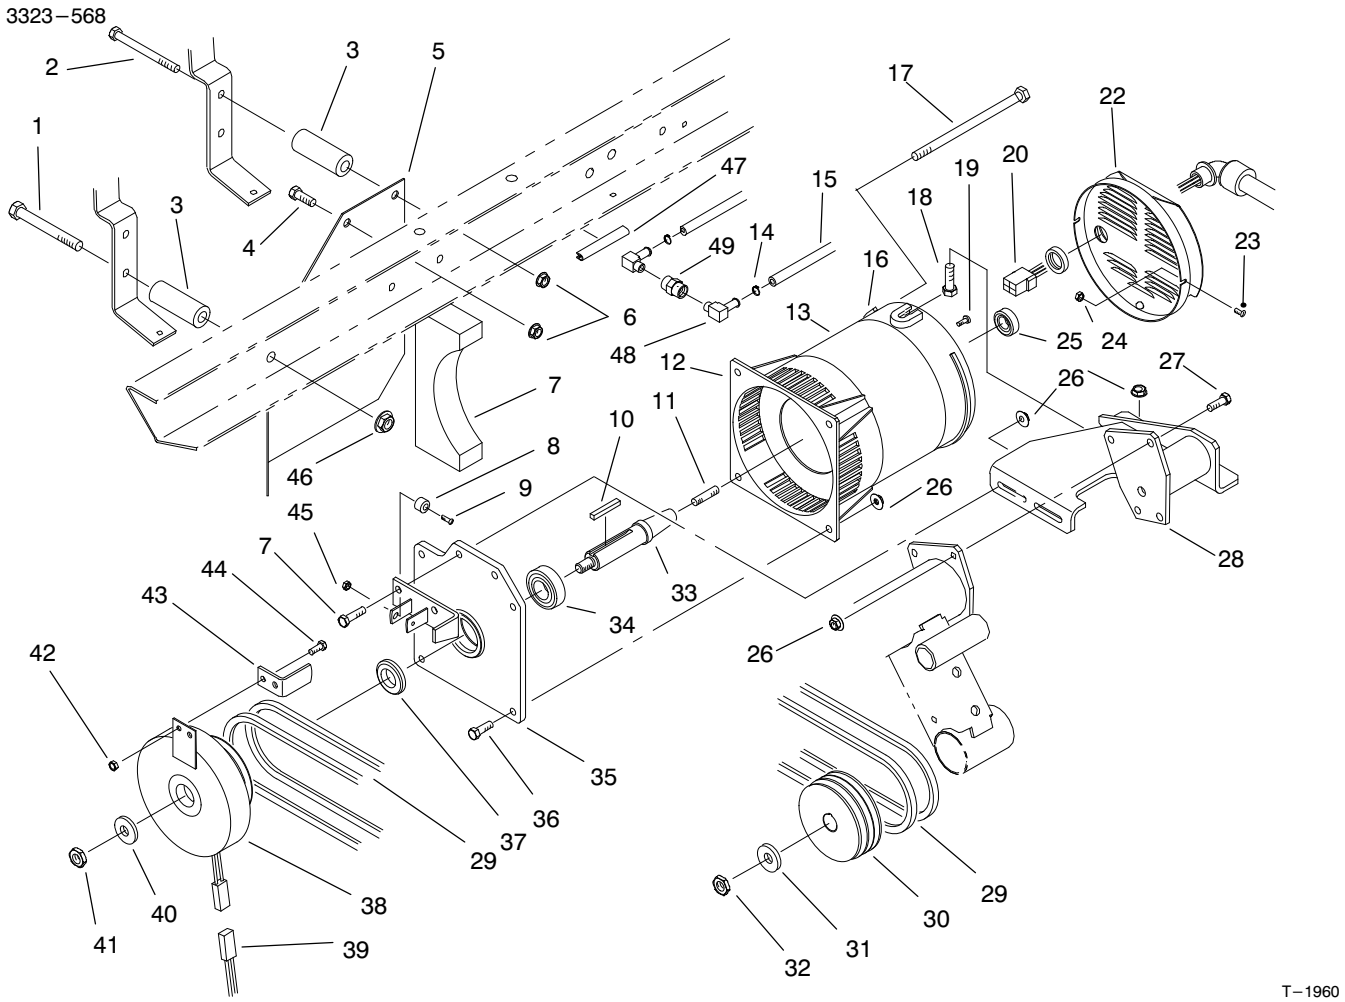


Generator Assembly (Continued)

Ref. No.	Part No.	Description	No. Used
34	70−9240	Bearing	1
35	92−2837	Mount − Bearing	1
36	322−5	Screw − Cap Hex. Hd.	4
37	92−2842	Spacer − Generator	1
38	92−2627	Assembly − Clutch, Elec.	1
39	92−2853	Harness − Wire	1
40	92−2651	Washer	1
41	3296−45	Nut − Lock	1
42	3296−56	Nut − Lock	2
43	92−2843	Tab − Bumper	1

Ref. No.	Part No.	Description	No. Used
44	321−4	Screw − Cap Hex. Hd.	2
45	3296−9	Nut − Lock	2
46	3218−23	Nut − Lock, Flange	2
47	43−4300	Trim − Frame, Rear	1
48	93−3948	Fitting − Fuel	2
49	93−3947	Fitting − Coupler	1
*	100−4514	Assembly − Generator (Incl. Ref. #11−13, 16−17, 19, 25, 26, & 33−36)	1
*	3290−379	Tie − Cable	1

*Not Illustrated

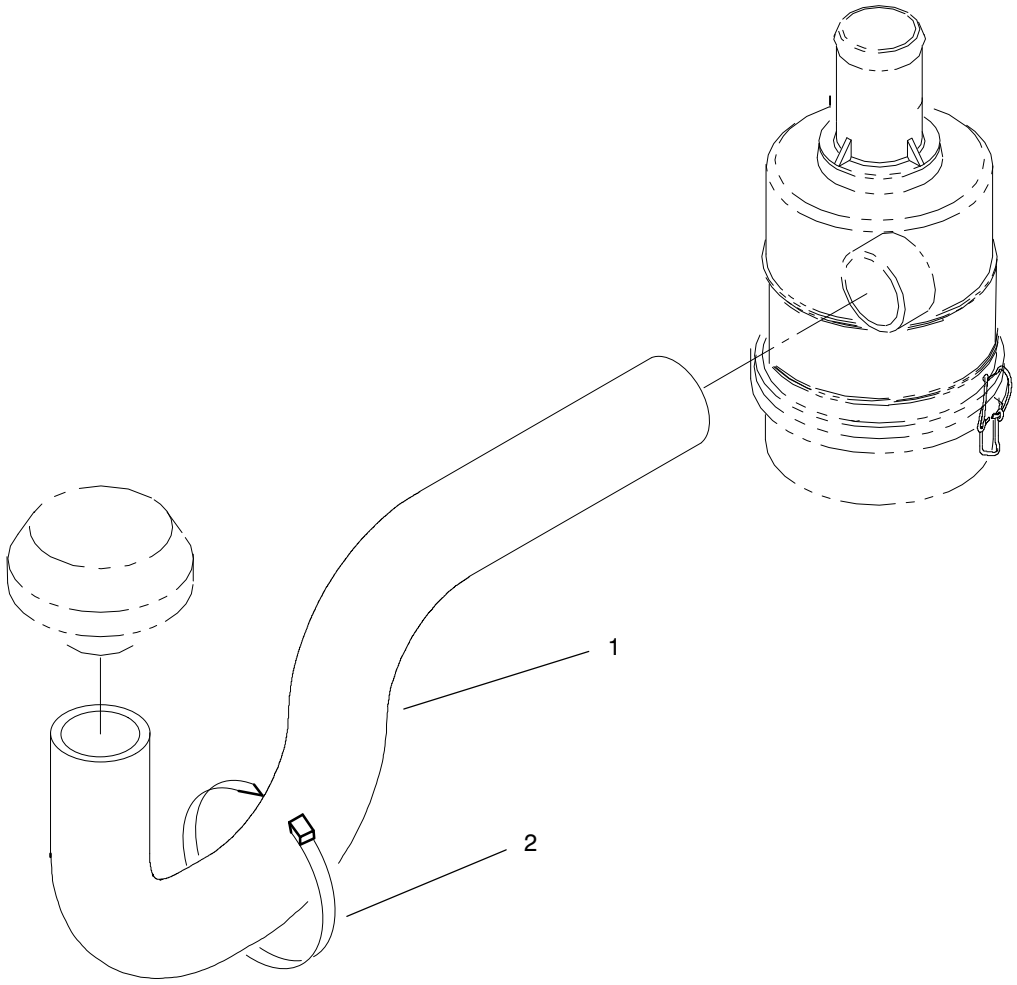


T−3334

Air Intake Hose Assembly

Ref. No.	Part No.	Description	No. Used
1	100−4539	Hose−Air Intake	1
2	3290−379	Tie	1

Ref. No.	Part No.	Description	No. Used

*Not Illustrated

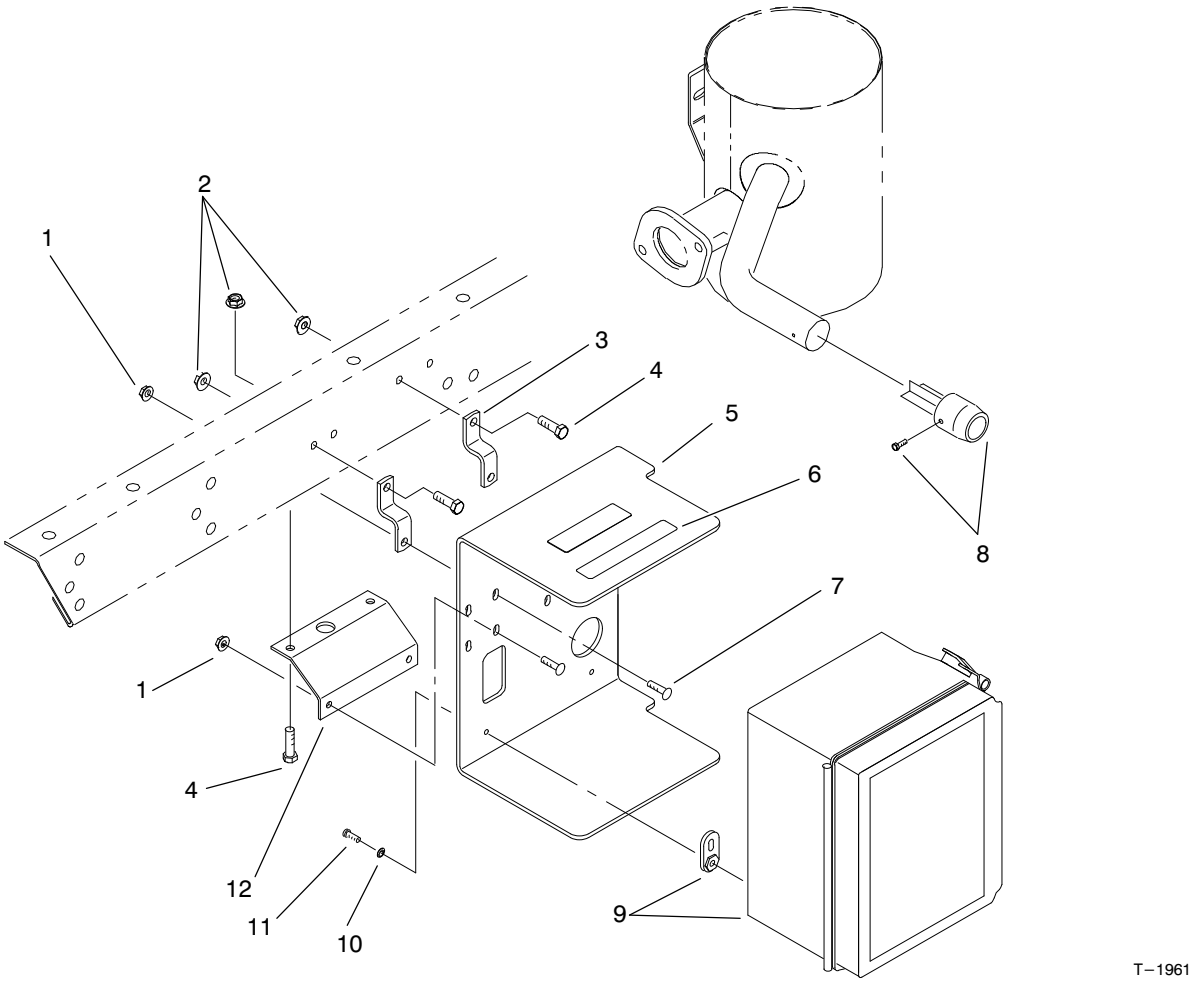


T−1961

Control Box Assembly

Ref. No.	Part No.	Description	No. Used
1	32128−32	Nut − Lock, Flange	4
2	32128−20	Nut − Lock, Flange	4
3	92−2860	Tab − Mount	2
4	322−3	Screw − Cap Hex. Hd.	4
5	92−2895	Bracket − Box, Control (Incl. Ref. #6)	1
6	36−3400	Decal − Warning	1

Ref. No.	Part No.	Description	No. Used
7	3229−2	Bolt − Carriage	4
8	75−6880	Arrestor − Spark	1
9	92−2862	Assembly − Box, Control	1
10	3254−1	Washer − Lock, Int. Tooth	4
11	3250−31	Screw − Pan Phil. Hd.	4
12	92−2859	Bracket − Mount	1

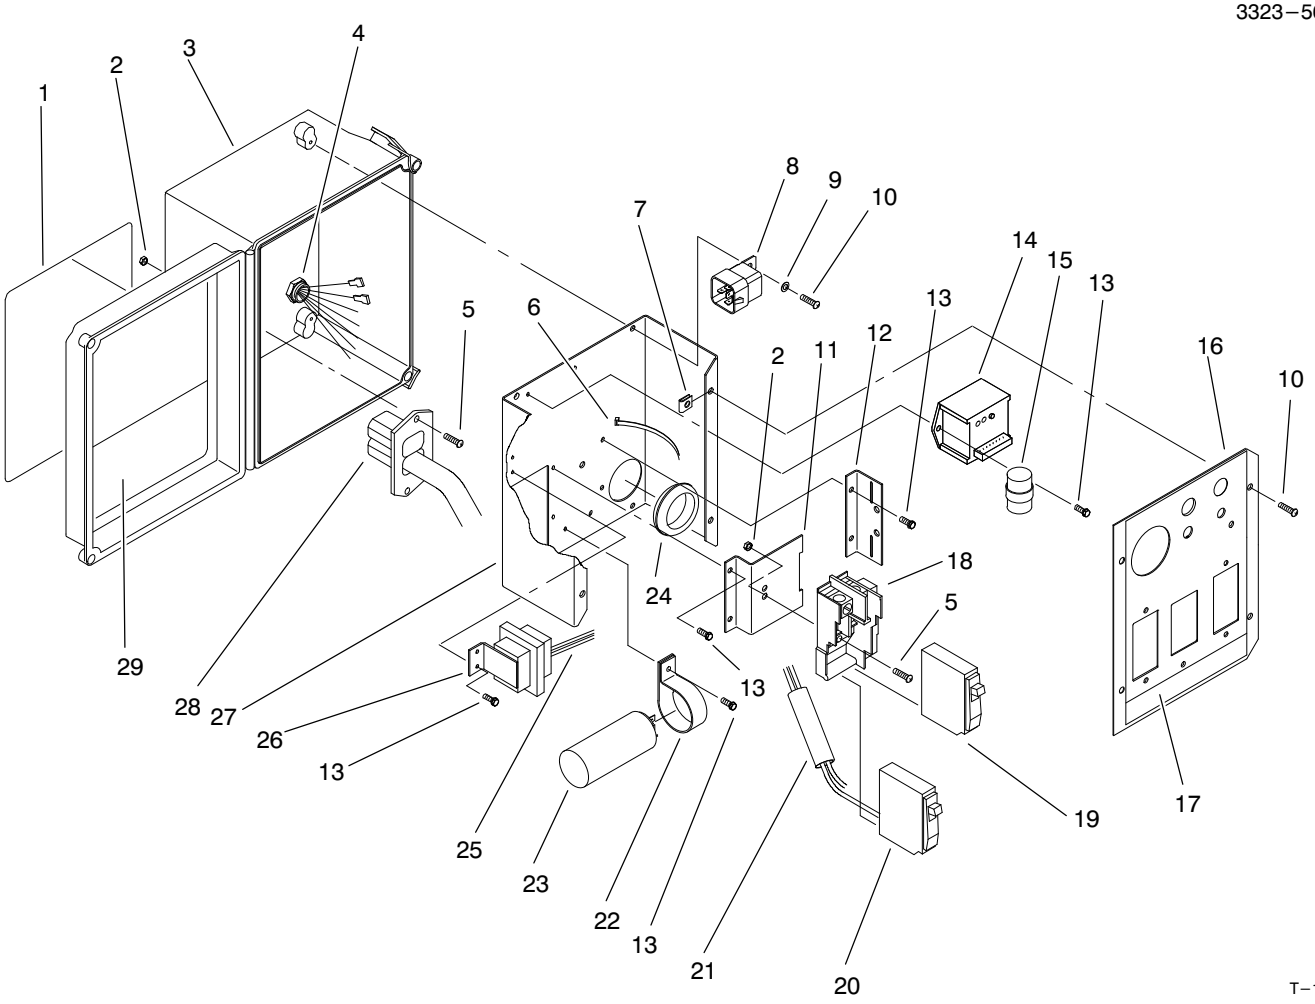


Control Box Assembly (Continued)

Ref. No.	Part No.	Description	No. Used
1	93−3938	Decal − Generator	1
2	32149−7	Nut − Keps	3
3	92−2896	Box − Control (Incl. Ref. #1 & 29)	1
4	92−2852	Harness − Wire, Generator	1
5	3250−13	Screw − Pan Head	3
6	3290−379	Tie − Cable	5
7	3290−191	Nut − Speed	4
8	63−7590	Relay − S.P.D.T.	1
9	3254−1	Washer − Lock, Int. Tooth	4
10	3250−12	Screw − Pan Phil Hd.	12
11	92−2865	Bracket − Breaker, Circuit	1
12	92−2866	Bracket − Breaker	1
13	32144−42	Screw − Hex. Hd.	10
14	92−2877	Switch − Frequency	1
15	92−2876	Time Delay	1

Ref. No.	Part No.	Description	No. Used
16	92−2897	Panel − Box, Control (Incl. Ref. #17)	1
17	93−3937	Decal − Panel, Control	1
18	92−2882	Base − Mounting	1
19	92−2880	Circuit Breaker − 15 Amp.	1
20	92−2881	Circuit Breaker − 20 Amp.	1
21	92−2872	Harness − Wire, Box AC	1
22	92−2874	Clamp − Tube	2
23	92−2873	Capacitor	1
24	237−91	Grommet	1
25	92−2851	Harness − Wire, Transformer	1
26	92−2883	Transformer	1
27	92−2864	Bracket − Box, Control	1
28	92−2879	Harness − Wire, Box D.C.	1
29	93−3939	Decal − Operation	1


3323−568

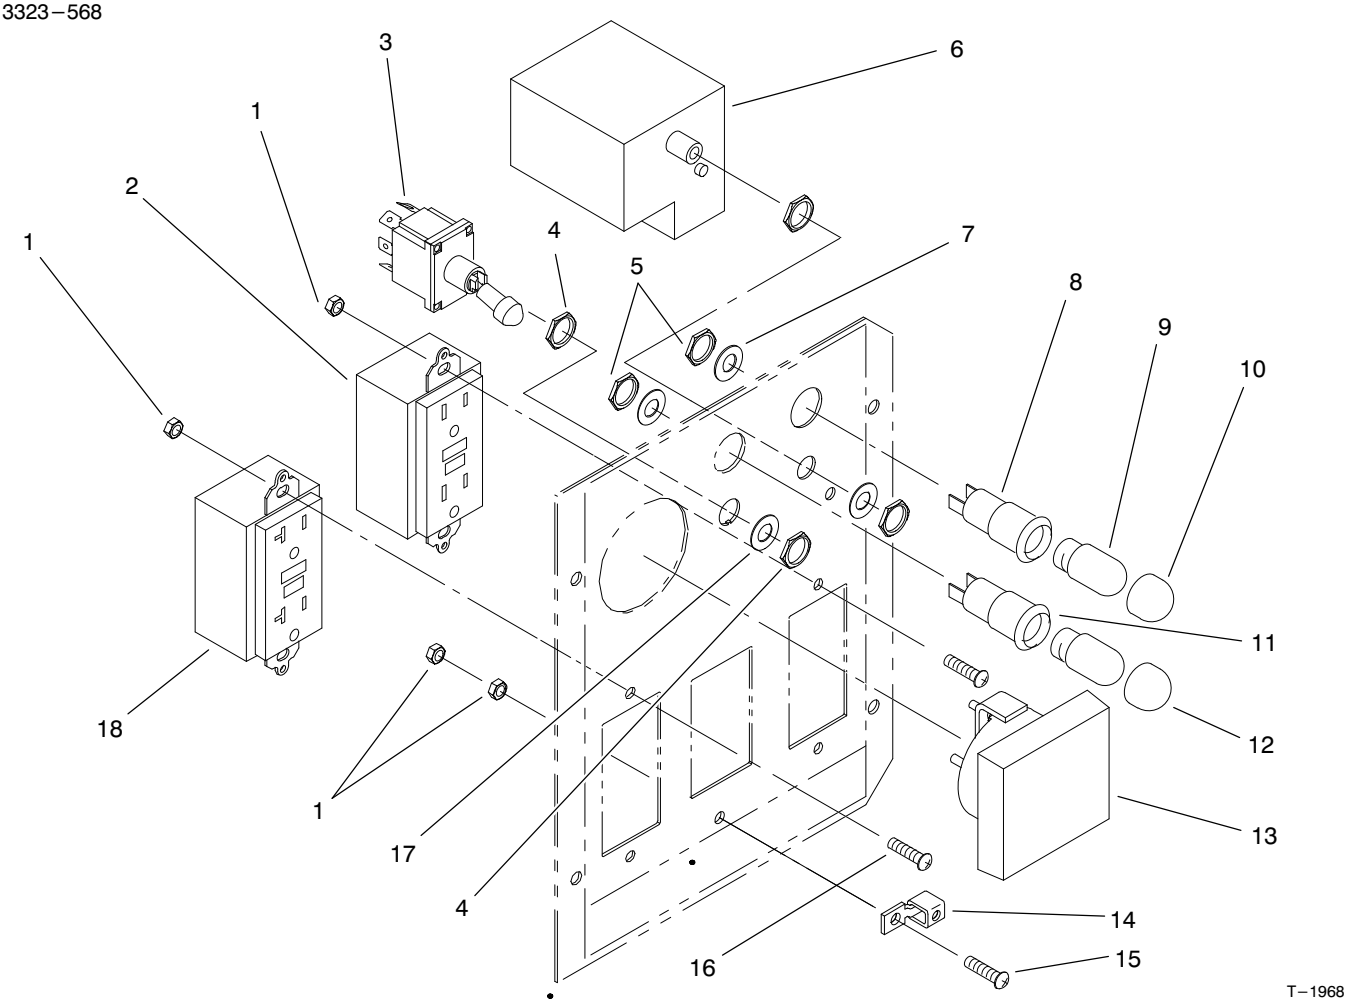

Control Box Assembly (Continued)

Ref. No.	Part No.	Description	No. Used
1	32149−7	Nut − Keps	6
2	92−2871	Outlet − 120 V. GFI 15 A	1
3	85−4980	Switch − PTO (Incl. Ref. #4 & 16)	1
4	3218−19	Nut − Hex.	2
5	218−535	Nut − Hex.	2
6	92−2878	Switch − Tattletale	1
7	218−536	Washer − Lock	2
8	44−2212	Assembly − Light, Warning (Incl. Ref. #5, 7, 9, & 10,)	1
9		Bulb − Indicator Light (#1891)	2

Ref. No.	Part No.	Description	No. Used
10	218−562	Lens − Indicator Light (Amber)	1
11	44−2210	Light − Warning (Incl. Ref. #5, 7, 9 & 12)	1
12	218−533	Lens − Indicator Light (Red)	1
13	92−2869	Voltmeter	1
14	92−2875	Lug − Ground	1
15	3250−13	Screw − Pan Head	1
16	3250−12	Screw − Pan Phil. Hd.	11
17	3254−20	Washer − Lock	1
18	92−2870	Outlet −120 V. GFI 20A	1

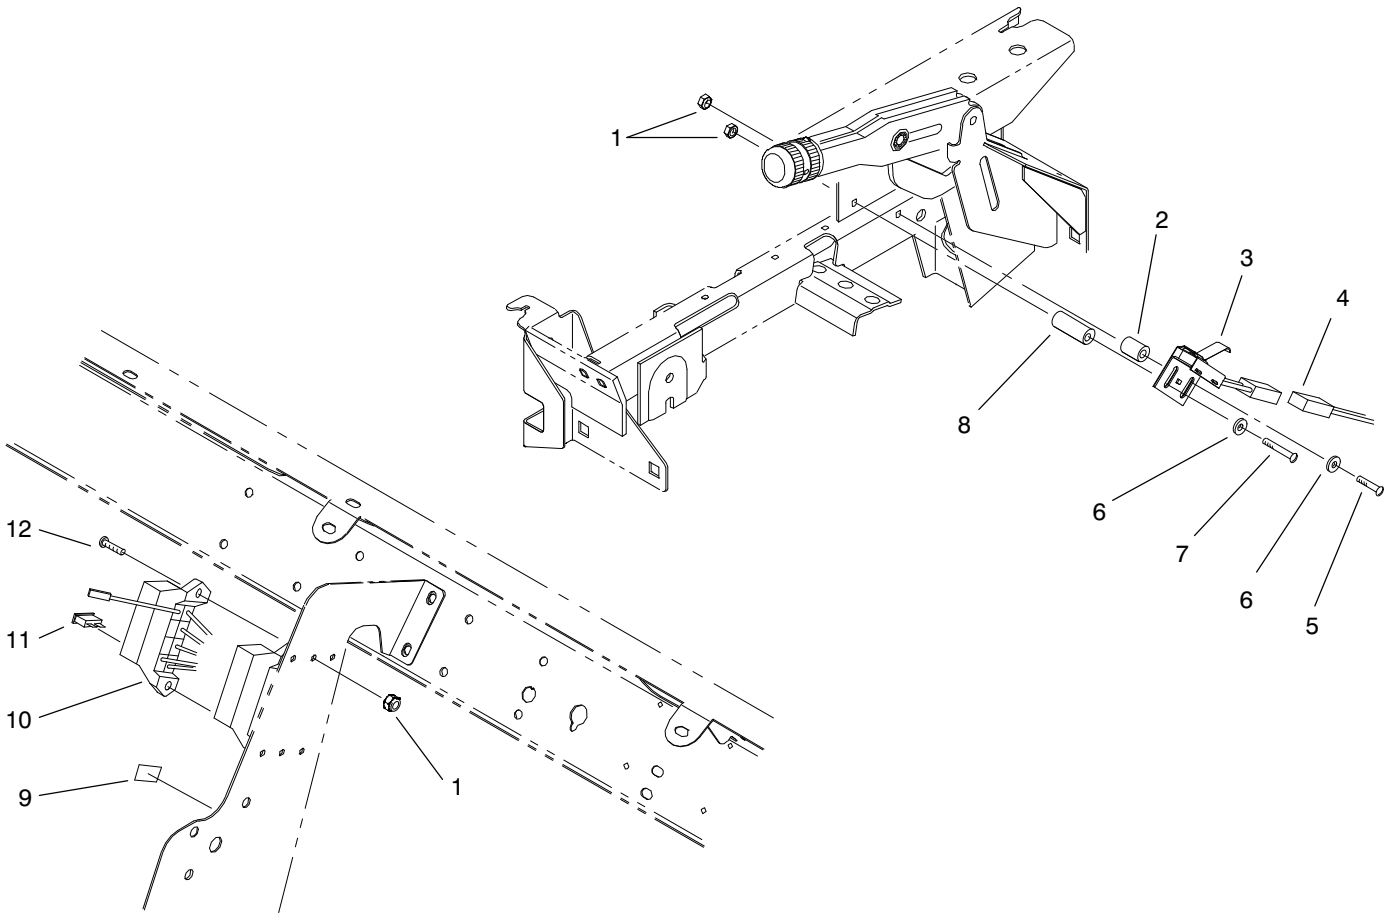


T−1962

Switch And Fuse Block Assembly

Ref. No.	Part No.	Description	No. Used
1	3296−2	Nut − Lock	4
2	92−2801	Spacer − Switch, Short	1
3	93−3722	Switch − Brake, Parking	1
4	92−2854	Harness − Wire	1
5	3250−23	Screw − Pan Phil. Hd.	1
6	3256−14	Washer − Flat	2

Ref. No.	Part No.	Description	No. Used
7	3250−48	Screw − Pan Phil. Hd.	1
8	92−2800	Spacer − Switch, Long	1
9	93−3941	Decal − Fuse	1
10	92−2641	Harness − Wire, Fuse Block	1
11	218−594	Fuse − 20 Amp	1
12	3250−13	Screw − Pan Phil. Hd.	2

Electrical Schematic

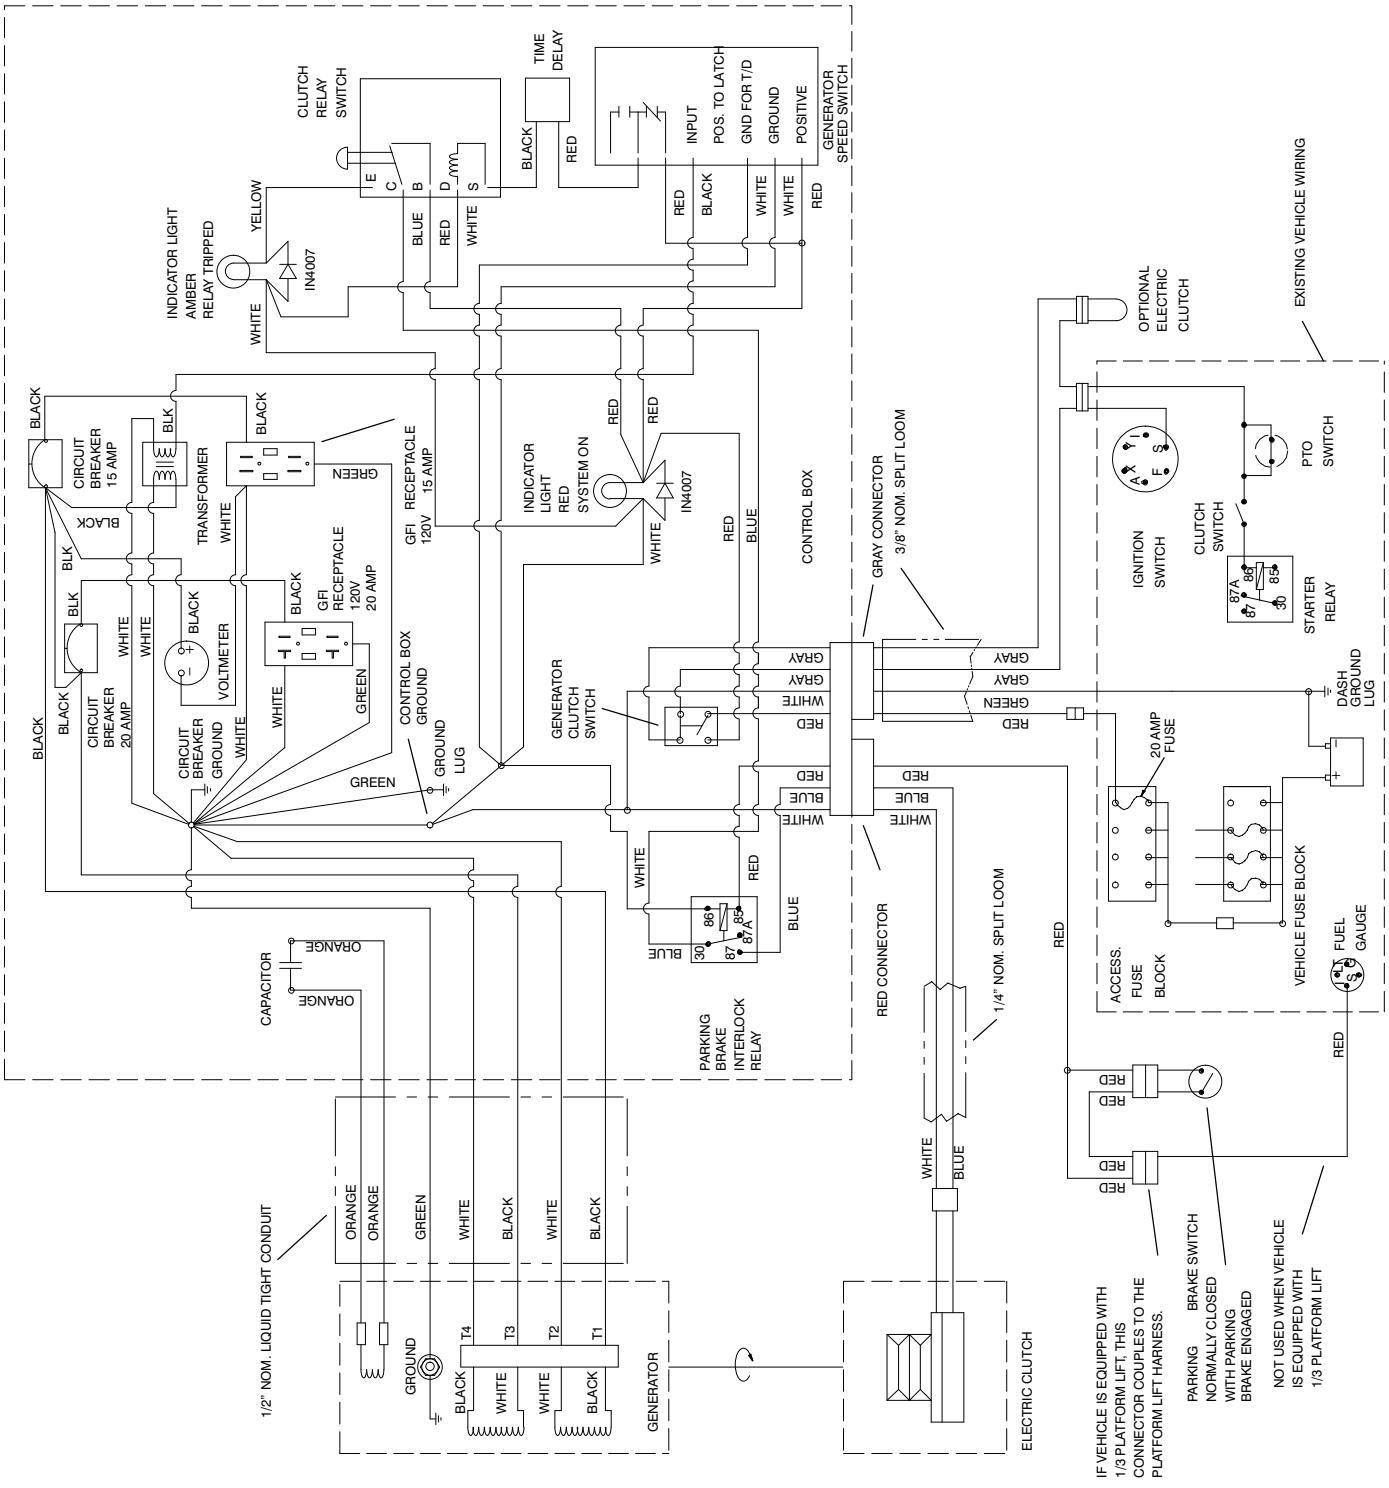

T–1963