Form No. 3323–571

Dethatcher Kit

Model No. 03516—40001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 1999
All Rights Reserved

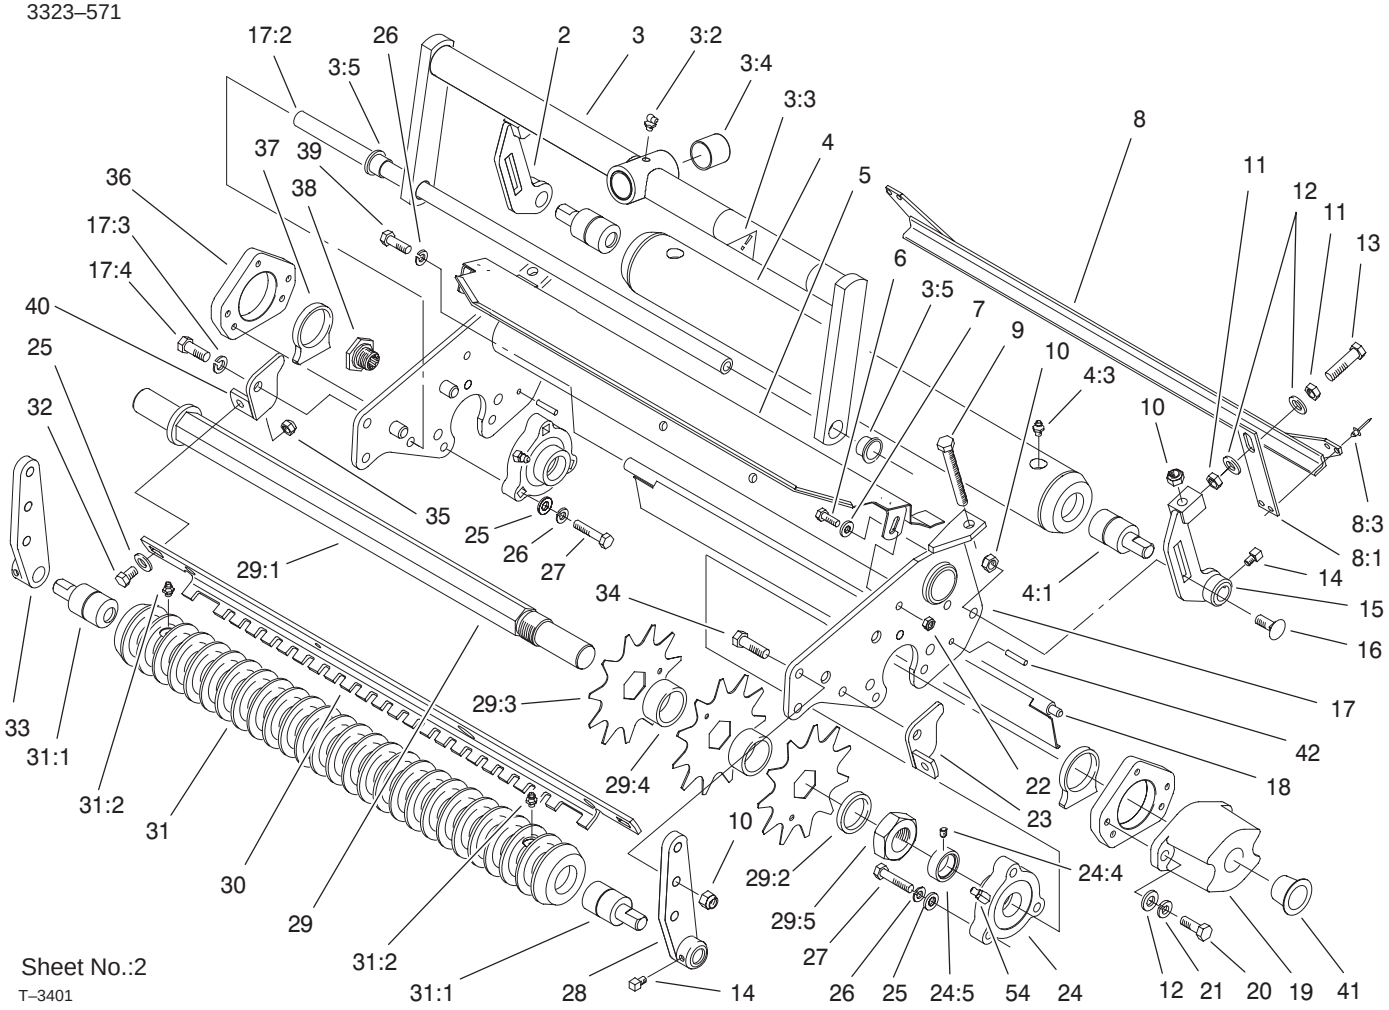


Sheet No.:2
T–3401

Dethatcher Assembly

Ref. No.	Part No.	Qty.	Description
2	82–6630–01	1	Bracket–HOC, RH
3	100–6194	1	Carrier Frame ASM
3:2	302–60	1	Fitting–Lube
3:3	93–6688	1	Decal – Danger
3:4	67–1750	2	Bushing
3:5	75–2160	2	Bushing
4	82–6680	1	Full Roller ASM
4:1	75–1290	2	Bearing–Roller
4:3	302–5	2	Fitting–Lube
5	75–1840	1	Front Grass Shield ASM
6	321–4	2	Screw–HH
7	3256–1	2	Washer–Flat
8	82–6740	1	Rear Scraper ASM
8:1	82–6770–01	2	Spring – Scraper
8:3	3269–3	4	Pop Rivet
9	323–49	2	TAP Bolt
10	3296–39	8	Nut–Lock, NI
11	3218–3	4	Nut–Jam
12	3256–24	8	Washer–Flat
13	323–53	2	TAP Bolt
14	3242–2	4	Screw–SQH
15	82–6650–01	1	Bracket–HOC, LH
16	3231–3	2	Screw–CARR
17	82–6710	1	Dethatcher Frame ASM

Ref. No.	Part No.	Qty.	Description
17:2	75–1710	1	Support
17:3	3253–21	2	Washer–Lock/Sp
17:4	323–6	2	Screw–HH
18	82–6780–01	1	Deflector–Rear
19	10–5080–01	1	End Cap
20	323–6	4	Screw–HH
21	3253–21	4	Washer–Lock/Sp
22	3296–42	2	Nut–Lock
23	82–6880–01	1	Scraper, LH
24	76–2460	2	Bearing ASM
*24:1	94–3405	1	Bearing–Ball
*24:3	302–5	1	Fitting–Lube
24:4	3245–35	1	Screw–HS
24:5	251–77	1	Bearing–Lockcollar
25	3256–23	8	Washer–Flat
26	3253–4	7	Washer–Lock/Sp
27	322–7	6	Screw–HH
28	82–6530–01	1	Support–HOC, LH
29	82–6560	1	Dethatcher Shaft ASM
29:1	82–6570	1	Shaft–Reel
29:2	17–1600	2	Spacer
29:3	17–1590	24	Blade 11 Tooth
29:4	82–6600	23	Spacer

* Not illustrated

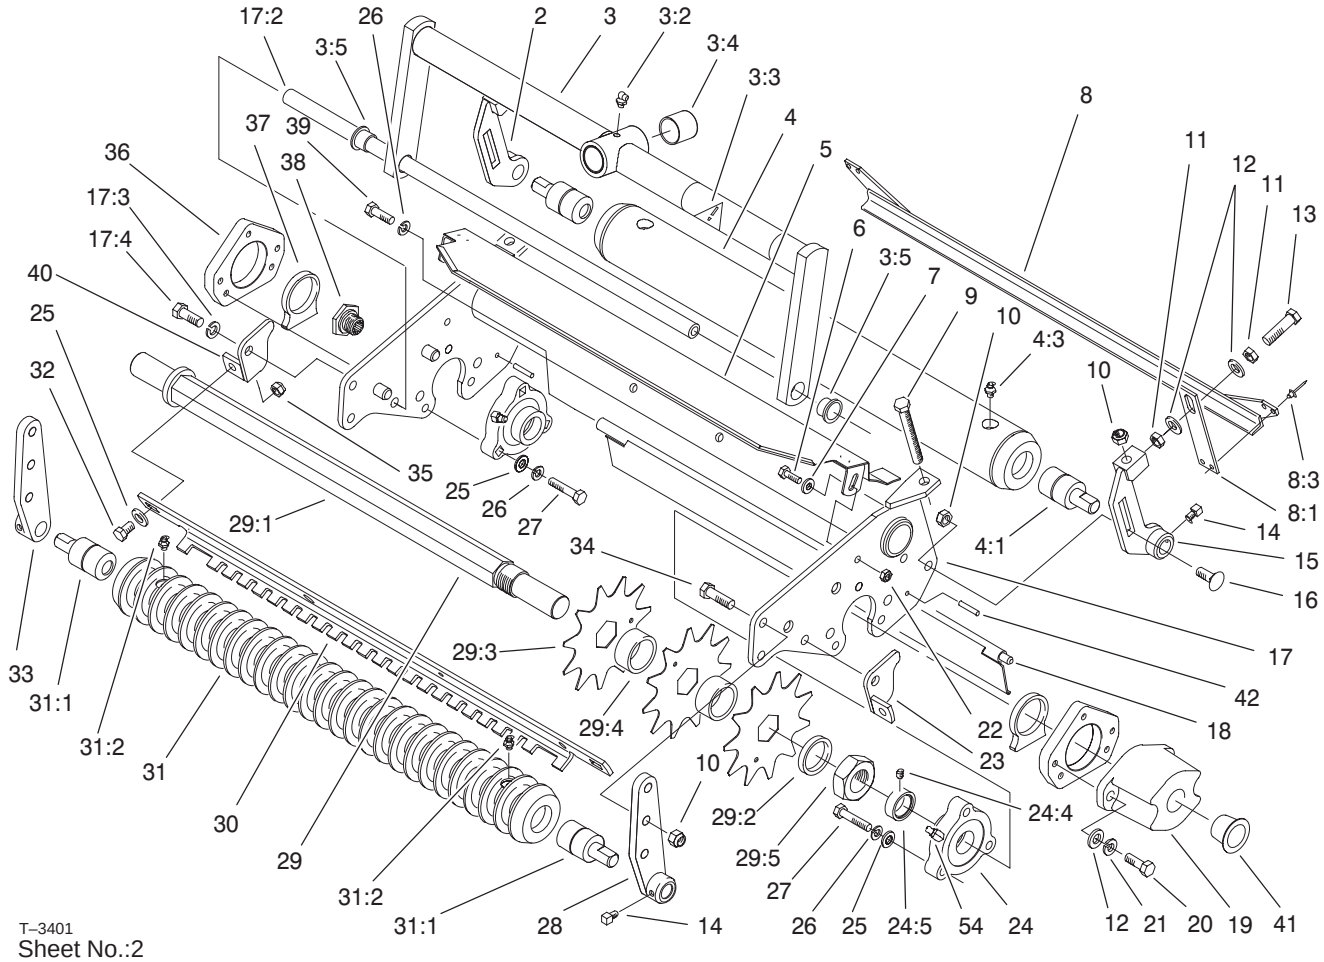

T–3401
Sheet No.:2

Dethatcher Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
29:5	67–5840	1	Jam Nut
30	82–6830–01	1	Bracket–Scraper
31	75–1520	1	Wiehle Roller ASM
31:1	75–1290	2	Bearing–Roller
31:2	302–5	2	Fitting–Lube
32	322–3	2	Screw–HH
33	82–6510–01	1	Support–HOC, RH
34	323–7	4	Screw–HH
35	3296–29	2	Nut–Lock,NI
36	82–6810–01	2	Bearing Plate
37	82–6820	2	Spacer
38	77–0340	1	Spline Nut
39	322–5	1	Screw–HH
40	82–6870–01	1	Scraper, RH
41	12–0460	1	No.13 Caplug
42	32121–12	2	Pin–Roll
54	302–11	2	Fitting–lube 45°

Ref. No.	Part No.	Qty.	Description


TORO®