Form No. 3323–688

Quick Attachment Kit

For Groundsmaster 3000

Part No. 99–5790

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 1999
All Rights Reserved

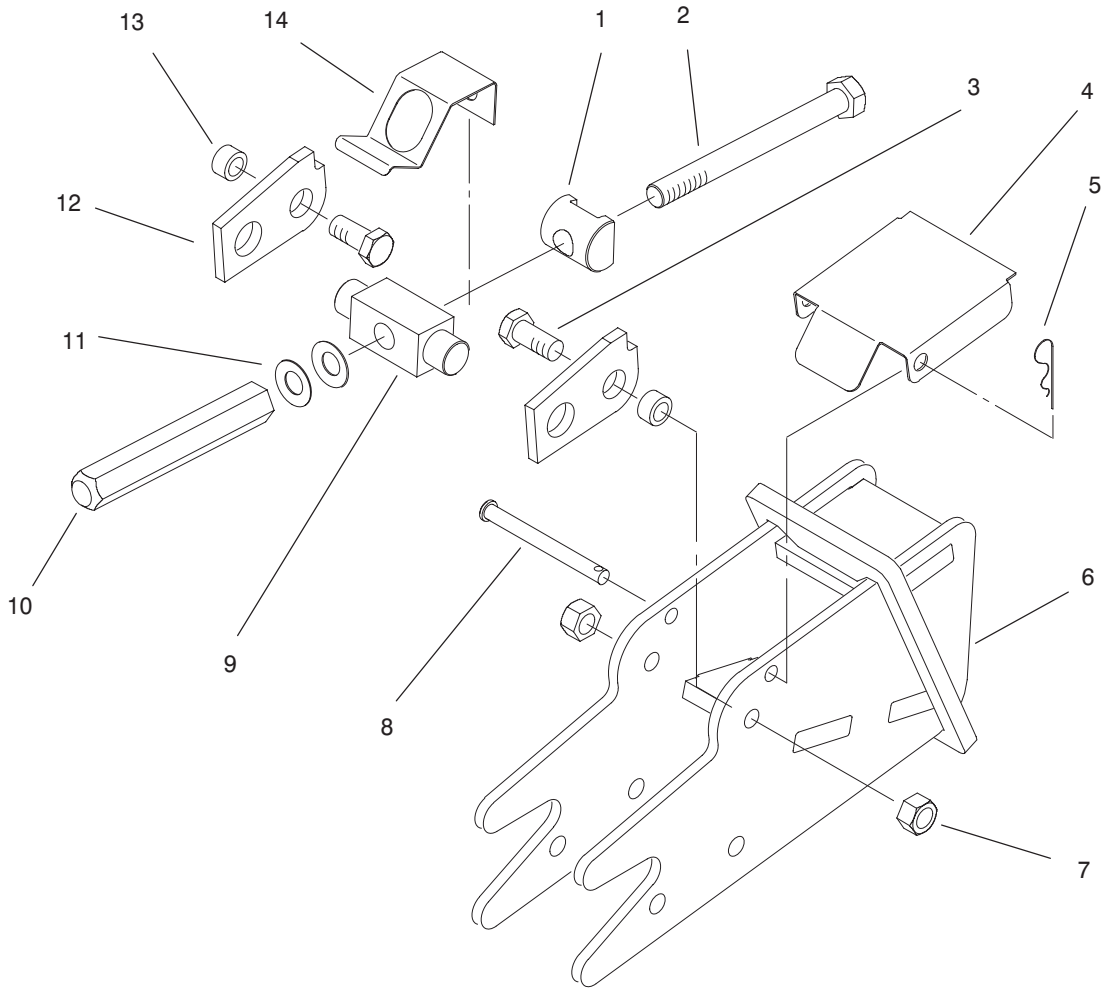

Sheet No.:0

Quick Attachment Assembly

Ref. No.	Part No.	Qty.	Description
1	93–4676	2	Shaft–Latch
2	3213–24	2	Screw–HH
3	33115–025	4	Screw–HH
4	99–5769–01	2	Cover–Latch
5	3290–467	2	Pin–Cotter, Hair
6	98–7081–01	2	Lift Receiver ASM
7	33025–00	4	Nut–Lock NI
8	283–88	2	Clevis Pin
9	93–4677	2	Hub – Release
10	93–4678	2	Lever – Release
11	3290–413	4	Washer–Belleville
12	93–4675	4	Plate – Release
13	93–4618	4	Spacer – Pivot
14	93–4818	2	Spring – Lever

Ref. No.	Part No.	Qty.	Description