Form No. 3323–997

LAWN-BOY®

53 cm Recycler®/Rear Bagging

Lawnmower

Model No. 10928–200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© Lawn-Boy, Inc. — 2000
All Rights Reserved

Contents

Description	Page
Deck Assembly	3
Engine & Blade Assembly	4
Handle Assembly	5
Bag Assembly	6
Rear Drive Assembly	7
Gear Case Assembly No. 62–6673	8
Control Assembly	9
Engine Assembly	10–11
Short Block Assembly	12
Carburetor Assembly	13


Accessories

Description	Model / Part No.
Dethatcher Kit	59131 / 77–0260
Leaf Shredder Kit	59180 / 77–0690

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

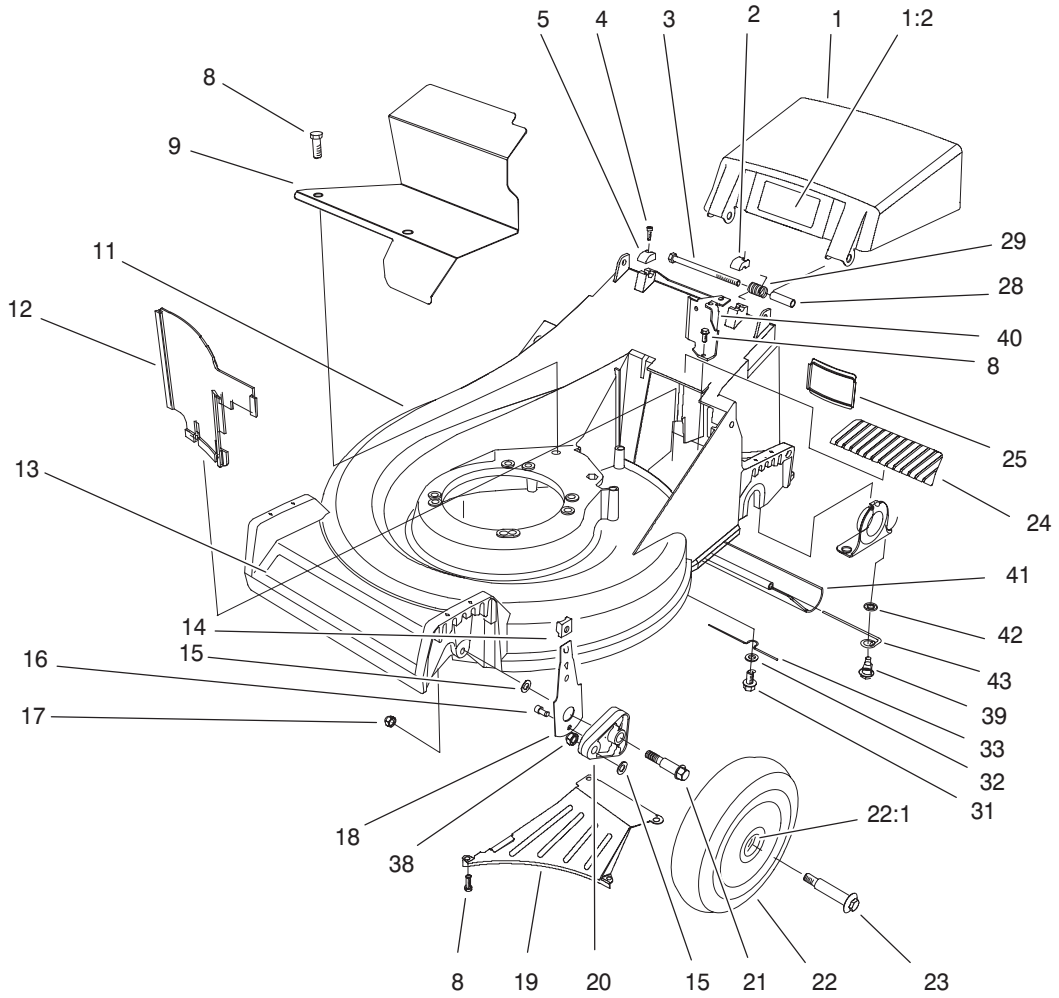


Sheet No.: 2

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	17–1569	1	Bag Door
1:2	93–4105	1	Decal – Danger
2	71–7900	1	Cap–Hinge Bolt LH
3	322–29	2	Screw–HH
4	65–5210	2	Screw–Allen Hd
5	71–7910	1	Cap–Hinge Bolt RH
8	32144–70	7	Screw–HH
9	100–4381–03	1	Panel–Screen
11	104–0219	1	Housing
12	66–0020	1	Vertical Panel
13	100–8778	1	Decal–Deck
14	25–7740	2	Knob–Arm
15	40–1940	4	Washer
16	32144–85	2	Screw–HH
17	3296–6	2	Nut–Lock, NI
18	66–0541	2	Spring Arm ASM–Front
19	71–9640–03	1	Discharge Ramp
20	66–0580	2	Arm–Pivot, Front
21	66–0560	2	Screw–Shoulder
22	92–9592	2	Wheel ASM
22:1	27–6250	2	Bushing
23	92–1057	2	Bolt–Shoulder
24	71–9920	1	Cover – Top
25	71–9650	1	Access Cover
28	71–8580	2	Door Spacer

Ref. No.	Part No.	Qty.	Description
29	71–9840	2	Door Spring
31	32144–15	1	Screw
32	3256–24	1	Washer–Flat
33	66–0620	1	Belt Retainer
38	603773	2	Nut
39	5–2490	2	Screw–Shoulder
40	66–0030–03	1	Bracket–Cable Support
41	65–5350	1	Trailing Shield
42	3256–23	2	Washer–Flat
43	76–1980	2	Shield Hanger

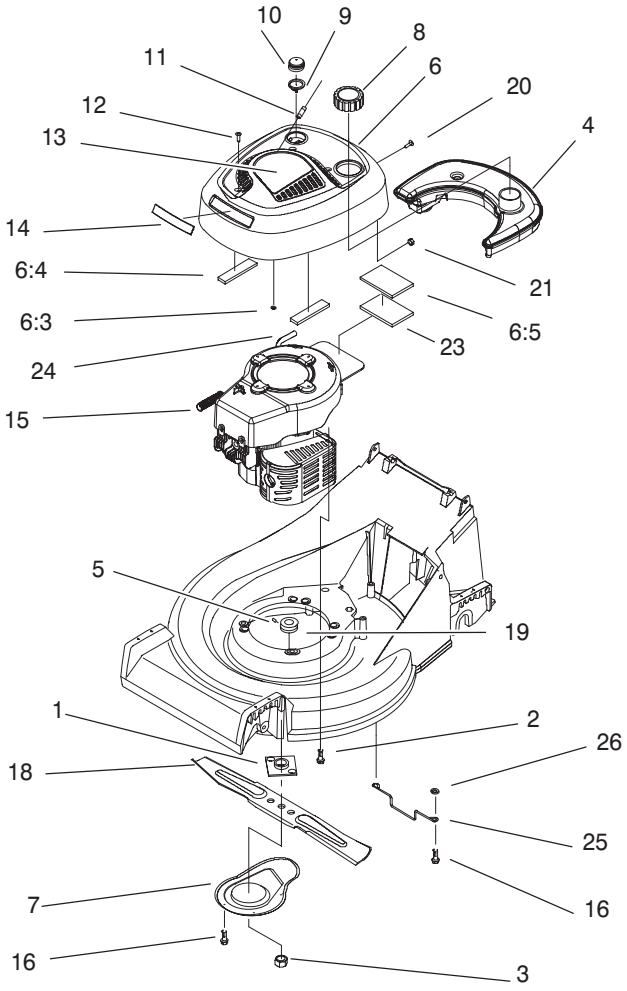


Sheet No.: 3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM
2	613500	3	Screw–Sems
3	603164	1	Nut–Blade
4	95–1897	1	Tank
5	104–0214	1	Screw–Set,Cone Point
6	100–6398	1	Shroud & Recoil Cover ASM
6:3	613329	2	Push Nut
6:4	99–1522	2	Strip–Foam
6:5	99–1521	1	Strip–Foam
7	65–5200–03	1	Shield
8	98–8344	1	Cap ASM–Fuel & Oil
9	44–2750	1	Body–Primer
10	66–7460	1	Bulb–Primer
11	92–1701	1	Stop–Rope
12	95–7621	3	Screw–Pan Sems
13	100–8777	1	Decal–Recoil
14	100–8794	1	Decal–Shroud
15	93–4306	1	Spring – Compression
16	32144–70	6	Screw–HH
18	612543	1	Blade
19	95–1878	1	Pulley
20	314576	1	Screw
21	306531	1	Nut–Hex
23	98–1386	1	Pad–Foam
24	612782	1	Fuel Line

Ref. No.	Part No.	Qty.	Description
25	98–2679	1	Guide–Belt,Engine
26	3256–23	2	Washer–Flat

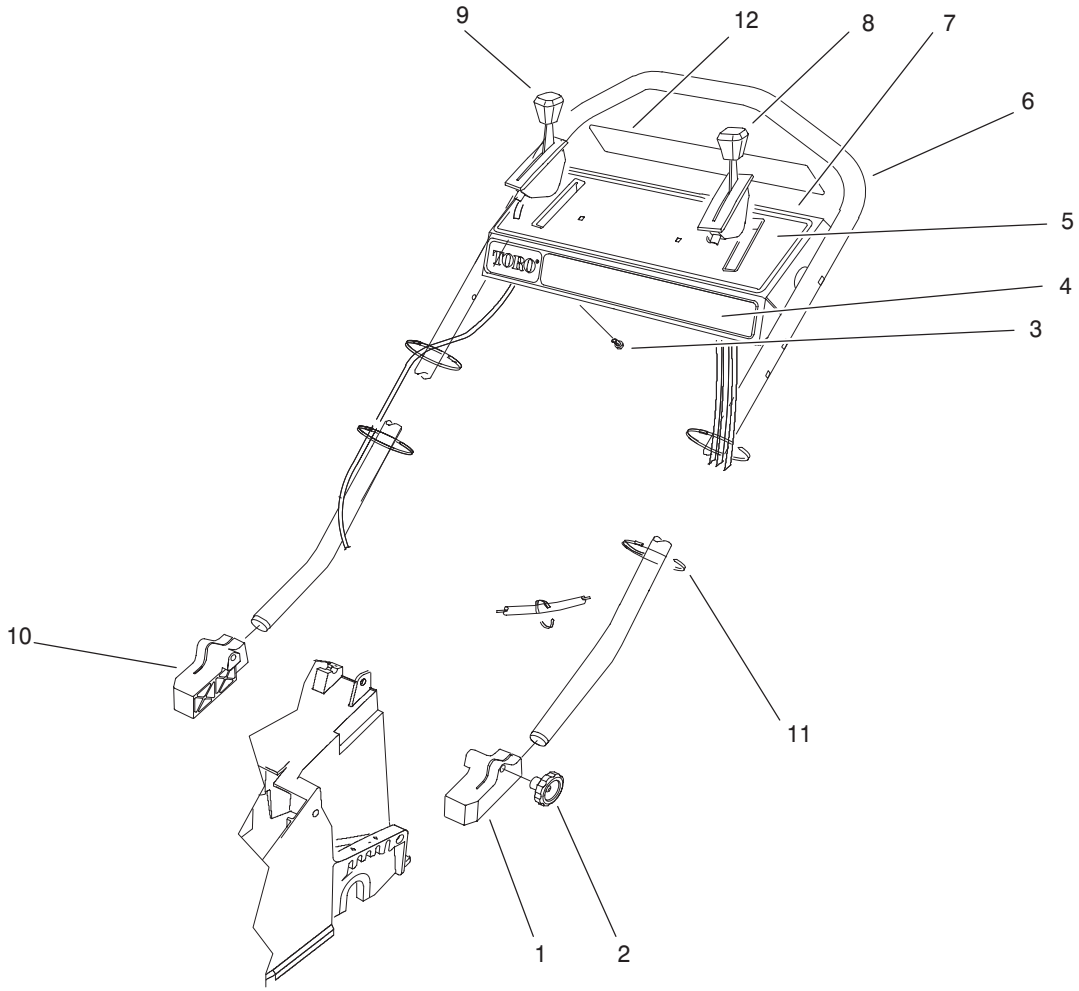


Sheet No.: 4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	71–8090	1	LH Handle Mount
2	19–4050	2	Knob
3	92–9665	5	Screw
4	100–8779	1	Decal–Panel
5	93–6662	1	Decal – Instruction
6	98–3229–05	1	Handle
7	16–8729	1	Panel
8	95–7410	1	Cable – Throttle
9	93–6632	1	Control – Ground Speed
10	71–8100	1	RH Handle Mount
11	3290–378	5	Tie–Cable
12	93–6655	1	Decal–Panel, Rear

Ref. No.	Part No.	Qty.	Description

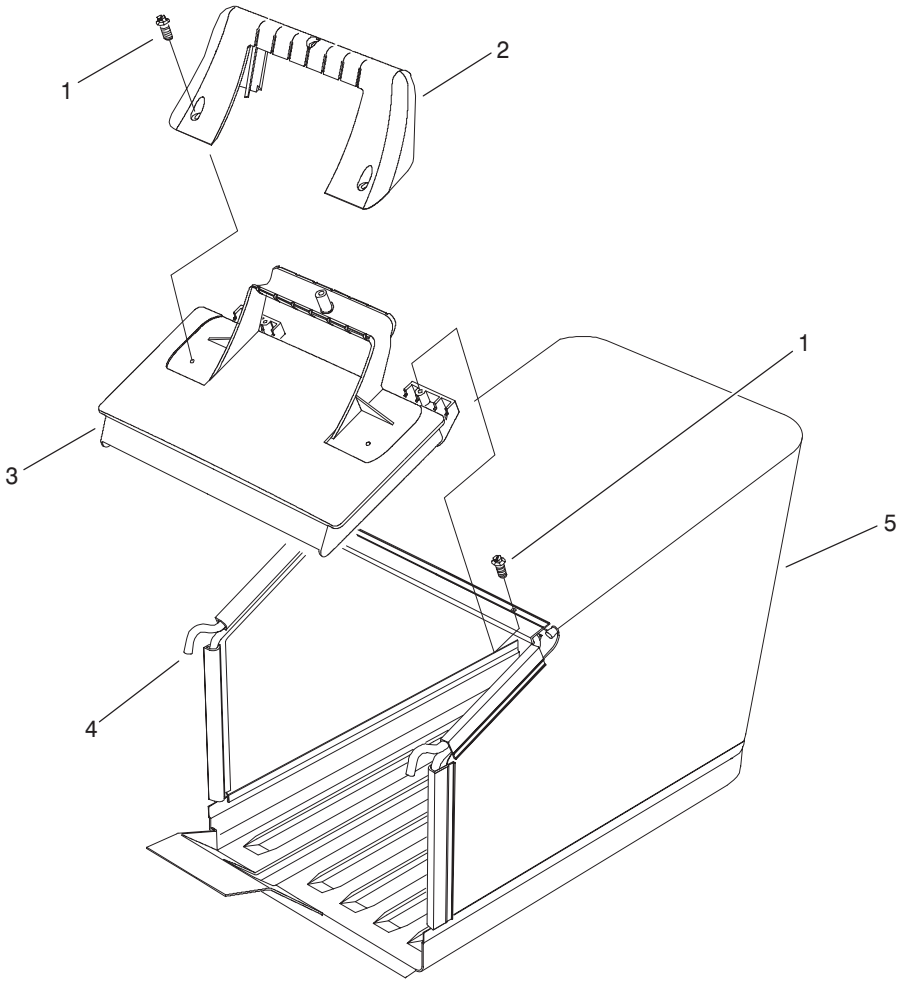


Sheet No.: 5

Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	32144–111	5	Screw–PPH
2	71–9480	1	Handle–Door
3	71–9470	1	Bag Door
4	71–9930–03	1	Frame
5	100–8790	1	Bag–Grass

Ref. No.	Part No.	Qty.	Description

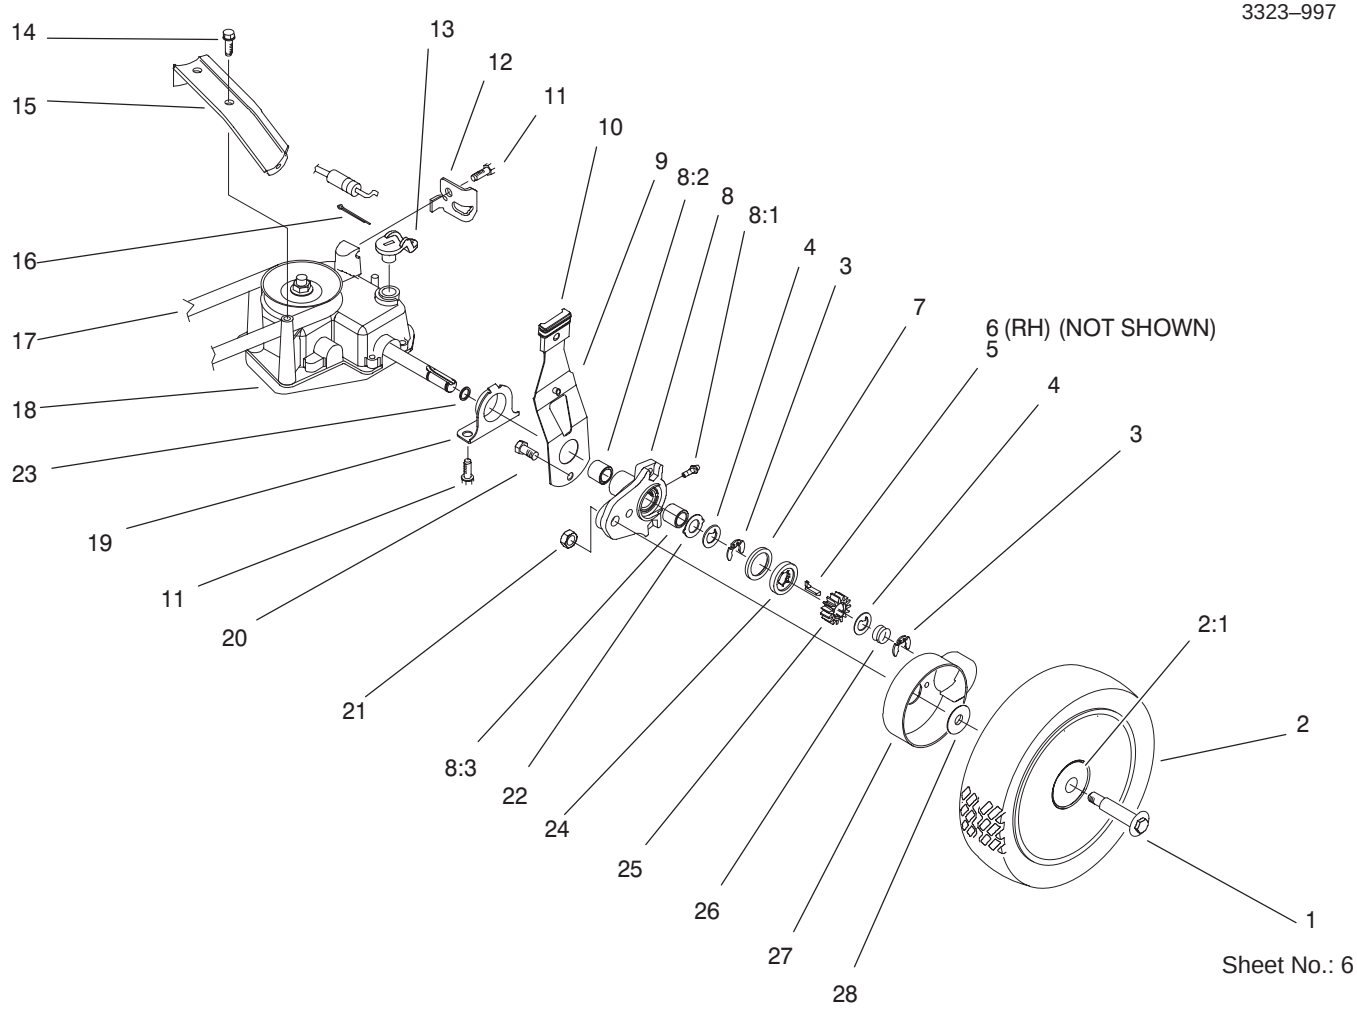


Sheet No.: 6

Rear Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	92–1057	2	Bolt–Shoulder
2	99–8136	2	Wheel ASM
2:1	27–6250	2	Bushing
3	65–2720	4	Ring–Klip
4	65–4740	4	Washer–Thrust, Keyed
5	66–6050	1	Key–Rocking, LH
6	66–6040	1	Key–Rocking, RH
7	65–4710	2	Ring–Friction
8	65–5043	2	Pivot Arm Assembly
8:1	302–56	1	Fitting–Zerk
8:2	47–2890	1	Bushing
8:3	70–9760	1	Bushing
9	65–5441	2	Spring Arm ASM
10	25–7740	2	Knob–Arm
11	32144–70	5	Screw–HH
12	76–2930	1	Cable Retainer
13	76–0920	1	Shift Lever
14	49–2040	2	Screw–Taptite
15	65–5190–03	1	Bracket–Guide, Belt
16	3272–5	1	Pin–Cotter
17	36–8070	1	V–Belt
18	62–6673	1	Gearcase Assembly
19	66–0360	2	Cap–End
20	32144–85	2	Screw–HH
21	603773	2	Nut

Ref. No.	Part No.	Qty.	Description
22	65–4730	2	Washer–Arm, Pivot
23	237–153	2	O–Ring
24	65–4760	2	Washer–Clutch
25	65–4750	2	Gear–Pinion
26	65–4720	2	Spring–Compression
27	74–1660	2	Cover–Wheel
28	74–1671	2	Spacer–Cover, Wheel

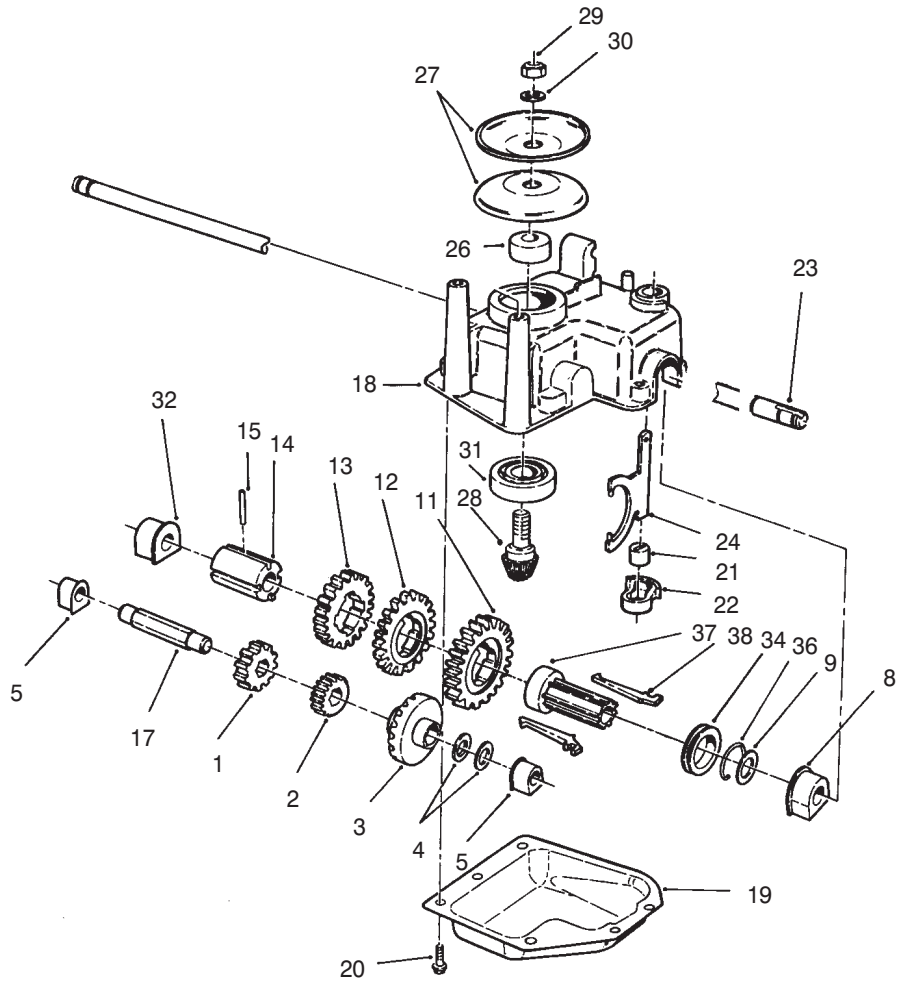


Sheet No.: A3

Gear Case Assembly No. 62–6673

Ref. No.	Part No.	Qty.	Description
1	55–3800	1	25 T Pinion
2	55–3780	1	20 T Pinion
3	55–3760	1	Gear–Bevel
4	36–4791	2	Washer–Thrust
5	60–8750	2	Bushing
8	60–8770	1	Bushing– Output
9	36–4780	1	Washer
11	55–3770	1	49 T Gear
12	55–3790	1	44 T Gear
13	55–3810	1	39 T Gear
14	60–8790	1	Sleeve – Gear
15	32121–120	1	Pin–Spring
17	60–8800	1	Shaft–Intermediate
18	60–8710	1	Case–Gear, Upper
19	60–8730–03	1	Cover–Gear Case
20	49–2040	6	Screw–Taptite
21	29–9570	1	Bushing–Yoke
22	60–8810	1	Retainer– Shift Fork
23	65–4770	1	Shaft–Output
24	60–8870	1	Yoke–Shift
26	62–6660	1	Spacer
27	100–1176	2	Pulley–Half
28	60–8890	1	Gear–Bevel, Pinion
29	3296–5	1	Nut–Lock, NI
30	3256–24	1	Washer–Flat
31	38–7820	1	Bearing–Ball

Ref. No.	Part No.	Qty.	Description
32	60–8850	1	Bushing–Output
34	76–0770	1	Collar–Shift
36	65–5250	1	Clip–Spring
37	76–0780	1	Sleeve–Key, Shift
38	76–0760	2	Key–Shift

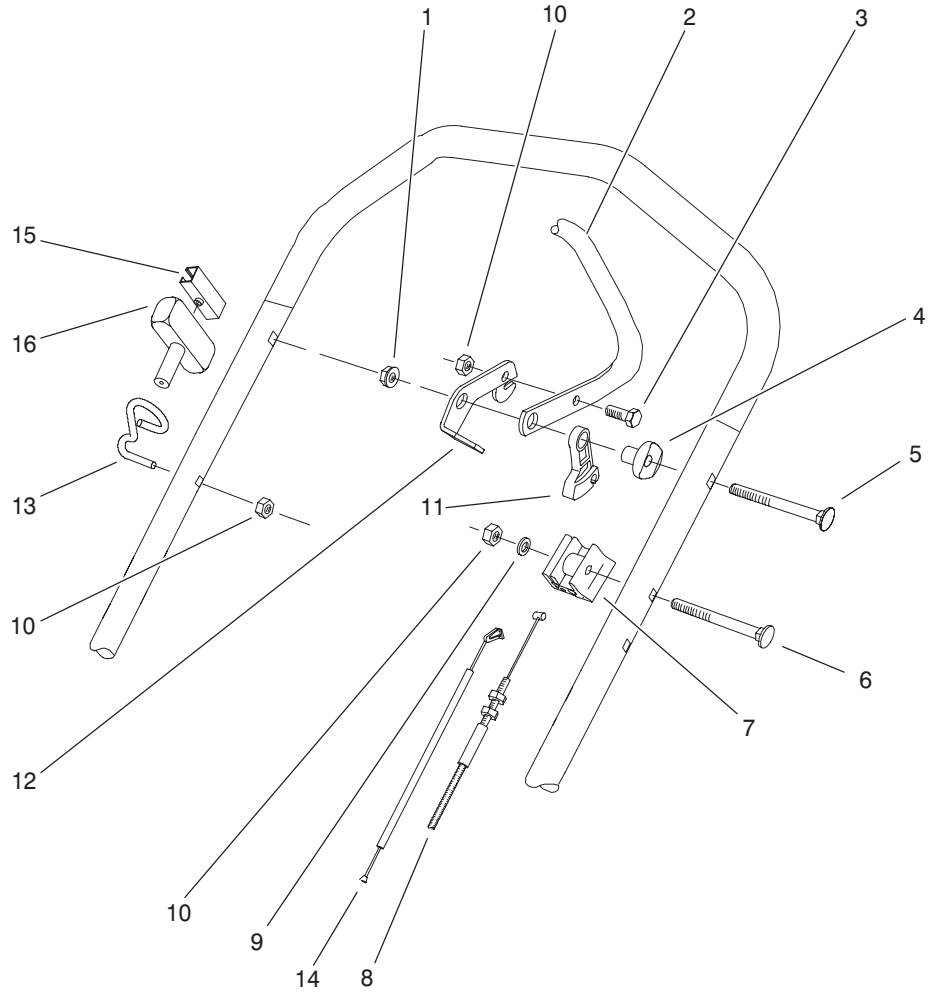


Sheet No.: 7

Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3296–74	2	Nut–Lock NI
2	52–7430–05	1	Bar–Control
3	321–39	1	Screw–HH
4	66–0330	2	Spacer–Support
5	17–9428	2	Handle Screw
6	92–2270	1	Screw – Handle
7	71–0960	1	Cable Support
8	93–6634	1	Cable – Traction
9	3256–1	1	Washer–Flat
10	3296–73	3	Nut–Lock, NI
11	46–5520	1	Lever–Traction
12	66–5351–03	1	Lever–Control
13	95–4457	1	Guide – Rope
14	104–0215	1	Cable–Brake
15	612824	1	Starter–Clip
16	612825	1	Handle–start

Ref. No.	Part No.	Qty.	Description

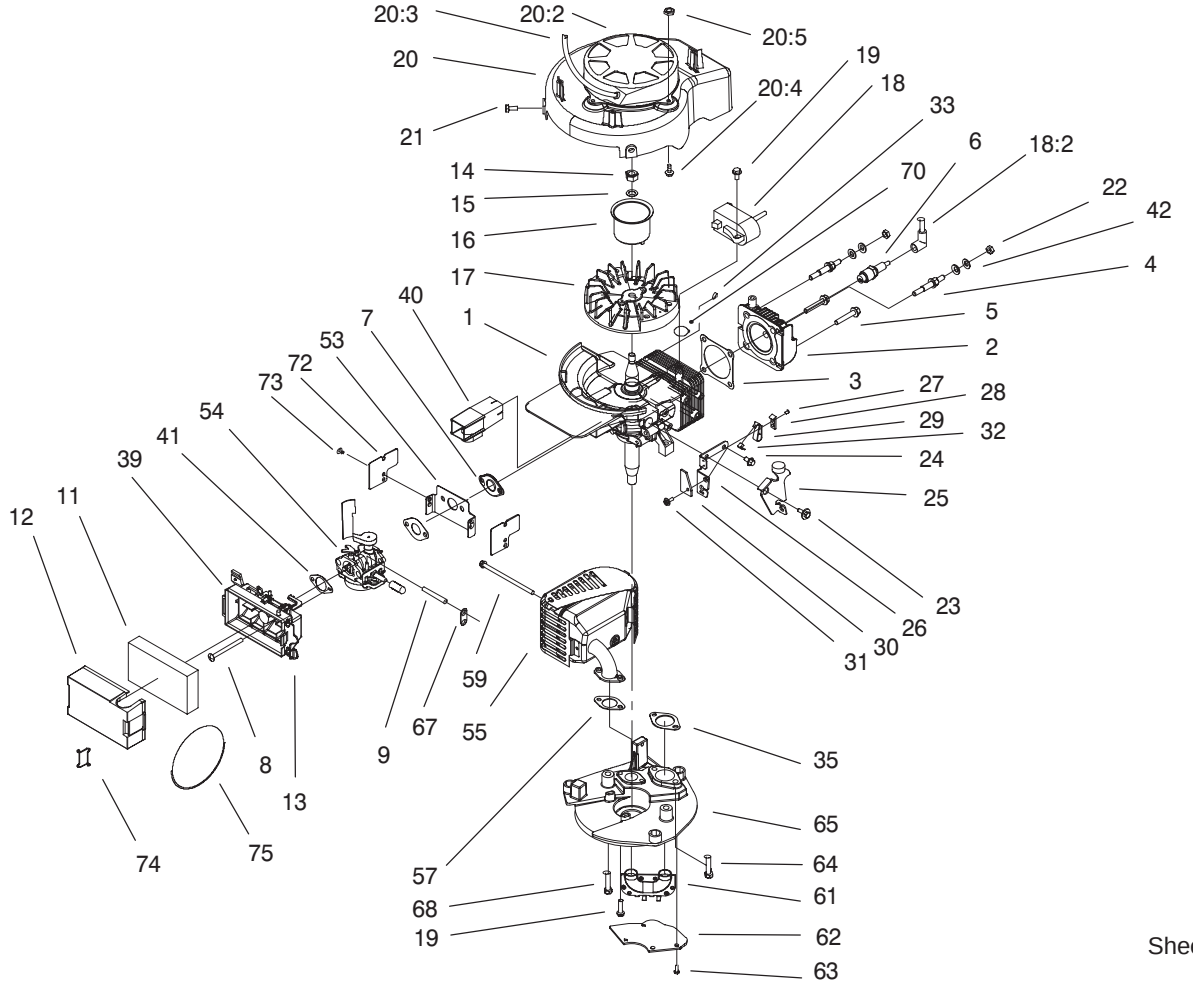


Sheet No.: 2

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	100–2946	1	Short Block ASM
2	94–5776	1	Head–Cylinder
3	94–5778	1	Gasket–Head
4	94–5779	2	Stud
5	94–5780	2	Bolt – Head
6	50–1170	1	Plug–Spark
7	94–5795	2	Gasket–Intake
8	612507	2	Screw
9	95–1861	1	Hose–Primer
11	95–5574	1	Filter–Air
12	100–9112	1	Cover Air Filter Modified
13	100–9110	1	Retainer Cover
14	130743	1	Nut
15	316959	1	Washer–Lock
16	95–1786	1	Cup–Starter
17	95–1866	1	Flywheel
18	99–2911	1	Module–Ignition
*18:1	99–6721	1	Clip–High Tension Lead
18:2	99–6719	1	Lead–High Tension
19	613208	4	Screw
20	95–1868	1	Shroud–Recoil
20:2	99–6713	1	Recoil ASM
20:3	613773	1	Rope
20:4	3290–321	4	Screw–HWH

Ref. No.	Part No.	Qty.	Description
20:5	3296–2	4	Nut–Lock
21	700094	2	Screw–HH
22	146501	2	Nut
23	95–1870	1	Screw–Shoulder
24	95–1871	1	Screw–HWH
25	93–4312	1	Brake Plate ASM
26	84–7820	1	Plate–Brake
27	3290–459	2	Rivet–Plastic
28	92–2925	1	Strap–Insulation
29	60–9010	1	Strap–Ground
30	100–2929	1	Stop–Ground Strap
31	12–5450	1	Screw
32	98–7037	1	Lead Wire–Brake Switch
33	607199	1	Key
35	95–1778	1	Gasket–Exhaust
39	95–5588	1	Air Base ASM
40	95–5578	1	Tunnel–Inlet
41	95–7613	1	Gasket–Filter
42	3290–456	4	Washer–Belleville
*51	609790	1	Sealer–Loctite 50cc
53	98–7015	1	Shield – Carburetor
54	98–7042	1	Carburetor ASM

* Not illustrated

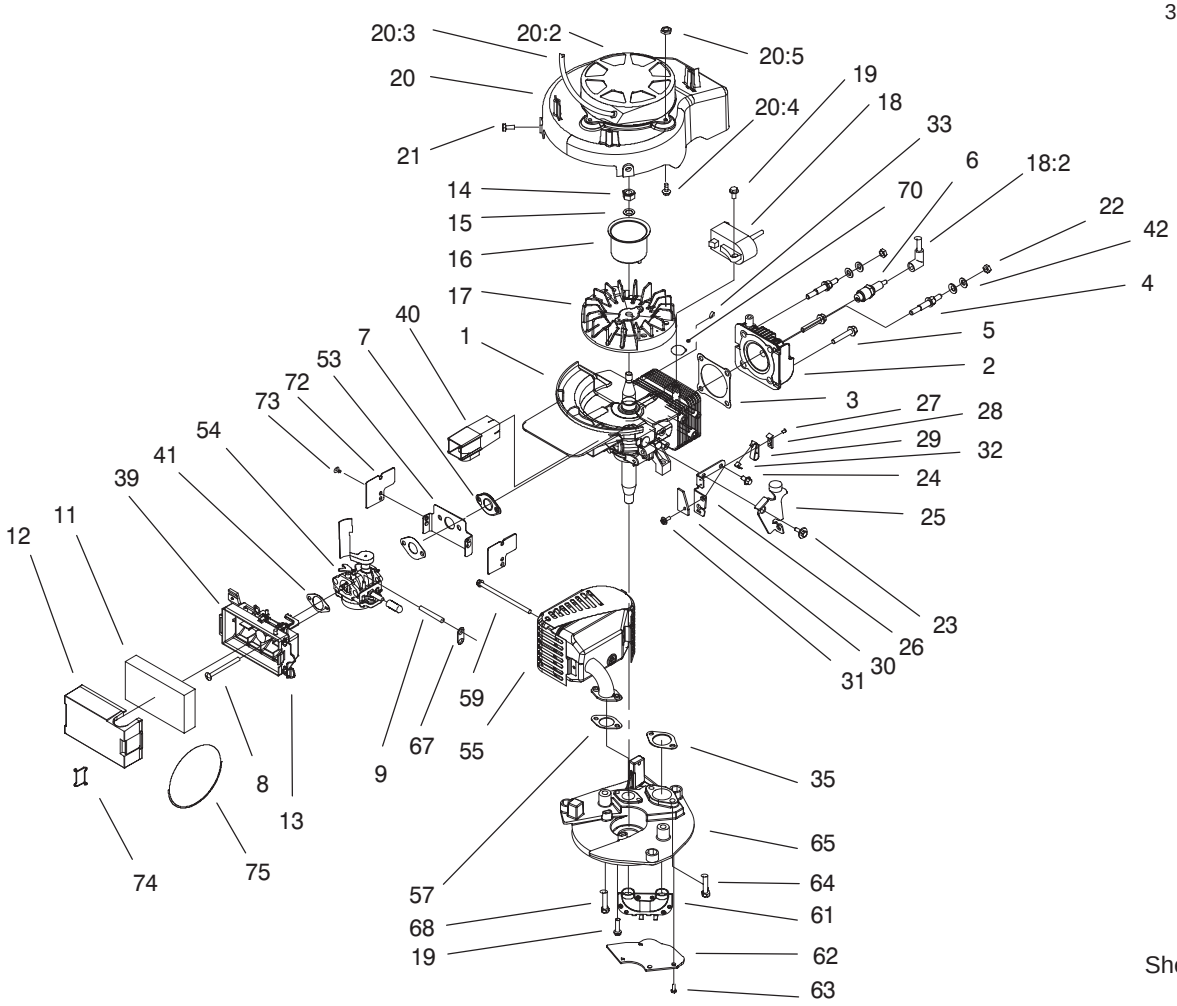


Sheet No.: 2

Engine Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
55	100–9514	1	Muffler And Guard ASM
57	98–1392	1	Gasket
59	611228	1	Bolt–Console
61	98–1557	1	Pipe–Transfer
62	98–1591	1	Cover–Muffler
63	700822	4	Screw–HH
64	322–17	2	Screw–HH
65	98–1384	1	Plate–Muffler
67	95–7615	1	Hose–Retainer
68	322–7	2	Screw–HH
70	317893	1	Strap–Tie
72	93–4316	2	Shield – Governor
73	613269	4	Screw
74	100–9111	1	Hook Cover
75	100–9113	1	O–Ring–Cover

Ref. No.	Part No.	Qty.	Description

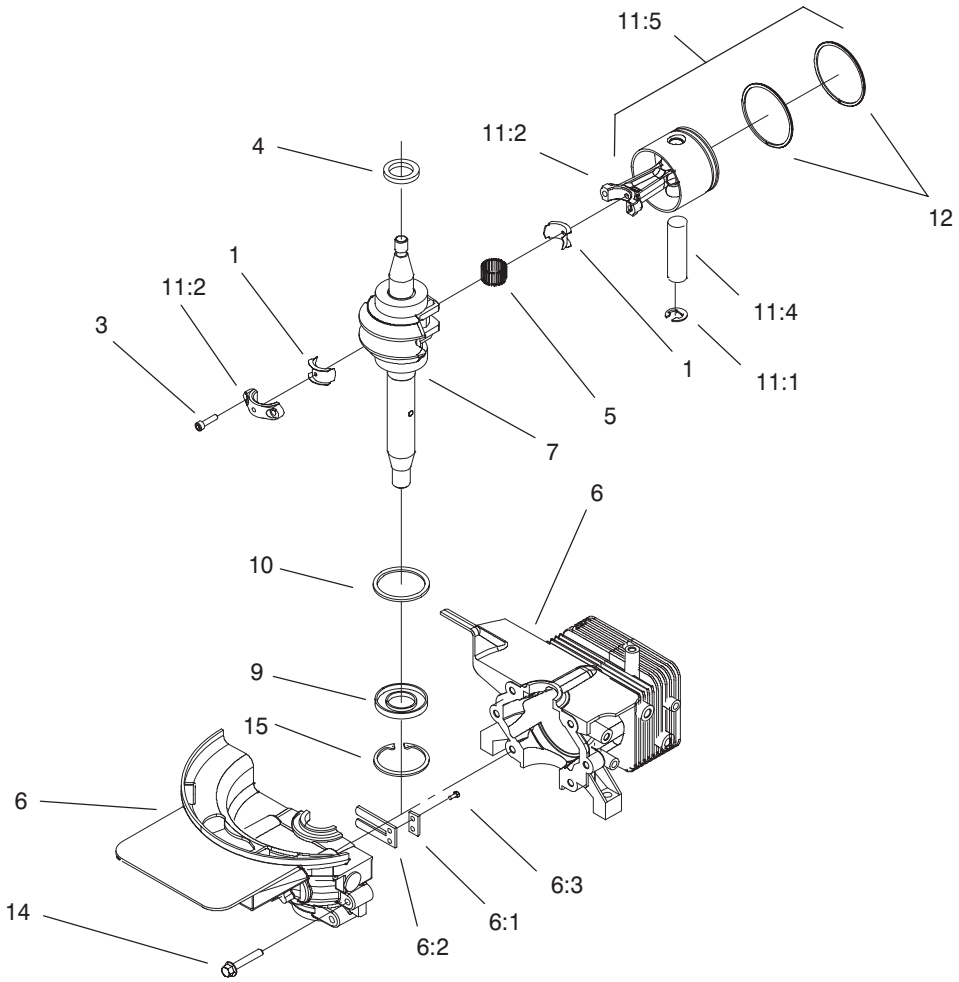


Sheet No.: A1

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	610372	1	Sealer–Loctite 6cc
*2	609790	1	Sealer–Loctite 50cc
3	611393	2	Screw–HSH
4	611396	1	Seal–Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
6:1	602587	1	Plate–Backup, Reed
6:2	602588	1	Reed–Carburetor
6:3	612872	2	Screw–HH
7	100–2947	1	Crankshaft And Bearing ASM Service
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11		1	Piston And Connecting Rod ASM
11:1	303712	2	Ring – Retaining
11:2	95–7629	1	Connecting Rod ASM
11:4	94–5774	1	Pin–Wrist
11:5	100–2916	1	Piston And Rings ASM
12	100–2917	1	Ring Set
14	94–5781	6	Screw
15	98–7046	1	Ring – Retaining

Ref. No.	Part No.	Qty.	Description

* Not illustrated

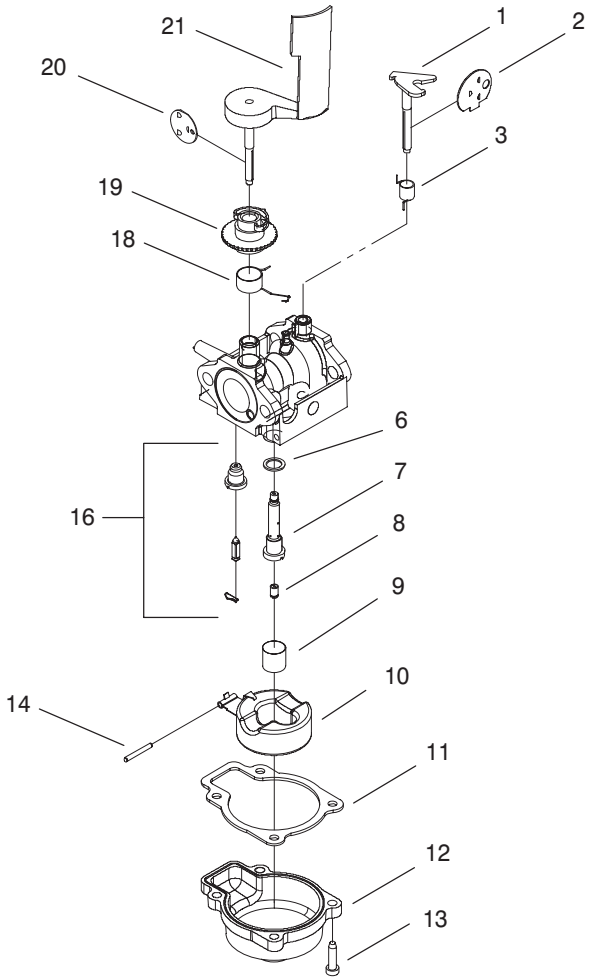

Sheet No.: A2

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	95–5581	1	Shaft–Choke
2	94–5788	1	Disc–Choke
3	95–5583	1	Spring–Choke
6	612383	1	Washer
7	98–7001	1	Nozzle
8	98–1357	1	Jet–Main
9	94–5787	1	Filter–Fuel
10	95–1899	1	Float & Arm ASM
11	98–1362	1	Gasket
12	92–9691	1	Chamber–Float
13	608850	4	Screw–HH
14	92–6389	1	Pin–Straight
16	92–9697	1	Valve/Seat–Float
18	98–7011	1	Spring–Throttle
19	610834	1	Collar–Adjust, Airvane
20	98–7047	1	Disc–Throttle
21	92–6376	1	Air Vane & Shaft

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

Maintenance Record

Date								

LAWN-BOY®