Form No. 380-0021 Rev C

TORO®

Count on it.

Parts Catalog

# 690 Series Golf Sprinkler

**Model No. 690 SERIES**

Register at www.Toro.com.
Original Instructions (EN)

*380-0021* C

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


690 Series Golf Sprinkler . . . . . 4

© 2020—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420



Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

# 690 Series Golf Sprinkler

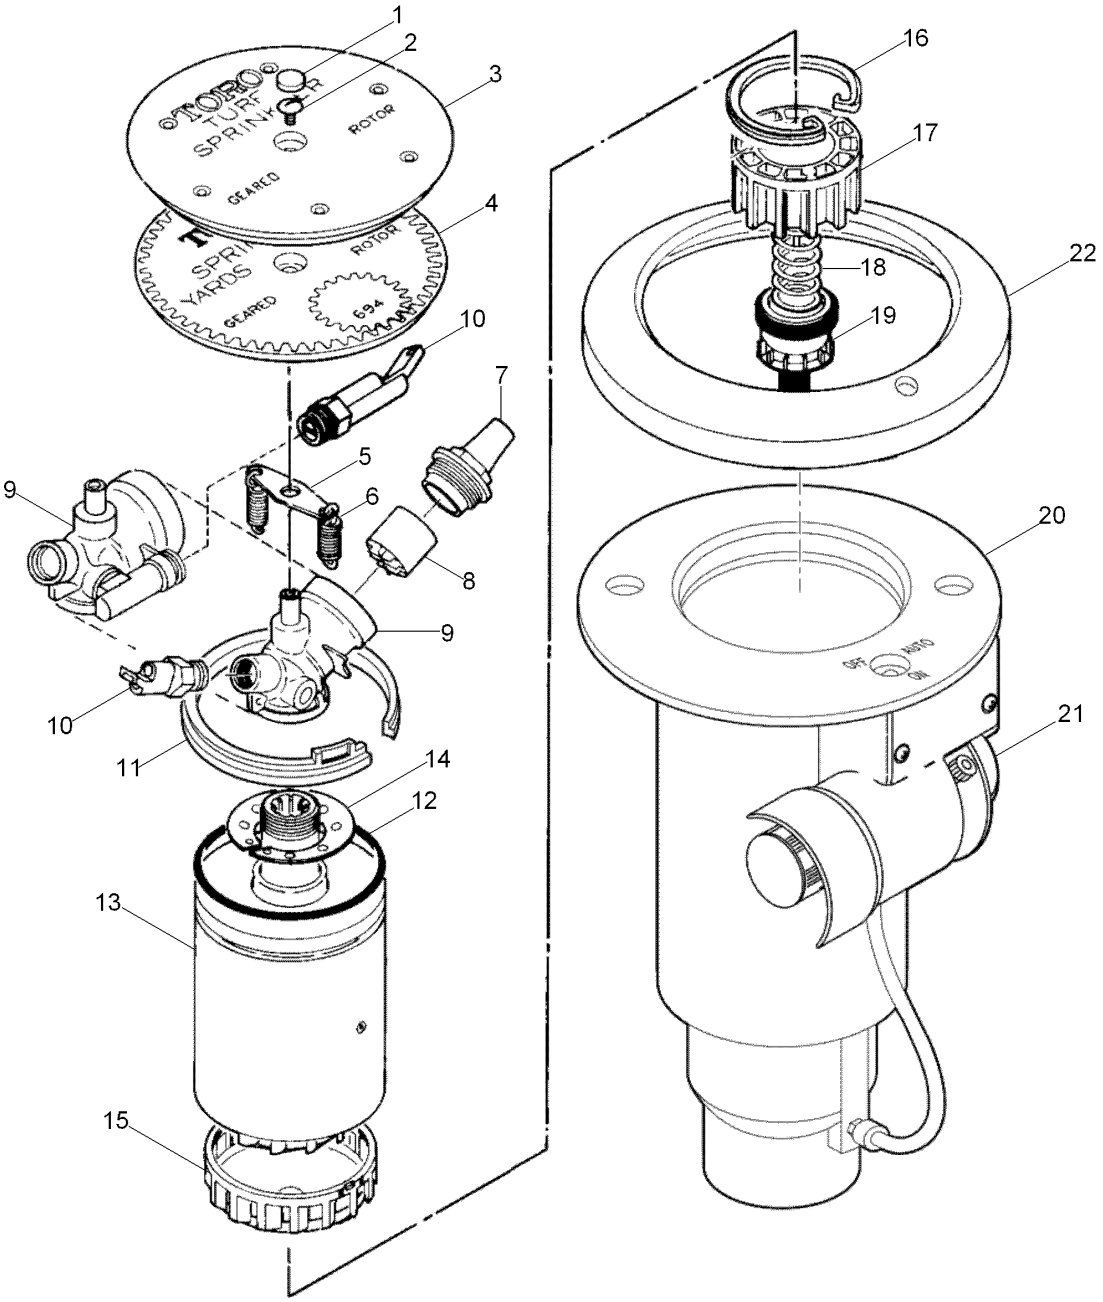

# 690 Series Golf Sprinkler (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 3-2518 | 1 | Plug-Cap , Rubber |
| 2 | 3-3567 | 1 | Screw-Machine, 1/4-20 X 3/8 |
| 3 | 3-3582 | 1 | Cover-Cap, Rubber |
| 4 | 3-3532 | 1 | Cap |
| 5 | 9-2734 | 1 | Strap-Spring |
| 6 | 9-2738 | 2 | Spring-Retraction |
| 7 | 89-5816 | 1 | Nozzle-Main, 3/8, No. 90 |
| 7 | 3-3542 | 1 | Nozzle-Main, 7/16, No. 91 |
| 7 | 3-3543 | 1 | Nozzle-Main, 1/2, No. 92 |
| 8 | 3-3535 | 1 | Straightener-Stream |
| 9 | 3-3531 | 1 | Base-Nozzle, Full-Circle |
| 9 | 9-1079 | 1 | Base-Nozzle, Part-Circle |
| 10 | 9-5535 | 1 | Nozzle-Back |
| 11 | 3-3536 | 1 | Ring-Snap, Head |
| 12 | 363-3210 | 1 | O-Ring (0.139 X 4.359 X 4.637) |
| 13 | 9-1849 | 1 | Drive ASM, Quarter-Circle, 691 (Includes Item 14) |
| 13 | 9-1850 | 1 | Drive ASM, Half-Circle, 692 (Includes Item 14) |
| 13 | 3-3585 | 1 | Drive ASM, Full-Circle, 694 (Includes Item 14) |
| 13 | 35-5123 | 1 | Drive ASM, 696, 2-Speed, 60°-120° (Includes Item 14) |
| 13 | 3-3549 | 1 | Drive ASM, 698, 2-Speed 180° (Includes Item 14) |
| 13 | 89-8145 | 1 | Drive ASM, 150° (Includes Item 14) |
| 13 | 89-8146 | 1 | Drive ASM, 165° (Includes Item 14) |
| 13 | 89-8147 | 1 | Drive ASM, 195° (Includes Item 14) |
| 13 | 89-8148 | 1 | Drive ASM, 210° Includes Item 14) |
| 14 | | 1 | Collar, Spring ◆ |
| 15 | 3-3586 | 1 | Stator, 3/8, #90 |
| 15 | 3-3568 | 1 | Stator, 7/16, #91 |
| 15 | 3-3555 | 1 | Stator, 1/2, #92 |
| 16 | 3-3304 | 1 | Snap Ring, Valve |
| 17 | 9-1479 | 1 | Cylinder ASM, No, Com And Drain Valve |
| 17 | 102-6142 | 1 | Cylinder Assy., El And No/Com |
| 18 | 3-3311 | 1 | Spring-Valve, Com, Black |
| 18 | 102-6411 | 1 | Spring, Valve, El/No, Silver |
| 19 | 89-1201 | 1 | Piston Assy, Valve, No And Com |
| 19 | 102-5101 | 1 | Piston Assy., El |
| 20 | | 1 | Body Assembly (See Service Items) ❍ ◆ |
| 21 | | 1 | Pilot Valve Assembly (See Pilot Valve Assembly Section) ❑ ◆ |
| 22 | 3-3581 | 1 | Cover-Body, Rubber |
| | 102-4003 | 1 | Valve Assy., 1.5", Elec ● ▲ |
| | 89-1036 | 1 | Valve Assy., 1.5", N.O. ● ▲ |
| | 89-1037 | 1 | Valve Assy., 1.5", Com ● ▲ |
| | 3-3529 | | Cap ASM, Rubber Cover ● ▲ |
| | 3-3579 | | Body-Electric W/O/Vih ● ▲ |
| | 3-3558 | | Body-Hydraulic No W/O/Vih ● ▲ |
| | 9-1497 | | Body-Com W/O/Vih ● ▲ |
| | 9-4079 | | Nozzle ASM, 690-90 (Includes Items 7-10) ● ▲ |
| | 9-4080 | | Nozzle ASM, 690-91 (Includes Items 7-10) ● ▲ |
| | 9-4081 | | Nozzle ASM, 690-92 (Includes Items 7-10) ● ▲ |
| | 9-4083 | | Nozzle ASM, 694-90 (Includes Items 7-10) ● ▲ |
| | 9-4084 | | Nozzle ASM, 694-91 (Includes Items 7-10) ● ▲ |
| | 9-4085 | | Nozzle ASM, 694-92 (Includes Items 7-10) ● ▲ |
| | 9-5747 | | Nozzle Base ASM, 690, Dual Back Nozzles (Front And Back) ● ▲ |
| | 9-2669 | | Retraction ASM, Spring (Includes Items 5, 6, 11 And 14) ● ▲ |
| | 690-01 | | Rubber Cover Kit (Includes Items 1, 3 And 22) ● ▲ |
| | 9-7271 | | Adapter-Tubing, Oversized Thread (Replaces Item 2) ● ▲ |
| | 995-06 | | Drive ASM Extraction Tool ■ ▲ |
| | 995-100 | | Valve Snap Ring Pliers With Screen Remover ■ ▲ |
| | 995-09 | | Valve Removal Tool ■ ▲ |
| | 995-12 | | Valve Insertion Tool ■ ▲ |
| | 995-15 | | Selector Tool (Flag Key) ■ ▲ |
| | 995-17 | | Pliers-Riser ■ ▲ |
| | 995-20 | | Valve Insertion Tool, Rubber Cover ■ ▲ |
| | 995-22 | | Adapter-Hose ■ ▲ |
| | 995-49 | | Gauge-Pressure ■ ◗ ▲ |
| | 995-50 | | Tube-Pitot ■ ▲ |
| | 995-51 | | Pressure Gauge Kit ■ ▲ |
| | 995-100 | | Valve Snap Ring Pliers With Screen Remover ■ ▲ |
| | 118-0954 | 1 | Riser Hold-Up Tool, Red ■ ▲ |

● SERVICE ITEMS
▲ Not illustrated
❑ See Pilot Valve Assembly Section.
◗ Order Through Finished Goods Distribution System - Minneapolis

■ SERVICE TOOLS
◆ Not serviced separately
❍ See Golf Sprinkler Body Assembly Section.

## Notes:

## Notes:




**Count on it.**