Form No. 3437-448 Rev B

TORO®

Count on it.

Parts Catalog

Super Recycler®

Lawn Mower

Model No. 21387—Serial No. 405700000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3437-448 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Housing Assembly 4
Rear Door and Mulch Plug Assembly 6
Bag Assembly 8
Engine and Blade Assembly 10
Front Wheel and Height-of-Cut Assembly 12
Transmission and Rear Wheel Height-of-Cut Assembly 14
Electrical Assembly 16
Handle Assembly 18
Attachments and Accessories 20

© 2020—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Housing Assembly

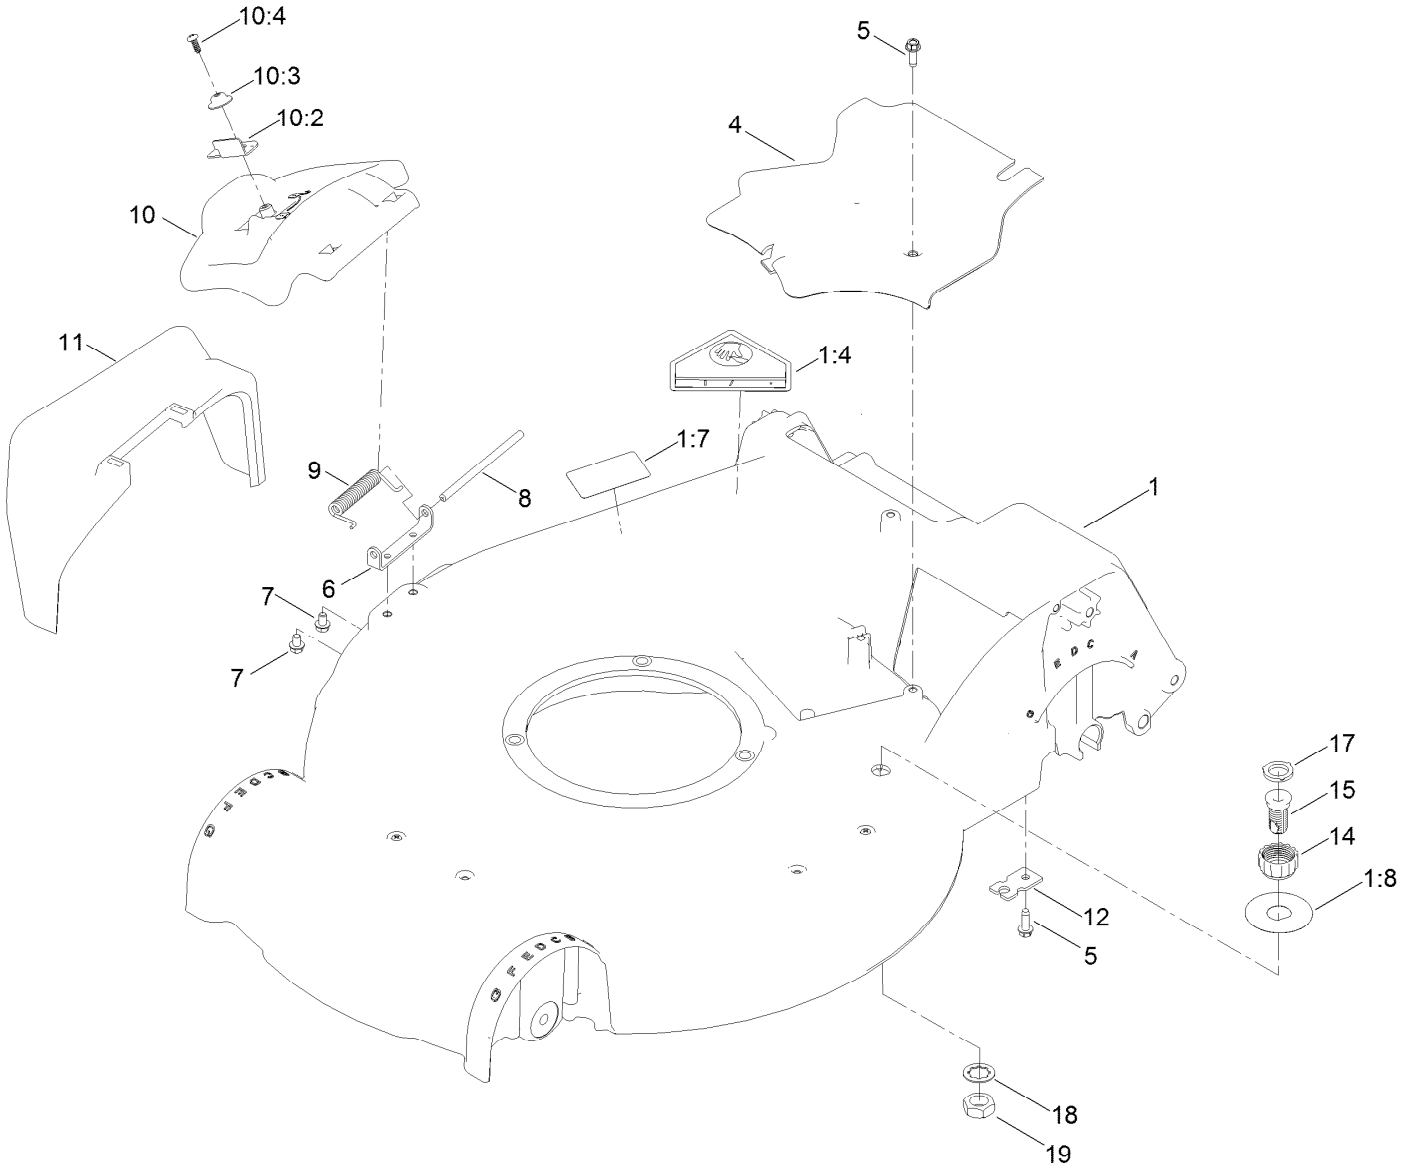

Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-3768	1	Housing ASM
1:4	94-8072	1	Decal-Danger
1:7	125-5092	1	Decal-Placement, Foot
1:8	137-9196	1	Decal-Quick Wash
4	107-7494	1	Cover-Belt
5	49-2040	2	Screw-HWHTF
6	112-6416	1	Bracket-Cover
7	137-4795	2	Screw
8	99-5291	1	Rod-Cover
9	99-5293	1	Spring-Torsion
10	107-3717	1	Discharge Door ASM
10:2	138-3221	1	Latch-Door
10:3	138-3242	1	Cap-Door
10:4	137-9137	1	Screw-PPH
11	108-3753	1	Chute-Discharge, Side
12	138-3224	1	Bracket-Cable, Traction
14	112-6401	1	Coupling-Hose, Washout Port
15	112-6400	1	Port-Washout
17	112-6438	1	Washer-Seal, Washout Port
18	3254-5	1	Washer-Lock
19	3218-6	1	Nut-Jam


Rear Door and Mulch Plug Assembly

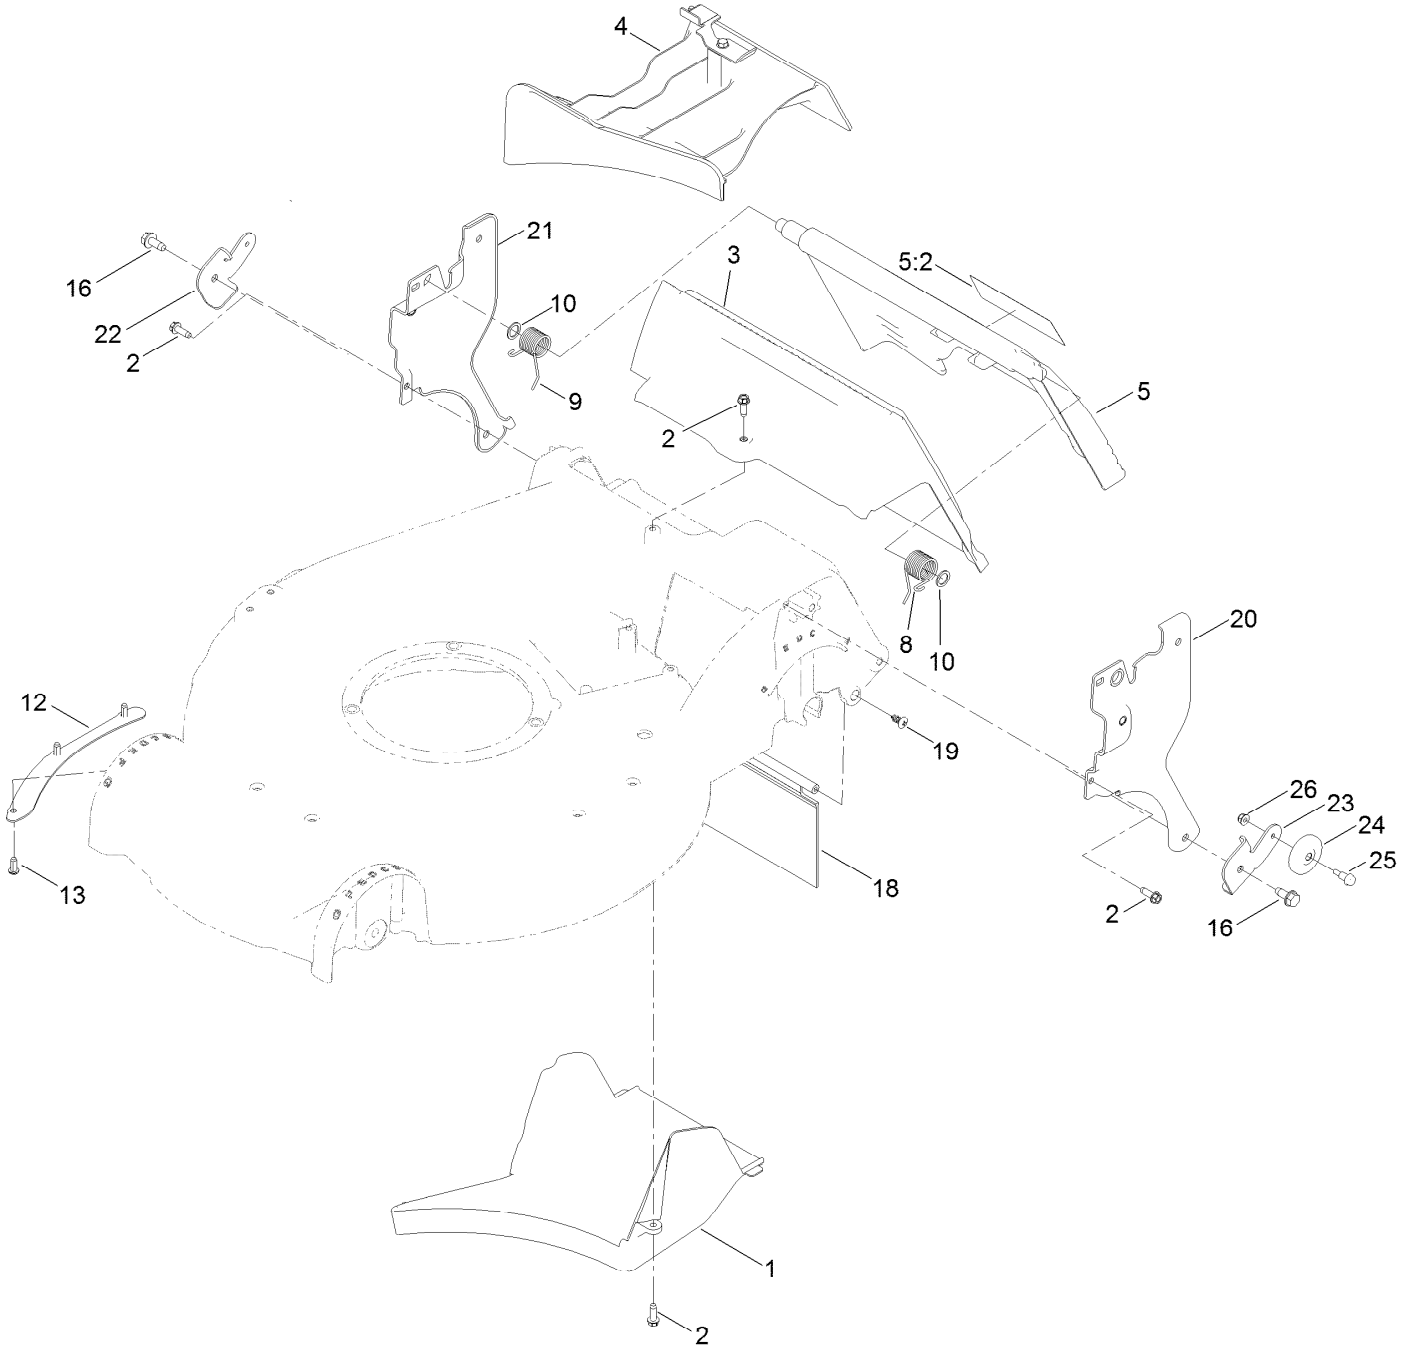

Rear Door and Mulch Plug Assembly (continued)

Ref.	Part Number	Qty.	Description
1	107-7495	1	Tunnel-Discharge
2	49-2040	5	Screw-HWHTF
3	114-2668	1	Chute
4	115-8413	1	Mulch Plug ASM
5	137-9139	1	Rear Door ASM
5:2	131-4514	1	Decal-Warning
8	115-2859	1	Spring-Torsion
9	114-7924	1	Spring-Torsion
10	94-8196	2	Washer-Nylon
12	105-1316-01	1	Lip-Housing
13	63-8590	3	Screw
16	32144-70	2	Screw-HWHTF
18	120-7011	1	Shield-Trailing
19	117-1092	2	Screw-PTH
20	137-9108	1	Plate-Handle, LH
21	137-9107	1	Plate-Handle, RH
22	140-1286-03	1	Bracket-Smartstow, RH
23	140-1287-03	1	Bracket-Smartstow, LH
24	106-9799	2	Wheel-Sweep
25	140-1292	2	Screw-Shoulder
26	138-0719	2	Nut-HF


Bag Assembly

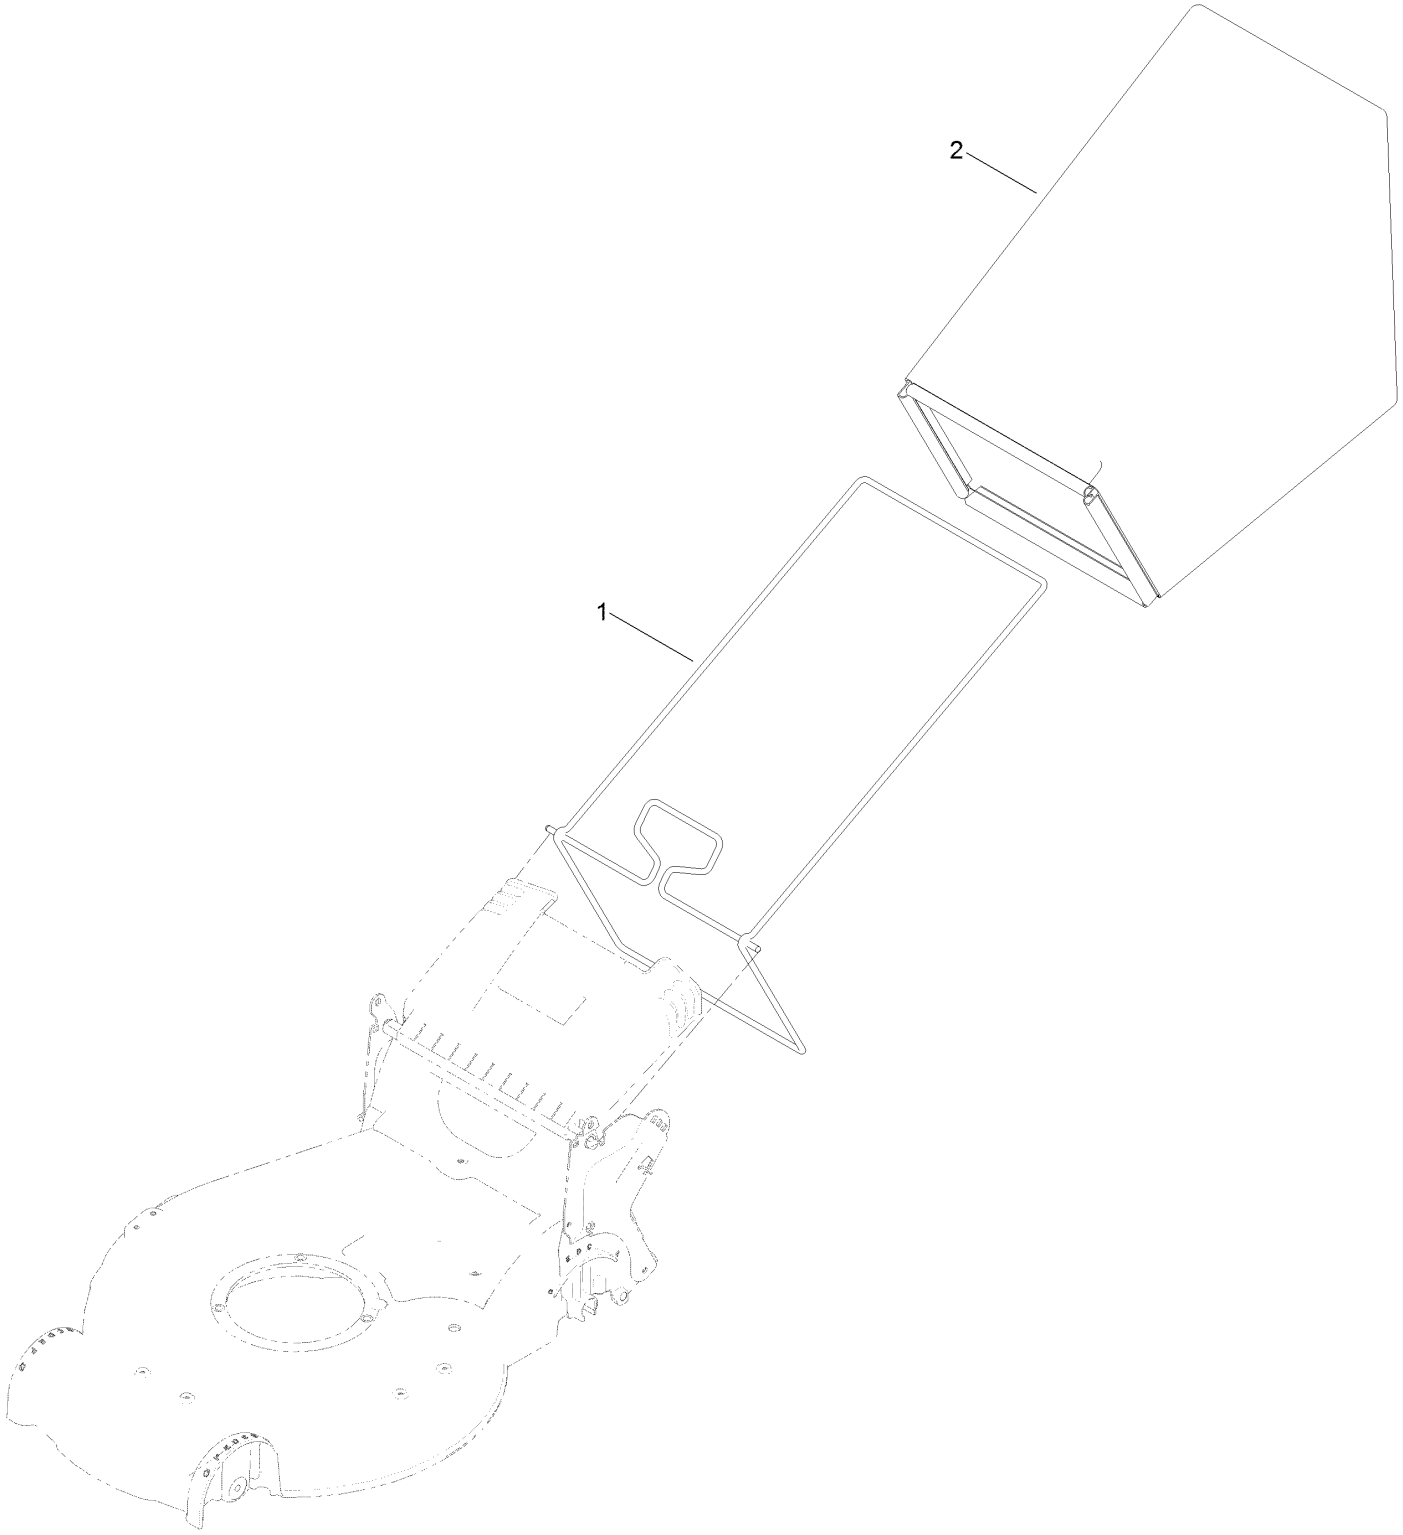

Bag Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	132-4529-03	1	Bag Frame ASM
2	114-2664	1	Grass Bag ASM

Engine and Blade Assembly

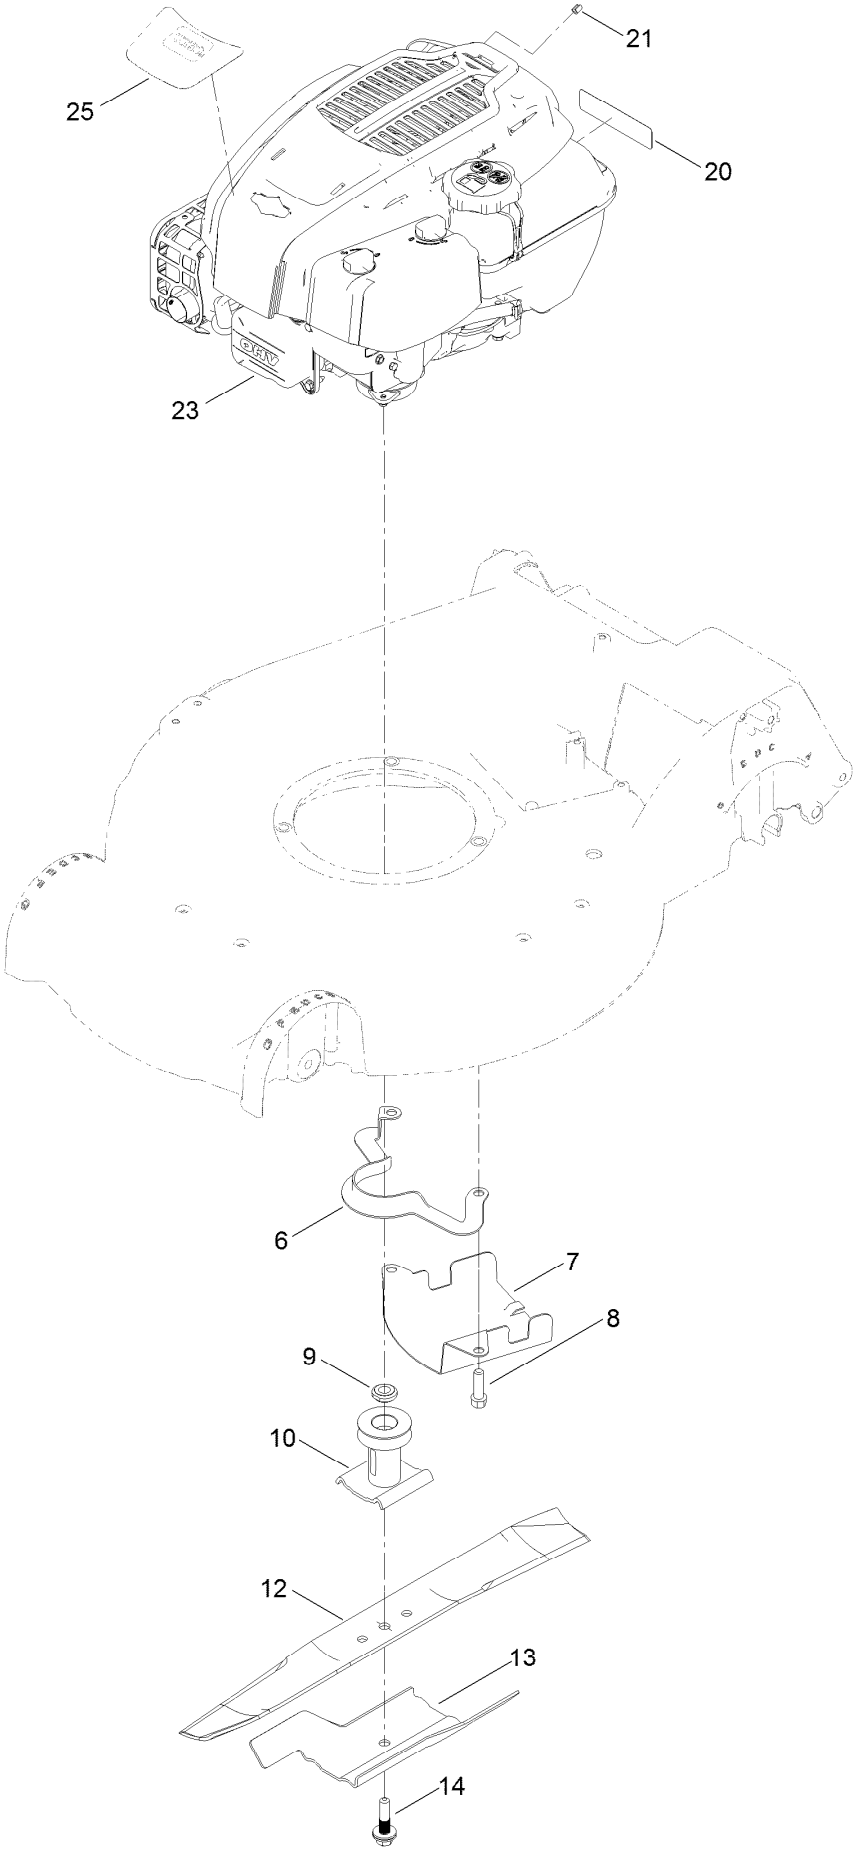


Engine and Blade Assembly (continued)

Ref.	Part Number	Qty.	Description
6	108-8110-03	1	Guide-Belt
7	107-7489-03	1	Shield-Grass
8	95-1727	3	Screw-Taptite
9	106-3999	1	Spacer-Driver
10	106-3987	1	Driver-Blade
12	133-8183-03	1	Blade-Recycling, 21In
13	105-6848-01	1	Accelerator-Blade
14	125-2466	1	Bolt-Blade
20	133-8062	1	Decal-Arrestor, Spark
21	2210-316	1	Stop-Rope
23		1	Engine-Briggs 875 ES SS ● ■
25	140-3774	1	Decal-Engine

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com


Front Wheel and Height-of-Cut Assembly

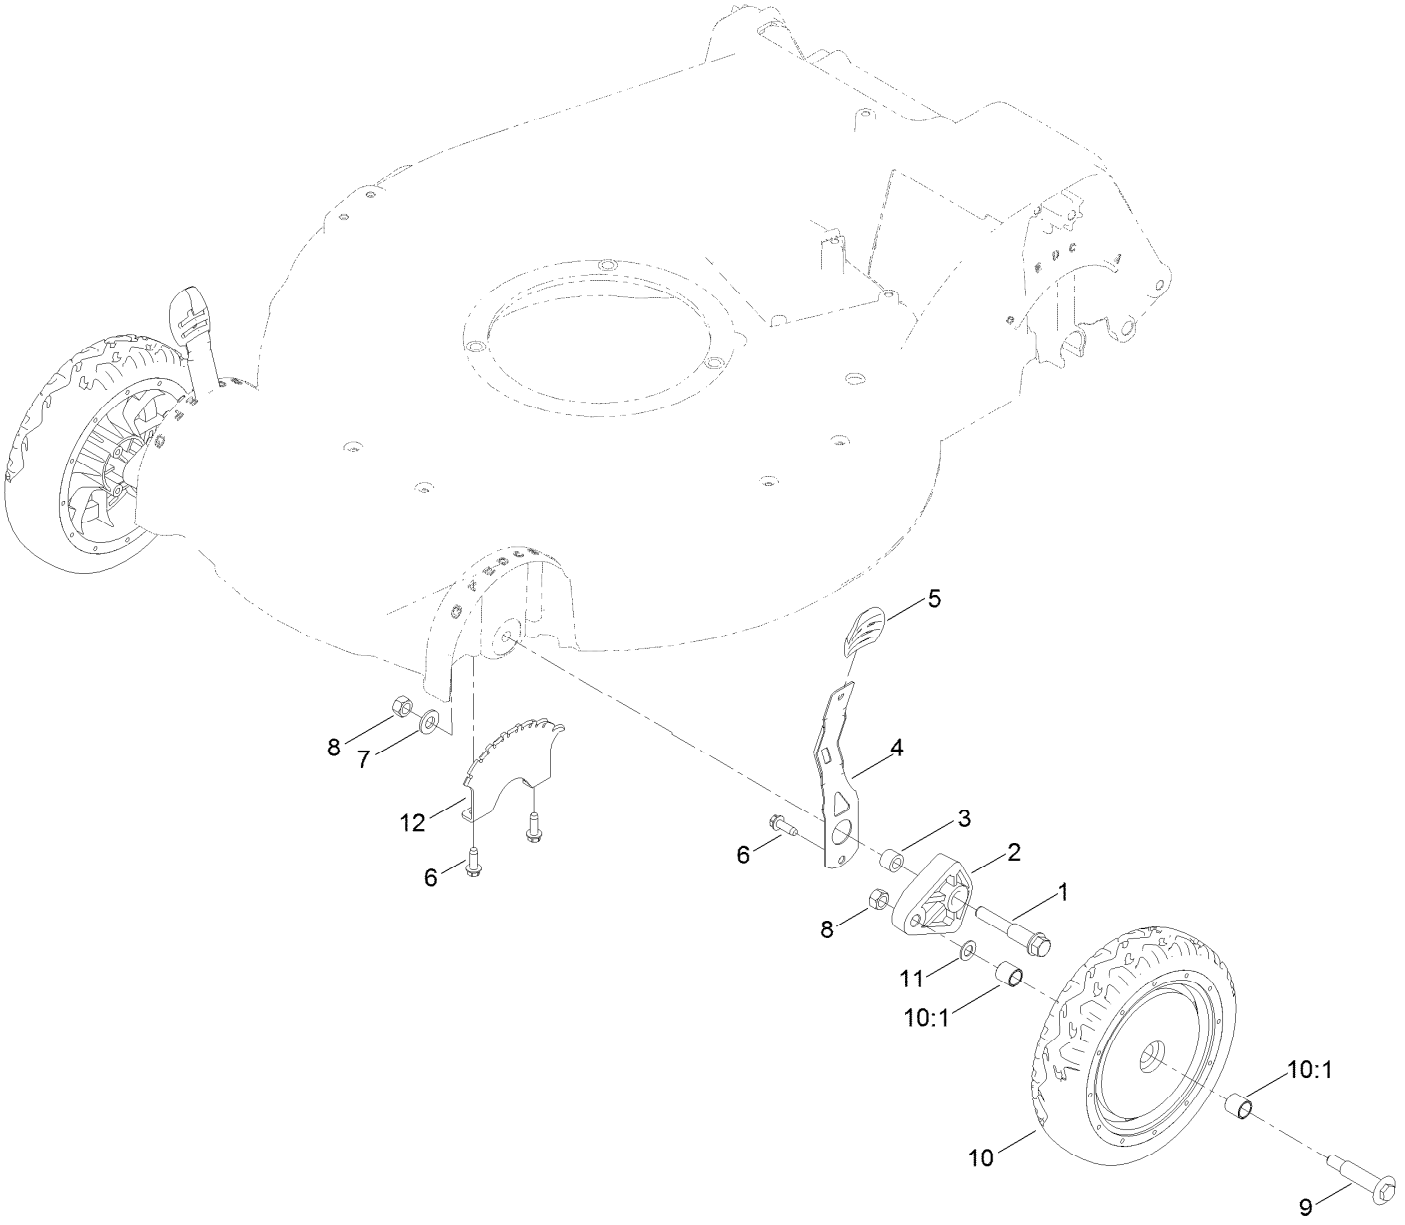

Front Wheel and Height-of-Cut Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-3467	2	Screw-Shoulder
2	107-7492	2	Arm-Pivot
3	52-2480	2	Spacer-Wheel
4	107-7491	2	Arm-Spring
5	105-3042	2	Knob-Lever, HOC
6	49-2040	6	Screw-HWHTF
7	3256-24	2	Washer-Flat
8	603773	4	Locknut
9	92-1057	2	Bolt-Shoulder
10	140-1294	2	Wheel ASM
10:1	27-6250	2	Bushing
11	40-1940	2	Washer
12	139-1669-01	2	Plate-HOC

Transmission and Rear Wheel Height-of-Cut Assembly

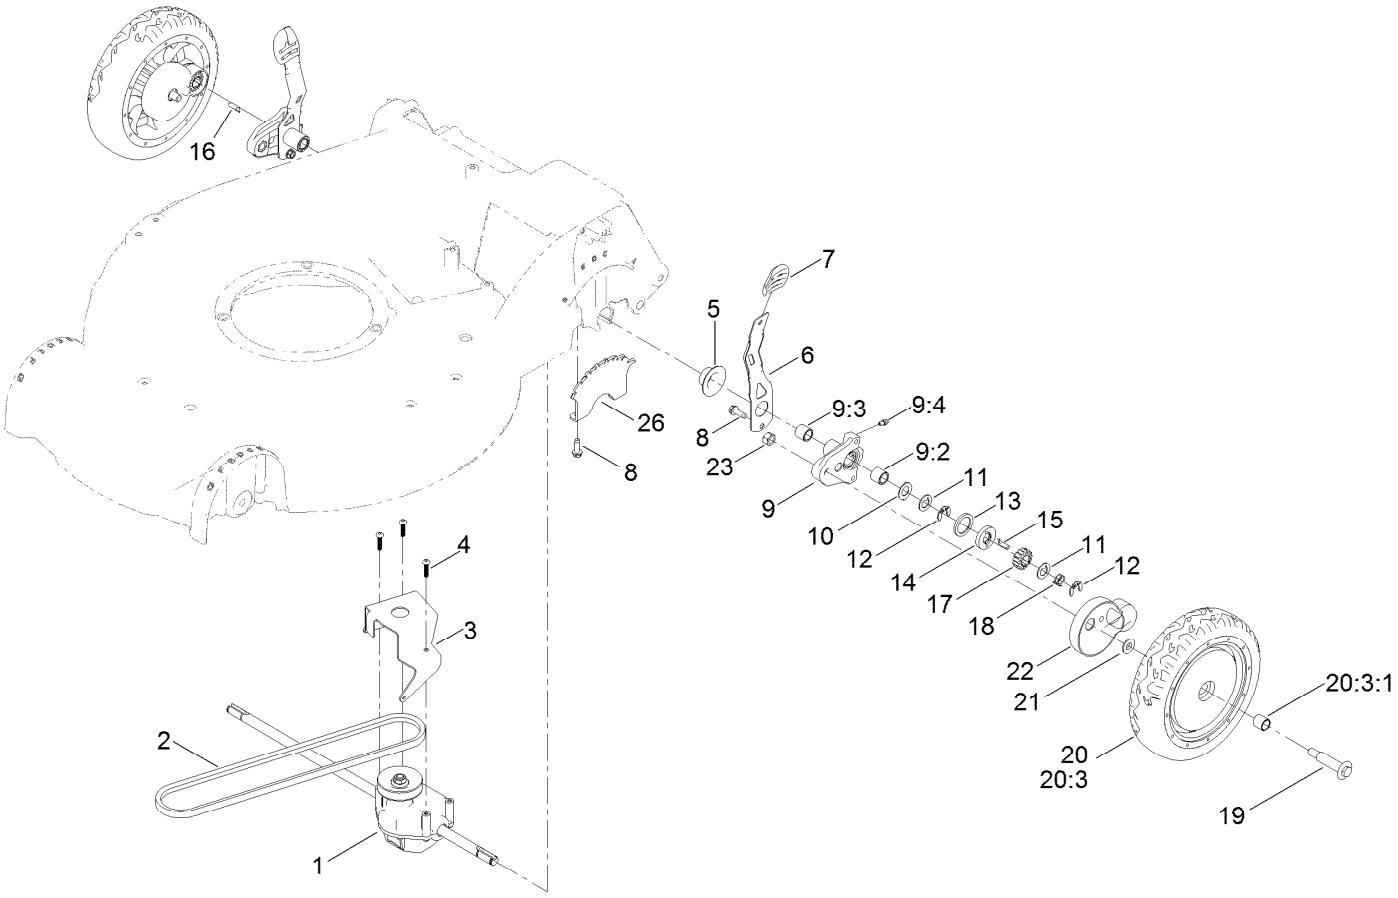


Transmission and Rear Wheel Height-of-Cut Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-9184	1	Transmission ASM
2	115-4669	1	Belt-V
3	114-7977-03	1	Bracket-Transmission
4	108-7476	3	Screw-Plastite
5	138-3235	2	Cap-End
6	107-7491	2	Arm-Spring
7	105-3042	2	Knob-Lever, HOC
8	49-2040	6	Screw-HWHTF
9	100-8774	2	Pivot Arm ASM
9:2	47-2900	1	Bushing
9:3	70-9760	1	Bushing
9:4	302-56	1	Fitting-Grease
10	65-4730	2	Washer-Arm, Pivot
11	65-4740	4	Washer-Thrust, Keyed
12	65-2720	4	Ring-Retaining, Clip
13	65-4710	2	Ring-Friction
14	65-4760	2	Washer-Clutch
15	139-6644	1	Key-Rocking, L.H.
16	139-6643	1	Key-Rocking, R.H.
17	65-4750	2	Gear-Pinion
18	65-4720	2	Spring-Compression
19	92-1057	2	Bolt-Shoulder
20	140-1295	2	Wheel Gear ASM
20:3		1	Wheel ASM ●
20:3:1	27-6250	2	Bushing
21	74-1671	2	Spacer-Cover, Wheel
22	74-1660	2	Cover-Wheel
23	603773	2	Locknut
26	139-1669-01	2	Plate-HOC

● Not serviced separately


Electrical Assembly

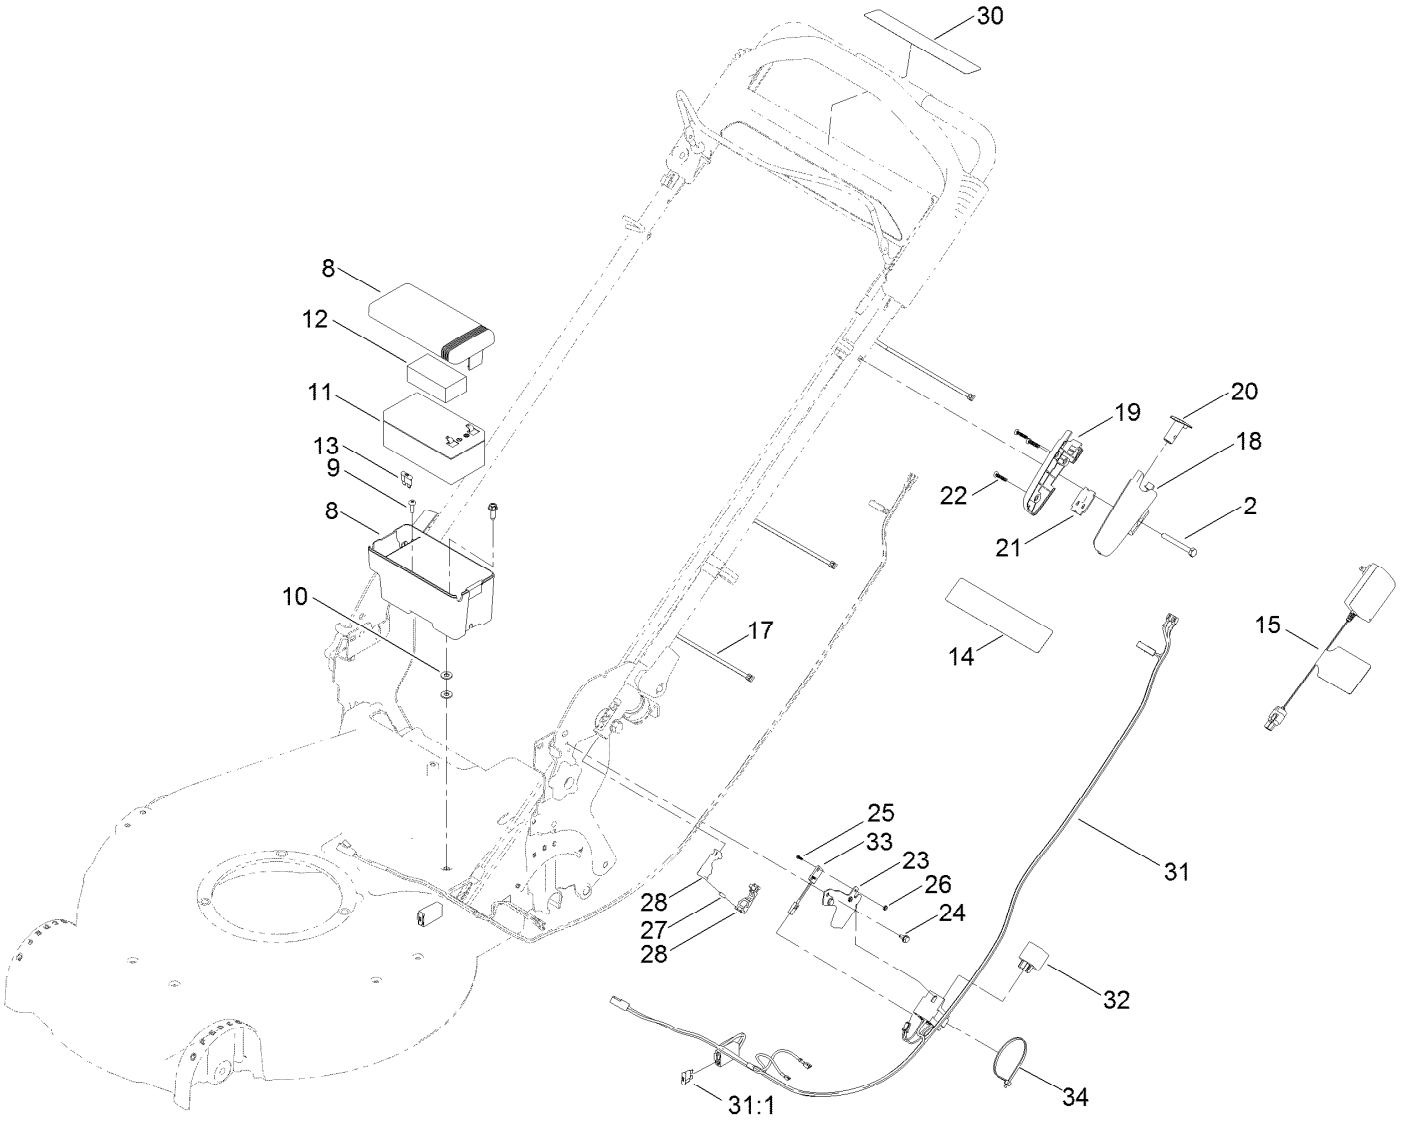

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
2	321-50	1	Screw-HH
8	108-4844	1	Battery Box ASM
9	32144-32	1	Screw
10	120-9679	2	Washer-Flat
11	106-8397	1	Battery-Wet
12	107-3774	1	Foam-Battery, Top
13	99-6124	1	Fuse-40 Amp
14	104-7953	1	Decal-Warning
15	136-9126	1	Charger, Battery (12V)
17	3290-379	3	Tie-Cable
18	133-8160	1	Housing-Switch, LH
19	133-8161	1	Housing-Switch, RH
20	125-2470	1	Button-Switch
21	121-9173	1	Switch-Push Button
22	94-4496	3	Screw-PPH
23	140-3828-03	1	Bracket-Sensor
24	104-2065	2	Screw-HWH
25	360-0224	2	Screw
26	3296-52	2	Nut-Lock, NI
27	114-5896	1	Magnet
28	140-3806	2	Housing-Magnet
30	133-1900	1	Decal-Button, Push
31	140-3761	1	Harness-Wire
31:1	99-6124	1	Fuse-40 Amp
32	1-643275	1	Relay
33	140-3832	1	Reed Switch ASM
34	3290-379	1	Tie-Cable

Handle Assembly

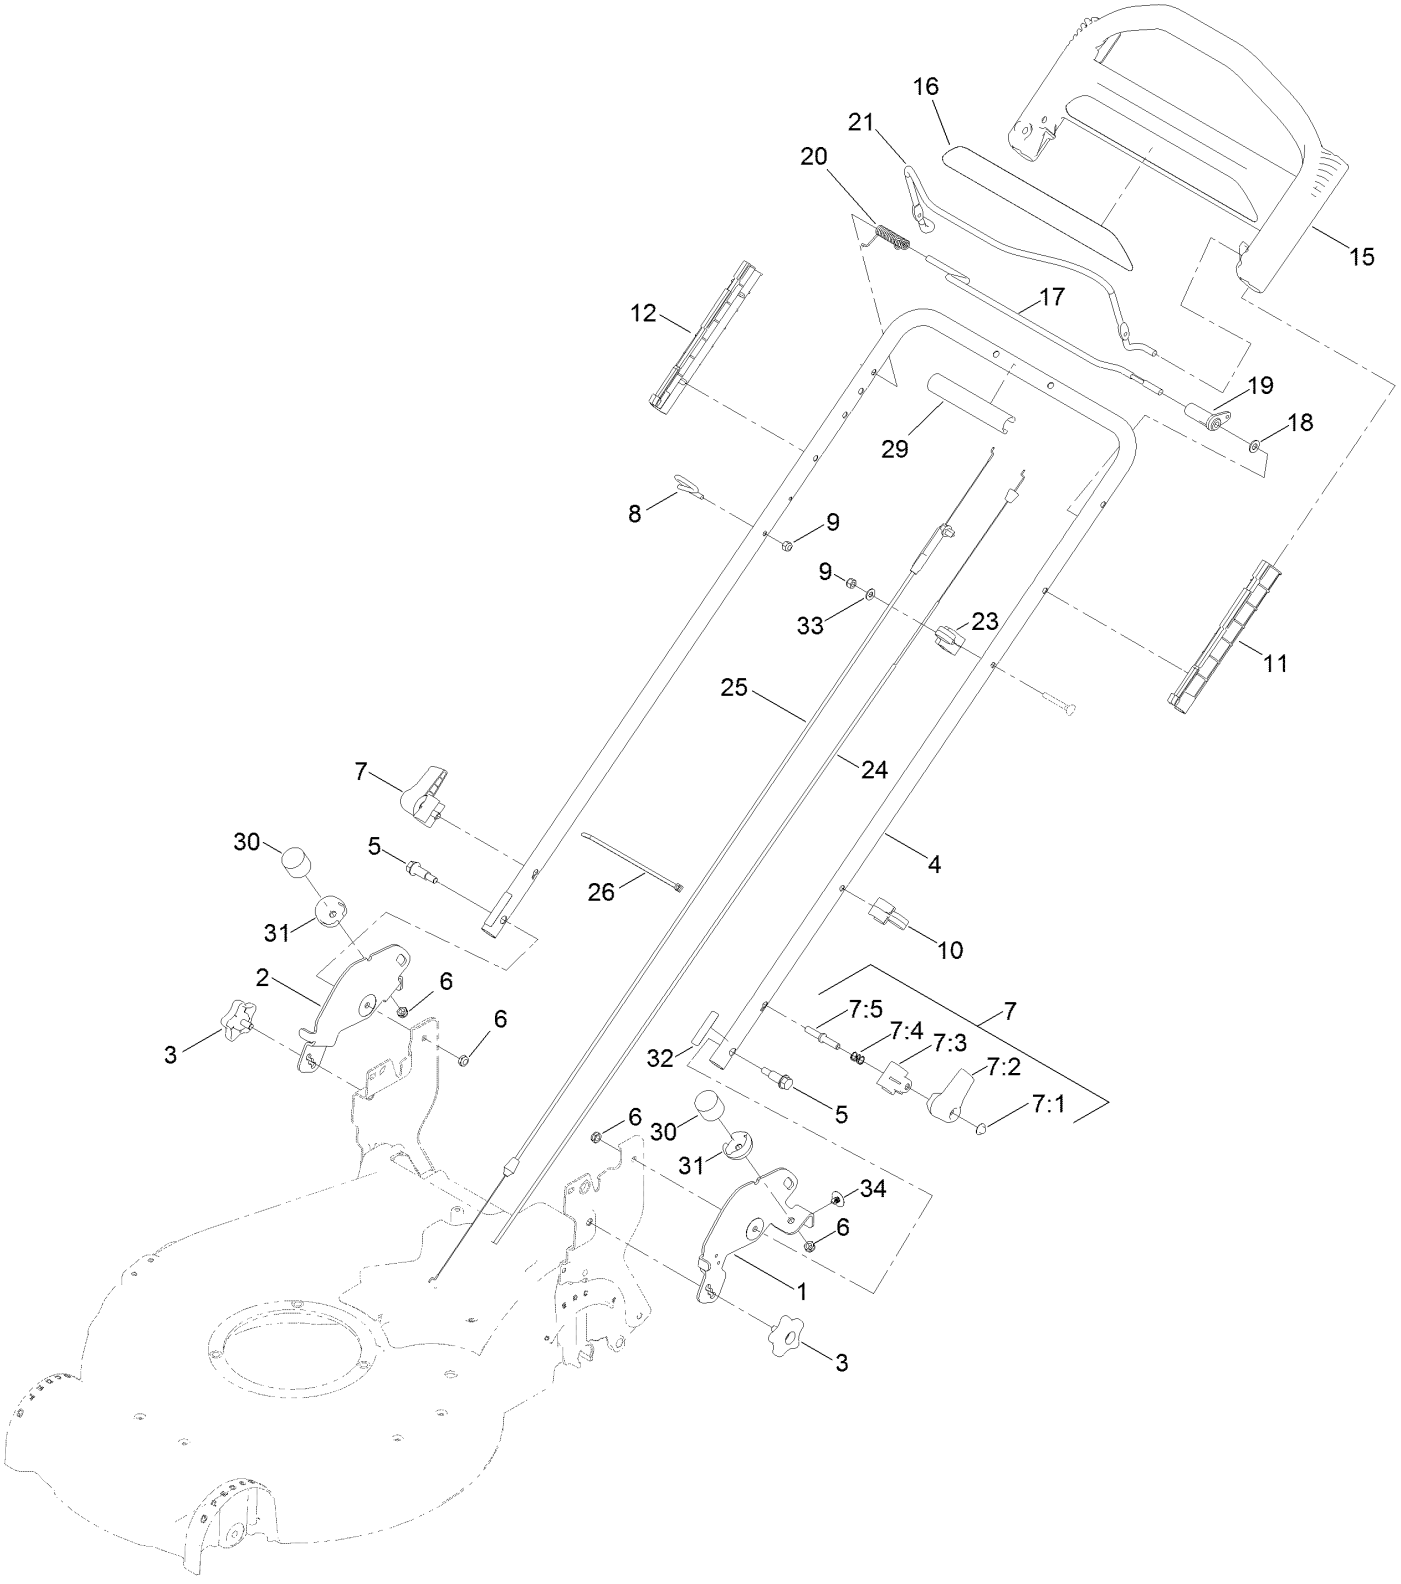

Handle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-3831-03	1	Bracket-Float, LH
2	137-4838-03	1	Bracket-Float, RH
3	137-4844	2	Knob-Handle
4	140-3824-05	1	Handle-Upper
5	130-2344	2	Bolt-Shoulder
6	3296-47	4	Nut-Lock, NI
7	138-3249	2	Quick Release ASM
7:1	32112-11	1	Nut-Push
7:2	138-3248	1	Lever-Release
7:3	138-3253	1	Anchor-Spring
7:4	115-2858	1	Spring-Compression
7:5	138-3243	1	Rod-Release
8	86-9671	1	Guide-Rope
9	3296-73	2	Nut-Lock, NI
10	114-7988	1	Guide-Cable
11	105-6842	1	Guide-LH
12	105-6841	1	Guide-RH
15	104-8678	1	Handle-Control
16	140-3821	1	Decal
17	136-7150	1	Bar-Control, Traction
18	3256-23	1	Washer-Plain
19	99-1589	1	Lever-Traction
20	136-7166	1	Spring-Torsion
21	131-0880-03	1	Bail-Brake
23	136-5864	1	Anchor-Cable
24	117-9389	1	Cable-Traction
25	117-5900	1	Cable-Brake
26	614249	3	Tie-Cable
29	131-4551	1	Cover-Handle
30	137-4803	2	Bumper-Rubber
31	137-9100	2	Cover-Bumper
32	140-3827	2	Decal-Flex
33	3256-1	1	Washer-Flat
34	130-6721	2	Clip-Tree

Attachments and Accessories

For 21387 Super Recycler Lawn Mower

Product Name	Model/Part
Bagging Blade	108-3759-03
Briggs Maint Kit	130-8148
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Traction Assist Handle Kit	131-4590
Toro Premium Fuel Treatment 12 Oz Bottle	131-6572
Oil-30/10W-30 Synthetic (Quart)	138-6053
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Summer Oil-Case of 24 (20oz Bottles)	38916
Bag-Walk Behind (Toro)	490-7318
Lawnmower Cover	490-7462

Notes:

Notes:

Notes:



Count on it.