Form No. 3324–577

Greensmaster® 3050

Two Wheel Drive Traction Unit

Model No. 04351—200000601 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000
All Rights Reserved


Contents

Description	Page
Control Pedal Assembly	3–4
Traction Controls Assembly	5
Front Wheel And Brake Assembly	6
Hydraulic Drive Motor Assembly No. 92–9199	7
Steering Arm Assembly	8
Right Hand Pull Frame Assembly	9
Hydraulic Cylinder Assembly No. 99–8159	10
Left Hand Pull Frame Assembly	11
Rear Pull Frame Assembly	12
Hydraulic Cylinder No. 99–8160	13
Seat Assembly	14–15
Control Valve Installation Assembly	16–17
Engine Installation Assembly	18
Hydraulic Pump Installation Assembly	19
Hydraulic Pump Assembly No. 95–5976	20
Frame Assembly	21
Rear Wheel Assembly	22
Instrument Panel Assembly	23
Hydraulic Reservoir Assembly	24
Fuel Tank Assembly	25
Real Motor Installation Assembly	26
Reel Motor No. 94–3506	27
Wiring Assembly	28
Grass Basket & Miscellaneous Parts	29
Hydraulic Schematic	30
Control Valve Assembly No. 84–2203 (Sections 1 & 2)	31–32
Control Valve Assembly No. 84–2203 (Sections 3 Thru 5)	33–34
Special Tools	35–36
Engine – Briggs and Stratton Model 303447–1408–E1	37–47

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

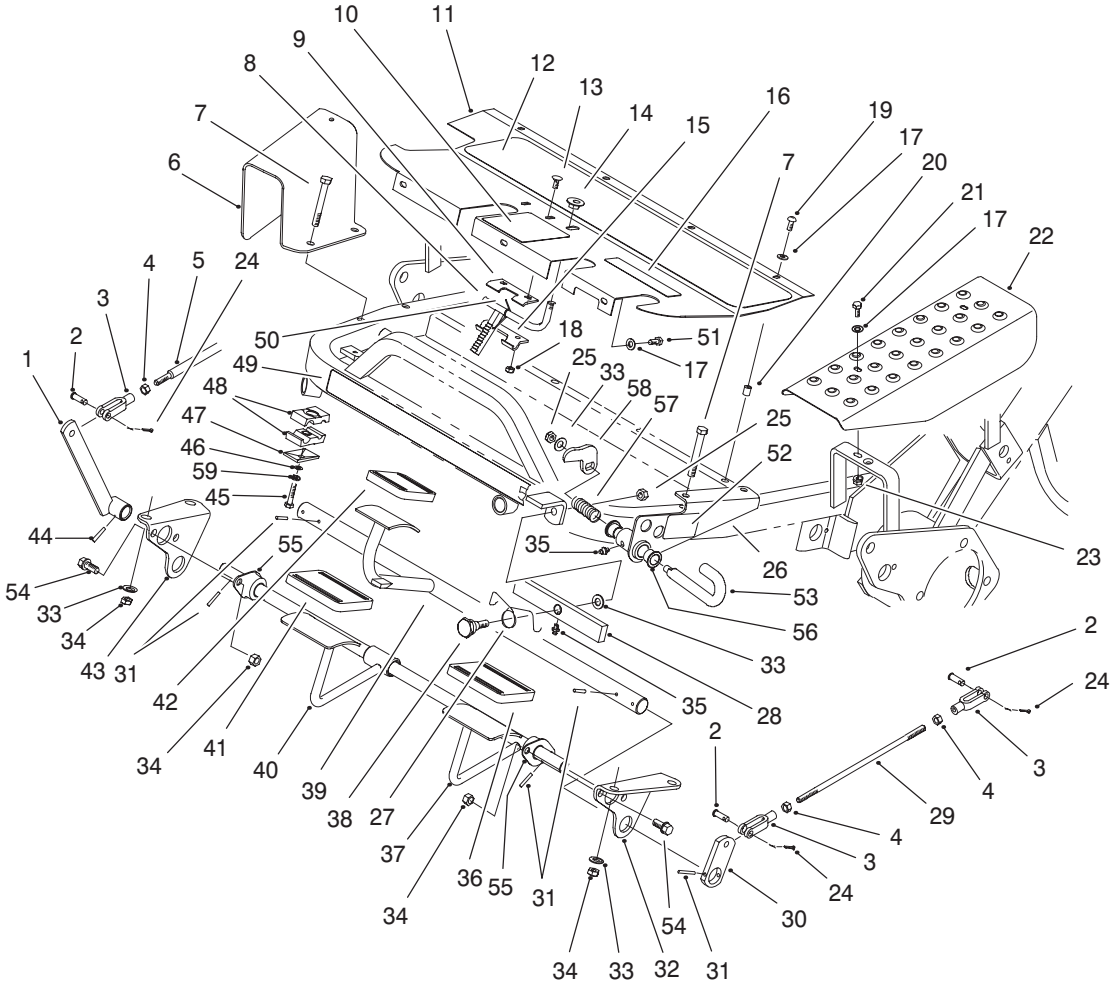


Sheet No.:2

Control Pedal Assembly

Ref. No.	Part No.	Qty.	Description
1	49–6200–01	1	Lever–Cutting
2	283–61	5	Pin–Yoke
3	282–2	5	Yoke
4	3220–2	5	Nut–Jam
5	49–5430	1	Rod–Control
6	49–6110–01	1	Guard
7	323–13	4	Screw–HH
8	10–7850	1	Latch–Brake, Parking
9	95–1628	1	Hinge – Upper
10	93–8062	1	Decal–Brake, Parking
11	83–0640–01	1	Plate–Footrest
12	49–6120	1	Pad–Footrest
13	3229–11	2	Screw–CARR
14	32141–111	1	Nut–Adjusting
15	95–1629	1	Hinge – Lower
16	93–8075	1	Decal–Mow/Lift
17	3256–1	9	Washer–Flat
18	3296–16	2	Nut–Lock, NI
19	3274–31	4	Screw–HSBH
20	32148–6	8	Nut–Insert
21	321–4	2	Screw–HH
22	83–0200–01	1	Plate–Cover, LH
23	32128–33	2	Nut–HF
24	3272–6	5	Pin–Cotter
25	3296–39	2	Nut–Lock, NI
26	93–9901–01	1	Bracket–Lockout, Mow

Ref. No.	Part No.	Qty.	Description
27	83–0080	1	Spring–Pivot, Lift
28	83–0060	1	Lift – Pivot
29	27–2270	2	Rod–Adjustment, Brake
30	10–8100–01	2	Strap–Shaft, Brake
31	32121–35	8	Pin–Roll
32	88–9640–01	1	Bracket–Lift Pivot, LH
33	3256–38	6	Washer–Flat
34	3296–59	8	Nut–Lock, NI
35	302–5	2	Fitting – Lube
36	93–7631	1	Pad–Foot, Lift
37	88–9660	1	Shaft–Control, Cut
38	83–2590	1	Bolt–Shoulder, Pivot
39	83–0160	1	Shaft–Brake
40	83–0140	1	Pedal–Mow
41	93–7630	1	Pad–Foot
42	93–7629	1	Pad–Foot, Brake
43	88–9630–01	1	Bracket–Lift Pivot, RH
44	32121–6	1	Pin–Roll
45	321–11	1	Screw–HH
46	3256–22	1	Washer–Flat
47	69–9760	1	Coverplate
48	56–7970	2	Clamp–Tube
49	95–5997	1	Decal – Gr 3050
50	10–8140	1	Bracket–Spring, Latch
51	321–3	3	Screw–HH

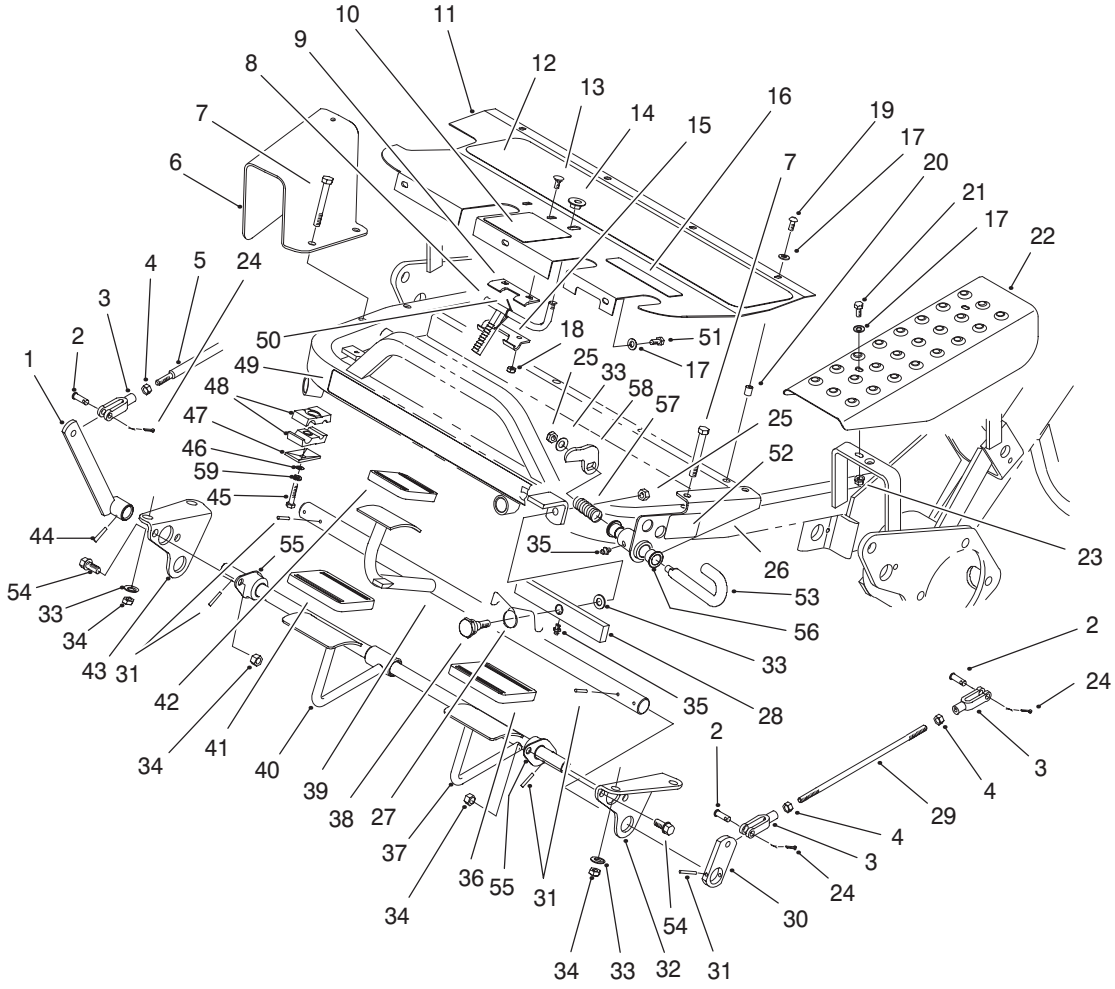


Sheet No.:2

Control Pedal Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
52	93–9898	1	Decal – Lock
53	93–9903	1	Pin–Mow, Lockout
54	3234–1	4	Screw–HHF
55	27–2320	2	Bearing
56	3–1506	2	Bushing
57	76–0410	1	Spring–Compression
58	93–9904	1	Arm–Mow, Lockout
59	3253–3	1	Washer–Lock/Sp

Ref. No.	Part No.	Qty.	Description

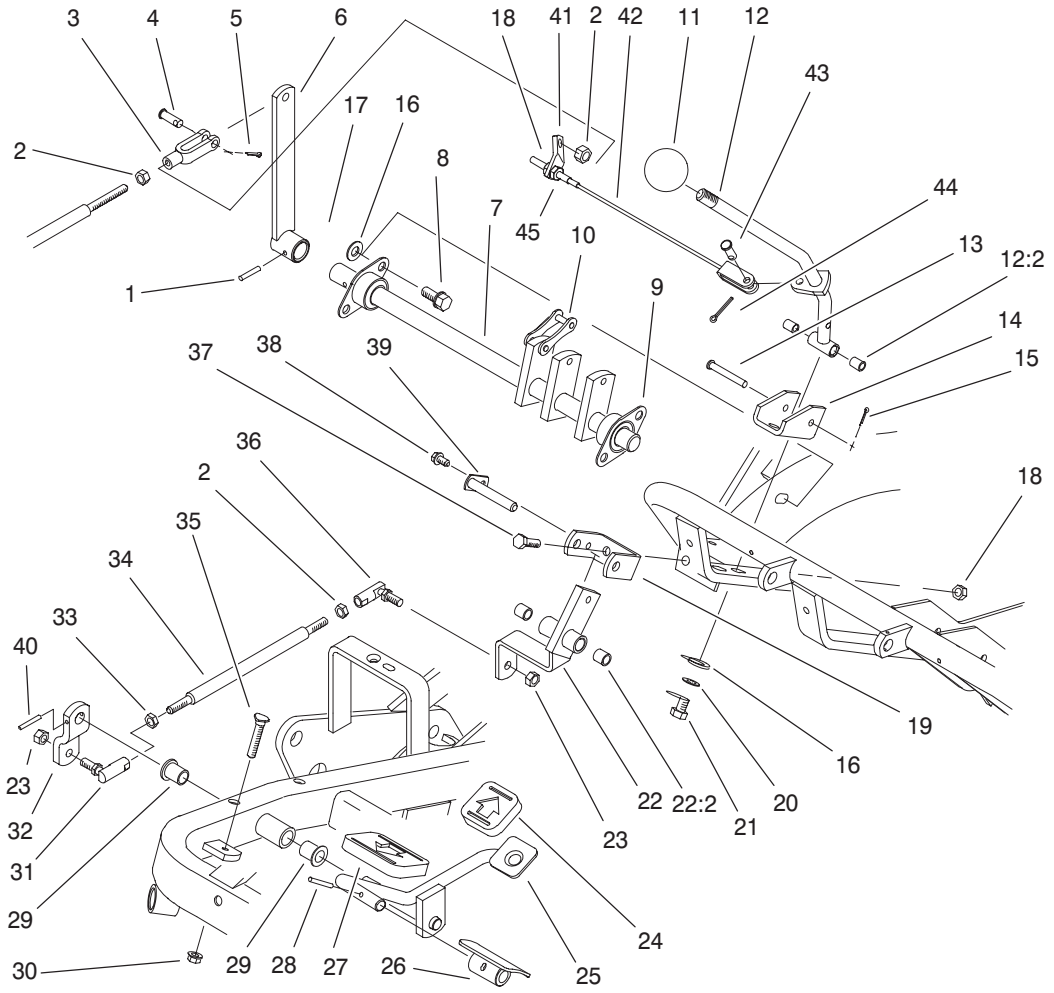


Sheet No.:3

Traction Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	32121–6	1	Pin–Roll
2	3220–2	3	Nut–Jam
3	282–2	1	Yoke
4	283–61	1	Pin–Yoke
5	3272–6	1	Pin–Cotter
6	47–5320–01	1	Lever
7	44–0870	1	Cam Shaft ASM
8	3234–1	4	Screw–HHF
9	27–2320	2	Bearing
10	57–6220	5	Link–Connecting
11	233–48	1	Knob
12	93–9934	1	Handle–Traction
12:2	256–251	2	Bushing
13	283–57	1	Pin
14	49–6220	1	Bracket–Arm, Control
15	3272–4	1	Pin–Cotter
16	3256–24	6	Washer–Flat
17	3296–59	4	Nut–Lock, NI
18	3296–29	3	Nut–Lock, NI
19	49–6250	1	Bracket–Pivot
20	3254–6	2	Washer–Lock, Int.
21	3211–2	2	Screw–HH
22	49–6260	1	Pivot ASM
22:2	256–2	2	Bushing
23	3296–4	2	Nut–Lock, NI
24	74–9110	1	Pad–Pedal, Reverse

Ref. No.	Part No.	Qty.	Description
25	83–0540–01	1	Traction Pedal ASM
26	49–6440–03	1	Pedal–Forward
27	74–9100	1	Pad–Pedal, Forward
28	32121–45	1	Pin–Spring
29	256–155	2	Bushing–Flange
30	32128–20	1	Nut–HF
31	2411–42	1	Joint–Ball, LH
32	83–0630	1	Arm–Pivot, Traction
33	3220–20	1	Nut–Jam LH
34	83–0580	1	Rod–Control, Traction
35	17–9420	1	Screw – Handle
36	2411–43	1	Joint–Ball
37	322–5	2	Screw–HH
38	12–3270	1	Screw
39	49–6290	1	Pivot Shaft ASM
40	32121–51	1	Pin–Roll
41	93–9936	1	Bracket–Return, Traction
42	93–9937	1	Traction Cable ASM
43	283–62	1	Pin–Clevis
44	3272–10	1	Pin–Cotter
45	3217–6	1	Nut–Hex

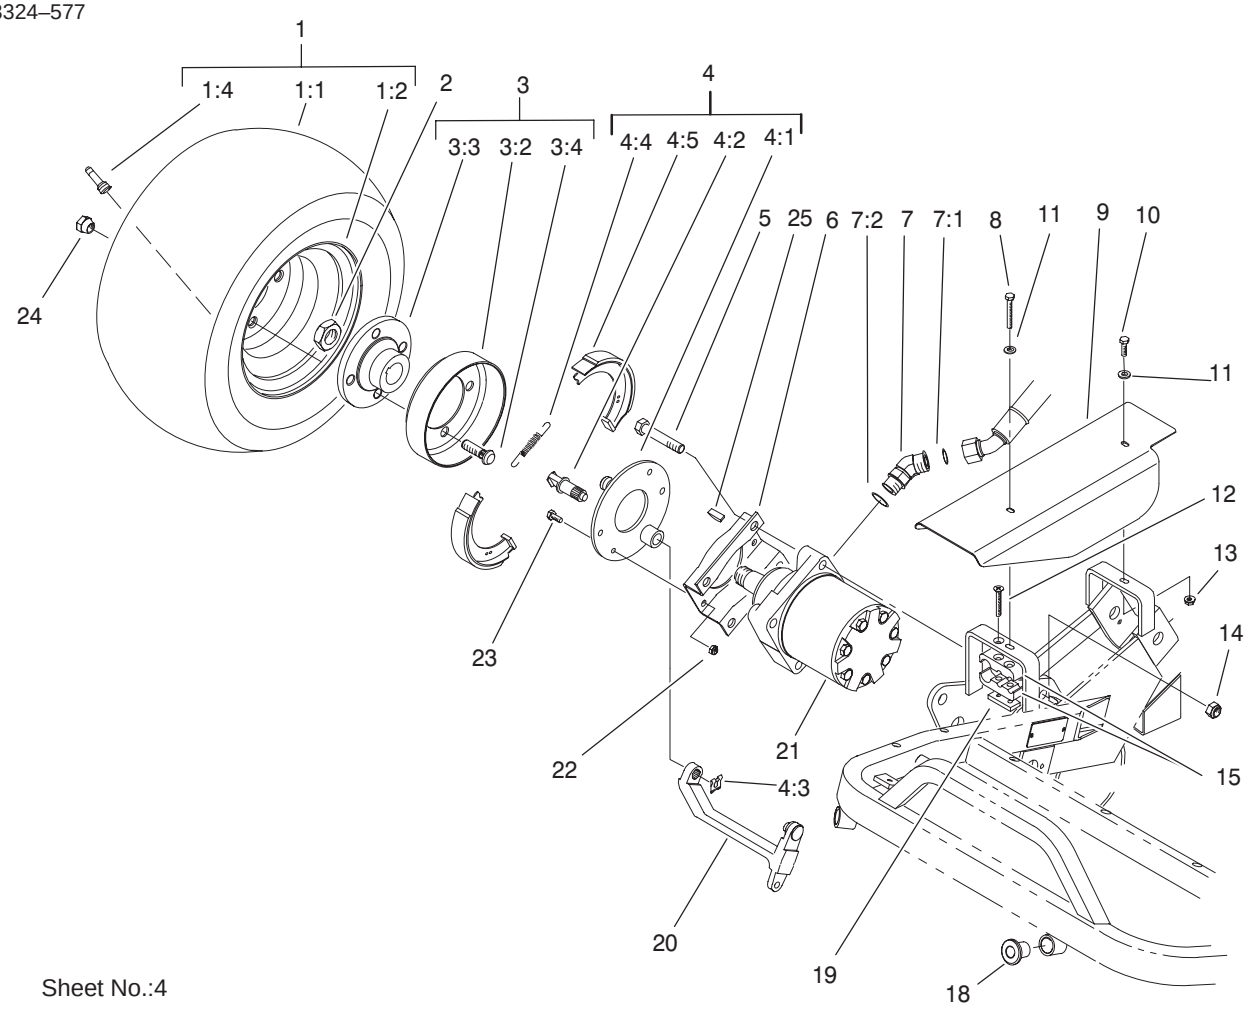


Sheet No.:4

Front Wheel And Brake Assembly

Ref. No.	Part No.	Qty.	Description
1		2	Wheel & Tire ASM
1:1	28–3680	1	Tire
1:2	217–60	1	Rim
1:4	232–24	1	Stem–Valve
*1:5	232–37	1	Tube
2	26–3790	2	Nut–Lock
3	10–6821	2	Brake Drum ASM
3:2	10–6850	1	Drum–Brake
3:3	10–6870–03	1	Hub–Wheel
3:4	85–6540	4	Stud–Drive
4	71–1500	2	Brake ASM
4:1	70–9870	1	Plate–Backing
4:2	70–9860	1	Cam–Brake
4:3	70–9850	1	Clip–Retaining
4:4	70–9880	2	Spring–Return
4:5	70–9840	2	Shoe–Brake
5	325–11	8	Screw–HH
6	84–2000–03	2	Bracket–Brake
7	340–14	4	Fitting–Hyd., 45°
7:1	237–65	1	O–Ring
7:2	237–80	1	O–Ring
8	321–11	1	Screw–HH
9	83–0190–01	1	Cover–RH
10	321–4	1	Screw–HH
11	3256–22	2	Washer–Flat
12	32108–100	1	Screw–FH

Ref. No.	Part No.	Qty.	Description
13	32128–33	1	Nut–HF
14	3296–23	8	Nut–Lock, NI
15	57–6140	2	Clamp–Tube, Half
18	83–1700	3	Bushing – Flange
19	83–1220	1	Plate–Clamp
20	93–2096	2	Lever – Brake
21	92–9199	2	Motor–Hydraulic
22	3296–42	8	Nut–Lock
23	321–5	8	Screw–HH
24	242–50	8	Nut–Lug
25	3257–42	2	Key–Woodruff


* Not illustrated

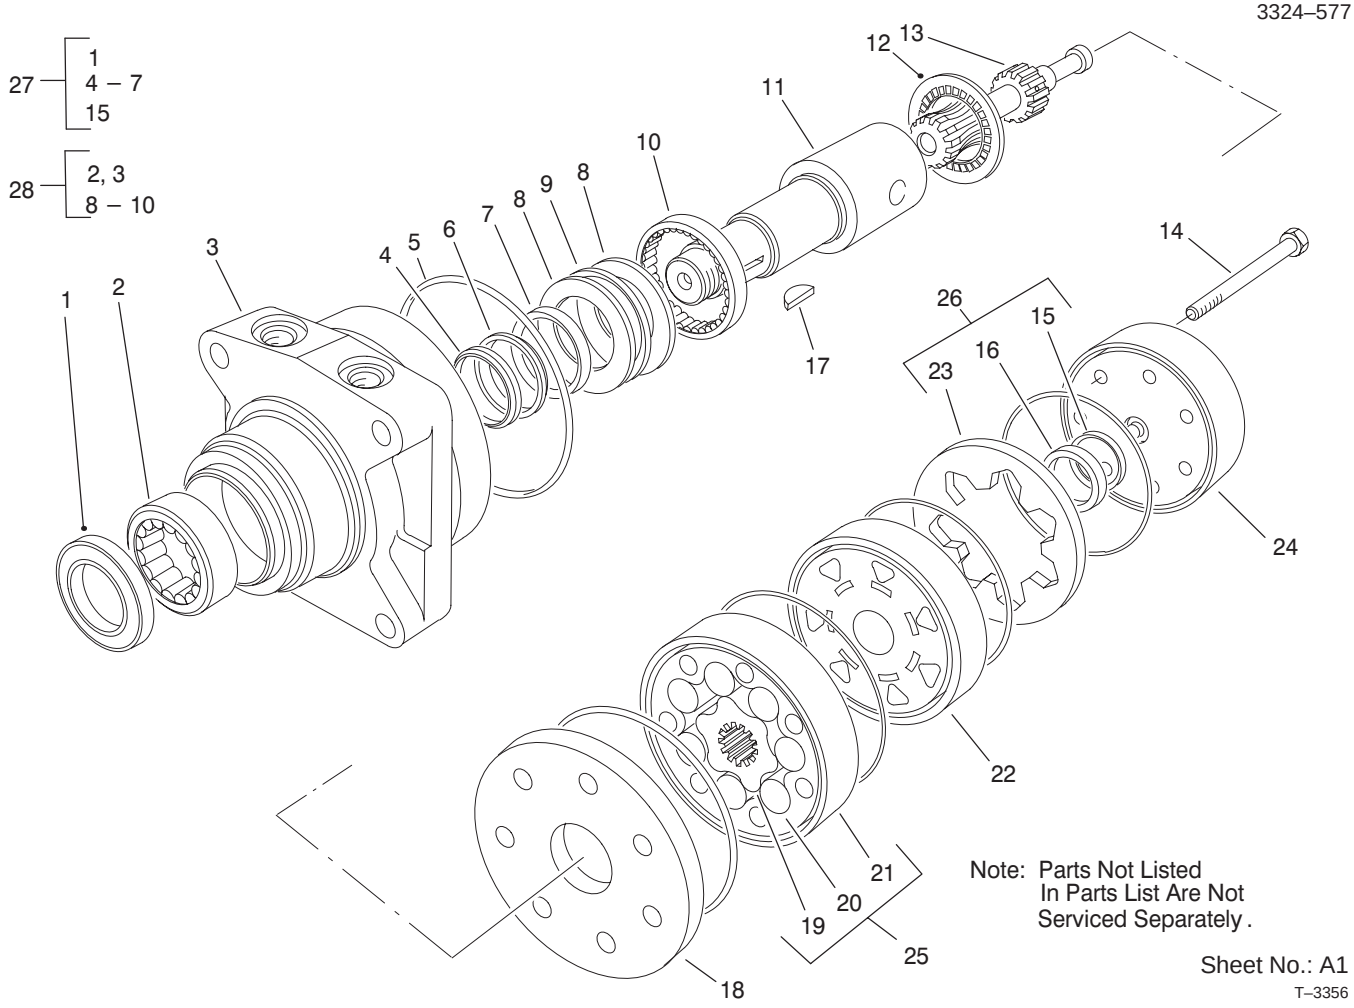

Hydraulic Drive Motor Assembly No. 92–9199

Ref. No.	Part No.	Qty.	Description
11	76–0860	1	Shaft–Coupling
12	76–0850	1	Bearing–Thrust
13	92–9761	1	Link – Drive
14	92–9762	7	Screw–Cap, Hex Head
17	3257–42	1	Key–Woodruff
18	76–0870	1	Plate–Wear
22	76–0840	1	Manifold
24	76–0940	1	End Cover ASM
25	92–9763	1	Set–Rotor
26	76–0880	1	Commutator ASM
27	94–8178	1	Kit–Seal
28	76–0810	1	Wheel Motor Housing ASM

Ref. No.	Part No.	Qty.	Description

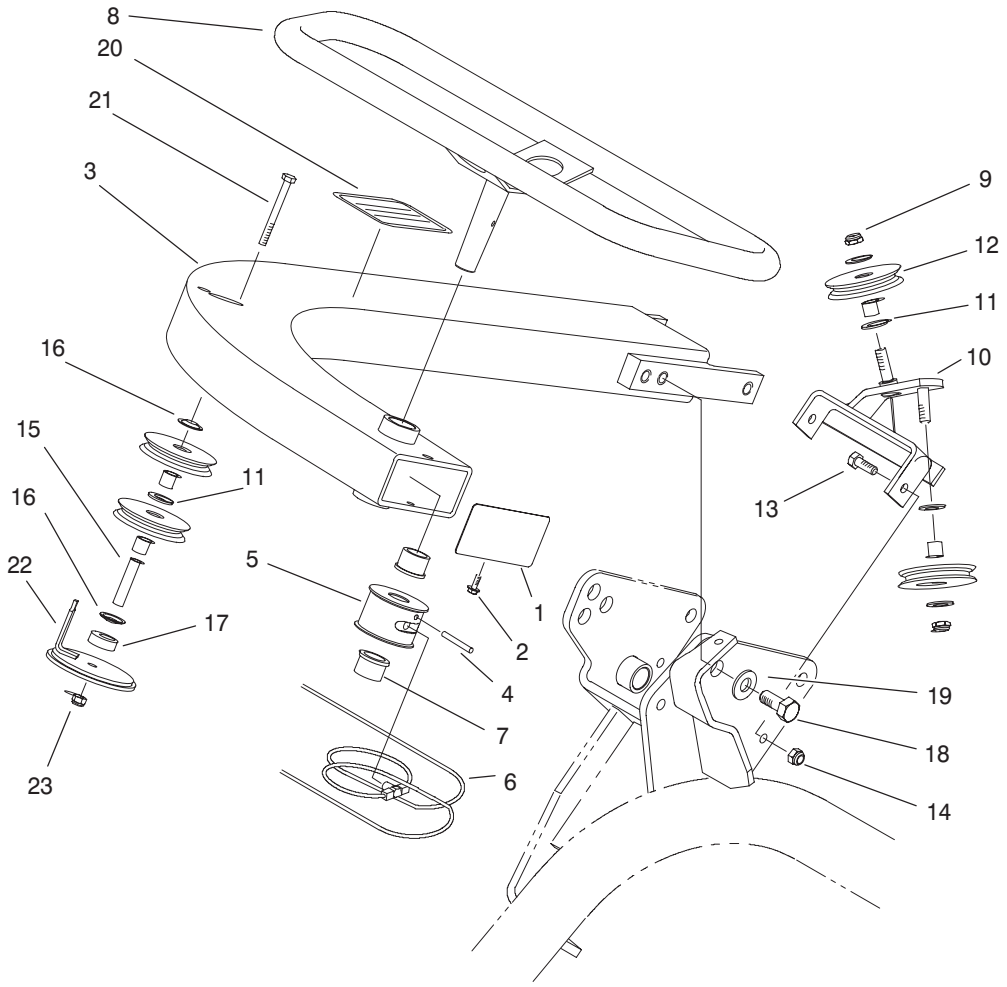


Sheet No.:5

Steering Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	95–7140–01	1	Tube Cap ASM
2	32104–76	2	Screw–Slot, Acorn
3	95–2941–01	1	Steering Arm
4	32121–44	1	Pin – Roll
5	95–7149	1	Pulley – Front Steering
6	95–5965	1	Cable – Steering
7	256–113	2	Bushing–Flange
8	49–5900	1	Steering Wheel ASM
9	3296–59	2	Nut–Lock, NI
10	95–2932	1	Pulley Bracket
11	3256–4	5	Washer–Flat
12	5–2653	4	Pulley ASM
13	322–4	2	Screw–HH
14	3296–29	2	Nut–Lock, NI
15	10–7240	1	Strg Pulley Sleeve
16	3290–314	2	Tinnerman
17	95–5963	1	Spacer – Pulley
18	325–2	4	Screw–HH
19	3256–26	4	Washer–Flat
20	93–8063	1	Decal–Warning
21	321–15	1	Screw–HH
22	95–5959–01	1	Pulley Support
23	3296–16	1	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

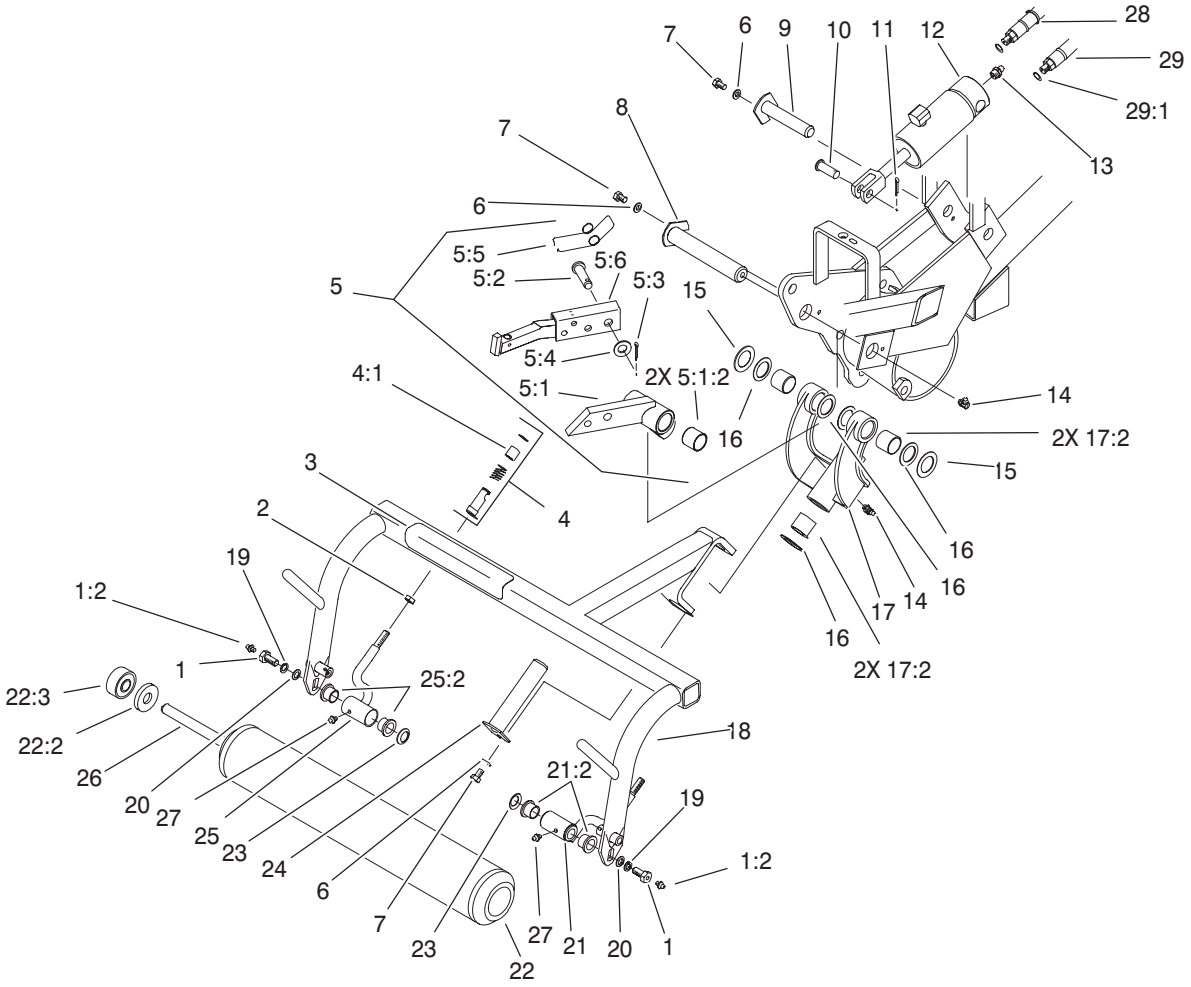


Sheet No.: 6
T–3358

Right Hand Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	11–0160	2	Roller Shaft Screw ASM
1:2	302–5	1	Fitting – Lube
2	3220–3	2	Nut–Jam
3	93–8064	1	Decal–Danger
4	99–1460	2	Ball Joint Receiver ASM
4:1	99–1461	1	Sleeve–Joint, Ball
5	94–5590	1	RH Lift Arm ASM
5:1	62–2440	1	Lift Arm ASM
5:1:2	3–0348	2	Bushing
5:2	63–8750	1	Pin–Pivot
5:3	3272–11	1	Pin–Cotter
5:4	3256–26	1	Washer–Flat
5:5	57–7650	1	Spring–Torsion
5:6	94–5588–01	1	Bar–Lift, R/H
6	3256–23	3	Washer–Flat
7	322–1	3	Screw–HH
8	10–6110	1	Pin–Hinge
9	10–6060	1	Pin–Pivot, Ram
10	283–8	1	Pin–Clevis
11	3272–11	1	Pin–Cotter
12	99–8159	1	Hydraulic Cylinder ASM
13	302–2	1	Fitting–Grease
14	302–60	2	Fitting–Lube

Ref. No.	Part No.	Qty.	Description
15	5–1226	2	Washer
16	10–8110	6	Washer–Thrust
17	10–7820	1	Pivot Hinge ASM
17:2	3–0348	4	Bushing
18	92–9177–01	1	Frame–Pull, RH
19	3253–21	2	Washer–Lock
20	3256–24	2	Washer–Flat
21	92–0586	1	Pull Arm ASM
21:2	3–1506	2	Bushing
22	99–4277	1	Roller ASM
22:2	253–83	1	Seal–Oil
22:3	251–141	2	Bearing–Ball
23	3290–317	2	Washer–Spring
24	10–6090	1	Pin–Pivot
25	92–0585	1	Pull Arm ASM
25:2	3–1506	2	Bushing
26	21–8470	1	Shaft–Roller
27	302–5	2	Fitting – Lube
28	3290–378	1	Tie–Cable
29	92–9767	2	Hose
29:1	237–78	1	O–Ring

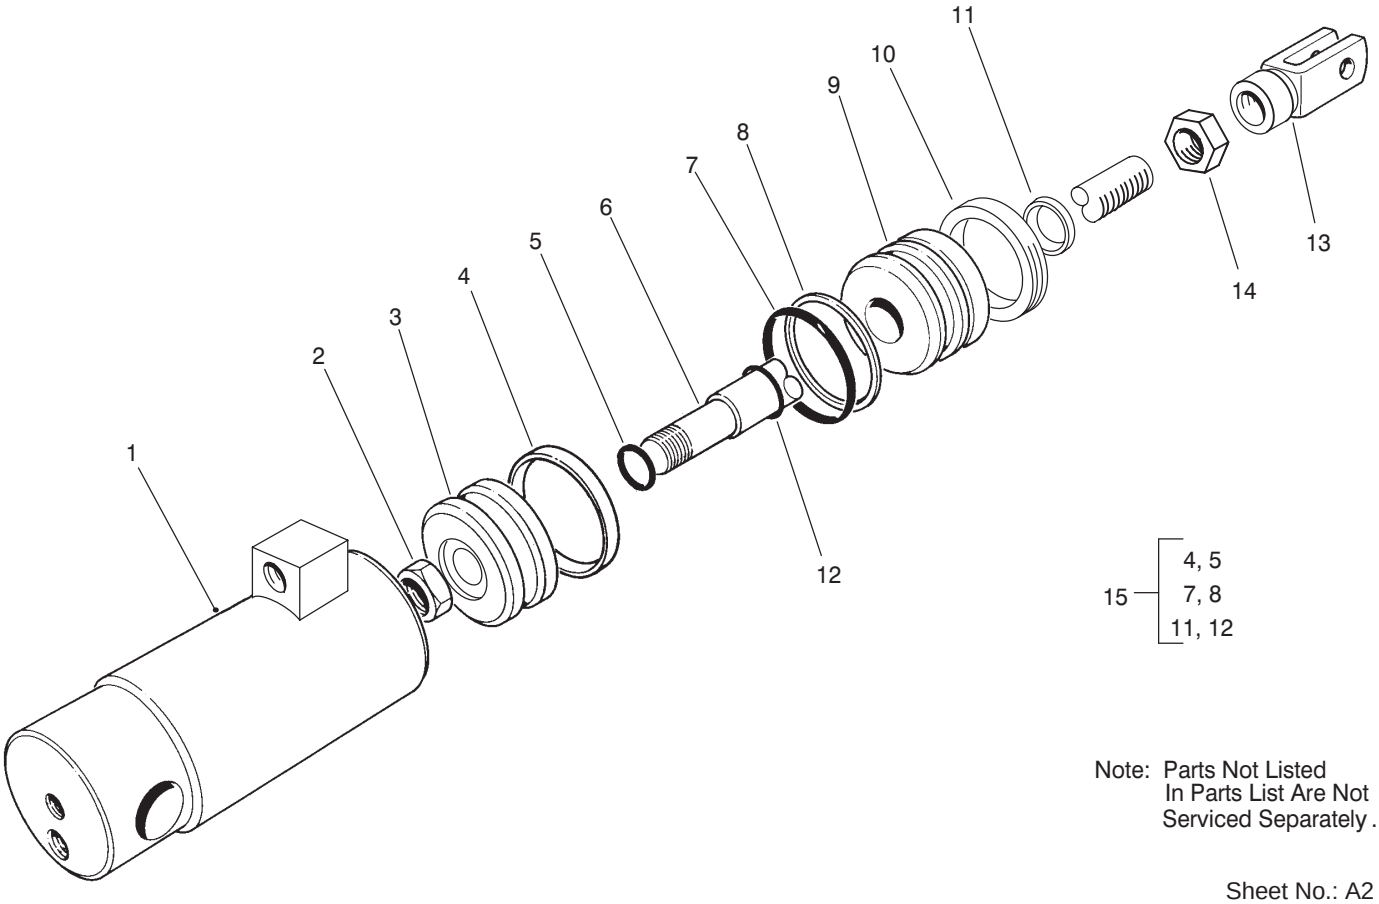

Note: Parts Not Listed In Parts List Are Not Serviced Separately.


Sheet No.: A2

T–3359

Hydraulic Cylinder Assembly No. 99–8159

Ref. No.	Part No.	Qty.	Description
2	32152–10	1	Locknut–Deform, Top
3	52–1990	1	Piston–Cylinder, Hydraulic
13	76–1850	1	Clevis
14	3220–6	1	Nut–Jam
15	99–8163	1	Kit–Repair, Seal

Ref. No.	Part No.	Qty.	Description

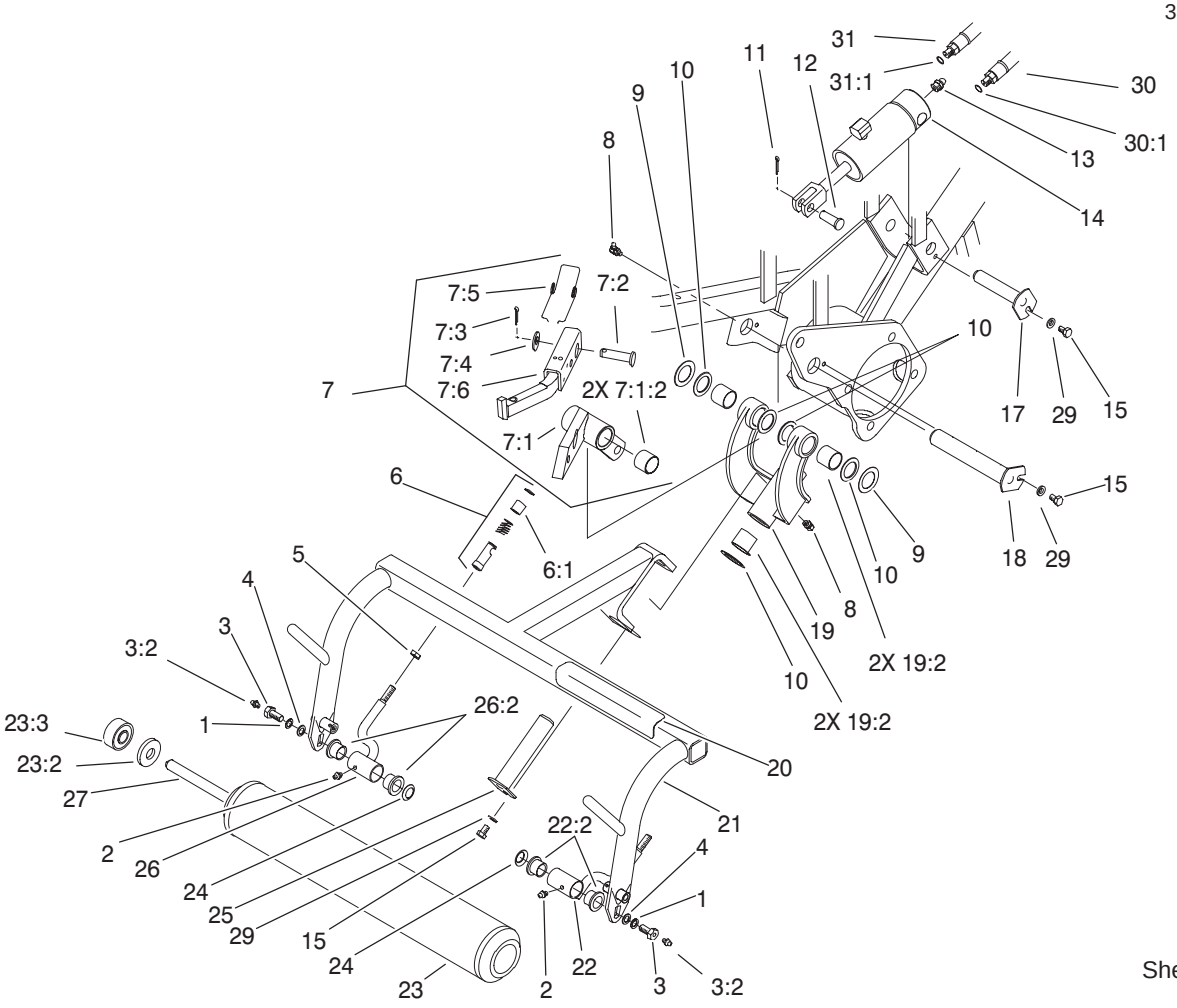


Sheet No.: 7
T–3360

Left Hand Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3253–21	2	Washer–Lock
2	302–5	2	Fitting – Lube
3	11–0160	2	Roller Shaft Screw ASM
3:2	302–5	1	Fitting – Lube
4	3256–24	2	Washer–Flat
5	3220–3	2	Nut–Jam
6	99–1460	2	Ball Joint Receiver ASM
6:1	99–1461	1	Sleeve–Joint, Ball
7		1	LH Lift Arm ASM
7:1	62–2460	1	Lift Arm ASM
7:1:2	3–0348	2	Bushing
7:2	63–8750	1	Pin–Pivot
7:3	3272–11	1	Pin–Cotter
7:4	3256–26	1	Washer–Flat
7:5	57–7650	1	Spring–Torsion
7:6	94–5586–01	1	Bar–Lift, LH
8	302–60	2	Fitting–Lube
9	5–1226	2	Washer
10	10–8110	6	Washer–Thrust
11	3272–11	1	Pin–Cotter
12	283–8	1	Pin–Clevis
13	302–2	1	Fitting–Grease
14	99–8159	1	Hydraulic Cylinder ASM

Ref. No.	Part No.	Qty.	Description
15	322–1	3	Screw–HH
17	10–6060	1	Pin–Pivot, Ram
18	10–6110	1	Pin–Hinge
19	10–7820	1	Pivot Hinge ASM
19:2	3–0348	4	Bushing
20	93–8064	1	Decal–Danger
21	92–9176–01	1	Frame–Pull, LH
22	92–0586	1	Pull Arm ASM
22:2	3–1506	2	Bushing
23	99–4277	1	Roller ASM
23:2	253–83	1	Seal–Oil
23:3	251–141	2	Bearing–Ball
24	3290–317	2	Washer–Spring
25	10–6090	1	Pin–Pivot
26	92–0585	1	Pull Arm ASM
26:2	3–1506	2	Bushing
27	21–8470	1	Shaft–Roller
29	3256–23	3	Washer–Flat
30	83–1690	1	Hose–Hydraulic
30:1	237–78	1	O–Ring
31	63–3850	1	Hose ASM
31:1	237–78	1	O–Ring

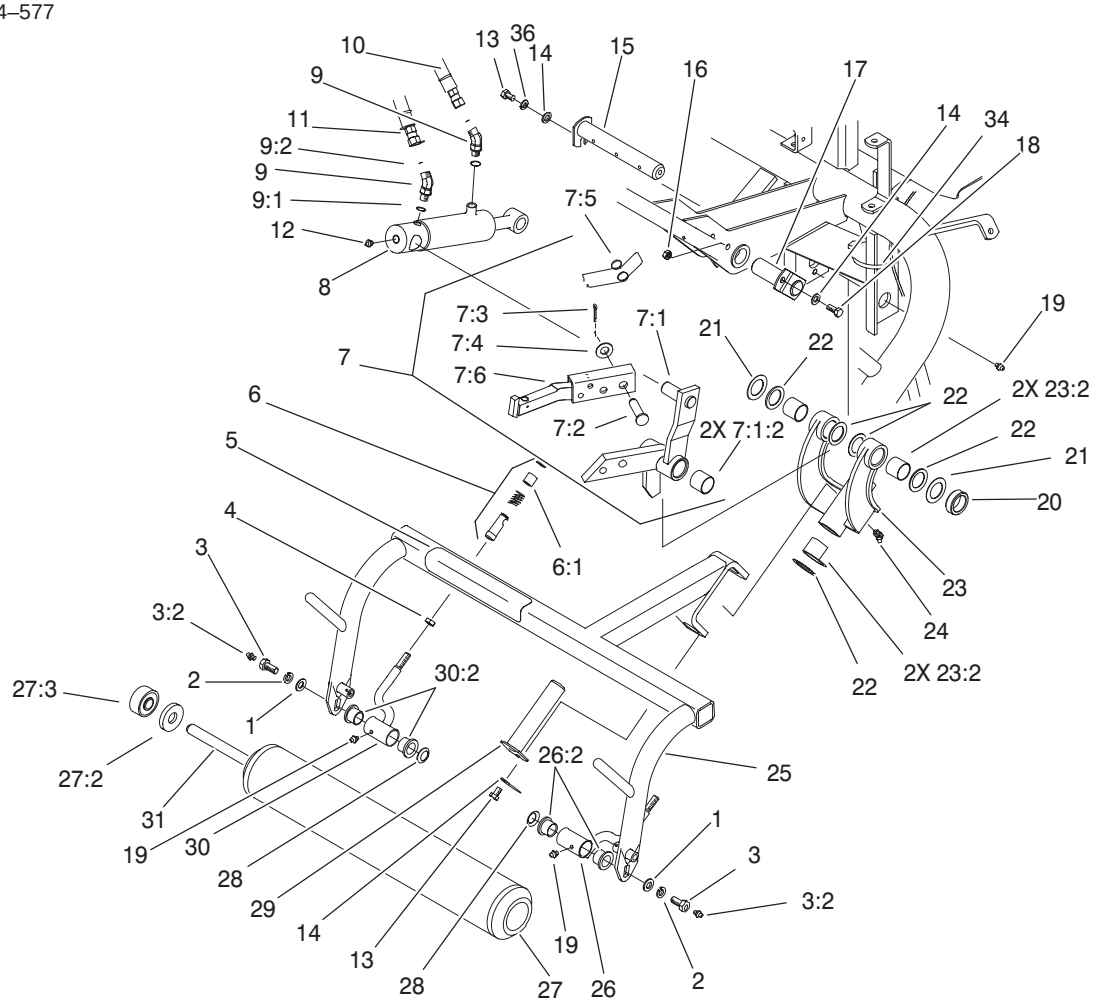


Sheet No.: 8
T–3361

Rear Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3256–24	2	Washer–Flat
2	3253–21	2	Washer–Lock
3	11–0160	2	Roller Shaft Screw ASM
3:2	302–5	1	Fitting – Lube
4	3220–3	2	Nut–Jam
5	93–8064	1	Decal–Danger
6	99–1460	2	Ball Joint Receiver ASM
6:1	99–1461	1	Sleeve–Joint, Ball
7	68–5280	1	Center Lift Arm ASM
7:1	68–5380	1	Center Lift Arm ASM
7:1:2	3–0348	2	Bushing
7:2	63–8750	1	Pin–Pivot
7:3	3272–11	1	Pin–Cotter
7:4	3256–26	1	Washer–Flat
7:5	57–7650	1	Spring–Torsion
7:6	62–2420–01	1	Bar–Lift
8	99–8160	1	Hydraulic Cylinder ASM
9	340–103	2	Fitting
9:1	237–78	1	O–Ring
9:2	237–21	1	O–Ring
10	83–1680	1	Hose–Hydraulic
11	88–9700	1	Hose–Hydraulic
12	302–2	1	Fitting–Grease

Ref. No.	Part No.	Qty.	Description
13	322–1	2	Screw–HH
14	3256–23	3	Washer–Flat
15	27–2550	1	Pin–Hinge
16	3296–29	1	Nut–Lock, NI
17	68–5560	1	Pin–Cylinder, Pivot
18	322–3	1	Screw–HH
19	302–5	3	Fitting – Lube
20	93–2384	1	Spacer – Carrier
21	5–1226	2	Washer
22	10–8110	6	Washer–Thrust
23	10–7820	1	Pivot Hinge ASM
23:2	3–0348	4	Bushing
24	302–60	1	Fitting–Lube
25	86–9820–01	1	Frame–Pull, Rear
26	92–0586	1	Pull Arm ASM
26:2	3–1506	2	Bushing
27	99–4277	1	Roller ASM
27:2	253–83	1	Seal–Oil
27:3	251–141	2	Bearing–Ball
28	3290–317	2	Washer–Spring
29	10–6090	1	Pin–Pivot
30	92–0585	1	Pull Arm ASM
30:2	3–1506	2	Bushing
31	21–8470	1	Shaft–Roller
34	3290–379	1	Tie–Cable
36	3253–4	1	Washer

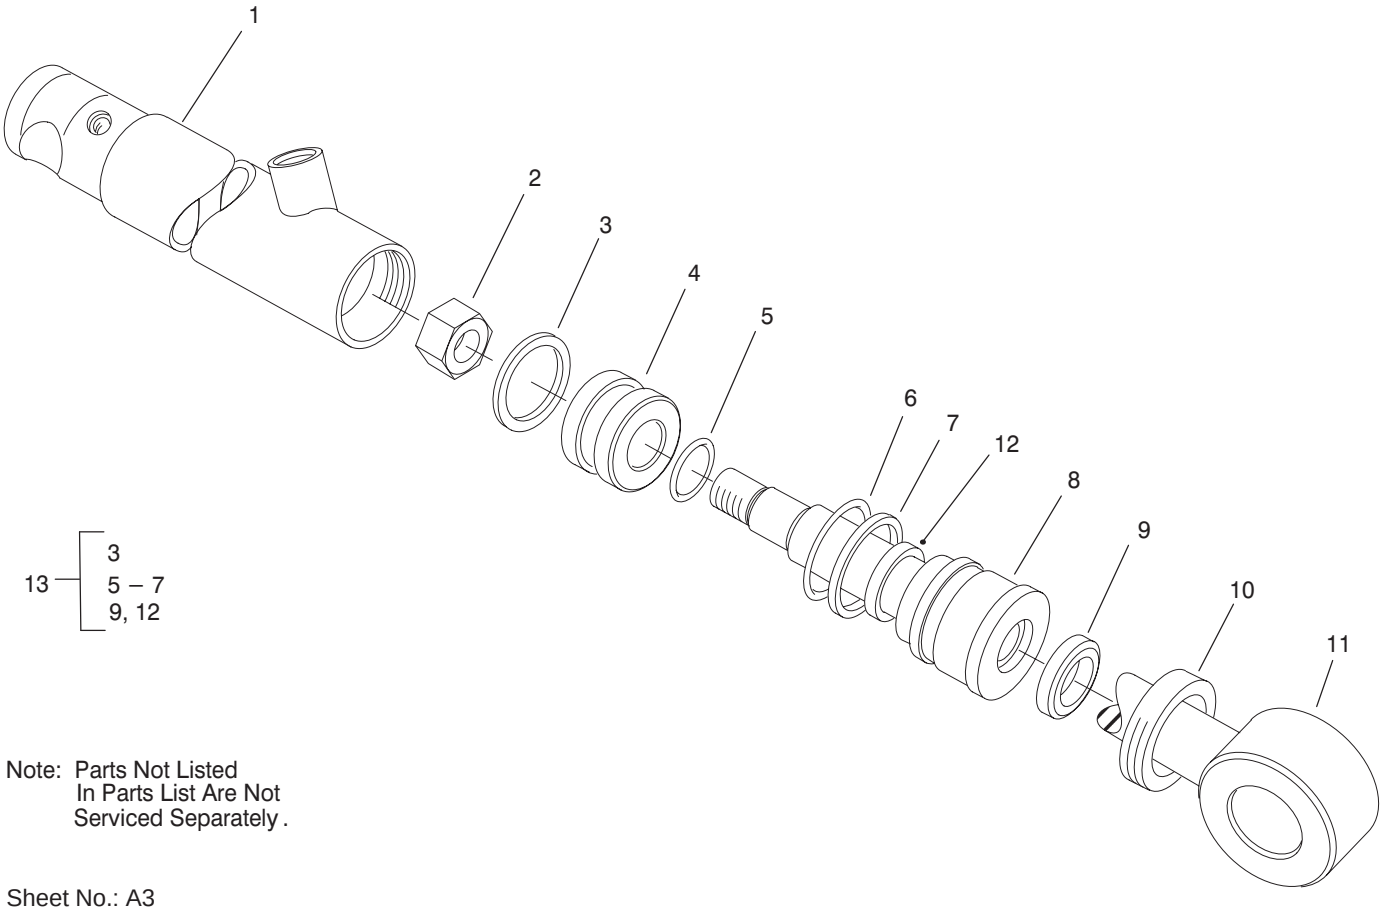


Note: Parts Not Listed
In Parts List Are Not
Serviced Separately.

Sheet No.: A3
T–3362

Hydraulic Cylinder No. 99–8160

Ref. No.	Part No.	Qty.	Description
2	32152–10	1	Locknut–Deform, Top
4	70–2780	1	Piston
13	99–8162	1	Kit–Repair, Seal

Ref. No.	Part No.	Qty.	Description

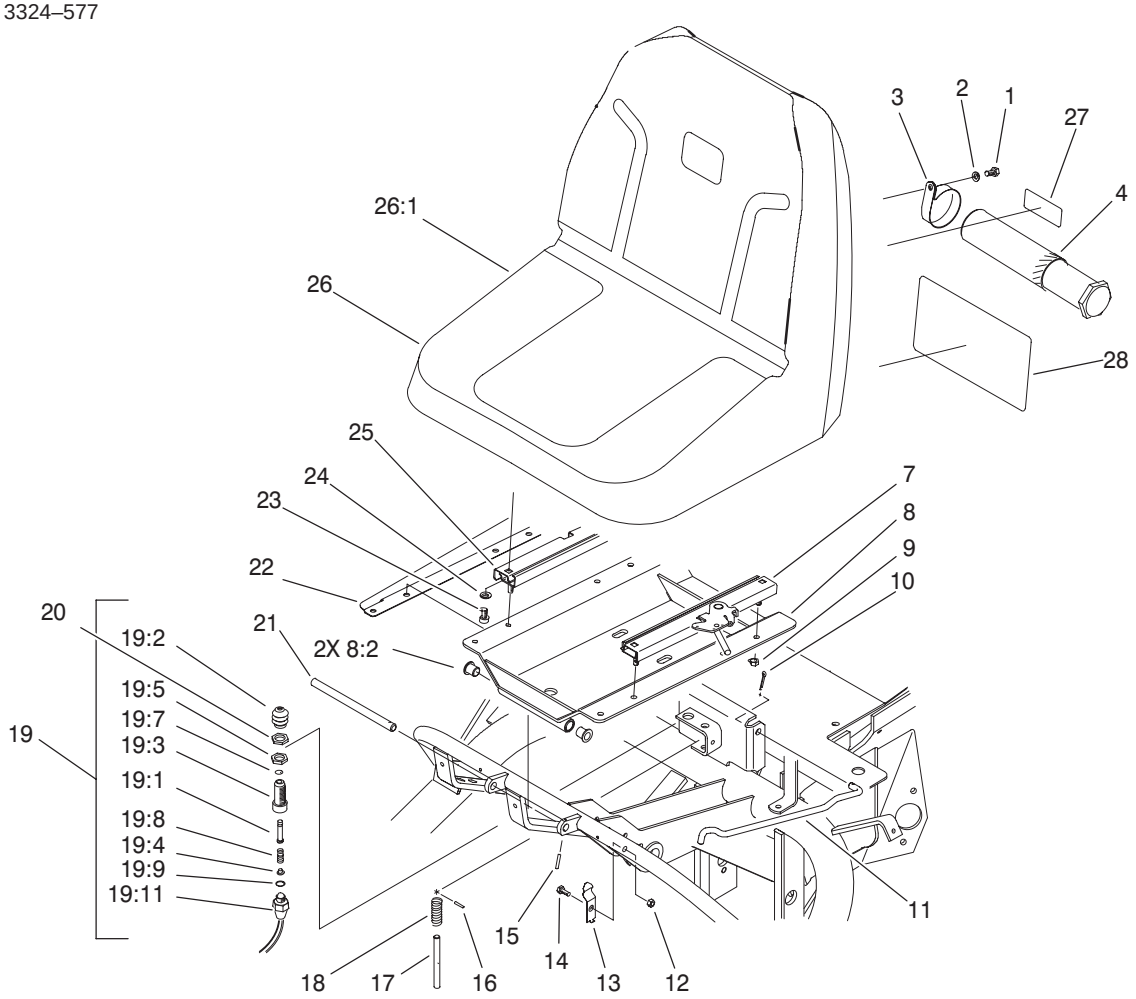


Sheet No.: 9
T–3363

Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	322–2	2	Screw–HH
2	3253–4	2	Washer
3	2412–133	2	R–Clamp
4	74–0720	1	Tube–Manual
7	51–0790	1	Adjuster–Seat, LH
8	83–1270	1	Seat Support ASM
8:2	256–155	2	Bushing–Flange
9	3296–29	4	Nut–Lock, NI
10	3272–11	1	Pin–Cotter
11	68–5100	1	Rod–Seat, Prop
12	3296–16	1	Nut–Lock, NI
13	68–5310	1	Clip–Rod, Prop
14	321–3	1	Screw–HH
15	32121–45	1	Pin–Spring
16	3284–3	1	Pin–Groove
17	51–0350	1	Pin–Spring, Seat
18	3–6685	1	Spring
19	43–9071	1	Limit Switch ASM
19:1	43–8860	1	Plunger–Switch
19:2	43–8870	1	Switch Boot
19:3	43–8620	1	Guide–Pin, Switch
19:4	43–8610	1	Guide
19:5	218–461	1	Nut–HH
19:7	237–7	1	O–Ring
19:8	43–8600	1	Spring–Compression
19:9	237–30	1	O–Ring

Ref. No.	Part No.	Qty.	Description
19:11	72–4320	1	Switch
20	218–461	1	Nut–HH
21	49–5880	1	Shaft–Support, Seat
22	83–1840–01	1	Cover–Valve, RH
23	3274–12	4	Screw–HSH
24	3256–23	4	Washer–Flat
25	51–0780	1	Slider–Seat
26	100–3187	1	Seat ASM
26:1	92–6534	1	Shell
*26:2	351–80	1	Clip
*26:3	351–78	1	Edging
*26:4	100–6411	1	Cushion–Replacement
27	93–8067	1	Decal–Oil, Hydraulic
28	95–7113	1	Decal – Service
28	95–7124	1	Decal – Service (Spanish)
28	95–7125	1	Decal – Service (French)
28	95–7126	1	Decal – Service (German)
28	95–7127	1	Decal – Service (Swedish)
28	95–7128	1	Decal – Service (Italian)
28	95–7129	1	Decal – Service (Portugese)

* Not illustrated

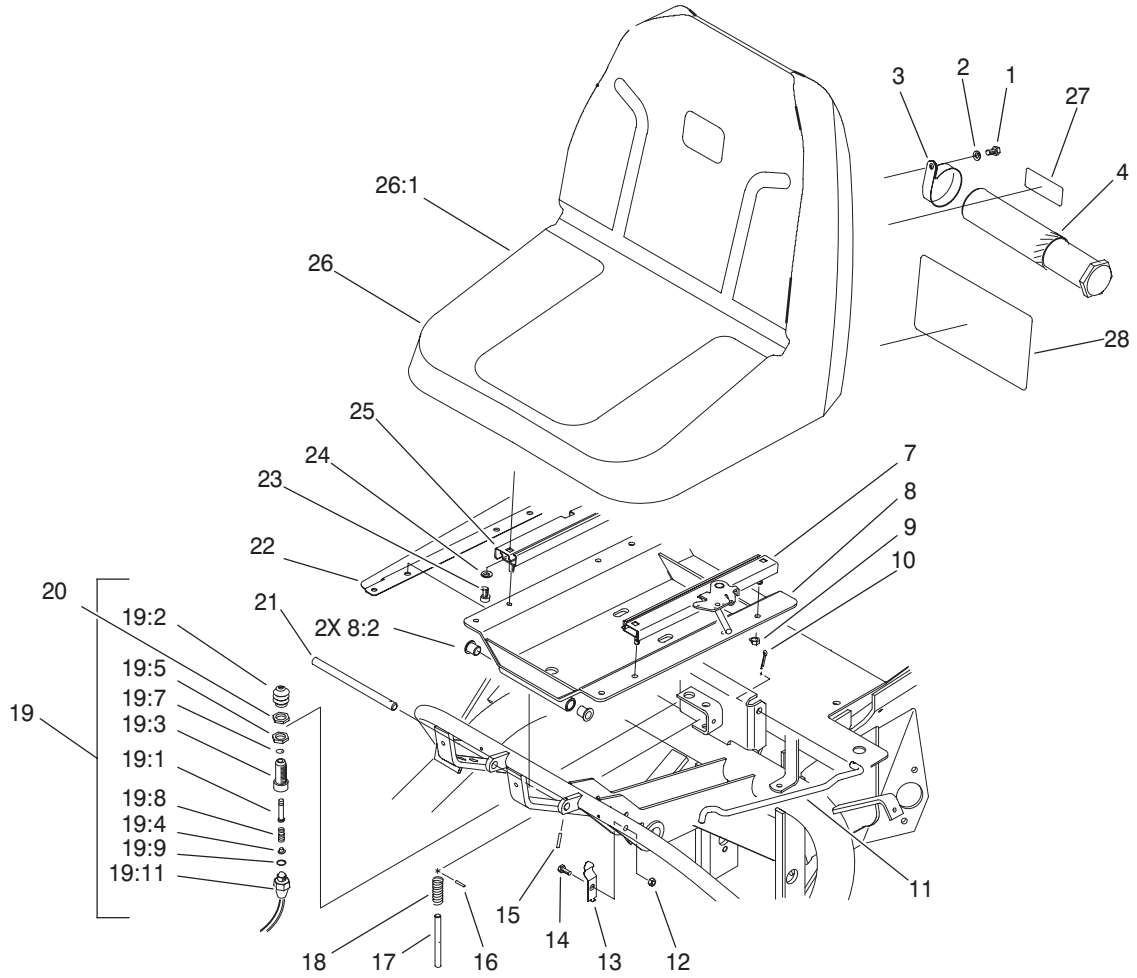


Sheet No.: 9
T–3363

Seat Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
28	95–7130	1	Decal – Service (Norwegian)
28	95–7131	1	Decal – Service (Finnish)
28	95–7132	1	Decal – Service (Danish)
28	95–7133	1	Decal – Service (Dutch)
28	95–7143	1	Decal – Service, Japanese

Ref. No.	Part No.	Qty.	Description

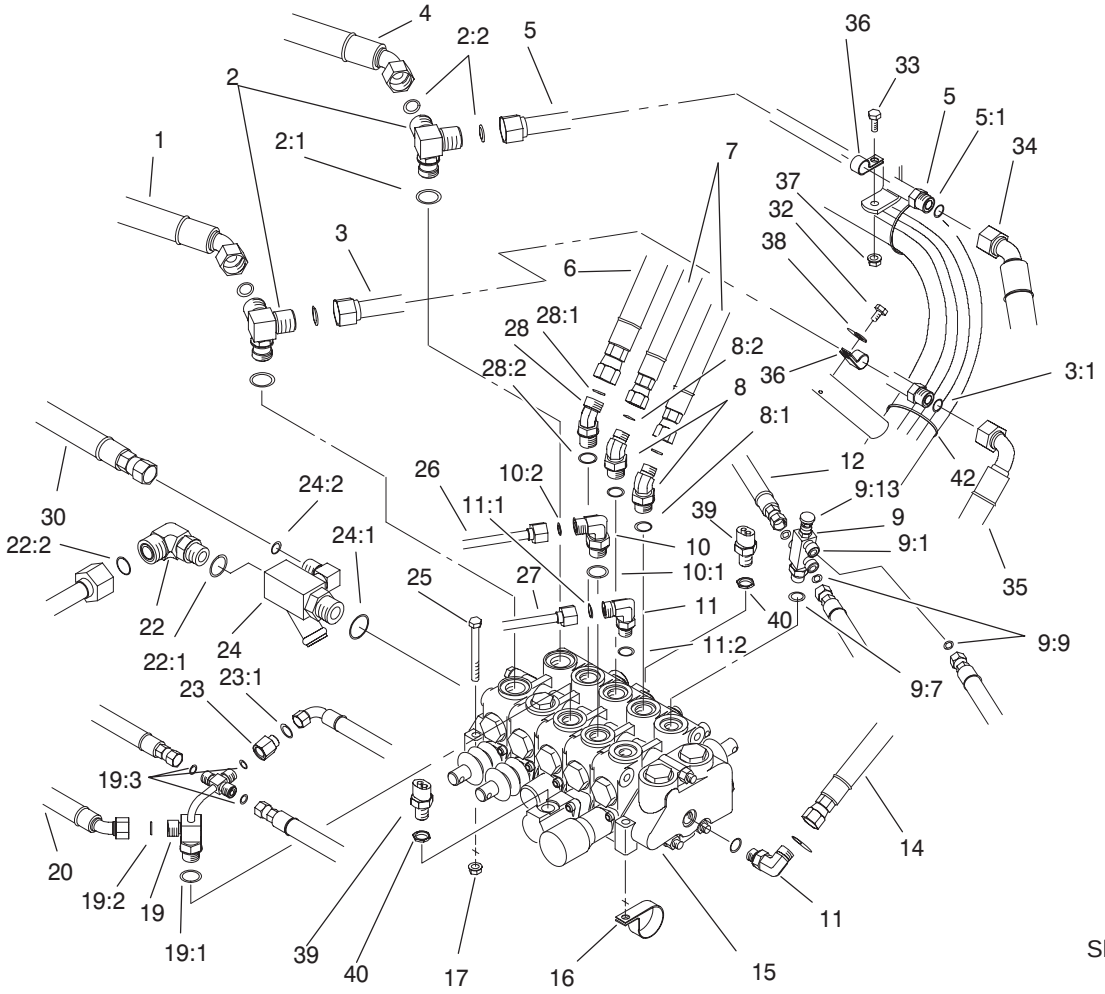


Sheet No.:10

Control Valve Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	98–0647	1	Hose–Hydraulic
2	63–4050	2	Fitting
2:1	237–80	1	O–Ring
2:2	237–65	2	O–Ring
3	70–7130	1	Line–Tube
3:1	237–65	2	O–Ring
4	98–0646	1	Hose–Hydraulic
5	83–1200	1	Tube–Traction, LH Lower
5:1	237–65	1	O–Ring
6	98–2151	1	Hose–Hydraulic
7	98–0649	2	Hose–Hydraulic
8	340–138	2	Fitting
8:1	237–79	1	O–Ring
8:2	237–22	1	O–Ring
9	93–2556	1	Needle Valve ASM
9:1	93–2555	1	Fitting – Body
9:7	237–42	1	O–Ring
9:9	237–21	3	O–Ring
9:13	93–2554	1	Needle ASM
10	340–18	1	Fitting
10:1	237–79	1	O–Ring
10:2	237–22	1	O–Ring
11	340–77	2	Fitting–90°
11:1	237–22	1	O–Ring
11:2	237–42	1	O–Ring

Ref. No.	Part No.	Qty.	Description
14	98–2150	1	Hose–Hydraulic
15	84–2203	1	Valve–Control, 5 Spool
16	304–61	1	Clamp–Hose
17	32128–20	3	Nut–HF
19	83–1670	1	Fitting ASM
19:1	237–79	1	O–Ring
19:2	237–22	1	O–Ring
19:3	237–21	3	O–Ring
20	95–5986	1	Hose–Hydraulic
22	340–16	1	Fitting–Hyd., 90°
22:1	237–80	1	O–Ring
22:2	237–58	1	O–Ring
23	71–0990	1	Orifice
23:1	237–21	1	O–Ring
24	63–4080	1	Manifold Fitting
24:1	237–81	1	O–Ring
24:2	237–30	1	O–Ring
25	322–14	3	Screw–HH
26	63–4030	1	Tube–Hydraulic
27	63–4020	1	Tube–Hydraulic

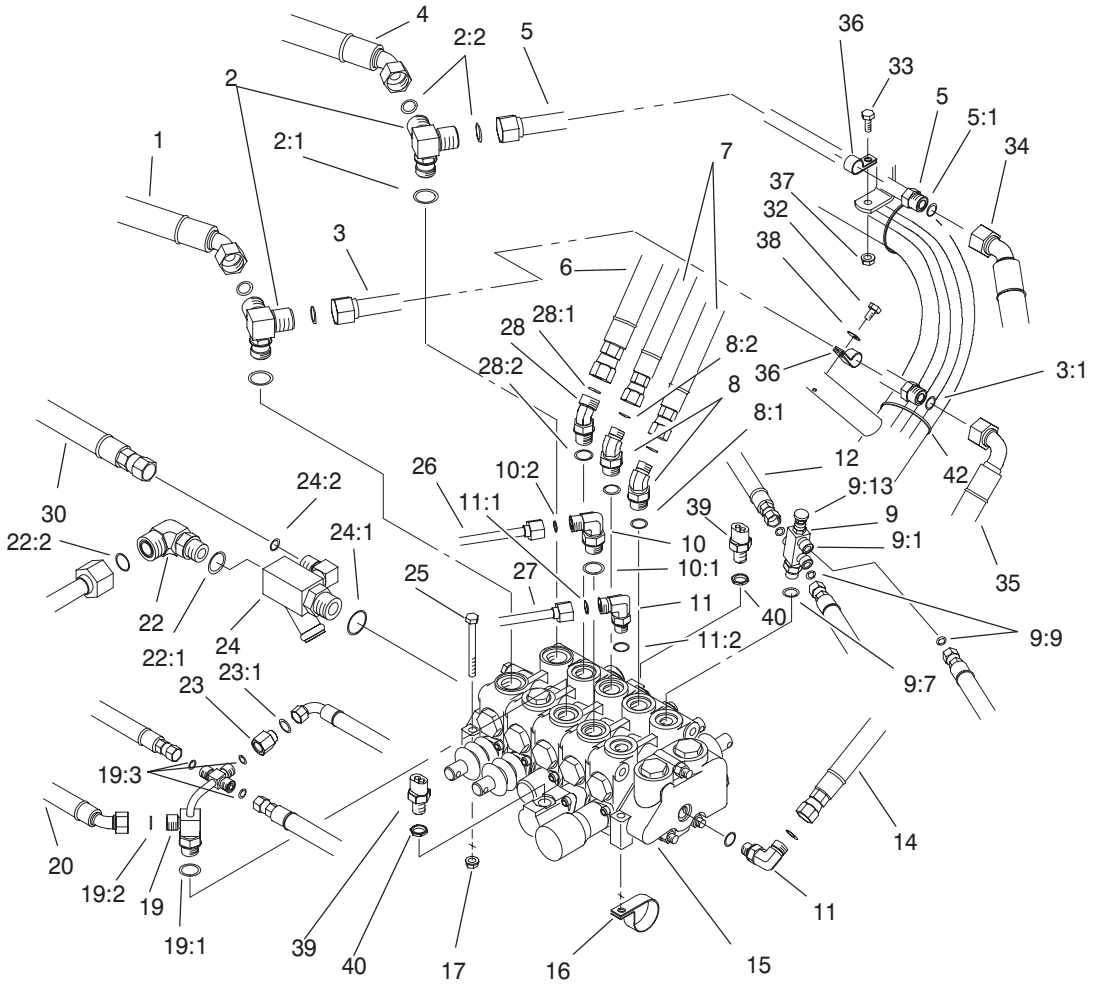


Sheet No.:10

Control Valve Installation Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
28	340–101	1	Fitting
28:1	237–30	1	O–Ring
28:2	237–79	1	O–Ring
30	95–5987	1	Hose–Hydraulic
32	12–3270	1	Screw
33	3234–4	1	Screw–HHF
34	98–0648	1	Hydraulic Hose ASM
35	98–2153	1	Hydraulic Hose ASM
36	2412–41	2	Clamp
37	3296–16	1	Nut–Lock, NI
38	3256–22	1	Washer–Flat
39	83–1890	2	Switch–Ball
40	38–0410	2	Nut–Hex
42	3290–379	2	Tie–Cable

Ref. No.	Part No.	Qty.	Description

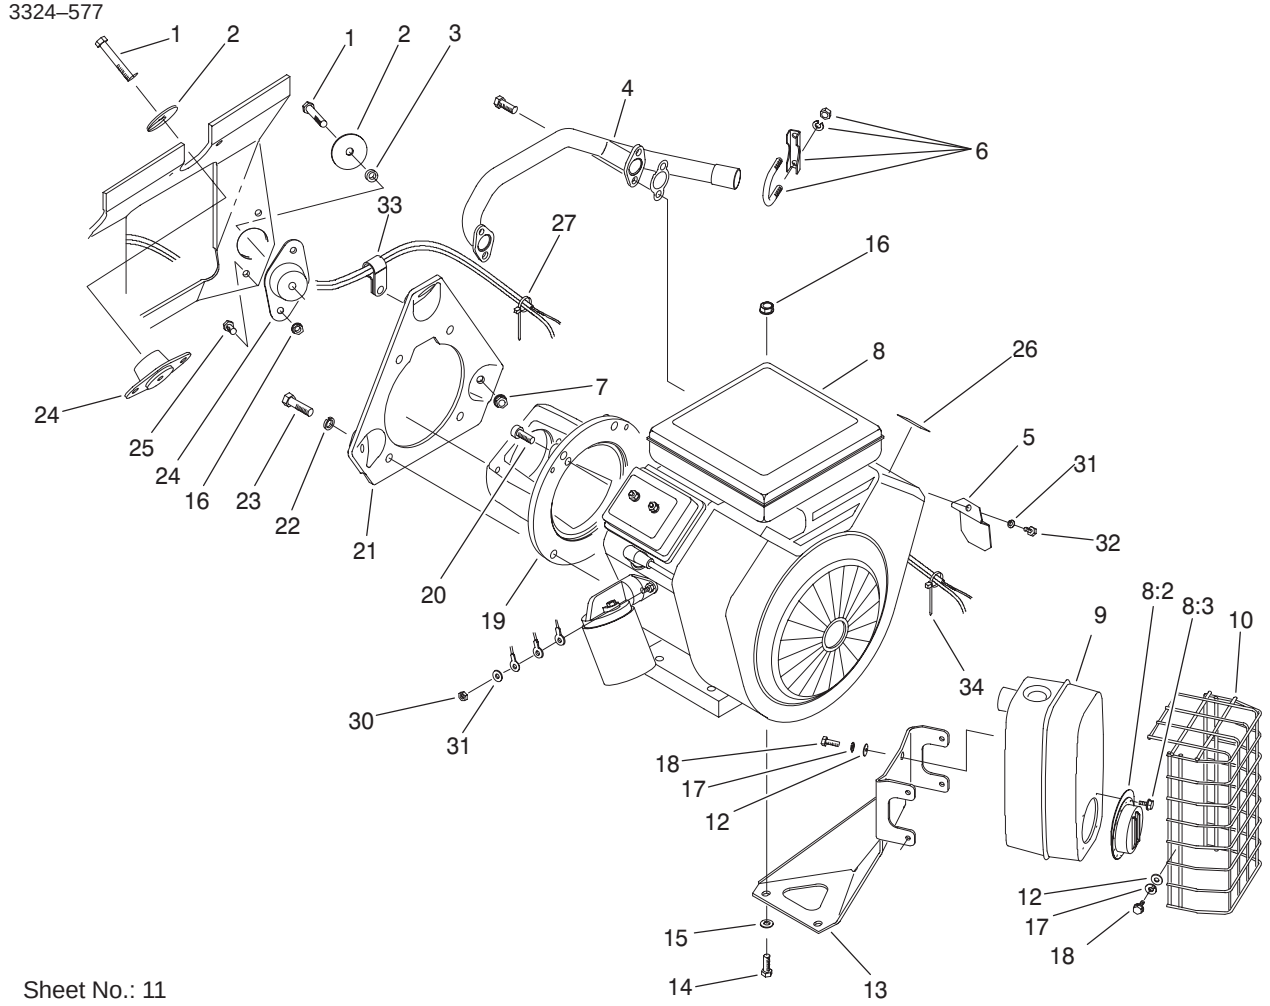


Sheet No.: 11

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	323–12	3	Screw–HH
2	83–1040	3	Washer – Flat
3	83–1050	2	Spacer
4	83–1080	1	Exhaust Manifold ASM
5	83–2310	1	Shield – Regulator
6	2112–11	1	Clamp–Muffler
7	3290–357	3	Nut–Flange, Lock
8	100–6424	1	Engine–16hp
8:2	83–2220	1	Deflector–Exhaust
8:3	83–2230	4	Screw–HH
9	98–0616	1	Muffler ASM
10	83–1400–03	1	Shield–Muffler
12	3256–1	8	Washer–Flat
13	83–1630–03	1	Bracket–Support, Muffler
14	322–8	2	Screw–HH
15	3256–23	2	Washer–Flat
16	32128–20	8	Nut–HF
17	3253–3	8	Washer–Lock/Sp
18	49–2040	8	Screw–Taptite
19	83–1060–03	1	Adapter–Pump
20	3274–7	2	Screw–HSH
21	85–8120–03	1	Plate–Mount, Engine
22	3253–6	4	Washer–Lock/Sp
23	324–7	4	Screw–HH
24	83–1030	3	Mount–Engine

Ref. No.	Part No.	Qty.	Description
25	322–3	6	Screw–HH
26	93–8069	1	Decal–Surface, Hot
27	3290–379	1	Tie–Cable
30	43–2830	1	Nut–Hex
31	43–5930	2	Washer–Spring
32	33113–016	1	Screw–HH
33	2412–81	1	Clamp
34	3290–378	2	Tie–Cable

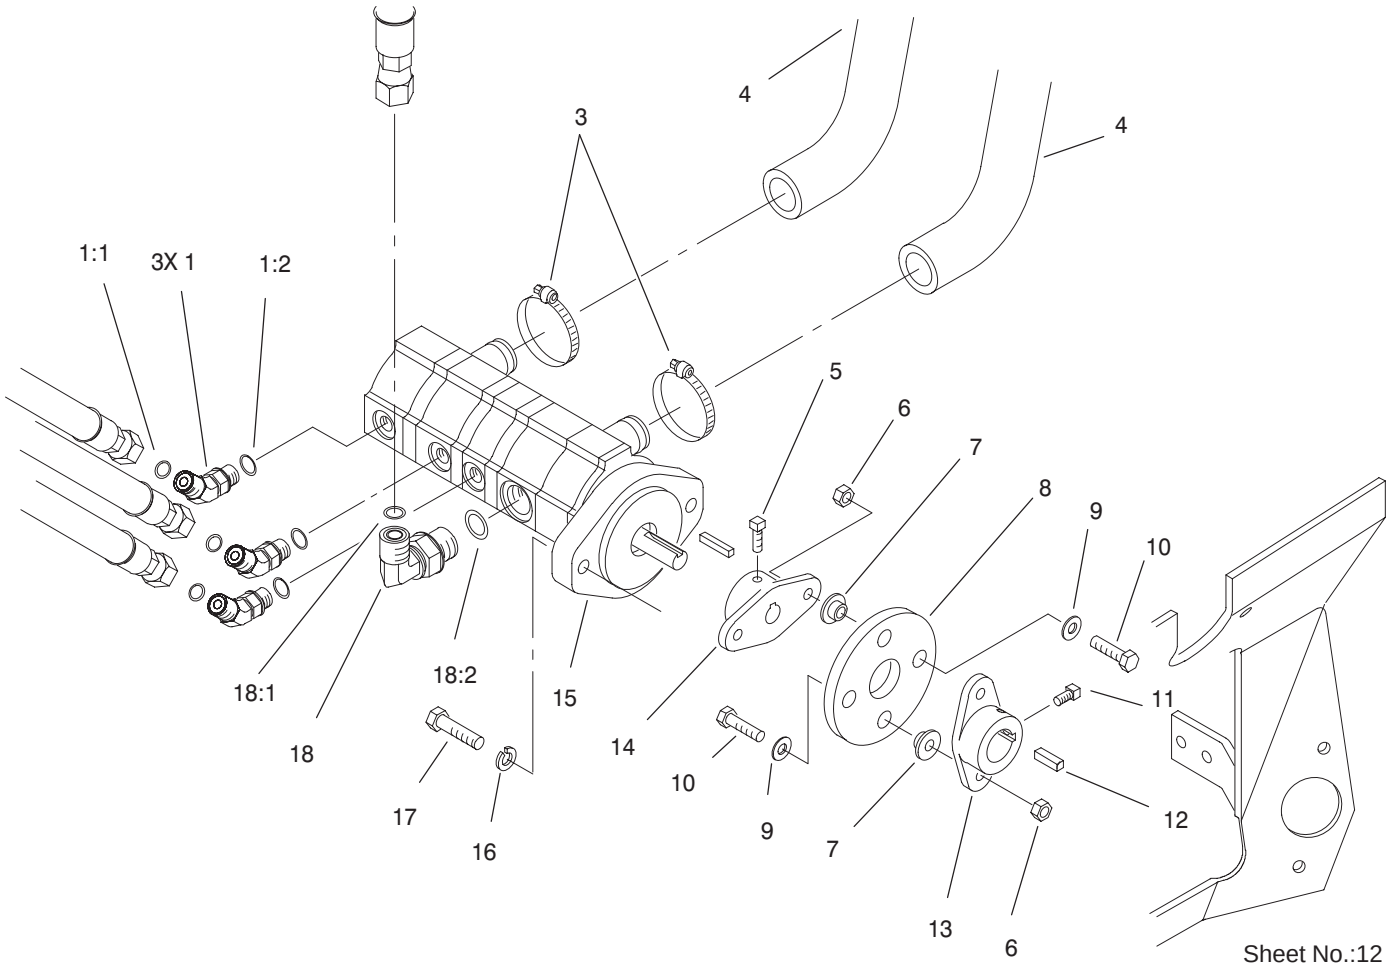


Sheet No.:12

Hydraulic Pump Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	340–87	3	Fitting–45°
1:1	237–22	1	O–Ring
1:2	237–42	1	O–Ring
3	2412–34	2	Clamp–Hose
4	95–5966	2	Hose – Pump Inlet
5	3241–6	2	Screw–SQH
6	3296–29	4	Nut–Lock, NI
7	27–6600	4	Spacer–Coupling
8	44–2230	1	Coupling–Rubber
9	3256–23	4	Washer–Flat
10	322–6	4	Screw–HH

Ref. No.	Part No.	Qty.	Description
11	3241–2	2	Screw–SQH
12	10–7070	1	Key–Square
13	27–1960	1	Hub–Engine
14	27–1970	1	Hub–Pump
15	95–5976	1	Gear Pump – 4 Section
16	3253–21	2	Washer–Lock
17	323–8	2	Screw–HH
18	340–105	1	Fitting–90°
18:1	237–80	1	O–Ring
18:2	237–30	1	O–Ring

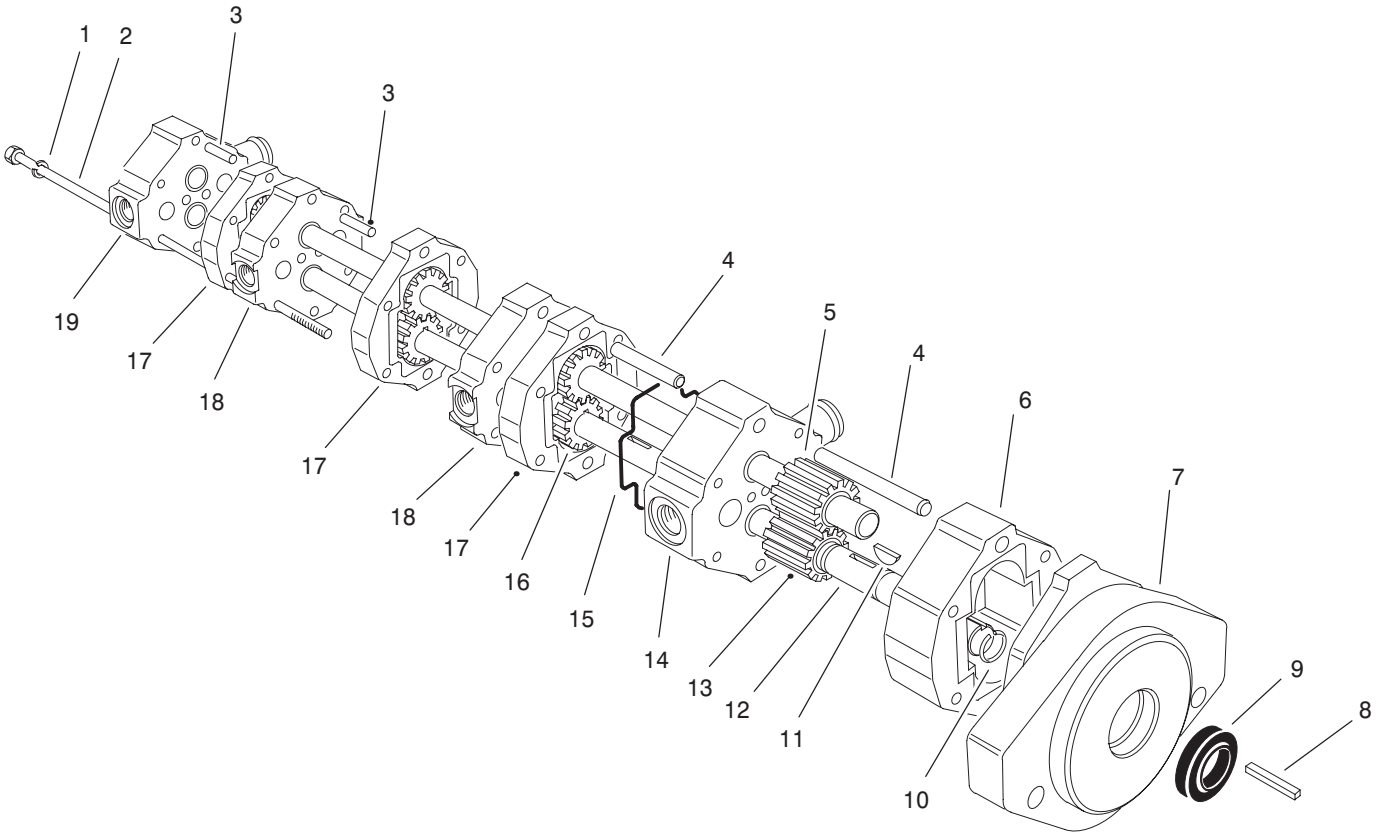


Sheet No.:A4
T–2699–2

Hydraulic Pump Assembly NO. 95–5976

Ref. No.	Part No.	Description	No. Used
1	354–16	Washer – Lock	4
2	98–0614	Stud – Threaded	4
3	354–11	Pin – Dowel	4
4	98–0610	Pin – Dowel	4
5	98–0608	Idler Shaft	1
6	353–919	Plate – Gear Pump B	1
7	98–0611	Body Assembly	1
8	5–0946	Key – Square	1
9	354–15	Seal – Shaft	1
10	353–886	Ring – Retaining	4
11	353–884	Key – Woodruff	5
12	98–0609	Shaft – Drive	1
13	92–9773	Gear – 59B	2
14	353–3	Bearing Plate Assembly	1
15	353–922	Seal – Ring	8
16	353–967	Gear – 33B	6
17	353–969	Plate – Gear 33B	3
18	98–0612	Bearing Plate Assembly	2
19	98–0613	Cover Assembly	1

Ref. No.	Part No.	Description	No. Used

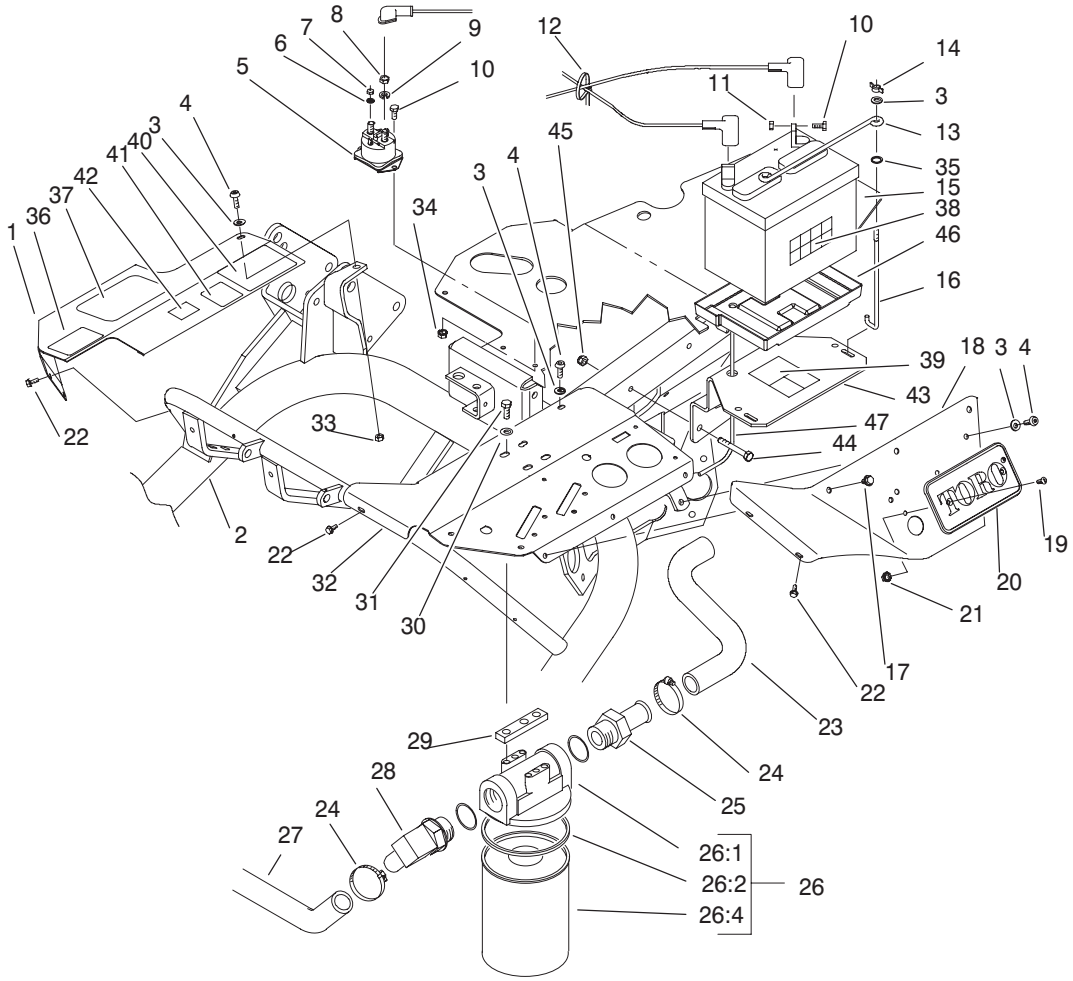


Sheet No.:13

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	94–2694–01	1	Cover–RH
2	95–5981–01	1	Frame ASM – Wa R
3	3256–22	5	Washer–Flat
4	3274–69	3	Screw–HSBH
5	28–4210	1	Solenoid
6	3254–1	2	Washer–Lock/Int
7	3219–14	2	Nut–Hex
8	3218–13	2	Nut–Jam
9	3253–4	2	Washer
10	321–3	4	Screw–HH
11	3217–5	2	Nut–Hex
12	3290–378	1	Tie–Cable
13	72–4790	1	Hold Down–Battery
14	32103–12	2	Nut–Wing
15	92–1677	1	Battery–Dry
16	56–7720	2	Post–Battery
17	46–8560	3	Screw–HHF
18	83–0840–01	1	Shield–Cover, Valve
19	3290–470	2	Screw–HSFH
20	61–3310	1	Plate–Logo
21	32149–7	2	Nut–Keps
22	32104–76	5	Screw–Slot, Acorn
23	95–7119	1	Hose – Return Line
24	2412–34	3	Clamp–Hose
25	353–563	1	Fitting–Hydraulic, Straight

Ref. No.	Part No.	Qty.	Description
26	74–3600	1	Filter & Head ASM
26:1	44–5560	1	Head–Filter, Oil
26:2	72–3850	1	Seal–Filter, Oil
26:4	74–3570	1	Filter
27	68–5880	1	Hose–Hydraulic
28	353–564	1	Fitting–90°
29	27–2380	2	Spacer
30	3256–23	4	Washer–Flat
31	322–4	4	Screw–HH
32	83–0830–01	1	Panel–Control, Upper
33	3296–16	1	Nut–Lock, NI
34	32149–2	2	Nut–Keps
35	237–143	2	0–Ring
36	93–8065	1	Decal–Traction
37	67–1300	1	Decal – Toro
38	93–7276	1	Decal – Danger
39	93–6668	1	Decal – Battery
40	92–5524	1	Decal–Rating, Noise
41	63–9920	1	Decal–Level, Noise
42	93–7252	1	Decal–International
43	95–7122–03	1	Battery Base ASM
44	322–11	2	Screw–HH
45	3296–29	2	Nut–Lock, NI
46	106948	1	Tray–Battery
47	98–0601	1	Tube – Battery Drain

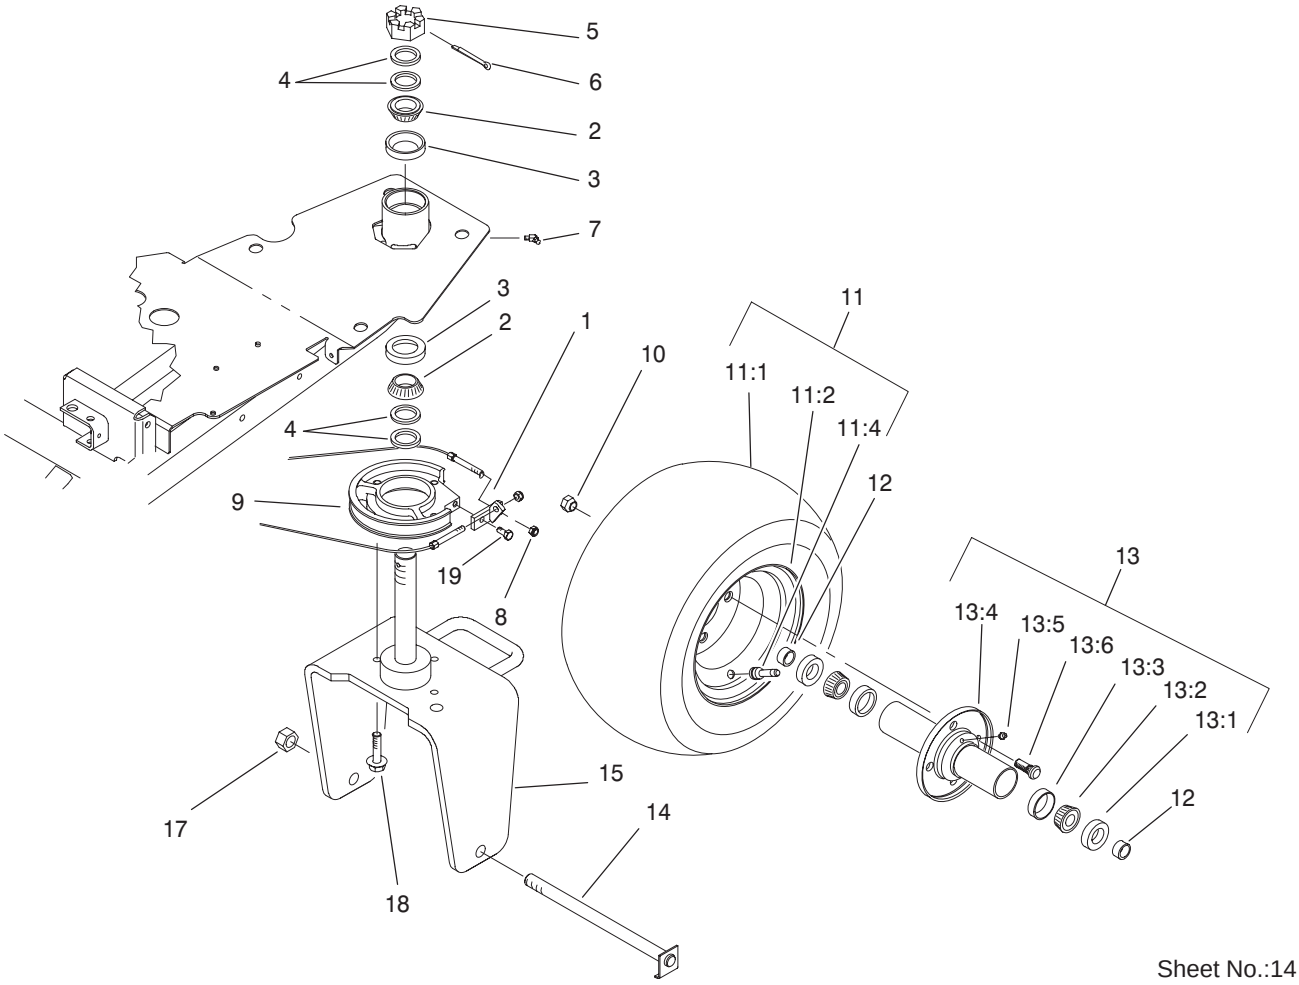


Sheet No.:14

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	95–5956	1	Cable Anchor ASM
2	254–70	2	Cone–Bearing
3	254–61	2	Cup–Bearing
4	18–6320	4	Washer–Steering
5	32136–9	1	Nut–Hex, Slot
6	3272–37	1	Pin–Cotter
7	302–11	1	Fitting–Lube, 45°
8	3296–4	2	Nut–Lock, NI
9	95–5955–01	1	Drum–Steering
10	242–50	4	Nut–Lug
11	10–6790	1	Wheel & Tire ASM
11:1	28–3680	1	Tire
11:2	217–60	1	Rim
11:4	232–24	1	Stem–Valve
*11:5	232–37	1	Tube
12	74–3730	2	Spacer–Spindle, Rear
13	72–9710	1	Hub–Tire, Sulky
13:1	253–111	2	Seal–Oil
13:2	254–78	2	Cone–Bearing
13:3	254–79	2	Bearing–Roller, Cup
13:4	75–9440	1	Hub ASM
13:5	302–55	1	Zerk
13:6	10–6830	4	Stud–Type, Drive
14	5–3934	1	Bolt–Caster
15	95–5952–01	1	Fork–Castor
17	3296–67	1	Nut–Lock NI

Ref. No.	Part No.	Qty.	Description
18	3234–24	3	Screw–HHF
19	322–3	1	Screw–HH

* Not illustrated

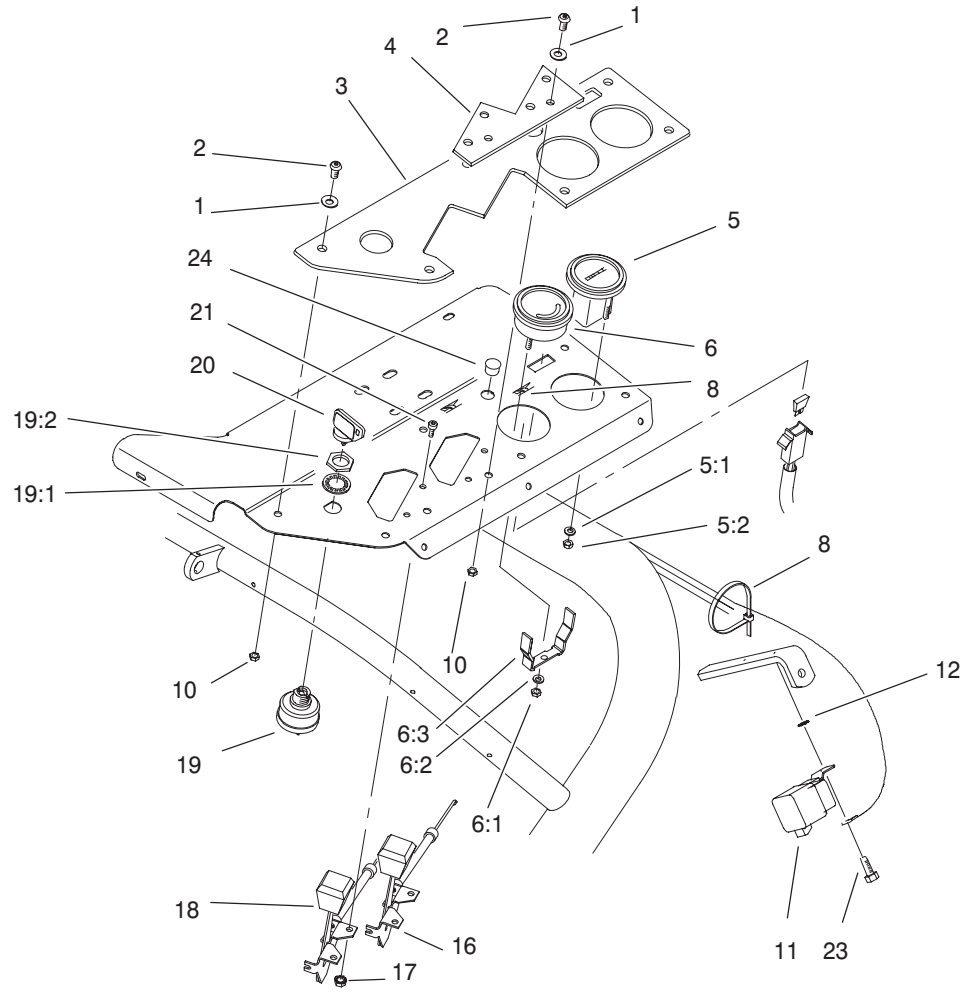


Sheet No.:15

Instrument Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	3256–1	8	Washer–Flat
2	3274–69	8	Screw–HSBH
3	93–8061	1	Panel – Control
4	83–2030	1	Plate–Filler
5	66–2950	1	Gauge–Hourmeter
5:1	3255–20	2	Washer–Lock, Ext. Tooth
5:2	3217–25	2	Nut–Hex
6	98–2160	1	Voltmeter
6:1	3217–27	1	Nut–Hex
6:2	3255–25	1	Washer–Lock/Ext
6:3	78–0080	1	Clamp–Mounting
8	3290–378	3	Tie–Cable
10	3296–16	8	Nut–Lock, NI
11	70–1480	1	Relay
12	3255–7	1	Washer–Lock/Ext
16	83–0040	1	Control – Choke
17	3296–27	4	Nut–Lock NI
18	83–0030	1	Control – Throttle
19	88–9830	1	Switch–Ignition
19:1	3254–5	1	Washer–Lock/Internal
19:2	218–461	1	Nut–HH
20	63–8360	2	Key–Ignition
21	3273–26	4	Screw–HSH
23	32104–95	1	Screw–HWH
24	2410–64	1	Plug–Button

Ref. No.	Part No.	Qty.	Description

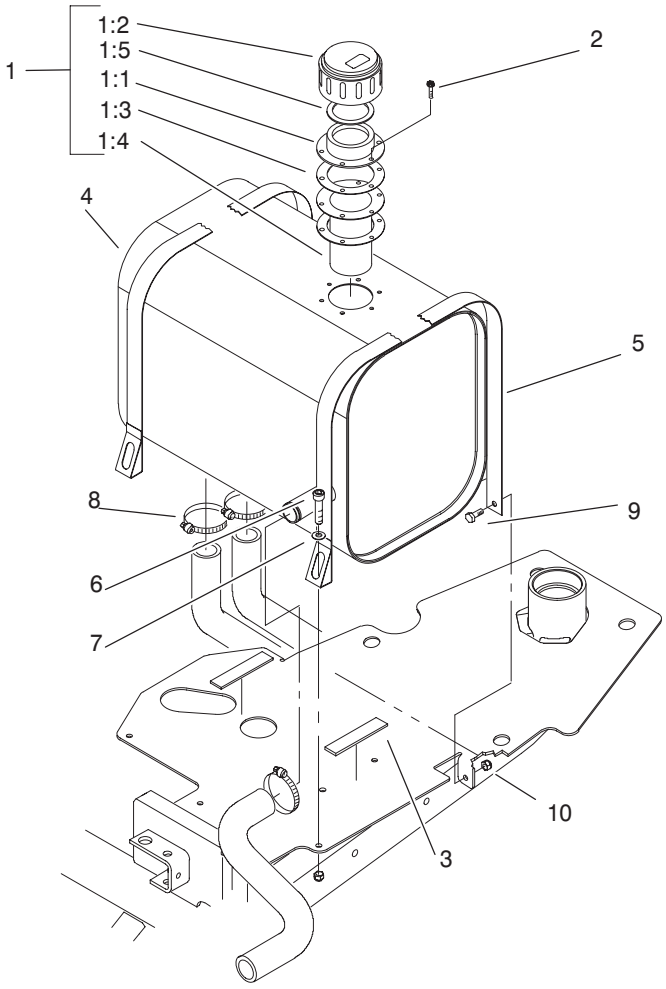


Sheet No.:16

Hydraulic Reservoir Assembly

Ref. No.	Part No.	Qty.	Description
1	62–2570	1	Filler Cap ASM
1:1	353–961	1	Flange
1:2	353–962	1	Cap Assembly
1:3	353–963	2	Gasket
1:4	62–2610	1	Filler Cap Strainer
1:5	76–1720	1	Gasket – Filler Cap
2	32144–34	6	Screw–Forming, Thread
3	95–5951	2	Strip – Seal
4	95–7118	1	Tank – Hydraulic
5	27–2400	2	Reservoir Strap ASM
6	3274–19	2	Screw–HSH
7	3256–22	2	Washer–Flat
8	2412–34	3	Clamp–Hose
9	321–3	2	Screw–HH
10	3296–16	6	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

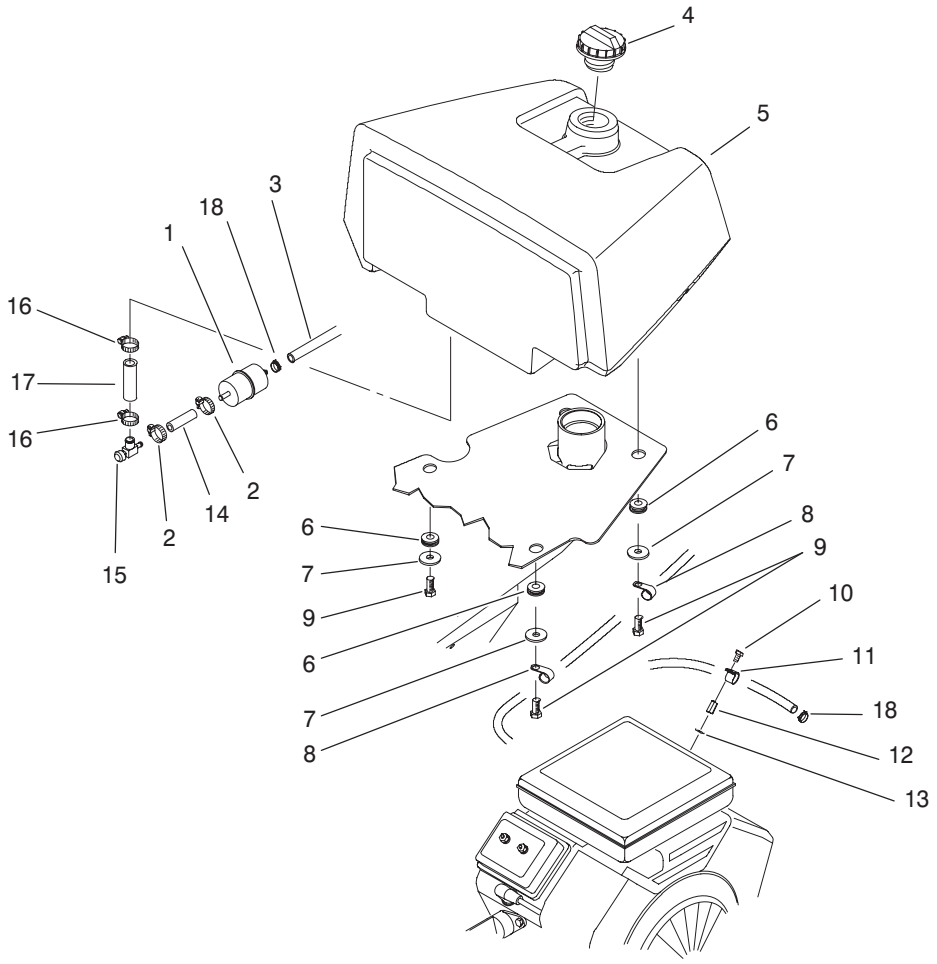


Sheet No.:17

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	94–2690	1	Filter–Fuel
2	2412–108	2	Clamp–Worm
3	83–2041	1	Hose–Fuel
4	93–7170	1	Cap–Fuel
5	92–7189	1	Tank – Gas
6	240–11	4	Grommet–Mount, Tank
7	63–8410	4	Washer
8	2412–41	3	Clamp
9	323–6	4	Screw–HH
10	33113–012	1	Screw–HH
11	2412–94	1	Clamp
12	83–2200	1	Nut
13	3256–63	1	Washer–Flat
14	83–2040	1	Hose–Line, Gas
15	83–1390	1	Fitting–Shut–Off, Fuel
16	2412–36	2	Clamp–Hose
17	56–2230	1	Hose–Fuel
18	2412–98	2	Clamp

Ref. No.	Part No.	Qty.	Description

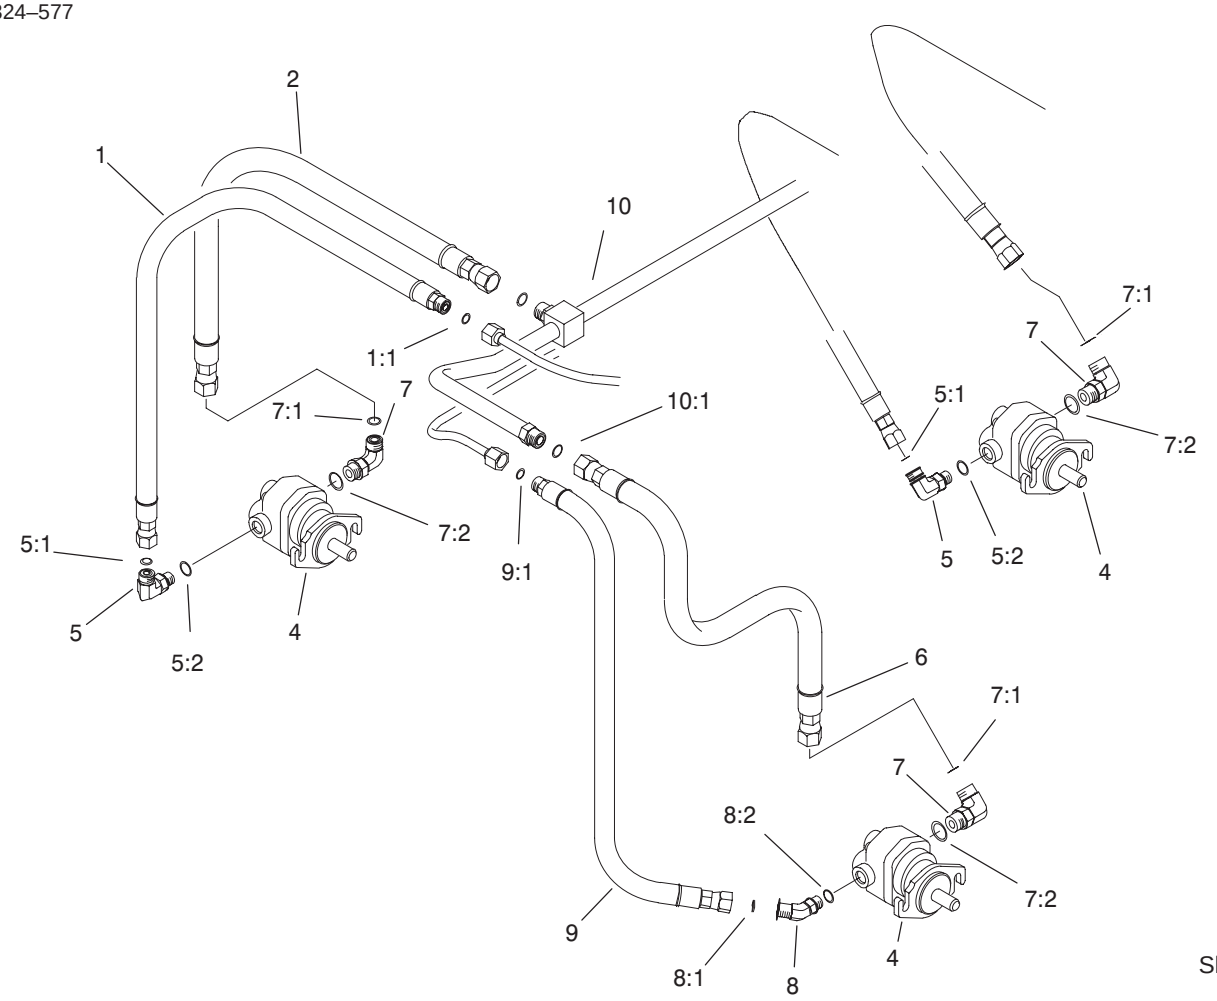


Sheet No.:18
T–3372

Real Motor Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	95–5984	1	Hose–Hydraulic
1:1	237–22	1	O–Ring
2	95–5985	1	Hose–Hydraulic
4	94–3506	3	Motor–Reel
5	340–77	2	Fitting–90°
5:1	237–22	2	O–Ring
5:2	237–42	2	O–Ring
6	95–5989	1	Hose–Hydraulic
7	340–98	3	Fitting–90°
7:1	237–79	3	O–Ring
7:2	237–30	3	O–Ring
8	340–87	1	Fitting–45°
8:1	237–22	1	O–Ring
8:2	237–42	1	O–Ring
9	95–5988	1	Hose–Hydraulic
9:1	237–22	1	O–Ring
10	100–6431	1	Tube–Return
10:1	237–30	2	O–Ring

Ref. No.	Part No.	Qty.	Description

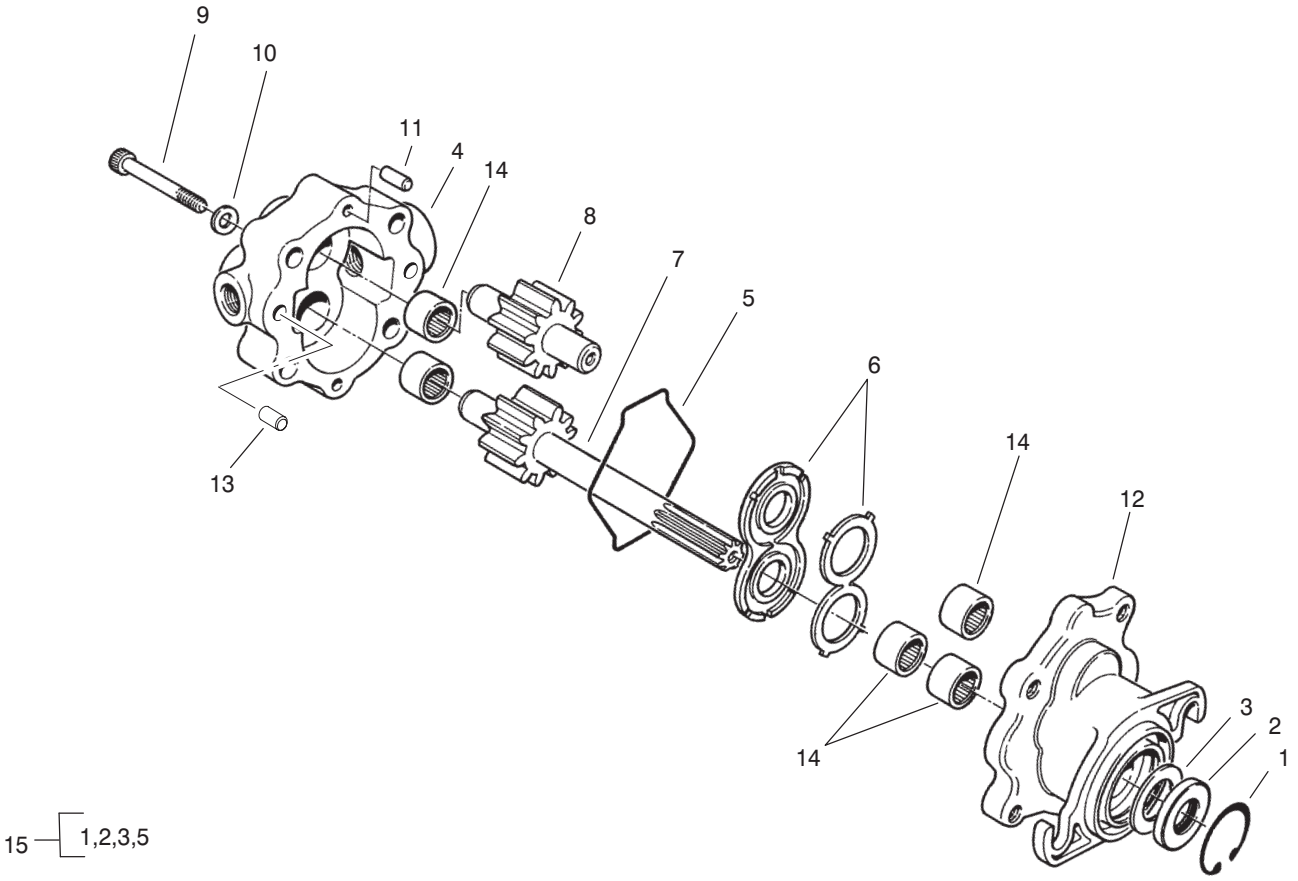

Note: Parts Not Listed In Parts List Are Not Serviced Separately .


Sheet No.: A5

T–3373

Reel Motor No. 94–3506

Ref. No.	Part No.	Qty.	Description
1	32151–41	3	Ring–Snap
3	353–590	3	Spacer
4	94–3507	3	Cover ASM
5	354–46	3	Ring–Seal
6	74–3810	3	Load Plate ASM
7	94–3508	3	Driveshaft & Gear ASM
8	94–3509	3	Idler Shaft & Gear ASM
9	354–50	12	Screw–HSH
10	354–51	12	Washer
11	353–599	6	Pin–Dowel
12	92–8795	3	Body ASM
13	92–8796	6	Pin – Dowel
15	92–8863	3	Kit–Repair

Ref. No.	Part No.	Qty.	Description

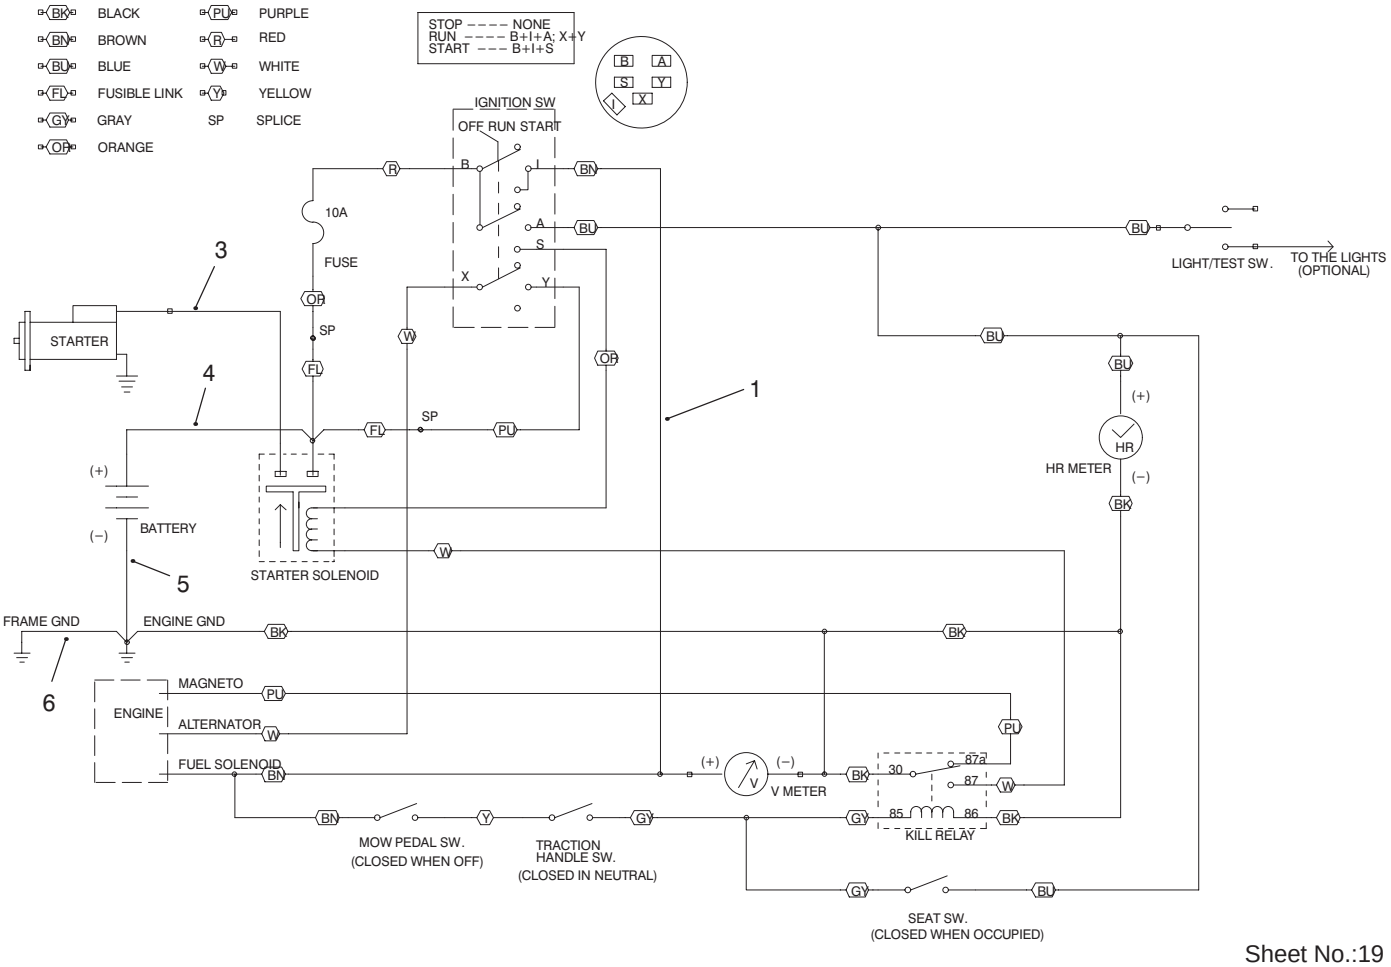


Sheet No.:19

Wiring Assembly

Ref. No.	Part No.	Qty.	Description
1	98–2163	1	Harness–Wire, Main
3	98–2161	1	Wire ASM
4	95–7144	1	Cable ASM – Positive
*4:2	28–8080	1	Boot–Terminal
*4:3	83–2430	1	Boot – Terminal
5	98–0604	1	Cable ASM – Negative
*5:2	98–0603	1	Boot – Terminal
6	83–1150	1	Engine Ground Wire ASM

Ref. No.	Part No.	Qty.	Description

* Not illustrated

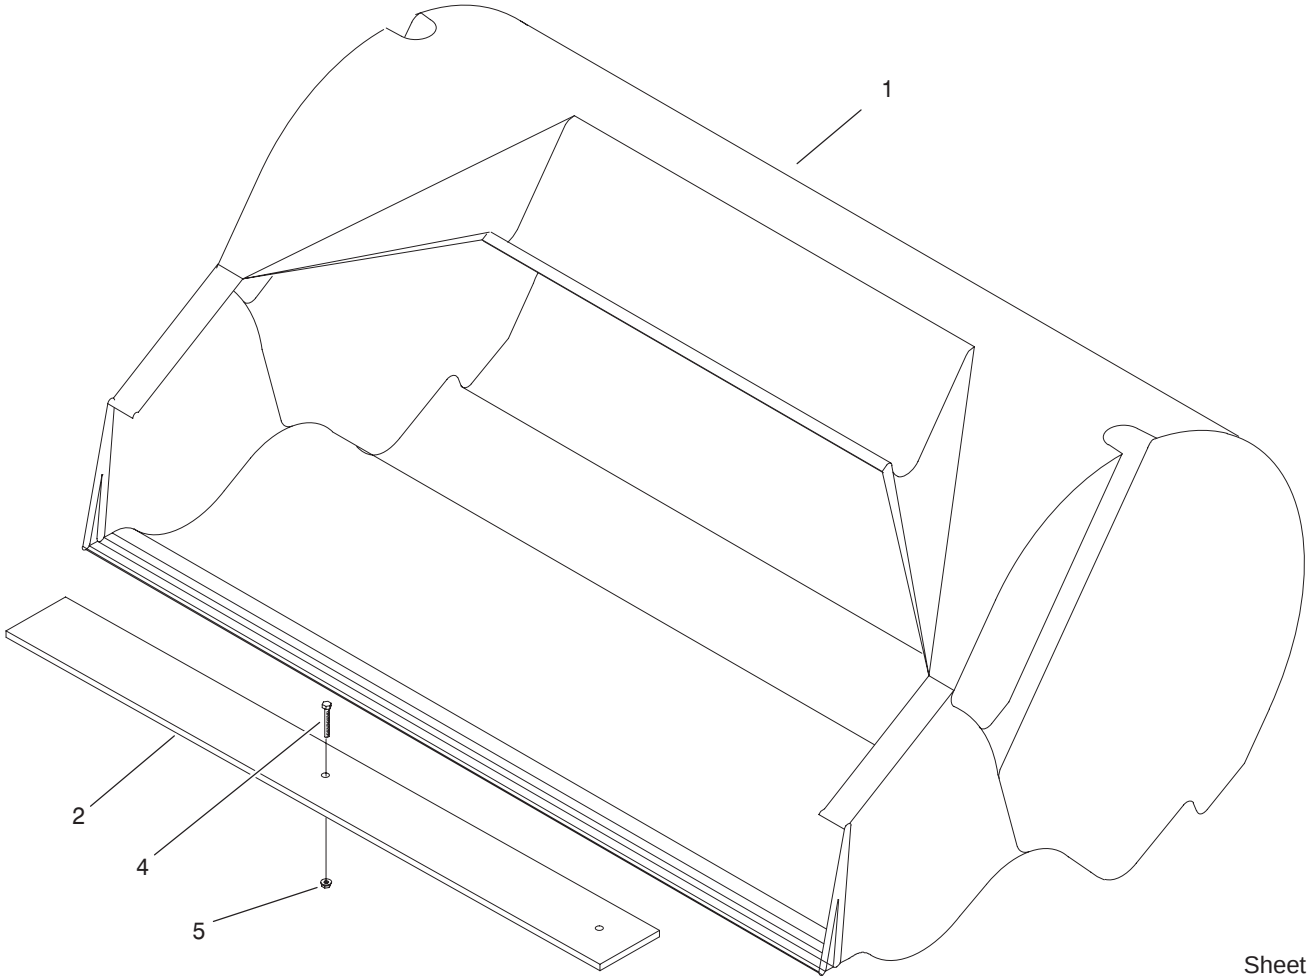

Sheet No.:20


Grass Basket & Miscellaneous Parts

Ref. No.	Part No.	Qty.	Description
1	37–8130	3	Basket–Grass
2	65–8320	1	Bar–Gauge
*3	93–6691	3	Decal–Bolt, Eccentric
4	32122–22	1	Screw–HH
5	3219–14	1	Nut–Hex
*6	3290–379	3	Tie–Cable
*7	3290–378	1	Tie–cable


Ref. No.	Part No.	Qty.	Description

* Not illustrated

Hydraulic Schematic

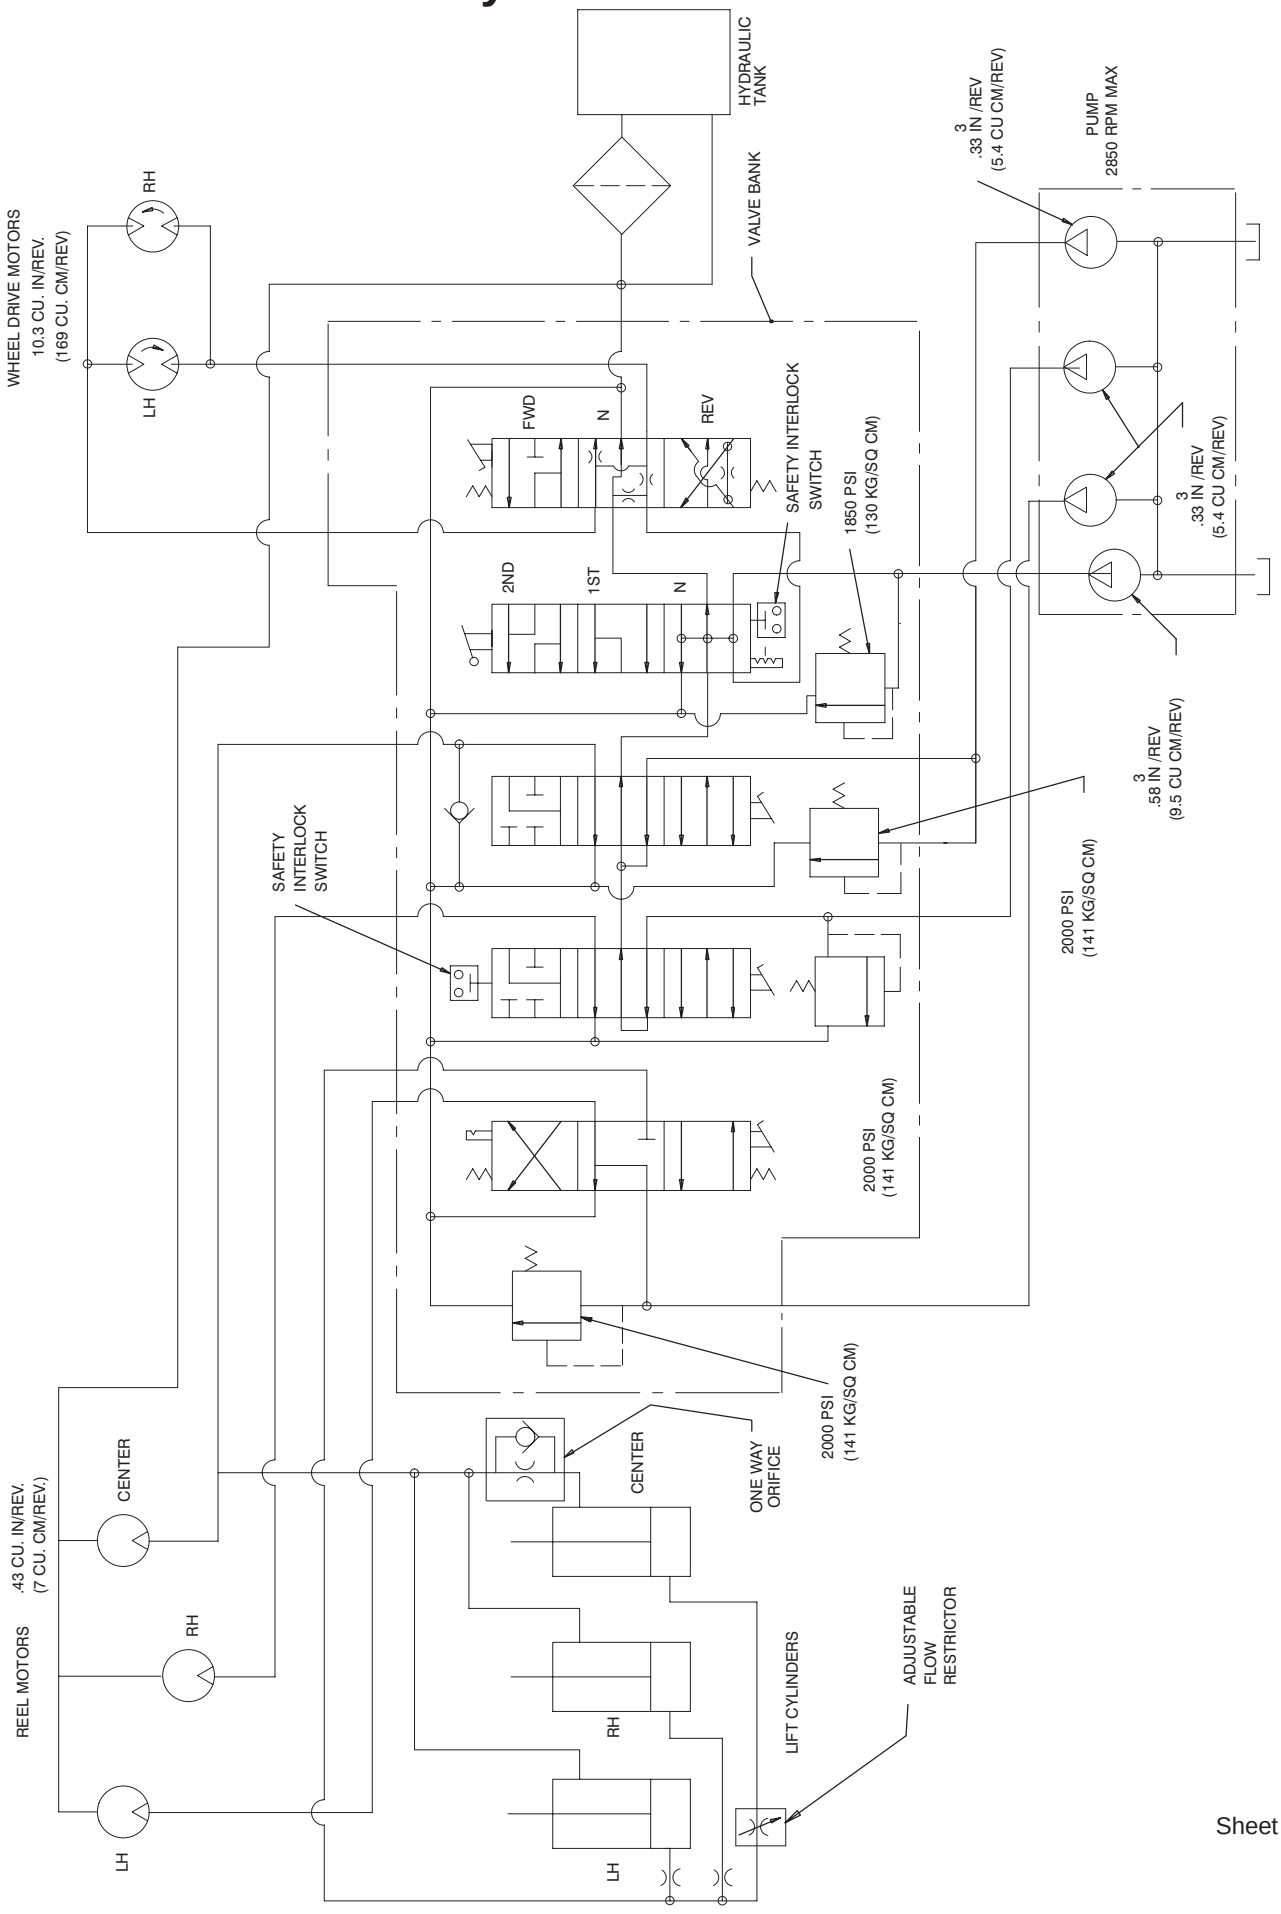

Sheet No.:20

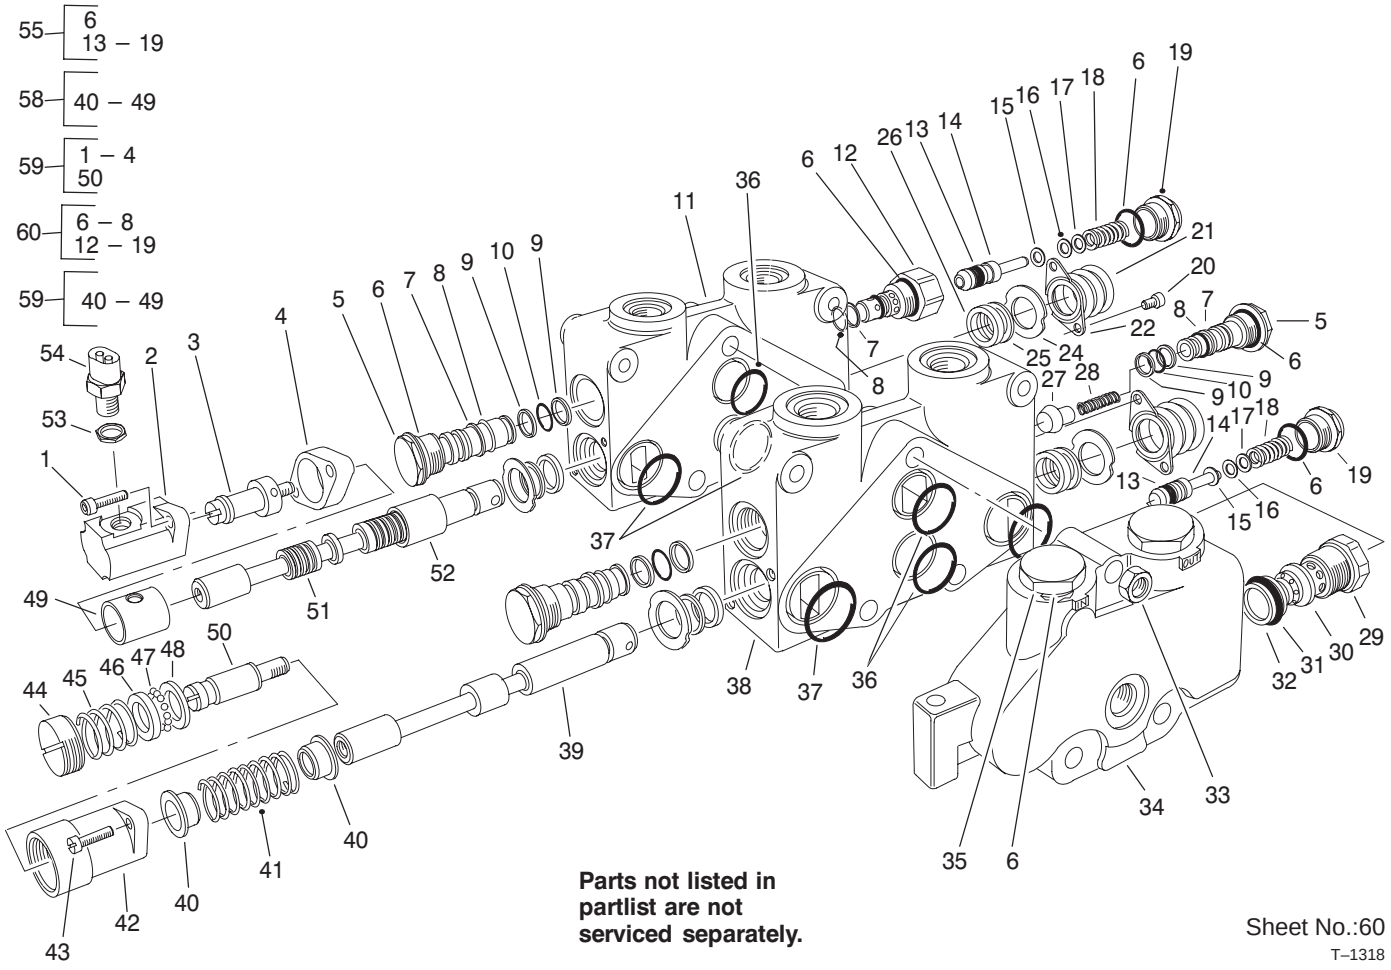


Sheet No.:60
T–1318

Control Valve Assembly No. 84–2203 (Sections 1 & 2)

Ref. No.	Part No.	Qty.	Description
1	3274–70	2	Screw–HSH
2	353–727	1	Special Bonnet
3	353–729	1	Detent Stud
4	353–733	1	Bonnet Spacer
5	353–481	3	Lift Check ASM
6	237–54	8	O–Ring
7	353–306	4	Backup Washer
8	353–305	4	O–Ring
9	353–303	6	Backup Washer
10	353–302	3	O–Ring
12	353–851	1	Relief Body
13	353–392	2	Piston Ring
14	353–531	2	Poppet & Ring ASM
15	353–328	2	.040 Shim
16	353–329	2	.020 Shim
17	353–330	2	.010 Shim
18	353–855	2	Spring
19	353–334	2	Relief Cap
20	3274–52	4	Screw–HSH
21	353–575	2	Boot
22	93–3651	2	Retainer – Boot
24	92–2547	4	Seal – Retainer
25	92–2546	4	Wiper – Seal
26	353–957	4	Seal Cup
27	353–301	1	Poppet Lift Check
28	353–304	1	Lift Check Spring

Ref. No.	Part No.	Qty.	Description
29	353–331	1	O–Ring Seal
30	353–760	1	Body Relief
31	353–758	1	O–Ring Seal
32	353–952	1	Back–Up Seal
33	3217–7	3	Nut–Hex
34	353–772	1	Left Cover
35	353–721	2	Plug
40	353–417	2	Stop Collar
41	99–6850	1	Spring–Compression
42	99–8181	1	Bonnet–R Det
43	3274–15	2	Screw–HSH
44	353–763	1	Adj Cap
45	99–1475	1	Spring – Compression
46	42–2680	1	Ball Race
47	52–5880	12	Detent Ball
48	354–29	1	Trust Plate
49	353–728	1	Sleeve
50	353–762	1	Spud – Det Out
52	353–732	1	Detent Sleeve
53	38–0410	1	Nut–Hex
54	83–1890	1	Switch–Ball
55	353–766	1	Relief Cart
56	99–8182	1	Sec 1–V20c Spl ASM
57	353–837	1	Section #2
58	99–8180	1	Positioner–R Det O/Asy

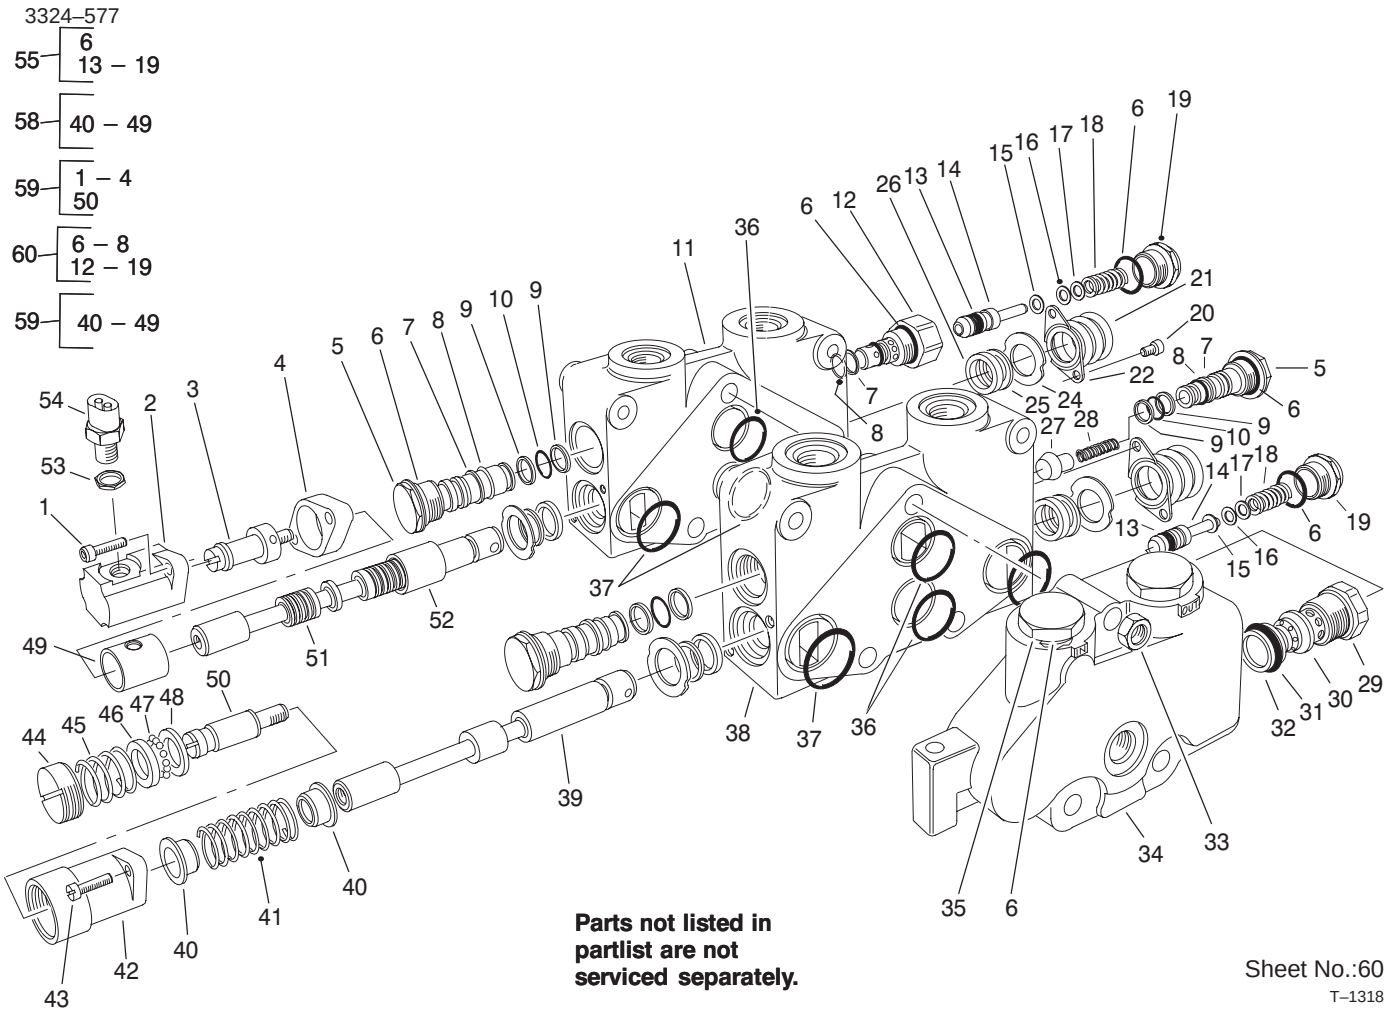


Control Valve Assembly No. 84–2203 (Sections 1 & 2) (Continued)

Ref. No.	Part No.	Qty.	Description
59	353–839	1	Bonnet ASM
60	353–642	2	Relief Cartridge
61	93–3652	2	Dust Boot
62	353–835	1	Section Seal
63	92–2548	1	Kit – Spool Set
64	92–2545	1	Kit – Spool Set

Ref. No.	Part No.	Qty.	Description

Parts not listed in partlist are not serviced separately.

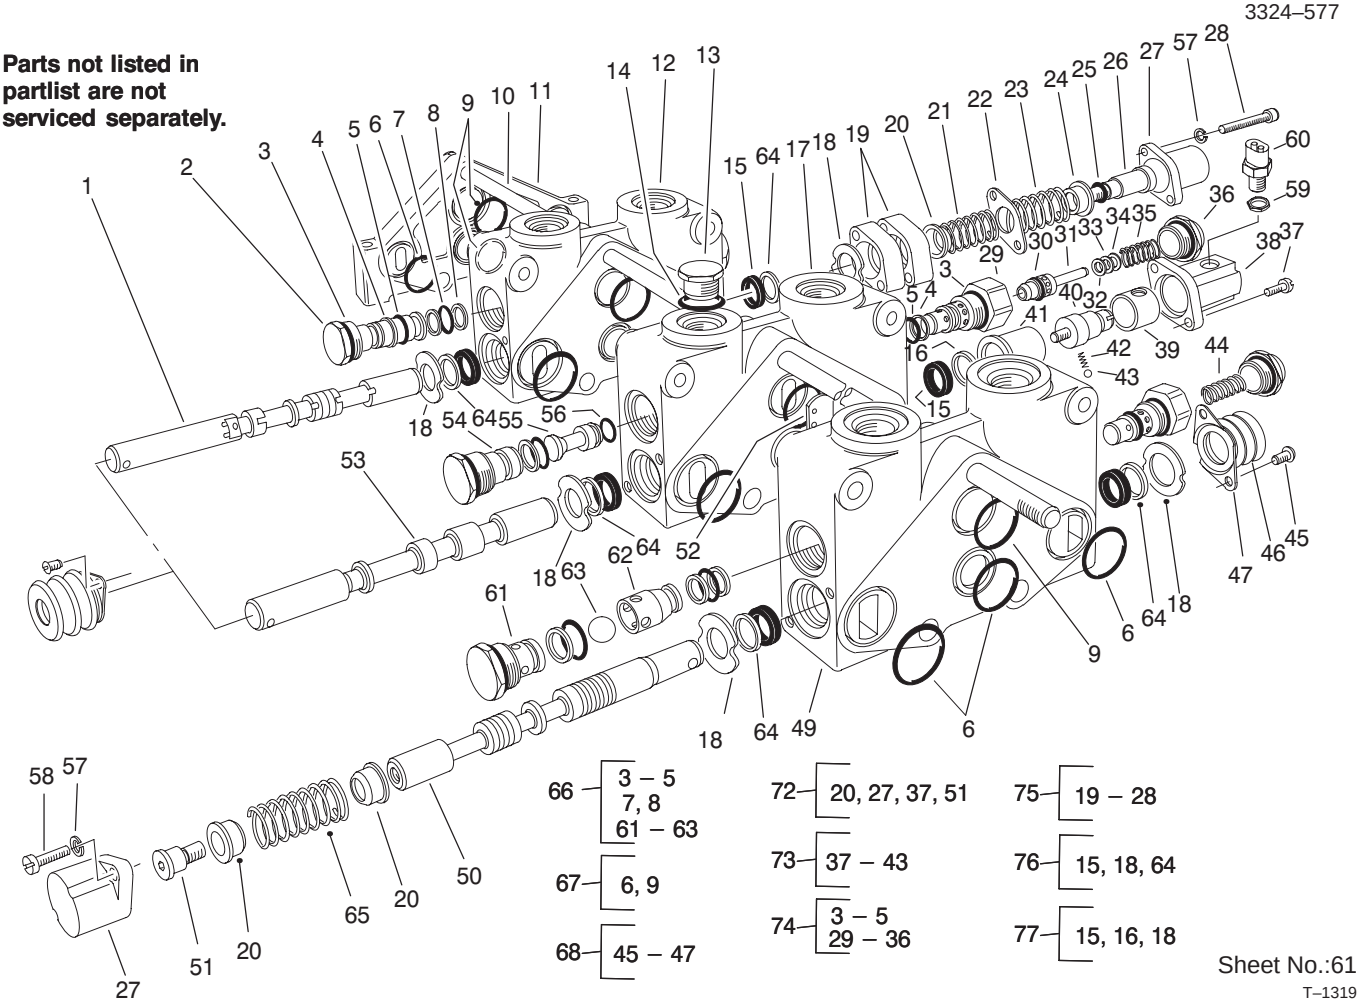

Sheet No.:61

T–1319


Control Valve Assembly No. 84–2203 (Sections 3 Thru 5)

[36]

Ref. No.	Part No.	Qty.	Description
1	94–5434	1	Spool
2	353–481	3	Lift Check ASM
3	237–54	6	O–Ring
4	353–306	5	Backup Washer
5	353–305	5	O–Ring
7	353–302	3	O–Ring
8	353–303	6	Backup Washer
10	353–853	3	Bolt
11	353–668	1	Cover Plate
13	353–550	1	Plug–Hydraulic
13:1	237–79	1	O–Ring
14	353–848	1	O–Ring
15	353–957	6	Seal Cup
16	353–958	1	Washer
18	92–2547	5	Seal – Retainer
19	353–733	2	Bonnet Spacer
20	353–417	3	Stop Collar
21	353–831	1	Spring
22	353–529	1	Plate – Seal Retainer
23	92–3148	1	Spring – Traction
24	353–808	1	Spring Collar
25	353–830	1	O–Ring Seal
26	94–4248	1	Spool Collar
27	99–6895	2	Bonnet
28	354–28	2	Hex Socket Screw
29	353–851	2	Relief Body

Ref. No.	Part No.	Qty.	Description
30	353–392	2	Piston Ring
31	353–531	2	Poppet & Ring ASM
32	353–328	2	.040 Shim
33	353–329	2	.020 Shim
34	353–330	2	.010 Shim
35	353–398	1	Spring
36	353–334	2	Relief Cap
37	52–5900	4	Screw
38	353–847	1	Bonnet
39	353–849	1	Sleeve
40	353–846	1	Spud
41	353–845	1	Detent Sleeve
42	353–730	1	Spring
43	353–731	1	1/4 Dia Ball
44	353–855	1	Spring
45	3274–52	6	Screw–HSH
46	353–575	3	Boot
47	93–3651	3	Retainer – Boot
51	52–5860	1	Spool Collar
52	354–122	1	Disc–Seal
54	353–953	1	Plug ASM
55	353–844	1	Plug
56	353–850	1	O–Ring Seal
57	3253–3	4	Washer–Lock/Sp
58	3274–84	4	Screw–HSH
59	38–0410	1	Nut–Hex

Parts not listed in partlist are not serviced separately.

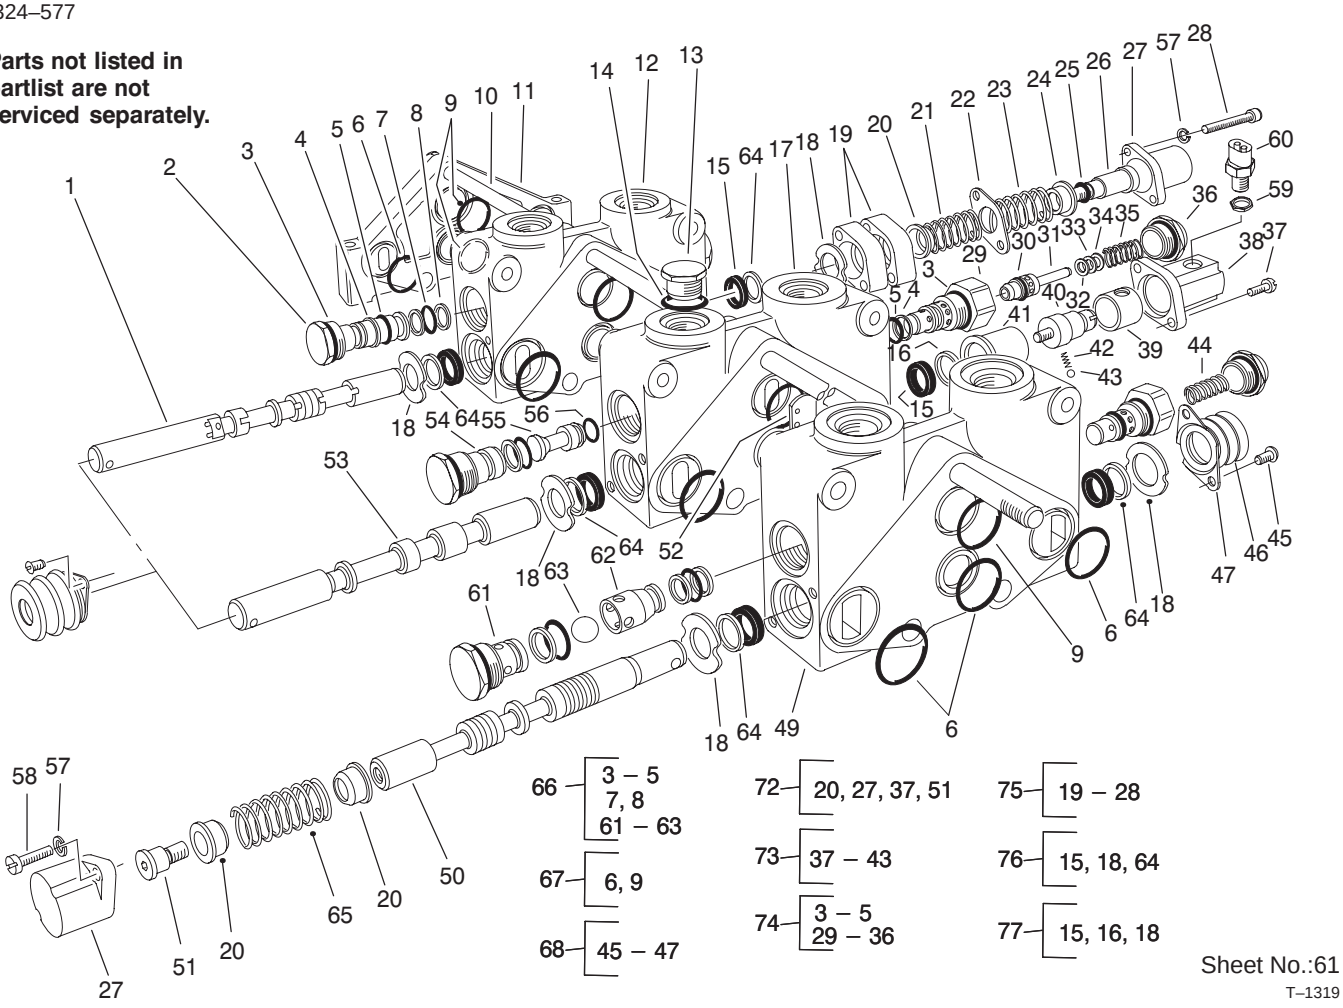

Sheet No.:61
T–1319


Control Valve Assembly No. 84–2203 (Sections 3 Thru 5) (Continued)

Ref. No.	Part No.	Qty.	Description
60	83–1890	1	Switch–Ball
61	353–483	1	Check Body
62	353–484	1	Check Ball Return
63	353–737	1	Check Ball
64	92–2546	5	Wiper – Seal
65	99–6850	1	Spring–Compression
66	354–129	1	Anticavitation Ck Assy
67	353–835	1	Section Seal
68	93–3652	3	Dust Boot
69	99–8183	1	Sec 3–V20t ASM
70	354–25	1	Valve Sect 4
71	93–1386	1	Section – 5 Pump ASM
72	353–841	1	Spool Position ASM
73	353–840	1	Bonnet ASM
74	353–642	1	Relief Cartridge
75	353–833	1	Positioner ASM
76	92–2548	1	Kit – Spool Set
77	92–2549	1	Kit – Spool Set
78	92–2545	1	Kit – Spool Set

Ref. No.	Part No.	Qty.	Description

SPECIAL TOOLS


REEL MOTOR SEAL INSTALLATION TOOLS

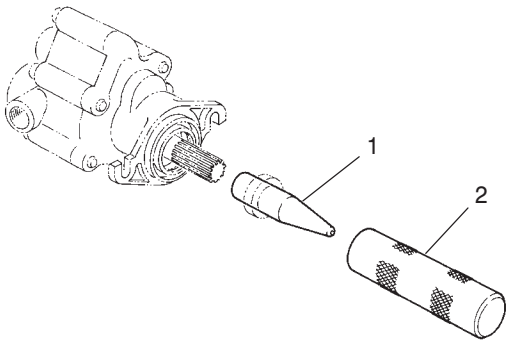

T–0727

Ref. No.	Part No.	Qty.	Description
1	TOR491430	1	Protector–Seal
2	TOR491450	1	Installer–Seal


BED KNIFE SCREW TOOL NO. TOR510880

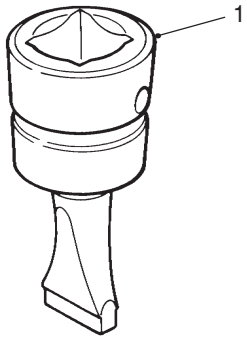

T–0729

Ref. No.	Part No.	Qty.	Description
1		1	Tool–Bed Knife Screw


BEARING REPLACEMENT TOOL KIT NO. TOR238900

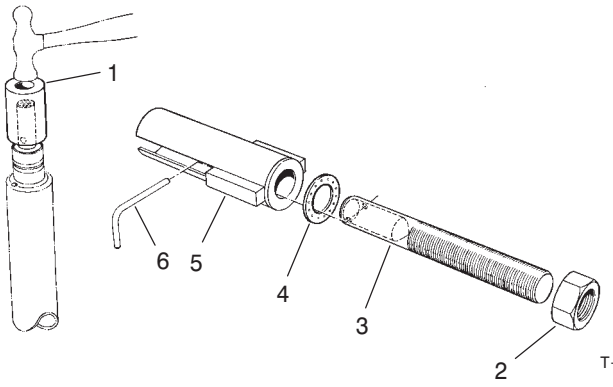

T–0730

Ref. No.	Part No.	Qty.	Description
1	23–8880	2	Driver–Bearing
2	3219–18	1	Nut–Hex
3	23–8840	1	Puller–Bolt
4	22–6090	1	Washer–Thrust
5	23–8850	1	Tube–Support
6	23–8860	1	Pin–Replacement, Bearing

BACKLAPPING BRUSH ASSEMBLY NO. 29–9100

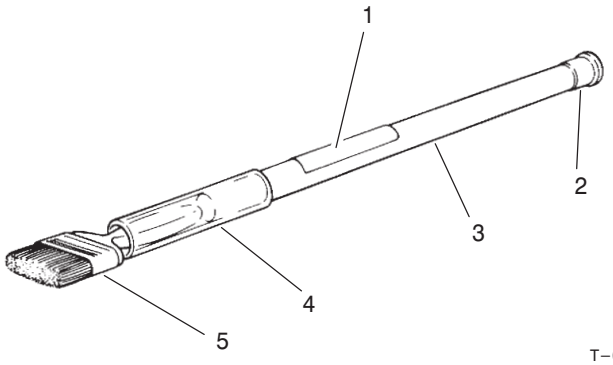


T–0731

Ref. No.	Part No.	Qty.	Description
1	12–9140	1	Decal
2	2410–18	1	Plug
3	29–9080	1	Handle
4	29–9090	1	Hose–Handle
5	36–4310	1	Brush

Note: Special tools may be ordered from: Owatonna Tool Company 2013 4th St. NW Owatonna, MN 55060

SPECIAL TOOLS (Continued)


ALIGNMENT TOOL NO. TOR200120

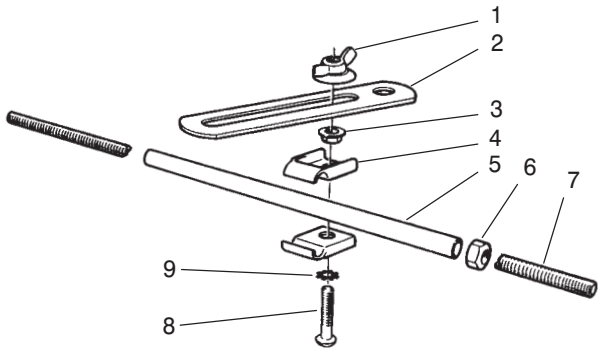

T–0732

Ref. No.	Part No.	Qty.	Description
1	3–4808	1	Nut–Wingl
2	20–0110	1	Bracket–Alignment
3	32123–20	1	Nut–Lock, Flange
4	3–6657	2	Clip–Skid
5	20–0070	1	Tube
6	3219–2	1	Nut–Hex
7	20–0080	1	Rod
8	32122–35	1	Screw–Head, Truss
9	3255–8	1	Washer–Lock, Int. Tooth

Note: Special tools may be ordered from: Owatonna Tool Company
2013 4th St. NW
Owatonna, MN 55060

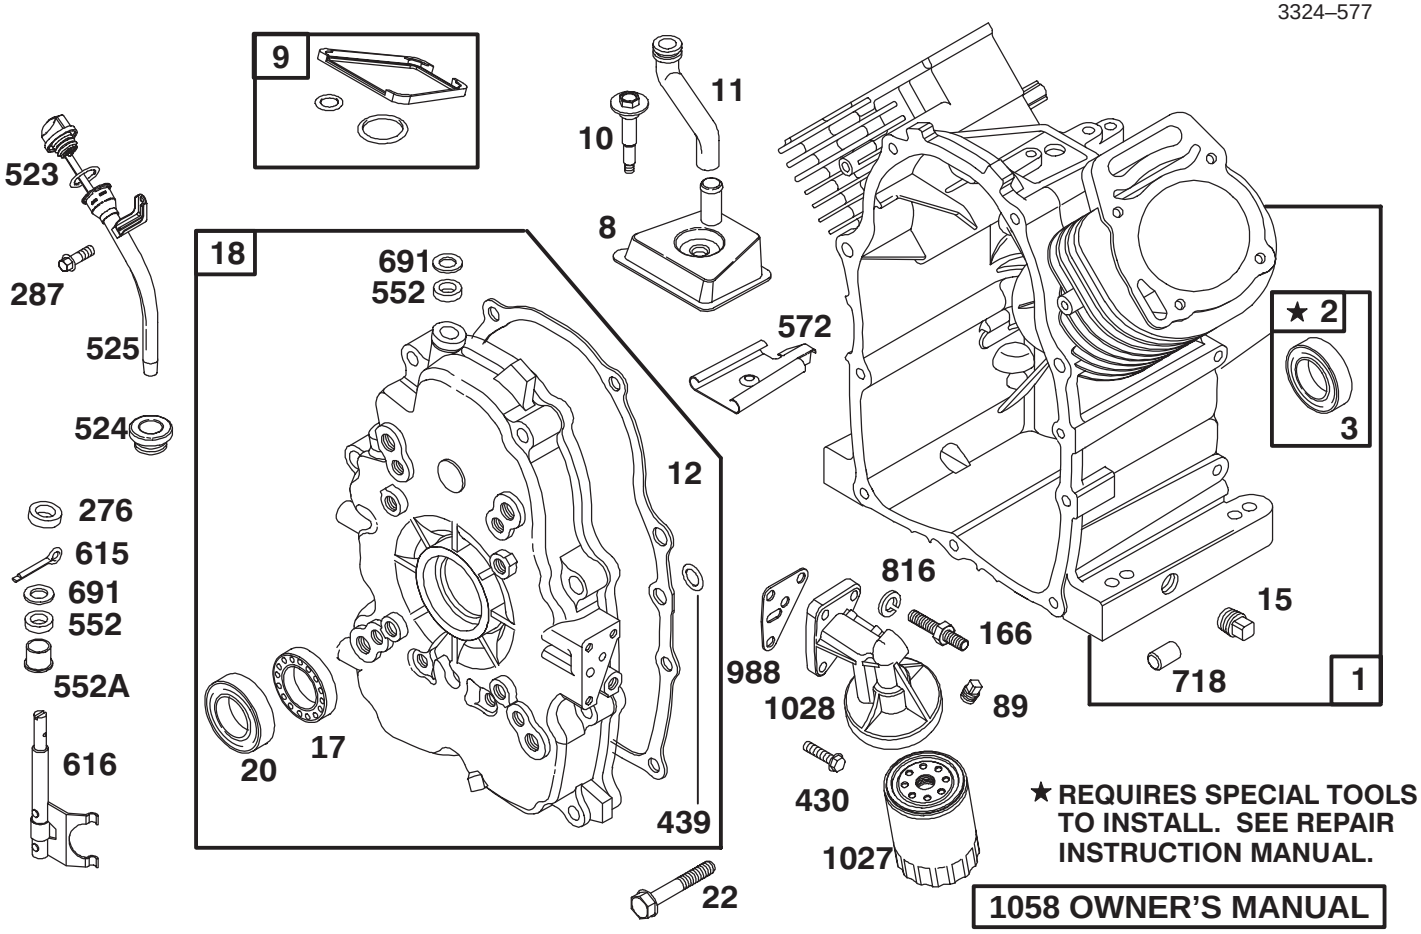


Assemblies include all parts shown in frames.

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
1	692178	1	Cylinder Assembly
2	808534	1	Cylinder Bearing
*3	805101	1	Oil Seal (Magneto Side)
8	807795	1	Breather Assembly
*9	807688	1	Breather Gasket
10	805751	1	Screw
11	806083	1	Breather Tube
12	806100	1	Crankcase Cover Gasket
15	94239	1	Oil Drain Plug
17	805754	1	Ball Bearing
18	808847	1	Crankcase Cover
*20	805049	1	Oil Seal (PTO Side)
22	692540	1	Screw (Crankcase Cover)
89	690283	1	Pipe Plug
166	805073	1	Oil Filter Adapter Stud
276	690704	1	Governor Shaft Washer
287	805247	1	Screw (Dipstick Tube)
430	690679	1	Screw (Oil Filter Adapter)
439	692154	1	O–Ring (Crankcase Cover)
523	693175	1	Dipstick

Ref. No.	Part No.	Qty.	Description
*524	693172	1	Dipstick Tube Seal
525	693174	1	Dipstick Tube
552	690701	1	Governor Shaft Bushing
552A	805413	1	Governor Shaft Bushing
572	690686	1	Breather Baffle
615	691550	1	Cotter Pin
616	806685	1	Governor Fork
*691	690680	1	Governor Shaft Seal
718	690684	1	Crankcase Dowel
816	690706	1	Washer
*988	805250	1	Oil Filter Adapter Gasket
1027	492932	1	Oil Filter
1028	808325	1	Oil Filter Adapter
1058	273685	1	Owner's Manual

* Included in Gasket Set – Part No. 808390.

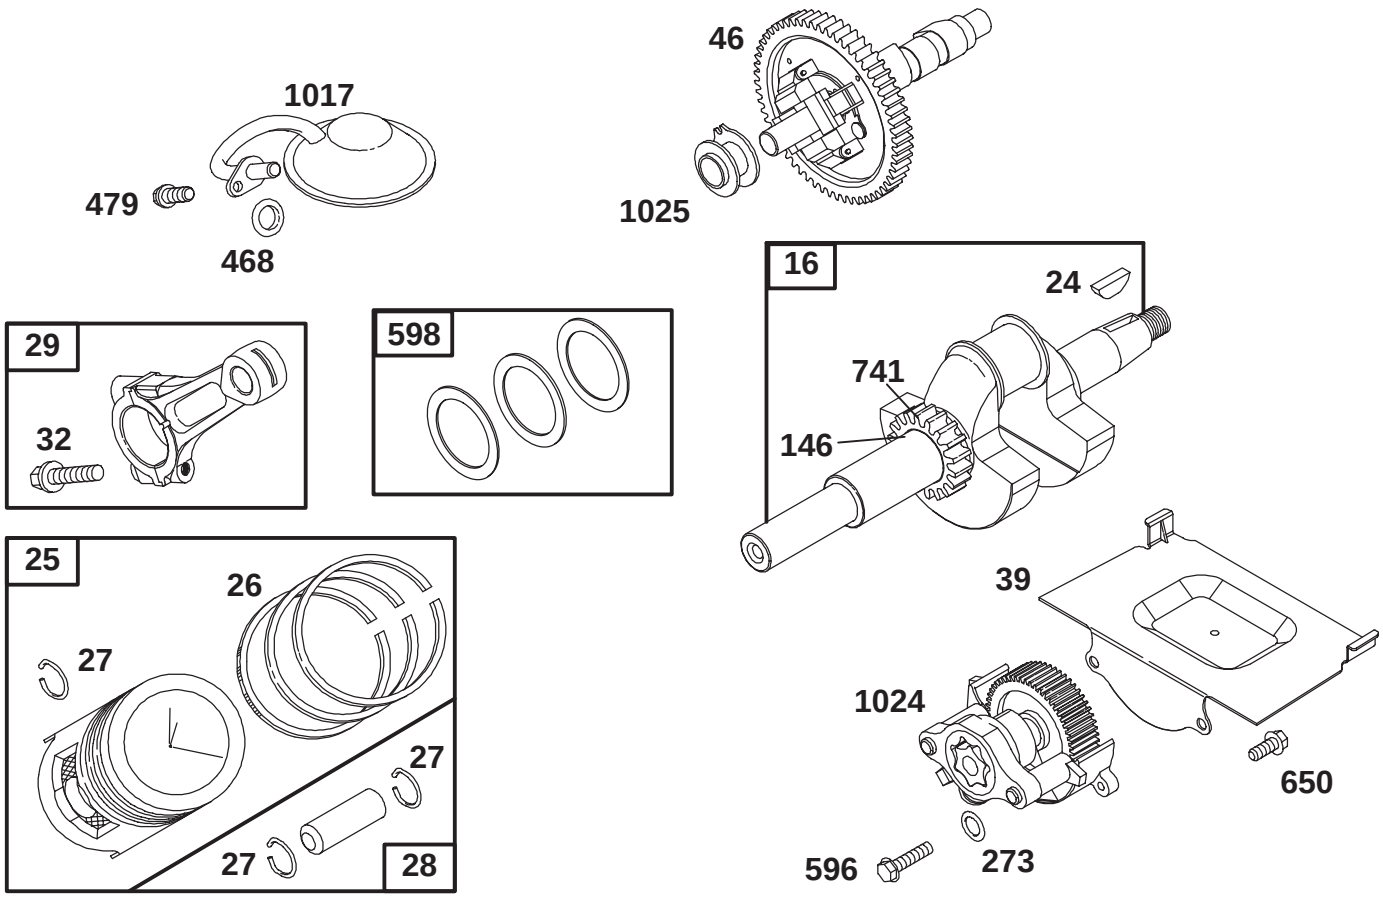


Assemblies include all parts shown in frames.

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
16	692161	1	Crankshaft
24	806066	1	Flywheel Key
25	807619	1	Piston Assembly (Standard)
	807807	1	Piston Assembly (.010 O.S.)
	807809	1	Piston Assembly (.020 O.S.)
	807811	1	Piston Assembly (.030 O.S.)
26	807620	1	Piston Ring Set (Standard)
	807808	1	Piston Ring Set (.010 O.S.)
	807810	1	Piston Ring Set (.020 O.S.)
	807812	1	Piston Ring Set (.030 O.S.)
27	690683	1	Piston Pin Lock
28	807621	1	Piston Pin Assembly
29	807900	1	Connecting Rod (Standard)
	807809	1	Connecting Rod (.020 U.S.)
32	690698	1	Screw (Connecting Rod)

Ref. No.	Part No.	Qty.	Description
39	690745	1	Oil Deflector
46	691557	1	Camshaft
146	94196	1	Timing Key
*273	690681	1	O–Ring Seal (Oil Pump)
*468	690690	1	O–Ring Seal (Oil Pump Screen)
479	692537	1	Screw
596	691492	1	Screw
598	807625	1	End Play Shim
650	692539	1	Screw
741	805984	1	Timing Gear
1017	690900	1	Oil Pump Screen
1024	693185	1	Oil Pump
1025	690689	1	Governor Slider

* Included in Gasket Set – Part No. 808390.

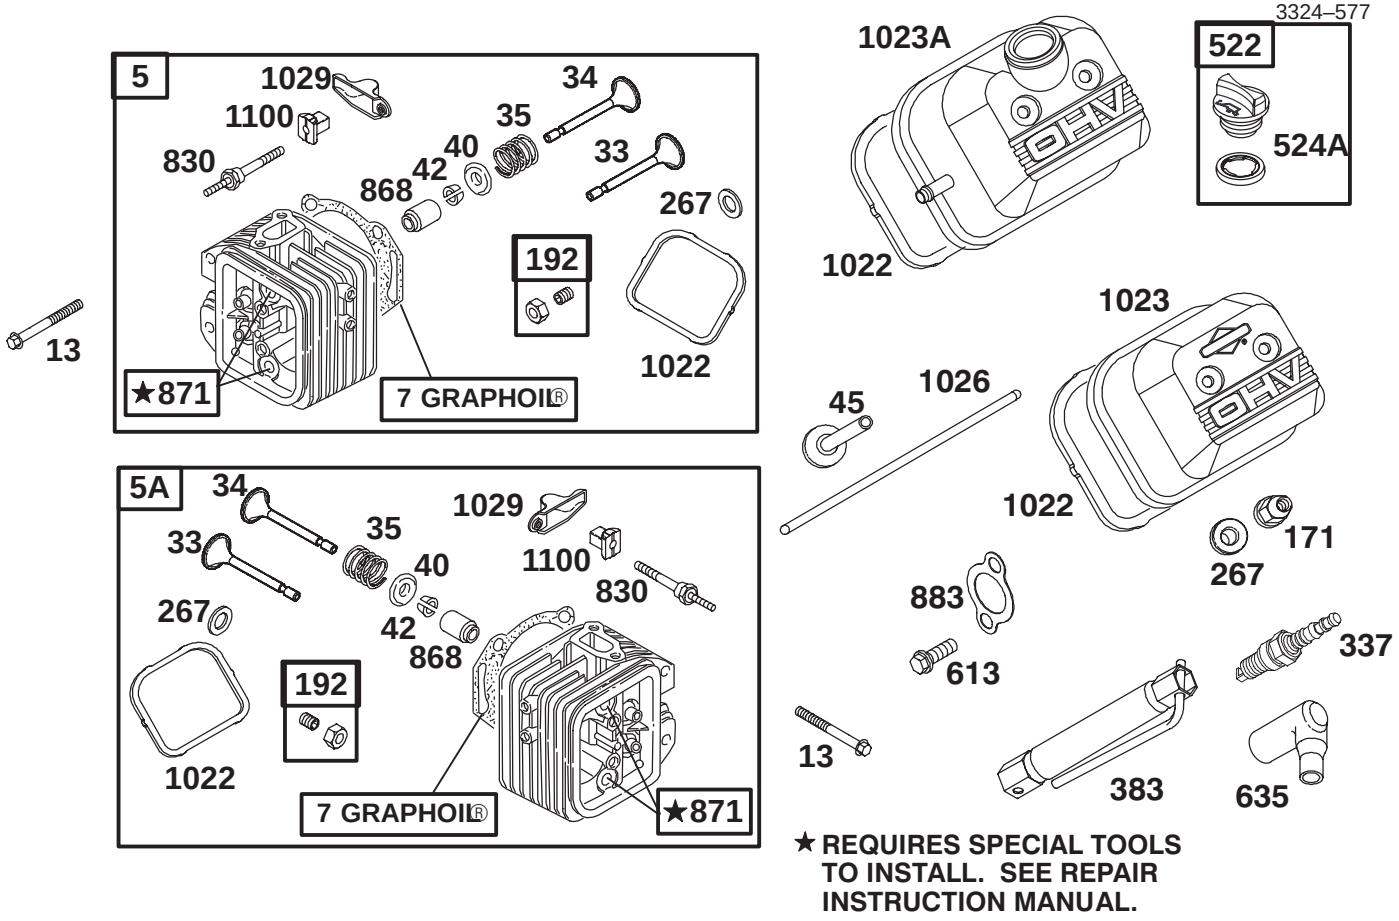


Assemblies include all parts shown in frames.

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
5	808381	1	Cylinder (Cyl. #1) Head
5A	808382	1	Cylinder (Cyl. #2) Head
*‡7	806085	1	Cylinder Head Gasket
13	805097	1	Cylinder Head Screw
33	807681	1	Exhaust Valve
34	807680	1	Intake Valve
35	805937	1	Valve Spring
40	805092	1	Valve Spring Retainer
42	807683	1	Valve Retainer
45	262679	1	Valve Tappet
‡171	805019	1	Nut (Air Cleaner)
192	807623	1	Screw
*‡276	805420	1	Sealing Washer
337	491055	1	Spark Plug
*‡338	691312	1	Dipstick Gasket
383	19374	1	Spark Plug Wrench
522	491832	1	Dipstick/Fill Plug
613	805158	1	Screw
635	805529	1	Spark Plug Elbow
830	691544	1	Rocker Arm Stud
868	805094	1	Valve Guide Seal
871	805084	1	Valve Guide
*‡883	805024	1	Exhaust Gasket
*‡1022	806039	1	Rocker Cover Gasket
1023	691494	1	Valve Cover
1023A	690910	1	Valve Cover

Ref. No.	Part No.	Qty.	Description
1026	805352	1	Push Rod (Intake Valve) **Note:** 805617 Push Rod (Exhaust Valve)
1029	691543	1	Rocker Arm
1100	690973	1	Rocker Arm Pivot

* Included in Gasket Set – Part No. 808390.
‡ Included in Valve Overhaul Kit – Part No. 808392

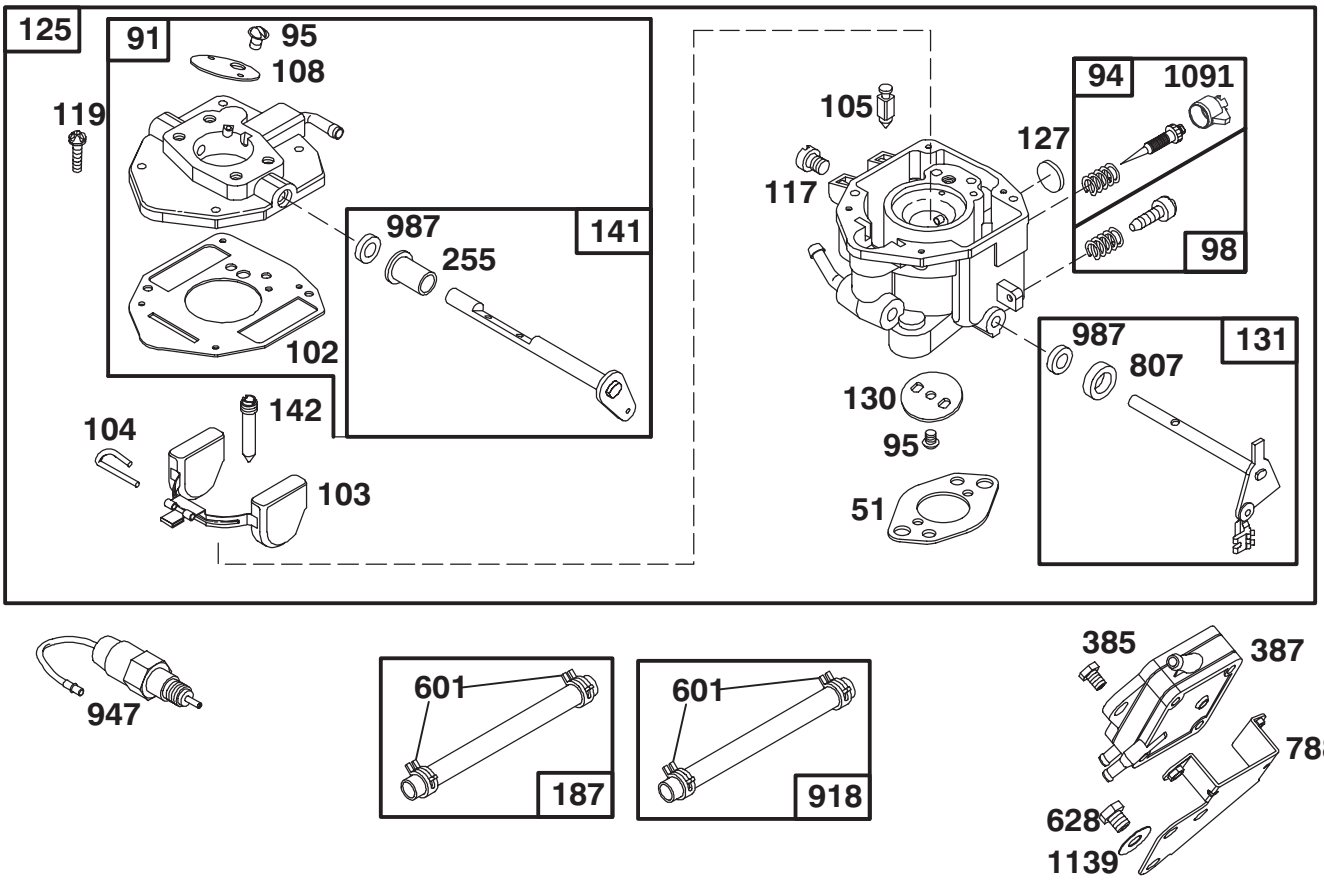


Assemblies include all parts shown in frames.

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
*51	805700	1	Carburetor Mtg. Gasket
91	807919	1	Upper Carburetor Body
‡94	808257	1	Idle Mixture Kit
95	805538	1	Screw
98	808177	1	Screw
‡102	805541	1	Carburetor Body Gasket
103	805546	1	Float Assembly
‡104	805545	1	Float Hinge Pin
‡105	805547	1	Float Needle Valve
108	805539	1	Choke Valve
117	805852	1	Main Jet
	805537	1	Main Jet (High Altitude)
119	805540	1	Screw
125	808251	1	Carburetor Assembly
‡127	690727	1	Welch Plug
130	805554	1	Throttle Valve
131	807720	1	Throttle Shaft
141	807722	1	Choke Shaft
‡142	690725	1	Carburetor Nozzle
187	691049	1	Fuel Line (Cut to Required Length)
‡255	690721	1	Choke Shaft Bushing
385	806361	1	Screw

Ref. No.	Part No.	Qty.	Description
387	692313	1	Fuel Pump
601	93807	1	Hose Clamp
628	805247	1	Screw
‡633	690722	1	Choke Shaft Seal
788	691559	1	Fuel Pump Bracket
‡807	805557	1	Throttle Spacer
918	296004	1	Vacuum Line (Cut to Required Length)
947	807664	1	Solenoid
‡1091	691516	1	Limiter Cap
1139	806479	1	Screw

* Included in Gasket Set – Part No. 808390.
‡ Included in Valve Overhaul Kit – Part No. 808392

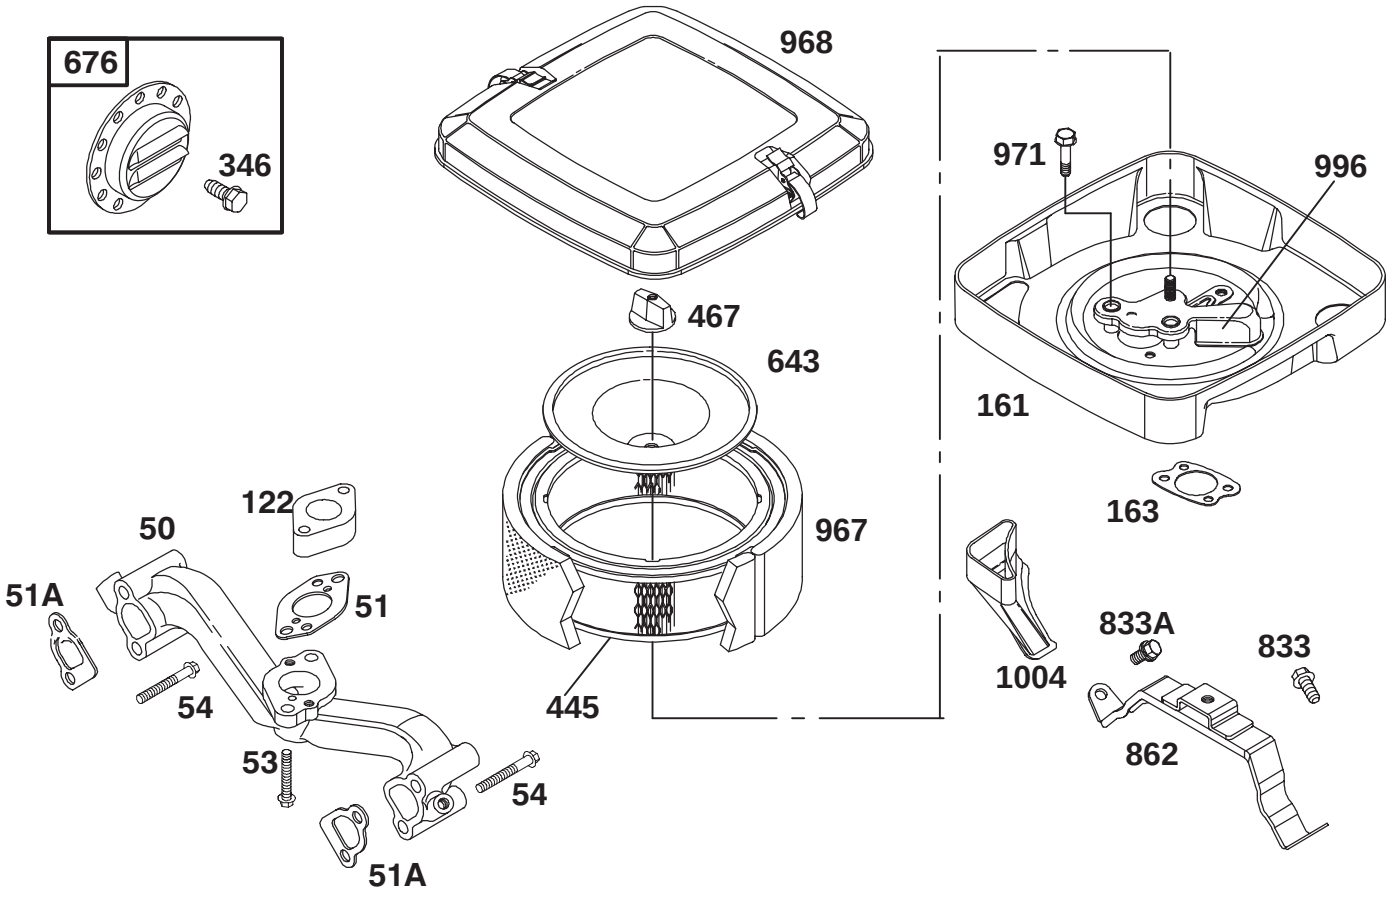


Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
50	690754	1	Intake Manifold
*51	805700	1	Intake Gasket
51A	805023	1	Intake Gasket
*‡52	805023	1	Intake Manifold Gasket
53	805466	1	Screw
54	690676	1	Screw
122	690691	1	Carburetor Spacer
161	691561	1	Air Cleaner Base
*163	805655	1	Air Cleaner Gasket
305	805406	1	Screw (M6 x 12 mm)
346	94896	1	Screw
445	394018	1	Air Filter
467	491875	1	Air Cleaner Knob
643	805631	1	Air Cleaner Plate
676	397630	1	Muffler Deflector
833	690872	1	Screw (M6 x 16 mm)
833A	690872	1	Screw (Air Cleaner Mounting Strap)
862	692153	1	Air Cleaner Bracket
967	272490	1	Air Filter
968	807862	1	Air Cleaner Cover
971	692537	1	Screw
996	691577	1	Carburetor Shield

Ref. No.	Part No.	Qty.	Description
1004	690743	1	Cleaner Mounting Strap


* Included in Gasket Set – Part No. 808390.
‡ Included in Valve Overhaul Kit – Part No. 808392.

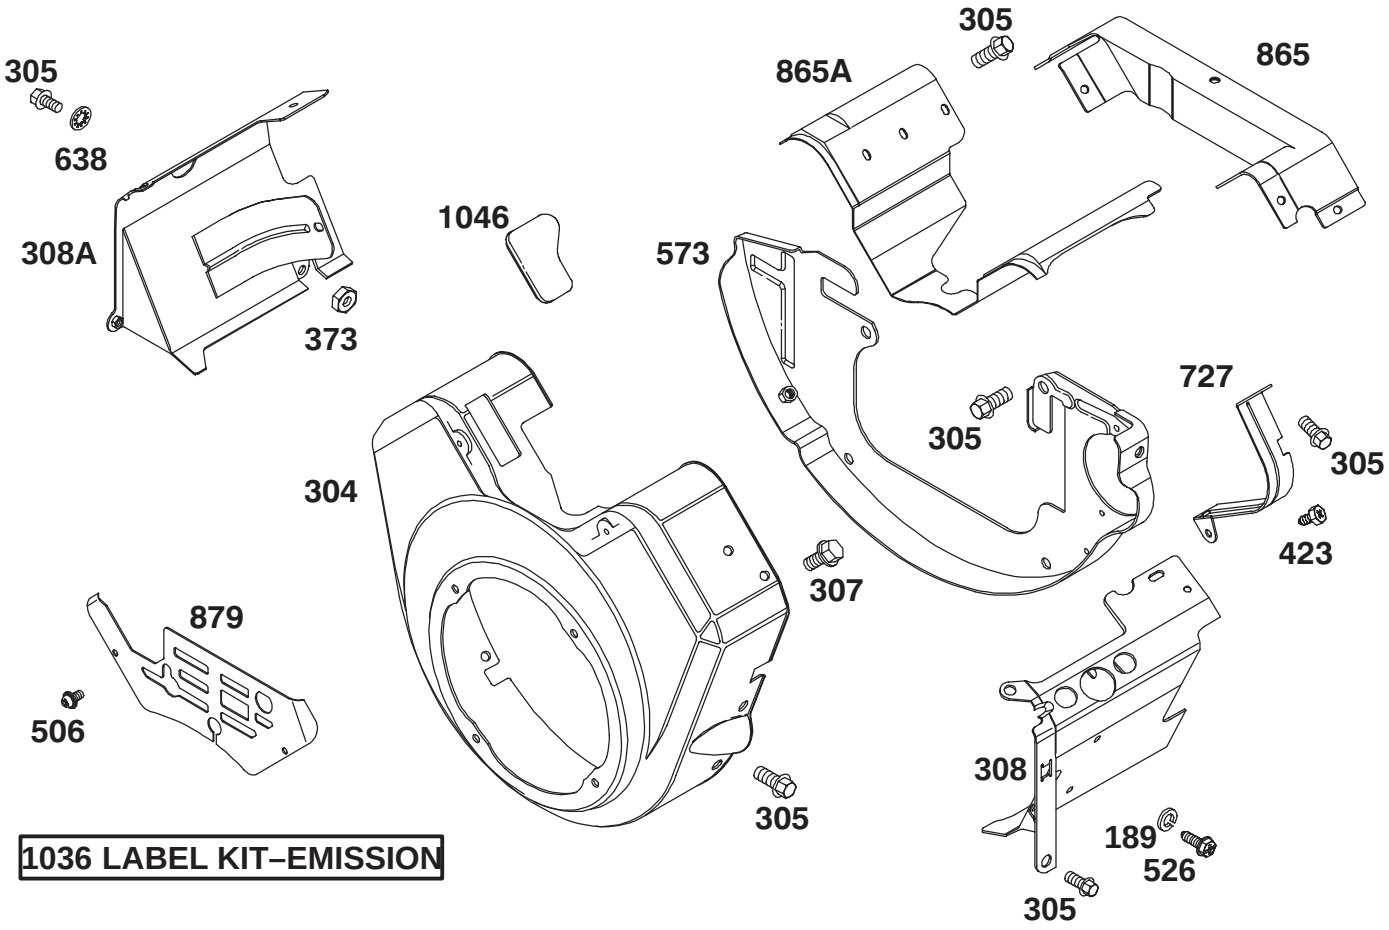

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
189	805449	1	Washer
304	808408	1	Blower Housing
305	692539	1	Screw
307	805025	1	Screw
308	692806	1	Air Guide Cover (Cyl. #1)
308A	692805	1	Air Guide Cover (Cyl. #2)
373	805383	1	Nut
423	805260	1	Screw
506	690677	1	Screw
526	805448	1	Screw
573	690902	1	Back Plate
638	691551	1	Lock Washer
727	690714	1	Starter Shield
865	690901	1	Air Guide Cover
865A	690750	1	Air Guide Cover
879	690757	1	Carburetor Cover
1036	806687	1	Emission Label Kit
1046	805753	1	Blower Housing Plug

Ref. No.	Part No.	Qty.	Description

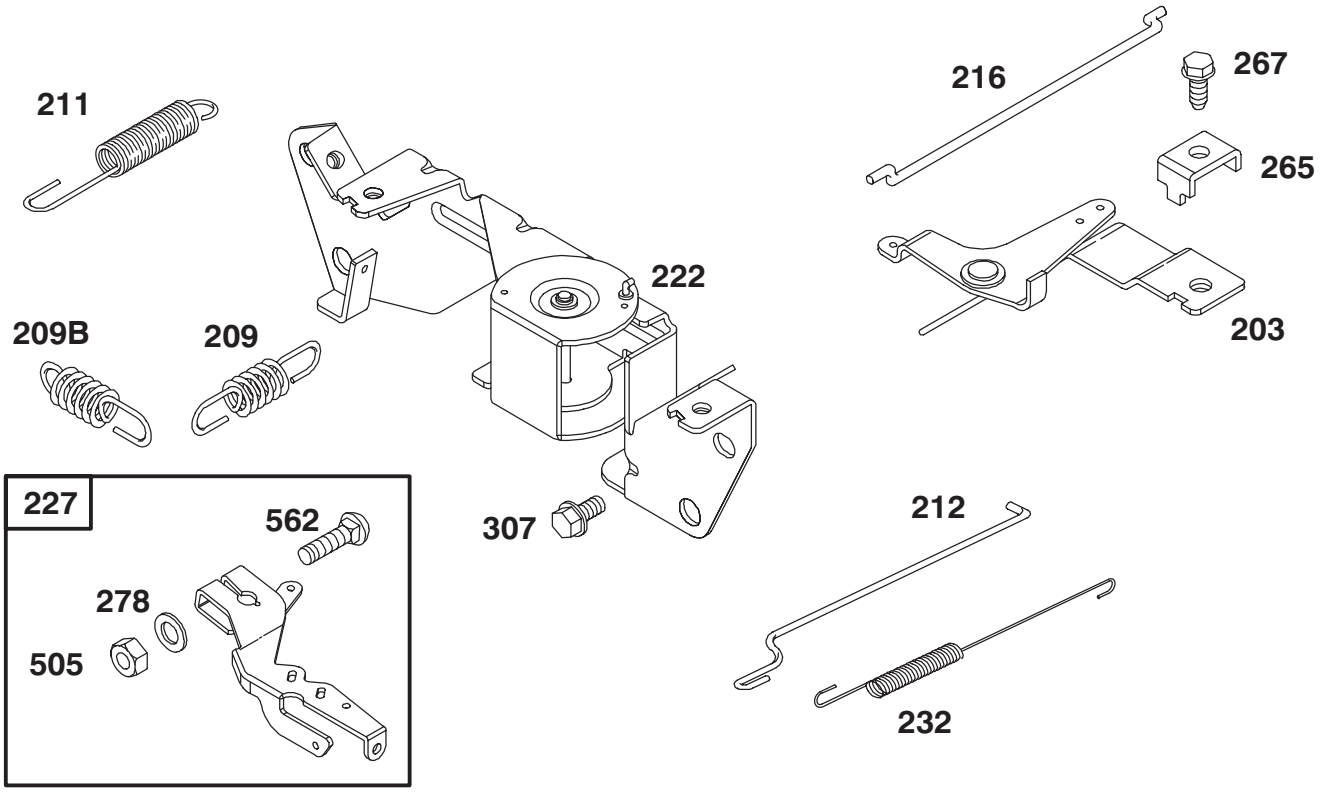


Assemblies include all parts shown in frames.

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
203	690923	1	Choke Control Bracket
209	805463	1	Governor Spring
209B	805453	1	Governor Spring
211	805450	1	Governed Idle Spring
212	690712	1	Governor Link
216	805439	1	Choke Link
222	808454	1	Governor Control Bracket
227	690236	1	Governor Lever Assembly
232	805465	1	Governor Link Spring
265	221535	1	Casing Clamp
267	692083	1	Screw
278	690237	1	Washer
505	690238	1	Nut (Governor Control Lever)
562	690239	1	Carriage Bolt

Ref. No.	Part No.	Qty.	Description

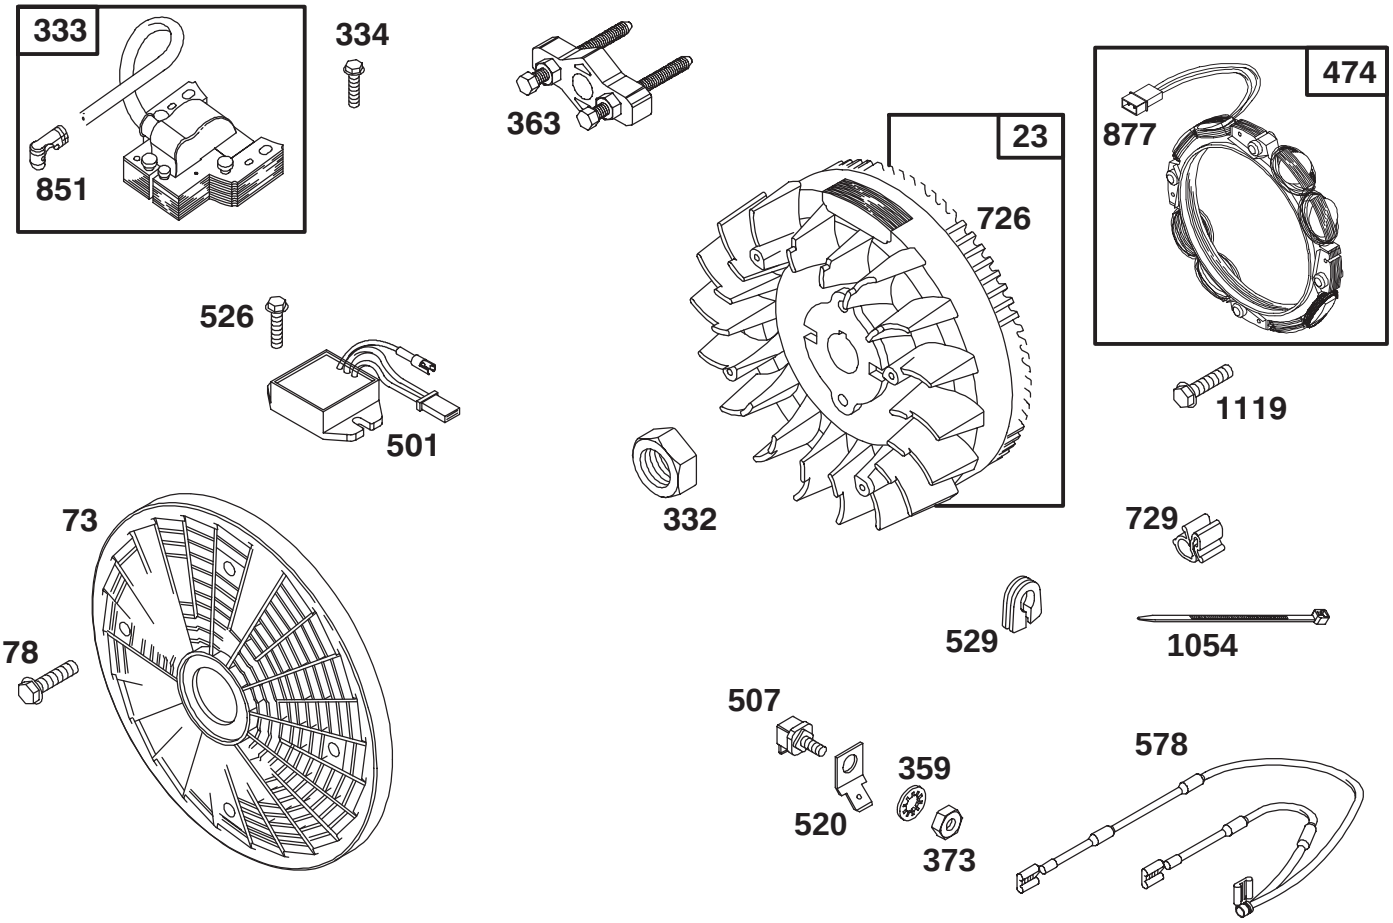


Assemblies include all parts shown in frames.

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
23	808766	1	Magneto Flywheel
73	494439	1	Rotating Screen
78	805447	1	Screw
332	690887	1	Nut
333	492341	1	Magneto Armature
359	691077	1	Washer (Internal Tooth)
363	19203	1	Flywheel Puller
373	90576	1	Nut
474	393295	1	Alternator Stator
501	394890	1	Alternator Regulator
507	398525	1	Insulator
520	691084	1	Spade Terminal
526	805448	1	Screw
529	690744	1	Grommet
578	493792	1	Stop Wire
726	808162	1	Flywheel Ring Gear (Includes Mounting Hardware)
729	690586	1	Wire Clip
851	493880	1	Ignition Cable Terminal
877	393537	1	Alternator Wire
1054	280275	1	Cable Tie
1119	691552	1	Screw


Ref. No.	Part No.	Qty.	Description

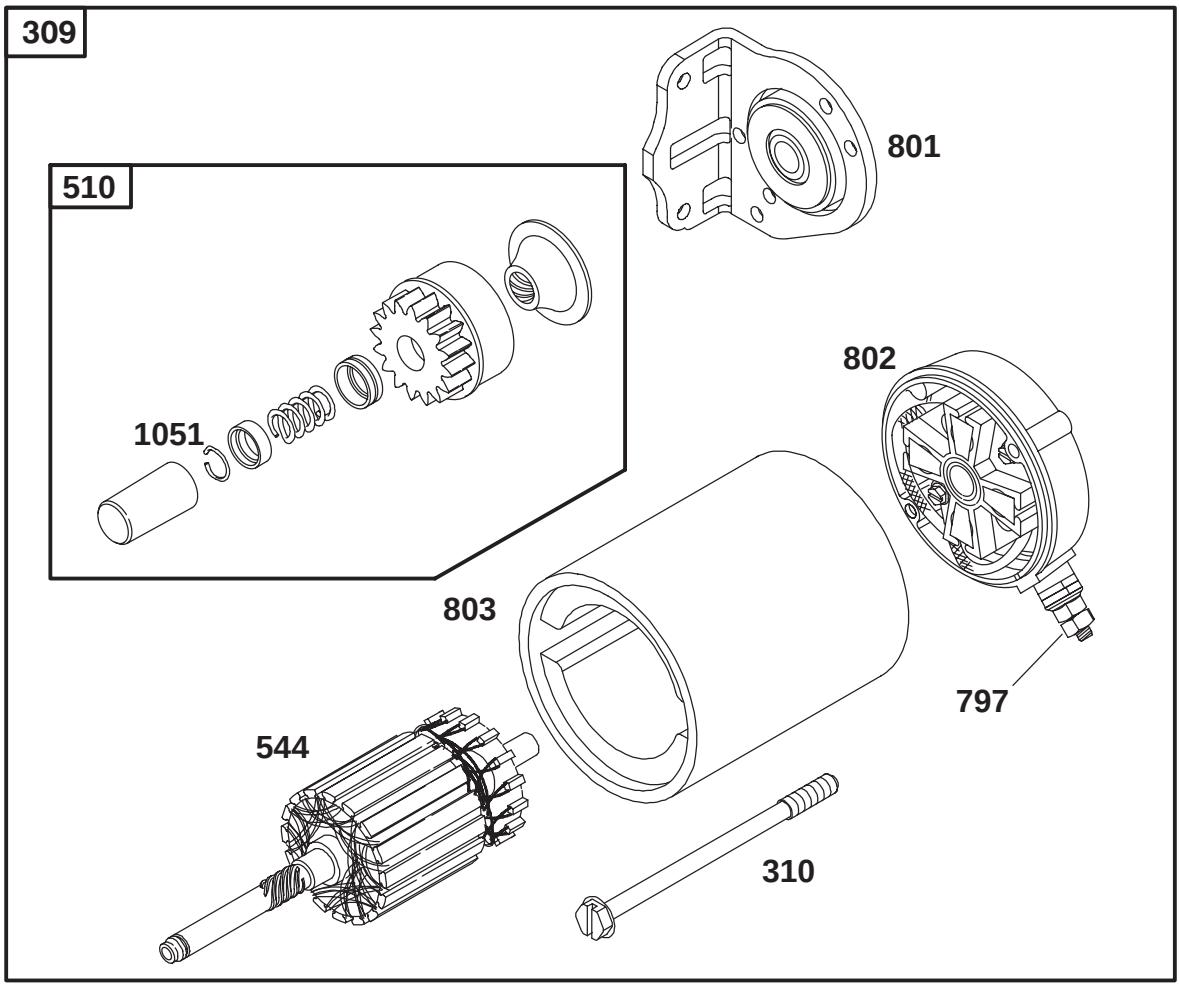

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
188	805247	1	Screw
309	691564	1	Starter Motor
310	496813	1	Bolt
510	496881	1	Starter Drive
544	690855	1	Starter Armature
797	691029	1	Nut
801	808778	1	Drive Cap
802	496813	1	End Cap **Note:** Includes 496887 Brush Set
803	690854	1	Starter Housing
1051	691124	1	Lock Ring

Ref. No.	Part No.	Qty.	Description

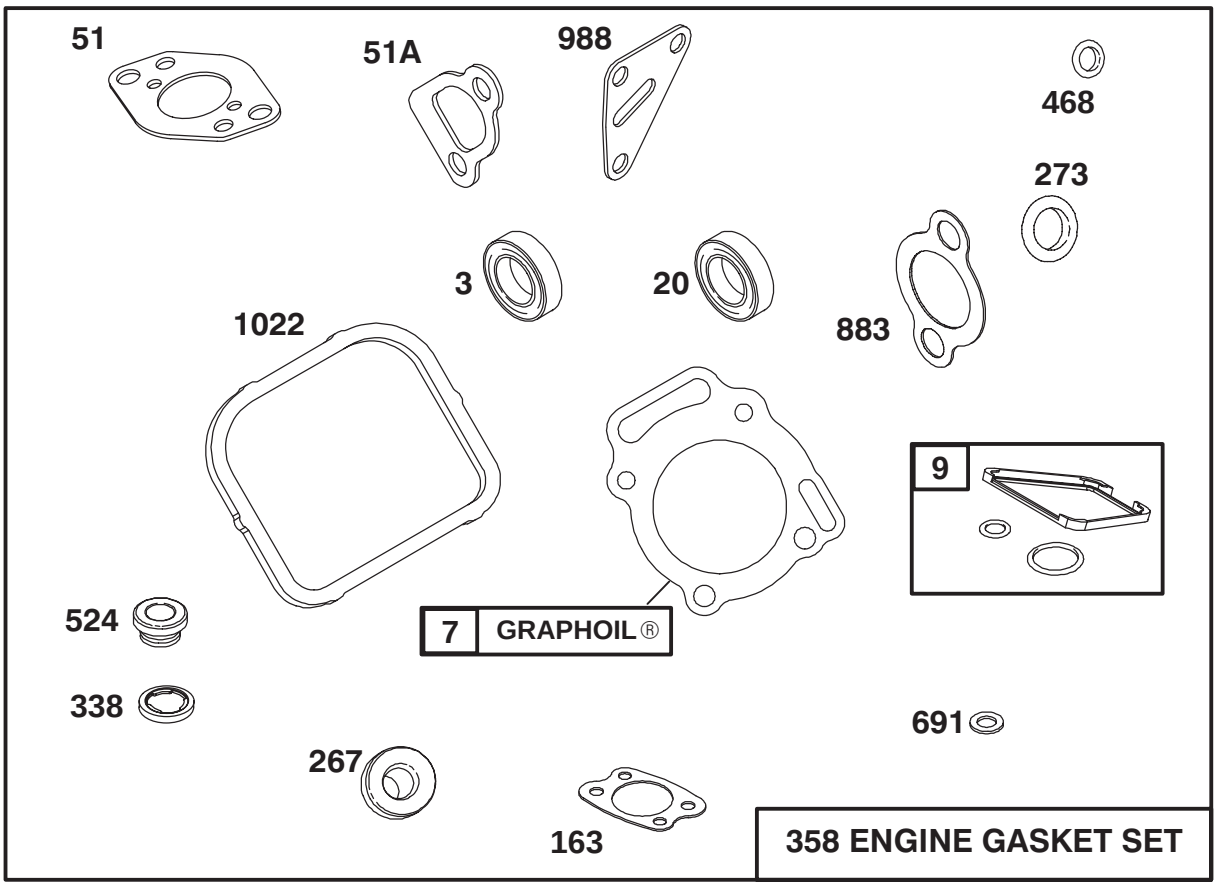


Assemblies include all parts shown in frames.


Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
*3	805101	1	Oil Seal (Magneto Side)
*‡7	806085	1	Cylinder Head Gasket
*9	807688	1	Breather Gasket
*20	805049	1	Oil Seal (PTO Side)
*51	805700	1	Intake Gasket
*‡51A	805023	1	Intake Gasket
*163	805655	1	Air Cleaner Gasket
*‡267	805420	1	Sealing Washer
*273	690681	1	O–Ring Seal (Oil Pump)
*‡338	691312	1	Dipstick Gasket
358	808390	1	Engine Gasket Set
*468	690690	1	O–Ring Seal (Oil Pump Screen)
*524	693172	1	Dipstick Tube Seal
*691	690680	1	Governor Shaft Seal
*‡883	805024	1	Exhaust Gasket
*988	805250	1	Oil Filter Adapter Gasket
*‡1022	806039	1	Rocker Cover Gasket

Ref. No.	Part No.	Qty.	Description

* Included in Gasket Set – Part No. 808390.
‡ Included in Valve Overhaul Kit – Part No. 808392.

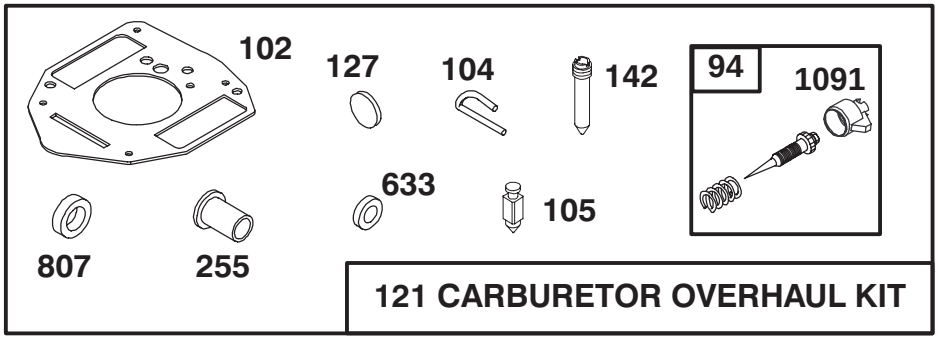

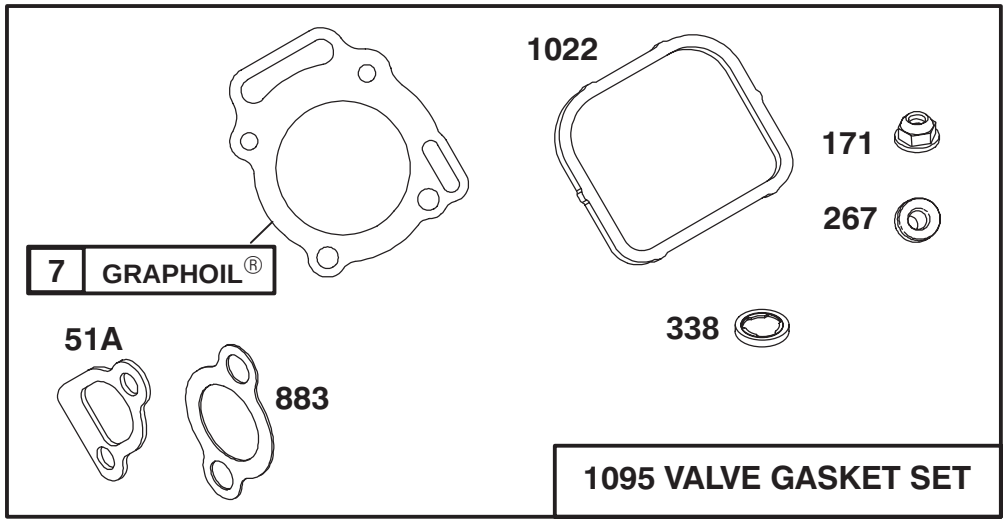

Assemblies include all parts shown in frames.

Engine – Briggs and Stratton Model 303447–1408–E1

Ref. No.	Part No.	Qty.	Description
*‡7	806085	1	Cylinder Head Gasket
*‡51A	805023	1	Intake Gasket
†94	808257	1	Idle Mixture Kit
†102	805541	1	Carburetor Body Gasket
†104	690723	1	Float Hinge Pin
†105	805547	1	Float Needle Valve
121	808273	1	Carburetor Overhaul Kit
†127	690727	1	Welch Plug
†142	690725	1	Carburetor Nozzle
‡171	805019	1	Nut (Air Cleaner)
†255	690721	1	Choke Shaft Bushing
*‡267	805420	1	Sealing Washer
*‡338	691312	1	Dipstick Gasket
†633	690722	1	Choke Shaft Seal
†807	805557	1	Throttle Spacer
*‡883	805024	1	Exhaust Gasket
*‡1022	806039	1	Rocker Cover Gasket
†1091	691516	1	Limiter Cap
1095	808392	1	Valve Gasket Set

Ref. No.	Part No.	Qty.	Description

* Included in Gasket Set – Part No. 808390.
† Included in Carburetor Kit – Part No. 808273.
‡ Included in Valve Overhaul Kit – Part No. 808392.


TORO®