Form No. 3324–672

Blower Assembly

42” & 48” Vac/Baggers

Part No. 104–2486

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000
All Rights Reserved

3324–672

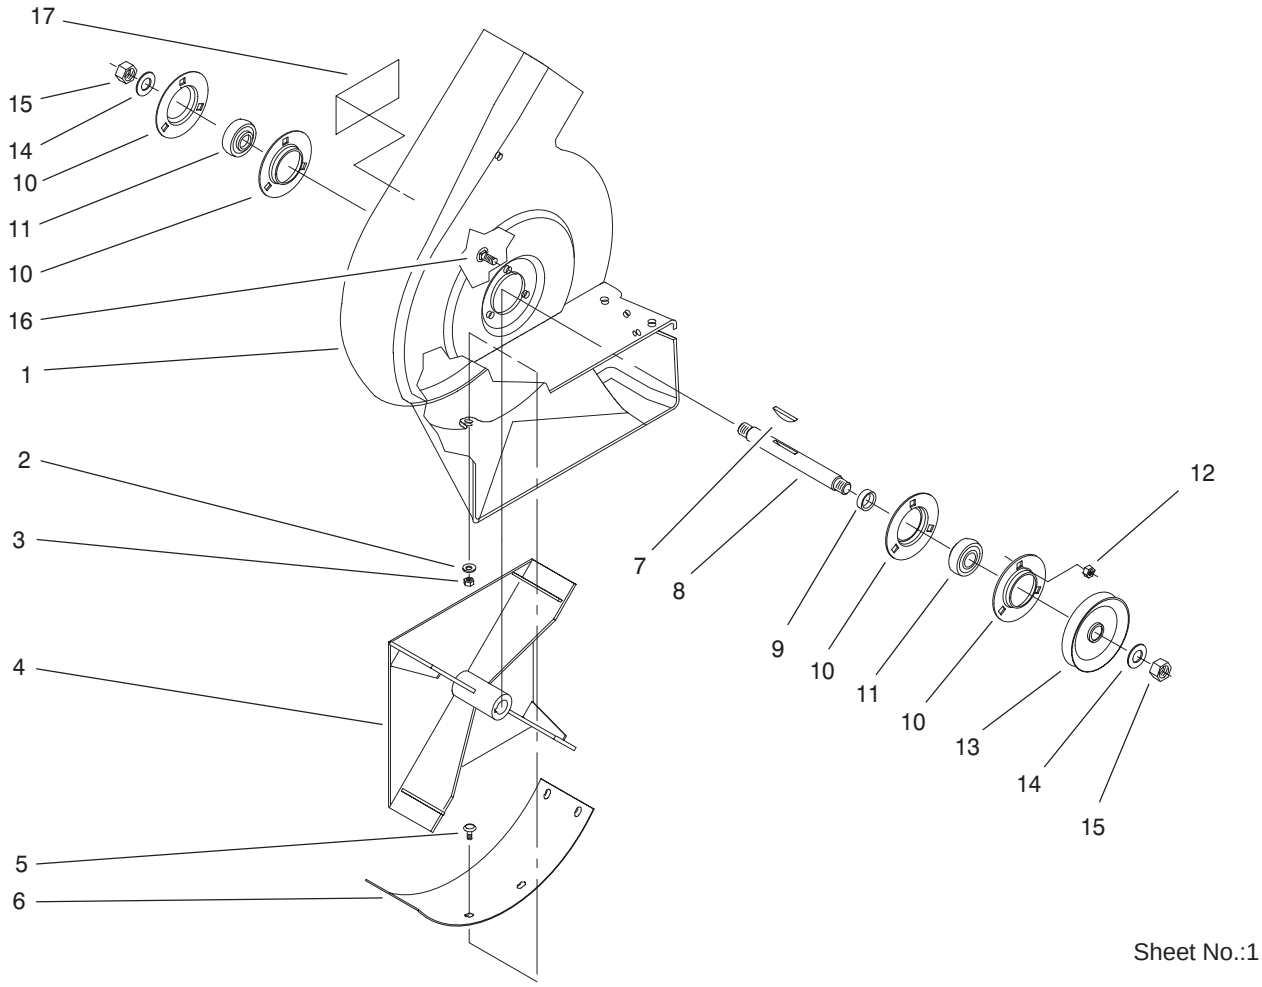

Sheet No.:1

Blower Assembly

Ref. No.	Part No.	Qty.	Description
1	79–6890	1	Housing–Blower Vac
2	3256–22	6	Washer–Flat
3	3296–56	6	Nut–Lock, NI
4	79–4300–03	1	Impeller
5	3229–11	6	Screw–CARR
6	79–7170	1	Cover–Blower, Bottom
7	3257–40	1	Key–Hi–Pro
8	79–1470	1	Shaft–Blower
9	92–9684	1	Spacer
10	251–341	4	Flange
11	251–288	2	Bearing–Ball
12	32128–20	6	Nut–HF
13	79–1460	1	Pulley–Blower
14	3253–8	2	Washer–Lock/Sp
15	3220–6	2	Nut–Jam
16	3230–16	6	Screw–HH
17	93–6658	1	Decal – Warning

Ref. No.	Part No.	Qty.	Description