Form No. 3324–687

266–H and 266–HE

Yard and Garden Tractor

Model No. 72052 and 72072—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

Contents

Description	Page
Hood and Grill Assembly	4
Hydro Drive Assembly	5
Front Axle Assembly	6
Battery Assembly	7
Fuel Tank Assembly	8
Lower Steering Assembly	9
Steering Wheel and Tilt Assembly	10
Hoodstand and Firewall Assembly	11
Lift Lever Arm and Height–Of–Cut Assembly	12
Hydraulic Brake Assembly	13
Hydraulics Controls Assembly	14
Frame Assembly	15
Hydrostatic Transaxle Assembly	16
Engine, Muffler and PTO Assembly	17
Fender and Footrests Assembly	18
Seat Assembly	19
Dash Assembly	20
Rear Wheels Assembly	21
Cruise Control Assembly	22
Housing and Fan Assembly	23
Differential Gear Assembly	24
Brake Assembly	25
Cylinder Block Assembly	26
Schematic	27
Crankshaft Assembly Kohler Models CV460S–26505 and CV460S–26506	28
Crankcase Assembly Kohler Models CV460S–26505 and CV460S–26506	29
Oil Pan / Lubrication Assembly Kohler Models CV460S–26505 and CV460S–26506	30
Cylinder Head / Valve / Breather Assembly Kohler Models CV460S–26505 and CV460S–26506	31
Ignition / Electrical Assembly Kohler Models CV460S–26505 and CV460S–26506	32
Blower Housing & Baffles Assembly Kohler Models CV460S–26505 and CV460S–26506	33
Starting System Assembly Kohler Models CV460S–26505 and CV460S–26506	34
Fuel System Assembly Kohler Models CV460S–26505 and CV460S–26506	35
Engine Controls Assembly Kohler Models CV460S–26505 and CV460S–26506	36
Air Intake / Filtration Assembly Kohler Models CV460S–26505 and CV460S–26506	37
Exhaust Assembly Kohler Models CV460S–26505 and CV460S–26506	38


Accessories

Description	Model / Part No.
38” Side Discharge Mower (Model No. 72052 Only)	Model No. 78216
42” Side Discharge Mower (Model No. 72052 Only)	Model No. 78231
48” Side Discharge Mower (Model No. 72052 Only)	Model No. 78261
52” Side Discharge Mower (Model No. 72052 Only)	Model No. 78281
38” Side Discharge Mower (Model No. 72072 Only)	Model No. 78218
42” Side Discharge Mower (Model No. 72072 Only)	Model No. 78232
48” Side Discharge (Model No. 72072 Only)	Model No. 78268
11 Cubic Foot Twin Bagger (For 38” SD Mower)	Model No. 79202
11 Cubic Foot Twin Bagger (For 42” & 48” SD Mower)	Model No. 79203
36” Tiller	Model No. 79271
48” Dozer Blade	Model No. 79253
42” Snowthrower	Model No. 79263
38” Recycler Kit	Model No. 79170
Indicator Lights (Model No. 72072 Only)	Part No. 98–6831
Baffle Kit – 42” SD Mower	Model No. 85501
48” Blade Adapter	Part No. 92–6828
42” Snowthrower Adapter	Part No. 93–7625
48” Recycler Kit	Model No. 79195
48” Blade Skid Shoe	Part No. 92–6840
Cruise Control Kit	Part No. 93–0510
Rear Wheel Weights	Part No. 81115
Front Wheel Weights	Part No. 81214
Tire Chains	Part No. 82522
Cab	Part No. 79911
R.H. Cleat Tire	Part No. 92–6789
L.H. Cleat Tire	Part No. 92–6790
Non Metalic Hubcap – 8”	Part No.94–3717
Non Metalic Hubcap – 12”	Part No.94–3718

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

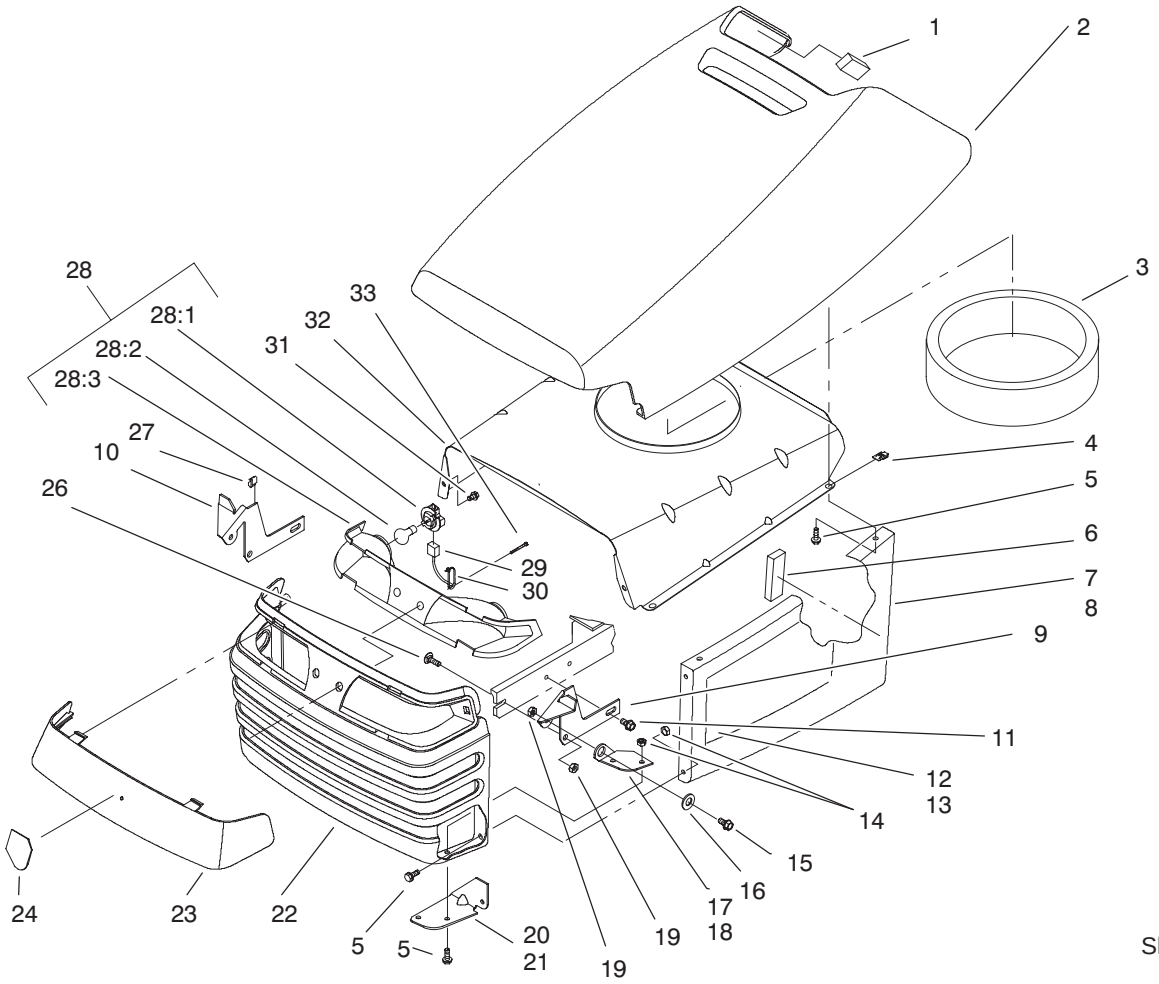


Sheet No.:2

Hood and Grill Assembly

Ref. No.	Part No.	Qty.	Description
1	94–1980	2	Foam – Hood
2	92–6658	1	Hood – Top
3	92–7077	1	Seal–Air Inlet
4	92–7006	4	Nut
5	32105–15	12	Screw
6	92–7148	2	Foam – Sidepanel
7	92–6652	1	Side–LH Hood
*8	92–6650	1	Side–RH Hood
9	92–6918–03	1	Bracket–Hinge, LH
10	92–6917–03	1	Bracket–Hinge, RH
11	32144–14	2	Screw–HWH
12	95–0801	1	Decal–Hood, LH
*13	95–0800	1	Decal–Hood, RH
14	32128–10	8	Locknut–Flange
15	322–3	2	Screw–HH
16	105503	2	Bushing
17	92–6997–03	1	Hinge–Hood, LH
*18	92–6996–03	1	Hinge–Hood, RH
19	3296–29	4	Nut–Lock
20	92–7049–03	1	Bracket–Hood Hinge, RH
*21	92–7048–03	1	Bracket–Hood Hinge, LH
22	100–1344	1	Grill
23	92–6656	1	Lens – Headlight
24	92–6987	1	Emblem–Horsehead

Ref. No.	Part No.	Qty.	Description
26	3230–1	2	Screw–CARR
27	519337	1	Clip–Cable
28	88–3970	1	Reflector & Lamp ASM
28:1	111686	2	Socket–Light
28:2	7228	2	Bulb –No. 1156
28:3	93–8741	1	Reflector
29	88–4320	1	Wire Harness–Lights
30	614249	1	Tie–Strap
31	46–8093	2	Screw–Plastite
32	92–6914–03	1	Baffle–Hood, Upper
33	32144–32	2	Screw

* Not illustrated

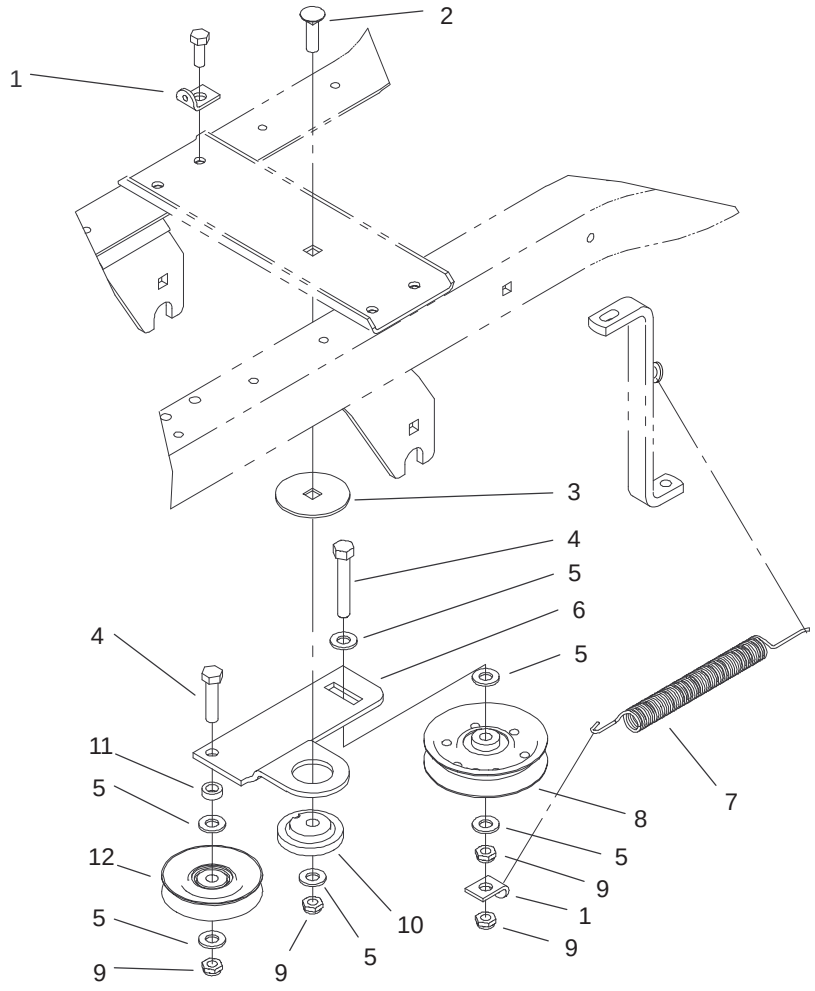


Sheet No.:3

Hydro Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	2534	2	Clip – Spring
2	3231–25	1	Screw–CARR
3	111419	1	Bearing–Washer
4	323–10	2	Screw–HH
5	3256–24	6	Washer–Flat
6	92–6900	1	Arm – Idler
7	79–7530	1	Spring – Clutch
8	92–7101	1	Pulley – Flat Idler
9	3296–59	4	Nut–Lock NI
10	111418	1	Bushing
11	93–3658	1	Spacer
12	92–7102	1	Pulley – Idler

Ref. No.	Part No.	Qty.	Description

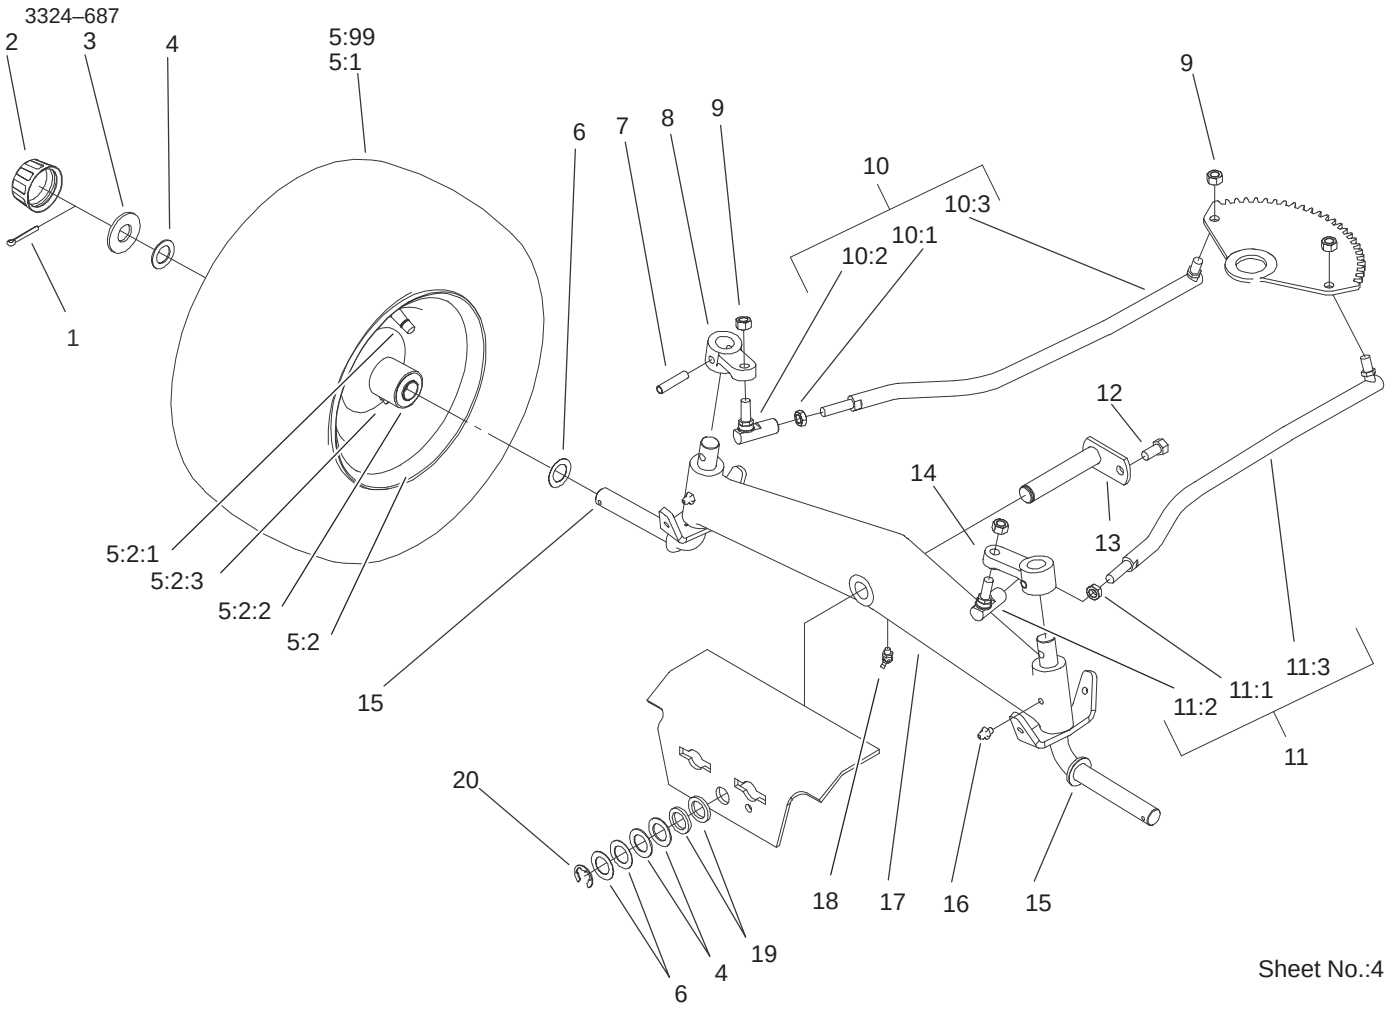


Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3272–17	2	Pin–Cotter
2	61–9780	2	Cap–Hub
3	28–2480	2	Washer
4	1278	4	Washer
5		2	Front Wheel & Tire ASM
5:1	99–2336	1	Tire
5:2	93–9801	1	Wheel ASM
5:2:1	5108	1	Valve
5:2:2	110513	2	Bearing–Wheel
5:2:3	109500	1	Zerk–Grease
*5:99	105293	1	Tube–Inner
6	5210	4	Washer–Shim
7	933270	2	Pin
8	78–1950–01	1	Arm–Front Spindle
9	9150026	4	Nut
10	92–6883	1	Linkage–Steering, RH
10:1	9150854	1	Nut–Jam
10:2	78–2920	1	Ball–Joint
10:3	78–5801	1	Ball Link ASM
11	92–6884	1	Linkage–Steering, LH
11:1	9150854	1	Nut–Jam
11:2	78–2920	1	Ball–Joint
11:3	78–5811	1	Ball Link ASM
12	9267154	1	Screw
13	92–7057–03	1	Pin–Axle

Ref. No.	Part No.	Qty.	Description
14	78–1940–01	1	Arm–Front Spindle
15	78–2601–01	2	Spindle
16	302–5	2	Fitting–Grease
17	78–7960–01	1	Axle–Front
18	302–11	1	Fitting–Lube, 45 DEG
19	9202324	2	Washer
20	5618	1	E–Ring

* Not illustrated

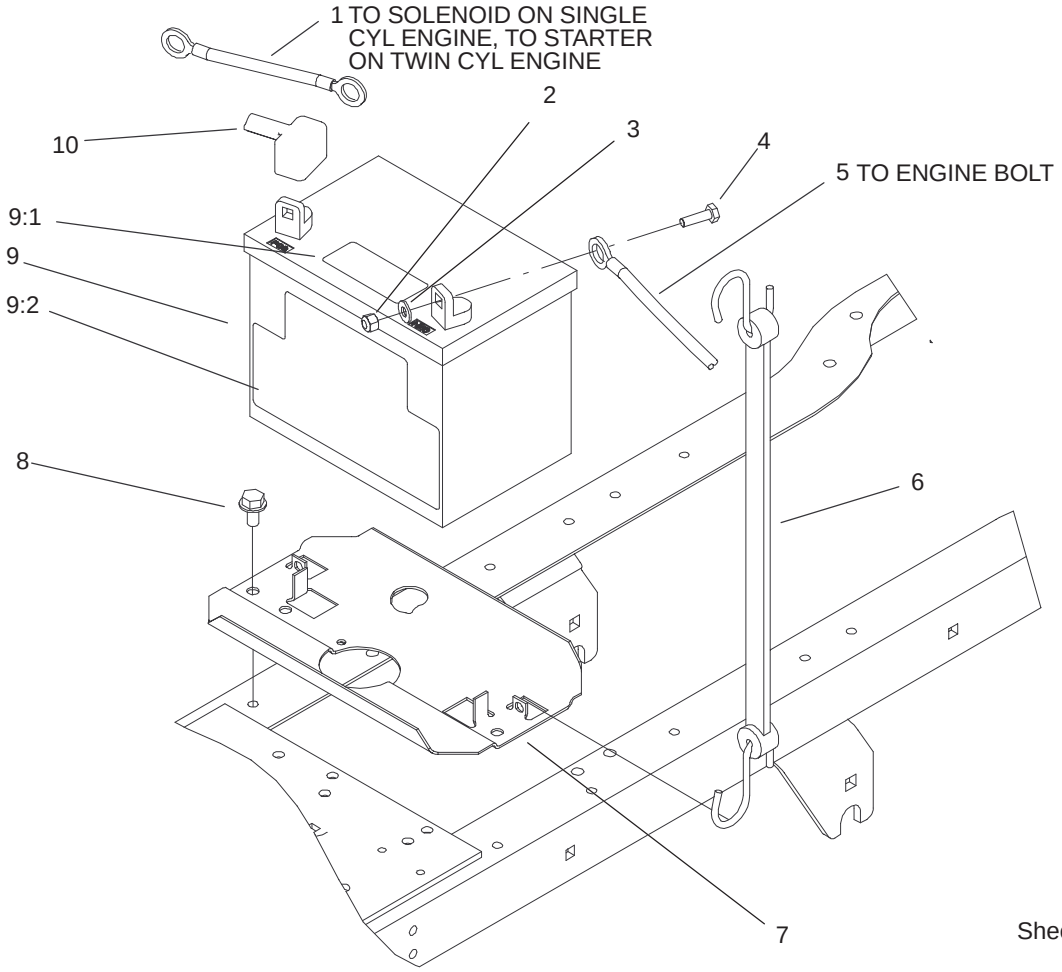


Sheet No.:6

Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	100–4186	1	Battery Cable–Red
2	3296–42	2	Nut–Lock, NI
3	3256–22	2	Washer–Flat
4	321–5	2	Screw–HH
5	111078	1	Wire – Black
6	104–2467	1	Hold–Down, Battery
7	104–5016–03	1	Plate–Battery
8	32144–14	2	Screw–HWH
9	104–2491	1	Battery
9:1	104–4163	1	Decal–Battery
9:2	104–5091	1	Decal–Battery
10	28–8080	1	Boot–Terminal

Ref. No.	Part No.	Qty.	Description

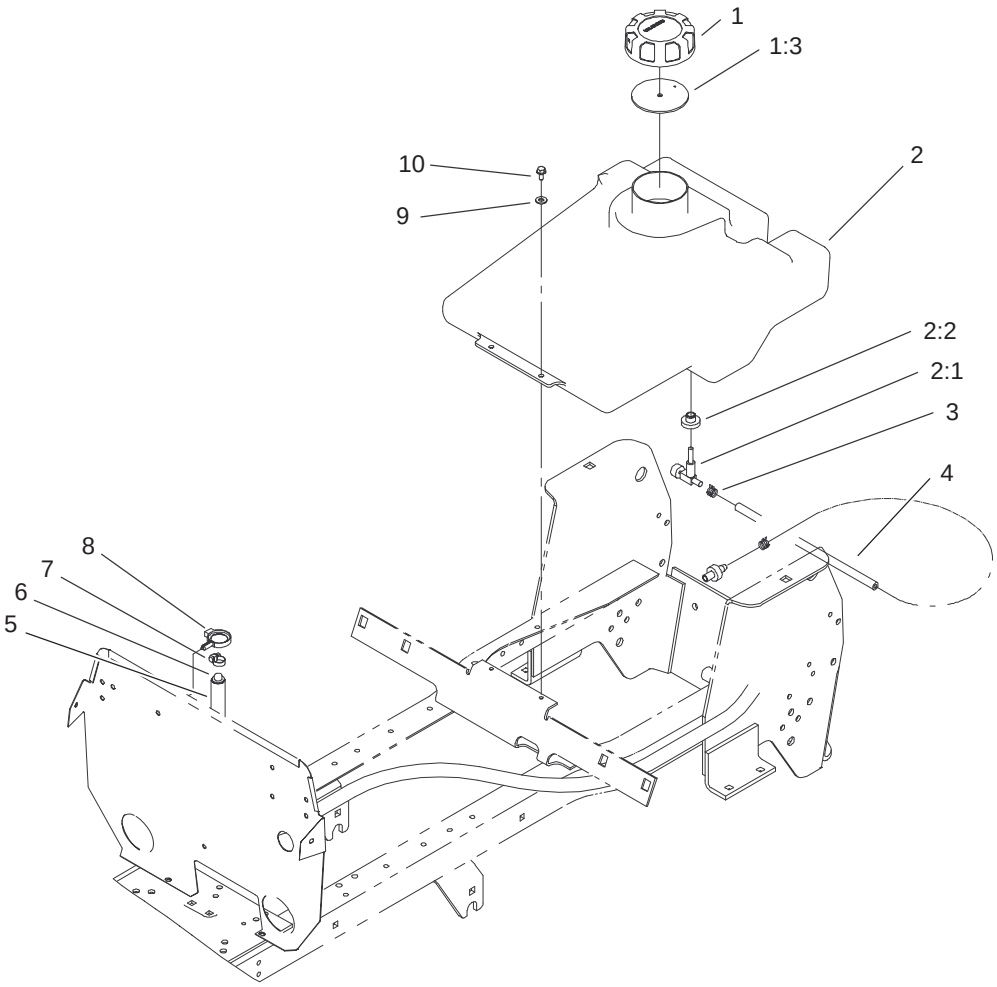


Sheet No.:7

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	88–3980	1	Gas Cap ASM
1:3	88–4010	1	Gasket–Cap, Gas
2	94–6928	1	Tank – Gas
2:1	104048	1	Valve–Fuel
2:2	104047	1	Bushing
3	2412–98	2	Clamp
4	92–6754	1	Hose – Fuel Line
5	100–6072	1	Hose–Breather
6	93–3817	1	Fitting–Vent
7	2412–119	1	Clamp–Worm
8	104–2490	1	Clamp–Hose
9	3256–22	2	Washer–Flat
10	32144–4	2	Screw–HWH

Ref. No.	Part No.	Qty.	Description

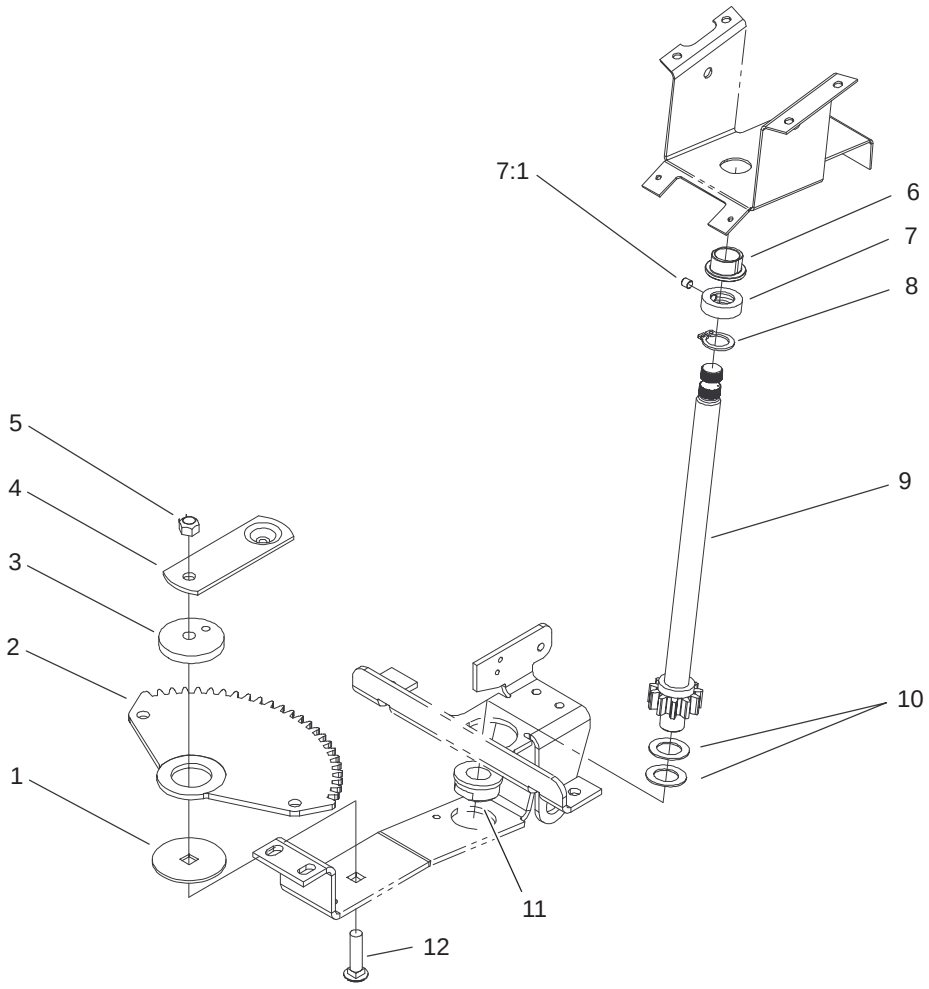


Sheet No.:8

Lower Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	111419	1	Bearing–Washer
2	78–2610	1	Gear–Sector
3	111418	1	Bushing
4	78–9150–03	1	Plate
5	108881	1	Nut
6	109189	1	Bearing–Flanged
7	111383	1	Collar
7:1	3245–32	1	Screw–HS
8	111646	1	Ring–Retaining
9	92–6702	1	Shaft–Lower Steering
10	1278	2	Washer
11	110391	1	Bearing–Wheel
12	3231–4	1	Screw–CARR

Ref. No.	Part No.	Qty.	Description

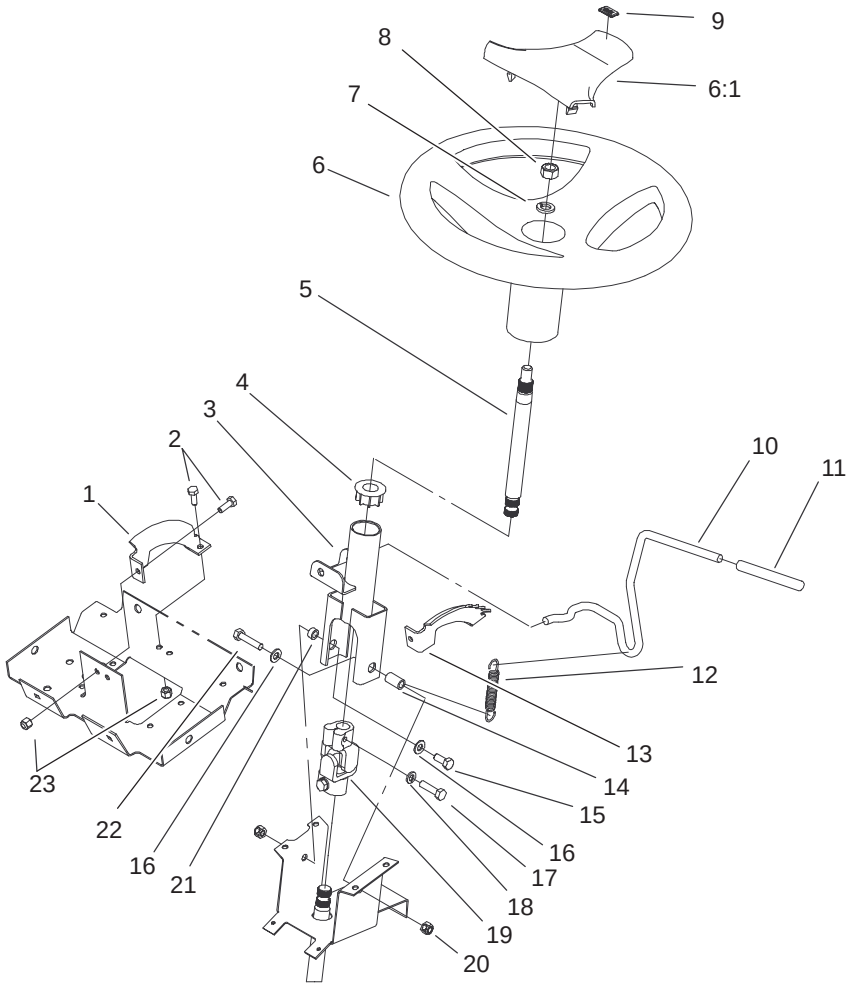


Sheet No.:9

Steering Wheel and Tilt Assembly

Ref. No.	Part No.	Qty.	Description
1	92–6777–03	1	Bracket – Support Column
2	321–4	4	Screw–HH
3	93–1148–03	1	Column
4	93–1146	1	Bushing–Upper, Steering
5	94–2874	1	Shaft–Short, Steering
6	98–1471	1	Wheel–Steering (only on: 72052)
6	98–1472	1	Wheel – Steering, Toro (only on: 72072)
6:1	98–1468	1	Cover–Wheel, Steering
7	3253–7	1	Washer–Lock
8	3217–9	1	Nut–HH
9	98–1459	1	Decal–Toro
10	92–6971	1	Lever – Tilt
11	92–6798	1	Cap–Rod, Tilt
12	93–1357	1	Spring – Extension, Steering
13	92–6776	1	Bracket – Detent
14	92–6999	1	Spacer – Yoke
15	322–3	1	Screw–HH
16	3256–23	2	Washer–Flat
17	33114–030	2	Screw–HH
18	3253–4	2	Washer–Lock

Ref. No.	Part No.	Qty.	Description
19	92–6717	1	U Joint – Steering
20	3296–29	2	Nut–Lock
21	92–6998	1	Spacer – Yoke Right
22	322–17	1	Screw–HH
23	3296–8	4	Nut–Lock NI

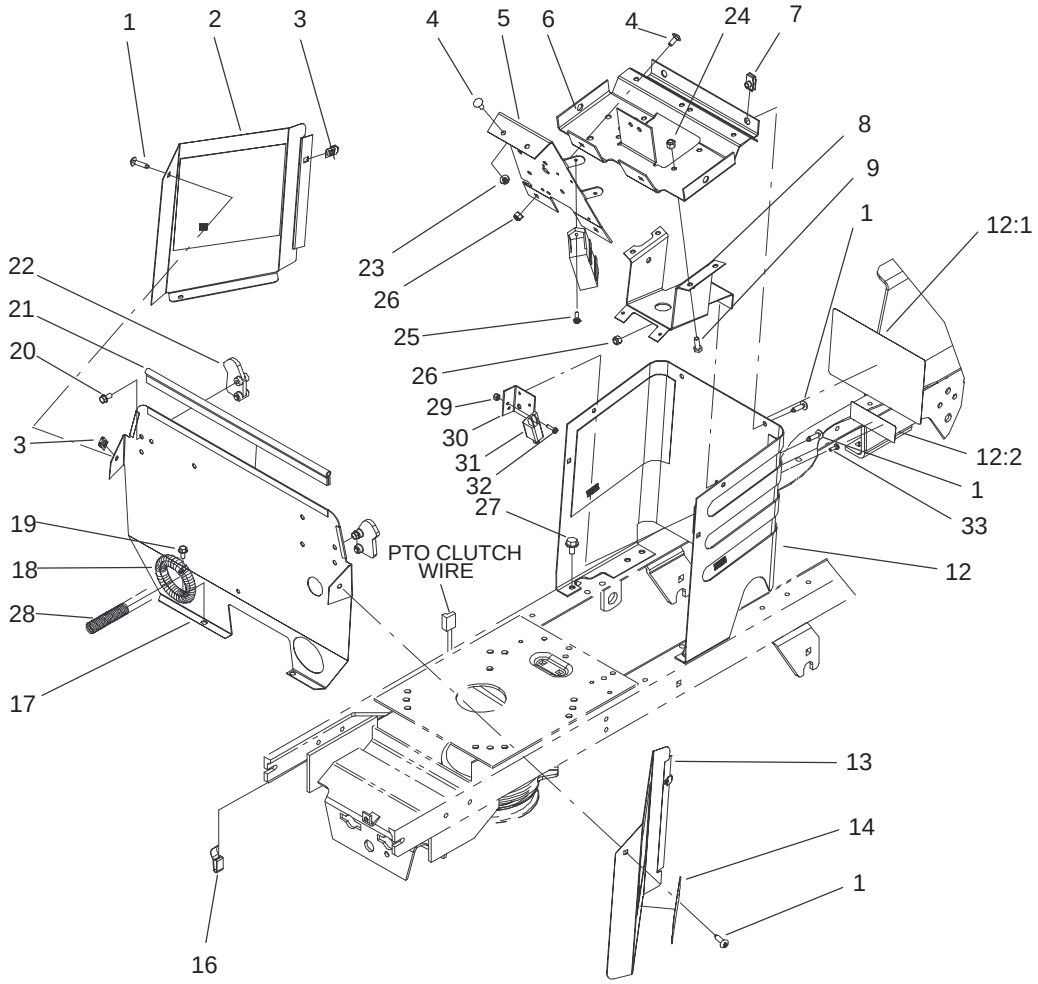


Sheet No.:10

Hoodstand and Firewall Assembly

Ref. No.	Part No.	Qty.	Description
1	92–7020	9	Screw–HH
2	92–6937–03	1	Cover–RH Side
3	92–7006	4	Nut
4	3229–11	4	Screw–CARR
5	104–5015–03	1	Panel–Support, Dash
6	92–6859–03	1	Support – Dash
7	107069	4	Clip
8	92–6778–03	1	Bracket–Lower Column
9	321–4	4	Screw–HH
12		1	Hoodstand ASM (only on: 72052)
12	104–5062	1	Hoodstand ASM W/ Decals (He) (only on: 72072)
12:1	83–6620	1	Decal – Instruction
12:2	93–7313	1	Decal–Slope/Hydro (only on: 72072)
12:2	93–0302	1	Decal – Danger (only on: 72052)
13	92–6936–03	1	Cover–LH Side
14	104–4694	2	Decal–266 Hydro
16	212–93	1	Clamp–Casing
17	104–0818–03	1	Firewall
18	24–7924	2	Cover–Drive Shaft
19	32144–4	2	Screw–HWH


Ref. No.	Part No.	Qty.	Description
20	46–8093	2	Screw–Plastite
21	93–1131	1	Trim–Seal Firewall
22	92–6960	2	Latch – Hood
23	32149–2	2	Nut
24	3296–8	4	Nut–Lock NI
25	32144–8	2	Screw–HH
26	3296–42	3	Nut–Lock, NI
27	32144–14	2	Screw–HWH
28	104–2458	1	Wire Harness–266h
29	3296–1	2	Nut–Lock NI
30	104–0833–03	1	Bracket–Parking Brake
31	95–1653	1	Switch – Single Pole
32	3290–392	2	Screw – HHF
33	32104–118	2	Screw–PPH

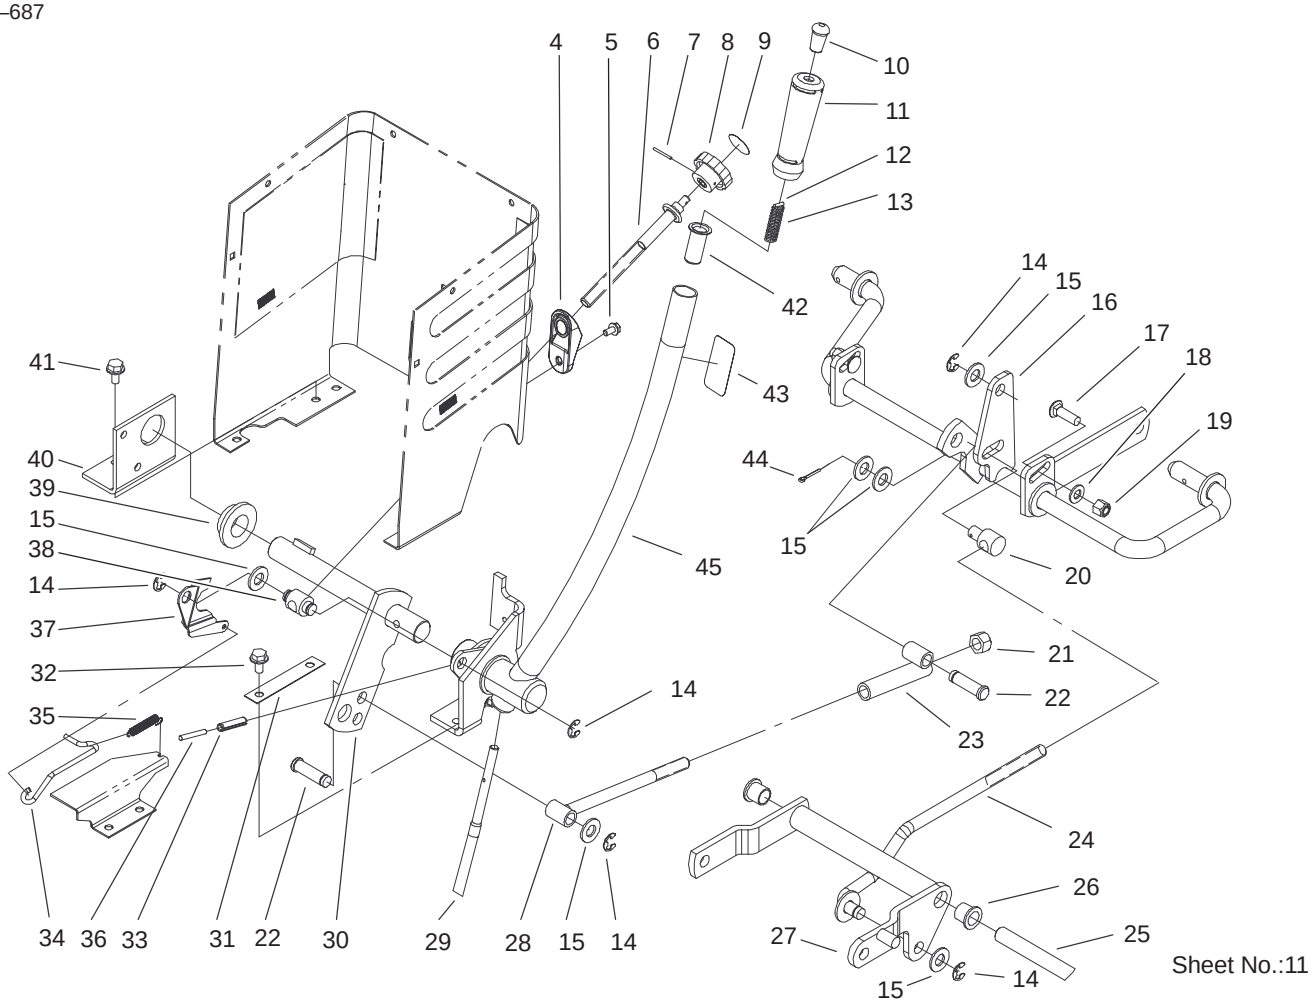

Lift Lever Arm and Height–Of–Cut Assembly

Ref. No.	Part No.	Qty.	Description
4	92–6794	1	Wedge – HOC
5	32144–4	1	Screw–HWH
6	92–6965	1	Rod – HOC
7	933141	1	Pin–Spirol
8	115593	1	Knob
9	78–9740	1	Decal–Height Knob
10	92–6711	1	Tip – Rod
11	92–6710	1	Grip – Handle
12	933148	1	Pin–Spirol
13	3624	1	Spring–Compression
14	32120–47	5	Ring–Retaining
15	3256–26	6	Washer–Flat
16	79–3401–03	1	Shaft–Gage
17	3231–25	2	Screw–CARR
18	3256–24	2	Washer–Flat
19	3296–39	2	Nut–Lock, NI
20	8870	1	Rod–Trunnion Lift
21	3296–23	1	Nut–Lock, NI
22	79–1250	2	Pin
23	78–7390	1	Tube
24	78–2431	1	Rod
25	94–4944	1	Shaft – Pedal Pivot
26	256–90	2	Bushing–Flange
27	92–6855–03	1	Arm–Pivot
28	78–7360	1	Rod
29	92–6977–03	1	Rod – Lift Lever

Ref. No.	Part No.	Qty.	Description
30	94–3552–03	1	Shaft–Lift
31	78–6810–03	1	Plate
32	32144–14	2	Screw–HWH
33	32121–25	1	Pin–Roll
34	92–6978	1	Rod – HOC Indicator
35	92–7007	1	Spring – Extension
36	32121–103	1	Pin–Spring
37	92–6979	1	Plate – HOC Gage
38	78–2140	1	Trunnion
39	106269	1	Bearing–Flange
40	93–0523–03	1	Bracket–Pivot, Linkage
41	32144–14	2	Screw–HWH
42	8130	1	Retainer–Spring
43	112168	1	Decal–Lift (only on: 72052)
43	93–7323	1	Decal – Lift Int'l (only on: 72072)
44	3272–6	1	Pin–Cotter
45	94–3761–03	1	Lever–Lift

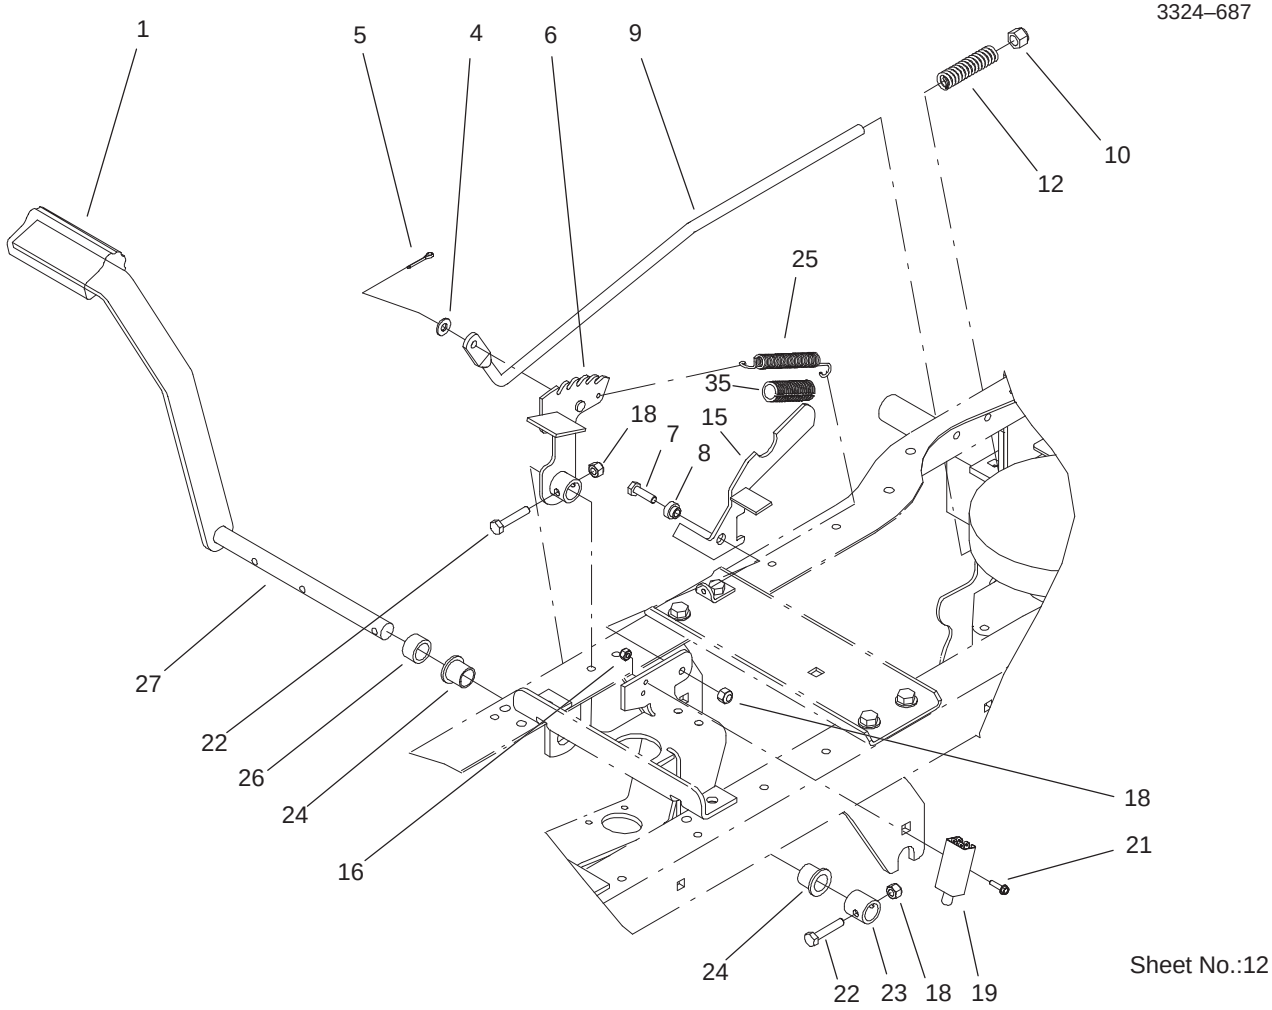


Sheet No.:12

Hydraulic Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	65–2920	1	Pad–Pedal
4	3256–22	1	Washer–Flat
5	3272–6	1	Pin–Cotter
6	104–0828	1	Brake ASM
7	321–5	1	Screw–HH
8	104–5036	1	Spacer–Shoulder
9	104–0836	1	Rod–Brake
10	3296–5	1	Nut–Lock NI
12	104–0837	1	Spring–Compression
15	104–0834	1	Parking Brake ASM
16	3296–1	2	Nut–Lock NI
18	3296–42	3	Nut–Lock, NI
19	86–4690	1	Switch–Interlock
21	3290–392	2	Screw – HHF
22	321–13	2	Screw–HH
23	100–8733	1	Tube
24	256–90	2	Bushing–Flange
25	93–0540	1	Spring – Extension
26	92–6982	1	Spacer – Brake
27	100–3476–03	1	Pedal–Brake
35	94–1743	1	Tubing – Conduit

Ref. No.	Part No.	Qty.	Description

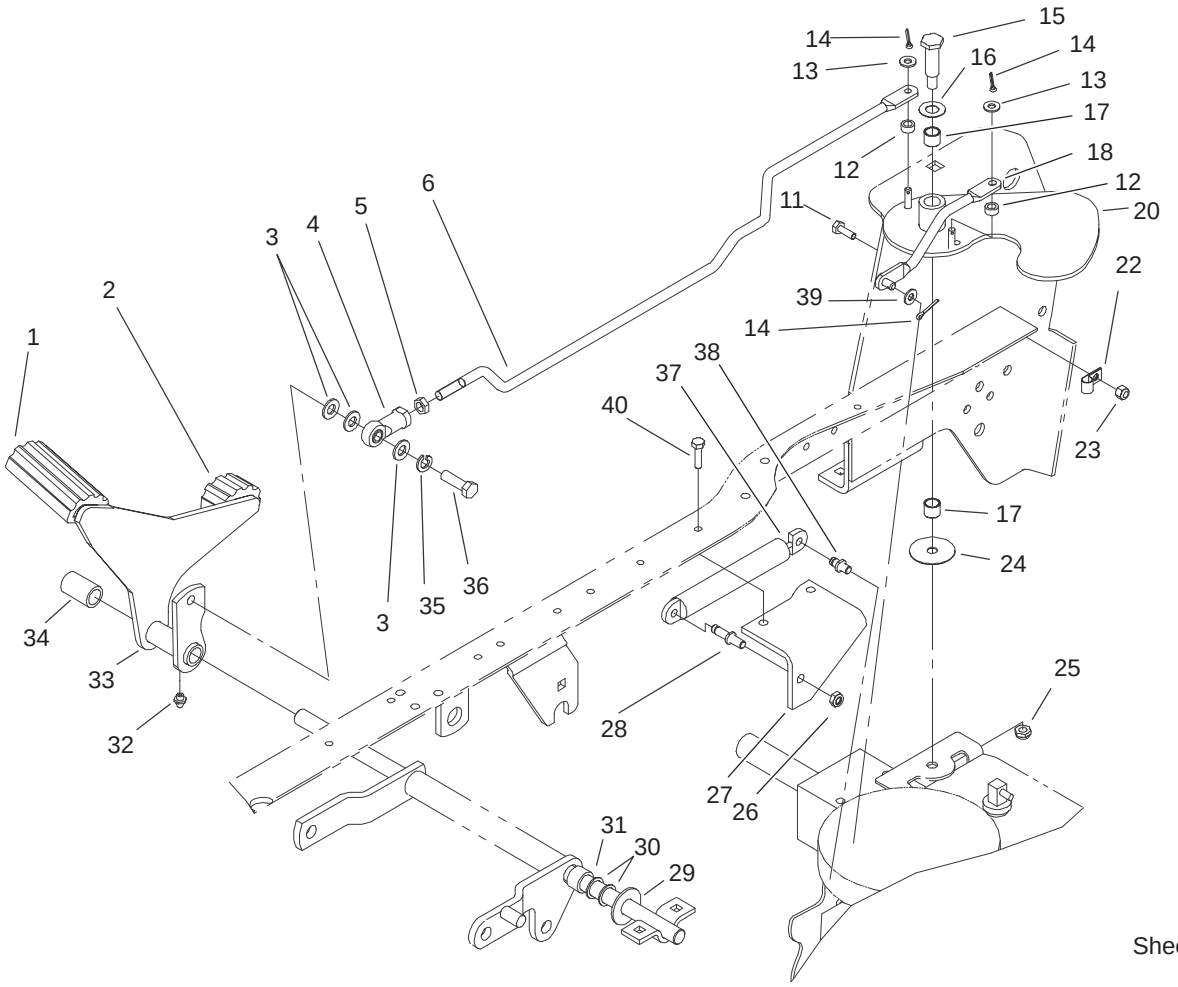


Sheet No.:13

Hydraulics Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	92–6902	1	Pad–Pedal
2	92–6903	1	Pad–Pedal
3	3256–24	2	Washer–Flat
4	92–7008	1	Rod End – Female
5	3220–3	1	Nut–Jam
6	100–3450	1	Rod
11	321–4	1	Screw–HH
12	92–6998	2	Spacer – Yoke Right
13	3256–22	2	Washer–Flat
14	3272–6	3	Pin–Cotter
15	23–0310	1	Bolt–Shoulder
16	98–3087	1	Washer
17	256–1	2	Bushing
18	100–3468	1	Rod–Bell Crank
20	100–3451	1	Plate–Criuse
22	2412–89	1	Clamp
24	94–7575	1	Spacer – Cruise
25	3296–59	1	Nut–Lock NI
26	3296–20	2	Nut–Lock, NI
27	100–3460–03	1	Bracket–Gas Damper
28	100–6057	1	Pin–Damper Bracket
29	94–6875	1	Washer
30	9202154	2	Washer
31	94–4945	1	Spacer
32	302–26	1	Zerk
33	100–6062–03	1	Pedal ASM

Ref. No.	Part No.	Qty.	Description
34	92–6966	1	Spacer
35	3253–5	1	Washer–Lock
36	323–7	1	Screw–HH
37	100–8732	1	Damper–Gas
38	100–6056	1	Control Arm–Pin Damper
39	3256–23	1	Washer–Flat
40	32144–70	1	Screw–HH

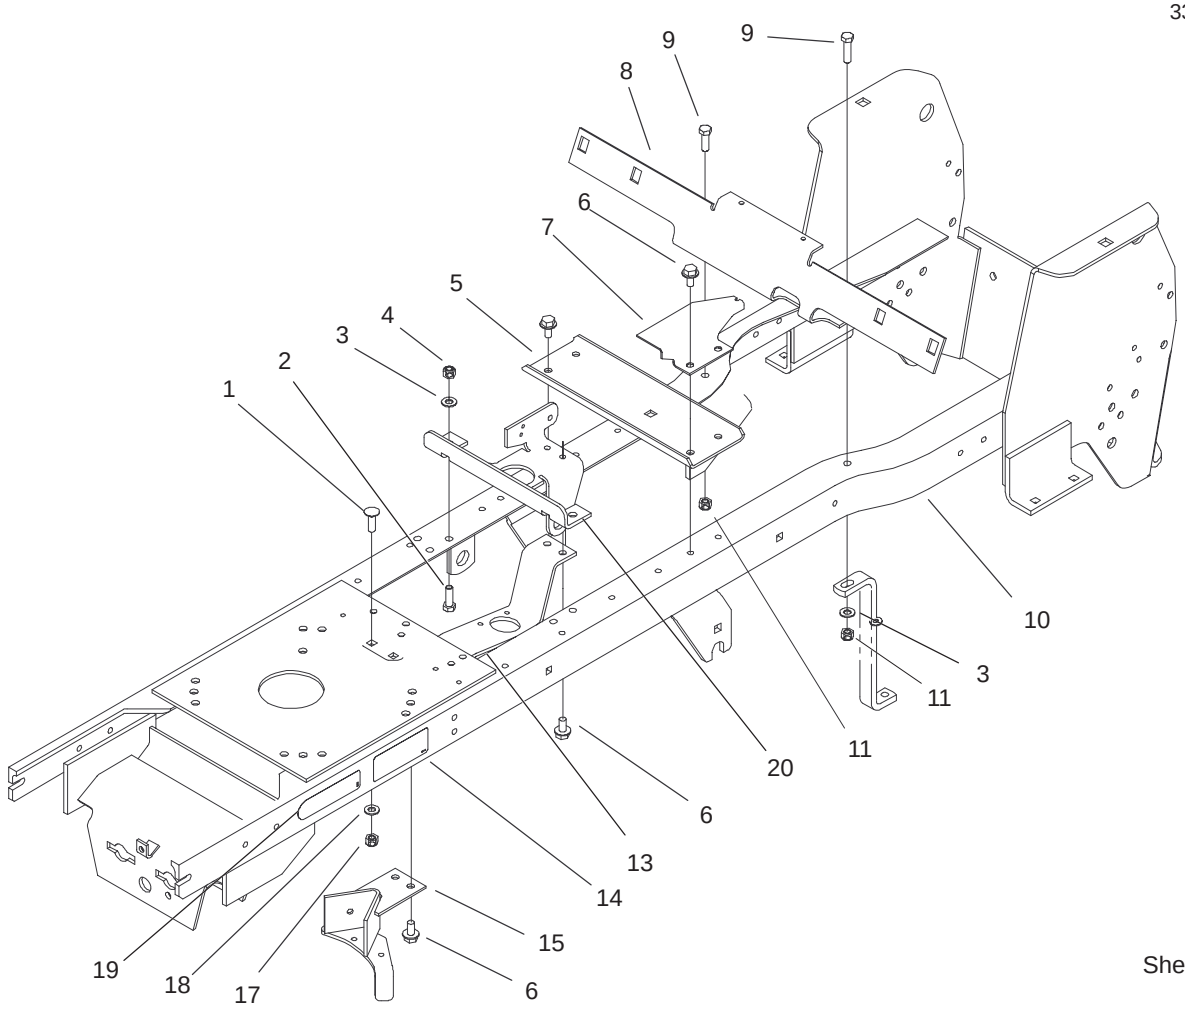


Sheet No.:14

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3230–2	2	Screw–CARR
2	322–5	2	Screw–HH
3	3256–23	3	Washer–Flat
4	3296–29	2	Nut–Lock
5	92–6868–03	1	Bracket–Idler Plate
6	32144–14	8	Screw–HWH
7	92–6964–03	1	Bracket–HOC Gage
8	100–1341–03	1	Fender–Support
9	322–6	2	Screw–HH
10	104–5014–03	1	Frame ASM
11	3296–29	2	Nut–Lock
13	104–0825–03	1	Bracket–Steering
14	93–7324	2	Decal–Belt Instructions (only on: 72072)
15	100–3526–03	1	PTO Stop ASM
17	3296–29	2	Nut–Lock
18	3256–23	2	Washer–Flat
19	92–8747	2	Decal–Attach–A–Mat ic
20	104–0826–03	1	Bracket–Brake

Ref. No.	Part No.	Qty.	Description

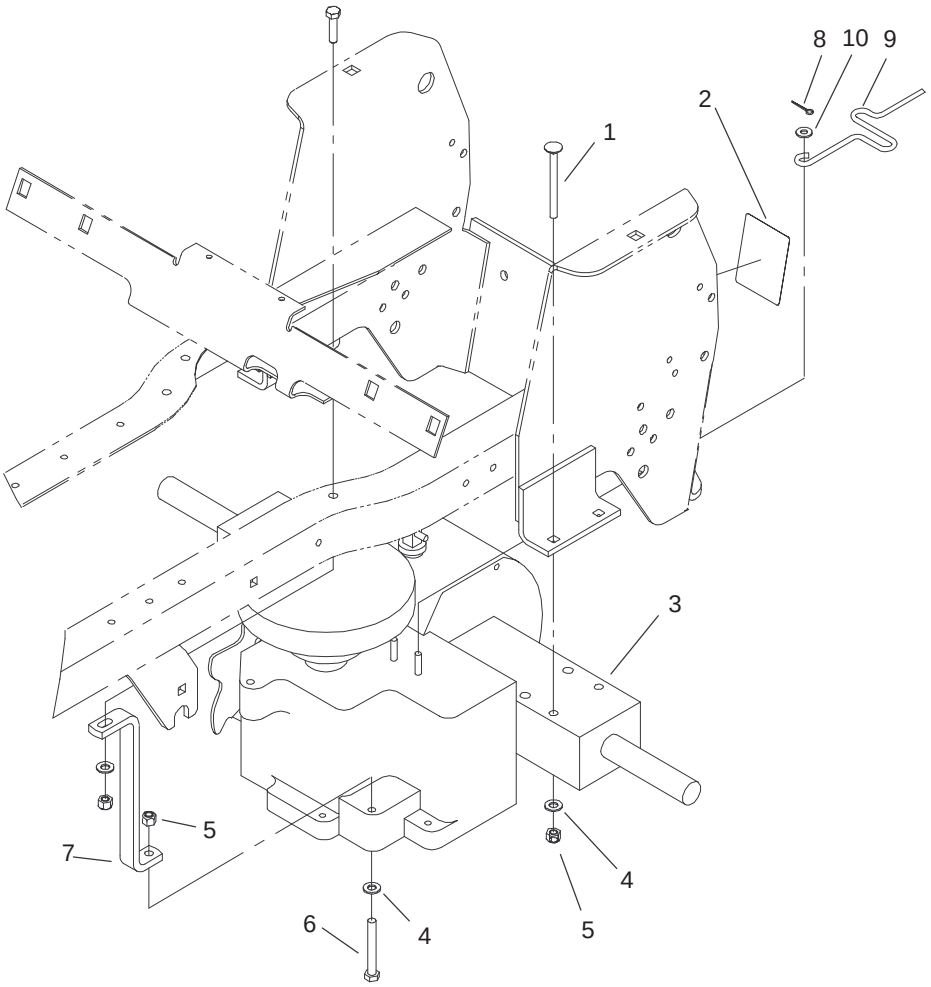


Sheet No.:15

Hydrostatic Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	3230–11	4	Screw–CARR
2	92–7090	1	Decal – Bypass Valve (only on: 72072)
2	92–6726	1	Decal – Hydro Valve (only on: 72052)
3	104–4310	1	Transaxle–Hydrostatic
4	3256–23	5	Washer–Flat
5	3296–29	5	Nut–Lock
6	322–11	1	Screw–HH
7	100–7536–03	1	Torque Strap ASM
8	3272–2	1	Pin–Cotter
9	104–5037	1	Rod–Bypass
10	3256–22	1	Washer–Flat

Ref. No.	Part No.	Qty.	Description

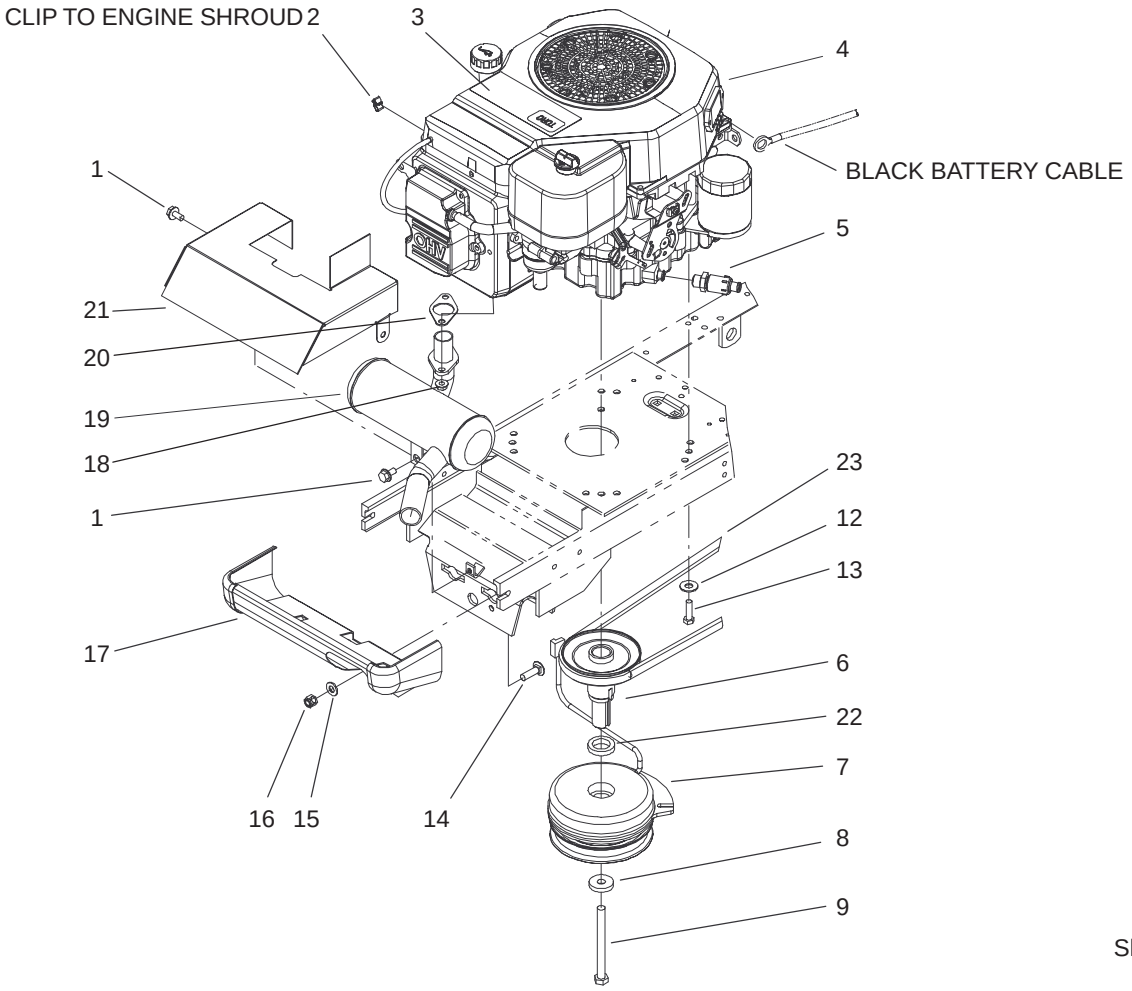


Sheet No.:16

Engine, Muffler and PTO Assembly

Ref. No.	Part No.	Qty.	Description
1	32144–14	3	Screw–HWH
2	702366	1	Clip–Wire Retainer
3	104–4693	1	Decal–Power Plus 16
4	104–5070	1	Engine–Kohler, 16 HP Intl (only on: 72072)
4	104–2473	1	Engine – Kohler 16 (only on: 72052)
5	92–6877	1	Valve–Drain, Oil
6	92–6888	1	Pulley–Engine
7	100–6060	1	Clutch–Elec PTO (only on: 72072)
7	100–6059	1	Clutch–PTO (only on: 72052)
8	112843	1	Washer
9	104–4675	1	Bolt–Clutch (7/16–20 X 4.75)
12	3253–4	4	Washer–Lock
13	33114–030	4	Screw–HH
14	3231–25	2	Screw–CARR
15	3256–24	2	Washer–Flat
16	3296–39	2	Nut–Lock, NI
17	100–3541–01	1	Muffler Shield ASM
18	92–6780	2	Nut–HF
19	104–5085	1	Muffler–16 HP
20	92–6716	1	Gasket–Exhaust
21	104–5086–03	1	Baffle–Muffler Single


Ref. No.	Part No.	Qty.	Description
22	100–1340	1	Spacer–Clutch
23	100–3469	1	V–Belt

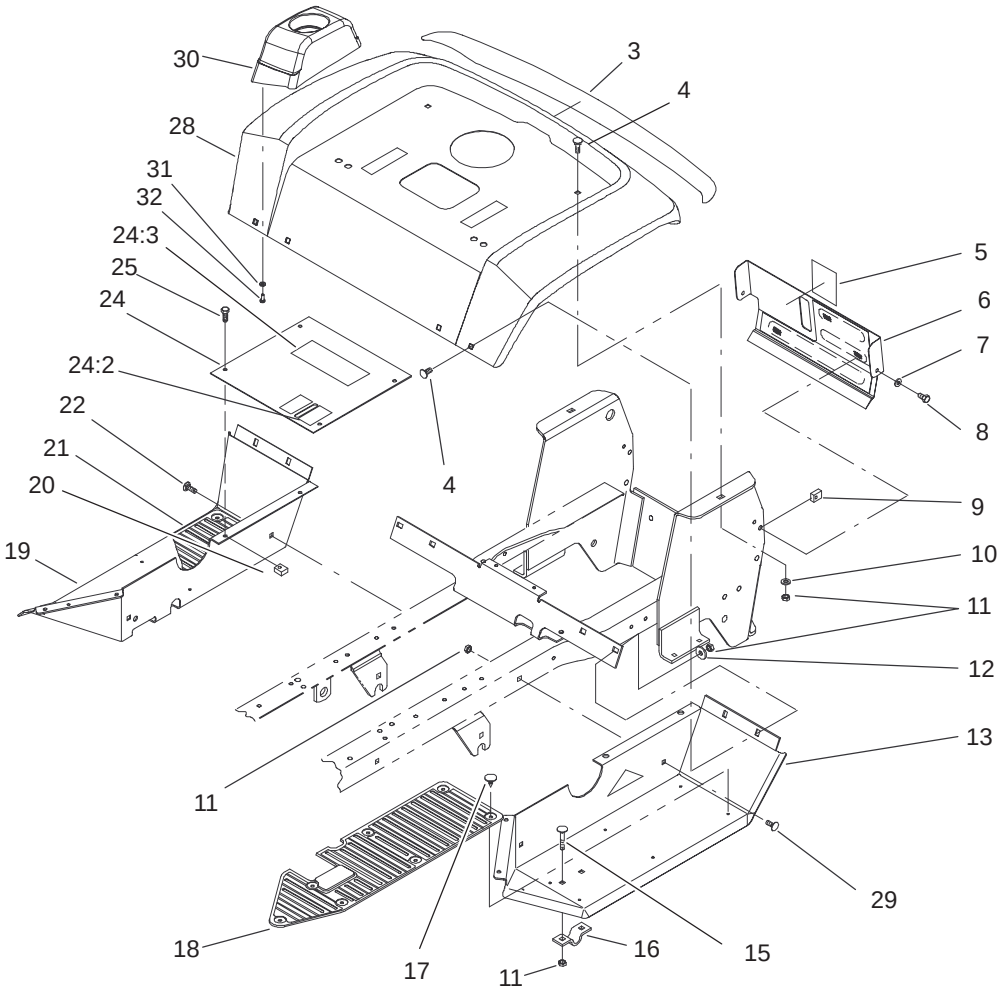

Sheet No.:17

Fender and Footrests Assembly

Ref. No.	Part No.	Qty.	Description
3	95–0802	1	Decal – Rear Fender
4	3230–31	6	Screw–CARR
5	92–6727	1	Decal – Fuel Level
6	99–6765–03	1	Rear Panel ASM
7	3256–22	2	Washer–Flat
8	321–4	2	Screw–HH
9	609900	2	Nut–Speed
10	3256–23	2	Washer–Flat
11	3296–29	14	Nut–Lock
12	94–2869	4	Washer
13	92–6746–01	1	Footrest–LH
15	3230–1	4	Screw–CARR
16	106288	2	Clamp
17	3290–479	14	Fastener–Panel
18	92–6688	1	Foot Mat–LH
19	92–6747–01	1	Footrest–RH
20	107069	4	Clip
21	92–6687	1	Foot Mat–RH
22	3230–23	3	Screw–CARR
24	93–0489	1	Plate – Footrest (only on: 72052)
24	94–4243	1	Plate – Footrest W/Decals (only on: 72072)
24:2	92–6725	1	Decal – HOC (only on: 72052)
24:2	92–7092	1	Decal – HOC (only on: 72072)
24:3	93–7314	1	Decal – Danger (only on: 72072)
24:3	92–8946	1	Decal – Danger (only on: 72052)
25	92–7020	4	Screw–HH
28	104–5030–01	1	Fender ASM
29	3230–23	1	Screw–CARR
30	104–0838	1	Holder–Cup
31	3256–51	4	Washer–Flat
32	32144–20	4	Screw–Thread Forming

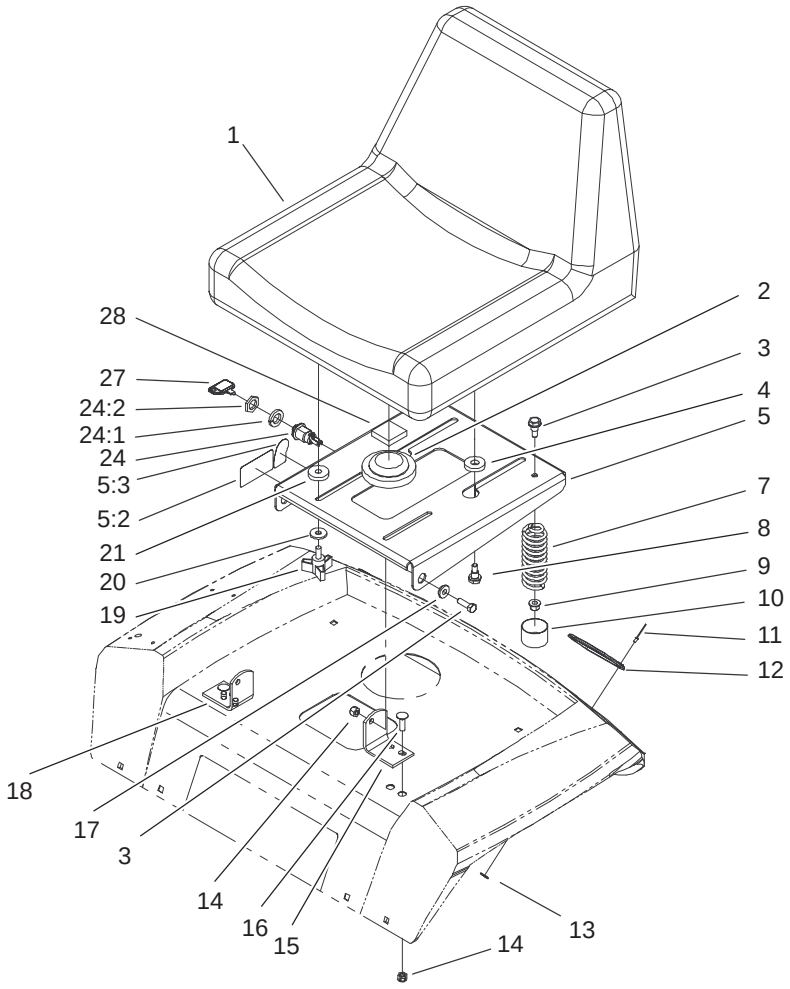


Sheet No.:18

Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	104–2463	1	Seat–High Back
2	100–3524	1	Switch–Seat
3	322–5	4	Screw–HH
4	92–6750	2	Spacer – Nylon
5	104–5028	1	Support Seat ASM, He (only on: 72072)
5	104–5027	1	Support Seat ASM (only on: 72052)
5:2	99–2986	1	Decal–Danger (only on: 72072)
5:2	99–2985	1	Decal–Danger (only on: 72052)
5:3	99–5340	1	Decal–Switch (only on: 72072)
5:3	99–5339	1	Decal (only on: 72052)
7	92–7054	2	Spring – Compression
8	92–6986	2	Bolt – Shoulder
9	3296–58	2	Nut–Lock NI
10	701178	2	Cap–Protector
11	3290–282	4	Rivet–Pop, Steel
12	106557	2	Reflector–Stick On
13	3256–49	4	Washer–Flat
14	3296–29	6	Nut–Lock
15	79–0950–03	1	Bracket–Pivot, RH
16	3230–2	4	Screw–CARR

Ref. No.	Part No.	Qty.	Description
17	105503	2	Bushing
18	79–0970–03	1	Bracket–Pivot LH
19	700806	2	Knob
20	94–2869	2	Washer
21	109989	2	Spacer–Nylon
24		1	Switch–Starter
24:1	3254–5	1	Washer–Lock, Internal
24:2	218–461	1	Nut–HH
26	218–461	1	Nut–HH (only on: 72052)
27	62–7770	1	Key–Ignition
28	104–2488	1	Foam–Switch, Seat

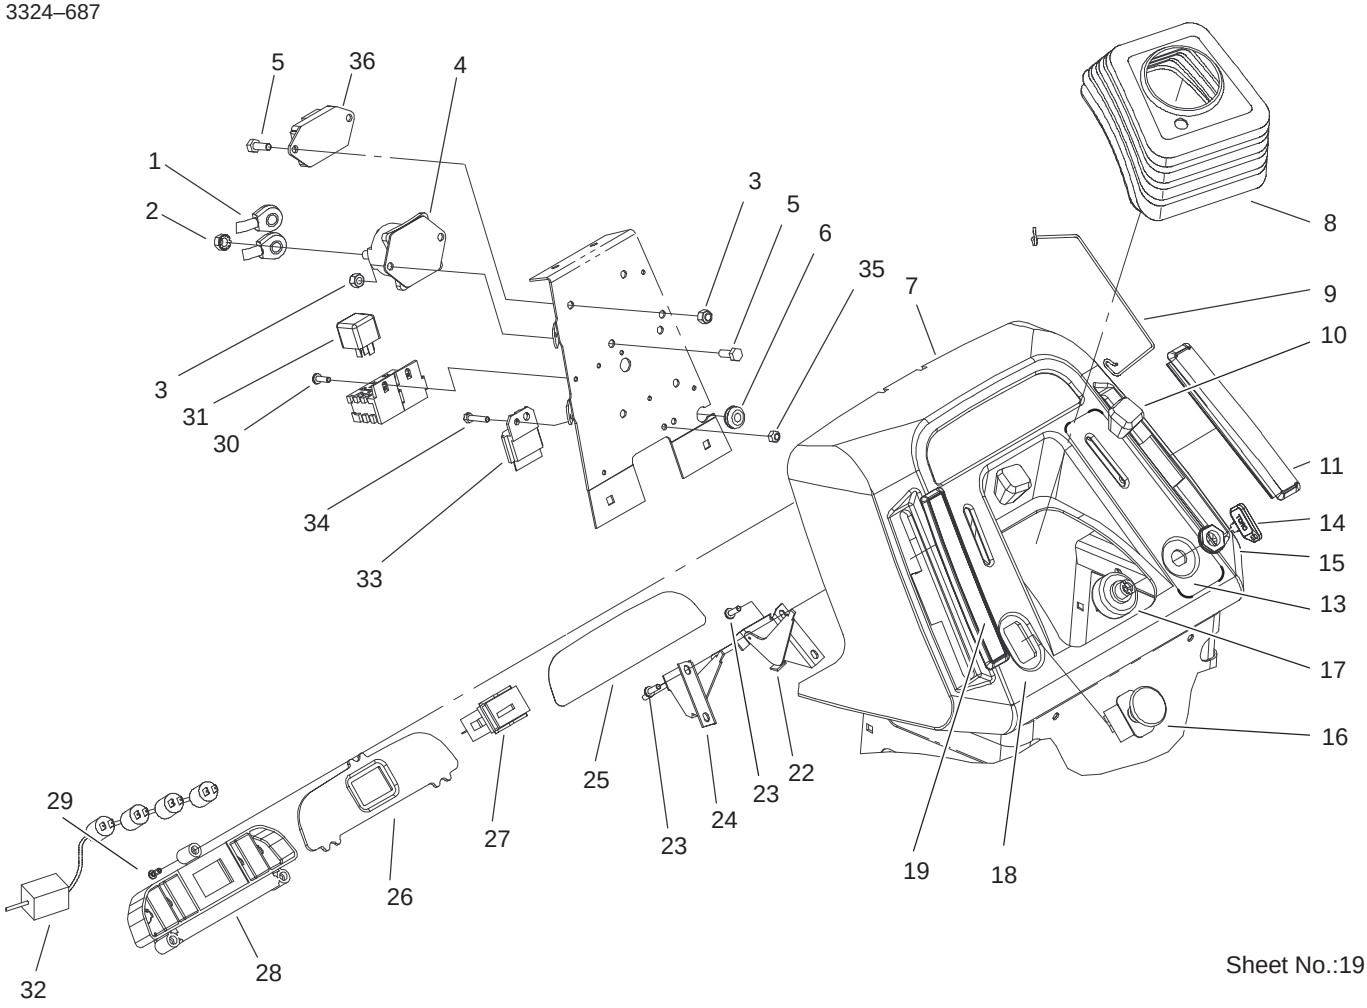


Sheet No.:19

Dash Assembly

Ref. No.	Part No.	Qty.	Description
1	100–4187	1	Cable–Battery, Red
2	32149–1	2	Nut
3	3296–42	4	Nut–Lock, NI
4	28–4210	1	Solenoid
5	321–4	4	Screw–HH
6	237–141	1	Grommet–Rubber
7	94–1894	1	Dash
8	92–6680	1	Boot–Steering
9	94–2966	1	Clip – Boot
10	66–0120	2	Knob
11	92–6796	1	Cover – Slot RH
13	93–7255	1	Decal – Dash (only on: 72072)
13	92–6721	1	Decal – Throttle, Ignition (only on: 72052)
14	62–7770	1	Key–Ignition
15	700919	1	Nut
16	93–9998	1	Switch – PTO
17	92–6785	1	Switch – Ignition
18	93–7256	1	Decal – Dash PTO/Choke (only on: 72072)
18	92–6720	1	Decal – PTO/Choke (only on: 72052)
19	92–6797	1	Cover – Slot, LH

Ref. No.	Part No.	Qty.	Description
22	92–6782	1	Control–Throttle
23	32144–32	4	Screw
24	92–6781	1	Control–Choke
25	99–8036	1	Decal – Dash Lens
26	92–6705	1	Lens – Dash
27	94–4208	1	Hourmeter
28	92–6732	1	Housing – Indicator Light
29	94–6961	3	Screw
30	32144–8	2	Screw–HH
31	98–7249	2	Relay
32	99–8068	1	Harness–4 Lamp
33	99–1933	1	Module–Low Voltage
34	32105–12	2	Screw
35	3296–2	2	Nut–Lock
36	99–3701	1	Module–Clutch

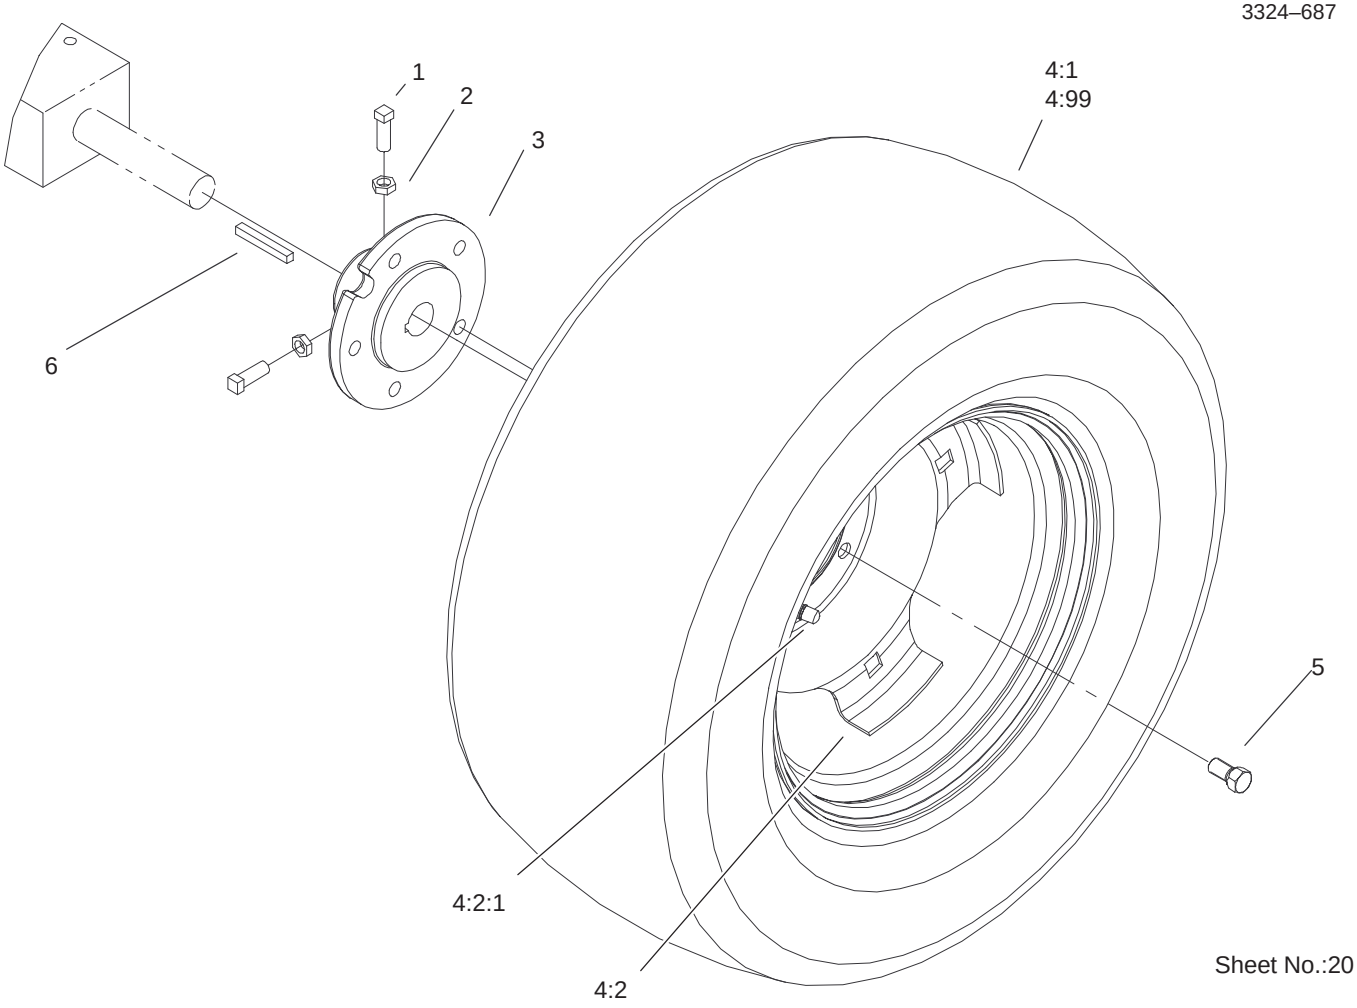


Sheet No.:20

Rear Wheels Assembly

Ref. No.	Part No.	Qty.	Description
1	3243–5	4	Screw–Set
2	3218–3	4	Nut–Jam
3	93–3659–03	2	Hub–Wheel
4		2	Wheel & Tire ASM – Rear
4:1	99–2334	1	Tire
4:2	78–1221	1	Wheel
4:2:1	5108	1	Valve
*4:99	7007	1	Tube–Inner
5	83–2720	10	Lug–Bolt
6	5–1336	2	Key

Ref. No.	Part No.	Qty.	Description

* Not illustrated

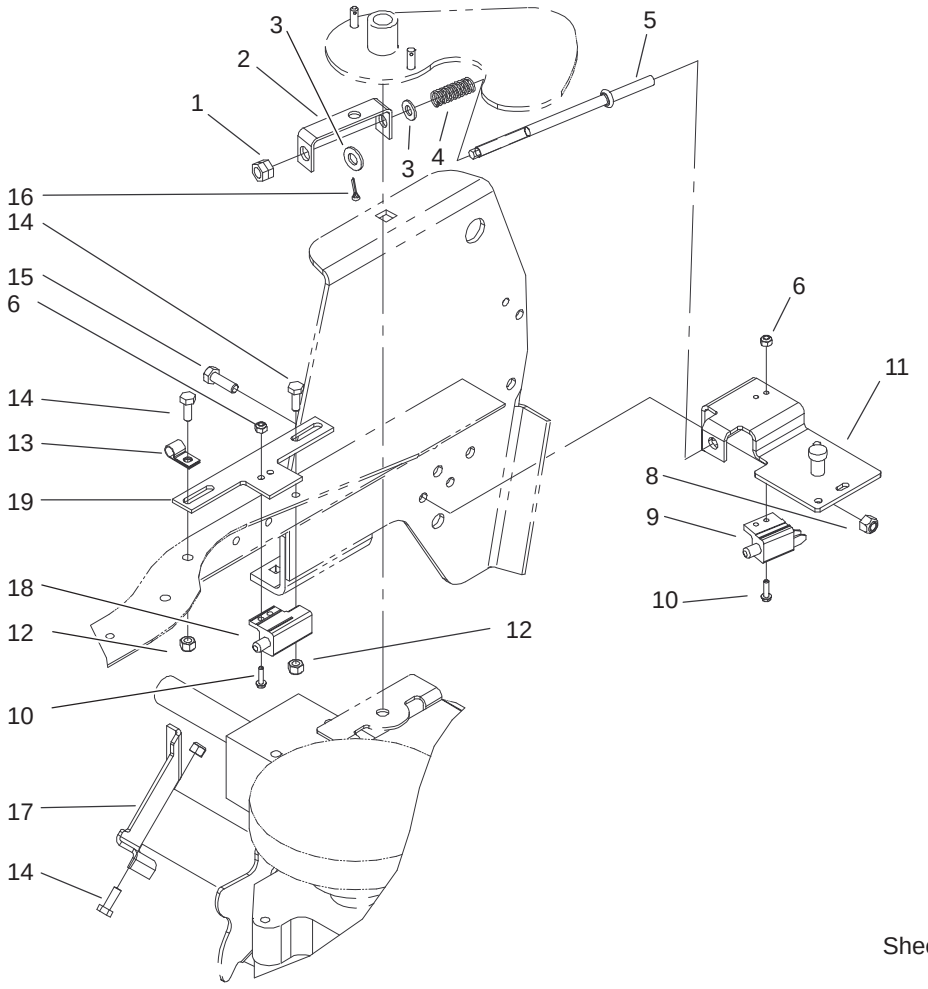


Sheet No.:21

Cruise Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3296–5	1	Nut–Lock NI
2	100–6055–03	1	Bracket
3	3256–24	2	Washer–Flat
4	38–2340	1	Spring–Compression
5	100–1348	1	Rod
6	3296–1	4	Nut–Lock NI
8	3296–29	2	Nut–Lock
9	95–1653	1	Switch – Single Pole
10	3290–392	4	Screw – HHF
11	100–3452–03	1	Bracket–Cruise
12	3296–42	3	Nut–Lock, NI
13	2412–89	1	Clamp
14	321–4	3	Screw–HH
15	322–5	2	Screw–HH
16	3272–6	1	Pin–Cotter
17	100–8722–03	1	Arm
18	100–8725	1	Switch – Double Pole
19	100–8723–03	1	Plate–Switch

Ref. No.	Part No.	Qty.	Description

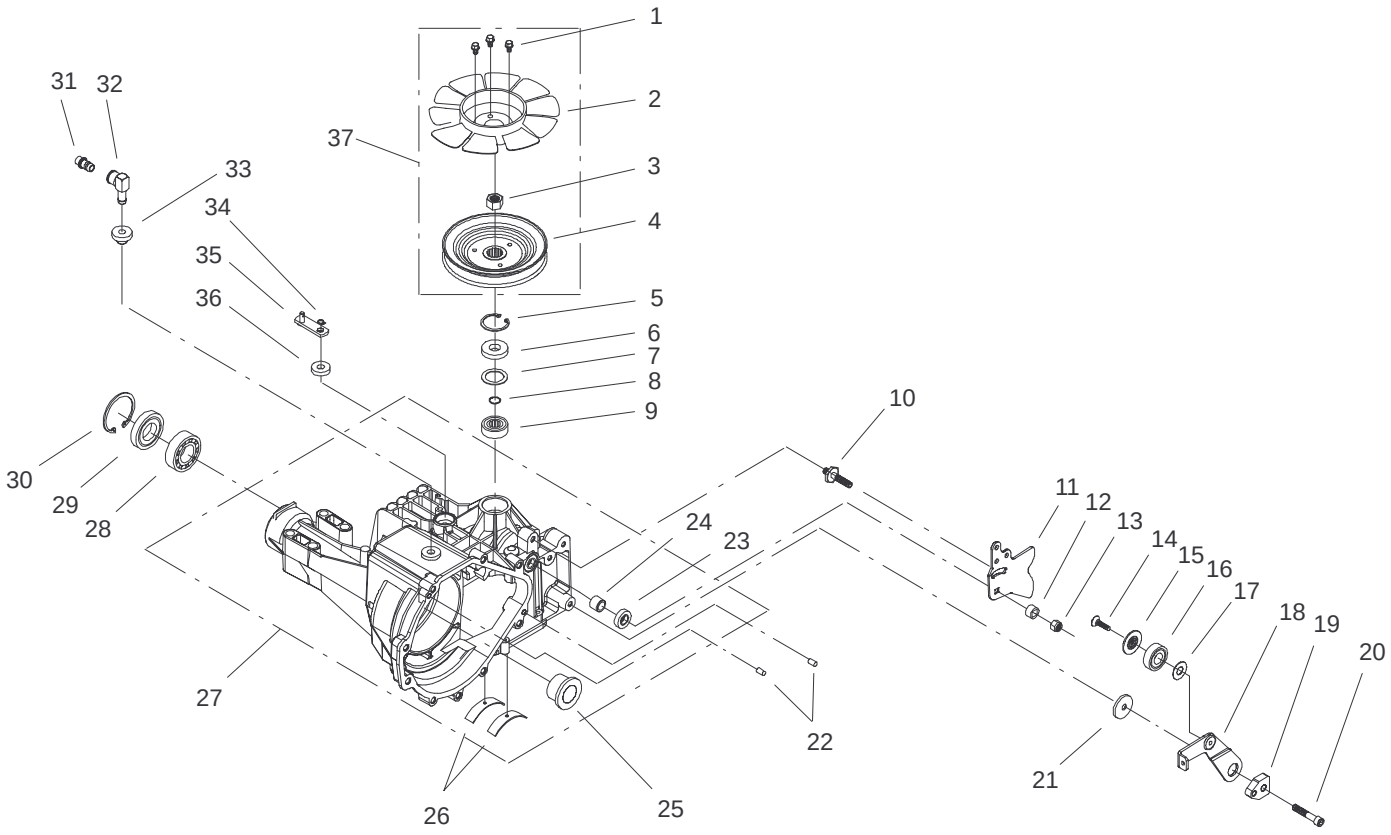


Sheet No.:3

Housing and Fan Assembly

Ref. No.	Part No.	Qty.	Description
1	104–2164	3	Screw
2	104–2162	1	Fan
3	104–2168	1	Nut–Hex
4	104–2161	1	Pulley
5	94–1903	1	Ring – Retaining
6	92–6543	1	Seal – Lip
7	104–2104	1	Spacer
8	94–1902	1	Ring – Wire Retaining
9	94–1904	1	Bearing – Shaft Ball
10	104–2116	1	Stud
11	100–6093	1	Arm–Control
12	104–2163	1	Spacer, Trunnion
13	104–2159	1	Nut–Hex Lock
14	104–2158	1	Screw–Countersunk
15	104–2157	1	Spacer–Locating
16	104–2156	1	Bearing
17	94–1933	1	Washer
18	104–2114	1	Arm–Return
19	104–2119	1	Puck–Adjusting
20	104–2155	1	Screw
21	104–2154	1	Washer
22	104–2170	2	Pin
23	92–6544	1	Seal – Lip
24	104–2113	1	Trunnion Bushing
25	104–2139	2	Bearing–Flange
26	94–1905	2	Bearing – Cradle

Ref. No.	Part No.	Qty.	Description
27	104–2101	1	Main Housing ASM
28	104–2143	2	Bearing–Ball
29	104–2144	2	Seal
30	104–2169	2	Ring–Retaining
31	104–2167	1	Cap ASM–Vent
32	104–2166	1	Fitting
33	104–2165	1	Bushing, Rubber
34	936109	1	Ring – Retaining
35	104–2117	1	Arm–Bypass
36	92–6545	1	Seal – Lip
37	104–2190	1	Kit–Fan/Pulley

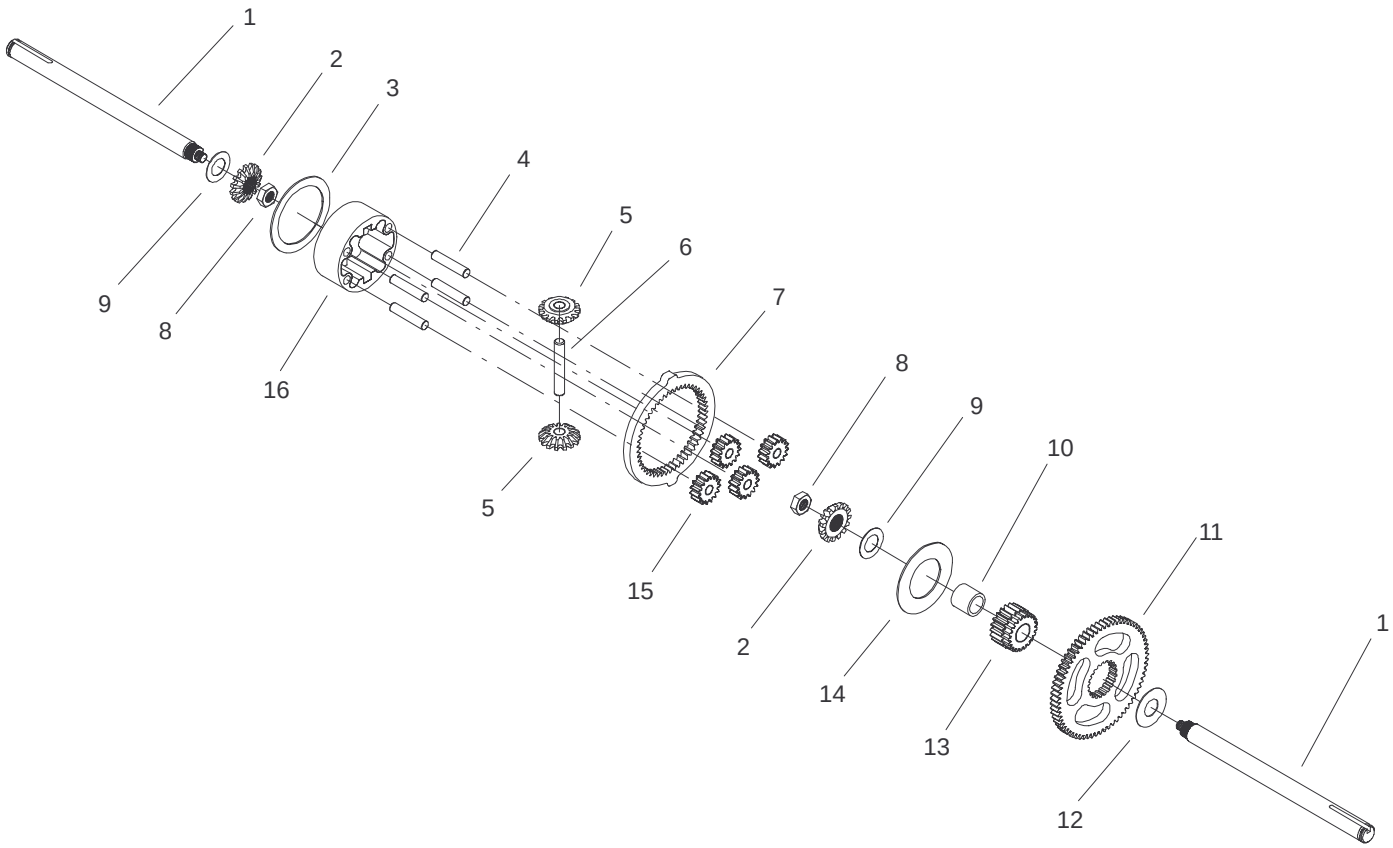


Sheet No.:4

Differential Gear Assembly

Ref. No.	Part No.	Qty.	Description
1	104–2145	2	Shaft, Axle
2	104–2135	2	Gear–Miter
3	104–2138	1	Plate–Thrust
4	104–2128	4	Pin, Carrier
5	104–2136	2	Gear–Miter
6	104–2137	1	Shaft
7	104–2133	1	Gear–Ring, 51t
8	104–2142	2	Nut–HJ
9	104–2140	2	Washer
10	104–2160	1	Bearing–Sleeve
11	104–2130	1	Gear–Spur, 67t
12	104–2141	1	Washer
13	104–2131	1	Gear–Sun, 21t
14	104–2132	1	Plate–Thrust, Planet
15	104–2129	4	Gear–Planet, 15t
16	104–2134	1	Carrier–Planetary


Ref. No.	Part No.	Qty.	Description

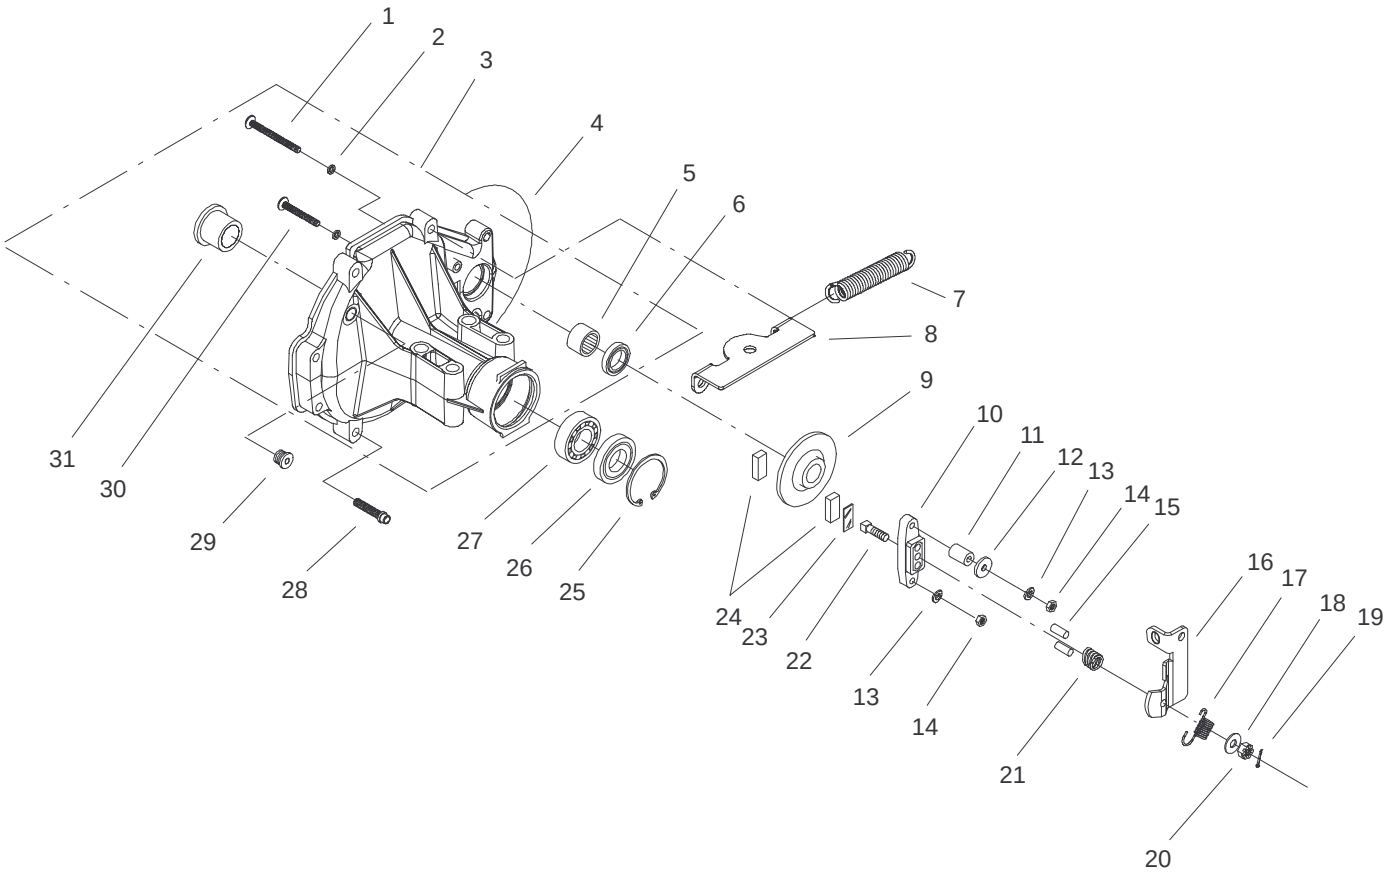

Sheet No.:5

Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	104–2182	1	Bolt
2	104–2191	4	O–Ring
3	104–2102	1	RH Housing ASM
4	104–2147	1	Sealant
5	104–2149	1	Bearing–Needle
6	104–2152	1	Seal–Lip
7	104–2118	1	Spring–Return
8	100–1349	1	Bracket–Bell Crank *B
9	104–2153	1	Disk–Brake
10	104–2173	1	Yoke–Brake
11	104–2180	1	Spacer
12	104–2183	1	Washer
13	104–2177	2	Washer–Lock
14	104–2178	2	Nut
15	104–2176	2	Pin–Brake
16	104–0841	1	Arm–Brake
17	104–2184	1	Spring–Brake Arm
18	104–2146	1	Washer
19	104–2179	1	Pin–Cotter
20	93–3807	1	Nut – Castle
21	104–2188	1	Spring–Brake, Anti Drag
22	104–2174	1	Bolt–SQH
23	104–2181	1	Puck–Plate
24	104–2171	2	Puck–Brake
25	104–2169	2	Ring–Retaining
26	104–2144	2	Seal
27	104–2143	2	Bearing–Ball
28	104–2148	9	Screw–TTH
29	104–2189	1	Plug, Straight Thread
30	104–2172	1	Bolt
31	104–2139	2	Bearing–Flange

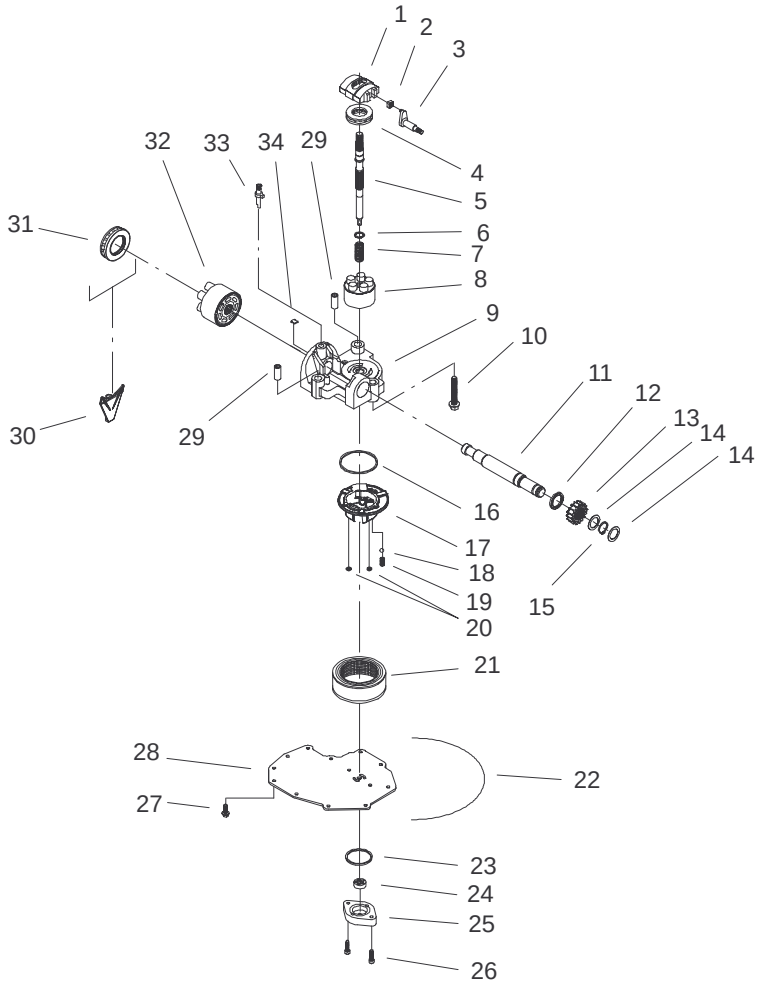


Sheet No.:6

Cylinder Block Assembly


Ref. No.	Part No.	Qty.	Description
1	94–1907	1	Swashplate – Variable
2	94–1910	1	Guide – Slot
3	104–2112	1	Trunnion ASM
4	94–6922	1	Bearing – Thrust
5	104–2105	1	Shaft–Input
6	94–1937	1	Washer – Block Thrust
7	94–1936	1	Spring – Block
8	104–2106	1	Cylinder Block ASM
9	104–2103	1	Kit, Center Section
10	94–6926	3	Bolt
11	104–2107	1	Shaft–Output
12	104–2109	1	Spacer
13	104–2110	1	Gear–Pinion, 16t
14	104–2150	2	Washer
15	104–2151	1	Ring–Retaining
16	104–2185	1	O–Ring
17	104–2156	1	Bearing
18	104–2187	1	Ball
19	104–2186	1	Spring, Relief
20	104–2191	4	O–Ring
21	104–2125	1	Filter
22	104–2147	1	Sealant
23	104–2123	1	O–Ring
24	104–2122	1	Gerotor ASM
25	104–2124	1	Gerotor Cover
26	104–2111	2	Capscrew

Ref. No.	Part No.	Qty.	Description
27	104–2120	11	Screw
28	104–2121	1	Cover–Lower
29	94–1927	2	Pin
30	104–2127	1	Retainer–Motor Bearing
31	94–6923	1	Bearing – Thrust
32	94–1913	1	Cylinder Block ASM
33	94–1914	1	Actuator – Bypass
34	94–6925	1	Plate – Bypass

Schematic

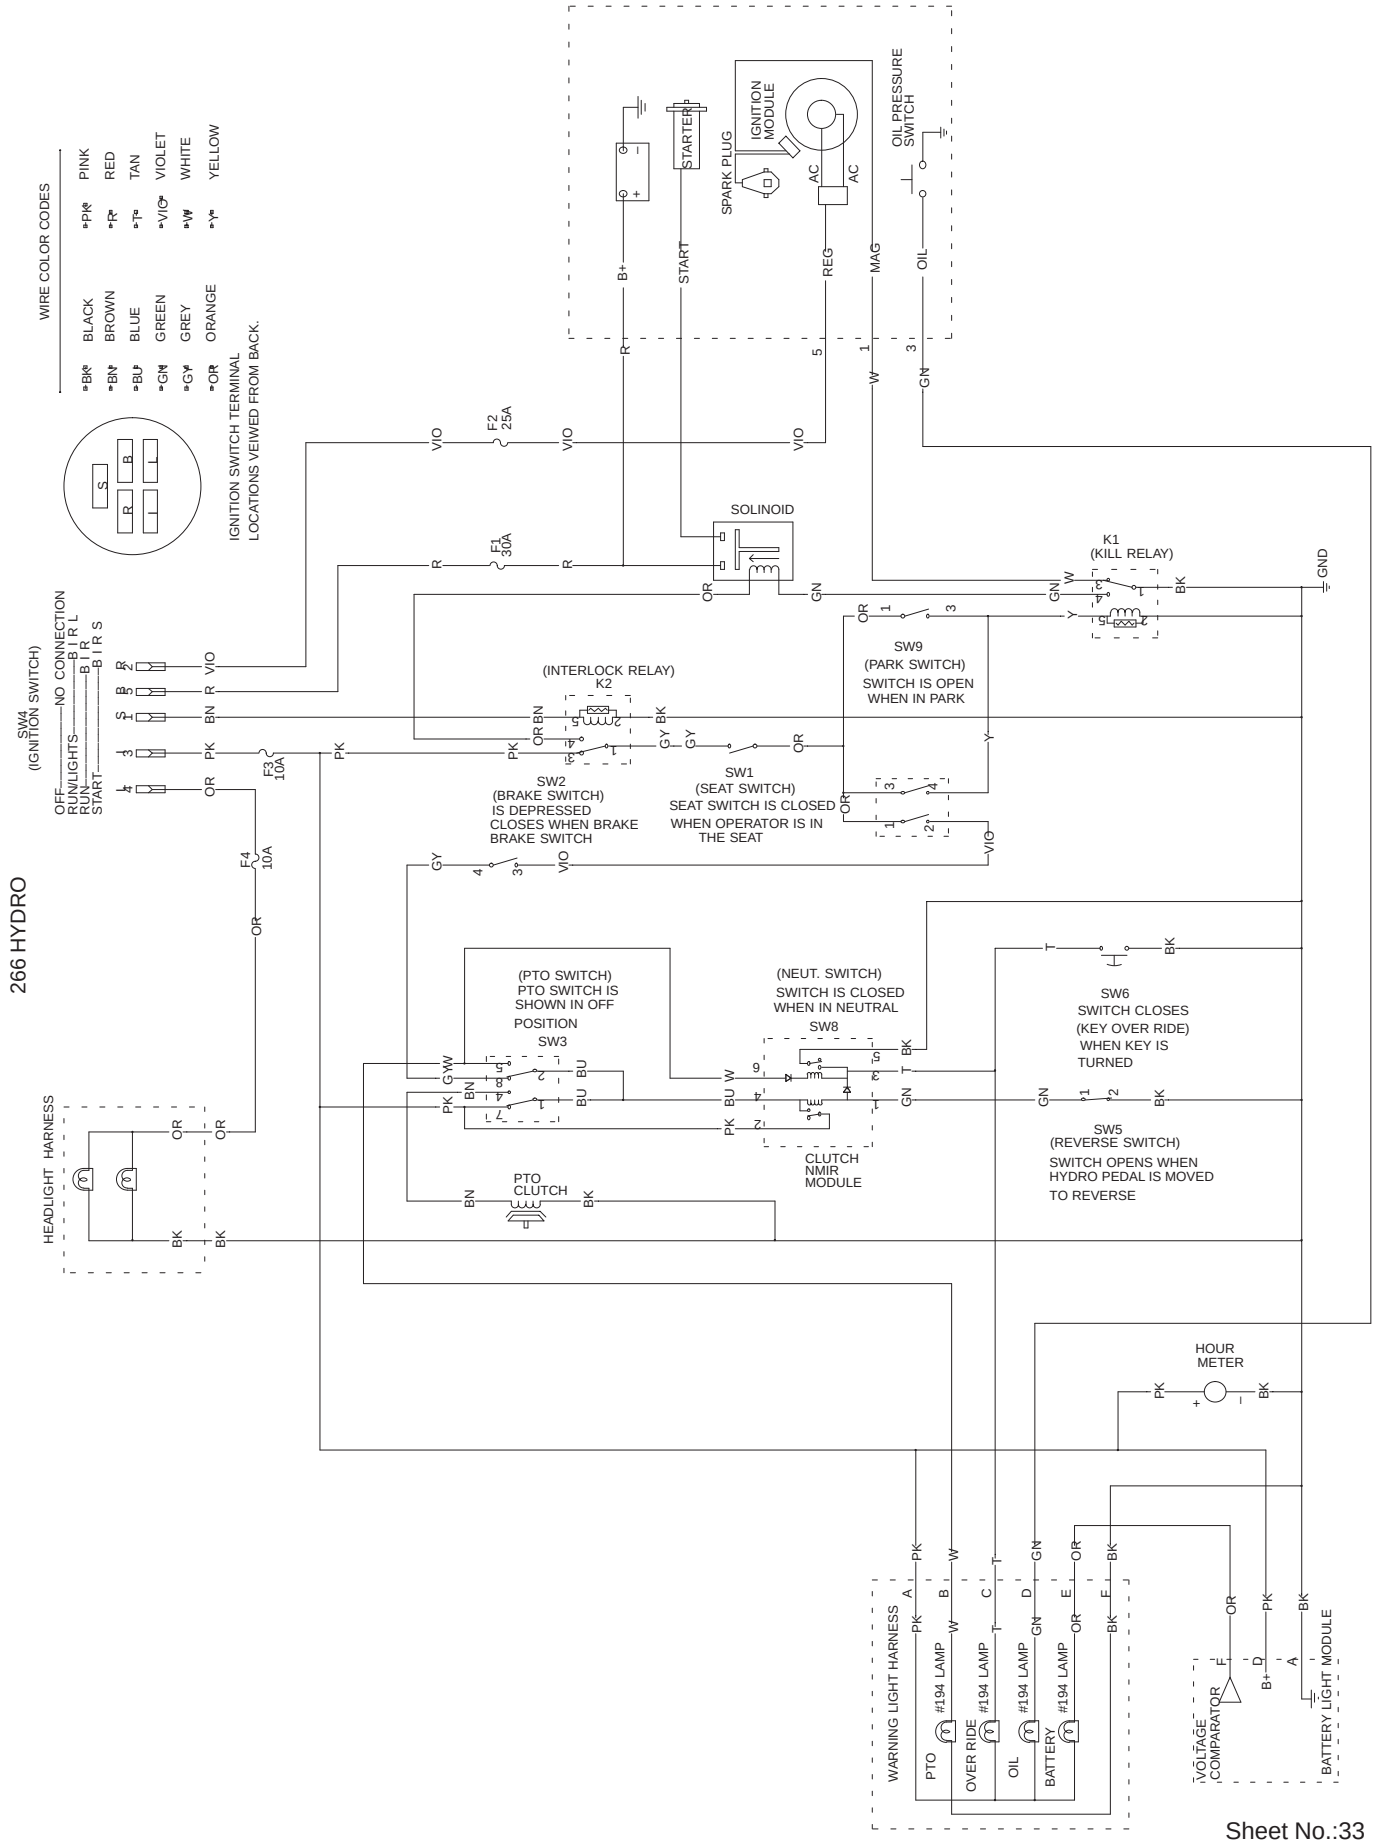

Sheet No.:33
T–3738

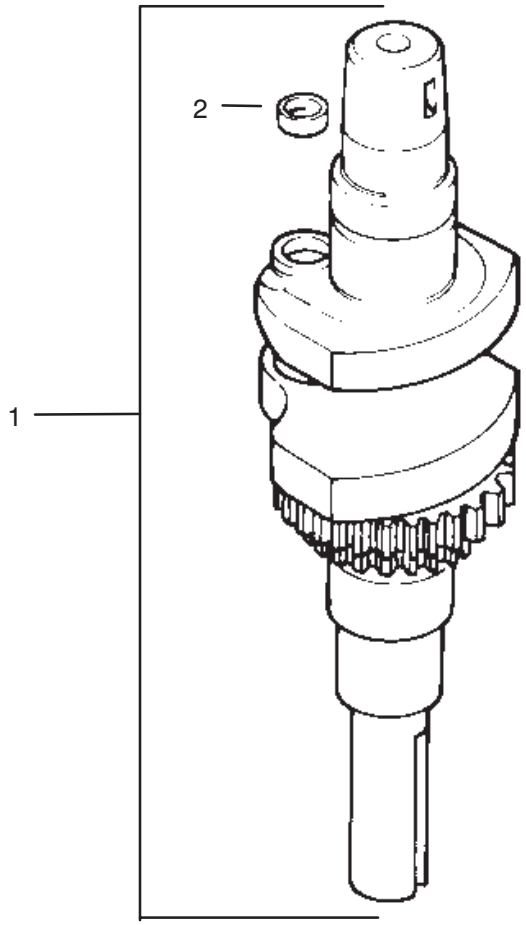


Sheet No.:1
C–3018

Crankshaft Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	12 014 57–S	1	Crankshaft (Incl 2)
†2	25 139 27–S	1	Plug–Cup

Ref. No.	Part No.	Qty.	Description

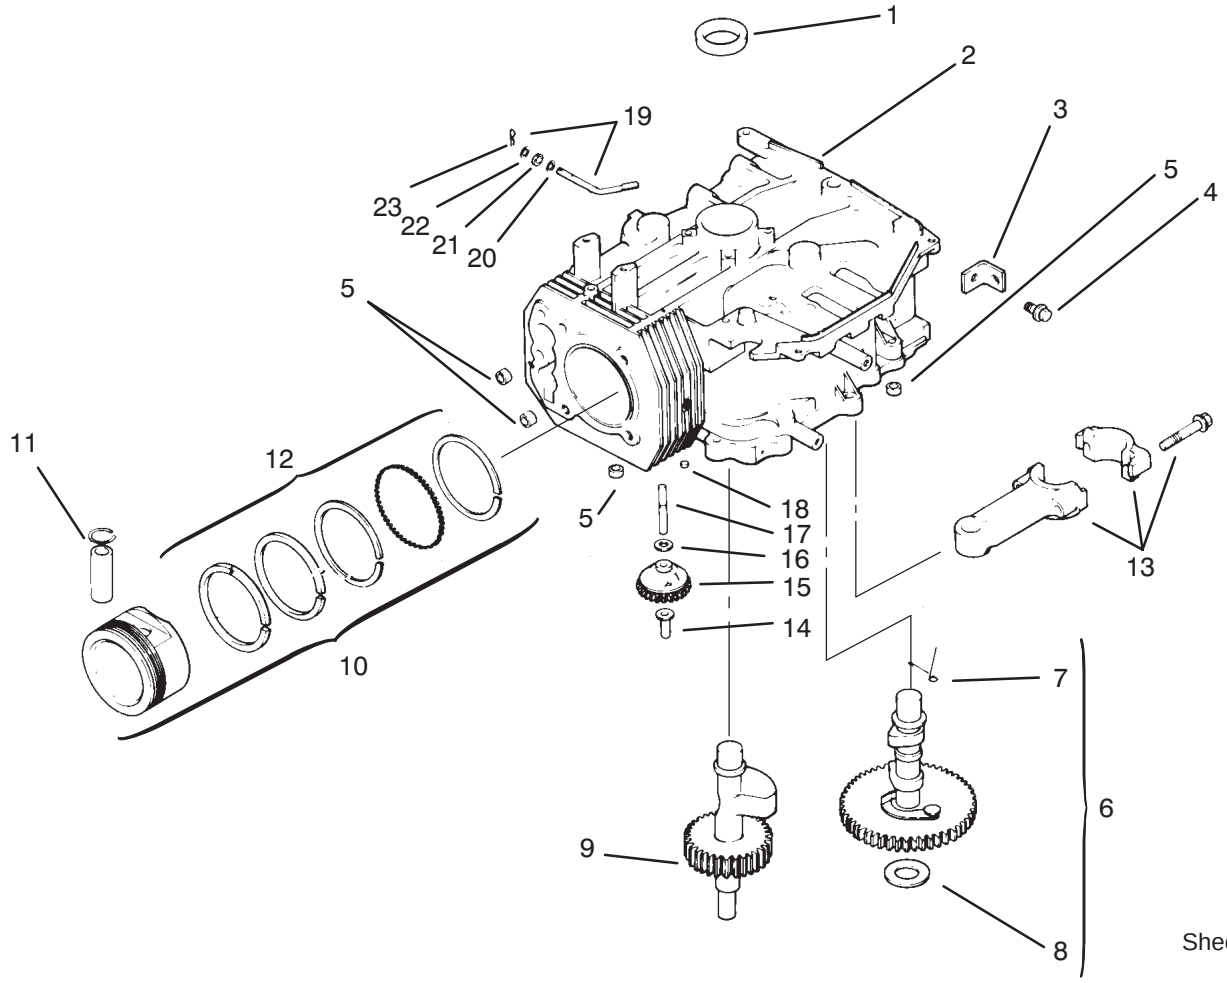


Sheet No.:2
C–3119

Crankcase Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	12 032 03–S	1	Seal–Crankshaft
2	12 522 50	1	Block–Short
3	12 445 02–S	1	Strap–Lifting
4	M–839025–S	1	Screw M8x1.25x22
5	24 380 13–S	4	Dowel–Locating
6	12 755 49–S	1	Kit–Camshaft (Incl 7–8)
†7	12 089 31–S	1	Spring–Actuating
†8	12 422 07–S	1	Shim–Camshaft A/R
†8	12 422 08–S	1	Shim–Camshaft A/R
†8	12 422 09–S	1	Shim–Camshaft A/R
†8	12 422 10–S	1	Shim–Camshaft A/R
†8	12 422 11–S	1	Shim–Camshaft A/R
†8	12 422 12–S	1	Shim–Camshaft A/R
†8	12 422 13–S	1	Shim–Camshaft A/R
9	12 144 28–S	1	Shaft–Balance
10	12 874 01–S	1	Piston ASM STD (Incl 11–12)
10	12 874 02–S	1	Piston ASM .25 (Incl 11–12)
10	12 874 03–S	1	Piston ASM .50 (Incl 11–12)
†11	12 018 02–S	2	Retainer–Piston Pin
†12	12 108 01–S	1	Ring Set STD
†12	12 108 02–S	1	Ring Set .25
†12	12 108 03–S	1	Ring Set .50
13	12 067 11–S	1	Rod Connecting ASM STD
13	12 067 12–S	1	Rod Connecting ASM .25
14	12 380 01–S	1	Pin–Governor Regulating
15	12 043 05–S	1	Gear–Governor ASM
16	M–631005–S	1	Washer–Governor
17	12 144 02–S	1	Shaft–Governor Gear
18	52 139 09–S	1	Plug–Cup
19	12 755 64–S	1	Shaft–Governor Cross (Incl 23)
20	X–25–102–S	1	Washer–Flat
21	12 032 01–S	1	Seal–Governor Shaft
22	M–631015–S	1	Washer–Governor Shaft
†23	12 154 05–S	1	Pin–Governor Hitch
*	12 755 93–S	1	Gasket Set

† Included in a service kit or in an assembly
* Not illustrated

3324–687

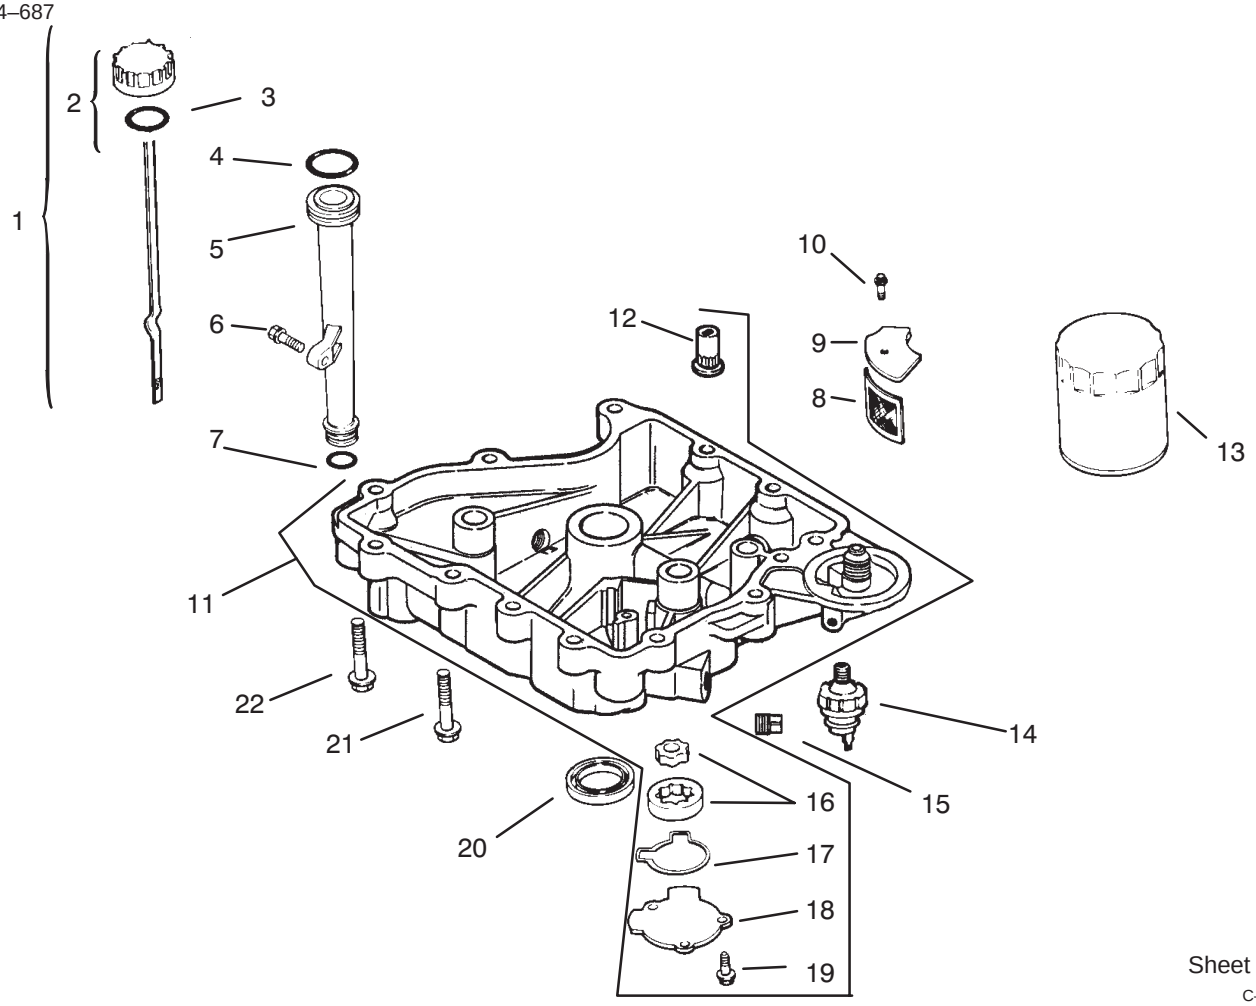


Sheet No.:3
C–3020

Oil Pan / Lubrication Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	12 038 01–S	1	Dipstick (Incl 2–3)
†2	25 755 13–S	1	Kit–Oil Cap (Incl 3)
†3	12 153 03–S	1	O Ring–Fill Cap
4	12 153 02–S	1	O Ring–Upper Fill Tube
5	12 123 04–S	1	Tube–Oil Fill
6	M–645025–S	1	Screw M5x0.8x20
7	12 153 01–S	1	O Ring–Lower Fill Tube
8	12 162 07–S	1	Screen–Oil Pickup
9	12 096 03–S	1	Cover–Oil Pickup Screen
10	M–545016–S	1	Screw M5x0.8x16
11	12 199 50–S	1	Pan–Oil (incl. 12, 16–19)
†12	25 462 09–S	1	Valve–Oil Pressure Relief
13	12 050 01–S	1	Filter–Oil
14	25 099 24–S	1	Switch–Oil Pressure
15	25 139 57–S	2	Plug–SH 3/8 NPTF
†16	12 393 01–S	1	Oil Pump ASM
†17	12 156 06–S	1	O Ring–Oil Pump Cover
†18	12 096 34–S	1	Cover–Oil Pump
†19	M–545016–S	3	Screw M5x0.8x16
20	12 032 03–S	1	Seal–Oil (PTO end)
21	24 086 16–S	11	Screw M8x1.25x45
22	24 086 17–S	1	Screw M8x1.25x45
*	52 518 21–S	1	Lead–Oil Switch

† Included in a service kit or in an assembly
* Not illustrated

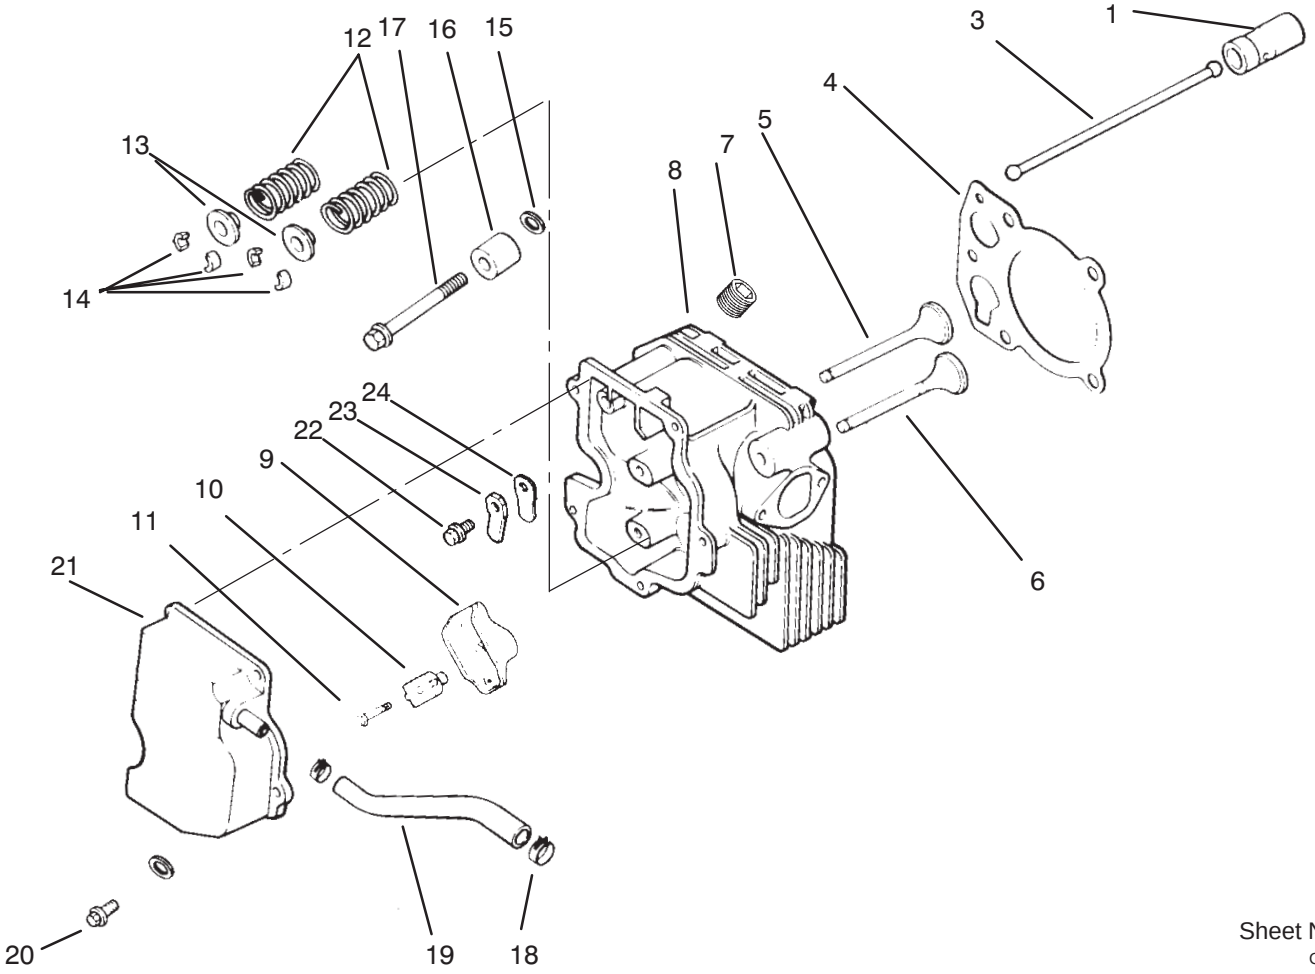


Sheet No.:4
C–3021

Cylinder Head / Valve / Breather Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	12 351 01–S	1	Lifter–Valve
†3	12 411 03–S	2	Rod–Push
†4	12 041 08–S	1	Gasket–Cylinder Head
†5	12 017 01–S	1	Valve–Intake STD
5	12 017 02–S	1	Valve–Intake .25
†6	12 016 01–S	1	Valve–Exhaust STD
6	12 016 02–S	1	Valve–Exhaust .25
†7	25 139 60–S	1	Plug, Allen 1/8 Pipe
†8	12 318 36–S	1	Cylinder Head
†9	25 186 01–S	2	Arm–Rocker
†10	12 599 03–S	2	Pivot–Rocker Arm
†11	M–640034–S	2	Screw, M6x1.0x34
†12	12 089 34–S	2	Spring–Valve
†13	12 173 01–S	2	Cap–Valve Spring
†14	12 755 03–S	2	Kit, Retainer
†15	12 468 05–S	1	Washer–Flat
†16	12 112 13–S	1	Spacer–Head Bolt Exhaust
†17	12 086 15–S	5	Screw M10x1.5x81
18	25 237 14–S	2	Clamp–Hose
19	12 326 03–S	1	Hose–Breather
20	M–645020–S	5	Screw M6x1.0x20
21	12 096 07–S	1	Cover–Valve w/Nipple
22	M–545010–S	1	Screw M5x0.8x10

Ref. No.	Part No.	Qty.	Description
23	12 018 01–S	1	Retainer–Breather Reed
24	24 402 02–S	1	Reed–Breather
*	12 755 94–S	1	Kit–Cylinder Head (Incl. 3–17,
*†	12 041 01–S	2	Gasket, Carburetor
*†	12 041 02–S	1	Gasket, Air Cleaner
*†	12 041 03–S	1	Gasket, Exhaust Manifold)

* Not illustrated

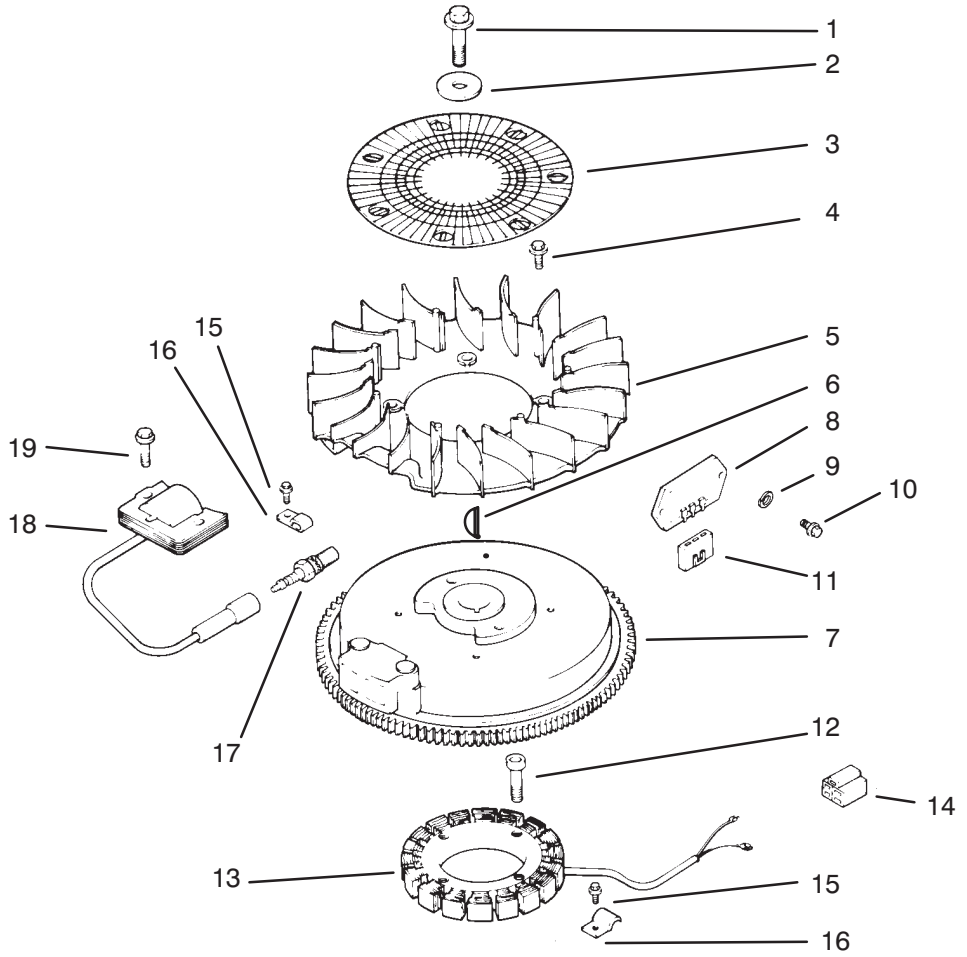


Sheet No.:5
C–3022

Ignition / Electrical Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	12 086 14–S	1	Screw–Flywheel Mounting M10x1.5x46
2	12 468 03–S	1	Washer–Flywheel
3	24 162 03–S	1	Screen–Grass
4	25 086 47–S	4	Bolt, Shoulder
5	12 157 06–S	1	Fan
6	X–42–15–S	1	Key
7	12 025 15–S	1	Flywheel ASM
8	41 403 09–S	1	Rectifier–Regulator
9	X–22–11–S	1	Washer–Lock 1/4
10	M–639016–S	2	Screw M6x1.0x16
11	236602–S	1	Connector–Regulator
12	M–548025–S	4	Screw M5x0.8x25
13	237878–S	1	Kit, Stator (Incl. Terminal 25 452 01–S)
14	48 155 01–S	1	Connector–5 Contact
15	M–545010–S	1	Screw M5x0.8x10
16	X–728–1–S	1	Clip–Stator Harness
17	12 132 02–S	1	Spark Plug
18	12 584 04–S	1	Module–Ignition
19	M–545020–S	2	Screw M5x0.8x20
*	12 518 01–S	1	Lead–White
*	25 518 05–S	1	Lead–Black

Ref. No.	Part No.	Qty.	Description
*	24 518 12–S	1	Lead–Black
*	25 452 01–S	1	Terminal

* Not illustrated

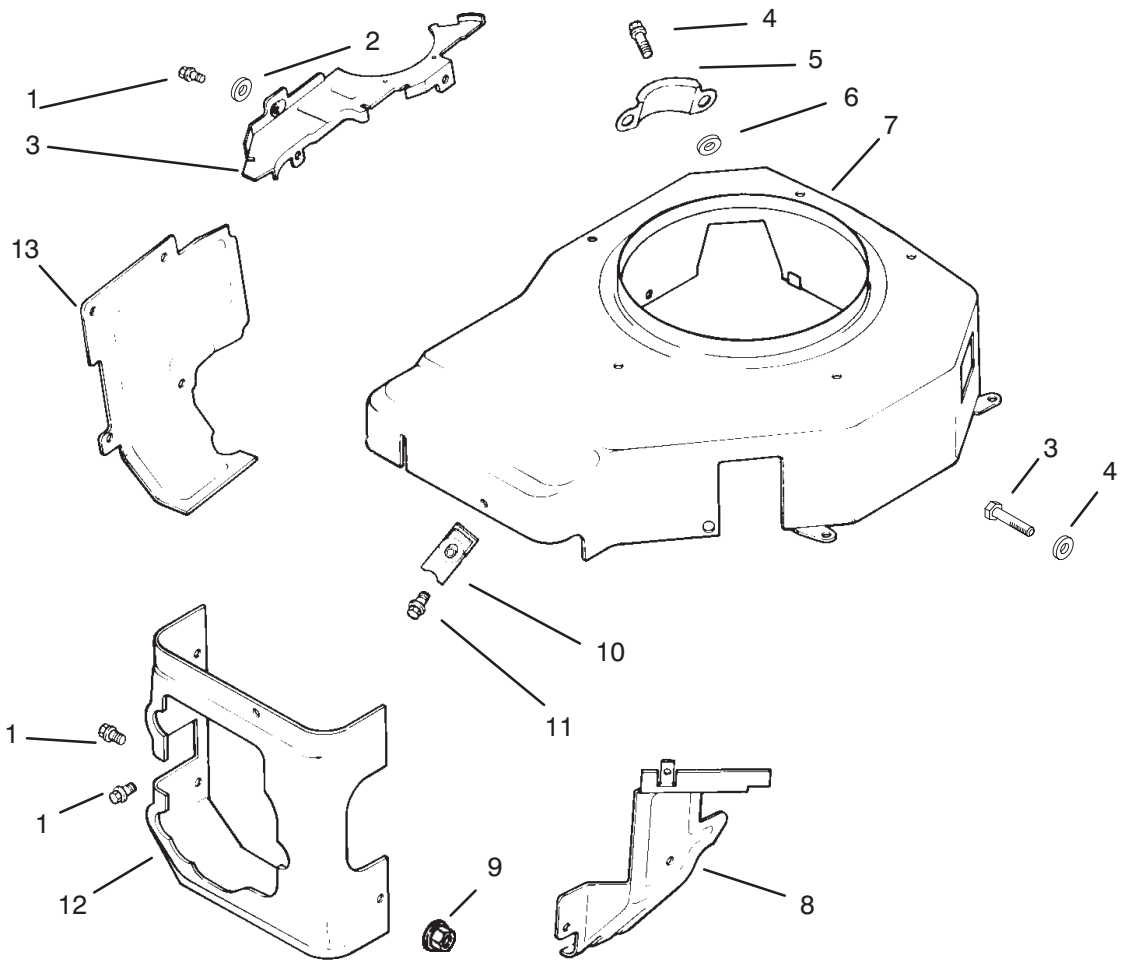


Sheet No.:6
C–3023

Blower Housing & Baffles Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	M–545010–S	6	Screw M5x0.8x10
2	24 468 10–S	1	Washer Plain 1/4
3	12 146 07–S	1	Plate–Blower Housing
4	M–645016–S	2	Screw M6x1.0x16
5	24 096 05–S	1	Cover–Pinion
6	220534–S	2	Washer Plain 5/16
7	12 027 55–S	1	Housing–Blower
8	12 063 18–S	1	Baffle–Intake Side
9	M–541050–S	1	Nut
10	25 154 02–S	3	Clip
11	21 086 37–S	3	Screw
12	12 063 20–S	1	Baffle–Cylinder Head
13	12 063 19–S	1	Baffle–Cylinder

Ref. No.	Part No.	Qty.	Description

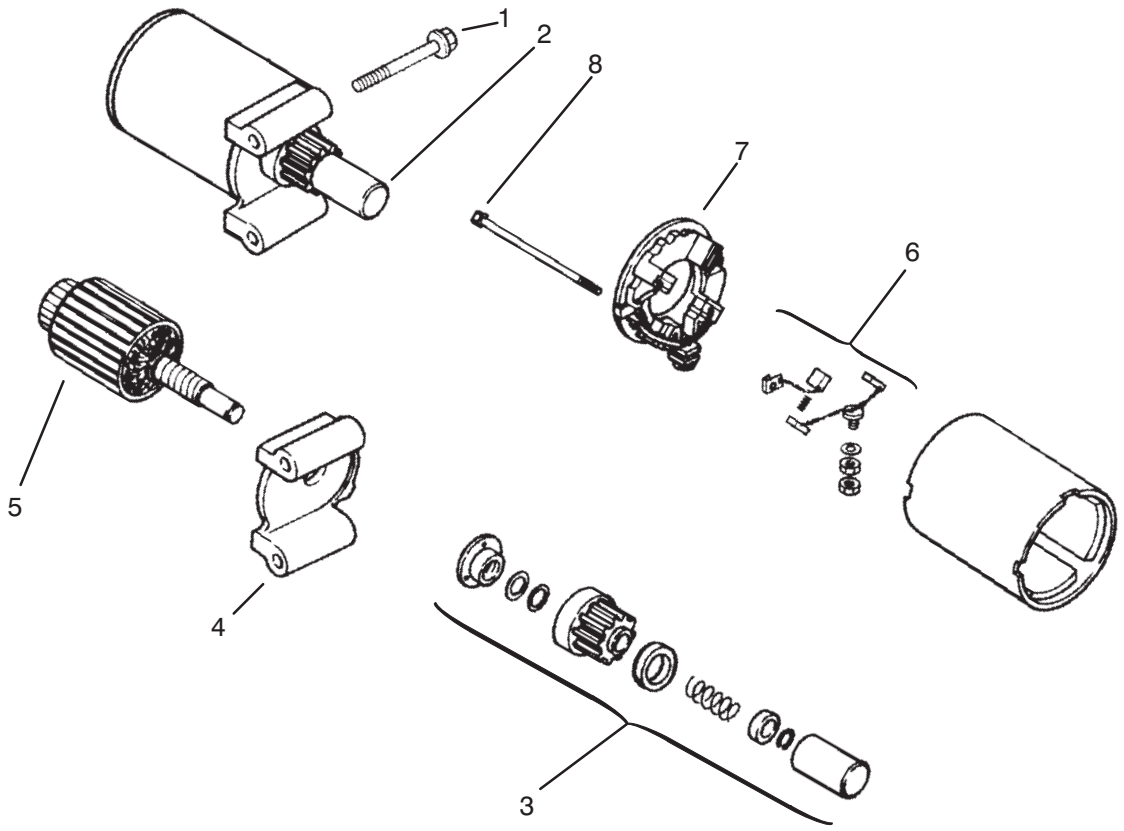


Sheet No.:7
C–3024

Starting System Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	M–839070–S	2	Screw M8x1.25x70
2	12 098 15–S	1	Starter ASM (Incl 3–8)
†3	12 755 53–S	1	Kit–Drive
†4	12 227 19–S	1	Cap–Drive End
†5	12 170 05–S	1	Armature
†6	12 221 01–S	1	Kit–Brush And Spring
†7	12 227 13–S	1	Cap–Commutator
†8	12 211 01–S	2	Bolt

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly
* Not illustrated

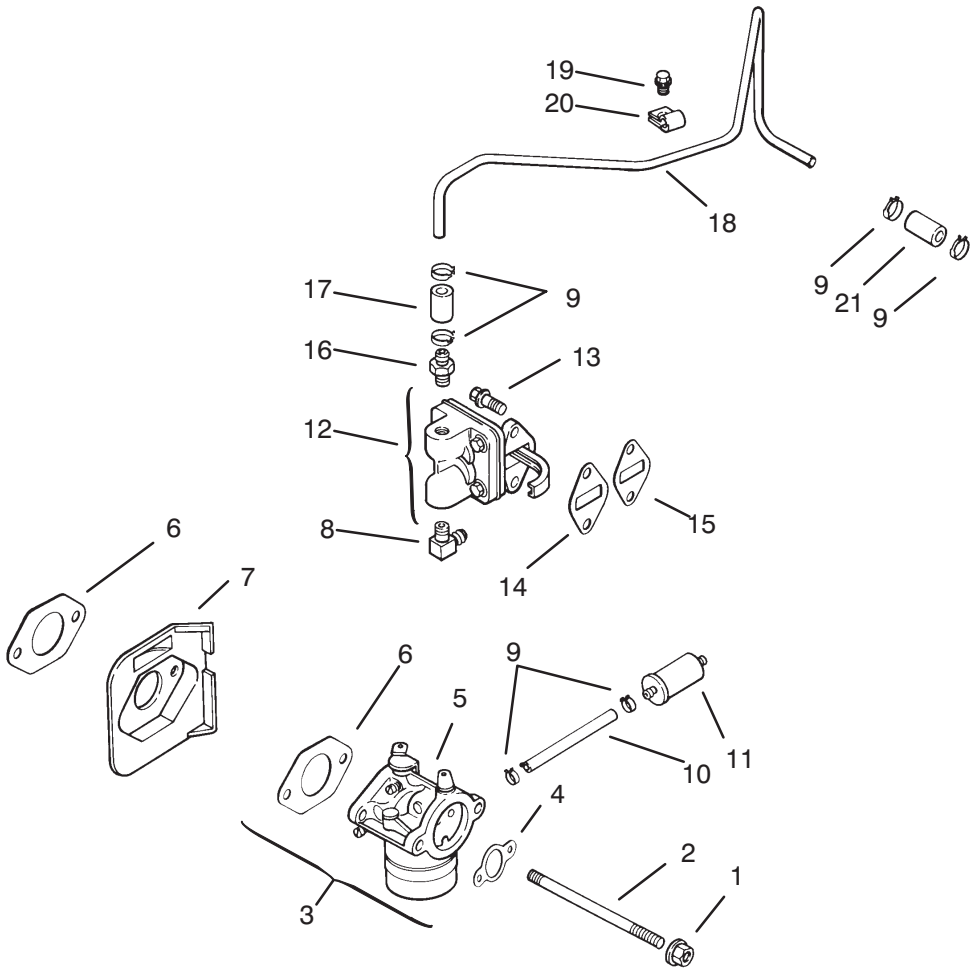


Sheet No.:8
C–3025

Fuel System Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	M–641060–S	2	Nut M6x1.0
2	M–629116–S	2	Stud M6x1.0x116
3	12 853 116–S	1	Kit–Carburator w/Gasket Incl 4–6
†4	12 041 02–S	1	Gasket–Air Cleaner
†5	12 053 116–S	1	Carurator ASM (Not Available Separately) (Service With Kits
*	12 757 02–S	1	Kit–Float
*	12 757 03–S	1	Kit–Carburetor Repair)
†6	12 041 01–S	2	Gasket–Carburetor
7	12 265 06–S	1	Deflector–Heat
8	25 155 02–S	1	Connector–90°, Hose
9	25 237 14–S	6	Clamp, Fuel Line
10	25 353 02–S	1	Line–Fuel 3”
11	25 050 02–S	1	Filter–Fuel
12	12 559 01–S	1	Kit–Pump (Incl 13–15)
†13	M–645020–S	2	Screw M6x1.0x20
†14	25 041 09–S	2	Gasket–Fuel Pump
†15	12 112 05–S	1	Spacer–Fuel Pump
16	25 326 03–S	1	Connector–Straight
17	12 353 01–S	1	Line–Fuel 1-1/4”
18	12 123 19–S	1	Line–Fuel
19	M–545010–S	1	Screw M5x0.8x10
20	12 154 01–S	1	Clamp–Fuel Line
21	41 353 18–S	1	Line, Fuel 2-1/2”

† Included in a service kit or in an assembly
* Not illustrated

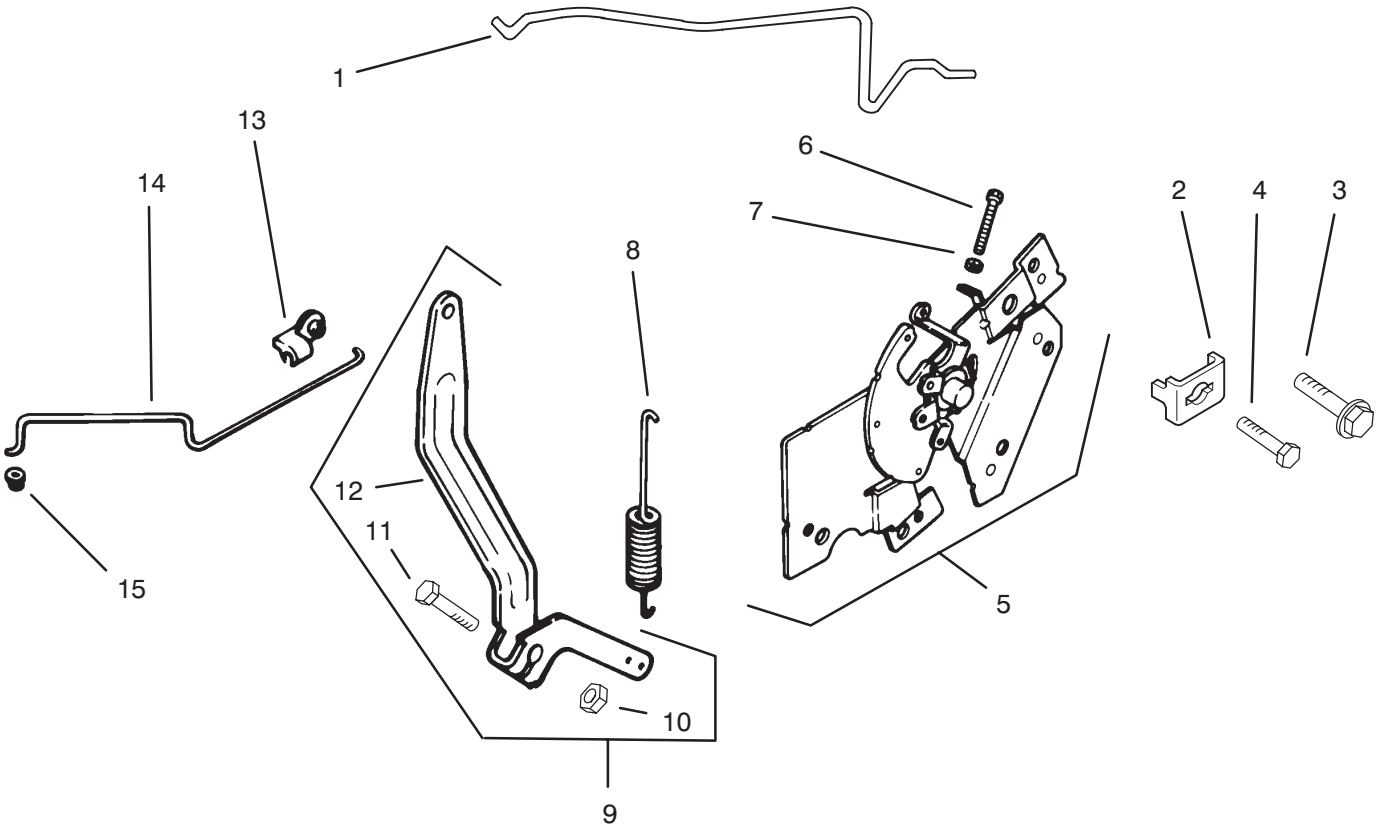


Sheet No.:9
C–3026

Engine Controls Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	12 079 11–S	1	Linkage–Choke
2	12 237 01–S	2	Clamp–Cable
3	M–545016–S	2	Screw M5x0.8x16
4	M–664020–S	2	Screw, M6x1.0x20
5	12 536 02–S	1	Control– Speed ASM (Incl 6,7)
†6	M–401030–S	1	Screw M4x0.7x30
†7	M–446030–S	1	Nut M4x0.7
8	52 089 07–S	1	Spring–Governor
9	12 755 83–S	1	Kit, Governor Lever (Incl 10–12)
†10	12 100 07–S	1	Nut M6x1.0
†11	52 211 04–S	1	Screw M6x1.0x25
†12	12 090 28–S	1	Lever–Governor
13	25 158 11–S	1	Bushing–Linkage
14	12 079 10–S	1	Linkage–Throttle
15	25 158 08–S	1	Bushing–Linkage

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

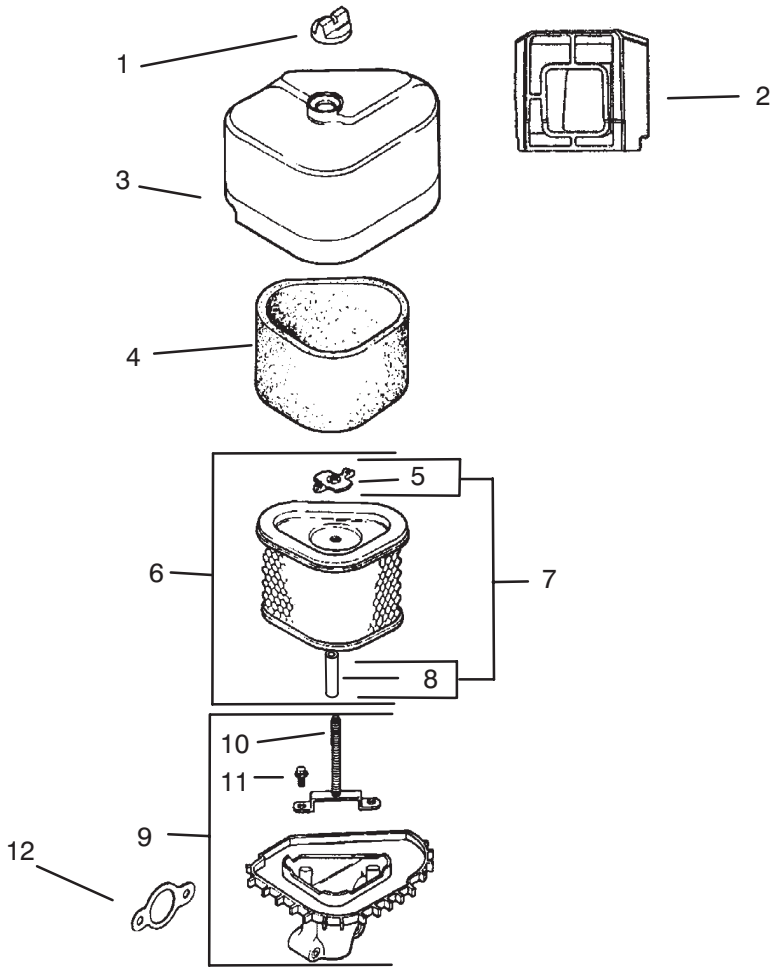


Sheet No.:10
C–3027

Air Intake / Filtration Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	25 341 03–S	1	Knob–Air Cleaner Cover
2	12 281 01–S	1	Duct, Air
3	12 096 24–S	1	Cover–Air Cleaner
4	12 083 12–S	1	Element–Precleaner
†5	12 100 08–S	1	Nut–Wing
6	12 083 10–S	1	Element–Air Cleaner (Incl 5, 7 & 8)
†7	12 743 12–S	1	Kit–Air Cleaner Seal (Incl 5 & 8)
†8	12 032 11–S	1	Seal 2”
9	12 094 07–S	1	Base–Air Cleaner (Incl 10 & 11)
†10	12 072 04–S	1	Stud M6x1.0x79
†11	12 086 01–S	2	Screw, #10 Hi–Lo Thread Forming
12	12 041 02–S	1	Gasket–Air Cleaner
*	12 113 04–S	1	Decal, Air Cleaner

Ref. No.	Part No.	Qty.	Description

* Not illustrated

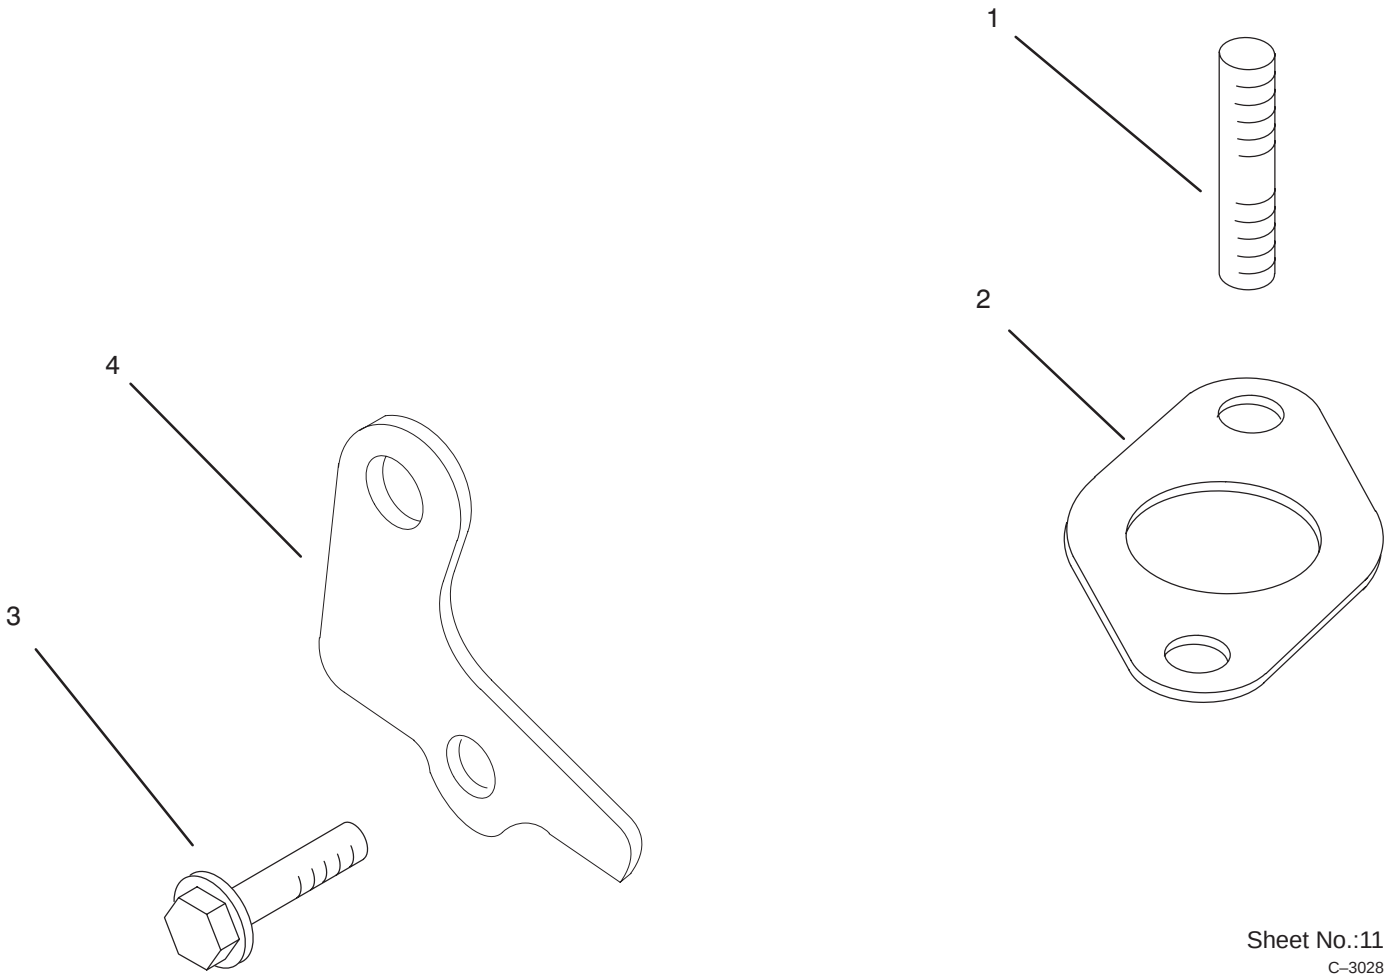

Sheet No.:11
C–3028

Exhaust Assembly
Kohler Models CV460S–26505 and CV460S–26506

Ref. No.	Part No.	Qty.	Description
1	25 072 04–S	2	Stud M8x1.25x33
2	12 041 03–S	1	Gasket–Exhaust Manifold
3	M–645025–S	1	Screw M6x1.0x25
4	12 455 06–S	1	Strap–Lifting

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								


TORO®