FORM NO. 3322–430 REV A

LAWN-BOY®

Commercial Walk–Behind Mower

Model No. 11002 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Housing Assembly	1
Engine & Blade Assembly	2
Handle Assembly	3
Engine Assembly	4
Engine Assembly (cont.)	5
Short Block Assembly	6
Carburetor Assembly	7

Note:

Accessories

Description	Model / Parts No.
Side Bagging Kit	Model No. 89814
Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800
Mulching Plate	Model No. 89864
Leaf Bag w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

© The Lawn–Boy Inc. – 1999
All Rights Reserved

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

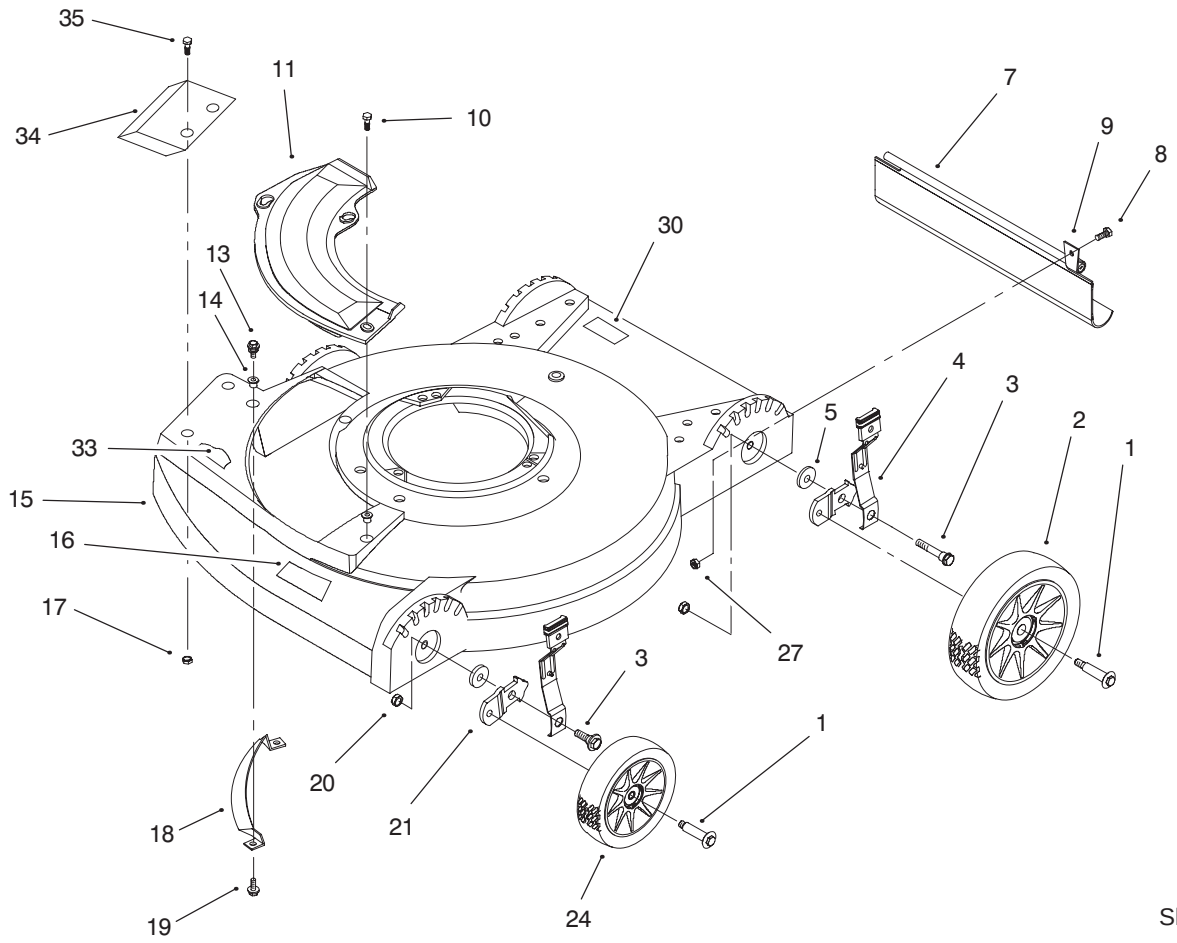


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	603567	4	Bolt–Wheel
2	683464	2	Wheel & Tire ASM
3	610646	4	Bolt–Ajustment
4	153444	4	Knob & Spring
5	608834	4	Washer
7	93–7368	1	Shield–Trailing
8	609891	2	Screw–HH
9	93–7693	2	Clamp–Rod
10	49–2040	1	Screw–HH
11	95–7052	1	Plate–Cover
13	614677	2	Screw
14	94–1610	3	Grommet–Plastic
15	99–5203	1	Housing
16	99–1502	1	Decal–Deck
17	3296–42	2	Nut–Lock
18	608175	1	Toe Bar
19	46–6811	2	Screw–HWH
20	3296–39	4	Nut–Lock
21	608833–03	4	Bracket–Height
24	684159	2	Wheel & Tire
27	3296–56	2	Nut–Lock
30	93–6657	1	Decal–Danger
33	93–7009	1	Decal–Deflector Danger
34	93–7415–03	1	Guard–Plate
35	32105–15	2	Screw–HH

Ref. No.	Part No.	Qty.	Description

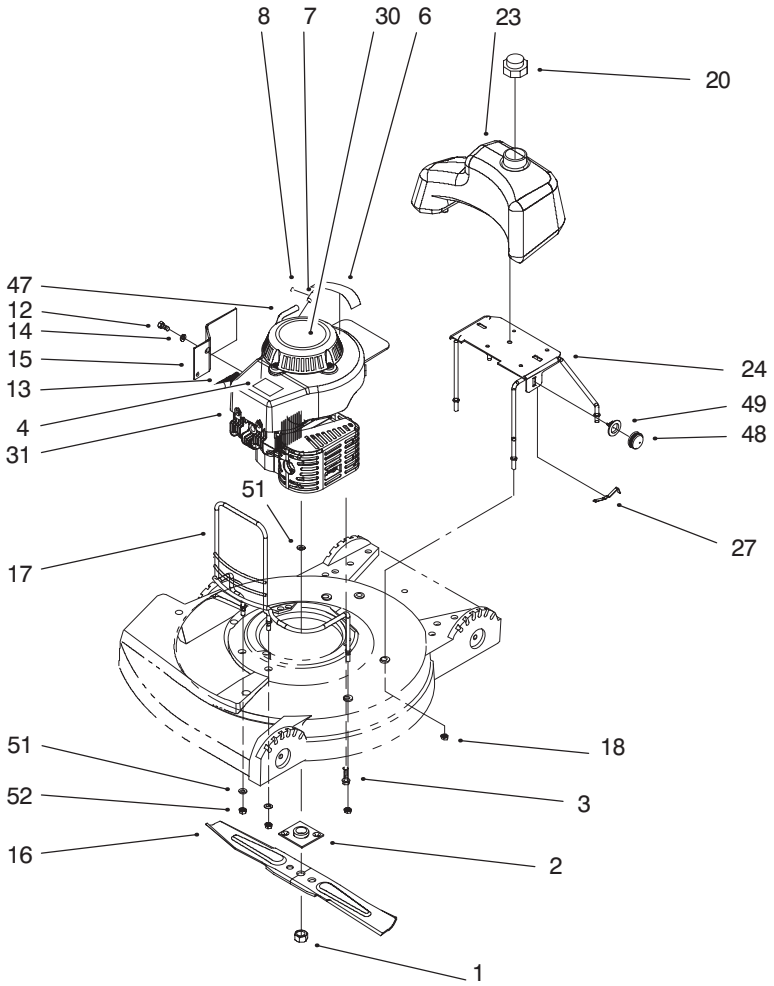


Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut–Blade
2	677525	1	ASM–Plate & Collar
3	98–4480	3	Screw
4	99–1517	1	Decal–Lawn Boy
6	99–1520	1	Decal–Fuel Mix
7	47–2480	1	Rope Stop
8	3290–443	1	Staple
12	322–3	2	Screw–HH
13	93–4306	1	Spring–Compression
14	3253–4	2	Washer–Lock
15	99–1515–03	1	Guard–Brake
16	612543	1	Blade–21”
17	98–1598	1	Guard–Engine
18	608311	5	Locknut
20	98–8344	1	Fuel/Oil Cap ASM
21	314576	1	Screw–Throttle Cable
22	306531	1	Nut–Throttle Cable
23	98–4497	1	Tank–Fuel
24	98–4458–03	1	Tank Bracket ASM
27	609830	2	Spring
30	92–9551	1	Decal – Recoil
31		1	Engine
47	612782	1	Gas Line
48	66–7460	1	Bulb–Primer
49	44–2750	1	Body–Primer

Ref. No.	Part No.	Qty.	Description
51	68–5920	5	Washer–Flat
52	3296–39	2	Locknut

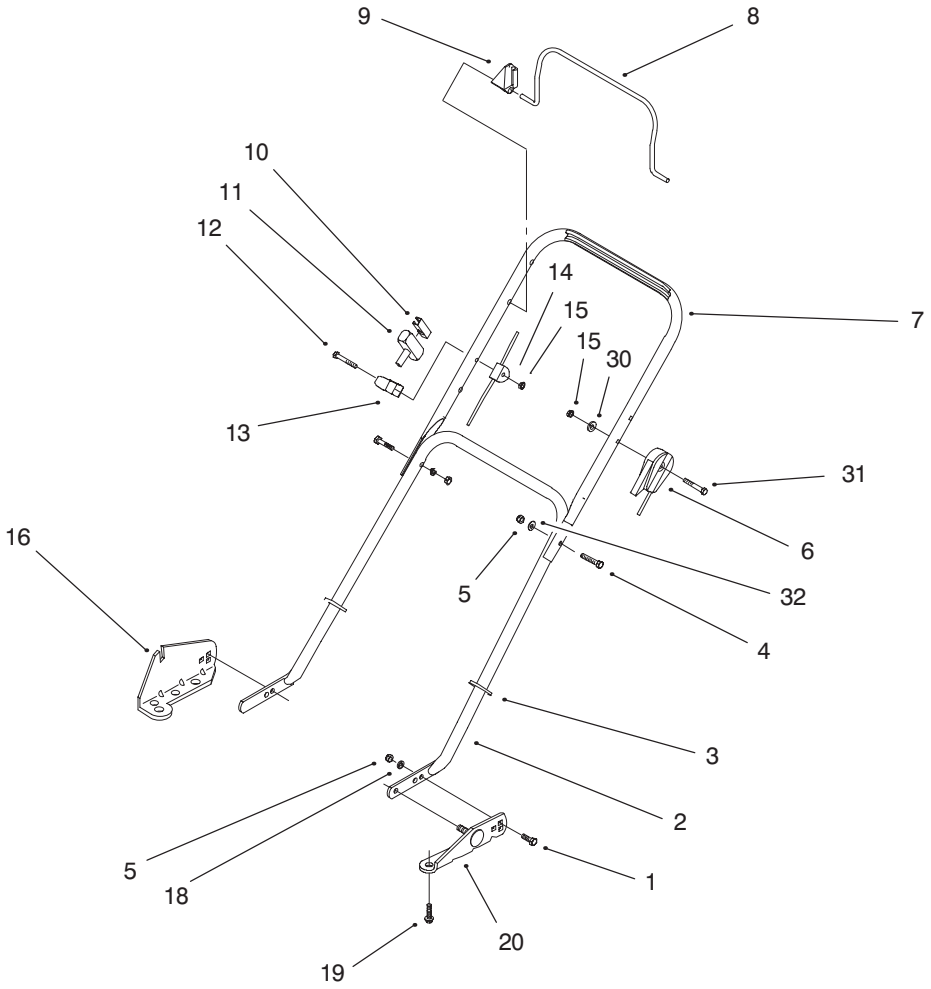


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	3230–29	2	Bolt–CARR
2	613048–05	1	Handle Section–Lower
3	614249	2	Tie Strap
4	322–9	2	Screw–HH
5	3296–29	4	Nut–Lock
6	100–1172	1	Cable–Throttle
7	614515–05	1	Handle Section–Upper
8	100–1174	1	Bail–Flywheel Brake
9	92–5412	1	Stop–Pivot
10	612824	1	Clip–Rope
11	612825	1	Handle–Starter
12	321–49	1	Screw–HH
13	93–7383	1	Guide–Rope
14	100–1173	1	Cable–Flywheel Brake
15	3296–73	2	Nut–Lock
16	684057–03	1	Bracket & Pin ASM
18	3253–33	2	Washer–Lock
19	607188	4	Screw
20	684058–03	1	Bracket & Pin ASM
30	92–8632	1	Washer
31	321–48	1	Screw–HH
32	609739	2	Washer

Ref. No.	Part No.	Qty.	Description

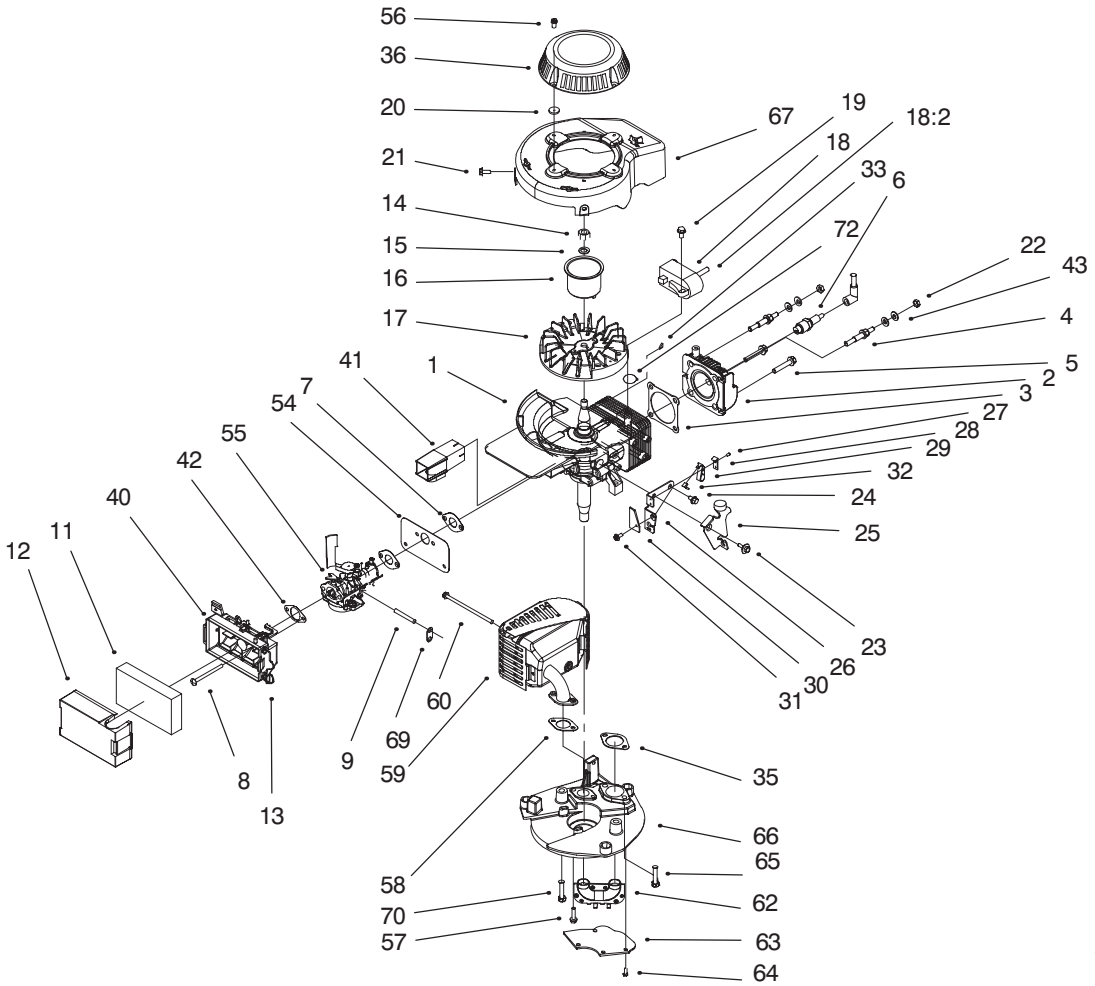


Sheet No.:A3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95–7636	1	Block
2	94–5776	1	Head
3	94–5778	1	Gasket–Head
4	94–5779	2	Stud
5	94–5780	2	Bolt – Head
6	50–1170	1	Plug–Spark
7	94–5795	2	Gasket–Intake
8	612507	2	Screw
9	44–3170	1	Primer Hose
11	95–5574	1	Filter–Air
12	95–5577	1	Cover–Air Filter
13	610383	1	Retainer
14	130743	1	Nut
15	316959	1	Washer–Lock
16	612949	1	Hub Starter
17	95–1866	1	Flywheel
18	92–1152	1	Ignition
18:2	681678	1	Lead&cover
18:2	684698	1	Cover & Term. ASM
19	613208	2	Screw
20	98–4478	4	Spacer
21	700094	2	Screw–HH
22	146501	2	Nut
23	95–1870	1	Screw–Shoulder
24	95–1871	1	Screw–HWH
25	93–4312	1	Brake Plate ASM

Ref. No.	Part No.	Qty.	Description
26	84–7820	1	Plate–Brake
27	3290–459	2	Rivet–Plastic
28	92–2925	1	Strap–Insulation
29	60–9010	1	Strap–Ground
30	53–4690	1	Stop–Strap
31	12–5450	1	Screw–Special
32	98–7037	1	Wire –Lead
33	607199	1	Key
35	95–1778	1	Gasket–Exhaust
36	684566	1	Starter ASM
40	95–5588	1	Base ASM
41	95–5578	1	Tunnel
42	95–7613	1	Gasket–Filter
43	3290–456	4	Washer–Belleville
54	98–1388	1	Shield – Carb.
55	98–7042	1	Carburetor ASM With Gaskets
56	98–4484	4	Screw Sems
57	613208	2	Screw
58	98–1392	1	Gasket
59	99–2904	1	Muffler And Guard ASM
59:4	98–1394	2	Screw–HWH
59:5	3254–1	2	Washer–Lock/Int
60	611228	1	Bolt–Console
62	98–1557	1	Pipe–Transfer

3322–430A

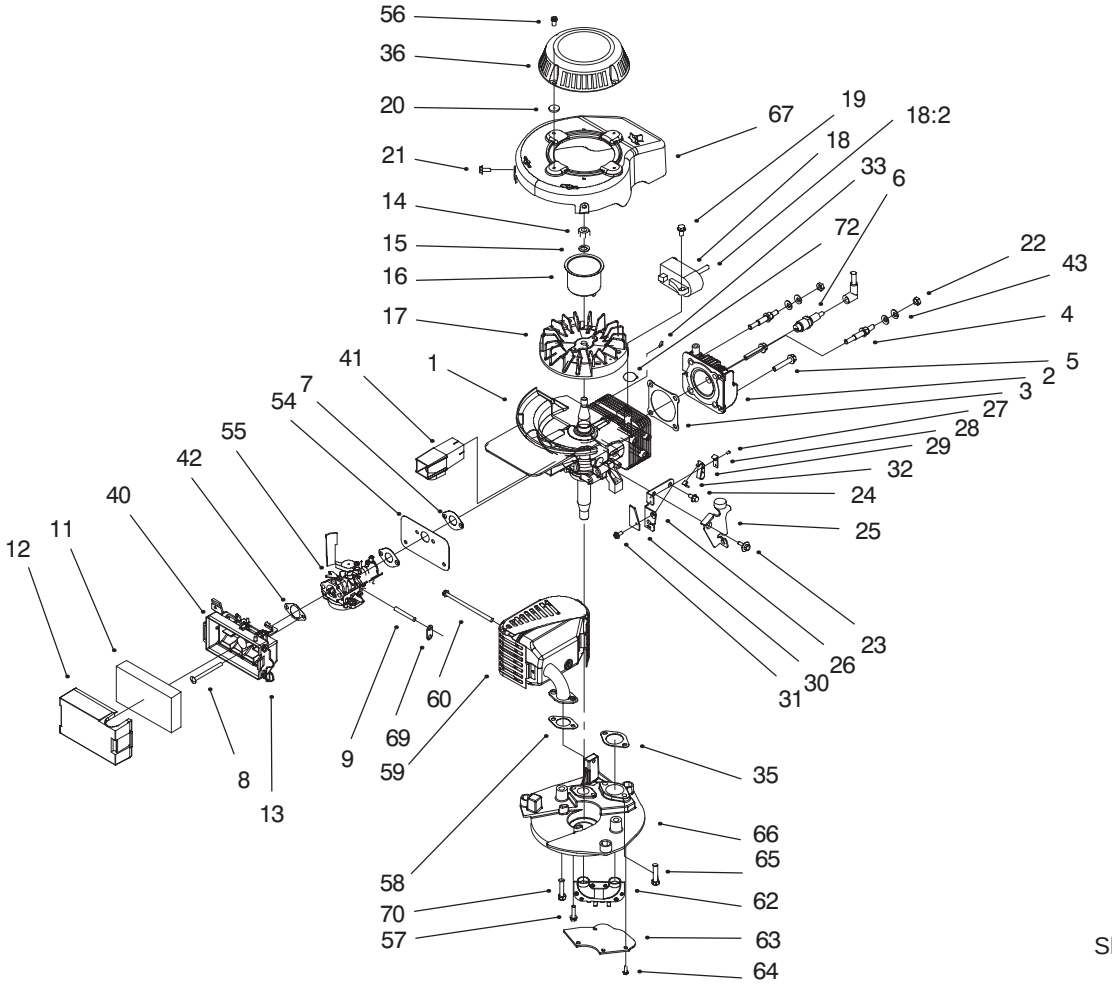


Sheet No.:A3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
63	98–1591	1	Cover–Muffler
64	700822	4	Screw–HH
65	322–17	2	Screw–HH
66	98–1383	1	Mounting Plate
67	98–4467	1	Shroud ASM
69	95–7615	1	Hose–Retainer
70	613233	2	Screw HWH
72	317893	1	Strap–Tie

Ref. No.	Part No.	Qty.	Description

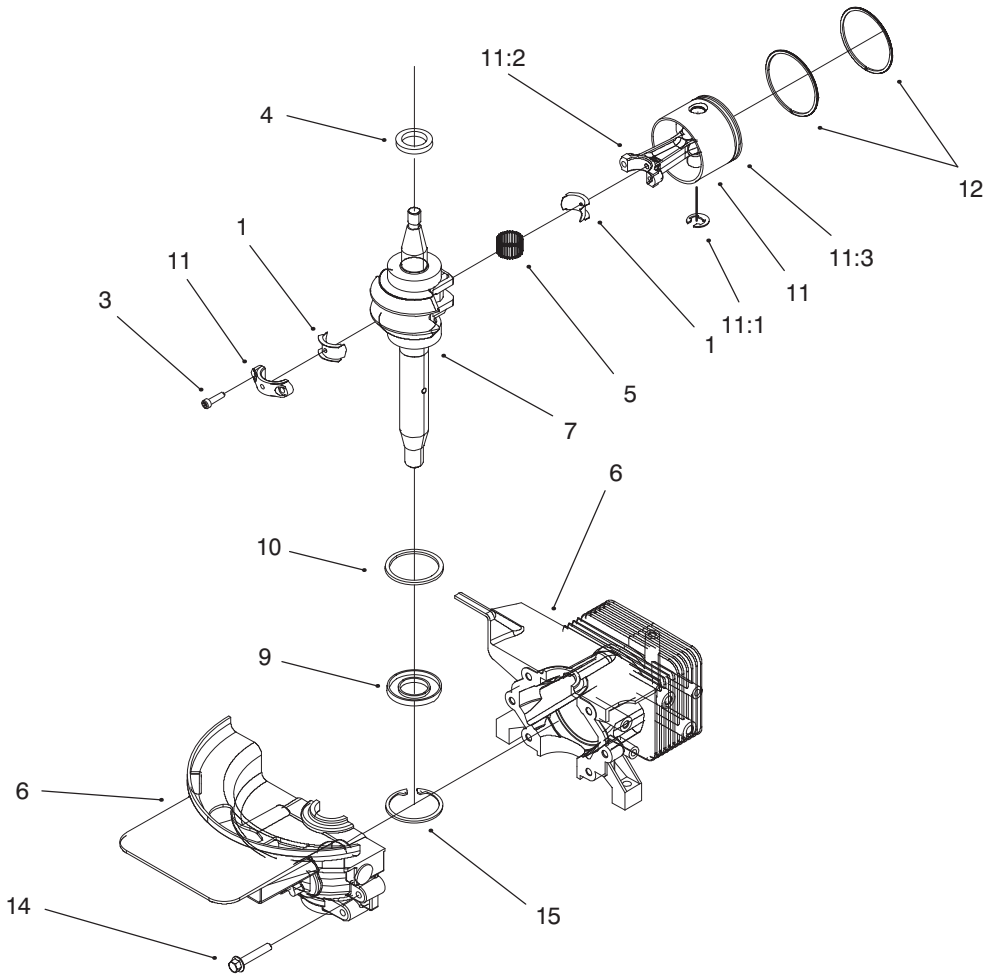


Sheet No.:A5

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
2	610372	2	Sealer–Loctite
2	609790	2	Sealant–50cc #2
3	611393	4	Screw–Rod
4	611396	1	Seal– Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
7	99–2920	1	Crankshaft And Bearing ASM
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11		1	Piston & Rod ASM
11:1	303712	2	Ring– Retaining
11:2	95–7629	1	Connecting Rod ASM
11:3	95–7628	1	Piston ASM With Piston Rings
12	95–7626	1	Ring Set
14	94–5781	12	Screw
15	98–7046	1	Ring–Retaining

Ref. No.	Part No.	Qty.	Description

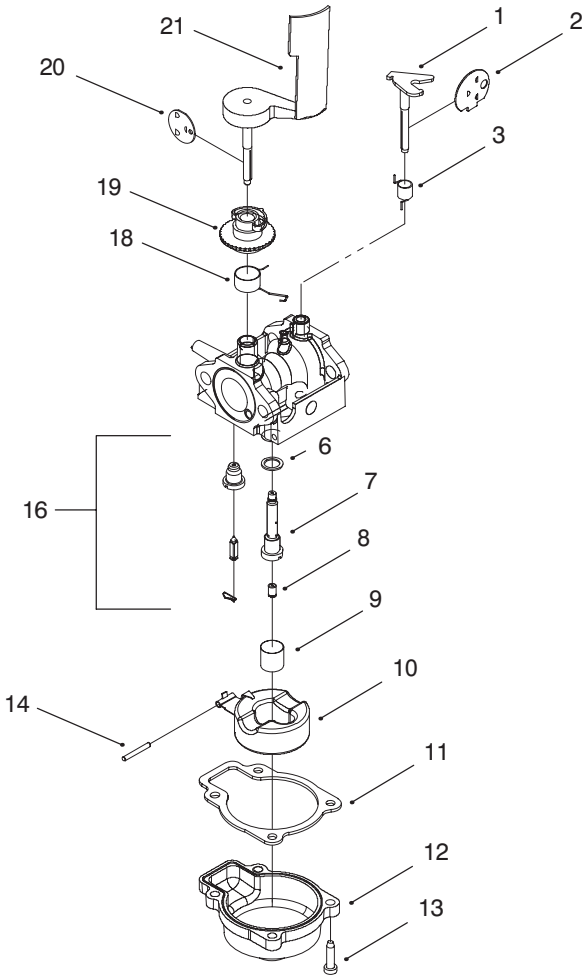

Sheet No.:A6

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	95–5581	1	Shaft–Choke
2	94–5788	1	Disc–Choke
3	95–5583	1	Spring–Choke
6	612383	1	Washer
7	98–7001	1	Nozzle
8	98–1357	1	Jet – Main
9	94–5787	1	Filter–Fuel
10	95–1899	1	Float & Arm ASM
11	98–1362	1	Gasket
12	92–9691	1	Chamber–Float
13	608850	4	Screw–HH
14	92–6389	1	Pin
16	92–9697	1	Valve/Seat–Float
18	98–7011	1	Spring
19	610834	1	Airvane–Collar
20	98–7047	1	Disc–Throttle
21	92–6376	1	Air Vane & Shaft

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

LAWN-BOY®