Form No. 3405-672 Rev F

TORO®

Count on it.

Parts Catalog

# 52in TITAN® HD 1500 Series

## Riding Mower

**Model No. 74451—Serial No. 400000000 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3405-672* F

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


Frame, Roll-Over Protection System and Caster Assembly . . . . . 4
Fork and Caster Wheel Assembly . . . . . 6
Roll-Over Protection System Assembly No. 126-9526 . . . . . 8
Hydraulic Assembly . . . . . 10
LH Transaxle Assembly No. 135-0140 . . . . . 12
RH Transaxle Assembly No. 135-0139 . . . . . 14
Control Console and Guard Assembly . . . . . 16
Fuel Tank and Vent Hose System Assembly . . . . . 18
Fuel Tank Assembly No. 126-4724 . . . . . 20
Seat Mount Assembly . . . . . 22
Seat Pan and Latch Assembly No. 126-7309 . . . . . 24
Seat Assembly No. 130-0801 . . . . . 26
Motion Control Assembly . . . . . 28
LH Motion Control Assembly . . . . . 30
RH Motion Control Assembly . . . . . 32
Electrical System Assembly . . . . . 34
Wire Harness Assembly No. 126-5803 . . . . . 36
Deck Lift Assembly . . . . . 38
Deck Strut Assembly No. 126-8365 . . . . . 40
Engine Assembly . . . . . 42
Deck Assembly . . . . . 44
Deflector Assembly No. 120-2451 . . . . . 46
Deck Decal Assembly No. 126-8957 . . . . . 48
Fuel System Assembly with Non-Canister Style Air Filter . . . . . 50
Carburetor Assembly with Non-Canister Style Air Filter . . . . . 52
Air Intake and Filtration Assembly with Non-Canister Style Air Filter . . . . . 54
Ignition and Electrical Assembly . . . . . 56
Crankcase and Crankshaft Assembly . . . . . 58
Governor Control Assembly . . . . . 60
Piston and Cylinder Head Assembly . . . . . 62
Blower Housing Assembly . . . . . 64
Gasket and Seal Kit . . . . . 66
Attachments and Accessories . . . . . 68




**© 2020—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**





**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

# Frame, Roll-Over Protection System and Caster Assembly

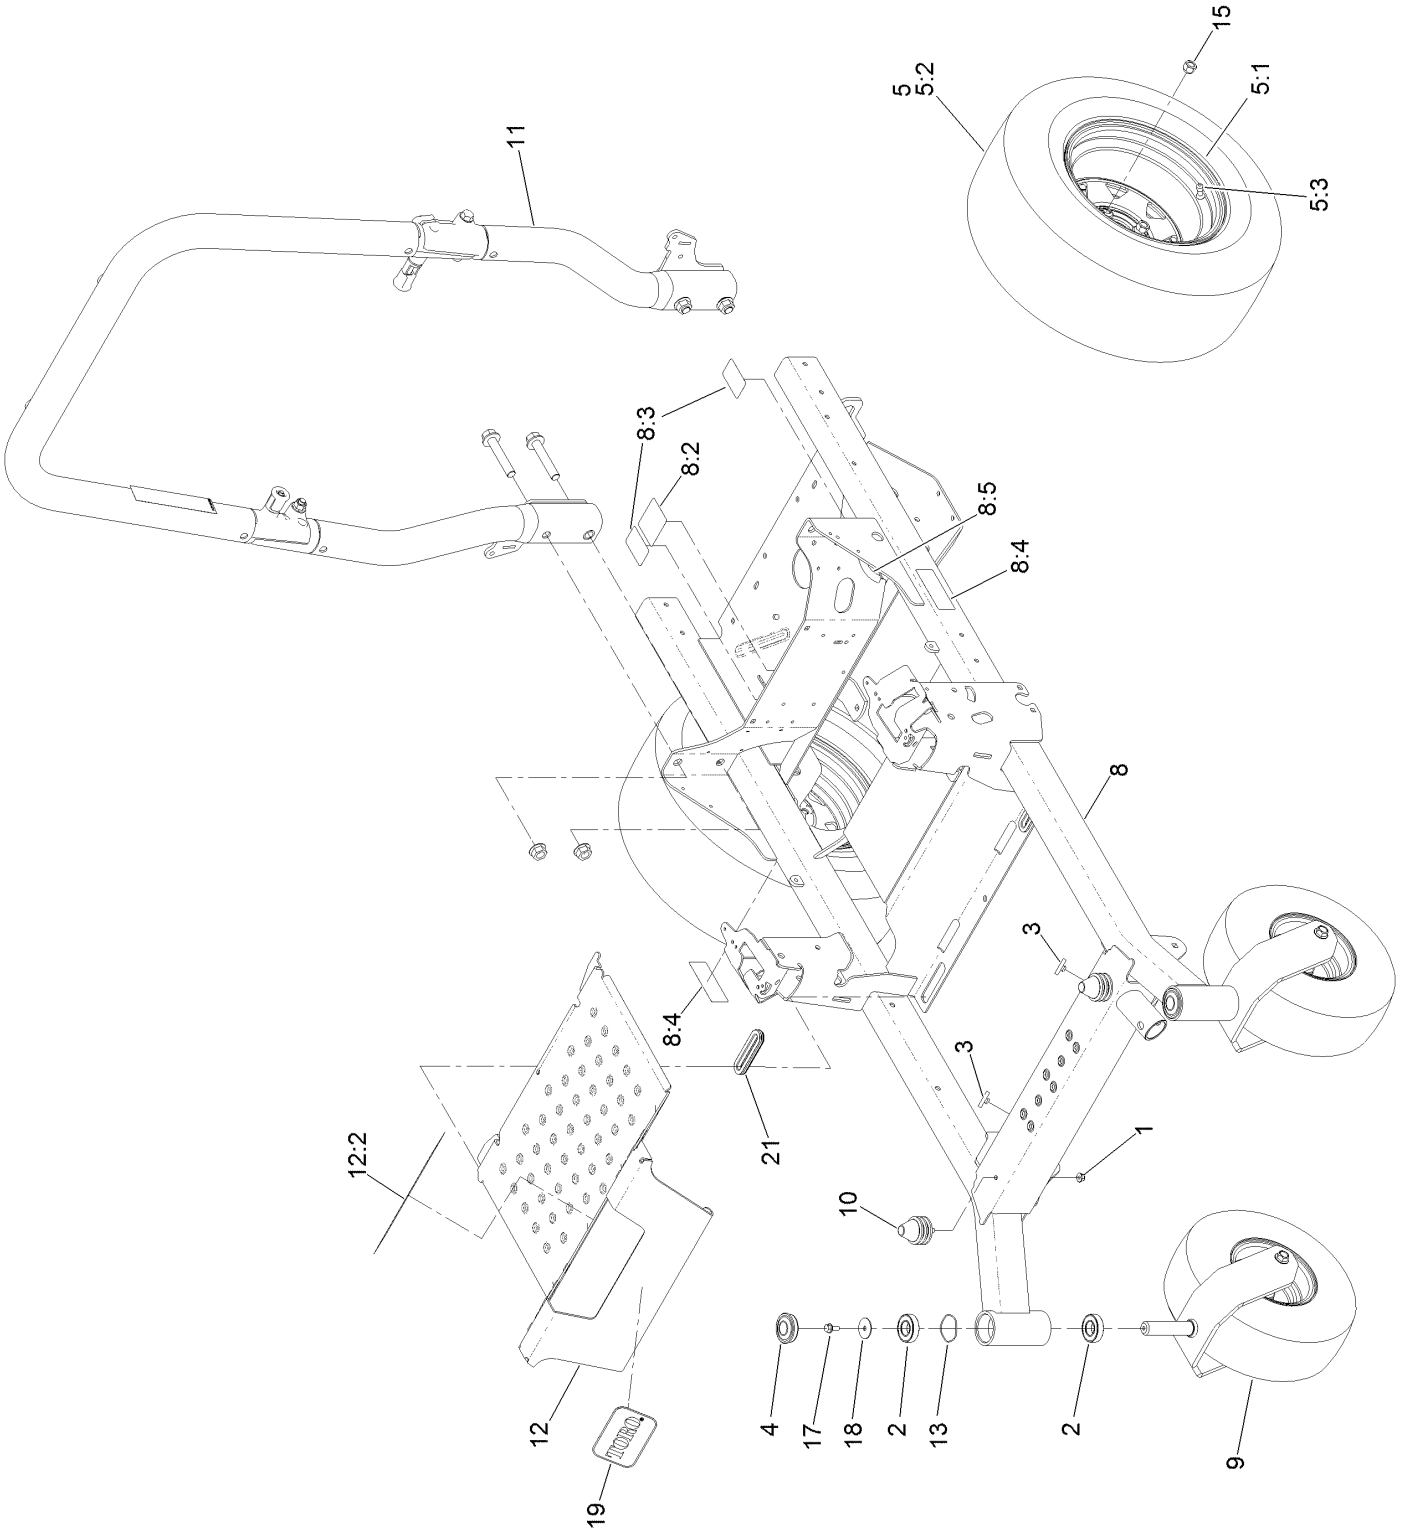


# Frame, Roll-Over Protection System and Caster Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-8300 | 2 | Nut-HF, NI |
| 2 | 109-3678 | 4 | Bearing-Ball |
| 3 | 109-9233 | 2 | Bumper-Push-In, Rubber |
| 4 | 116-4348 | 2 | Cap-Grease |
| 5 | 126-7827 | 2 | Wheel And Tire ASM |
| 5:1 | 126-7828 | 1 | Rim-Wheel |
| 5:2 | 120-3271 | 1 | Tire |
| 5:3 | 232-27 | 1 | Stem-Valve |
| 8 | 126-4699 | 1 | Frame ASM |
| 8:2 | 109-6014 | 1 | Decal-Routing, Belt |
| 8:3 | 116-8588 | 2 | Decal-Release, Drive |
| 8:4 | 126-4363 | 2 | Decal-Warning |
| 8:5 | 127-6618 | 1 | Strip-Seal |
| 9 | | 2 | Front Caster ASM (W/Fork) ● |
| 10 | 126-5491 | 2 | Isolator |
| 11 | 126-9526 | 1 | ROPS ASM |
| 12 | 126-5872 | 1 | Pan-Floor |
| 12:2 | 126-8383 | 1 | Decal-Danger |
| 13 | 126-5897 | 2 | Spring |
| 15 | 242-50 | 8 | Nut-Lug |
| 17 | 3234-5 | 2 | Screw-HHF |
| 18 | 3256-68 | 2 | Washer-Flat |
| 19 | 67-1300 | 1 | Decal |
| 21 | 126-7065 | 2 | Grommet-Rubber |

● Not serviced separately


# Fork and Caster Wheel Assembly

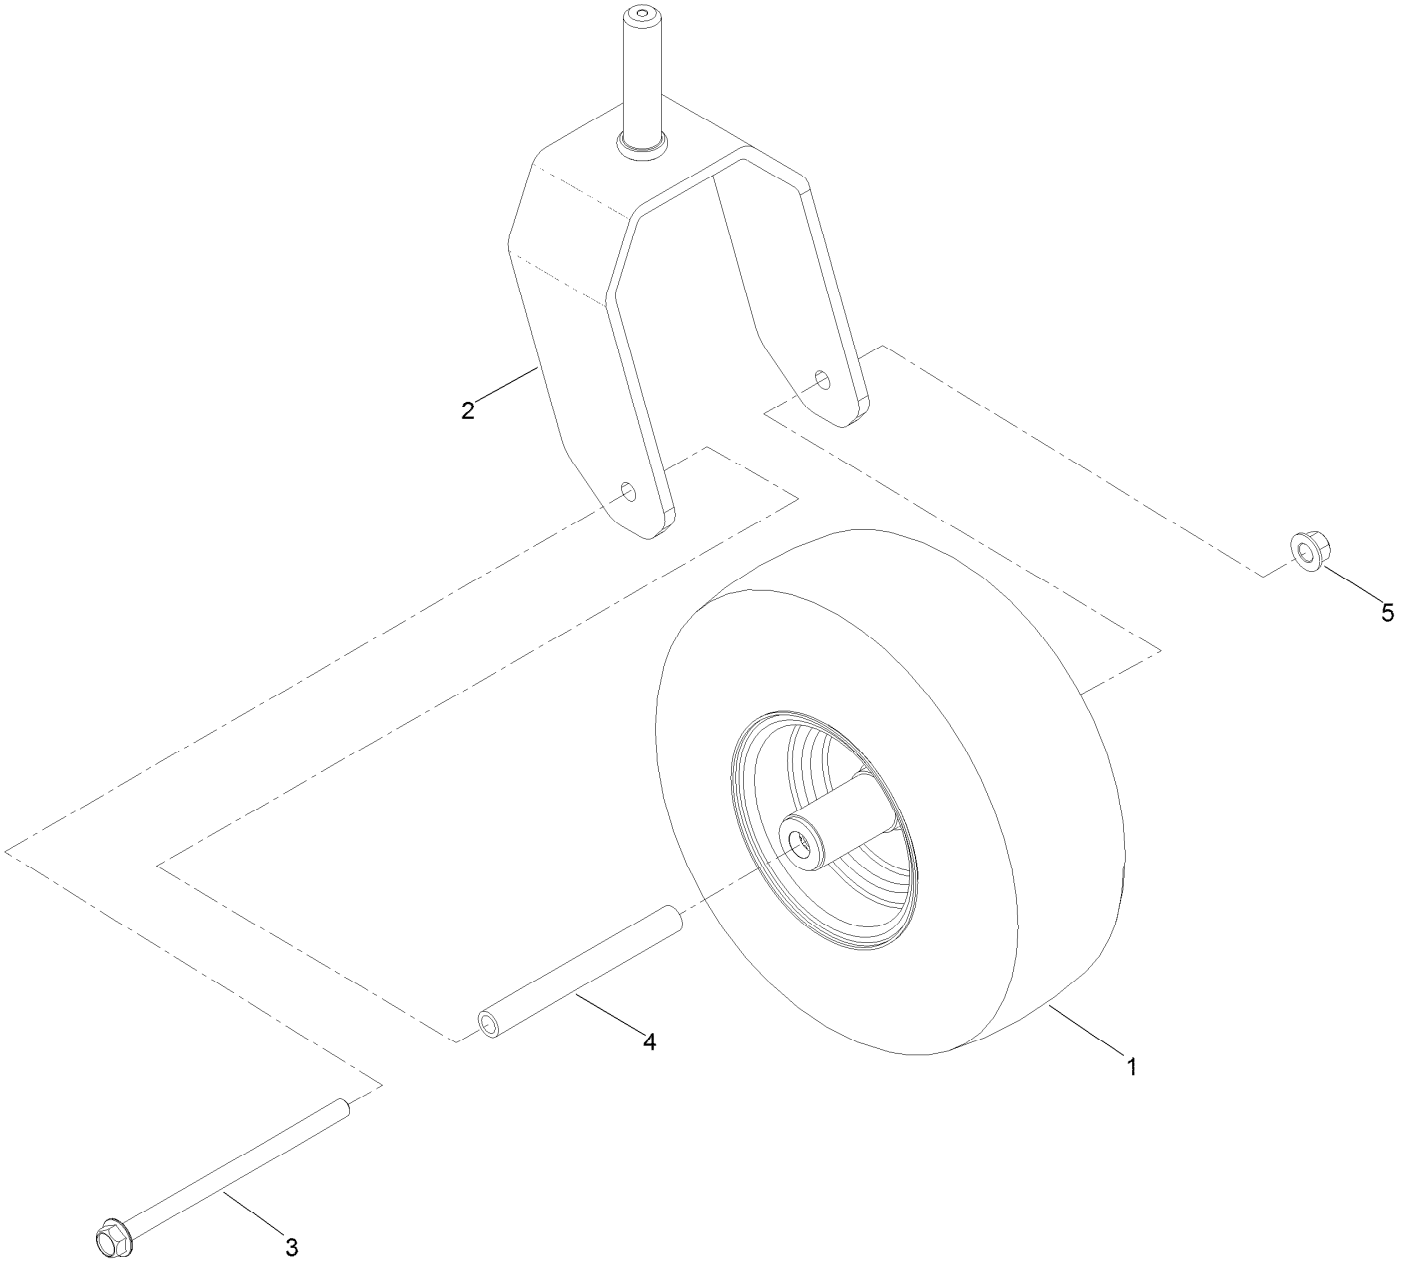

# Fork and Caster Wheel Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-7592 | 1 | Wheel And Tire ASM |
| 2 | 126-4312-01 | 1 | Fork-Caster |
| 3 | 126-5389 | 1 | Screw-HHF |
| 4 | 127-0068 | 1 | Spanner-Wheel, Caster |
| 5 | 99-5107 | 1 | Nut-Lock |

# Roll-Over Protection System Assembly
# No. 126-9526

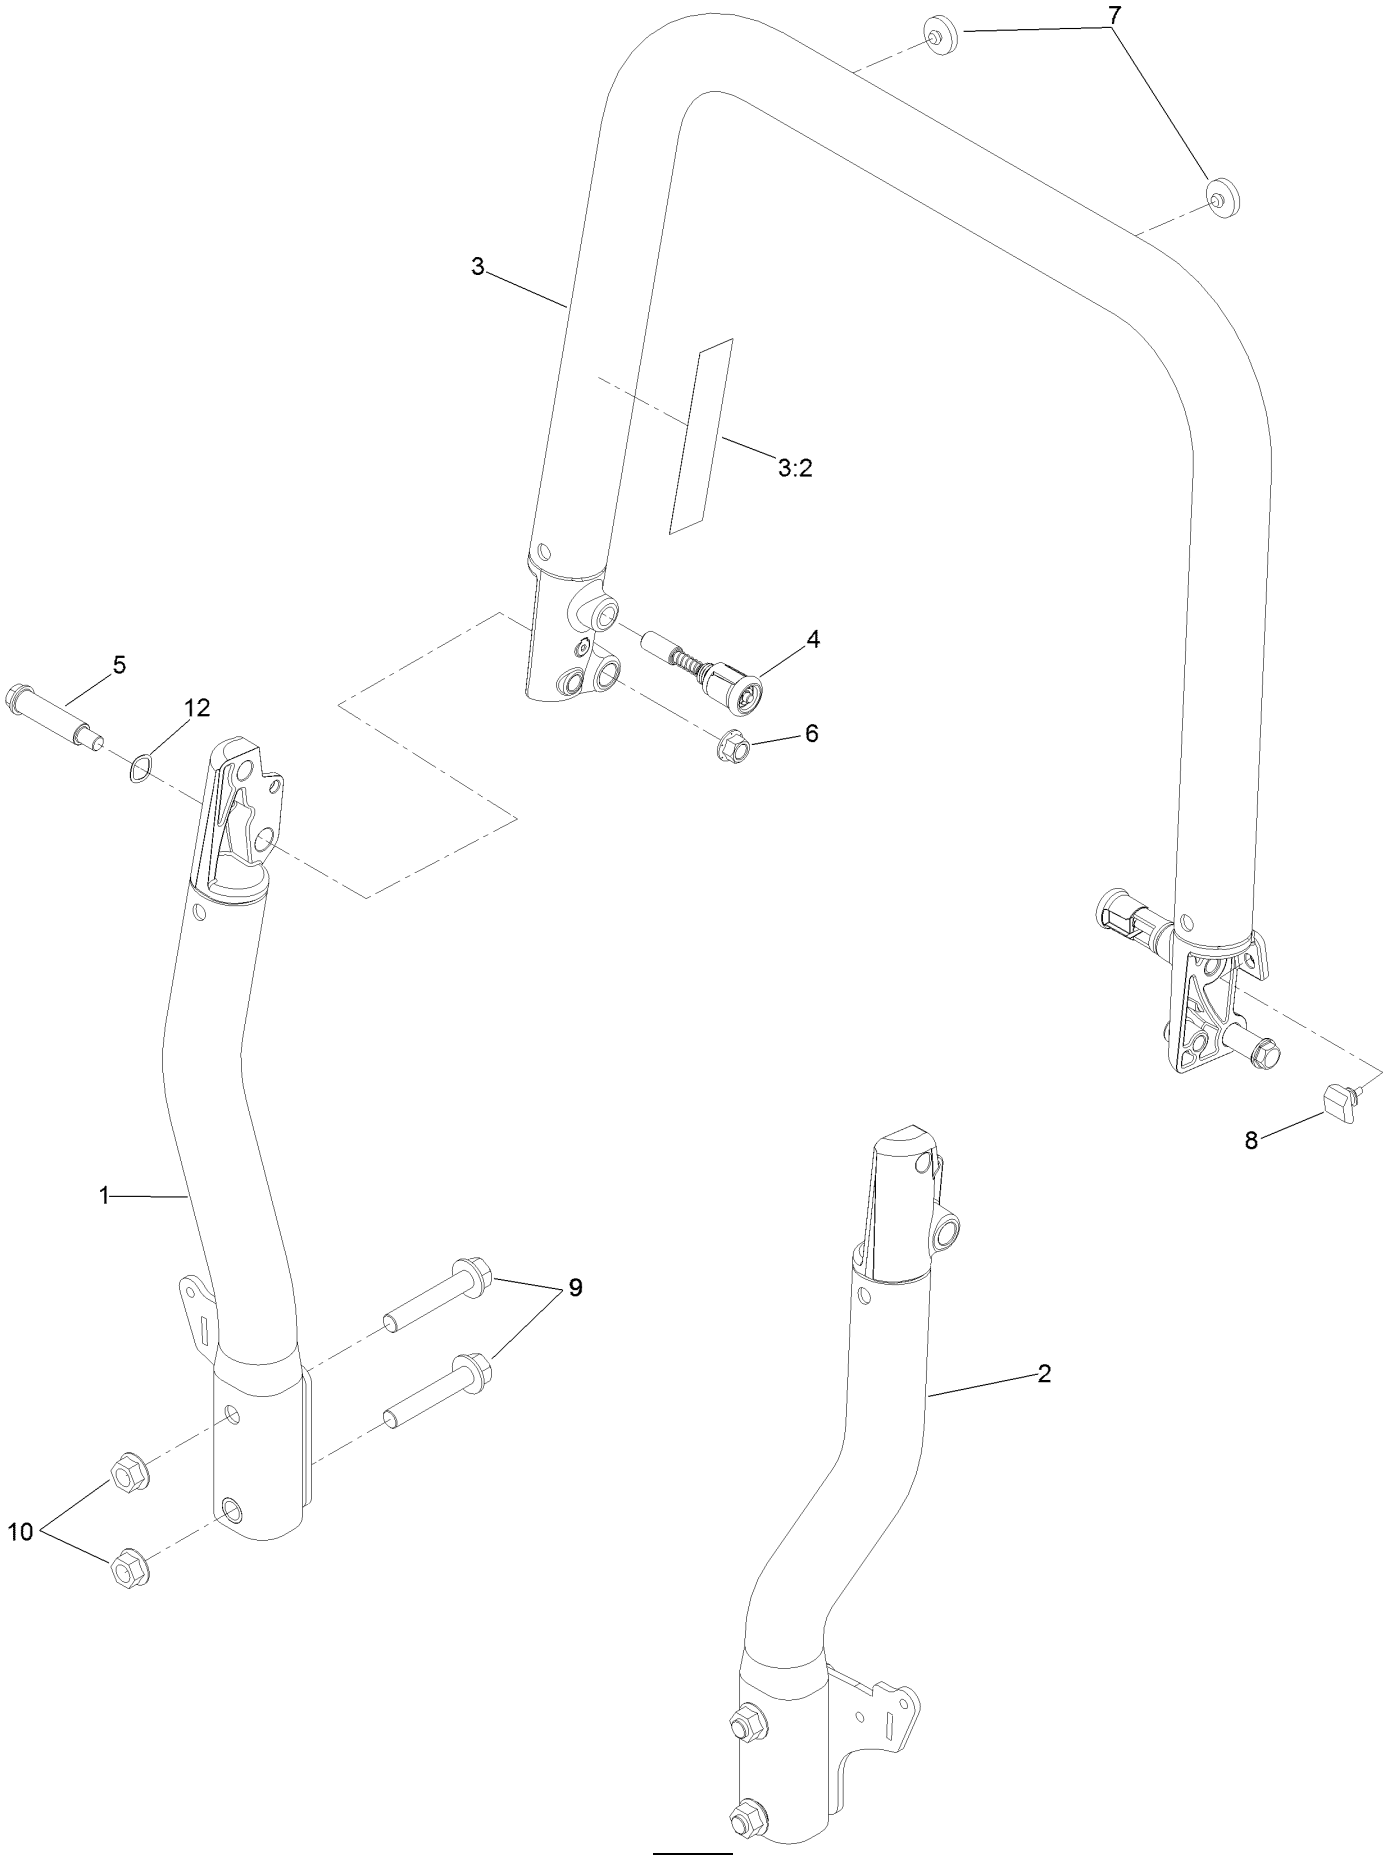


# Roll-Over Protection System Assembly No. 126-9526 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Tube-Upright, RH ● |
| 2 | | 1 | Tube-Upright, LH ● |
| 3 | | 1 | Tube Top ASM ● |
| 3:2 | 107-3069 | 1 | Decal-Warning |
| 4 | 116-0104 | 2 | Pin-Spring |
| 5 | 126-9209 | 2 | Bolt-Shoulder |
| 6 | 99-5107 | 2 | Nut-Lock |
| 7 | 109-9233 | 2 | Bumper-Push-In, Rubber |
| 8 | 126-9966 | 2 | Bumper-ROPS |
| 9 | 126-9488 | 4 | Screw-HHF |
| 10 | 32128-50 | 4 | Nut-Flange |
| 12 | 119-4164 | 2 | Washer-Wave |

● Not serviced separately

# Hydraulic Assembly

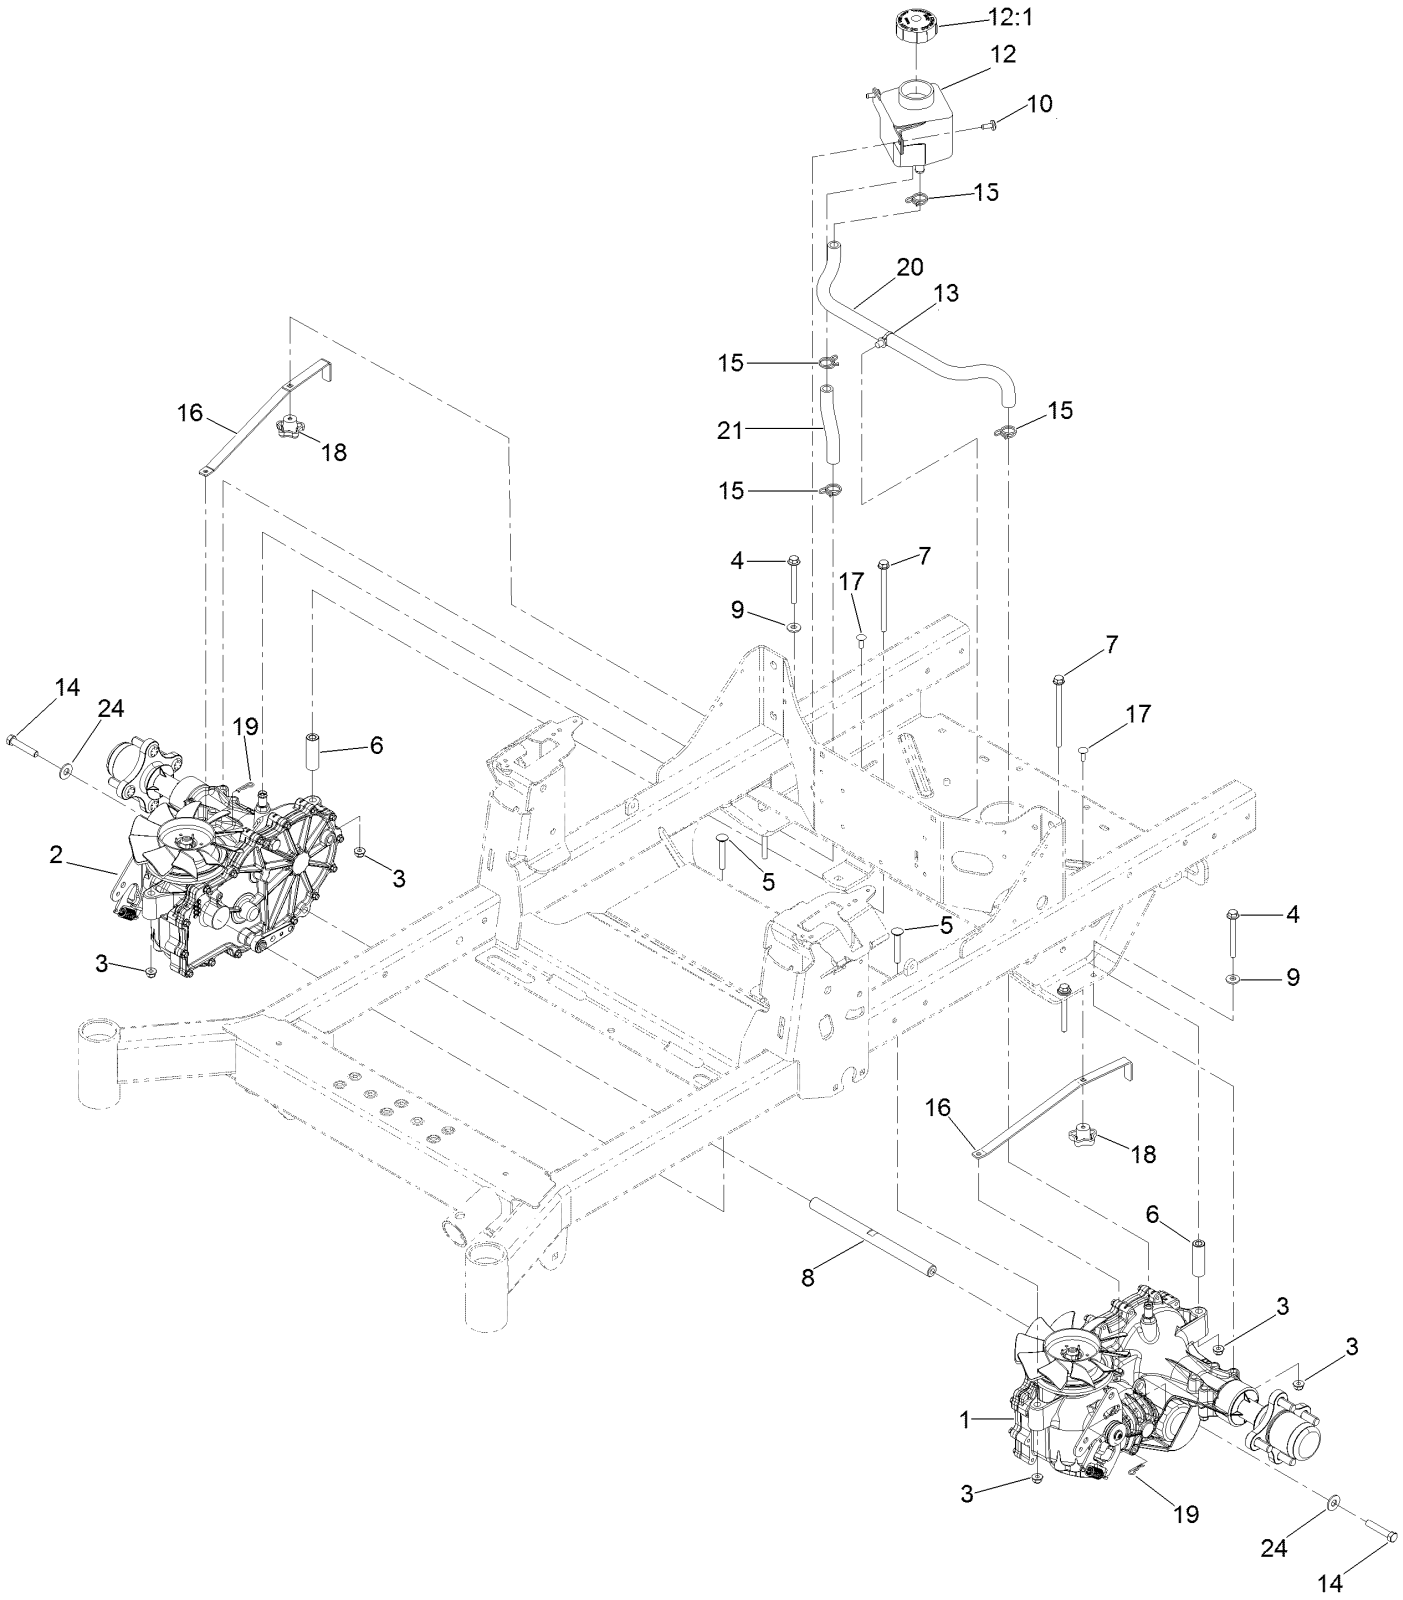


# Hydraulic Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 135-0140 | 1 | LH Transaxle ASM |
| 2 | 135-0139 | 1 | RH Transaxle ASM |
| 3 | 104-8300 | 8 | Nut-HF, NI |
| 4 | 126-4687 | 4 | Screw-HHF ● |
| 5 | 3230-7 | 2 | Bolt-CARR |
| 6 | 116-5809 | 2 | Spacer-Hydro |
| 7 | 126-5896 | 2 | Screw HHF |
| 8 | 116-6833 | 1 | Shaft-Spacer |
| 9 | 1-303334 | 4 | Washer-Spring |
| 10 | 126-6266 | 2 | Screw-Tph |
| 12 | 109-2250 | 1 | Tank-HYD |
| 12:1 | 109-3320 | 1 | Cap-Reservoir, HYD |
| 13 | 32180-118 | 1 | Clip-Tie |
| 14 | 94-7972 | 2 | Screw-HH W/Loctite |
| 15 | 126-0327 | 4 | Clamp-Hose |
| 16 | 109-5395 | 2 | Arm-Bypass, Hydro |
| 17 | 3229-1 | 2 | Screw-CARR |
| 18 | 108-6402 | 2 | Knob-Handle |
| 19 | 1-806003 | 2 | Pin-Cotter |
| 20 | 126-5668 | 1 | Hose-Hydraulic |
| 21 | 126-5669 | 1 | Hose-Hydraulic |
| 24 | 3256-4 | 2 | Washer-Flat |

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

# LH Transaxle Assembly No. 135-0140

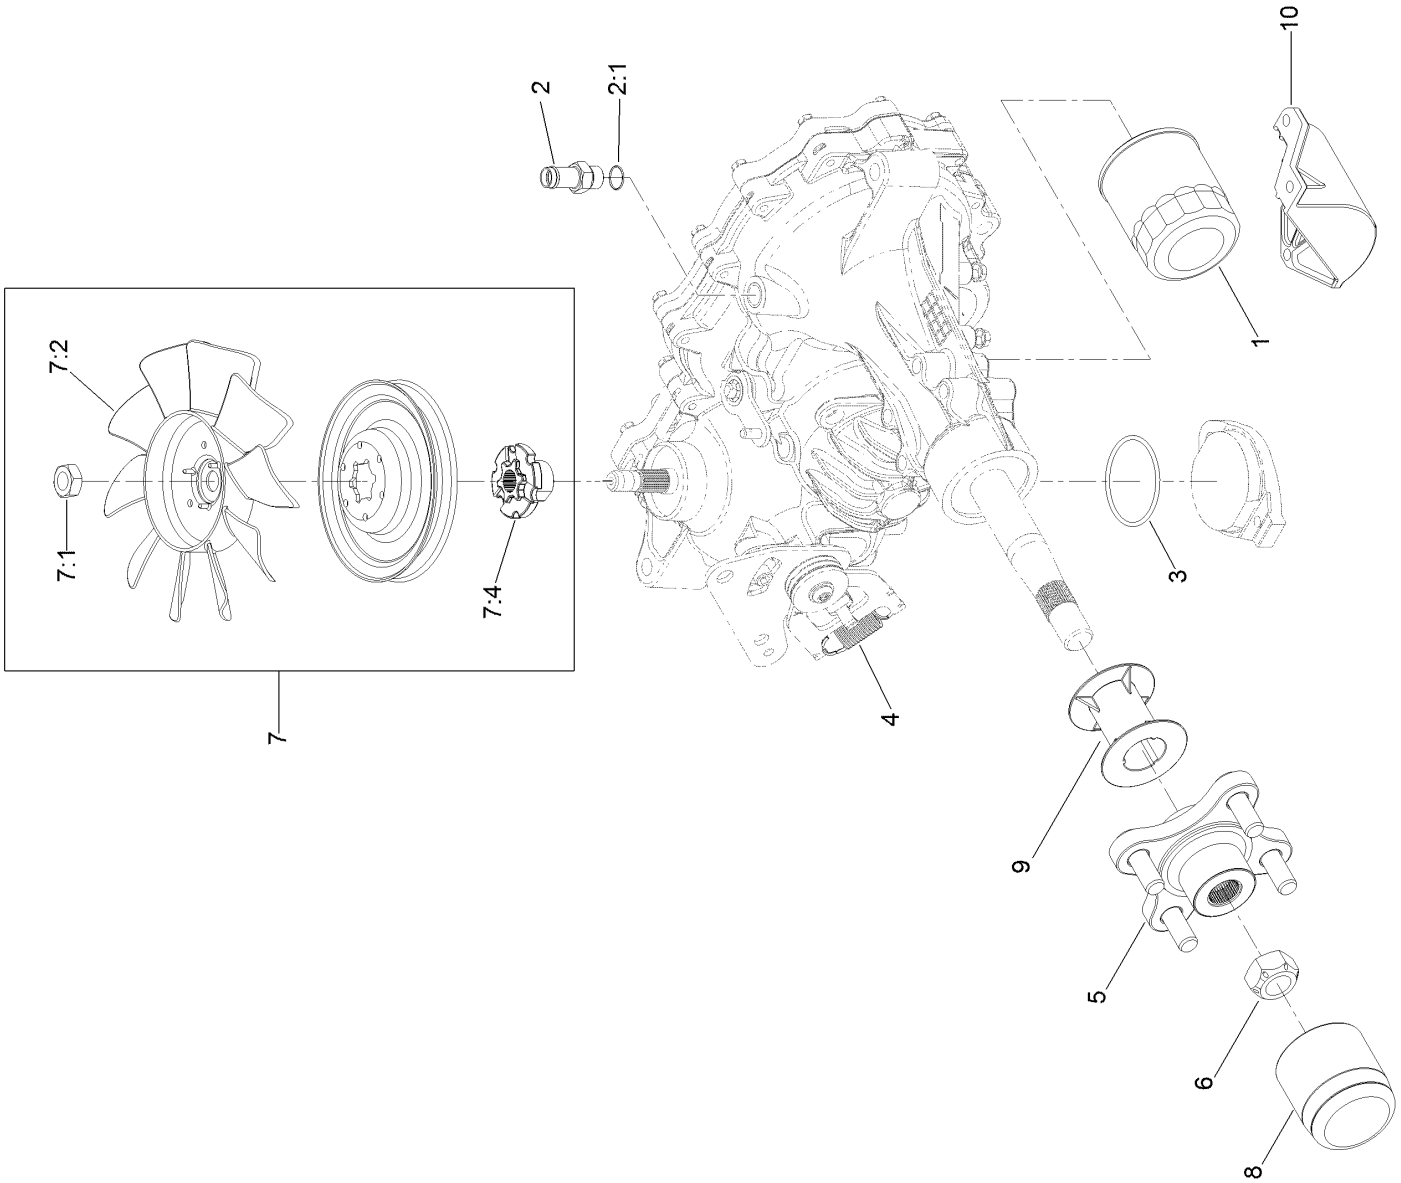


# LH Transaxle Assembly No. 135-0140 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 109-3321 | 1 | Element-Oil Filter, HYD |
| 2 | 109-3278 | 1 | Adapter-Straight |
| 2:1 | 237-42 | 1 | O-Ring |
| 3 | 109-3540 | 1 | O Ring-Seal |
| 4 | 109-5592 | 1 | Spring-Extension |
| 5 | 116-3872 | 1 | Hub-Offset |
| 6 | 109-3536 | 1 | Nut-Hub |
| 7 | 125-0059 | 1 | Fan And Pulley Kit |
| 7:1 | 116-9714 | 1 | Nut-HJ |
| 7:2 | 126-0226 | 1 | Fan |
| 7:4 | 116-9705 | 1 | Hub-Pulley |
| 8 | 116-6214 | 1 | Cap-Axle, Long |
| 9 | 116-6213 | 1 | Tube-Axle |
| 10 | 120-7979 | 1 | Guard-Filter, LH |
| 99 | 109-3537 | 1 | Seal Kit ● |

● Not illustrated

# RH Transaxle Assembly No. 135-0139

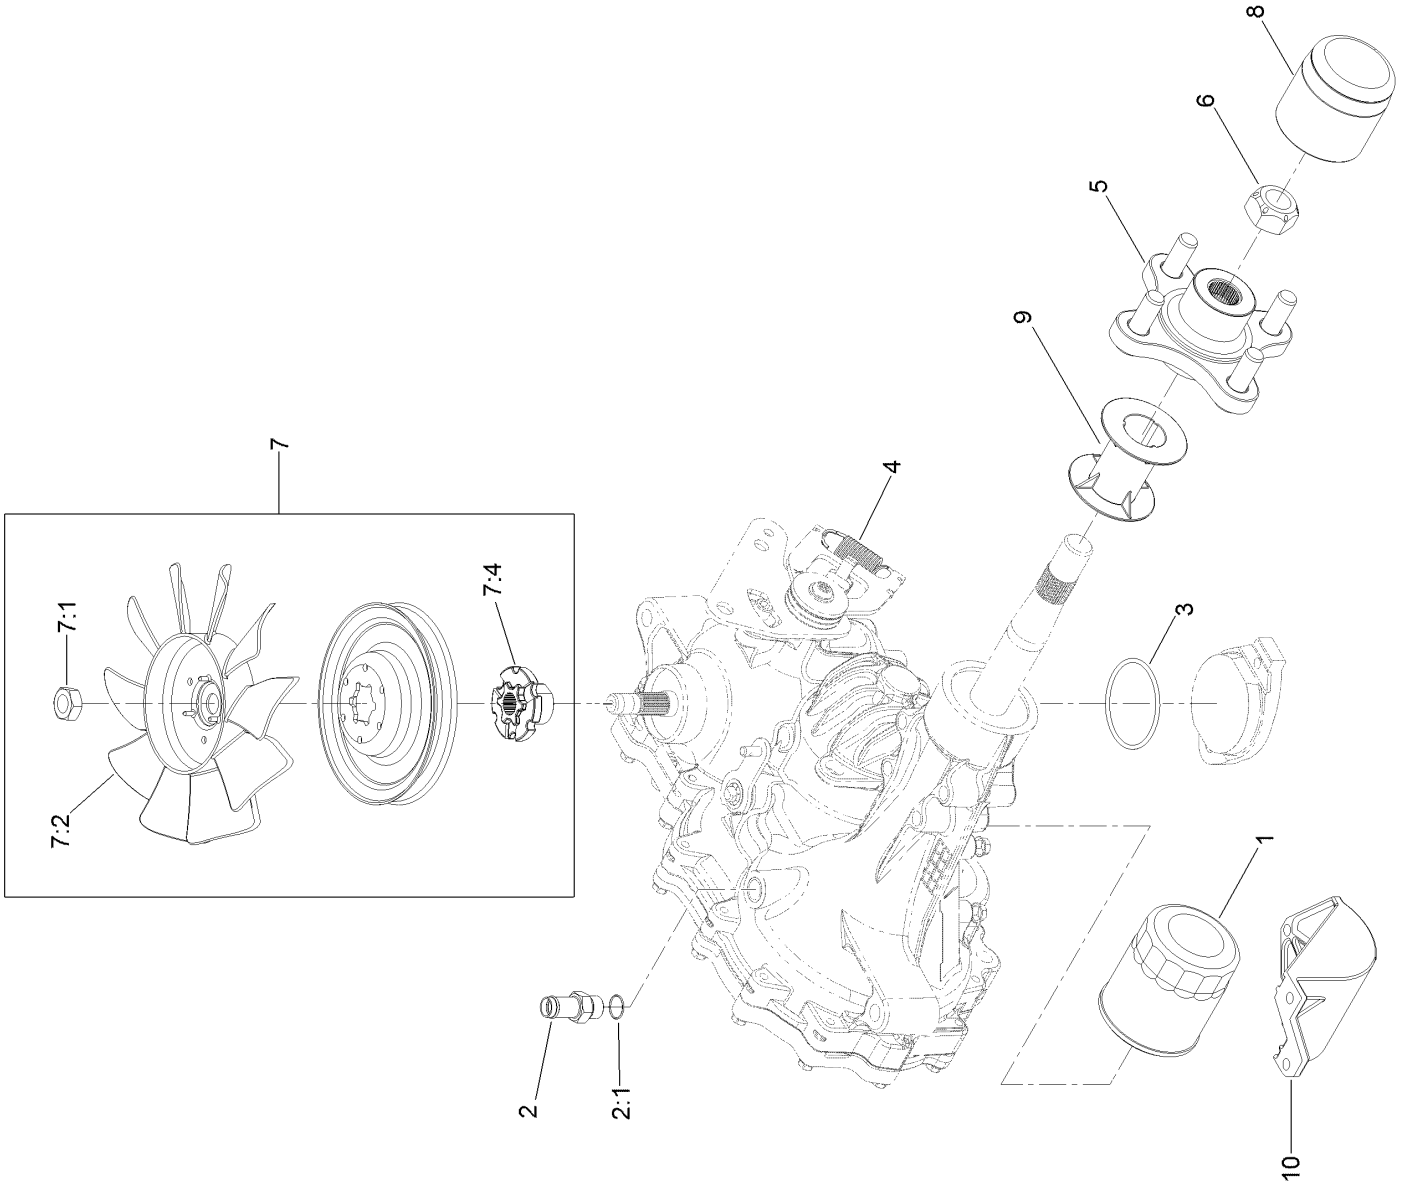


# RH Transaxle Assembly No. 135-0139 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 109-3321 | 1 | Element-Oil Filter, HYD |
| 2 | 109-3278 | 1 | Adapter-Straight |
| 2:1 | 237-42 | 1 | O-Ring |
| 3 | 109-3540 | 1 | O Ring-Seal |
| 4 | 109-5592 | 1 | Spring-Extension |
| 5 | 116-3872 | 1 | Hub-Offset |
| 6 | 109-3536 | 1 | Nut-Hub |
| 7 | 125-0059 | 1 | Fan And Pulley Kit |
| 7:1 | 116-9714 | 1 | Nut-HJ |
| 7:2 | 126-0226 | 1 | Fan |
| 7:4 | 116-9705 | 1 | Hub-Pulley |
| 8 | 116-6214 | 1 | Cap-Axle, Long |
| 9 | 116-6213 | 1 | Tube-Axle |
| 10 | 120-7981 | 1 | Guard-Filter, RH |
| 99 | 109-3537 | 1 | Seal Kit ● |

● Not illustrated


# Control Console and Guard Assembly

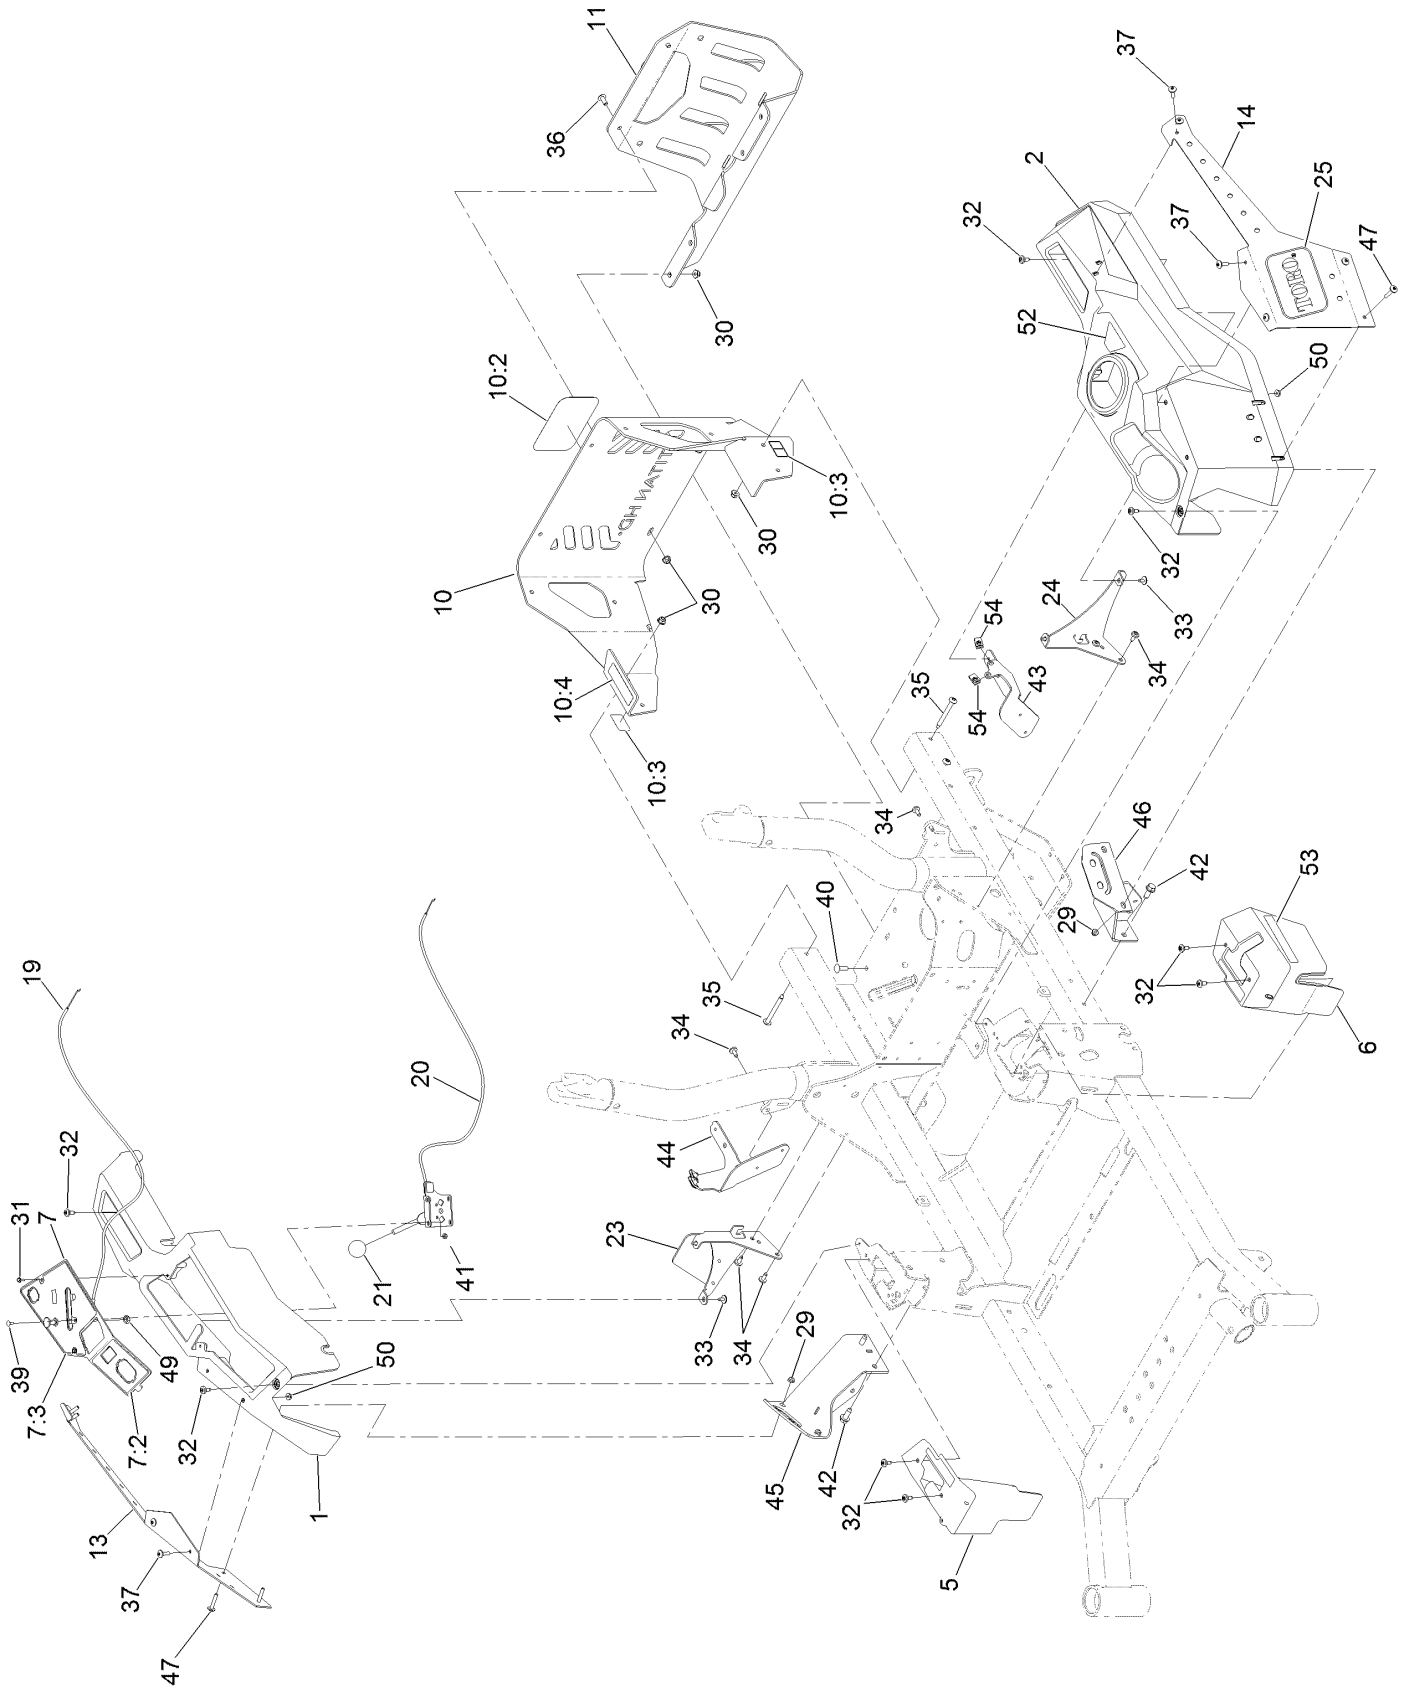

# Control Console and Guard Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-4983 | 1 | Console-RH |
| 2 | 126-4984 | 1 | Console-LH |
| 5 | 126-7371 | 1 | Cover-Control, Motion (RH) |
| 6 | 126-7372 | 1 | Cover-Control, Motion (LH) |
| 7 | 136-1673 | 1 | Control Panel ASM |
| 7:2 | 126-9115 | 1 | Decal-Panel, Control |
| 7:3 | 136-1305 | 1 | Decal-Panel, Control |
| 10 | 126-7803 | 1 | Rear Guard ASM |
| 10:2 | 99-4693 | 1 | Decal |
| 10:3 | 106-5517 | 2 | Decal-Warning |
| 10:4 | 117-2718 | 1 | Decal-Arrester, Spark |
| 11 | 126-7664-03 | 1 | Guard-Muffler |
| 13 | 136-1745-01 | 1 | Cover-Pod, RH |
| 14 | 136-1746-01 | 1 | Cover-LH |
| 19 | 126-7009 | 1 | Cable-Control, Choke |
| 20 | 126-7008 | 1 | Cable-Control, Throttle |
| 21 | 1-603175 | 1 | Knob-Ball |
| 23 | 126-9945 | 1 | Support-Console, RH |
| 24 | 126-5532-03 | 1 | Bracket-Console, LH |
| 25 | 68-3640 | 2 | Decal |
| 29 | 104-7201 | 4 | Nut-HF |
| 30 | 104-8300 | 8 | Nut-HF, NI |
| 31 | 117-5036 | 2 | Screw-Plastic, HWH |
| 32 | 120-7950 | 8 | Screw-Torx |
| 33 | 126-5544 | 4 | Screw-Torx |
| 34 | 126-6266 | 8 | Screw-Tph |
| 35 | 126-6267 | 4 | Screw-Torx |
| 36 | 126-6268 | 2 | Screw-Torx |
| 37 | 126-6269 | 8 | Screw-Truss |
| 39 | 1-807513 | 4 | Bolt-CARR |
| 40 | 3230-22 | 2 | Screw-CARR |
| 41 | 3296-2 | 2 | Nut-Lock, NI |
| 42 | 126-1696 | 4 | Screw-Forming, Thread |
| 43 | 126-9808-03 | 1 | Bracket-Support, Left Pod |
| 44 | 126-9809-03 | 1 | Bracket-Support, Right Pod |
| 45 | 126-9104-01 | 1 | Support-Pod, RH |
| 46 | 126-9105-01 | 1 | Support-Pod, LH |
| 47 | 126-8232 | 4 | Screw-Truss |
| 49 | 3220-3 | 1 | Nut-HJ |
| 50 | 32149-2 | 4 | Nut-Keps |
| 52 | 126-9939 | 1 | Decal-Fill, Fuel |
| 53 | 126-9298 | 2 | Decal |
| 54 | 126-3739 | 4 | Nut-Retainer |


# Fuel Tank and Vent Hose System Assembly

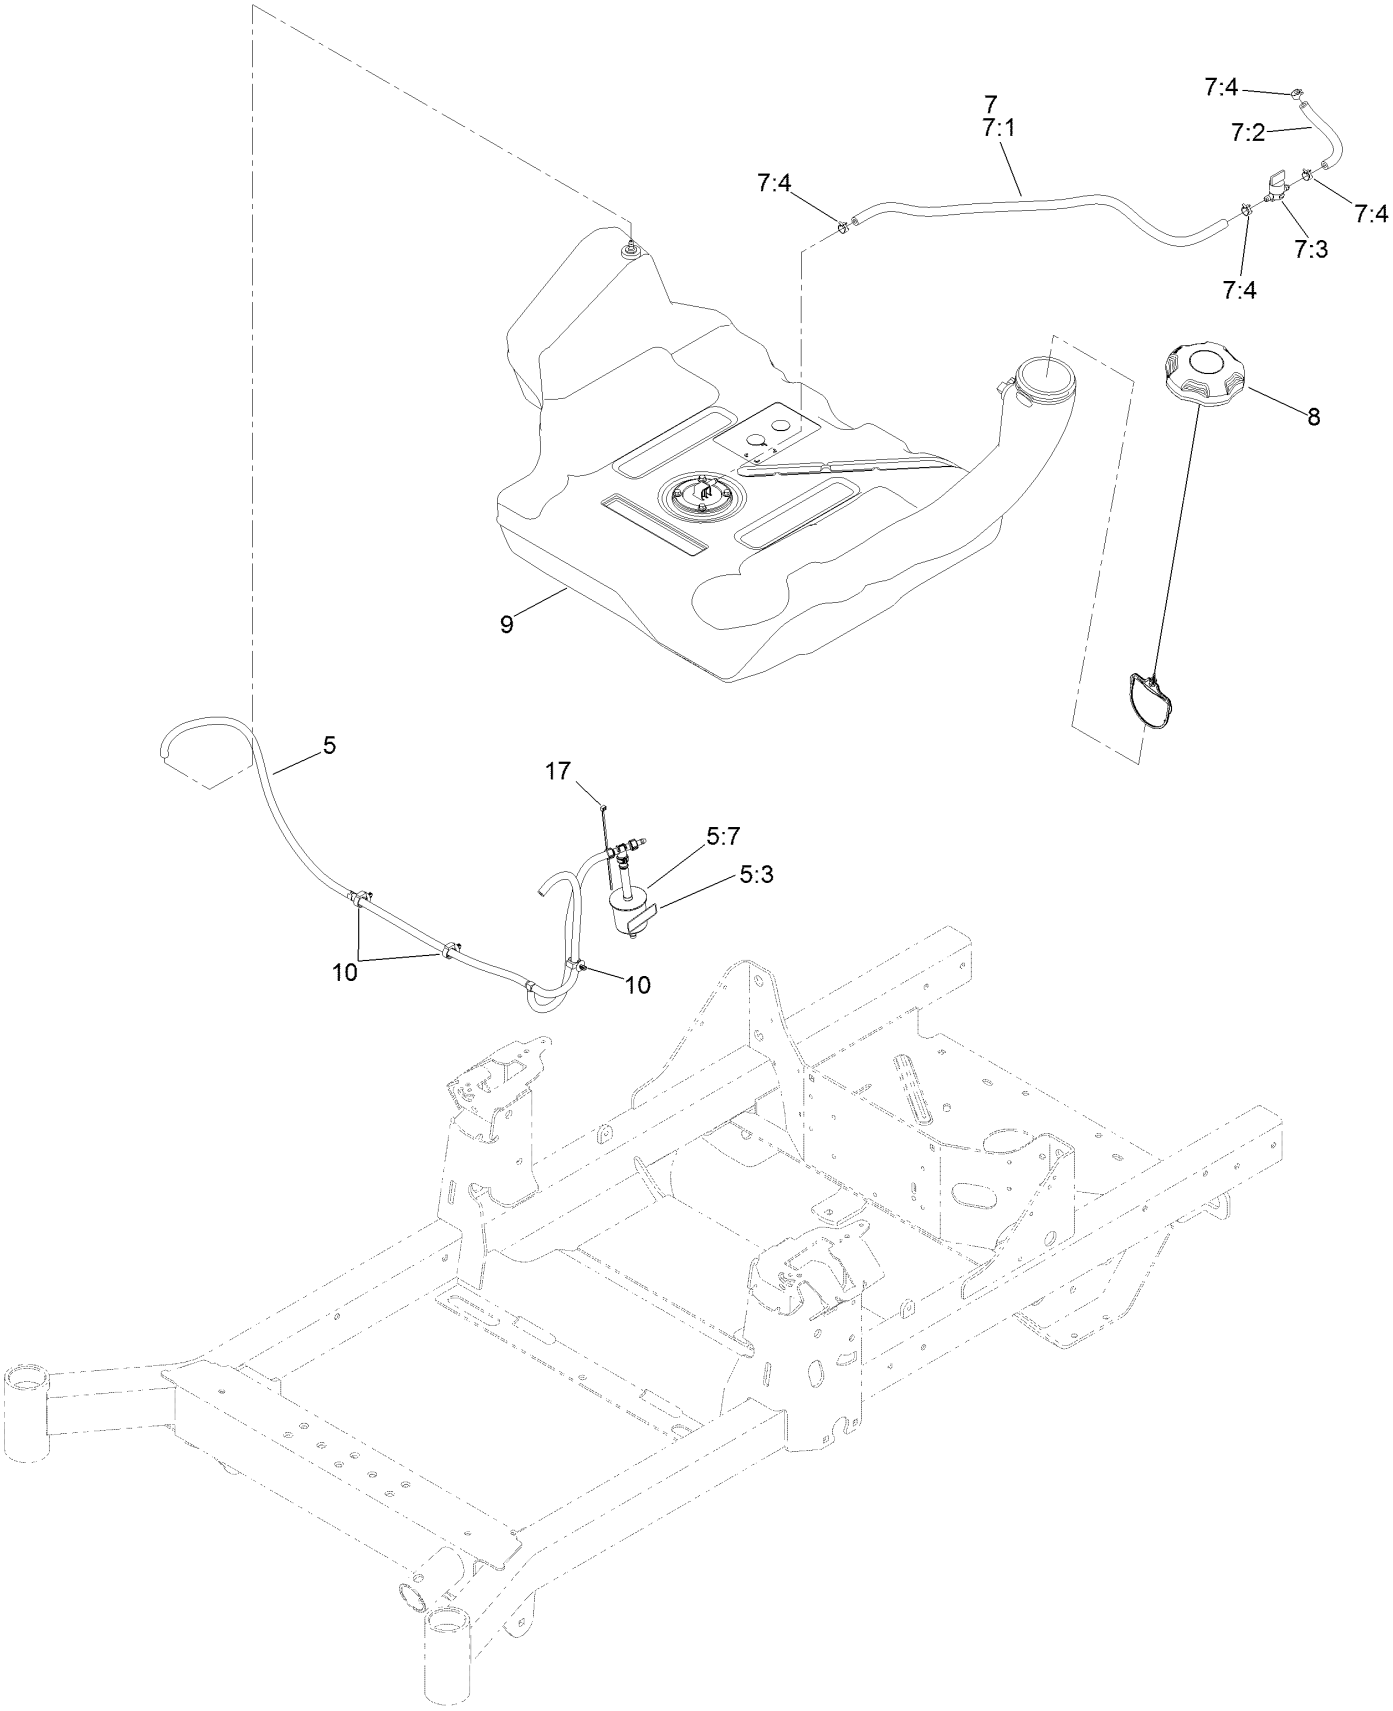

# Fuel Tank and Vent Hose System Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 5 | 126-8738 | 1 | Vent Hose ASM |
| 5:3 | 116-4769 | 1 | Decal-Filter, Emissions |
| 5:7 | 120-2235 | 1 | Filter-Fuel |
| 7 | 126-8740 | 1 | Fuel Hose ASM |
| 7:1 | 109-0302 | 1 | Hose-Fuel |
| 7:2 | 109-0678 | 1 | Hose-Fuel |
| 7:3 | 1-603770 | 1 | Valve-Fuel |
| 7:4 | 2412-98 | 4 | Clamp-Hose |
| 8 | 126-4723 | 1 | Cap-Fuel |
| 9 | 126-4724 | 1 | Tank-Fuel |
| 10 | 126-5523 | 3 | Clip |
| 17 | 1-303287 | 1 | Tie-Cable |


# Fuel Tank Assembly No. 126-4724

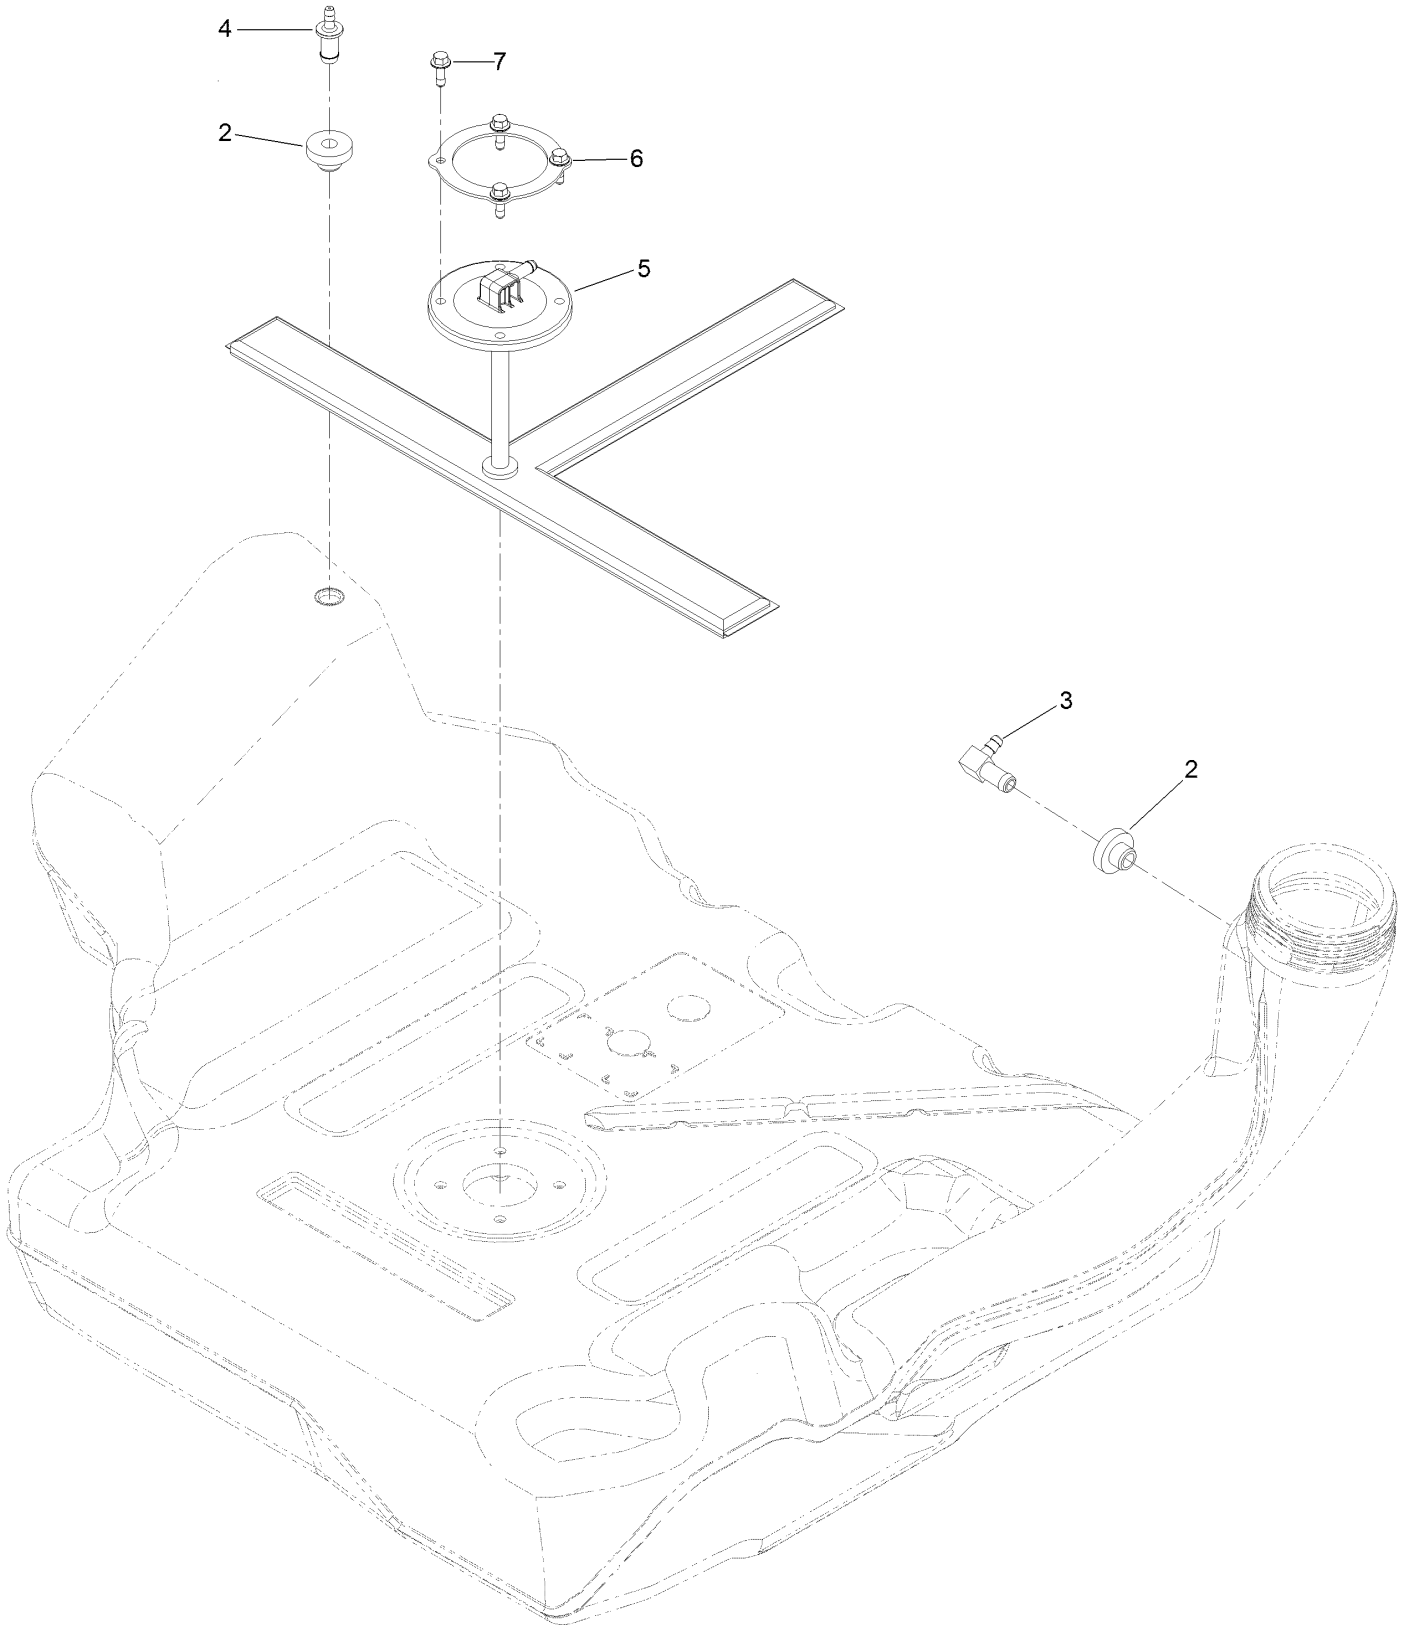

# Fuel Tank Assembly No. 126-4724 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 46-6560 | 2 | Bushing |
| 3 | 126-9057 | 1 | Fitting-90 DEG |
| 4 | 116-4630 | 1 | Fitting-Orifice, Straight |
| 5 | 126-5528 | 1 | Pickup-Fuel |
| 6 | 126-5527 | 1 | Ring-Retainer |
| 7 | 126-5525 | 4 | Bolt |


# Seat Mount Assembly

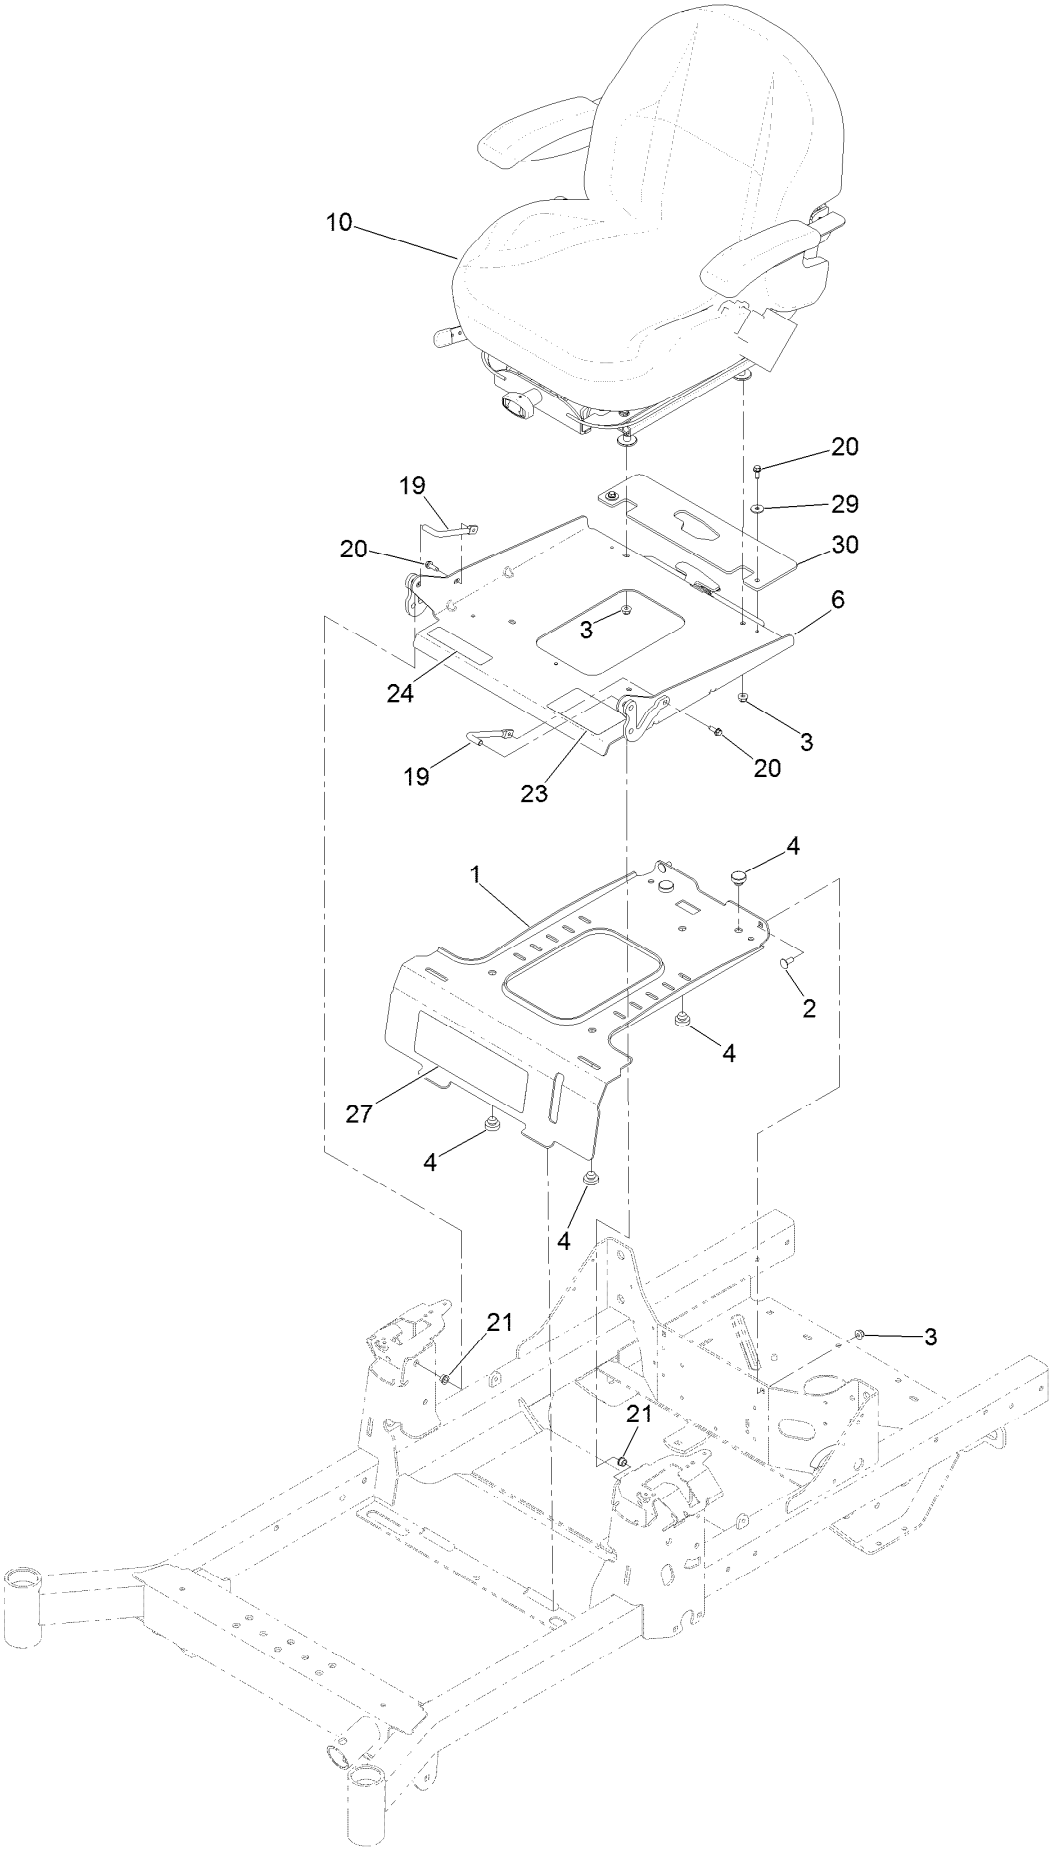

# Seat Mount Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-4082-03 | 1 | Plate-Retainer, Tank |
| 2 | 3230-23 | 2 | Screw-CARR |
| 3 | 104-8300 | 6 | Nut-HF, NI |
| 4 | 104-1412 | 5 | Bumper-Rubber |
| 6 | 126-7309 | 1 | Seat Pan And Latch ASM |
| 10 | 130-0801 | 1 | Seat ASM |
| 19 | 126-5914 | 2 | Pin-Pivot, Seat |
| 20 | 32144-44 | 4 | Screw-HWH, Thread Roll |
| 21 | 1-603735 | 2 | Bushing-Flanged |
| 23 | 126-8151 | 1 | Decal-Aid, Service |
| 24 | 126-8161 | 1 | Decal-Latch, Seat |
| 27 | 126-9273 | 1 | Decal |
| 29 | 3256-67 | 2 | Washer |
| 30 | 135-0214 | 1 | Guard-Seat, Rubber |


# Seat Pan and Latch Assembly No. 126-7309

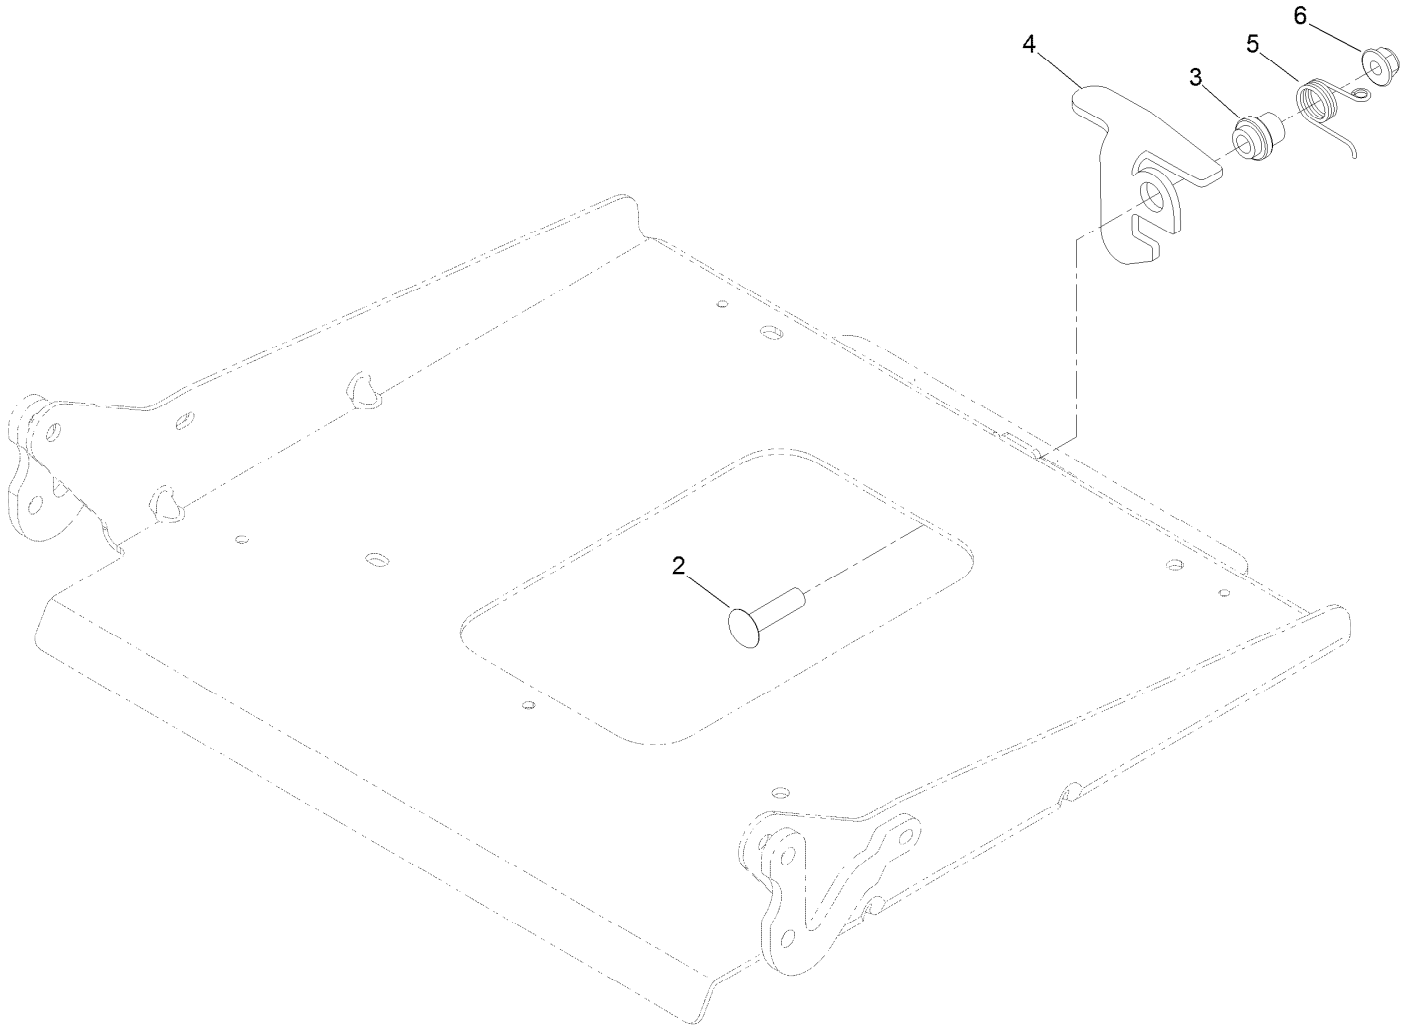

# Seat Pan and Latch Assembly No. 126-7309 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 3231-26 | 1 | Screw-CARR |
| 3 | 107-0075 | 1 | Bushing-Latch, Seat |
| 4 | 126-6739 | 1 | Latch-Catch, Single |
| 5 | 126-8923 | 1 | Spring-Torsion, Latch |
| 6 | 104-8301 | 1 | Nut-HF, NI |


# Seat Assembly No. 130-0801

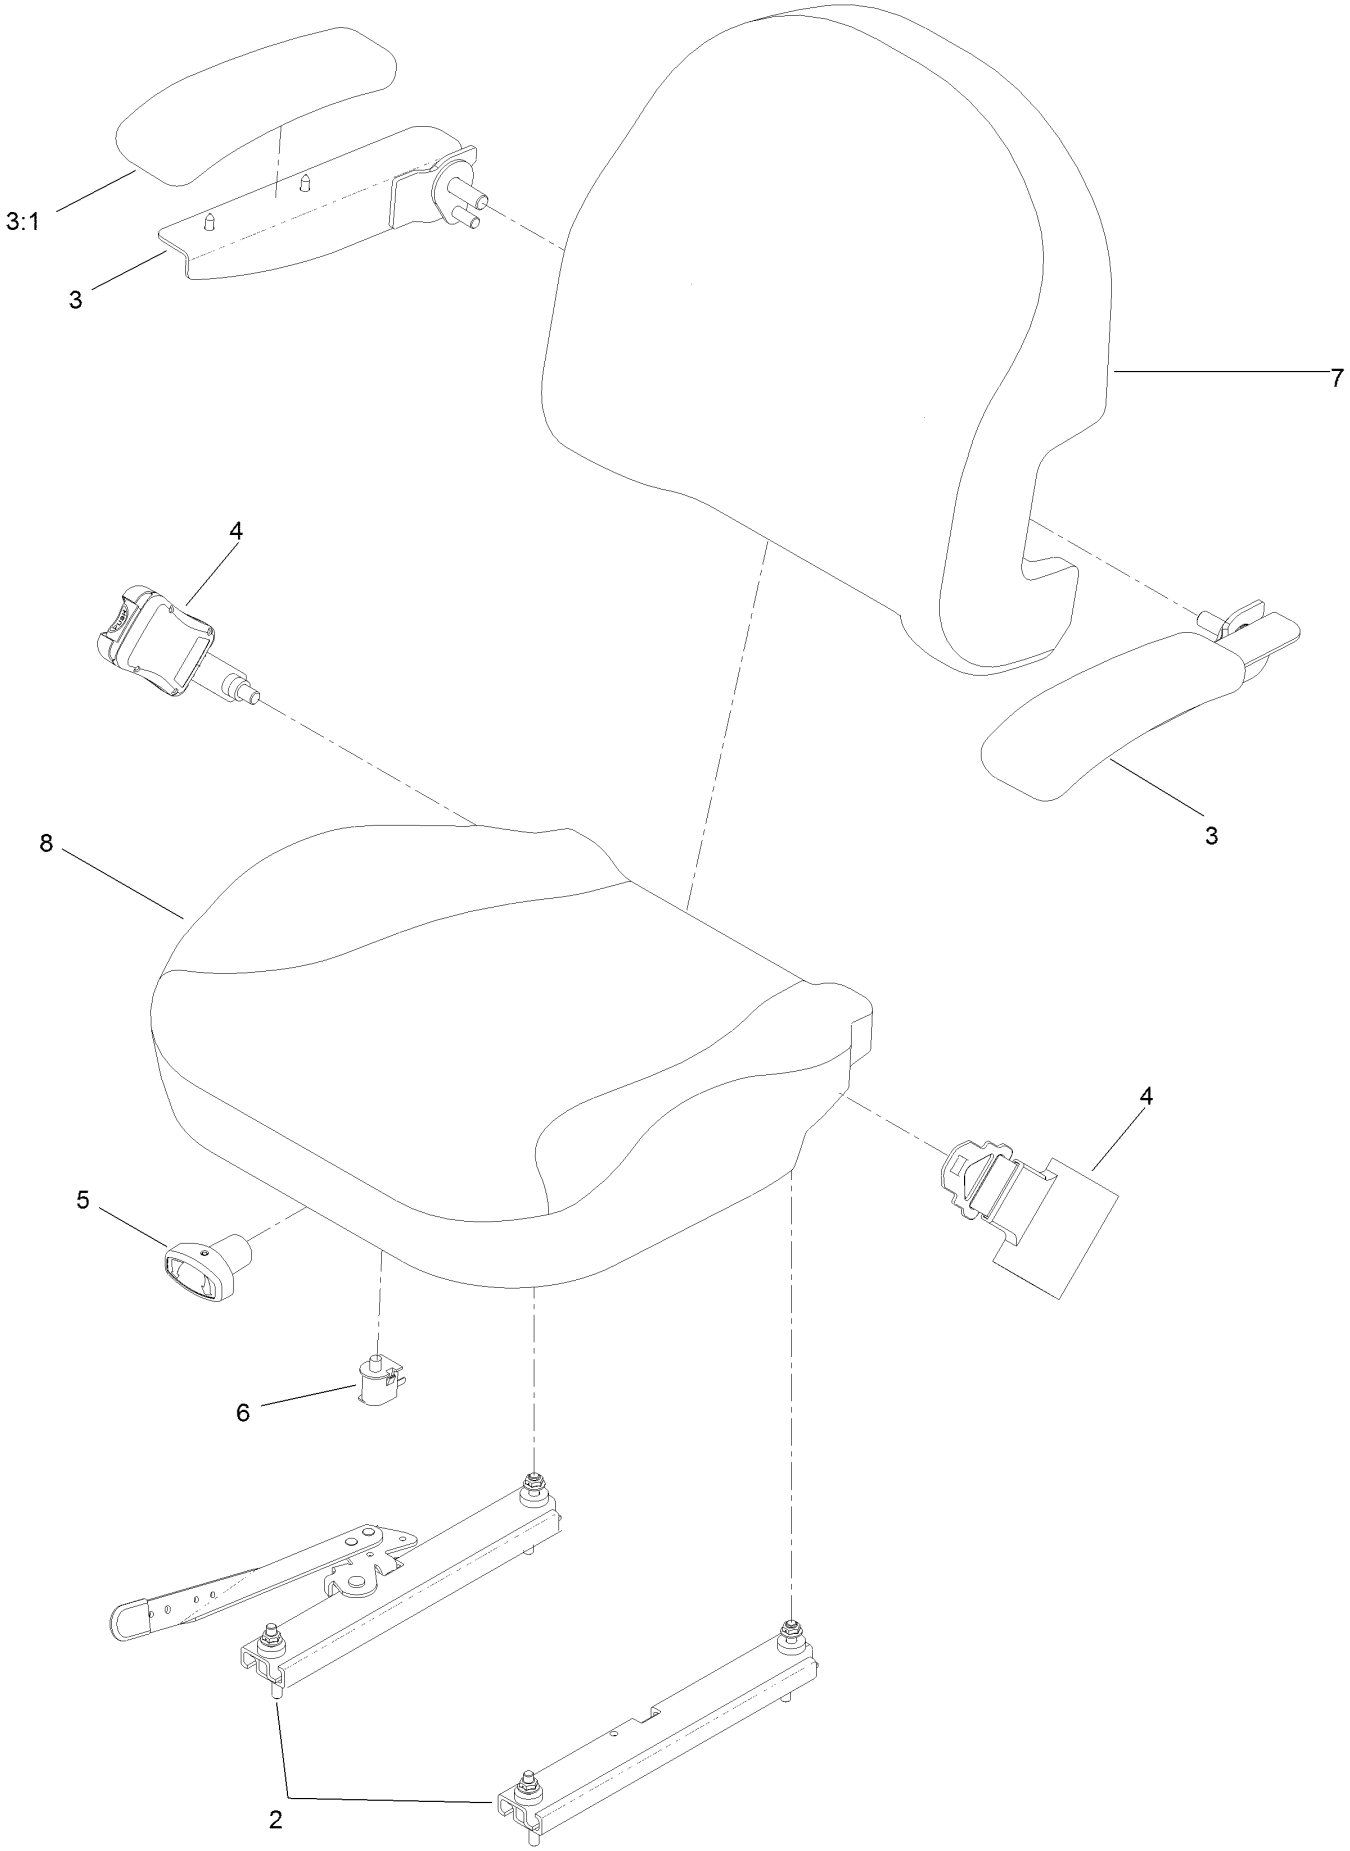

# Seat Assembly No. 130-0801 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 130-0844 | 1 | Track Set |
| 3 | 126-2058 | 1 | Armrest Kit |
| 3:1 | 110-4163 | 2 | Cushion-Rest, Arm |
| 4 | 130-0845 | 1 | Seat Belt Kit |
| 5 | 130-0846 | 1 | Knob-Adjuster |
| 6 | 82-2190 | 1 | Switch-Bail |
| 7 | 130-0847 | 1 | Cover-Back |
| 8 | 130-0848 | 1 | Cover-Cushion |

# Motion Control Assembly

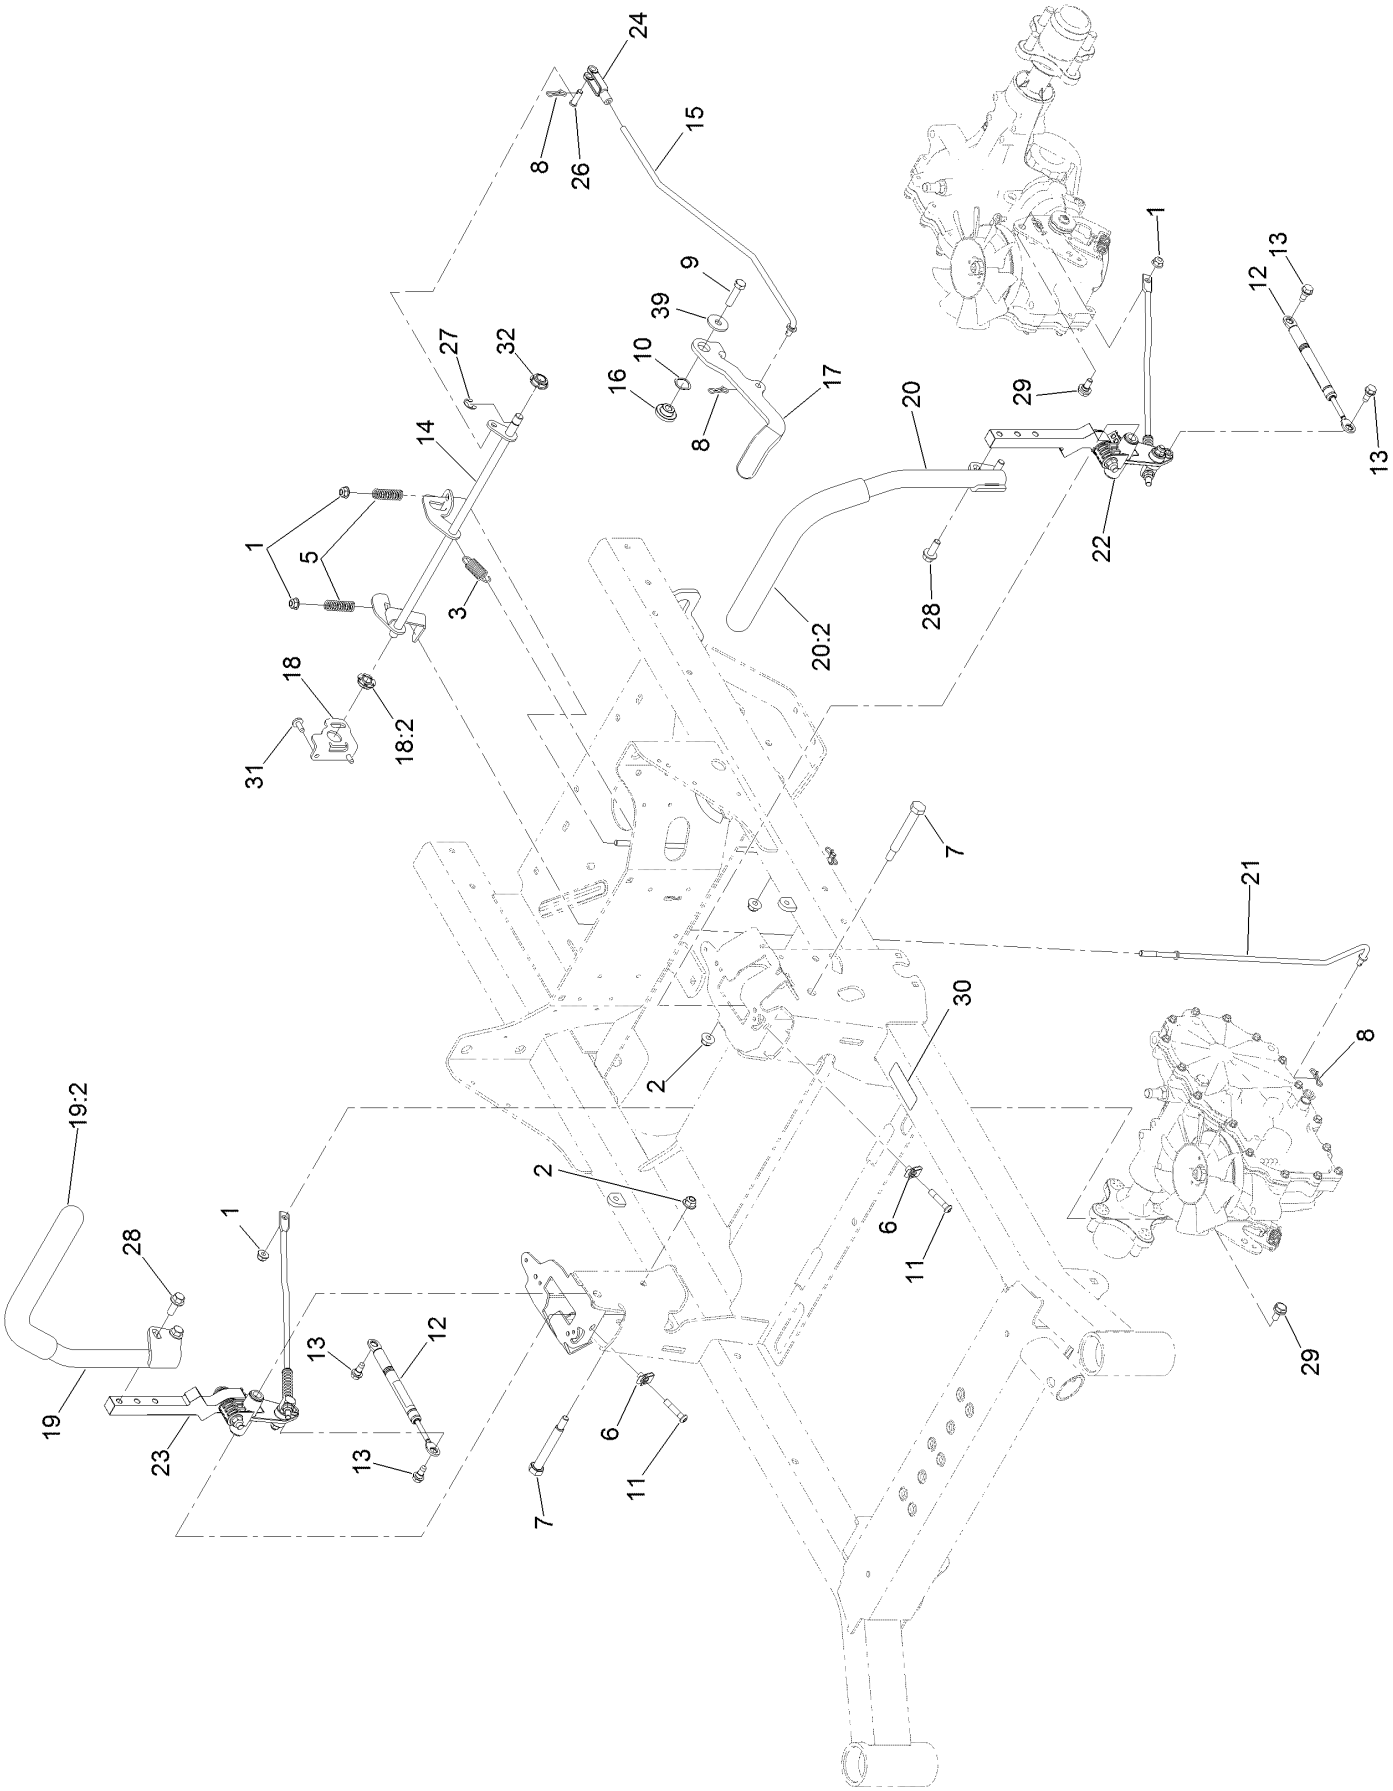


# Motion Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-8300 | 4 | Nut-HF, NI |
| 2 | 104-8301 | 3 | Nut-HF, NI |
| 3 | 107-1045 | 2 | Spring-Extension |
| 5 | 109-7694 | 2 | Spring-Compression |
| 6 | 112-3306 | 2 | Nut |
| 7 | 115-5099 | 2 | Bolt-Pivot |
| 8 | 119-1415 | 4 | Pin-Cotter, Locking |
| 9 | 323-8 | 1 | Screw-HH |
| 10 | 119-4164 | 1 | Washer-Wave |
| 11 | 126-4299 | 2 | Screw-HSBH |
| 12 | 126-4322 | 2 | Damper |
| 13 | 126-4424 | 4 | Screw-Shoulder |
| 14 | 126-5813 | 1 | Shaft-Brake |
| 15 | 126-5819 | 1 | Linkage-Brake, Upper |
| 16 | 126-5989 | 1 | Pivot-Flange |
| 17 | 126-9490 | 1 | Lever-Brake (With Grip) |
| 18 | 126-6456 | 1 | Bracket-Brake |
| 18:2 | 126-5820 | 1 | Bearing-Spherical |
| 19 | 126-9191 | 1 | RH Control Handle ASM |
| 19:2 | 126-7359 | 1 | Grip |
| 20 | 126-9192 | 1 | LH Control Handle ASM |
| 20:2 | 126-7359 | 1 | Grip |
| 21 | 126-7217 | 2 | Linkage-Brake, Lower |
| 22 | | 1 | LH Motion Control ASM ● |
| 23 | | 1 | RH Motion Control ASM ● |
| 24 | 1-303105 | 1 | Yoke-Adjustable |
| 26 | 1-808280 | 1 | Pin-Clevis |
| 27 | 32120-47 | 1 | Ring-Retaining, External |
| 28 | 3234-42 | 4 | Screw-HHF |
| 29 | 37-8771 | 2 | Bolt-Shoulder, HF |
| 30 | 115-9625 | 1 | Decal-Brake, Parking |
| 31 | 126-6266 | 2 | Screw-Tph |
| 32 | 126-5820 | 1 | Bearing-Spherical |
| 39 | 2844 | 1 | Washer |

● Not serviced separately


# LH Motion Control Assembly

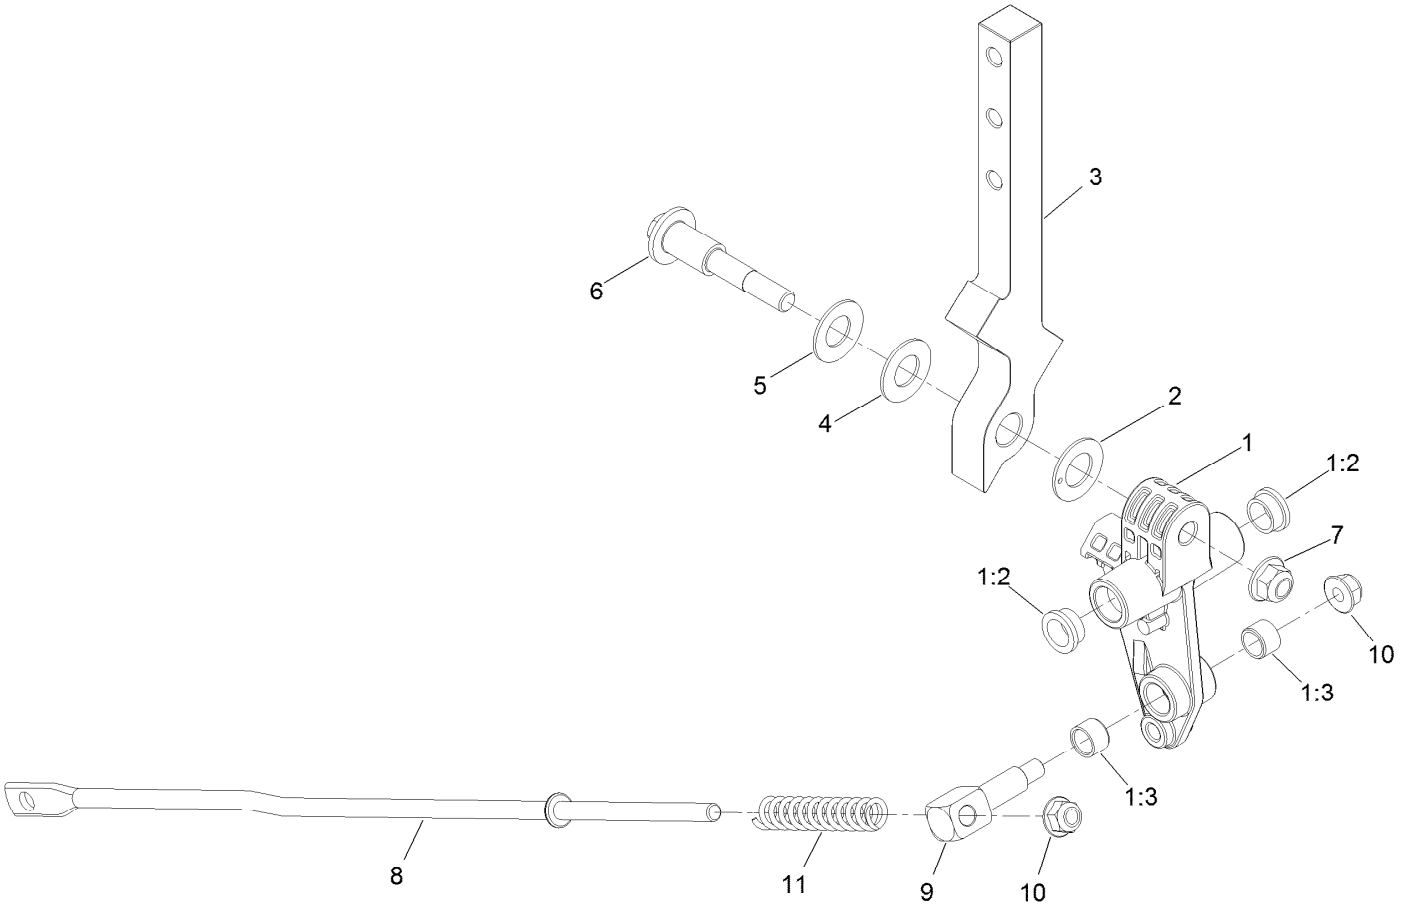

# LH Motion Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-3773 | 1 | Control Arm ASM |
| 1:2 | 126-8909 | 2 | Bushing |
| 1:3 | 1-413152 | 2 | Bushing-Sleeve |
| 2 | 126-7296 | 1 | Washer-Friction |
| 3 | 126-8182 | 1 | Arm-Control |
| 4 | 117-1240 | 1 | Washer |
| 5 | 119-8925 | 1 | Washer-Belleville |
| 6 | 117-1198 | 1 | Bolt-Pivot |
| 7 | 104-8301 | 1 | Nut-HF, NI |
| 8 | 126-5435 | 1 | Link-Control |
| 9 | 126-5434 | 1 | Swivel |
| 10 | 104-8300 | 2 | Nut-HF, NI |
| 11 | 126-8195 | 1 | Spring-Return, Neutral |


# RH Motion Control Assembly

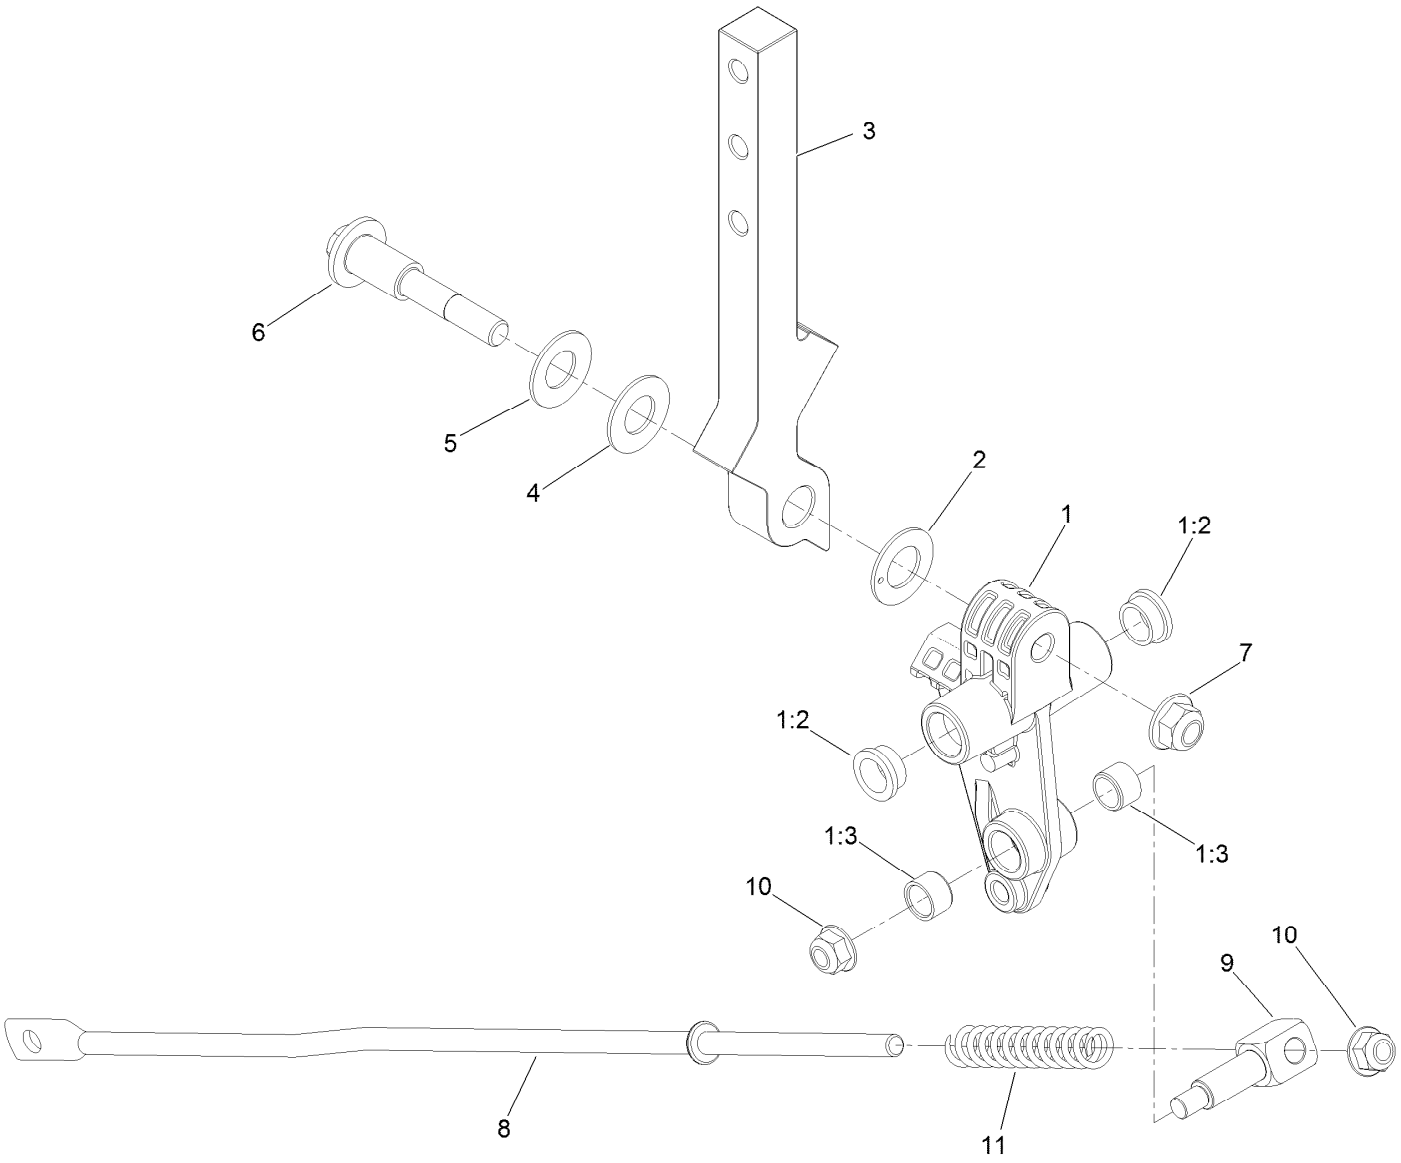

# RH Motion Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-3773 | 1 | Control Arm ASM |
| 1:2 | 126-8909 | 2 | Bushing |
| 1:3 | 1-413152 | 2 | Bushing-Sleeve |
| 2 | 126-7296 | 1 | Washer-Friction |
| 3 | 126-8182 | 1 | Arm-Control |
| 4 | 117-1240 | 1 | Washer |
| 5 | 119-8925 | 1 | Washer-Belleville |
| 6 | 117-1198 | 1 | Bolt-Pivot |
| 7 | 104-8301 | 1 | Nut-HF, NI |
| 8 | 126-5435 | 1 | Link-Control |
| 9 | 126-5434 | 1 | Swivel |
| 10 | 104-8300 | 2 | Nut-HF, NI |
| 11 | 126-8195 | 1 | Spring-Return, Neutral |

# Electrical System Assembly

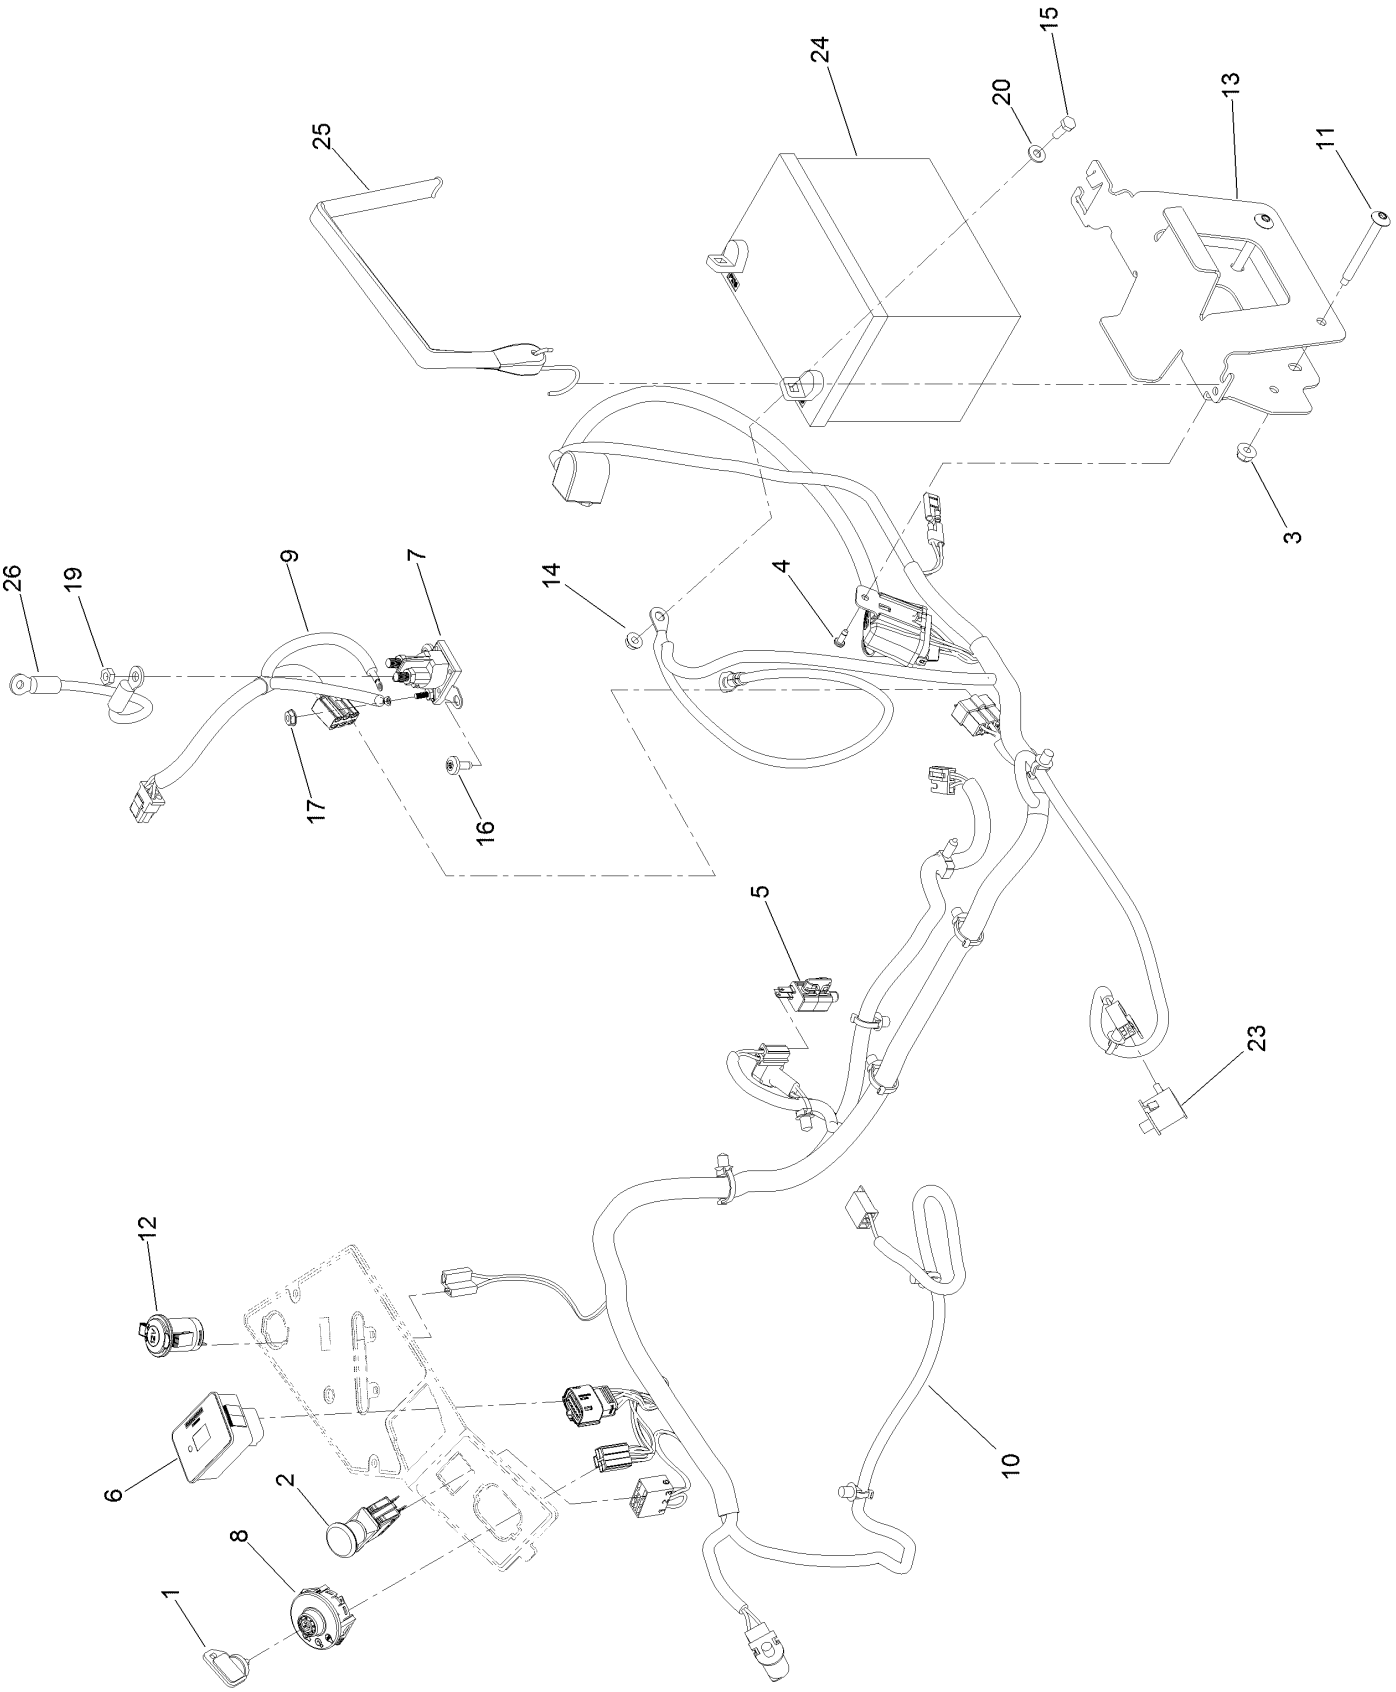


# Electrical System Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 63-8360 | 1 | Key-Ignition |
| 2 | 103-5221 | 1 | Switch-PTO |
| 3 | 104-8300 | 2 | Nut-HF, NI |
| 4 | 105-6849 | 1 | Screw-Forming, Thread |
| 5 | 110-6765 | 1 | Switch |
| 6 | 116-5609 | 1 | Module ASM |
| 7 | 117-1197 | 1 | Solenoid |
| 8 | 117-2221 | 1 | Switch-Ignition |
| 9 | 126-5036 | 1 | Adapter-Harness, Wire |
| 10 | 126-5803 | 1 | Harness-Wire ▲ |
| 11 | 126-6267 | 2 | Screw-Torx |
| 12 | 126-6499 | 1 | Port-Power, 12V |
| 13 | 126-6725-03 | 1 | Tray-Battery |
| 14 | 32128-33 | 2 | Nut-HF |
| 15 | 321-4 | 2 | Screw-HH |
| 16 | 126-6266 | 2 | Screw-Tph |
| 17 | 32149-8 | 2 | Nut-Keps |
| 19 | 3220-2 | 1 | Nut-Jam |
| 20 | 3256-22 | 2 | Washer-Flat |
| 23 | 82-2190 | 2 | Switch-Bail |
| 24 | | 1 | Battery (300 CCA, Wet) ■● |
| 25 | 126-7627 | 1 | Strap-Bungee |
| 26 | 100-3540 | 1 | Cable-Battery, Positive |

● Obtain Locally ■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


# Wire Harness Assembly No. 126-5803

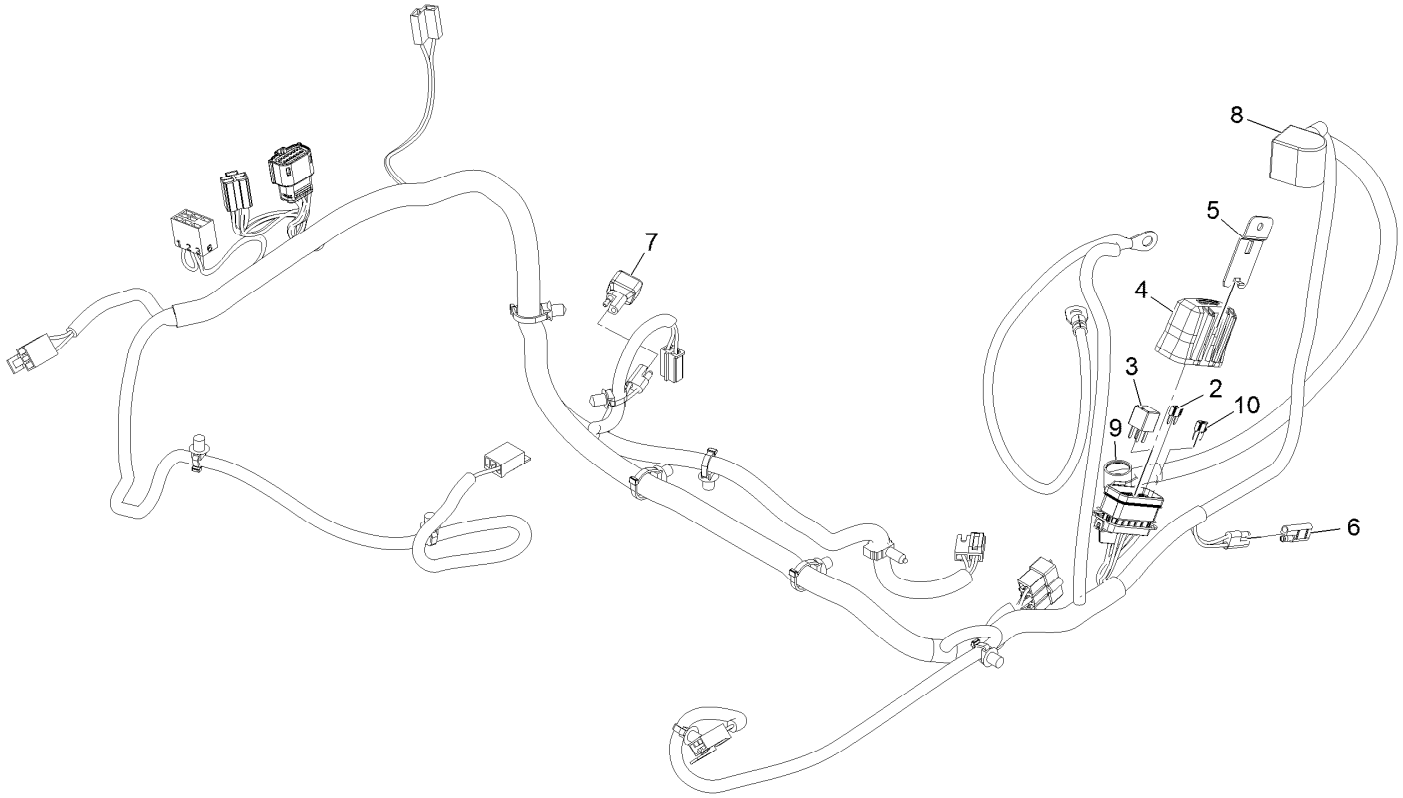

# Wire Harness Assembly No. 126-5803 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 121-8868 | 1 | Fuse-Mini Blade, 20 Amp |
| 3 | 126-3991 | 1 | Relay-Micro |
| 4 | 32180-176 | 1 | Cover-Block, Fuse |
| 5 | 32180-177 | 1 | Clip-Mounting |
| 6 | 116-0053 | 1 | Cap-Plug |
| 7 | 103-3895 | 1 | Diode |
| 8 | 126-8876 | 1 | Insulator-Battery |
| 9 | 1-543393 | 1 | Insulator-Solenoid |
| 10 | 121-8867 | 1 | Fuse-Mini Blade, 15 Amp |


# Deck Lift Assembly

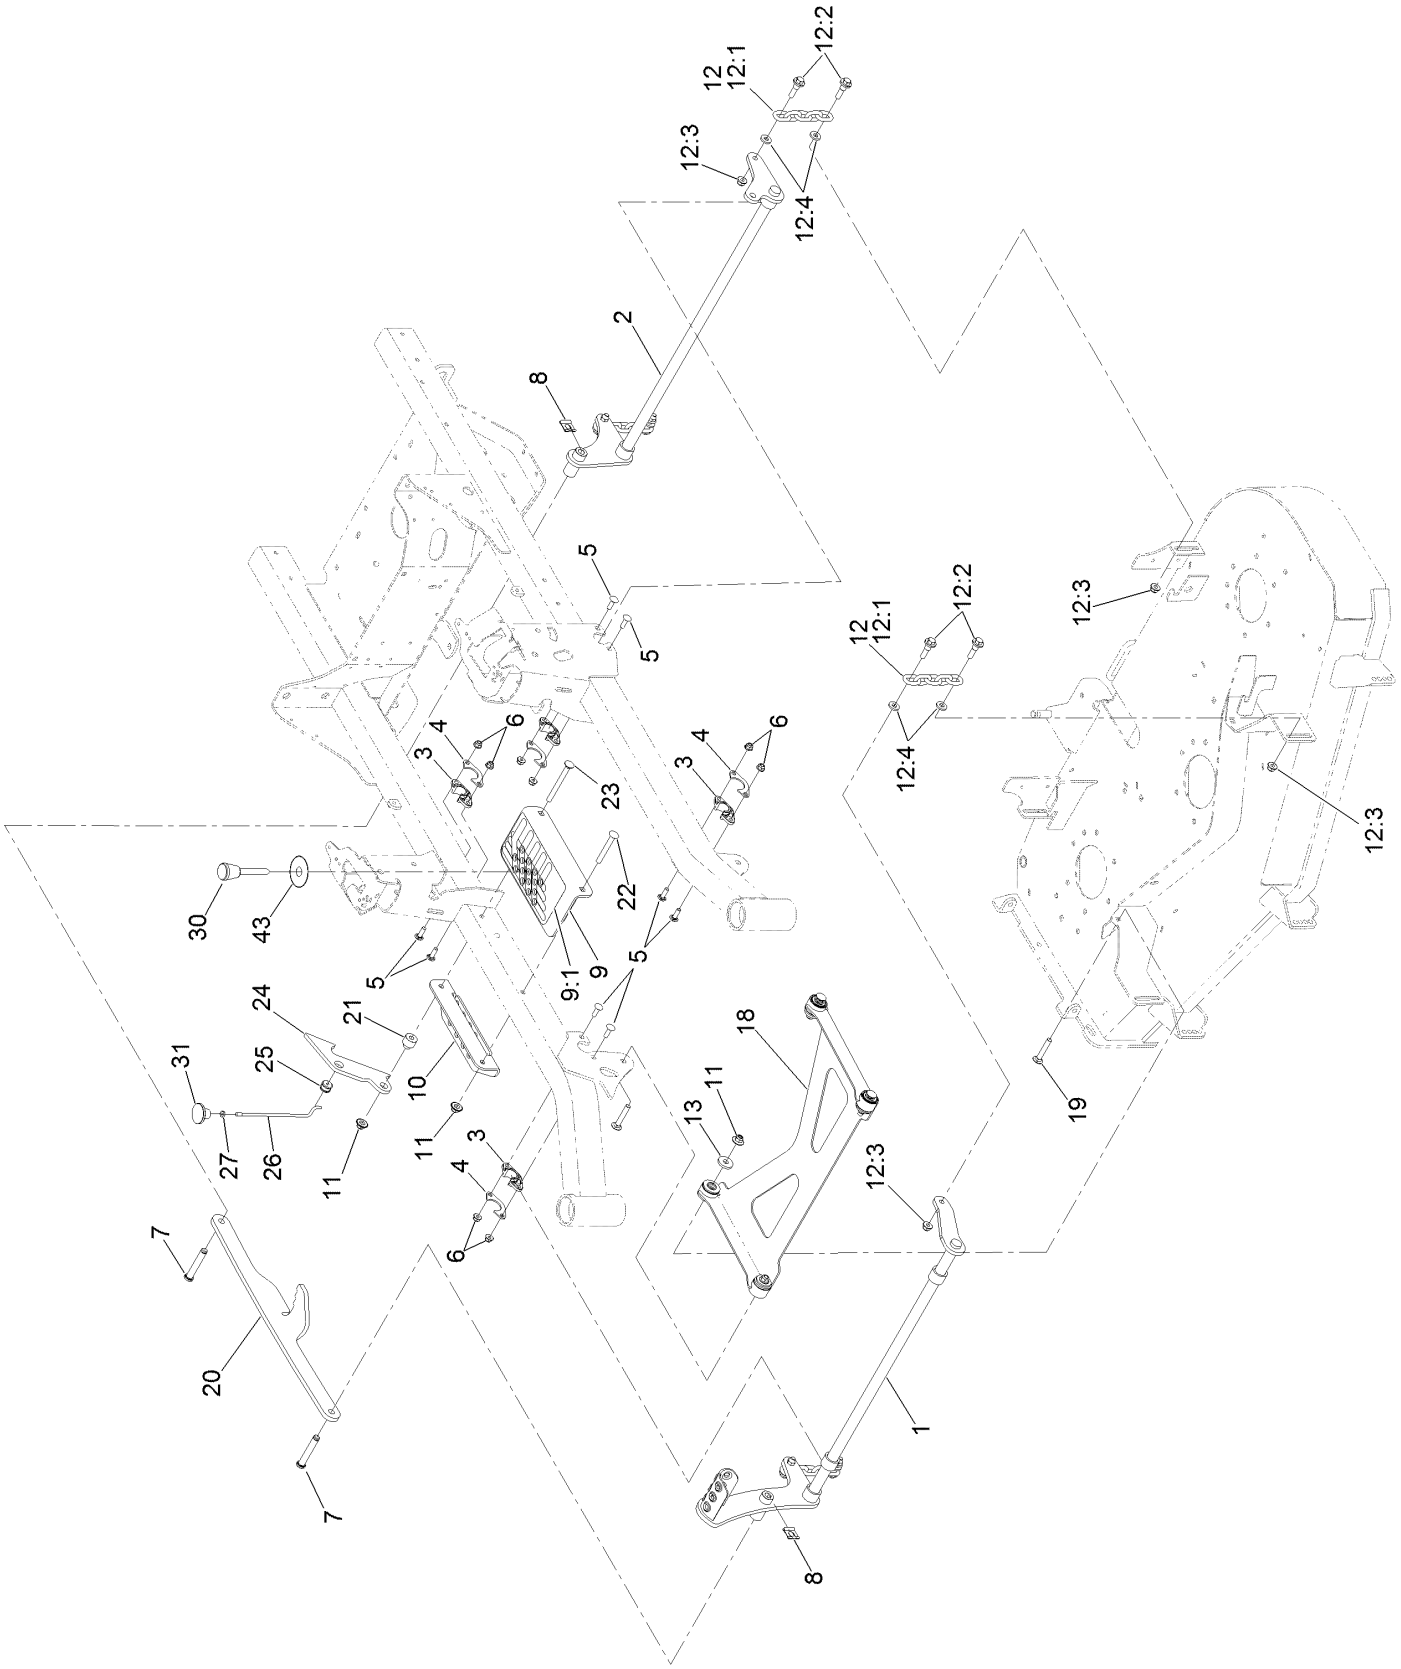

# Deck Lift Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-3342-03 | 1 | Shaft-Lift, Deck |
| 2 | 126-3343-03 | 1 | Shaft-Lift, Deck (Rear) |
| 3 | 115-5065 | 4 | Bushing-Flange |
| 4 | 116-2887 | 4 | Gusset-Lift, Deck |
| 5 | 3230-22 | 8 | Screw-CARR |
| 6 | 104-8300 | 8 | Nut-HF, NI |
| 7 | 126-9181 | 2 | Pin-Clevis |
| 8 | 95-4064 | 2 | Clip-Pin |
| 9 | 126-4535 | 1 | Bracket ASM |
| 9:1 | 126-4784 | 1 | Decal-HOC |
| 10 | 126-4640-03 | 1 | Angle-HOC, Lower |
| 11 | 109-6658 | 4 | Nut-Flange, NI |
| 12 | 126-8877 | 4 | Deck Chain ASM |
| 12:1 | 1-633447 | 1 | Chain-Lift, Deck |
| 12:2 | 130-0742 | 2 | Bolt-Shoulder |
| 12:3 | 104-8301 | 2 | Nut-HF, NI |
| 12:4 | 43-0940 | 2 | Spacer |
| 13 | 1-373034 | 2 | Washer |
| 18 | 126-8365 | 1 | Deck Strut ASM |
| 19 | 3231-7 | 2 | Screw-CARR |
| 20 | 126-4639-03 | 1 | Link-Lift |
| 21 | 126-5221 | 1 | Spacer-Stepped |
| 22 | 3231-42 | 1 | Screw-CARR |
| 23 | 3231-37 | 1 | Screw-CARR |
| 24 | 126-5222 | 1 | Plate-Lock, Transport |
| 25 | 126-5593 | 1 | Grommet |
| 26 | 126-5223 | 1 | Rod-Lock, Transport |
| 27 | 3218-1 | 1 | Nut-Jam |
| 30 | 126-5401 | 1 | Pin-HOC |
| 31 | 126-7019 | 1 | Knob |
| 43 | 126-8353 | 1 | Tag-Retention, Magnetic |


# Deck Strut Assembly No. 126-8365

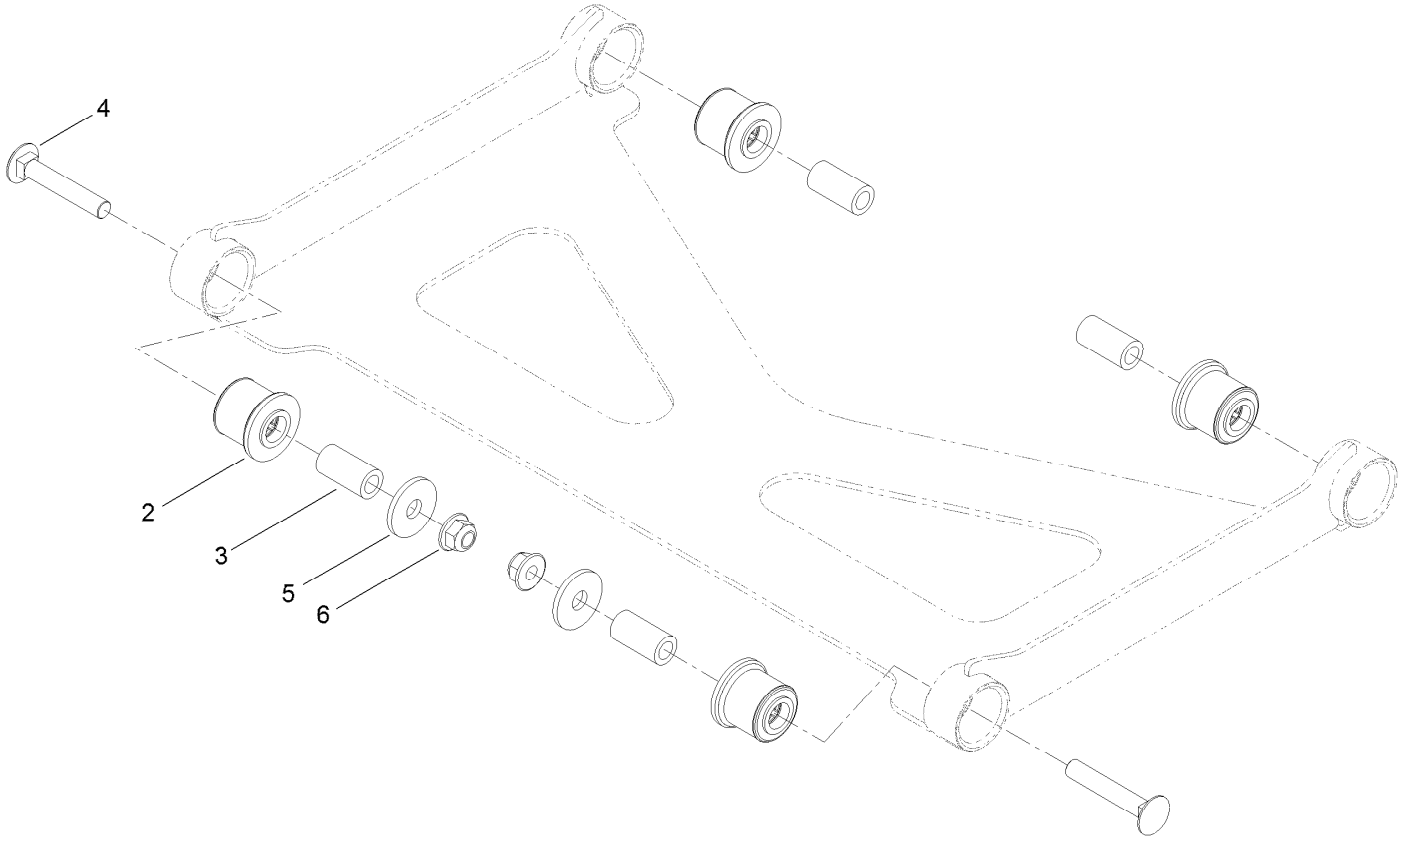

# Deck Strut Assembly No. 126-8365 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 126-8360 | 4 | Bushing-Rubber, Suspension |
| 3 | 108-6544 | 4 | Spacer |
| 4 | 3231-7 | 2 | Screw-CARR |
| 5 | 2844 | 2 | Washer |
| 6 | 104-8301 | 2 | Nut-HF, NI |

# Engine Assembly

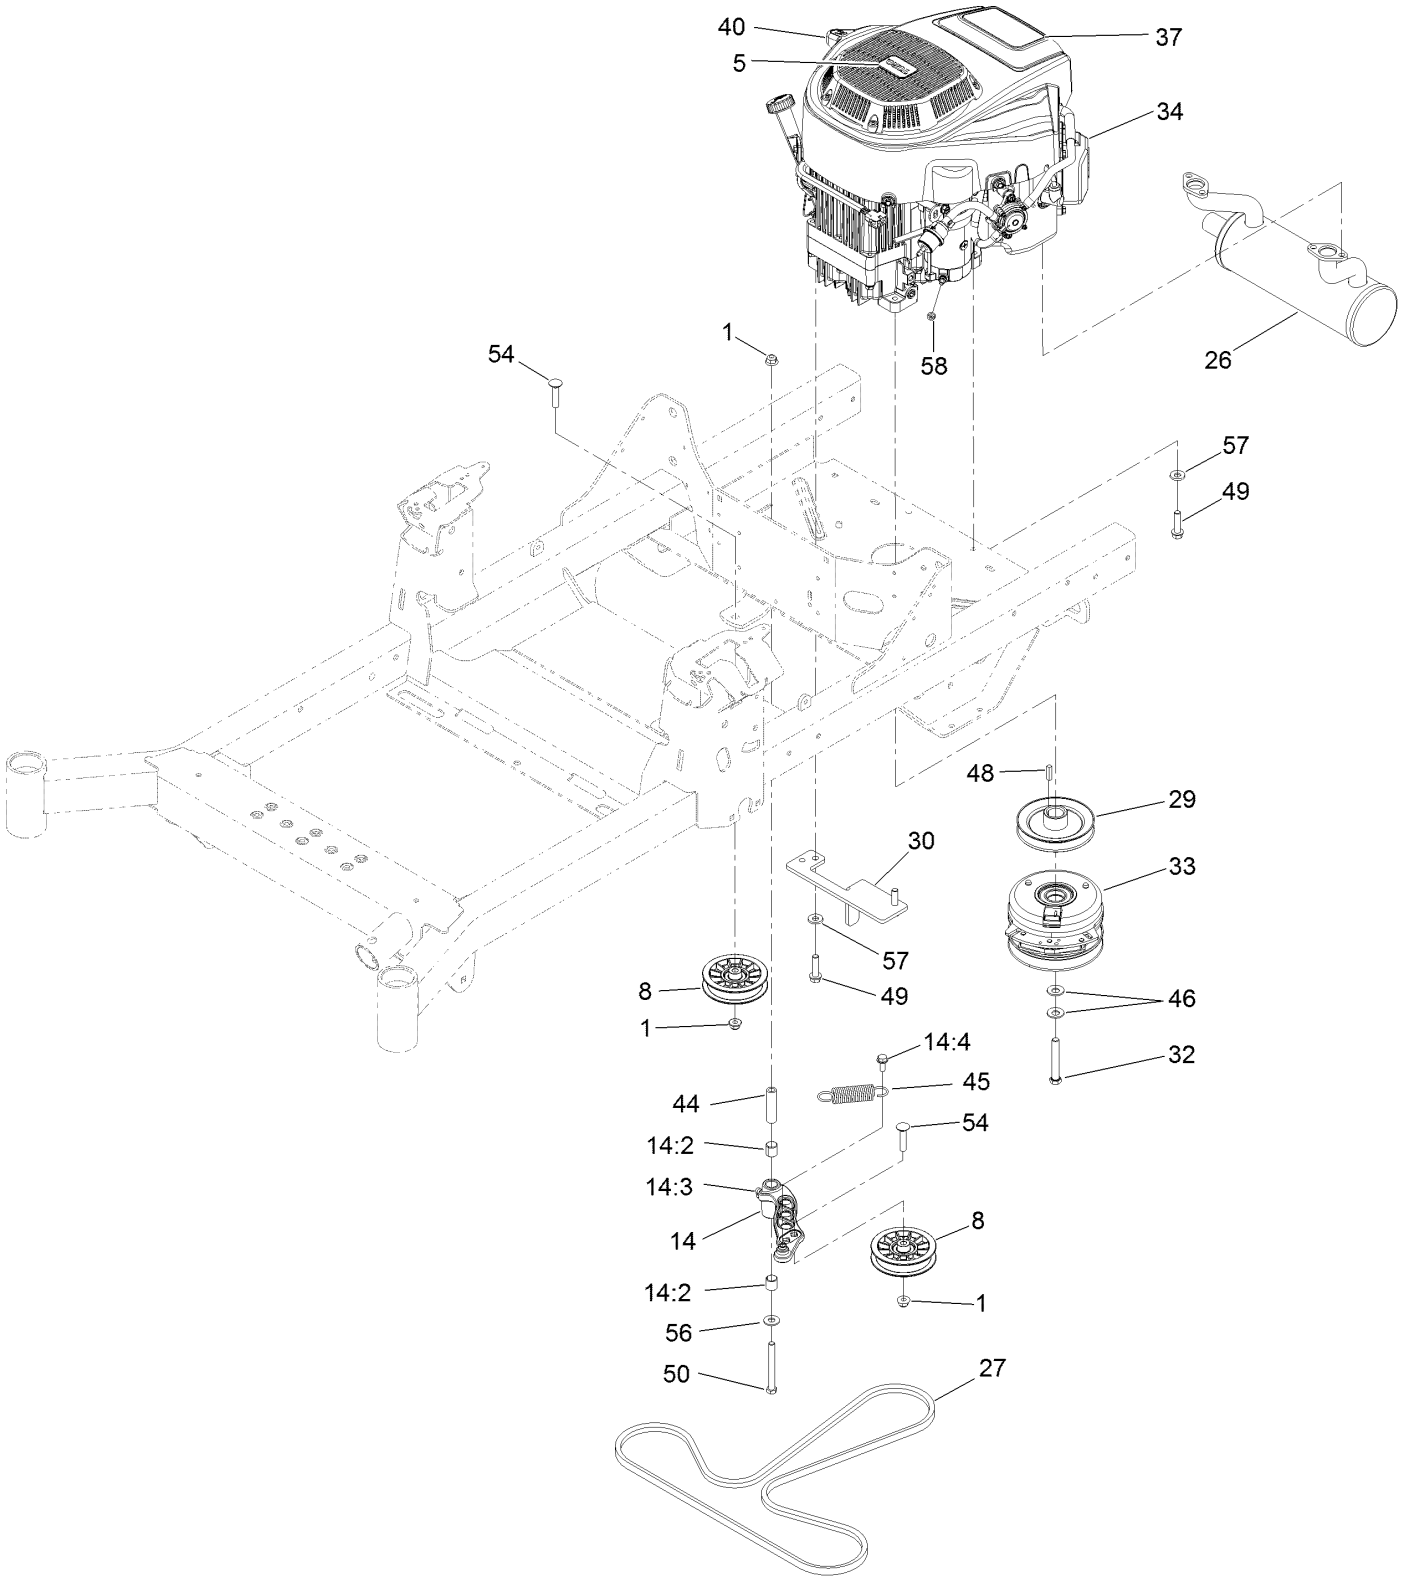


# Engine Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-8301 | 3 | Nut-HF, NI |
| 5 | 110-1136 | 1 | Decal |
| 8 | 116-2456 | 2 | Pulley-Flat Idler |
| 14 | 126-0973 | 1 | Idler Arm ASM |
| 14:2 | 1-513034 | 2 | Sleeve-Bearing |
| 14:3 | 302-40 | 1 | Fitting-Grease, 90 DEG |
| 14:4 | 32144-11 | 1 | Screw-HWH |
| 26 | 126-5864 | 1 | Muffler |
| 27 | 126-5993 | 1 | Belt-V |
| 29 | 135-0134 | 1 | Sheave-Engine |
| 30 | 126-6687-03 | 1 | Anchor-Clutch |
| 32 | 126-7198 | 1 | Screw-HH W/Loctite ● |
| 33 | 127-3410 | 1 | Clutch-PTO |
| 34 | 127-9451 | 1 | Engine-2P77F |
| 37 | 126-9182 | 1 | Decal-HP, Engine |
| 40 | 131-1097 | 1 | Decal-Drain, Oil |
| 44 | 1-603384 | 1 | Bushing-Pivot, Idler |
| 45 | 1-603402 | 1 | Spring-Extension |
| 46 | 1-603610 | 2 | Washer-Spring |
| 48 | 1-807259 | 1 | Key |
| 49 | 32144-102 | 4 | Screw-HWH |
| 50 | 323-15 | 1 | Screw-HH |
| 54 | 3231-29 | 2 | Screw-CARR |
| 56 | 3256-4 | 1 | Washer-Flat |
| 57 | 98-5975 | 4 | Washer-Belleville |
| 58 | 33003-00 | 1 | Nut-HF |

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


# Deck Assembly

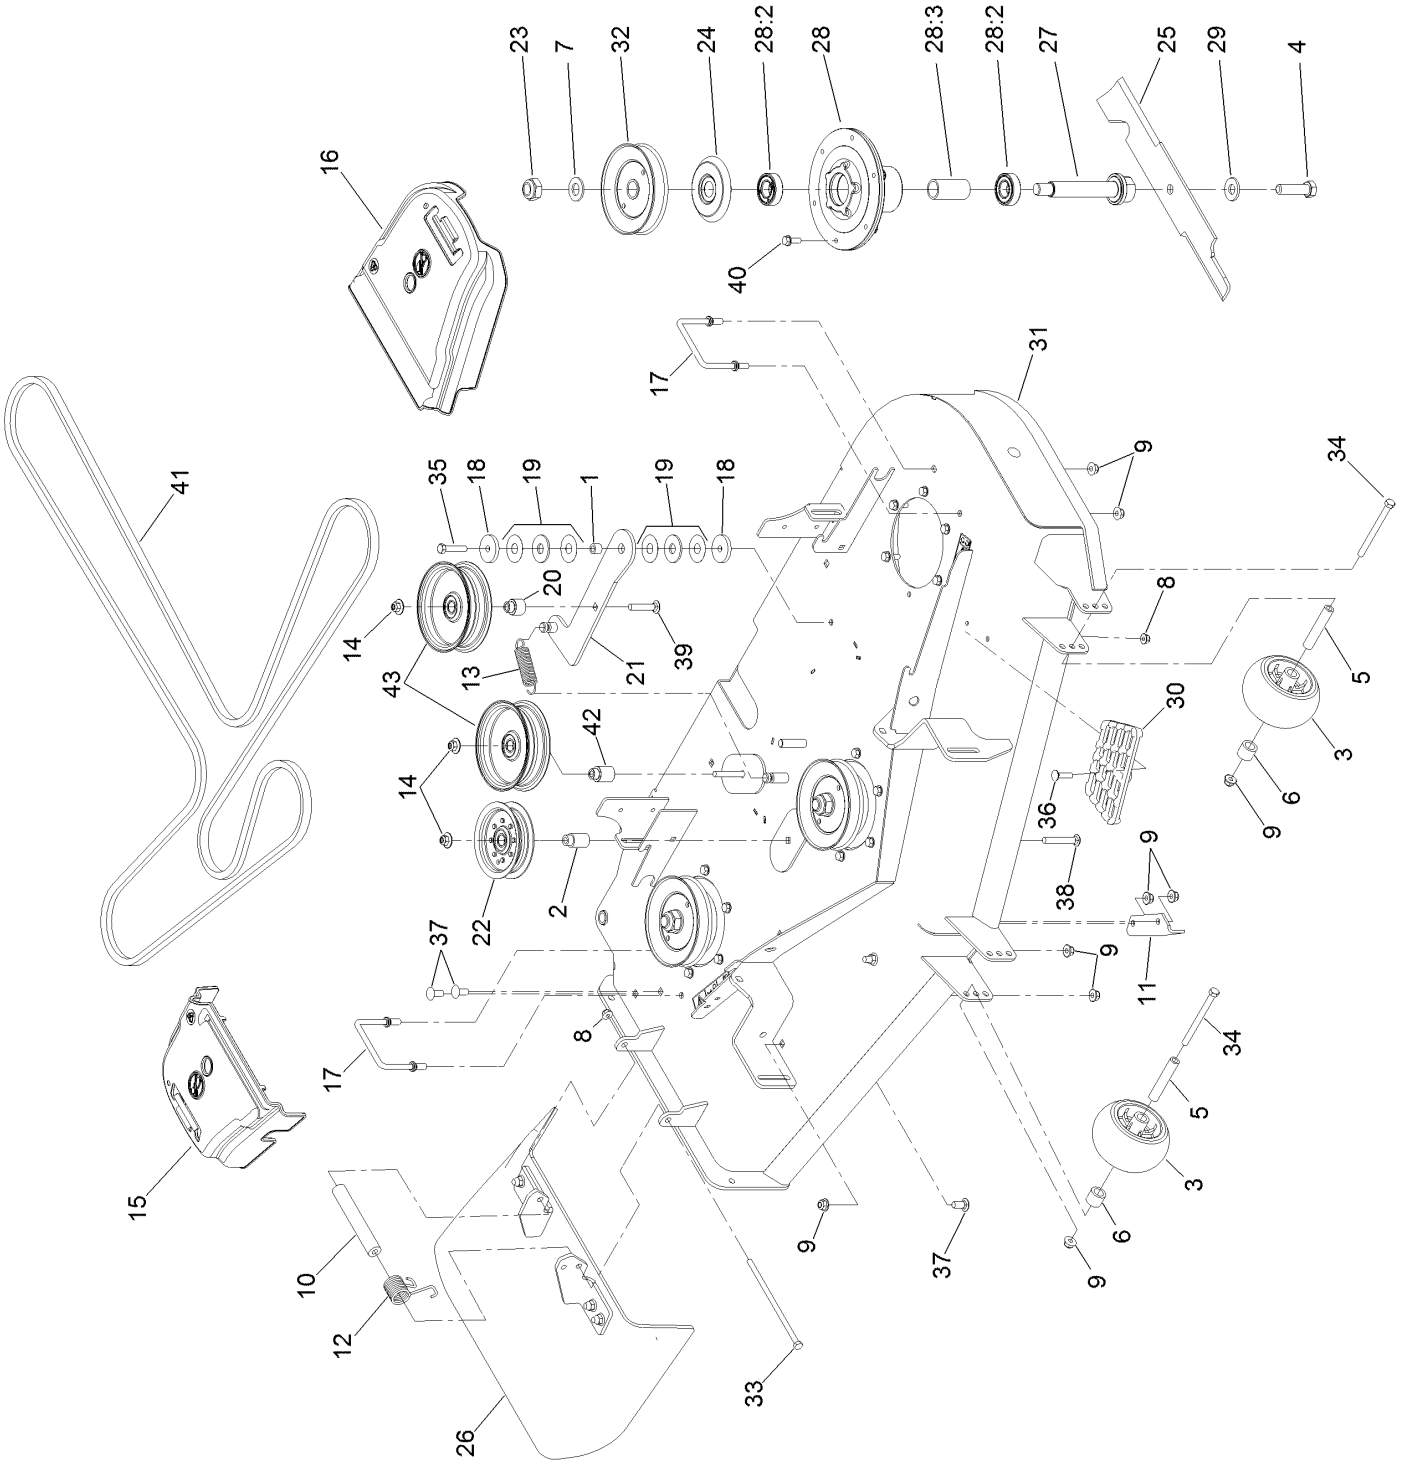

# Deck Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-413088 | 1 | Bushing-Lever, Lift |
| 2 | 1-413113 | 1 | Bushing-Idler |
| 3 | 1-603299 | 2 | Roller-Scalp, Anti |
| 4 | 51-4060 | 3 | Screw-Blade |
| 5 | 98-7912 | 2 | Tube-Spanner |
| 6 | 98-7913 | 2 | Tube-Spacer |
| 7 | 92-5836 | 3 | Washer |
| 8 | 104-8300 | 2 | Nut-HF, NI |
| 9 | 104-8301 | 12 | Nut-HF, NI |
| 10 | 105-4622 | 1 | Spacer |
| 11 | 107-8541-01 | 1 | Baffle-Discharge |
| 12 | 108-4052 | 1 | Spring-Torsion |
| 13 | 139-3616 | 1 | Spring - Extension |
| 14 | 109-6658 | 4 | Nut-Flange, NI |
| 15 | 109-6935 | 1 | Cover-Belt, RH |
| 16 | 109-6936 | 1 | Cover-Belt, LH |
| 17 | 109-6982 | 2 | Wireform-Cover |
| 18 | 110-9981 | 2 | Washer-Plain |
| 19 | 114-0463 | 2 | Washer-Friction, Composite |
| 20 | 126-7684 | 1 | Bushing-Idler |
| 21 | 115-5054 | 1 | Arm-Idler |
| 22 | 116-3626 | 1 | Pulley-Idler |
| 23 | 3296-67 | 3 | Nut-Lock, NI |
| 24 | 117-7210 | 3 | Shield-Bearing |
| 25 | 133-2134 | 3 | Blade-Rotary, 18.0In (Hi Flow) |
| 26 | 120-2451 | 1 | Deflector ASM |
| 27 | 126-7629 | 3 | Shaft-Spindle |
| 28 | 120-5477 | 3 | Spindle ASM |
| 28:2 | 116-0720 | 2 | Bearing-Ball |
| 28:3 | 115-2641 | 1 | Spacer-Bearing |
| 29 | 125-1736 | 3 | Washer-Belleville |
| 30 | 126-4781-03 | 1 | Step-Deck |
| 31 | 126-8957 | 1 | Deck Decal ASM |
| 32 | 126-6612 | 3 | Pulley |
| 33 | 322-50 | 1 | Screw-HH |
| 34 | 323-23 | 2 | Screw-HH |
| 35 | 323-9 | 1 | Screw-HH |
| 36 | 3230-3 | 1 | Screw-CARR |
| 37 | 3231-27 | 6 | Screw-CARR |
| 38 | 3231-31 | 2 | Screw-CARR |
| 39 | 3231-6 | 1 | Screw-CARR |
| 40 | 32144-41 | 18 | Screw-Taptite |
| 41 | 126-7732 | 1 | Belt-Drive, Deck |
| 42 | 126-7683 | 1 | Bushing-Idler |
| 43 | 116-4669 | 2 | Idler-Pulley, Flat |


# Deflector Assembly No. 120-2451

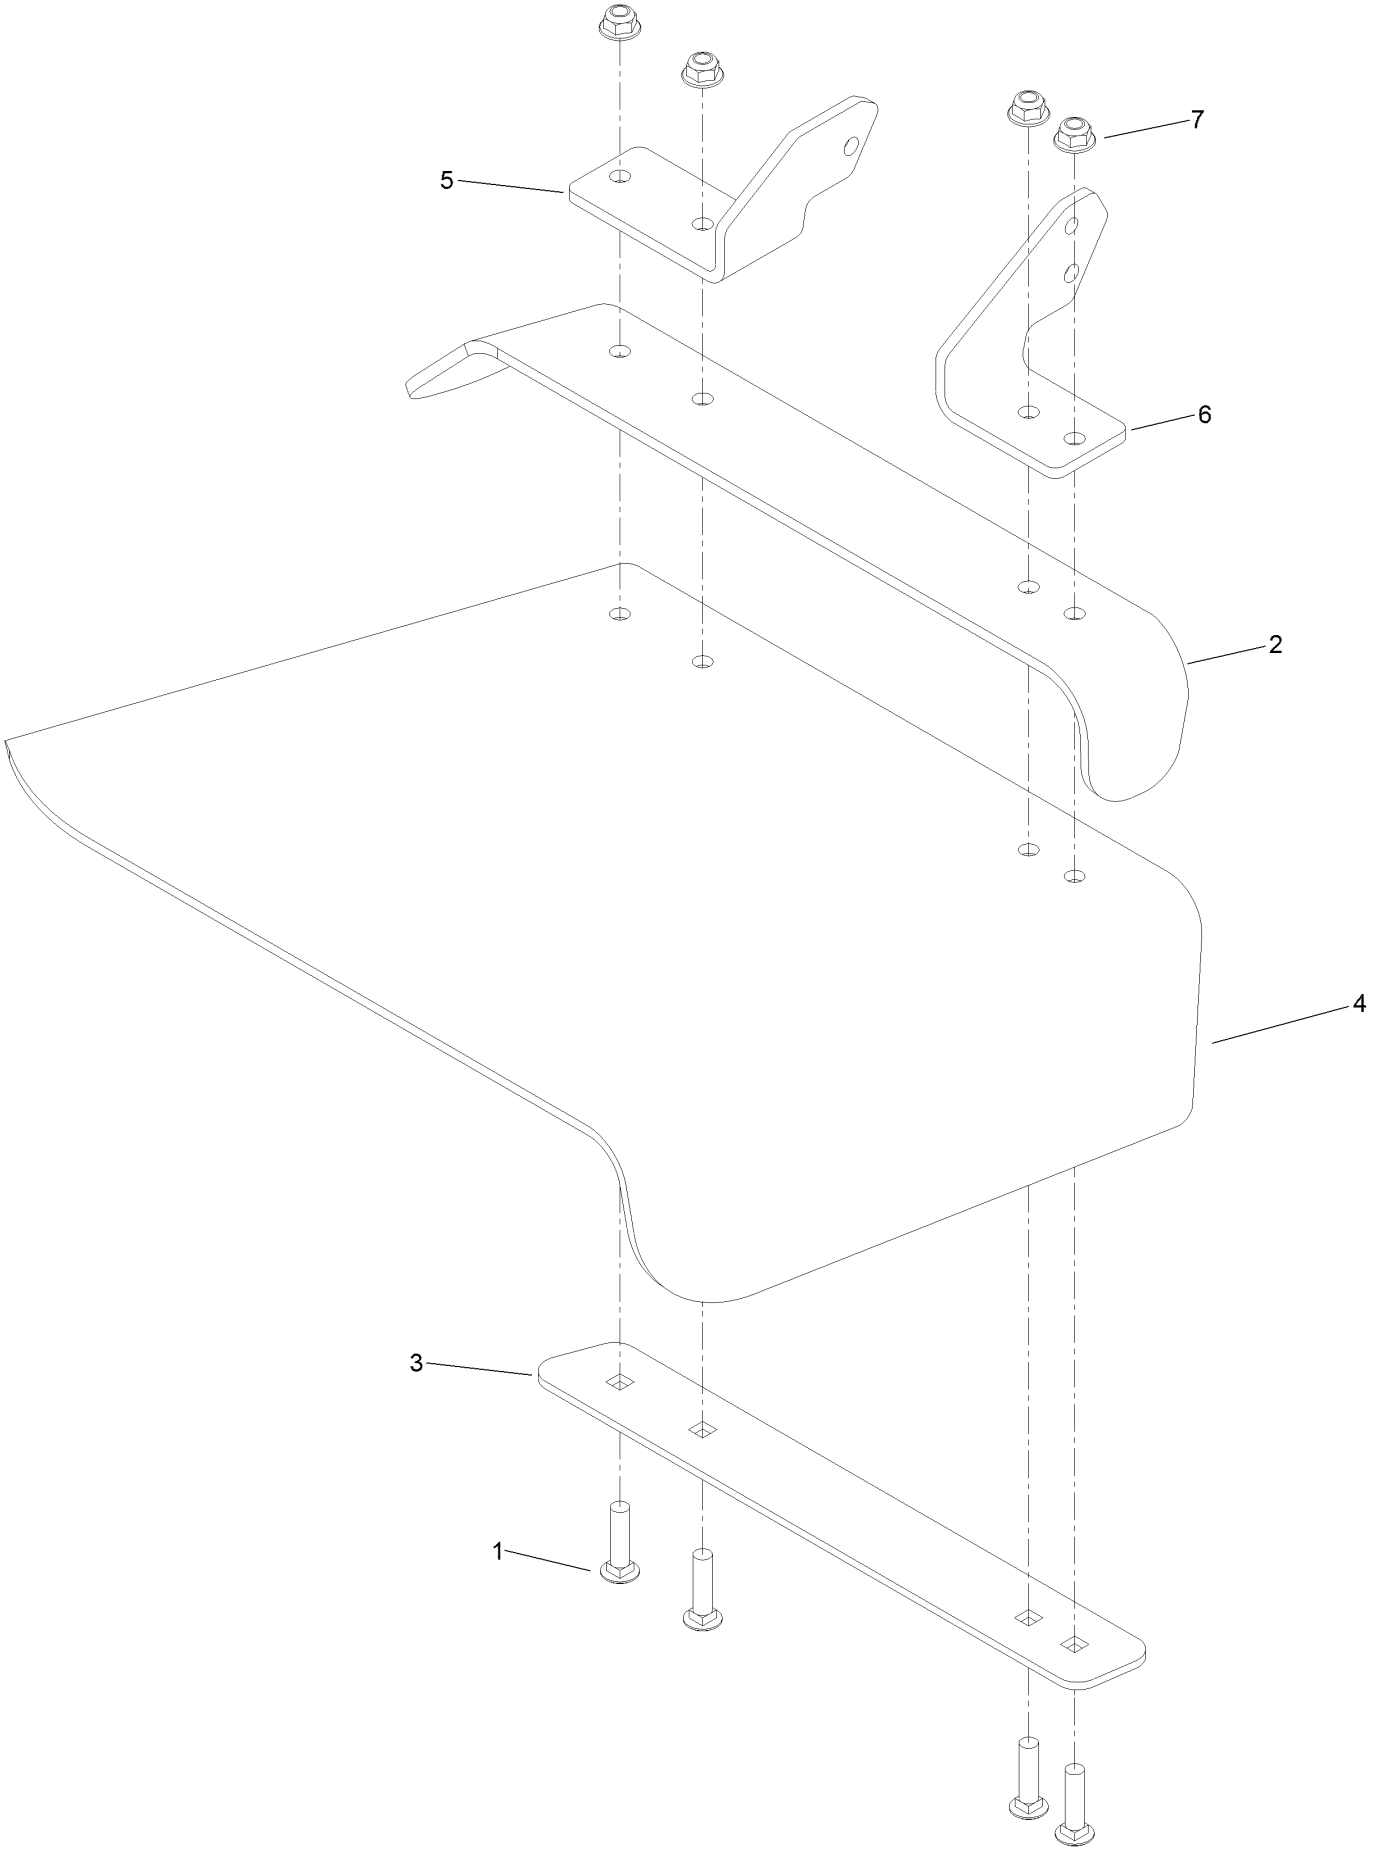

# Deflector Assembly No. 120-2451 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 3231-4 | 4 | Screw-CARR |
| 2 | 106-3246-01 | 1 | Deflector |
| 3 | 106-3248-03 | 1 | Strap-Discharge |
| 4 | 110-0759 | 1 | Deflector-Rubber |
| 5 | 108-4059-01 | 1 | Plate-Hinge, Rear |
| 6 | 106-3253-01 | 1 | Plate-Hinge, Front |
| 7 | 104-8301 | 4 | Nut-HF, NI |


# Deck Decal Assembly No. 126-8957

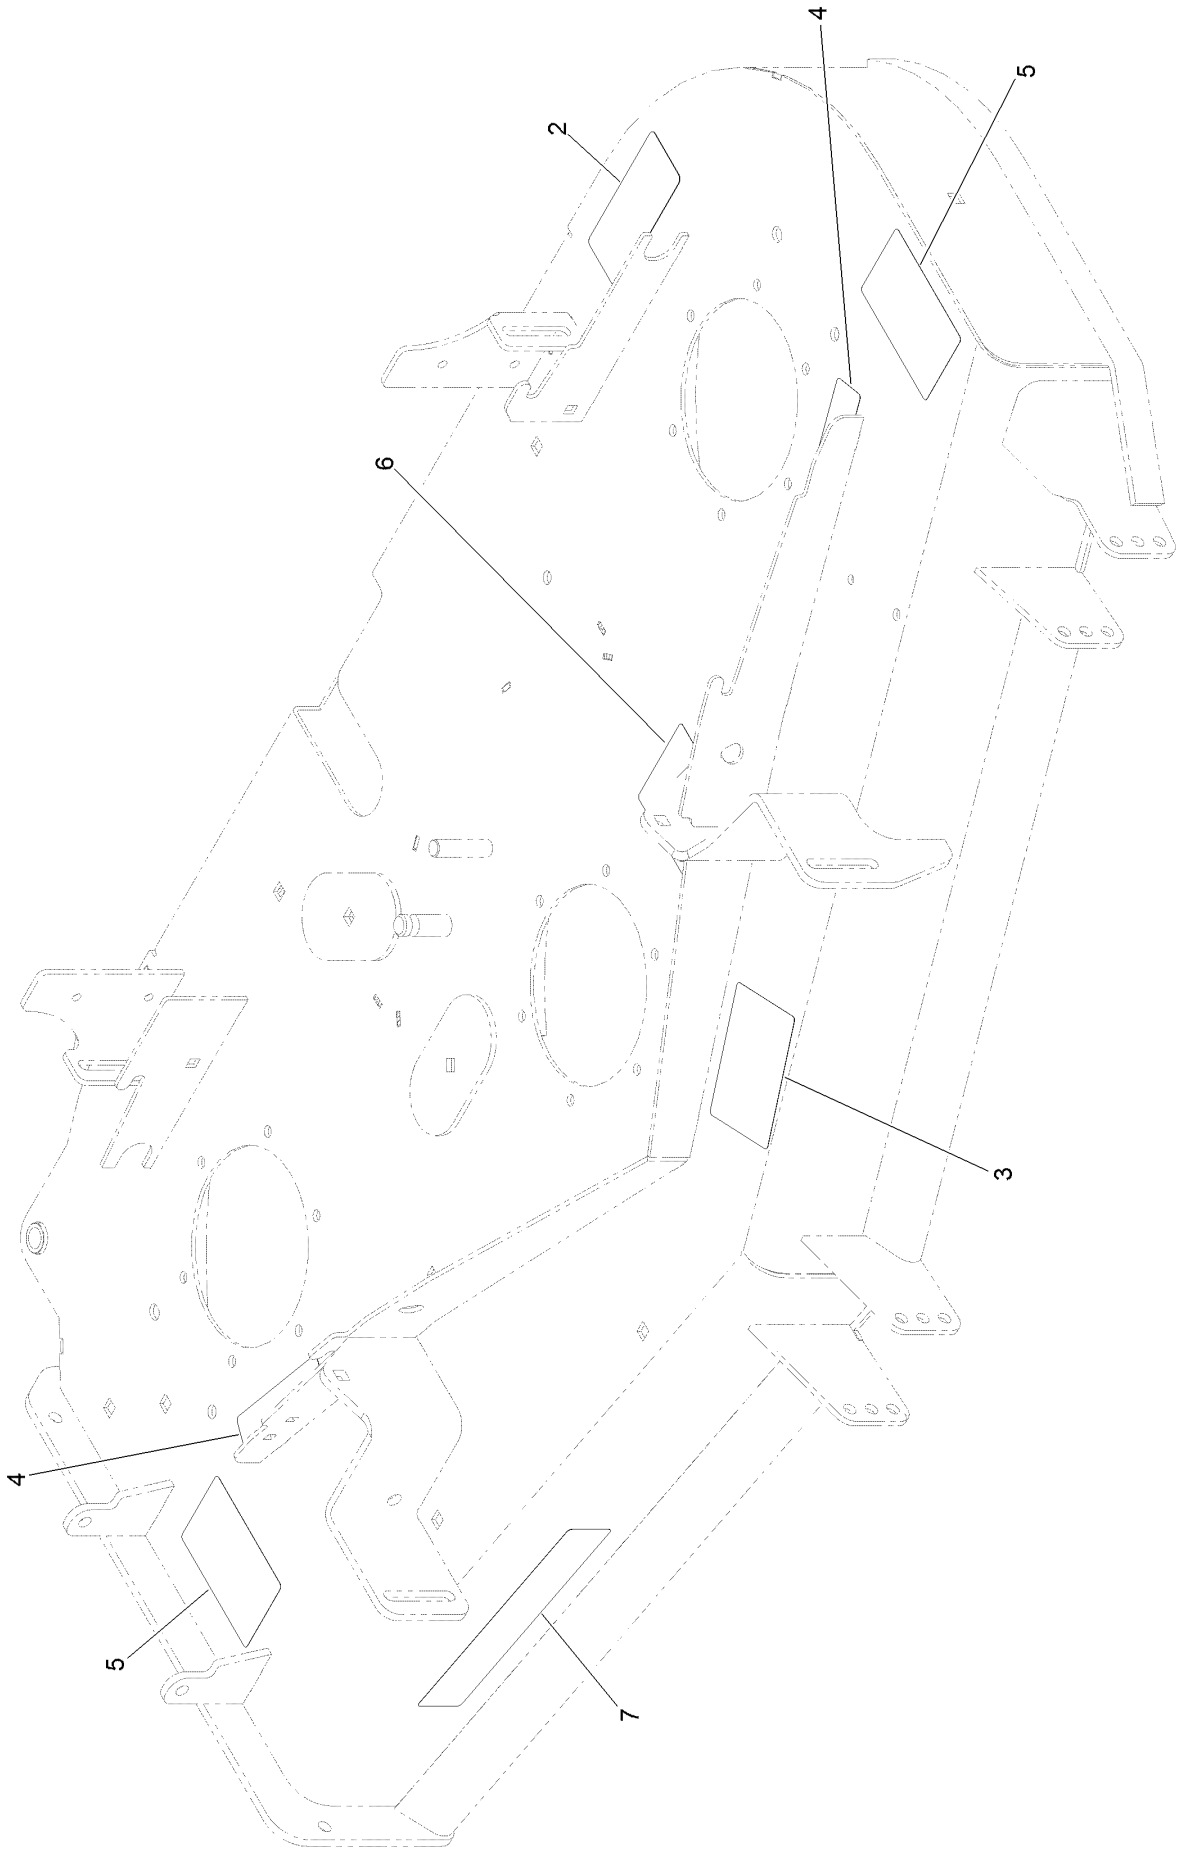


# Deck Decal Assembly No. 126-8957 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 93-7818 | 1 | Decal-Torque, Blade Bolt |
| 3 | 112-3858 | 1 | Decal-Scalp, Anti |
| 4 | 112-9028 | 2 | Decal-Cover, Missing |
| 5 | 117-3848 | 2 | Decal-Danger |
| 6 | 117-1194 | 1 | Decal-Routing, Belt |
| 7 | 121-3205 | 1 | Decal |


# Fuel System Assembly
# with Non-Canister Style Air Filter

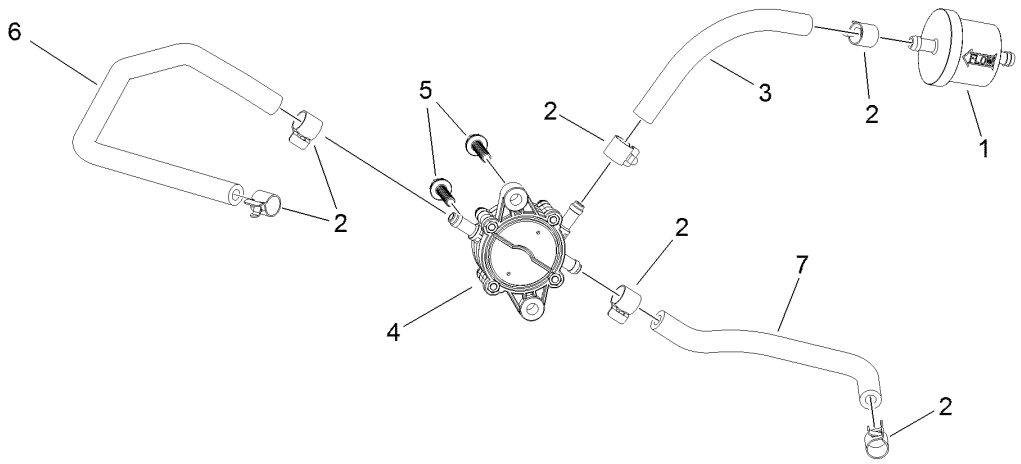

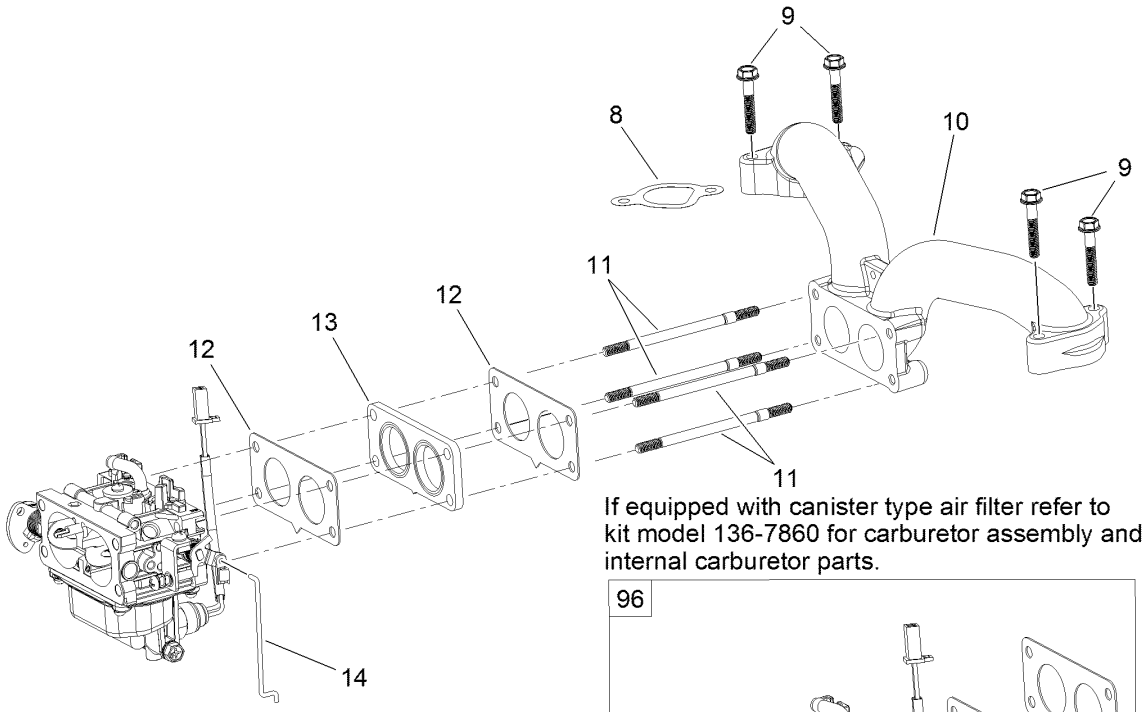




If equipped with canister type air filter refer to kit model 136-7860 for carburetor assembly and internal carburetor parts.

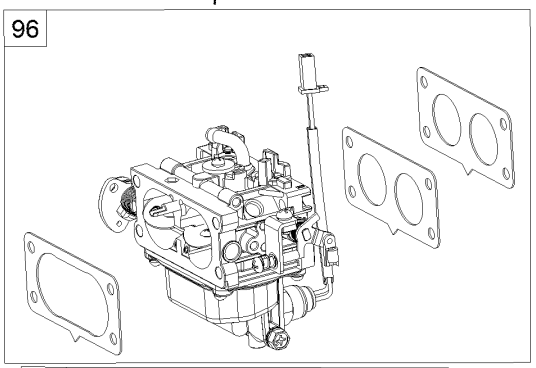
96

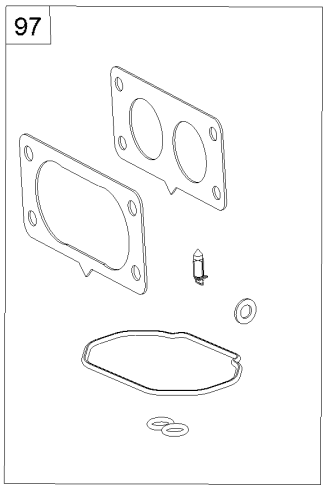

97



98

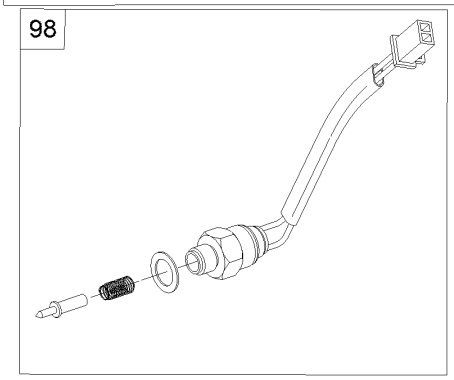


# Fuel System Assembly with Non-Canister Style Air Filter (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 133-1563 | 1 | Filter-Fuel |
| 2 | 120-4251 | 6 | Clamp-Fuel Line |
| 3 | 120-4371 | 1 | Line-Fuel |
| 4 | 127-9206 | 1 | Pump-Fuel |
| 5 | 120-4225 | 2 | Screw-HHF |
| 6 | 127-9205 | 1 | Hose-Fuel |
| 7 | 127-9207 | 1 | Hose-Fuel |
| 8 | 127-9230 | 2 | Gasket-Intake |
| 9 | 120-4284 | 4 | Screw-HHF |
| 10 | 127-9244 | 1 | Manifold-Intake |
| 11 | 127-9245 | 4 | Stud |
| 12 | 127-9246 | 2 | Gasket-Carburetor |
| 13 | 127-9247 | 1 | Insulator-Carburetor |
| 14 | 127-9248 | 1 | Linkage-Throttle |
| 96 | 133-9808 | 1 | Carburetor Replacement Kit |
| 97 | 127-9290 | 1 | Carburetor Repair Kit |
| 98 | 127-9292 | 1 | Solenoid Kit |
| 99 | 133-9833 | 1 | High Altitude Kit ● |

● Not illustrated

# Carburetor Assembly
# with Non-Canister Style Air Filter

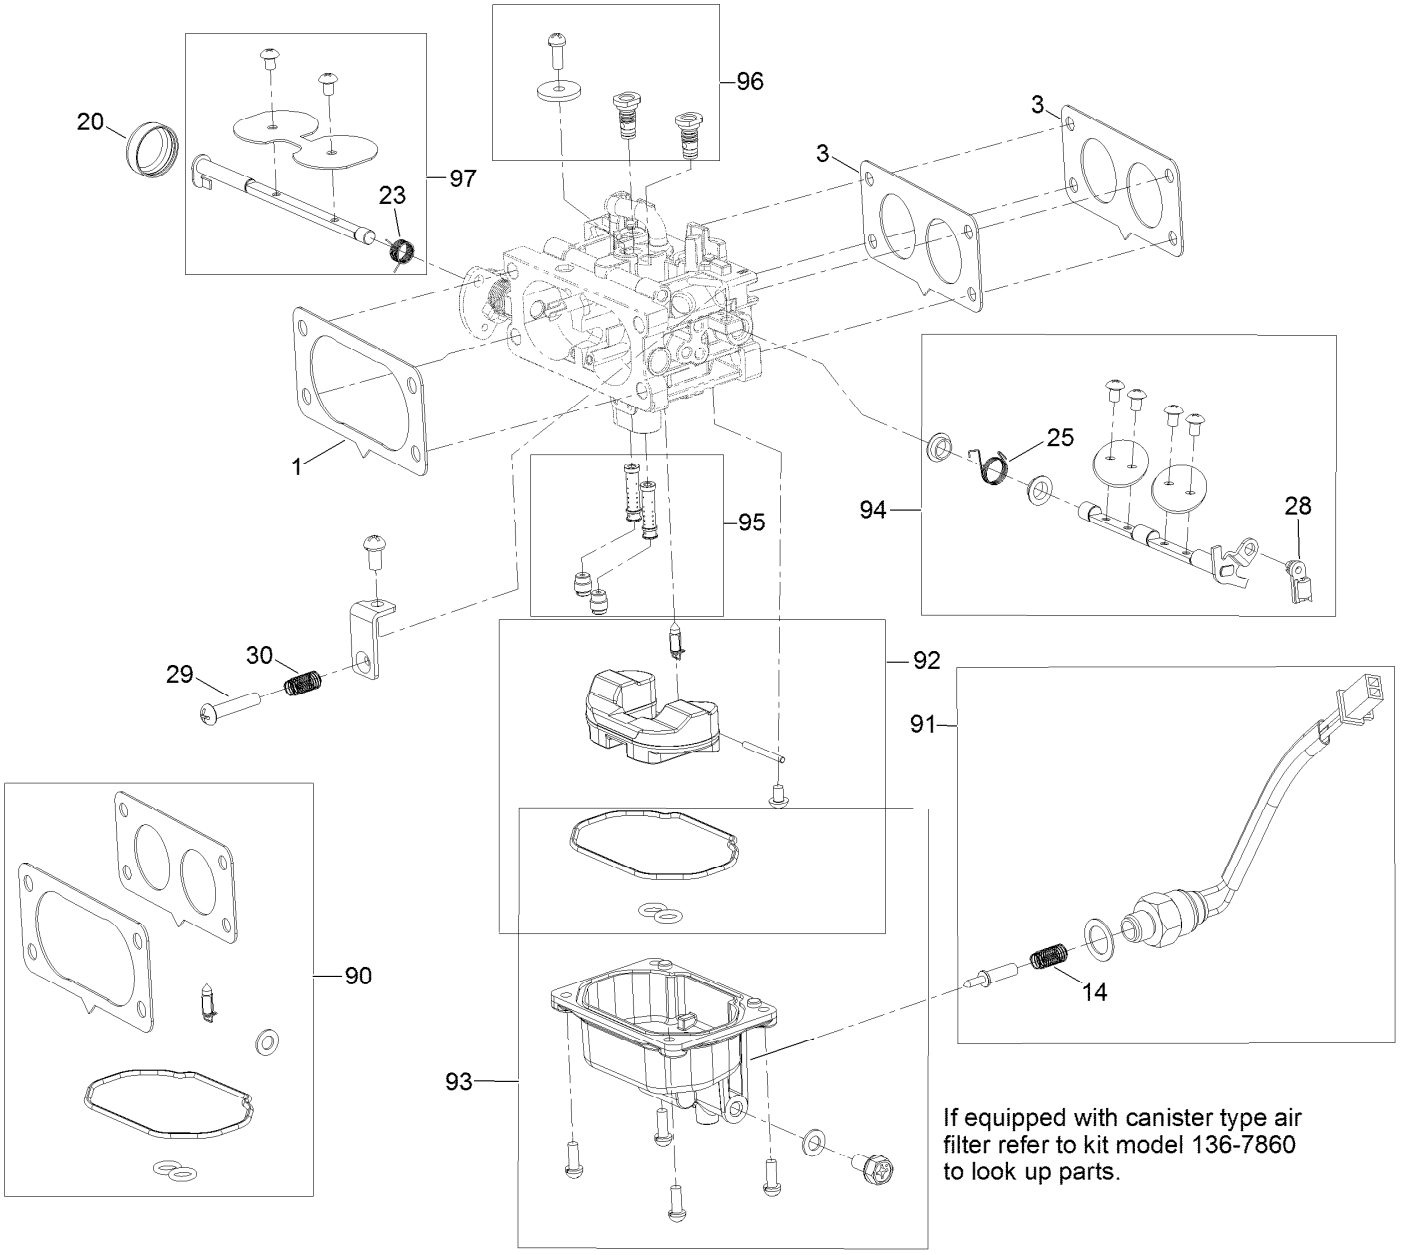



If equipped with canister type air filter refer to kit model 136-7860 to look up parts.

# Carburetor Assembly with Non-Canister Style Air Filter (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9251 | 1 | Gasket-Carburetor |
| 3 | 127-9246 | 2 | Gasket-Carburetor |
| 14 | 127-9319 | 1 | Spring |
| 20 | 127-9325 | 1 | Cover-Shaft, Choke |
| 23 | 127-9328 | 1 | Spring |
| 25 | 127-9330 | 1 | Spring |
| 28 | 127-9333 | 1 | Clamp-Lock |
| 29 | 127-9334 | 1 | Screw-PPH |
| 30 | 127-9335 | 1 | Spring |
| 90 | 127-9290 | 1 | Carburetor Repair Kit |
| 91 | 127-9292 | 1 | Solenoid Kit |
| 92 | 127-9340 | 1 | Float Kit |
| 93 | 127-9341 | 1 | Bowl Kit |
| 94 | 133-9817 | 1 | Throttle Shaft Kit |
| 95 | 133-9818 | 1 | Nozzle And Jet Kit |
| 96 | 133-9812 | 1 | Air Jet Kit |
| 97 | 127-9345 | 1 | Choke Shaft Kit |


# Air Intake and Filtration Assembly with Non-Canister Style Air Filter

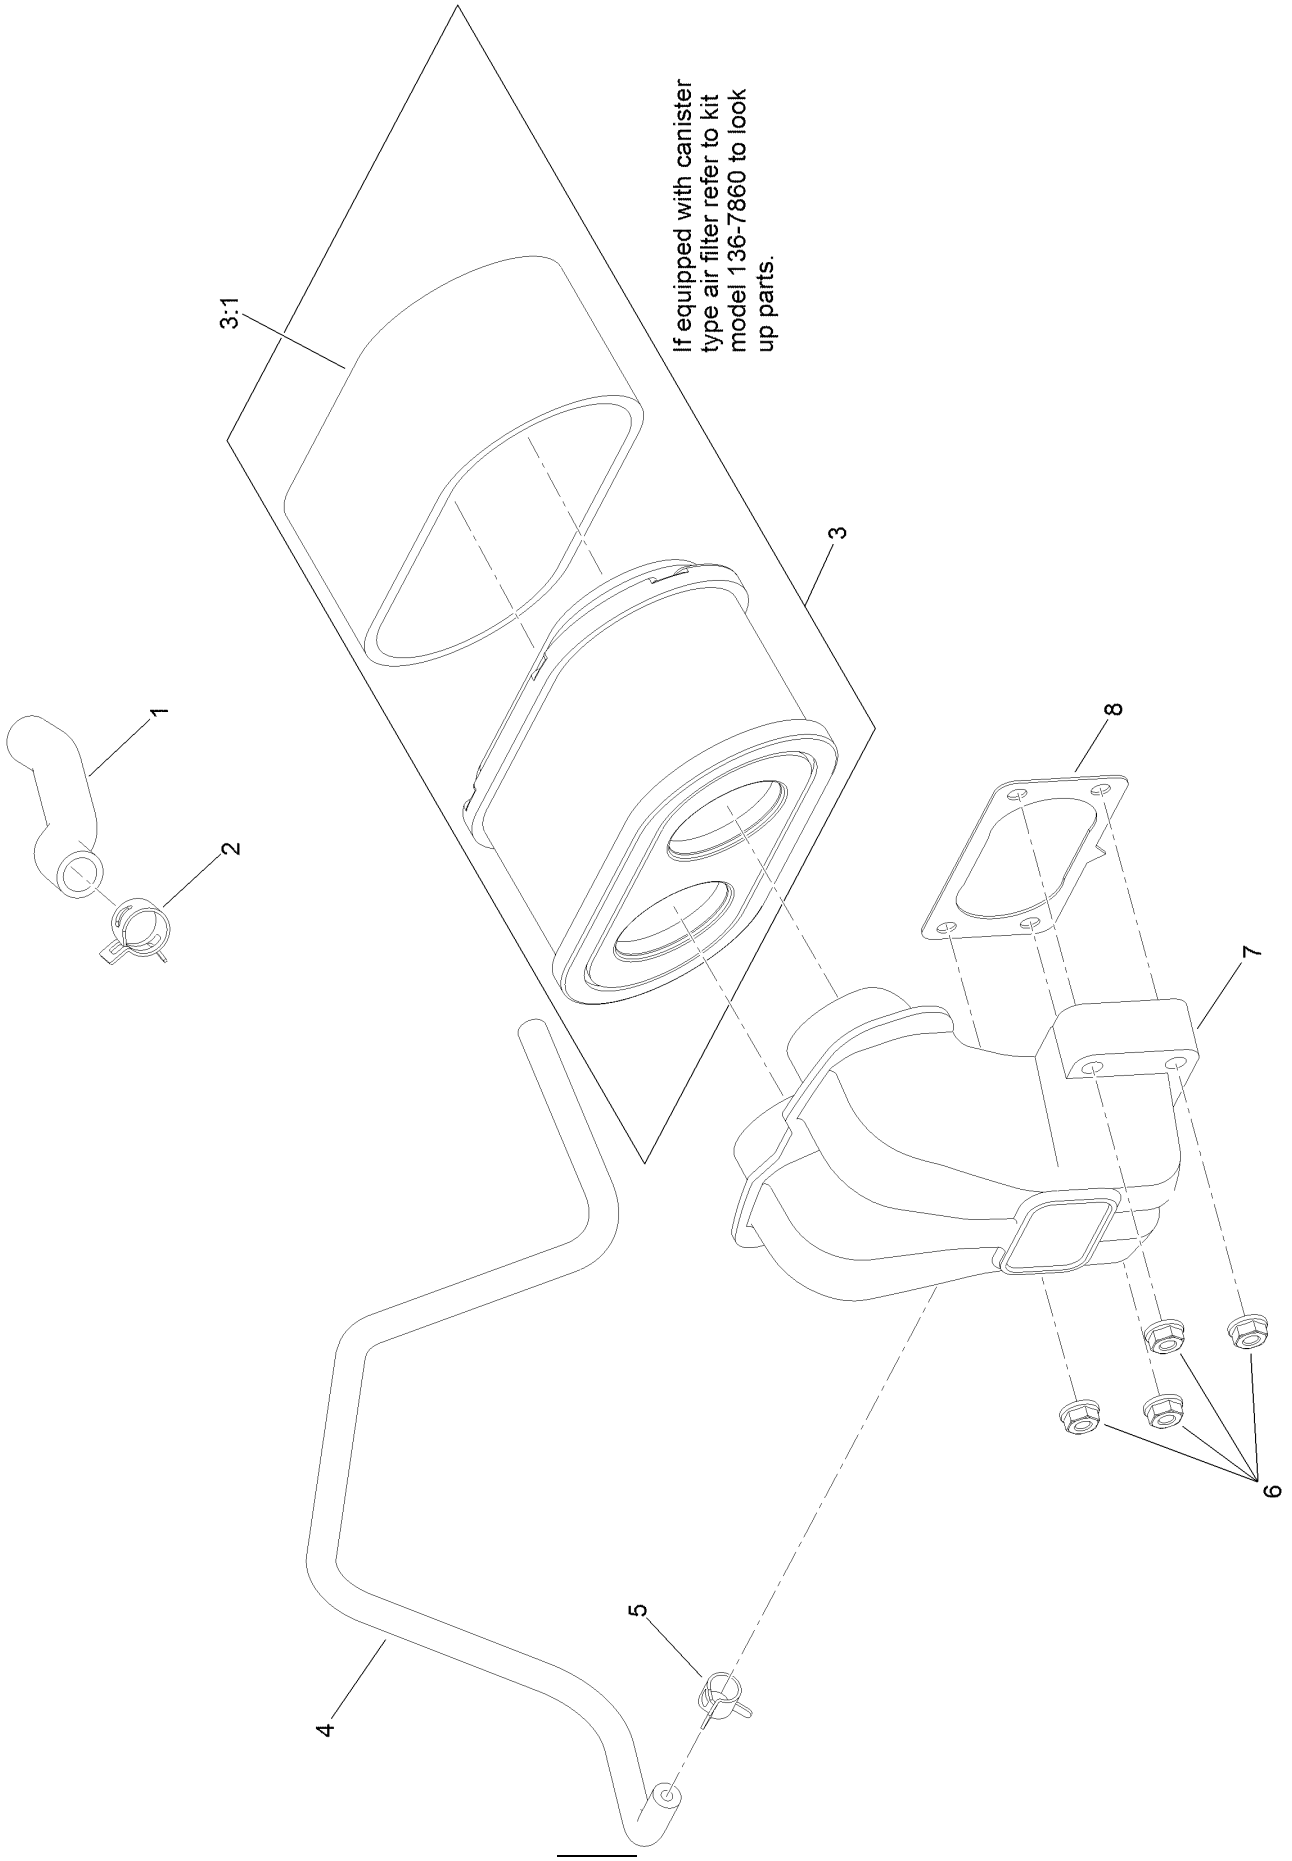


# Air Intake and Filtration Assembly with Non-Canister Style Air Filter (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9235 | 1 | Tube-Breather |
| 2 | 127-9234 | 2 | Clamp-Hose |
| 3 | 127-9252 | 1 | Filter-Air, Complete |
| 3:1 | 127-9288 | 1 | Filter-Pre, Foam |
| 4 | 127-9253 | 1 | Hose-Fuel |
| 5 | 127-9187 | 1 | Clamp-Hose |
| 6 | 120-4236 | 4 | Nut-Flange |
| 7 | 127-9047 | 1 | Manifold-Filter, Air |
| 8 | 127-9251 | 1 | Gasket-Carburetor |

# Ignition and Electrical Assembly

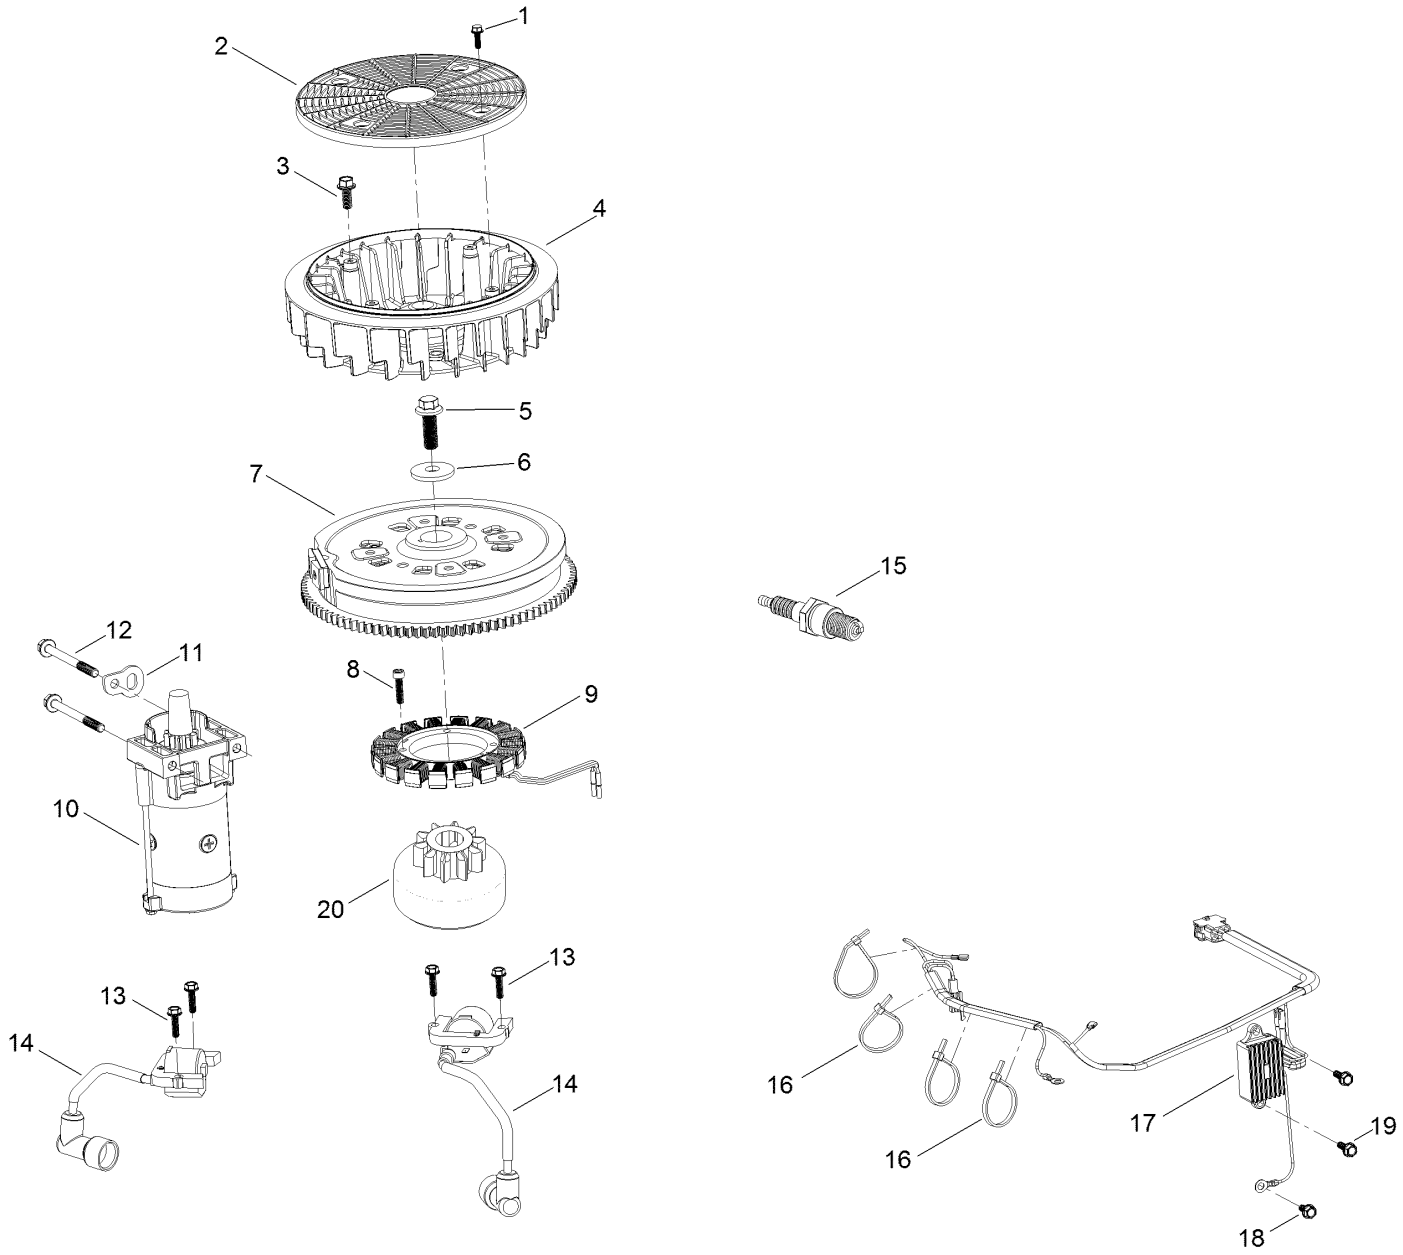

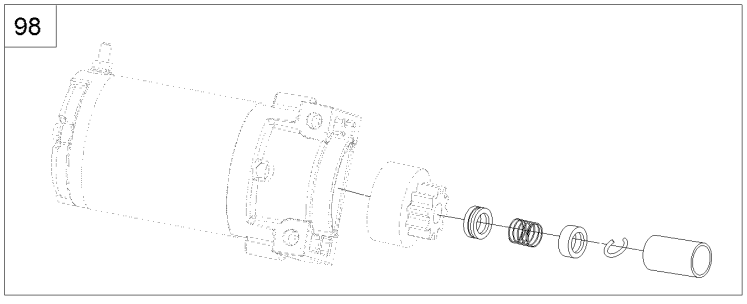
# Ignition and Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9197 | 4 | Screw-HWH |
| 2 | 127-9198 | 1 | Screen-Rotating |
| 3 | 127-9199 | 4 | Screw-HWH |
| 4 | 127-9200 | 1 | Fan-Cooling |
| 5 | 127-9201 | 1 | Screw-HWH |
| 6 | 127-9202 | 1 | Washer-Spring |
| 7 | 127-9306 | 1 | Flywheel |
| 8 | 127-9210 | 4 | Screw-HSH |
| 9 | 127-9211 | 1 | Alternator |
| 10 | 133-9828 | 1 | Motor-Starter |
| 11 | 127-9208 | 1 | Bracket-Lift |
| 12 | 120-4231 | 2 | Screw-HHF |
| 13 | 121-0007 | 4 | Bolt-Flange |
| 14 | 127-9216 | 2 | Ignition Coil ASM |
| 15 | 81-3250 | 2 | Spark Plug |
| 16 | 127-9220 | 4 | Tie-Zip |
| 17 | 127-9219 | 1 | Regulator-Voltage W/Harness |
| 18 | 120-4216 | 1 | Screw-HHF |
| 19 | 120-4232 | 2 | Screw-HHF |
| 20 | 133-1562 | 1 | Pinion-Starter |
| 98 | 133-1566 | 1 | Starter Repair Kit |


# Crankcase and Crankshaft Assembly

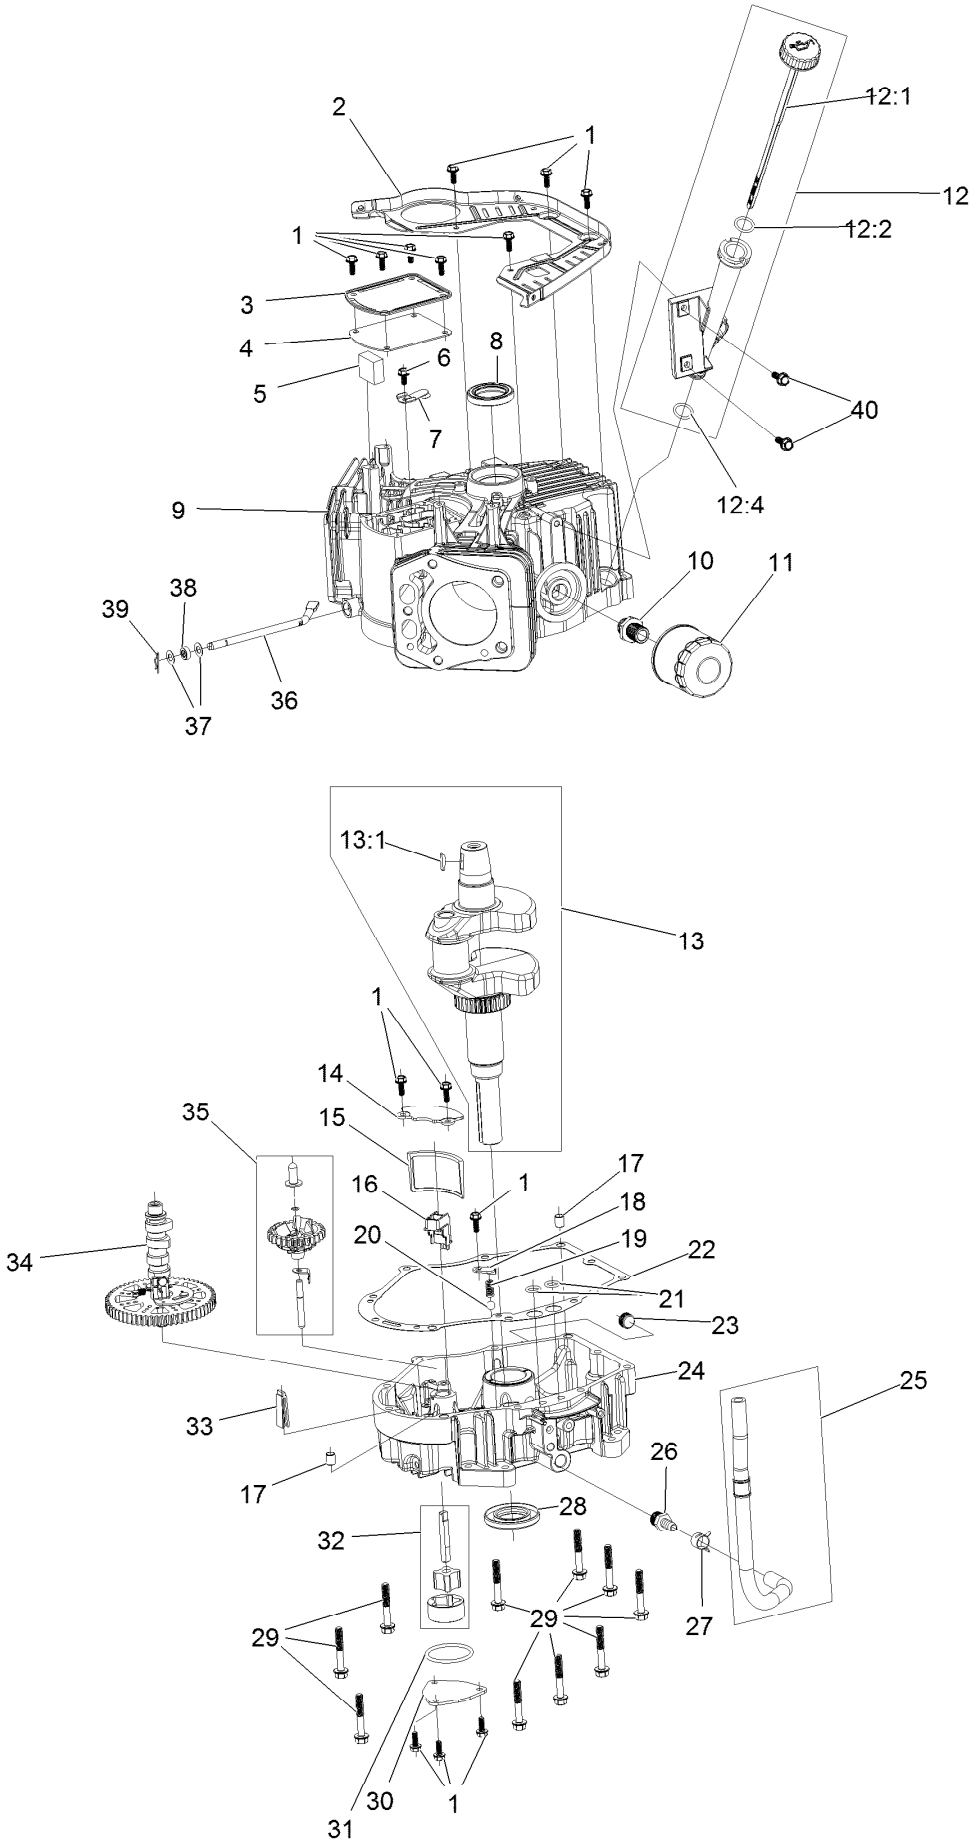

# Crankcase and Crankshaft Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 120-4232 | 14 | Screw-HHF |
| 2 | 127-9212 | 1 | Baffle |
| 3 | 127-9213 | 1 | Cover-Breather |
| 4 | 127-9214 | 1 | Gasket-Breather |
| 5 | 127-9215 | 1 | Filter-Breather |
| 6 | 120-4216 | 1 | Screw-HHF |
| 7 | 127-9217 | 1 | Valve-Breather |
| 8 | 120-4267 | 1 | Seal-Oil |
| 9 | 127-9223 | 1 | Crankcase |
| 10 | 120-4346 | 1 | Adaptor-Filter, Oil |
| 11 | 120-4276 | 1 | Filter-Oil |
| 12 | 127-9218 | 1 | Oil Tube ASM |
| 12:1 | 127-9283 | 1 | Dipstick |
| 12:2 | 127-9284 | 1 | O-Ring |
| 12:4 | 127-9286 | 1 | O-Ring |
| 13 | 127-9255 | 1 | Crankshaft |
| 13:1 | 120-4320 | 1 | Key-Woodruff |
| 14 | 127-9261 | 1 | Cover-Screen, Oil |
| 15 | 127-9262 | 1 | Screen-Oil |
| 16 | 127-9263 | 1 | Retainer-Screen |
| 17 | 120-4274 | 2 | Pin-Dowel |
| 18 | 127-9264 | 1 | Plate-Retainer |
| 19 | 127-9265 | 1 | Spring |
| 20 | 127-9266 | 1 | Valve-Ball |
| 21 | 120-4262 | 2 | O-Ring |
| 22 | 127-9267 | 1 | Gasket-Cover, Crankcase |
| 23 | 133-9805 | 1 | Plug-Drain |
| 24 | 133-9806 | 1 | Cover-Crankcase |
| 25 | 127-9293 | 1 | Oil Drain Hose ASM |
| 26 | 127-9275 | 1 | Fitting-Hose |
| 27 | 127-9276 | 1 | Clamp-Hose |
| 28 | 127-9271 | 1 | Seal |
| 29 | 121-0473 | 10 | Screw-HHF |
| 30 | 127-9274 | 1 | Cover-Oil Pump |
| 31 | 127-9273 | 1 | O-Ring |
| 32 | 127-9272 | 1 | Oil Pump ASM |
| 33 | 120-4275 | 1 | Deflector-Oil, Rubber |
| 34 | 133-1568 | 1 | Camshaft |
| 35 | 133-9807 | 1 | Governor ASM |
| 36 | 127-9238 | 1 | Shaft-Governor |
| 37 | 120-4258 | 2 | Washer-Plain |
| 38 | 120-4257 | 1 | Seal-Oil |
| 39 | 120-4256 | 1 | Pin-Hair |
| 40 | 120-4232 | 2 | Screw-HHF |


# Governor Control Assembly

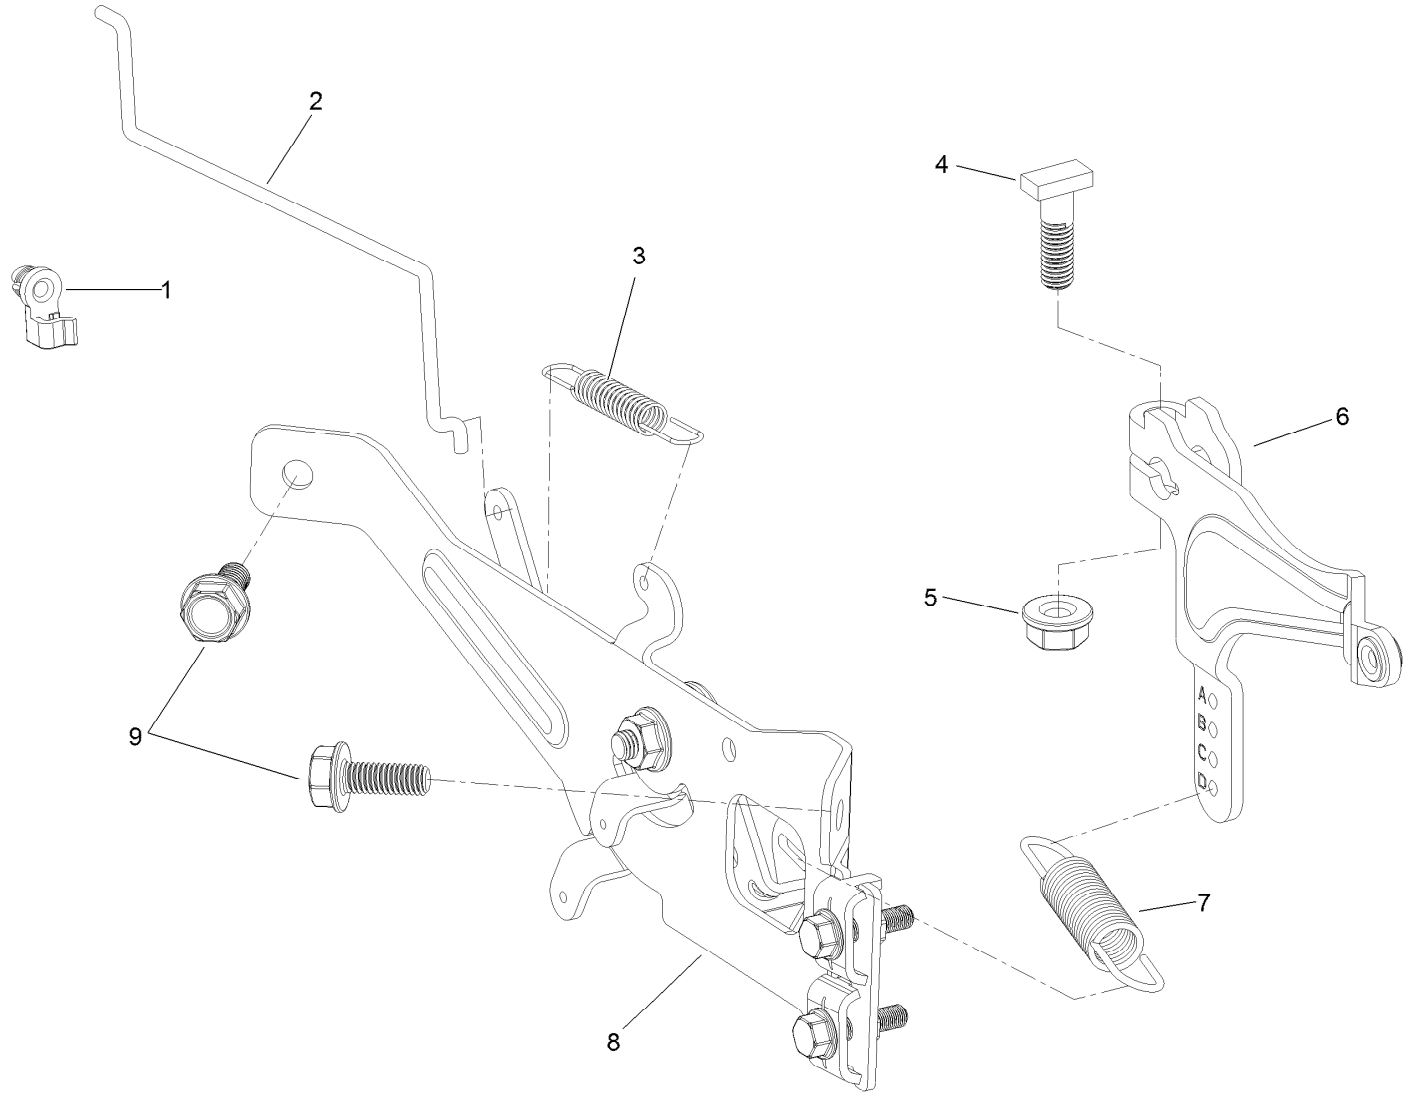



# Governor Control Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9250 | 1 | Clip-Linkage |
| 2 | 127-9242 | 1 | Linkage-Choke |
| 3 | 127-9241 | 1 | Spring-Governor |
| 4 | 120-4238 | 1 | Bolt-Arm, Governor |
| 5 | 120-4236 | 1 | Nut-Flange |
| 6 | 127-9239 | 1 | Arm-Governor |
| 7 | 133-9809 | 1 | Spring-Governor |
| 8 | 133-1570 | 1 | Control Plate ASM |
| 9 | 120-4232 | 2 | Screw-HHF |

# Piston and Cylinder Head Assembly

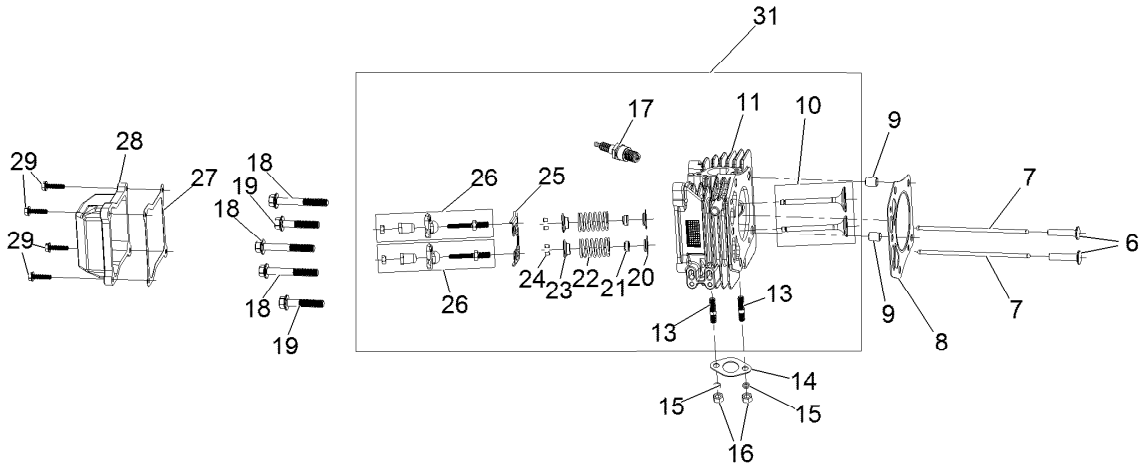

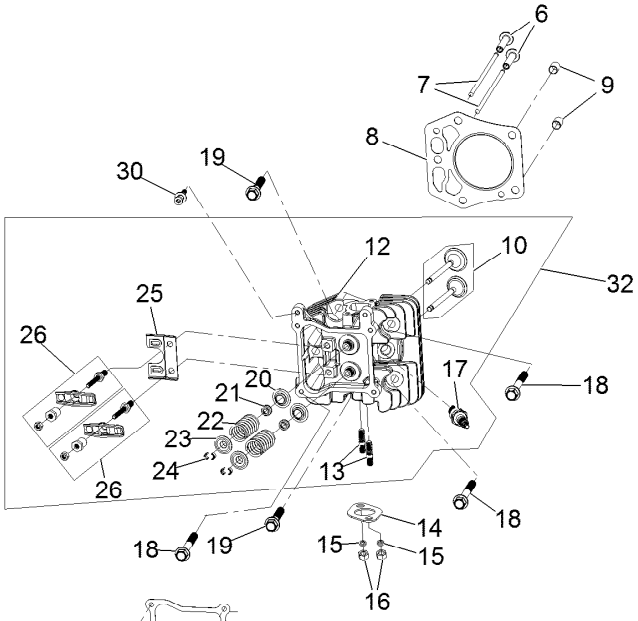


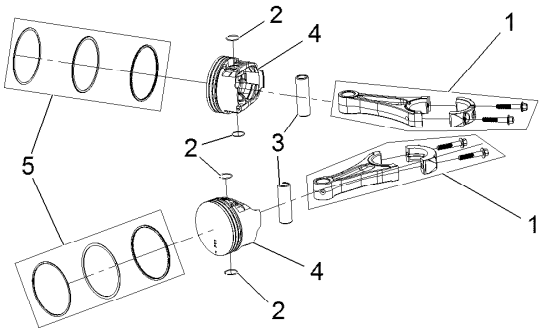
# Piston and Cylinder Head Assembly (continued)
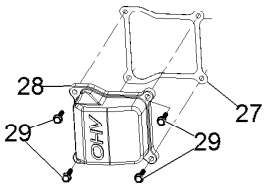
| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9256 | 2 | Connecting Rod ASM |
| 2 | 127-9258 | 4 | Clip-Pin, Piston |
| 3 | 127-9257 | 2 | Pin-Piston |
| 4 | 127-9259 | 2 | Piston |
| 5 | 127-9260 | 2 | Piston Ring Set |
| 6 | 127-9224 | 4 | Lifter-Valve |
| 7 | 127-9225 | 4 | Rod-Push |
| 8 | 127-9226 | 2 | Gasket-Head, Cylinder |
| 9 | 127-9227 | 4 | Pin-Dowel |
| 10 | 127-9228 | 2 | Valve Set |
| 11 | 133-9802 | 1 | Head-Cylinder, Right |
| 12 | 133-9804 | 1 | Head-Cylinder, Left |
| 13 | 121-0464 | 4 | Stud-Exhaust |
| 14 | 120-4317 | 2 | Gasket-Exhaust |
| 15 | 127-9279 | 4 | Washer-Lock, Split |
| 16 | 121-0199 | 4 | Nut-HH |
| 17 | 81-3250 | 2 | Spark Plug |
| 18 | 127-9231 | 6 | Screw-HWH |
| 19 | 127-9232 | 4 | Screw-HWH |
| 20 | 120-4303 | 4 | Seat-Spring, Valve |
| 21 | 120-4304 | 4 | Seal-Stem, Valve |
| 22 | 120-4305 | 4 | Spring-Valve |
| 23 | 120-4306 | 4 | Retainer-Spring, Valve |
| 24 | 120-4307 | 8 | Keeper-Valve |
| 25 | 127-9233 | 2 | Plate-Guide, Push Rod |
| 26 | 127-9294 | 4 | Rocker Arm ASM |
| 27 | 127-9295 | 2 | Gasket-Valve Cover |
| 28 | 127-9050 | 2 | Cover-Valve |
| 29 | 120-4225 | 8 | Screw-HHF |
| 30 | 120-4214 | 1 | Screw-Shoulder, HH |
| 31 | 133-9819 | 1 | Right Head ASM |
| 32 | 133-9820 | 1 | Left Head ASM |


# Blower Housing Assembly

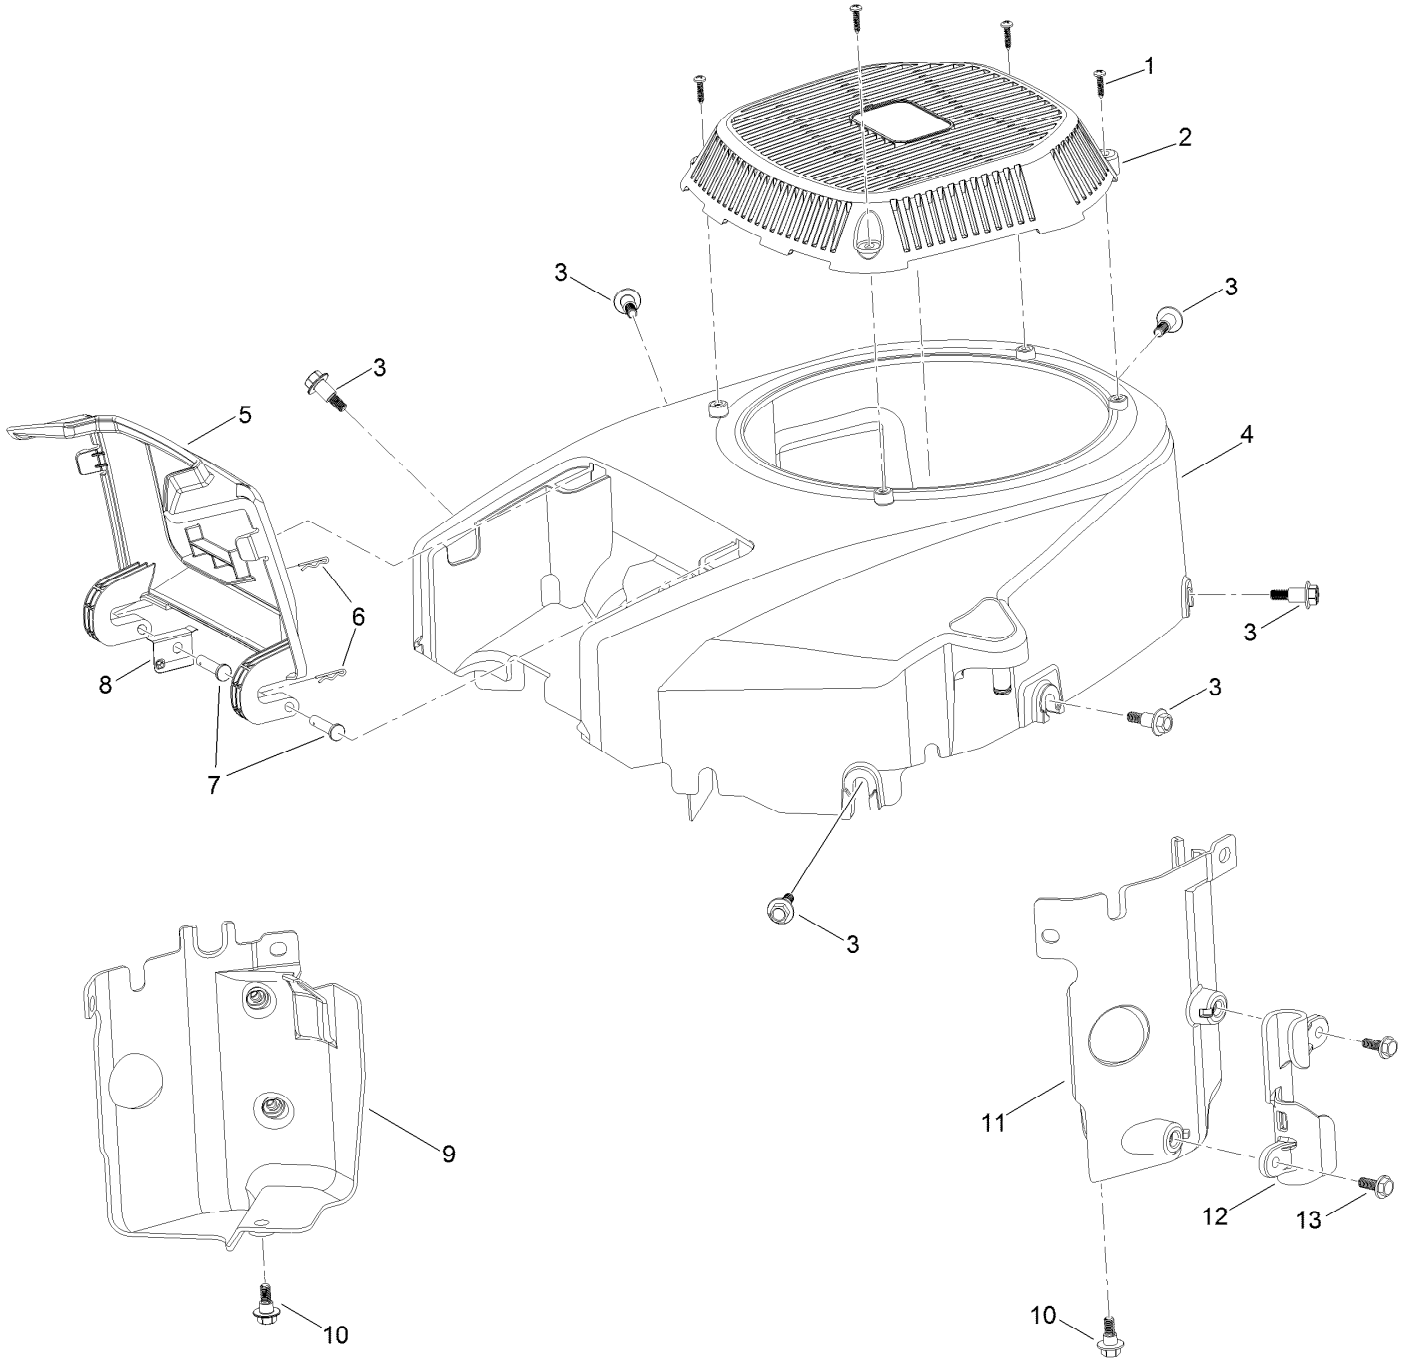

# Blower Housing Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 133-1571 | 4 | Screw-PPH, Plastic |
| 2 | 127-9045 | 1 | Cover-Fan |
| 3 | 127-9196 | 6 | Screw-Shoulder, HWH |
| 4 | 133-1572 | 1 | Shroud-Engine |
| 5 | 127-9046 | 1 | Door-Filter, Air |
| 6 | 127-9280 | 2 | Pin-Hair |
| 7 | 127-9282 | 2 | Pin |
| 8 | 127-9281 | 1 | Plate-Spring |
| 9 | 127-9049 | 1 | Baffle-Air, Left |
| 10 | 120-4210 | 2 | Screw-Shoulder, HHF |
| 11 | 127-9048 | 1 | Baffle-Air, Right |
| 12 | 127-9287 | 1 | Cleat-Hose |
| 13 | 120-4232 | 2 | Screw-HHF |

# Gasket and Seal Kit

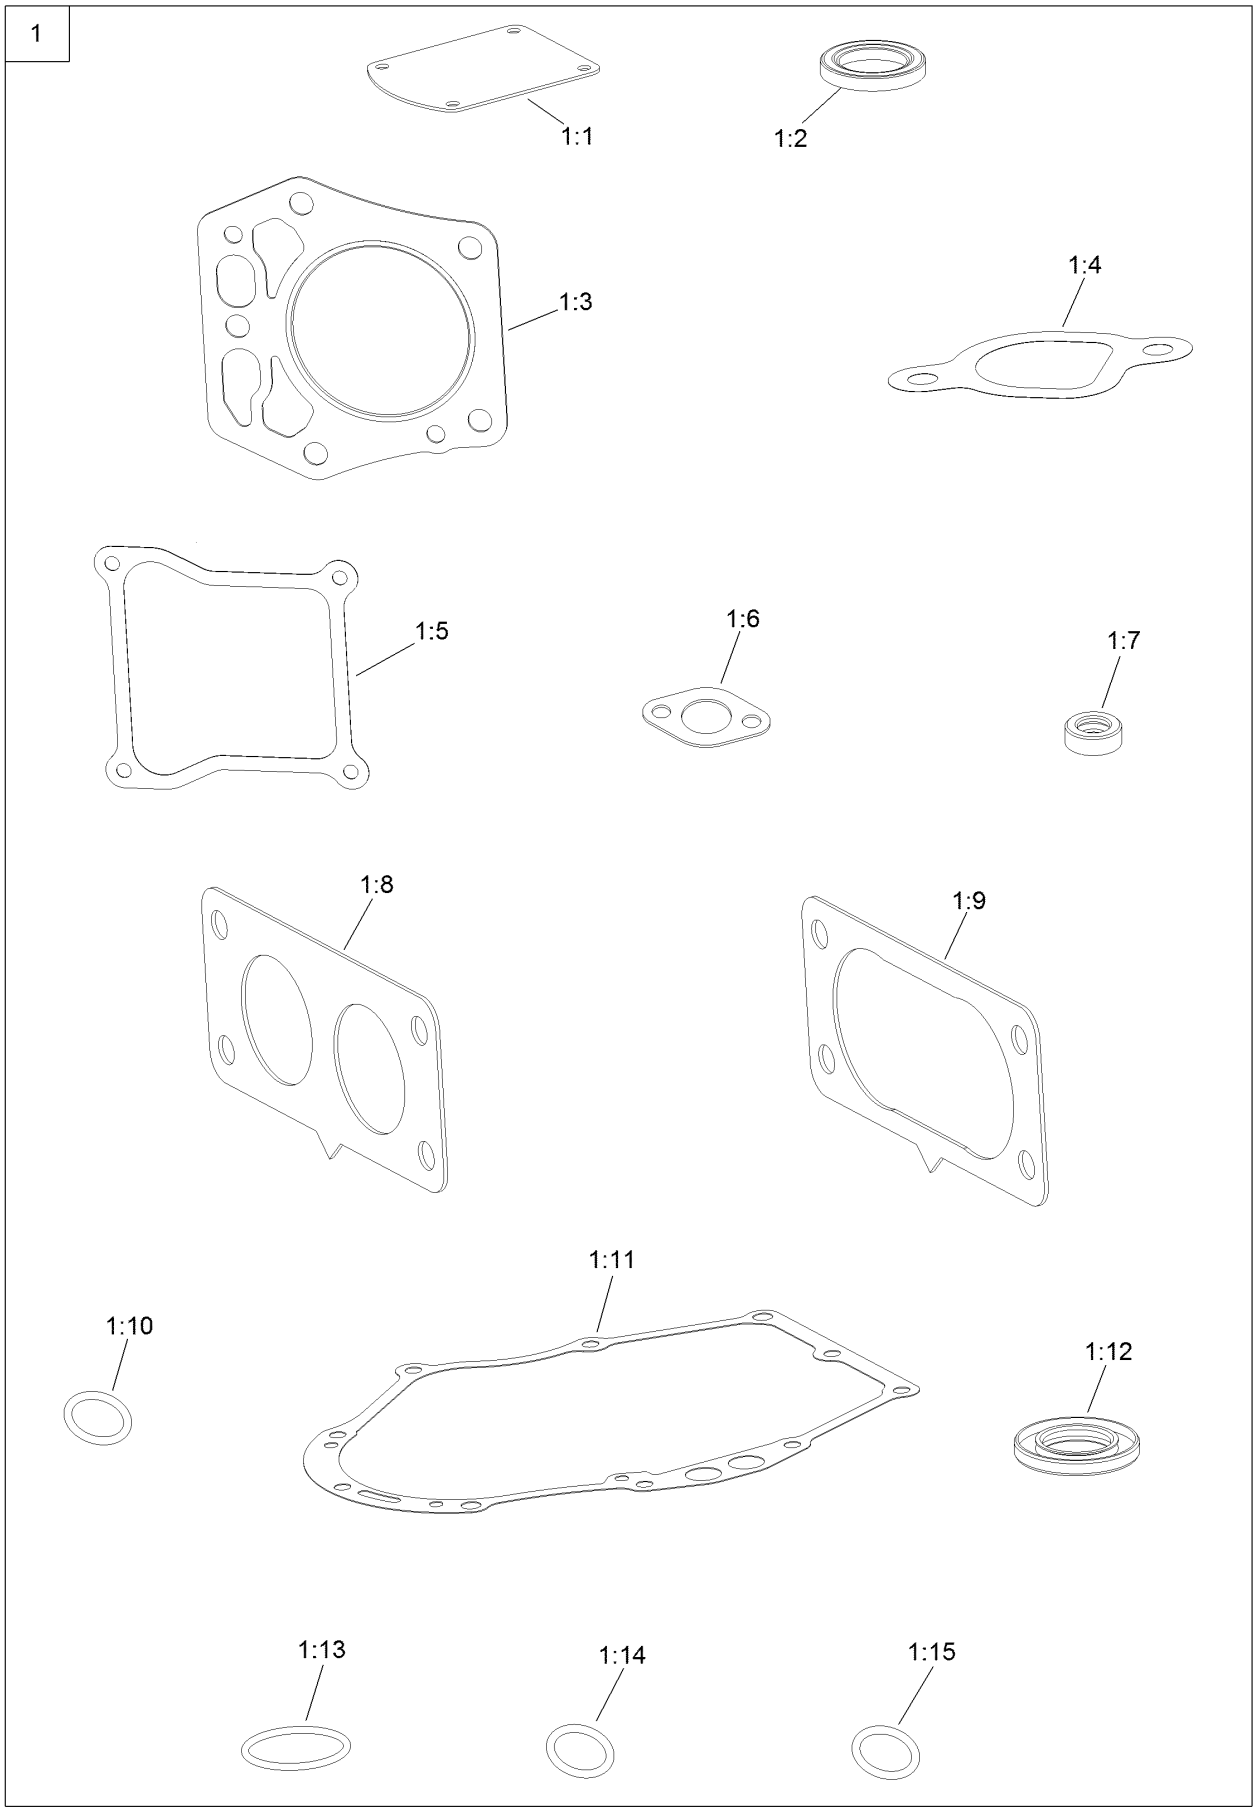

# Gasket and Seal Kit (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9296 | 1 | Gasket And Seal Kit |
| 1:1 | 127-9214 | 1 | Gasket-Breather |
| 1:2 | 120-4267 | 1 | Seal-Oil |
| 1:3 | 127-9226 | 2 | Gasket-Head, Cylinder |
| 1:4 | 127-9230 | 2 | Gasket-Intake |
| 1:5 | 127-9295 | 2 | Gasket-Valve Cover |
| 1:6 | 120-4317 | 2 | Gasket-Exhaust |
| 1:7 | 120-4257 | 1 | Seal-Oil |
| 1:8 | 127-9246 | 2 | Gasket-Carburetor |
| 1:9 | 127-9251 | 1 | Gasket-Carburetor |
| 1:10 | 120-4262 | 2 | O-Ring |
| 1:11 | 127-9267 | 1 | Gasket-Cover, Crankcase |
| 1:12 | 127-9271 | 1 | Seal |
| 1:13 | 127-9273 | 1 | O-Ring |
| 1:14 | 127-9284 | 1 | O-Ring |
| 1:15 | 127-9286 | 1 | O-Ring |

# Attachments and Accessories

## For 74451 52in TITAN HD 1500 Series Riding Mower

| Product Name | Model/Part |
|---|---|
| Hypr-Oil 500 (quart) | 114-4713 |
| Hypr-Oil 500 (gallon) | 114-4714 |
| Hypr-Oil 500-5 (5 gallon) | 114-4715 |
| Seat Cover w/Arm Rest | 117-0097 |
| Toro Hydro Kit | 121-3783 |
| LED Light Kit | 126-5382 |
| Front Bucket Bracket Kit | 126-7011 |
| Striper Kit | 126-7882 |
| Sunshade Kit | 126-8077 |
| Cover-Hitch | 126-8299 |
| Trash Container Kit | 126-8379 |
| Weight Caster Kit | 126-8639 |
| 52in Recycler Kit | 126-8702 |
| Flat Free Wheel and Bearing Kit | 126-9368 |
| Jack Kit | 127-6666 |
| MVP Belt and Blade Kit | 127-6794 |
| Toro V-Twin Engine Maintenance Kit | 132-4878 |
| Blade-Rotary, 18.0in (hi Flow) | 133-2134 |
| Blade-Rotary, Atomic 18.0 | 133-2159 |
| Blade-Rotary, Recycling 18.0in | 133-2162 |
| Blade (6 Pack) 18in Hi Flow | 133-2175 |
| Blade (6 Pack) 18in Recycle | 133-2178 |
| Blade (6 Pack) 18in Atomic | 133-2181 |
| 5 Gallon Bucket | 133-2533 |
| High Altitude Kit | 133-9833 |
| Trimmer Mount Kit | 136-1682 |
| ROPS Pin Kit | 136-1683 |
| HD Air Cleaner Kit | 136-7860 |
| Bucket Mount Kit | 136-9045 |
| Universal Mount Kit Mower | 136-9046 |
| Titan HD Triple Threat Attachment Kit | 136-9047 |
| Toro Deluxe Rider Cover | 490-7319 |
| Heavy Duty Bagger Kit | 78431 |
| 52in Completion Kit (Heavy Duty Bagger) | 78434 |
| Standard EZ Vac Bagger | 78481 |
| 52in Completion Kit (Standard Bagger) | 78484 |

## Notes:

## Notes:

## Notes:




**Count on it.**