
FORM NO. 3324–830

TORO®

MODEL NO. 70122–210000001 & UP

PARTS CATALOG

WHEEL HORSE®
8–25 RIDING MOWER

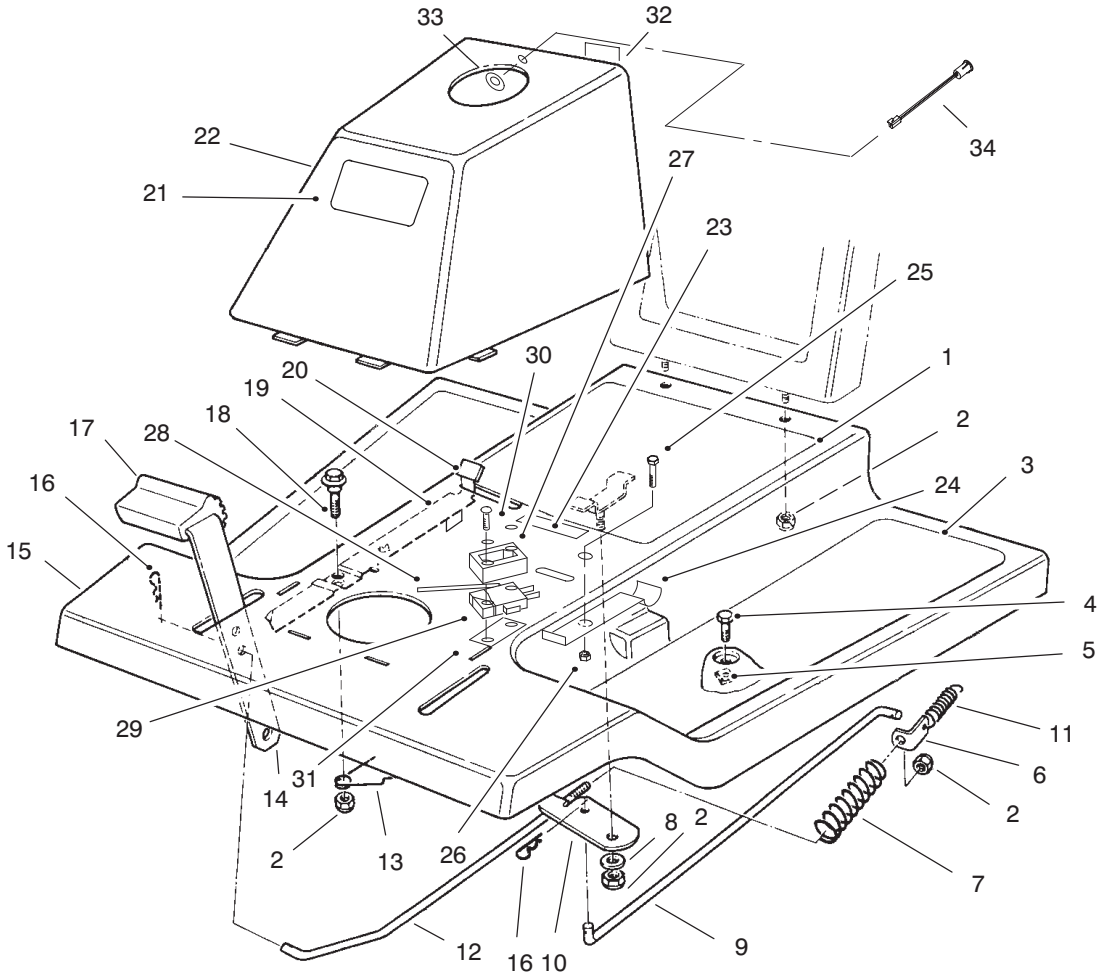

C–0004A


FRONT BODY ASSEMBLY

PROTOTYPE

Ref. No.	Part No.	Description	No. Used
1	93–7006	Decal – Instruction	1
2	3296–29	Nut – Lock	5
3	44–7030	Tread – Foot Rest	2
4	32104–110	Screw – Cap Hex. Hd.	4
5	3290–347	Nut – U–Type	4
6	67–1590	Bracket – Brake Return	1
7	67–1430	Spring – Compression	1
8	26–9530	Washer – Pivot	1
9	67–1340	Rod – Brake, Transmission	1
10	67–1330–03	Lever – Brake, Bellcrank	1
11	67–1450	Spring – Extension	1
12	67–1350	Rod – Front, Brake	1
13	19–1970	Spring – Brake, Parking	1
14	67–1130–01	Pedal – Brake & Clutch	2
15	98–2387–01	Body W.A. – Front	1
16	3290–250	Pin – Hair, Cotter	2
17	65–2920	Pad – Pedal	2
18	19–1470	Bolt – Shoulder	1
19	98–0711–03	Lever – Brake, Parking	1
20	19–2200	Tip – Brake, Parking	1
21	92–7981	Decal – Toro	1
22	99–2968	Tower (Incl. Ref. #21)	1
23	93–7011	Decal – Parking Brake	1
24	98–0709	Clamp	1
25	321–2	Screw– Hex Hd. Cap	1
26	3296–16	Nut – Hex Lock	1
27	88–4880	Spacer	1
28	88–9932	Switch – Micro	1
29	93–3240	Seal – Plunger	1
30	9104784	Screw	2
31	3290–354	Nut – Speed	1
32	99–2982	Decal – Indicator Light	1
33	99–6059	Clip – Retainer	1
34	95–7652	Light – Indicator	1

© The TORO Company – 2001
All Rights Reserved

TPS

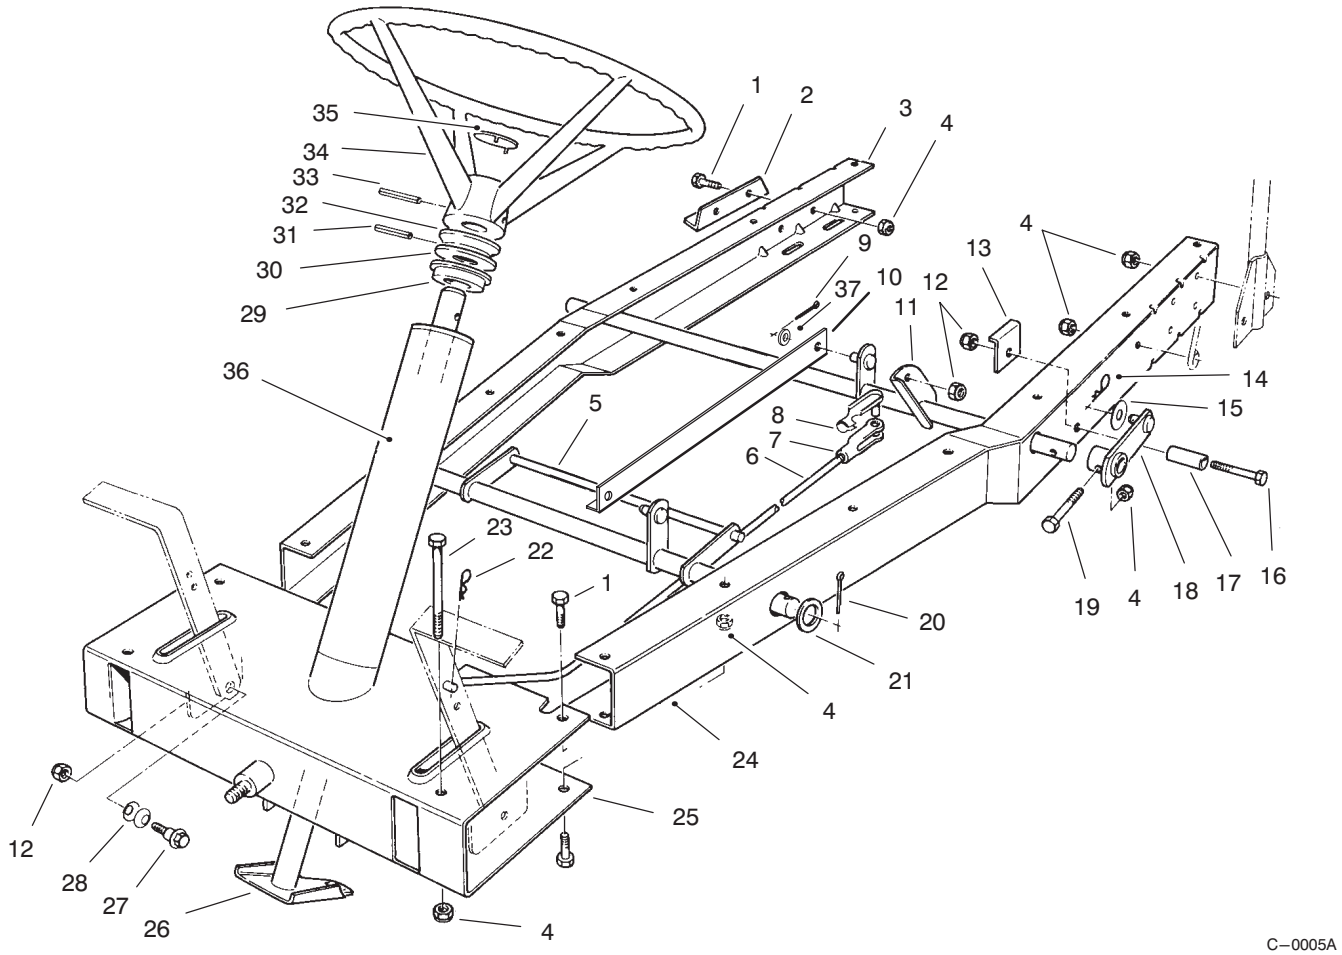


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–3	Screw – Cap Hex. Hd.	6
2	44–7140–01	Mount – Bearing, Axle	1
3	67–0520–01	Channel – R.H.	1
4	3296–29	Nut – Lock	16
5	67–0010–03	Lift W.A. – Front, Deck	1
6	67–0430	Rod – Clutch	1
7	282–27	Clevis	1
8	67–1530	Assembly – Pin, Clevis	1
9	3272–6	Pin – Cotter	2
10	76–3890	Bracket – Link, H.O.C.	1
11	67–0050–01	Tube W.A. – Support, Rear	1
12	3296–39	Nut – Lock	5
13	67–1510–01	Brace – Stop, Deck	2
14	3290–355	Pin – Hair, Cotter	2
15	67–1460	Washer – Flat	2
16	323–10	Screw – Cap Hex. Hd.	2
17	68–8380	Spacer – Stop, Deck	2
18	76–3790	Lever W.A. – H.O.C.	2
19	46–2511	Bolt – Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272–23	Pin – Cotter	2
21	3256–29	Washer – Flat	2
22	3290–250	PIn – Hair, Cotter	1
23	322–14	Screw – Cap Hex. Hd.	2
24	67–0530–01	Channel – L.H.	1
25	67–0450–01	Frame W.A. – Front	1
26	67–0830–03	Shaft W.A. – Steering	1
27	67–0870	Bolt – Shoulder	2
28	3290–413	Washer – Belleville	4
29	67–0850	Bushing – Steering	2
30	67–0860	Washer – Steering	1
31	32121–32	Pin – Roll	1
32	67–0440	Spacer – Steering	1
33	32121–78	Pin – Roll	1
34	49–3242	Wheel – Steering	1
35	92–7990	Insert – Wheel, Steering	1
36	76–4080	Decal	1
37	3256–22	Washer – Flat	1
*	13–6049	Kit – Loose parts	1

PROTOTYPE

*Not Illustrated

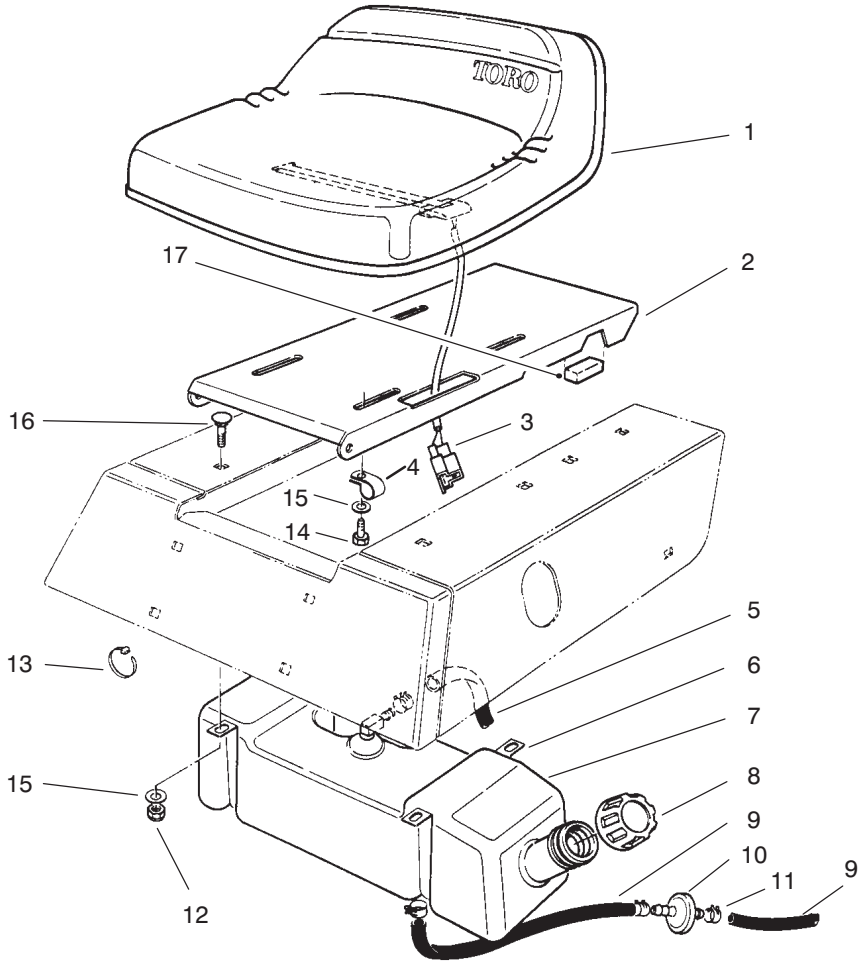


C–0002A

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66–6680	Seat	1
2	67–1242–01	Base – Seat	1
3	38–1420	Switch – Seat	1
4	18–2970	R–Clamp	1
5	47–2986	Hose – Gas	1
6	67–0950	Strap – Tank, Gas	2
7	80–4580	Tank – Gas	1
8	55–3576	Assembly – Cap, Gas	1
9	47–2964	Hose – Gas	2

Ref. No.	Part No.	Description	No. Used
10	56–6360	Filter	1
11	2412–98	Clamp – Hose	5
12	3296–29	Nut – Lock	4
13	3290–378	Tie – Cable	1
14	322–3	Screw – Cap Hex. Hd.	4
15	3256–23	Washer – Flat	8
16	3230–1	Bolt – Carriage	4
17	66–6920	Pad – Isolator	2

PROTOTYPE

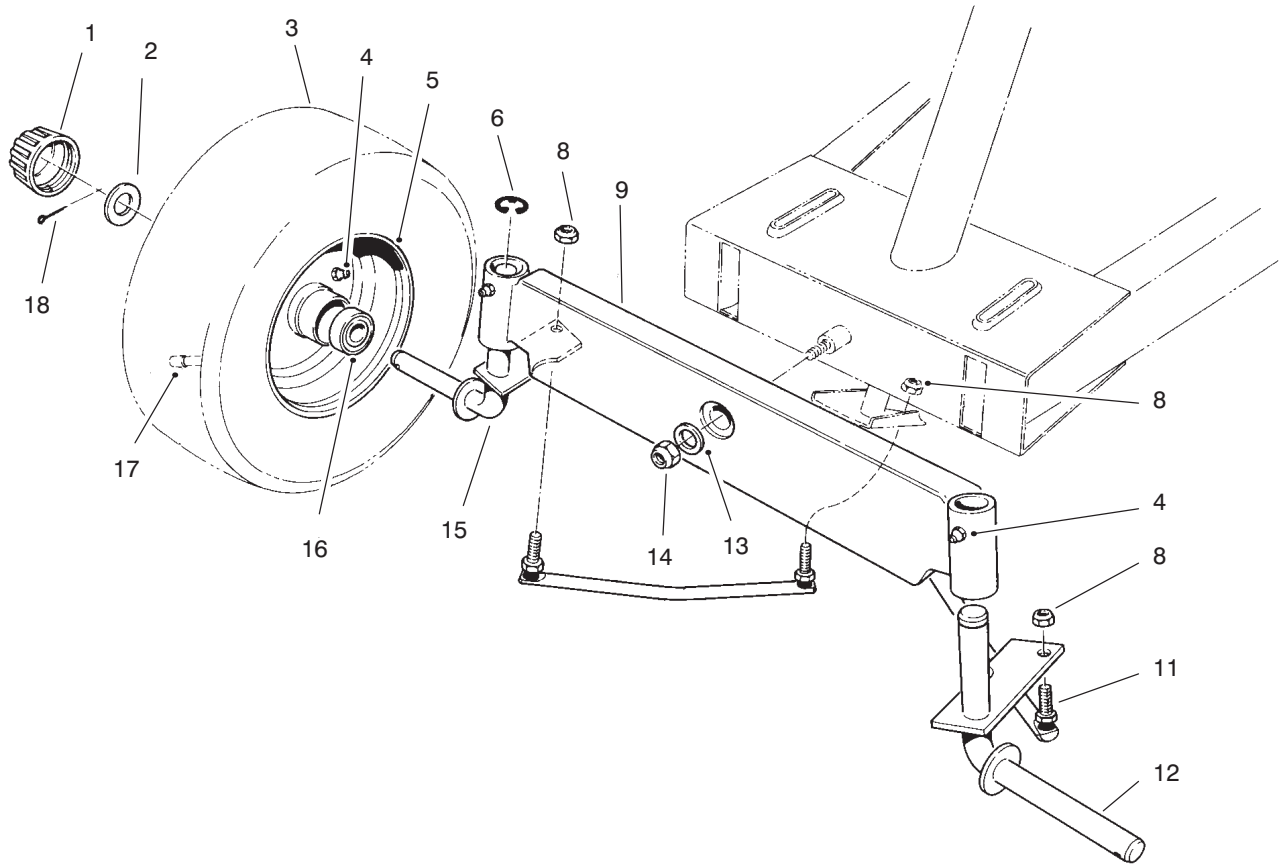

C–0003A


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61–9780	Cap – Hub	2
2	28–2480	Washer – Flat	2
3	99–2990	Tire	2
4	302–5	Fitting – Grease	4
5	217–80	Rim	2
6	32151–48	Ring – Retaining	2
8	3296–4	Nut – Lock	4
9	67–0990–01	Axle – Front	1
11	67–0880	Assembly – Tie Rod	2

Ref. No.	Part No.	Description	No. Used
12	67–0810–01	Spindle – L.H.	1
13	3256–26	Washer – Flat	1
14	3296–25	Nut – Lock	1
15	67–0800–01	Spindle – R.H.	1
16	110513	Bearing	4
17	232–27	Valve Stem w/Cap	2
18	3272–12	Pin – Cotter	2
*	232–44	Tube – Inner	2

PROTOTYPE

* Not Illustrated

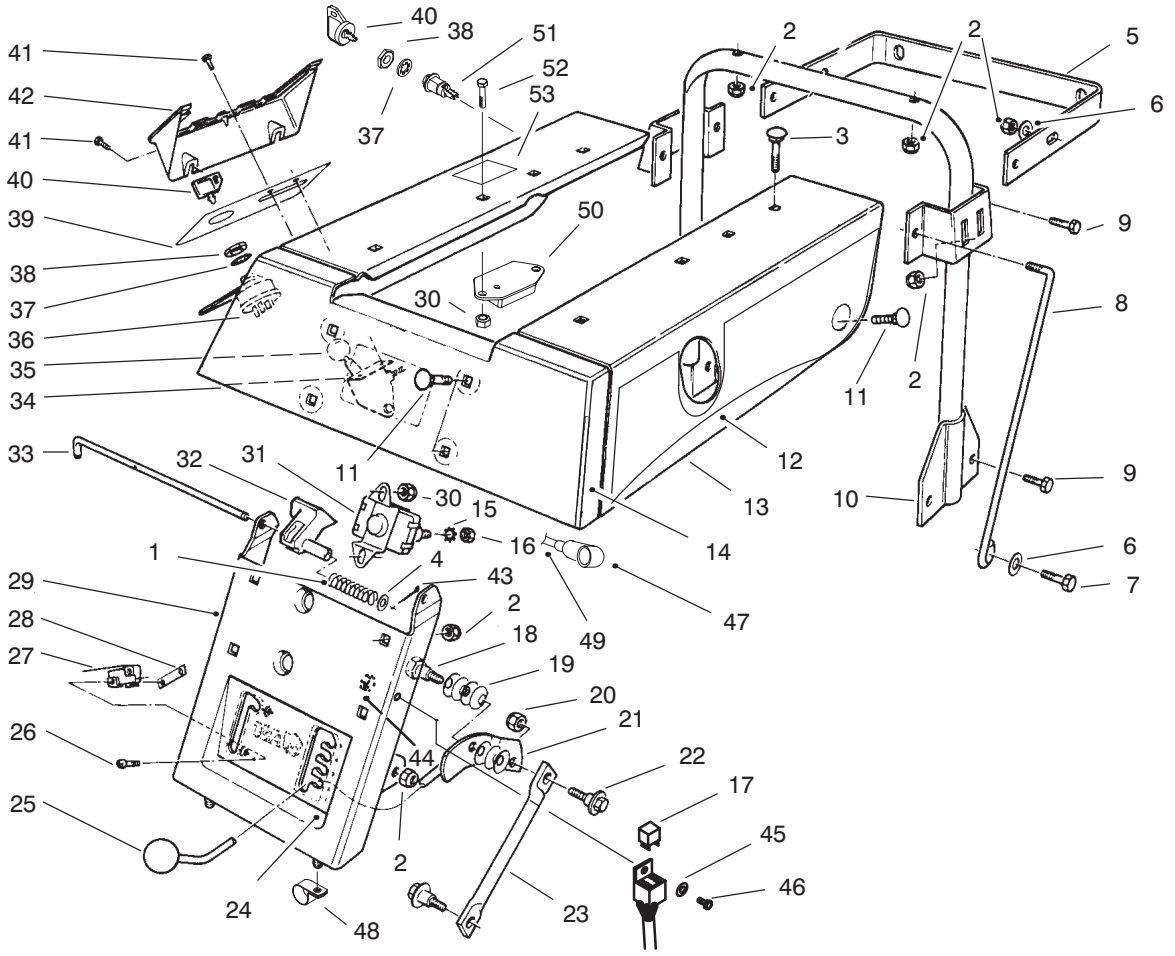

C–0007B


REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–8310	Spring – Prop, Seat	1
2	3296–29	Nut – Lock	11
3	3230–3	Bolt – Carriage	2
4	3256–22	Washer – Flat	1
5	67–1500–03	Bar – Stand	1
6	3256–23	Washer – Flat	4
7	322–5	Screw – Cap Hex. Hd.	2
8	67–1480	Brace – Support, Seat	2
9	322–3	Screw – Cap Hex. Hd.	6
10	67–0790–03	Support W.A. – Seat	1
11	3230–1	Bolt – Carriage	6
12	98–1456	Decal – Toro L.H.	1
*	99–2984	Decal – Toro R.H.	1
13	99–2964–01	Body W.A. – Rear	1
14	92–7978	Decal – Insignia	1
15	3253–3	Washer – Lock	2
16	3218–1	Nut – Jam	2
17	98–7249	Relay	1
18	28–0540	Bolt – Shoulder	1
19	3290–413	Washer – Belleville	7
20	3296–39	Nut – Lock	1
21	67–0270	Handle W.A. – H.O.C.	1
22	67–0870	Bolt – Shoulder	2
23	67–0080	Link – H.O.C.	1
24	92–7977	Decal – H.O.C. Deck Engage.	1
25	233–22	Knob	1
26	3290–313	Screw – Pan Head	2

Ref. No.	Part No.	Description	No. Used
27	88–9932	Switch – Micro	1
28	3290–354	Nut – Double	1
29	67–1090–03	Support W.A. – Seat	1
30	3296–42	Nut – Lock	4
31	47–1910	Solenoid	1
32	80–4330	Prop – Seat	1
33	80–4550	Rod – Base, Seat	1
34	66–6640	Control – Throttle	1
35	233–25	Knob	1
36	88–9830	Switch – Ignition (Incl. Ref. #37 & 38)	1
37	3254–5	Washer – Lock, Int. Tooth	2
38	218–461	Nut – Hex.	2
39	92–7976	Decal – Panel, Control	1
40	63–8360	Key	2
41	32144–42	Screw – Hex. Hd. Tapping	4
42	67–1030	Cover – Panel, Control	1
43	3272–4	Pin – Cotter	1
44	3296–2	Nut – Lock	1
45	3256–14	Washer – Flat	1
46	3290–134	Screw – Cap Mach. Hd.	1
47	93–3190	Boot – Terminal Insulator	1
48	18–2970	Clamp	1
49	98–0707	Cable	2
50	99–3700	Module – NMIR	1
51	46–5780	Switch – Starter	1
52	321–4	Screw – Hex Hd.	2
53	99–2986	Decal – Danger Int'l	1

PROTOTYPE

*Not Illustrated

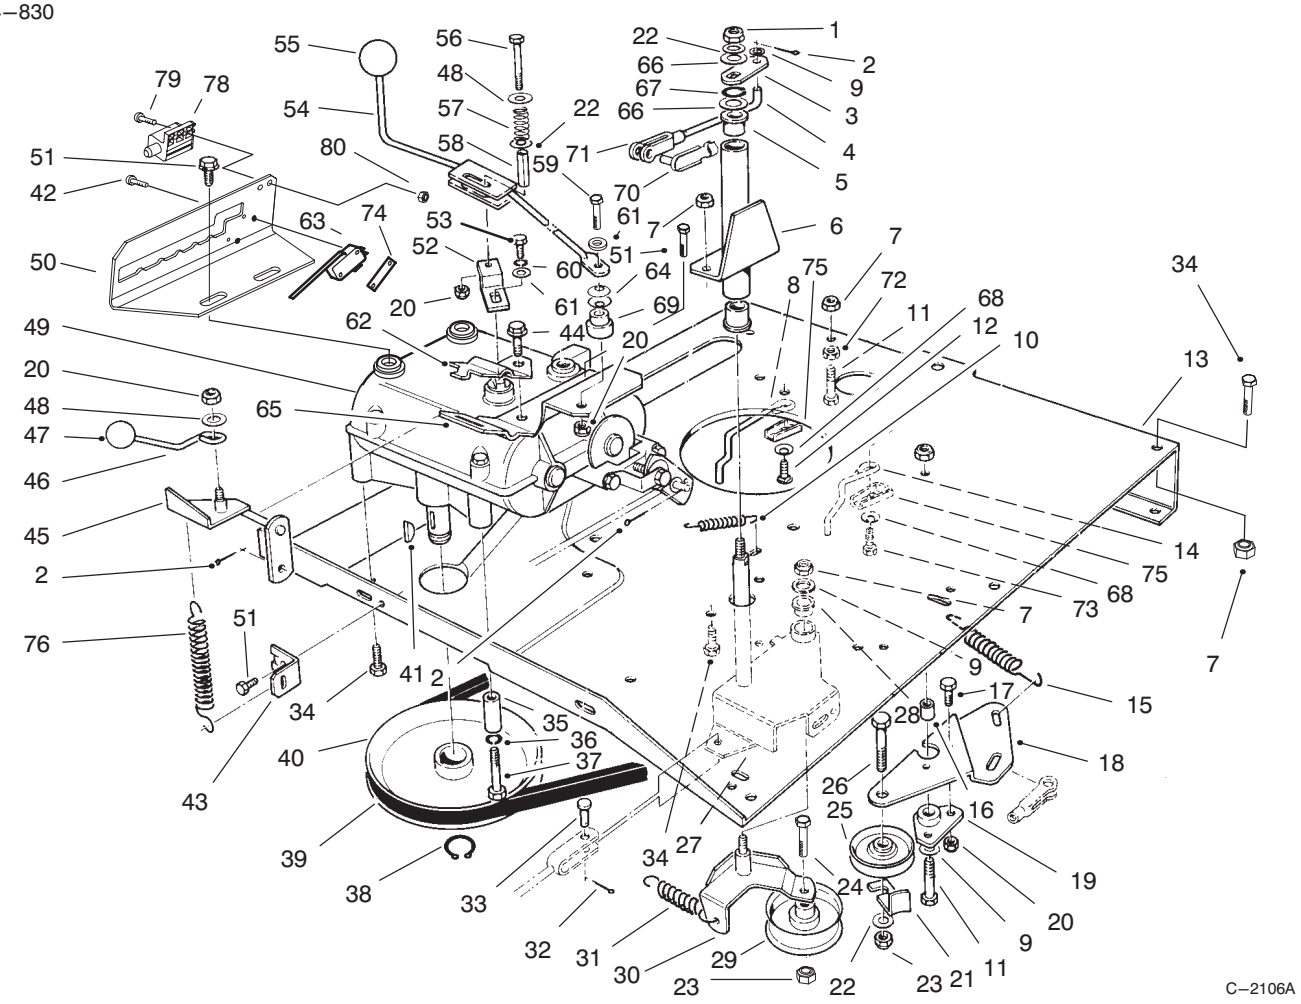


TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–39	Nut – Lock	1
2	3272–6	Pin – Cotter	2
3	67–0690–03	Flat – Deck Engage Bracket	1
4	68–8370	Link – Deck Engage	1
5	256–90	Bushing	2
6	67–0540–03	Tube W.A. – Pivot (Incl. Ref. #5)	1
7	3296–29	Nut – Lock	13
8	99–2976	Guide R.H. – Belt, Engine	1
9	3256–23	Washer – Flat	3
10	26–6700	Spring – Return, Brake	1
11	322–6	Screw – Cap Hex. Hd.	2
12	32144–49	Bolt – Carriage	1
13	76–4090–01	Plate – Engine	1
14	67–0940	Guide L.H. – Belt, Engine	1
15	68–9950	Spring – Traction	1
16	67–0410	Spacer – Pivot	1
17	321–4	Screw – Cap Hex. Hd.	2
18	67–0420–03	Plate – Mount, Idler	1
19	67–0400	Mount – Pivot	1
20	3296–42	Nut – Lock	5
21	12–9020	Retainer – Belt	1
22	3256–24	Washer – Flat	3
23	3296–59	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
24	323–9	Screw – Cap Hex. Hd.	1
25	12–5820	Pulley – Idler, Traction	1
26	323–8	Screw – Cap Hex. Hd.	1
27	67–0360	Bracket – Arm, Idler (Incl. Ref. #28)	1
28	256–155	Bushing	1
29	56–9870	Pulley – Idler, Deck	1
30	67–0330–03	Idler – Plate, Mount	1
31	67–9170	Spring	1
32	3272–4	Pin – Cotter	1
33	283–67	Pin – Clevis	1
34	322–3	Screw – Cap Hex. Hd.	14
35	67–0920	Guide – Belt	1
36	3253–4	Washer – Lock	1
37	322–10	Screw – Cap Hex. Hd.	1
38	32120–64	Ring – Retaining	1
39	67–0900	Belt – Traction	1
40	82–6450	Pulley – Transmission	1
41	3257–23	Key	1
42	9104784	Screw – Tapping	4
43	67–0750	Bracket – Mount, Spring	1
44	32144–70	Screw – Hex. Hd. Tapping	1
45	67–0600–03	Lever W.A. – Deck Engage	1
46	67–0640	Handle – Deck Engage Rod	1

PROTOTYPE

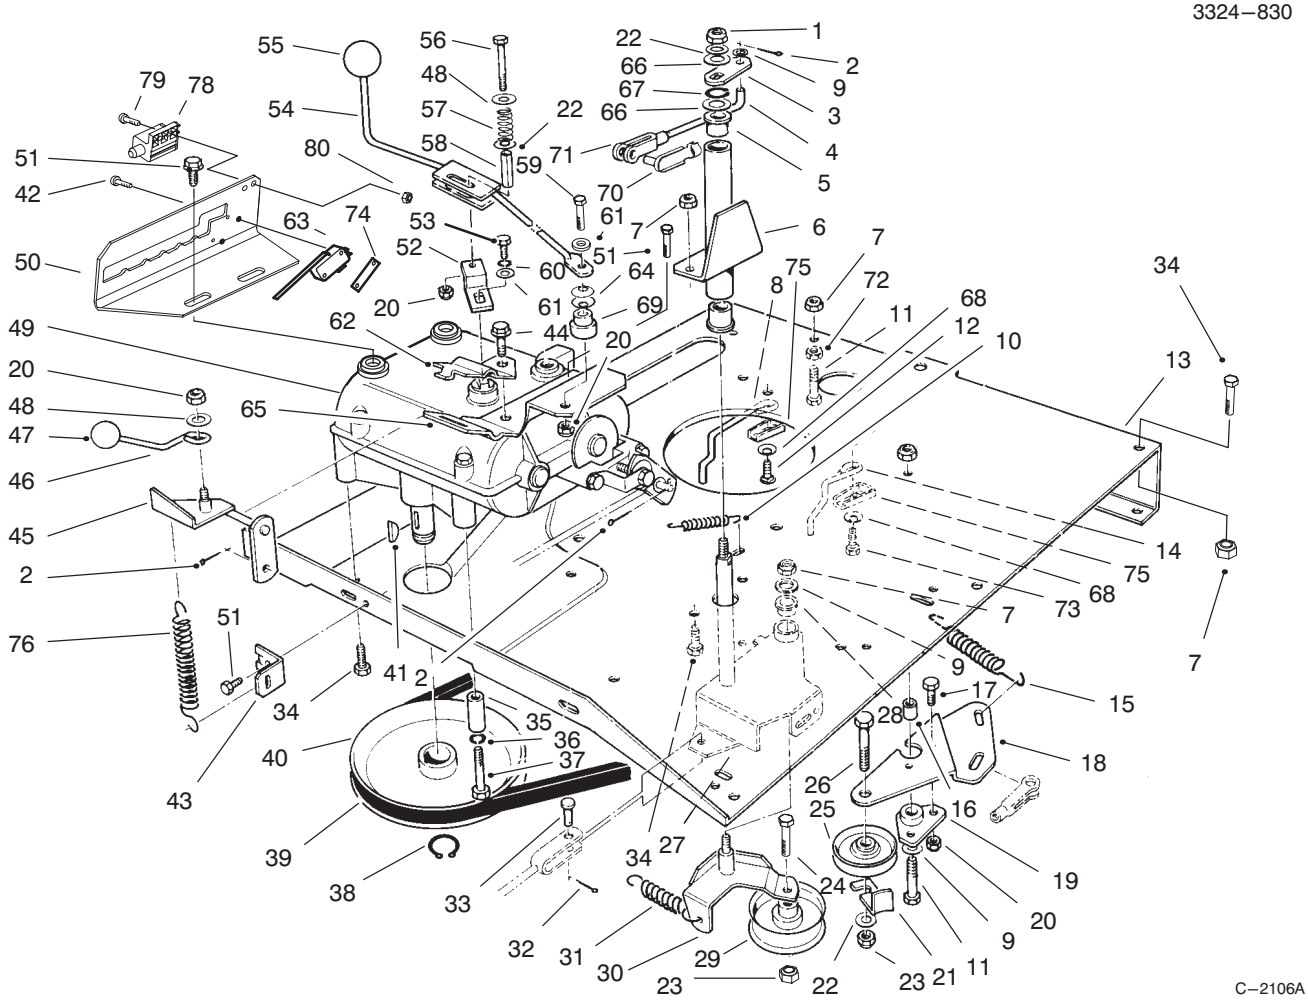


TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
47	233–22	Knob	1
48	3256–55	Washer – Fender	2
49	67–1400	Transmission	1
50	99–2970–03	Gate – Shift	1
51	32144–14	Screw – Wash. Hd., Tap.	4
52	56–7620	Lever – Shift	1
53	329–4	Screw – Cap Hex. Hd.	1
54	76–3940–03	Lever W.A. – Shift	1
55	233–48	Knob	1
56	321–15	Screw – Cap Hex. Hd.	1
57	56–7730	Spring	1
58	56–7740	Spacer	1
59	321–8	Screw – Cap Hex. Hd.	1
60	3253–3	Washer – Lock	1
61	3256–22	Washer – Flat	2
62	67–0670	Bracket – Engage, Deck	1
63	88–9930	Switch – Micro	1

Ref. No.	Part No.	Description	No. Used
64	3290–478	Washer – Belleville	2
65	67–0660	Bracket – Mount, Shifter	1
66	20–3220	Washer – Flat	2
67	32151–62	Ring – Retaining	1
68	3290–456	Washer – Belleville	2
69	76–3970	Spacer – Pivot	1
70	67–1530	Assembly – Pin, Clevis	1
71	282–27	Clevis	1
72	3218–2	Nut – Jam	1
73	3230–2	Bolt – Carriage	1
74	3290–354	Nut – Double	1
75	76–3820	Anchor – Guide, Belt	2
76	76–4660	Spring	1
77	3290–378	Tie – Cable	1
78	95–1653	Switch – Single Pole	1
79	3290–392	Screw – Hex Slot Hd	2
80	3296–1	Nut – Lock	2

PROTOTYPE

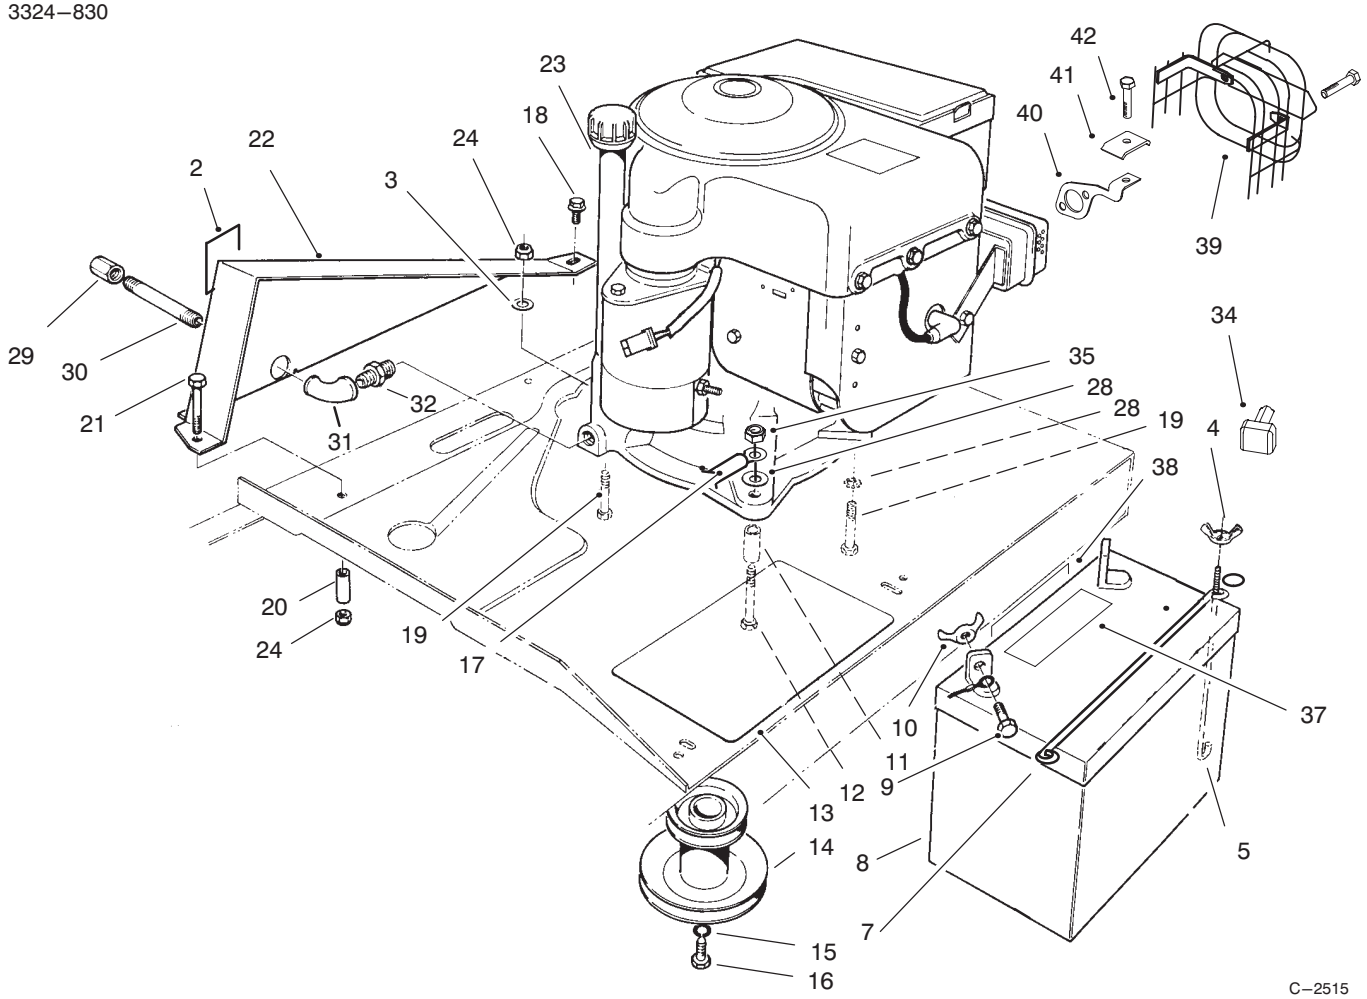


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	114621	Decal – European Noise	1
3	3256–23	Washer – Flat	2
4	32103–12	Nut – Wing	2
5	56–7720	Post – Hold Down, Battery	2
7	117316	Rod – Battery Hold Down	1
8	104–1755	Battery – 155CCA	1
9	321–4	Screw – Cap Hex. Hd.	2
10	32103–22	Nut – Wing	2
11	80–4560	Spacer	1
12	322–12	Screw – Cap Hex. Hd.	1
13	62–4300	Pad – Anti–Skid	1
14	98–0712	Pulley – Engine	1
15	3256–25	Washer – Flat	1
16	62–3760	Screw – Cap Hex. Hd.	1
17	54–3091	Assembly – Wire Battery to Ground	2
18	32144–14	Screw – Self Tapping	1
19	322–7	Screw – Cap Hex. Hd.	3
20	67–0920	Guide – Belt	1
21	322–10	Screw – Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
22	67–0962–01	Guard – Chain	1
23		Engine – 8 H.P. B & S	1
24	3296–29	Nut – Lock	4
28	3255–8	Washer – Lock	3
29	288–2	Cap – Pipe	1
30	289–34	Nipple – Pipe	1
31	2811–17	Elbow – Street	1
32	2812–1	Reducer	1
34	28–8080	Boot – Battery Terminal	1
35	32153–3	Nut – Lock	1
37	104–4163	Decal – Battery	1
38	104–4164	Decal – Battery	1
39	94–6426	Guard – Muffler	1
40	94–6425	Bracket – Muffler Guard	1
41	94–6424	Tab – Muffler Guard	1
42	32104–76	Screw – Self Tap	3
*	94–6427	Muffler Guard Assembly (Incl. Ref. #39–42)	1
*	88–4490	Reducer – Throttle	1

PROTOTYPE

*Not Illustrated

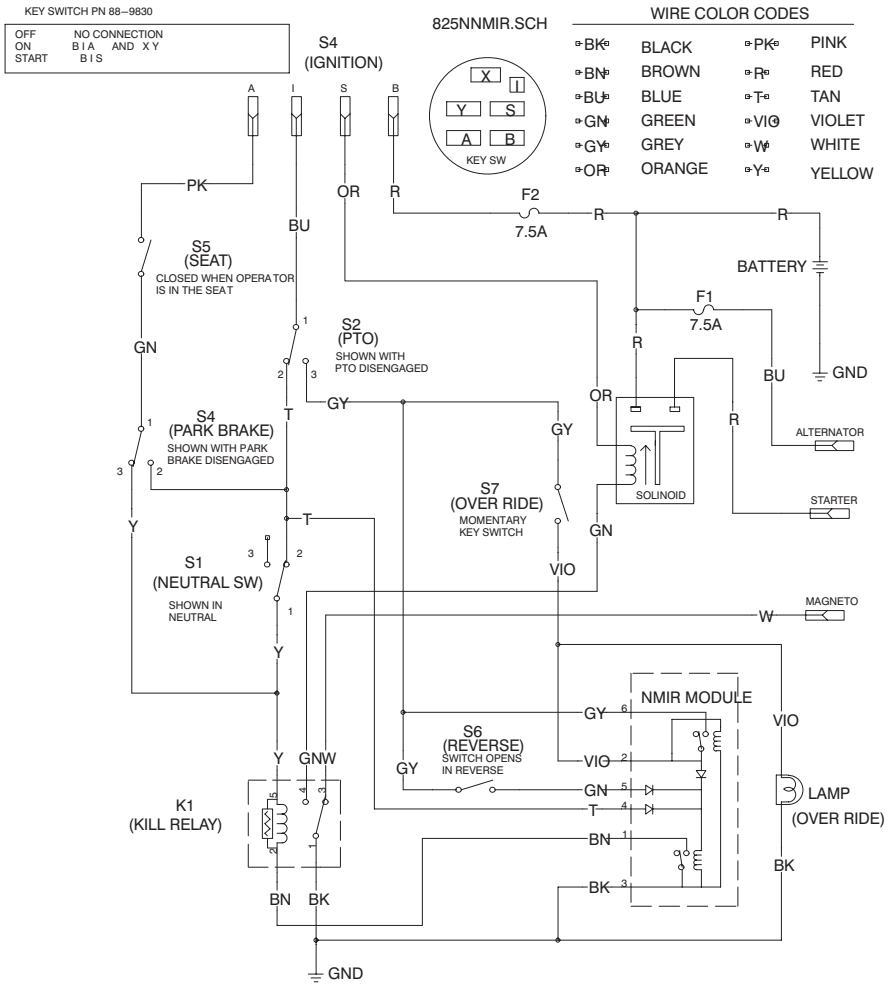


C–2378

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	99–2325	Harness – Wire	1

Ref. No.	Part No.	Description	No. Used

PROTOTYPE

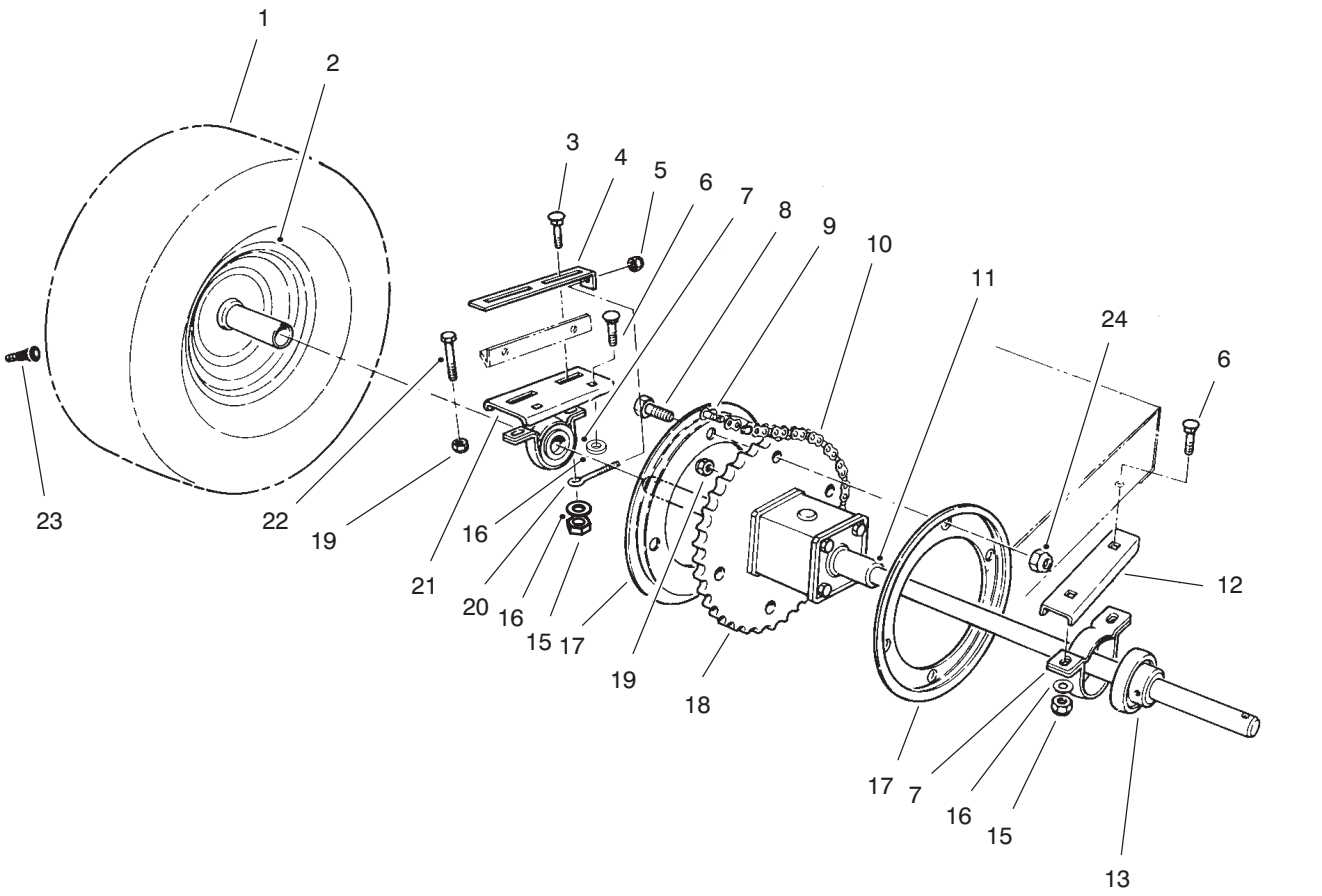

C–0008B


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	99–2992	Tire	2
2	44–9760	Rim	2
3	3231–4	Bolt – Carriage	2
4	61–9990	Plate – Adjusting	1
5	3296–42	Nut – Lock	1
6	3231–25	Bolt – Carriage	4
7	47–1480	Mount – Bearing	2
8	321–4	Screw – Cap Hex. Hd.	4
9	2710–11	Link – Connecting	1
10	67–0910	Chain (Incl. Ref. #9)	1
11	56–9960	Differential	1
12	66–6630–01	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47–1490	Bearing (Incl. Ref. #14)	2
15	3296–39	Nut – Lock	6
16	3256–24	Washer – Flat	6
17	76–1580–03	Guide – Chain	2
18	76–4010	Sprocket	1
19	3296–29	Nut – Lock	6
20	61–9980	Screw – Adjusting	1
21	66–6620–03	Support R.H.	1
22	46–2511	Bolt – Axle	2
23	232–27	Valve Stem w/Cap	2
24	3296–8	Nut – Lock	4
*	232–38	Tube – Inner	2

PROTOTYPE

*Not Illustrated

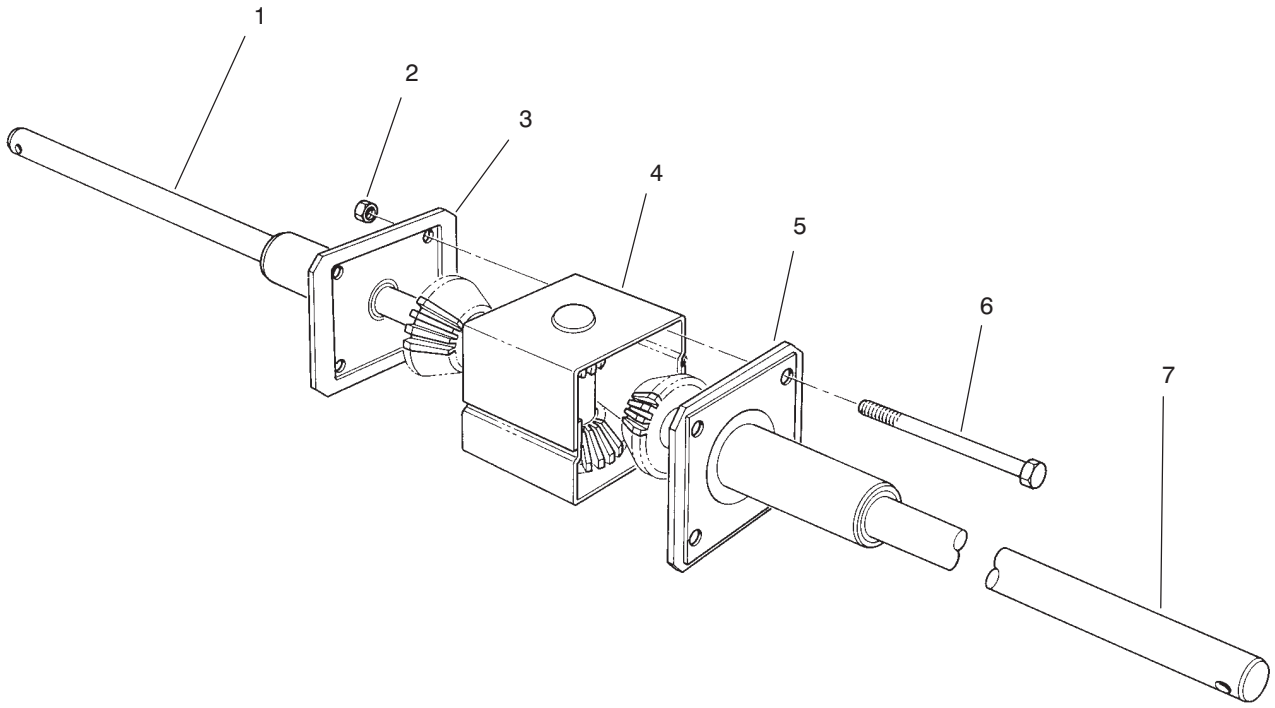


C–0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55–7762	Axle – R.H.	1
2	32152–1	Nut – Lock	4
3	55–7770	Cap – End, R.H.	1
4	55–7780	Case – Gear, Transfer	1
5	55–7771	Cap – End, L.H.	1
6	322–22	Screw – Cap Hex. Hd.	4
7	55–7763	Axle – L.H.	1
*	56–9960	Differential – Complete	

PROTOTYPE

*Not Illustrated

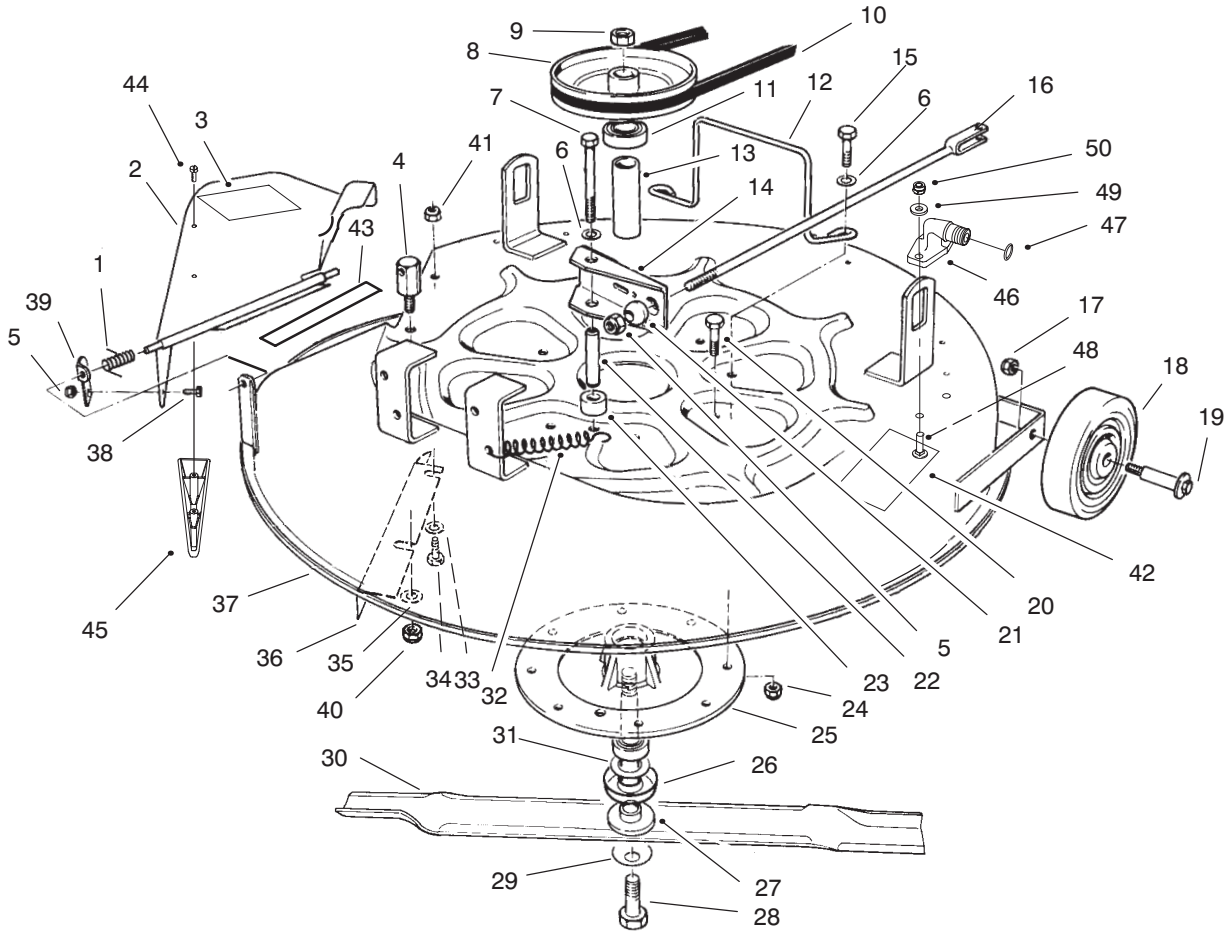


C–0001B

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28–8010	Spring	1
2	93–9492	Deflector (Incl. Ref. #3)	1
3	93–7010	Decal – Danger	1
4	67–0140	Post – Pivot	1
5	3296–8	Nut – Lock	2
6	3256–23	Washer – Lock	3
7	322–19	Screw – Cap Hex. Hd.	1
8	80–4420	Pulley – Deck	1
9	3219–6	Nut – Hex.	1
10	98–0710	V–Belt	1
11	38–7820	Bearing – Ball	2
12	80–4520	Guide – Belt	1
13	62–3660	Spacer – Bearing	1
14	67–1370	Assy. – Brake, Deck	1
15	322–6	Screw – Cap Hex. Hd.	2
16	67–0570	Rod W.A. – Brake, Deck	1
17	3296–39	Nut – Lock	2
18	61–9760	Wheel – Deck	2
19	56–6590	Bolt – Wheel	2
20	322–3	Screw – Cap Hex. Hd.	6
21	67–0710	Ball – Swivel	1
22	67–0730	Post – Mount, Brake	1
23	76–3810	Spacer – Brake, Deck	1
24	3296–29	Nut – Lock	9
25	67–0970	Hub – Spindle	1

Ref. No.	Part No.	Description	No. Used
26	80–4360	Shield – Bearing	1
27	80–4340	Shaft – Spindle	1
28	26–0671	Bolt – Blade	1
29	3290–465	Washer – Belleville	1
30	67–0200	Blade	1
31	80–4380	Spacer – Spindle	1
32	67–1440	Spring – Brake	1
33	3256–22	Washer – Flat	1
34	3234–21	Screw – Cap Hex. Hd.	1
35	3256–24	Washer – Flat	1
36	67–0130–01	Baffle	1
37	95–7485	Deck (Incl. Ref. #42 & 43)	1
38	321–5	Screw – Cap Hex. Hd.	9
39	67–1600–01	Bracket – Deflector	1
40	3296–59	Nut – Lock	1
41	3296–42	Nut – Lock	1
42	93–7010	Decal – Danger	1
43	93–7009	Decal – Warning	1
44	32144–111	Screw – Phillips Pan Hd.	4
45	93–7696	Kicker – CE	2
46	95–2747	Fitting – Washout	1
47	46–6290	O–Ring	1
48	3229–1	Screw – Hex Hd. Cap	2
49	3256–1	Washer	2
50	3296–16	Nut – Hex	2

PROTOTYPE

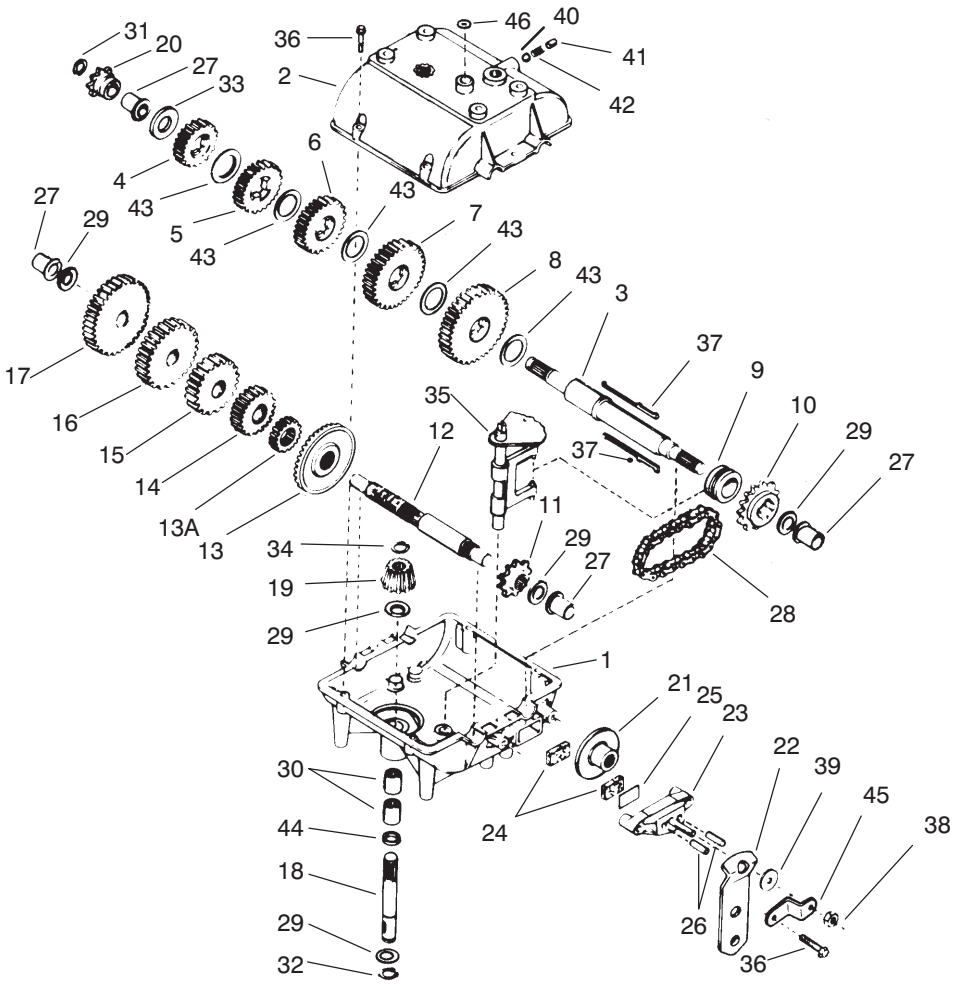


C–0441A

TRANSMISSION PEERLESS MODEL 700–025

Ref. No.	Part No.	Description	No. Used
1	770061	Case – Transmission	1
2	772083	Cover – Transmission	1
3	776217	Shaft – Output	1
4	778121A	Gear – Spur (20 Teeth)	1
5	778122A	Gear – Spur (22 Teeth)	1
6	778123A	Gear – Spur (25 Teeth)	1
7	778124A	Gear – Spur (30 Teeth)	1
8	778125	Gear – Spur (35 Teeth)	1
9	784266	Collar – Shift	1
10	786083	Sprocket (18 Teeth)	1
11	786082	Sprocket (9 Teeth)	1
12	776134	Shaft – Counter	1
13	788137A	Gear – Bevel (42 Teeth)	1
13A	778136	Gear – Spur (15 Teeth)	1
14	778126A	Gear – Spur (20 Teeth)	1
15	778127A	Gear – Spur (25 Teeth)	1
16	778128A	Gear – Spur (28 Teeth)	1
17	778129A	Gear – Spur (30 Teeth)	1
18	776135	Shaft – Input	1
19	778113A	Bevel – Pinion, Input	1
20	786047	Sprocket (8 Teeth)	1
21	790003	Disk – Brake	1
22	790008A	Lever – Brake	1
23	790025	Holder – Pad, Brake	1

Ref. No.	Part No.	Description	No. Used
24	790006	Pad – Brake	2
25	790007	Plate – Pad, Brake	1
26	786026	Pin – Dowel	2
27	780105A	Bushing – Flange	4
28	786081	Chain – Roller (No. 41 Chain, 24 Links)	1
29	780072	Washer – Thrust	5
30	780086	Bearing – Needle	2
31	792072	Ring – Retaining	1
32	792035	Ring – Retaining	1
33	780109	Washer	1
34	788040	Ring – Retaining	1
35	784267	Assy. Rod & Fork – Shift	1
36	792073	Screw – Thread Forming	8
37	792089A	Key	2
38	792075	Nut – Lock	1
39	792076	Washer	1
40	792077	Ball – Steel	1
41	792078	Screw – Set	1
42	792079	Spring	1
43	780108	Washer – Thrust	5
44	792001	O–Ring	1
45	786086	Bracket – Lever, Brake	1
46	788069	Seal – Square Cut	1

PROTOTYPE

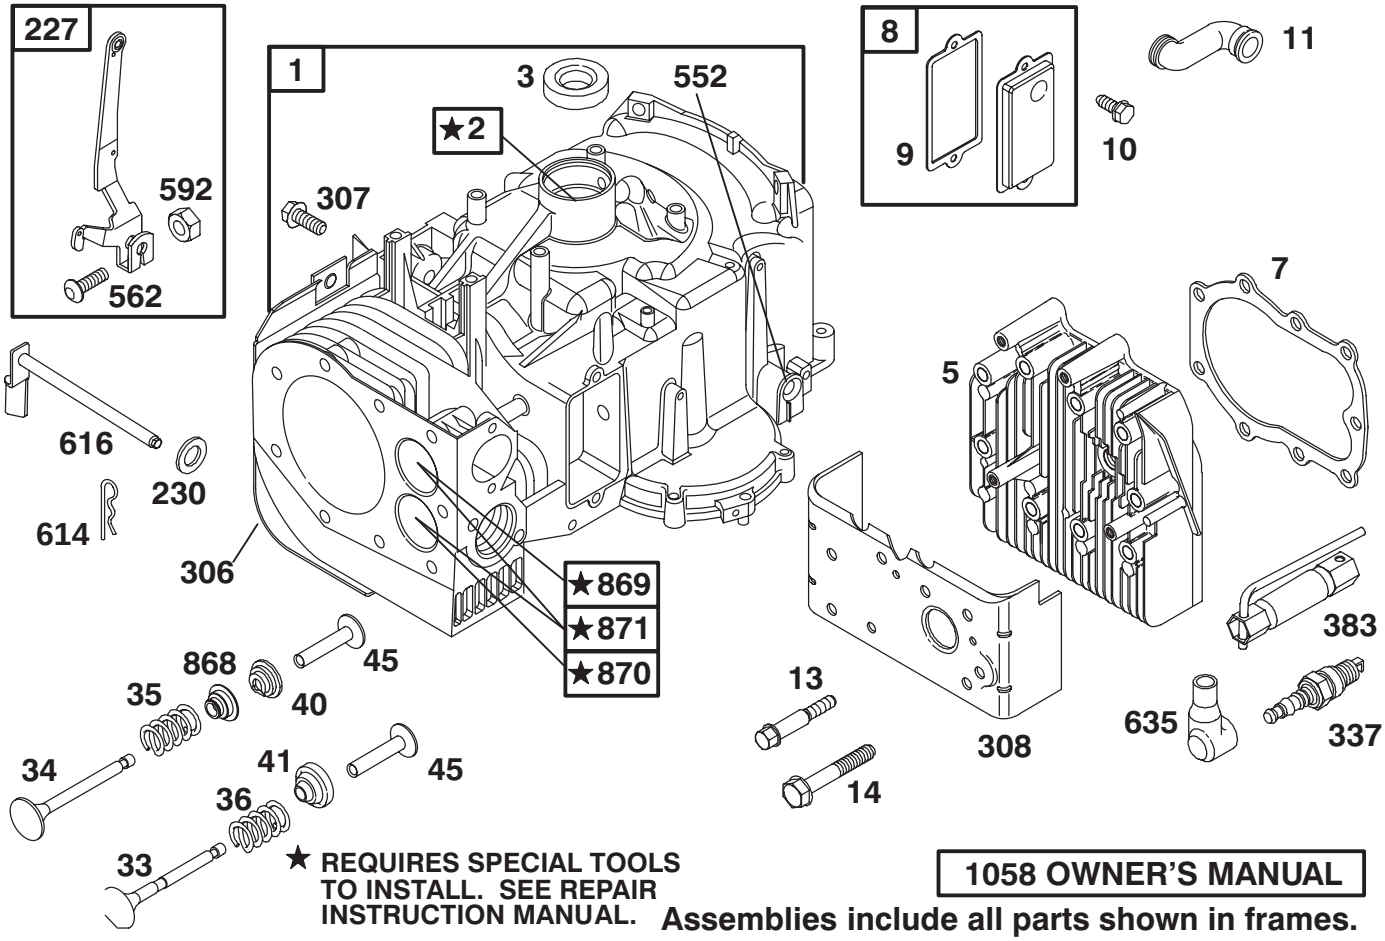

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

1058 OWNER'S MANUAL

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
1	495623	Cylinder Assembly	1
2	495657	Bushing	1
★3	391086	Seal–Oil	1
5	214015	Head–Cylinder	1
†★7	272163	Gasket–Cylinder Head	1
8	495735	Breather Assy.	1
†★9	27803	Gasket–Breather	1
10	94621	Screw–Breather Mtg.	1
11	280005	Grommet	1
13	94565	Screw–Cylinder Head	1
14	94622	Screw–Cylinder Head	1
33	390420	Valve–Exhaust	1
34	261055	Valve–Intake	1
35	65906	Spring–Valve (Intake)	1
36	691597	Spring–Valve (Exhaust)	1
40	221596	Retainer–Valve	1
41	691939	Retainer–Valve	1
45	260933	Tappet–Valve	1
227	493935	Lever Assy.–Governor	1

Ref. No.	Part No.	Description	No. Used
230	94927	Washer	1
306	496797	Shield–Cylinder	1
307	94930	Screw–Hex. Hd.	1
308	224896	Cover–Cylinder Head	1
337	802592	Plug–Spark	1
383	89838	Wrench–Spark Plug	1
552	491986	Bushing–Gov. Crank	1
562	94907	Bolt–Carriage	1
592	231978	Nut–Hex.	1
614	93306	Pin–Cotter	1
616	495157	Crank–Governor	1
635	66538	Elbow–Spark Plug	1
868	497656	Seal–Valve	1
869	211661	Seat–Int. Valve	1
870	211661	Seat–Ex. Valve	1
871	261961	Guide–Exhaust Valve	1
	231218	Guide–Intake Valve	1
1058	273681	Owner's Manual	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

PROTOTYPE

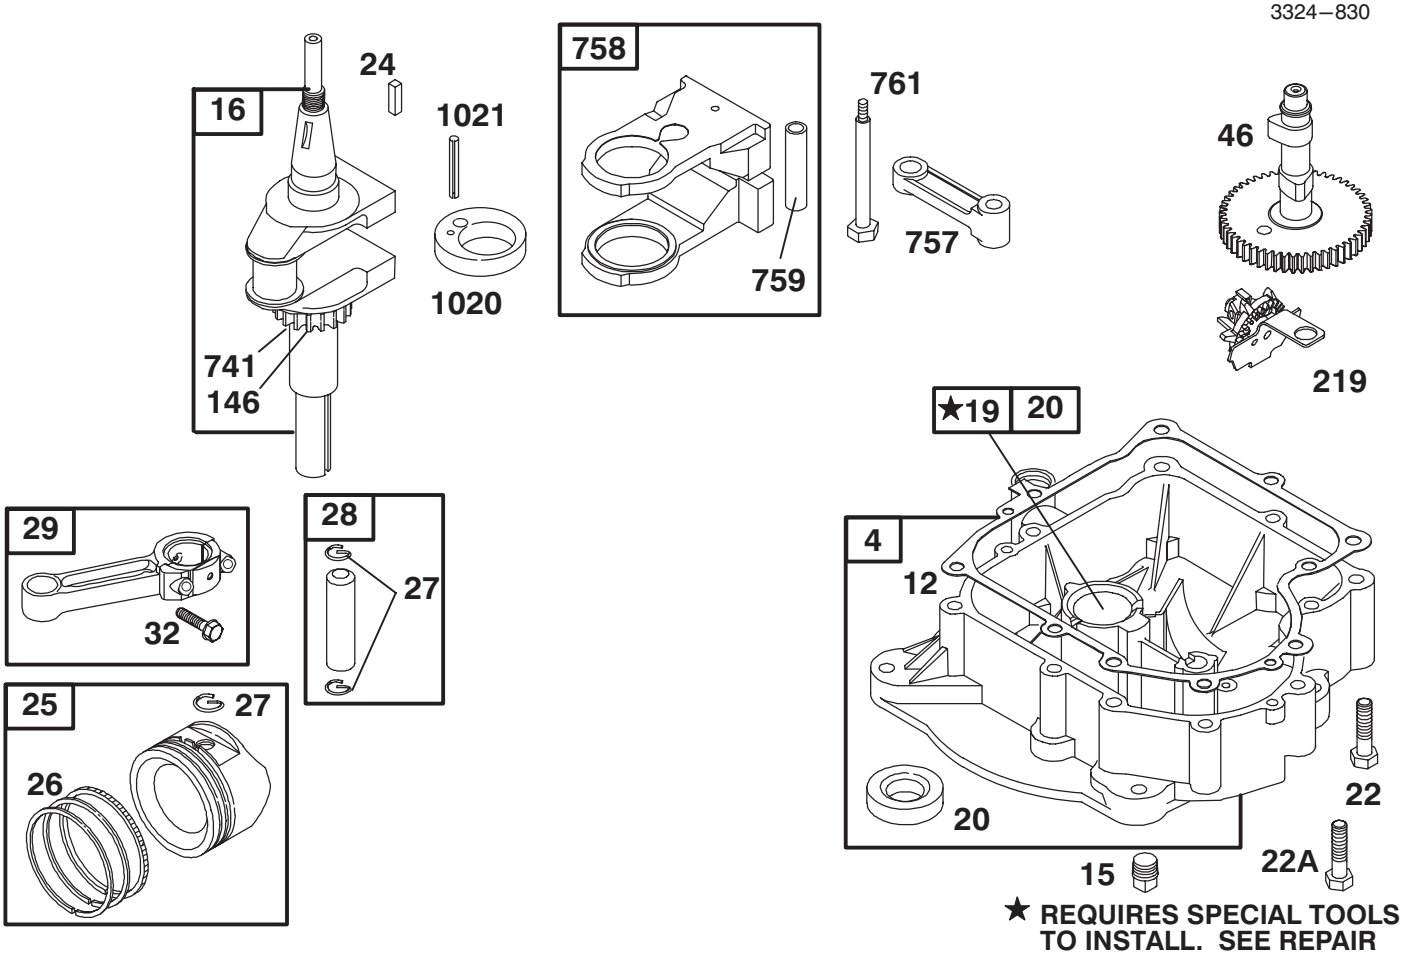

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
4	392548	Sump–Engine	1
★12	271701	Gasket–Crankcase (.015” Thick, Std.)	1
★	27876	Gasket–Crankcase (.005” Thick)	1
★	27877	Gasket–Crankcase (.009” Thick)	1
15	94239	Plug–Oil Drain	1
16	495629	Crankshaft	1
19	295963	Bushing	1
★20	391086	Seal–Oil	1
22	93585	Screw–Hex.	1
22A	94690	Screw–Hex. (Used in Pos. #1)	1
24	222698	Key–Flywheel	1
25	499907	Piston Assy. (Std.)	1
	499908	Piston Assy. (.010” O.S.)	1
	499909	Piston Assy. (.020” O.S.)	1
	499910	Piston Assy. (.030” O.S.)	1

Ref. No.	Part No.	Description	No. Used
26	499421	Ring Set (Std.)	1
	299743	Ring Set (Std. Chrome)	1
	391670	Ring Set (.010” O.S.)	1
	391671	Ring Set (.020” O.S.)	1
	391672	Ring Set (.030” O.S.)	1
27	690975	Lock–Piston Pin	1
28	499911	Pin–Piston (Std.)	1
	499920	Pin–Piston (.005” O.S.)	1
29	390402	Rod–Connecting	1
	390773	Rod–Connecting (.020” U.S.)	1
32	94670	Screw–Conn. Rod	1
46	214786	Gear–Cam	1
146	94388	Key–Timing	1
219	491397	Gear–Governor	1
741	263025	Gear–Timing	1
757	213998	Link–Counterweight	1
758	390172	Counterweight	1
759	230787	Pin–Counterweight	1
761	94592	Screw–Shoulder	1
1020	261190	Eccentric	1
1021	94853	Pin–Groove	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

PROTOTYPE

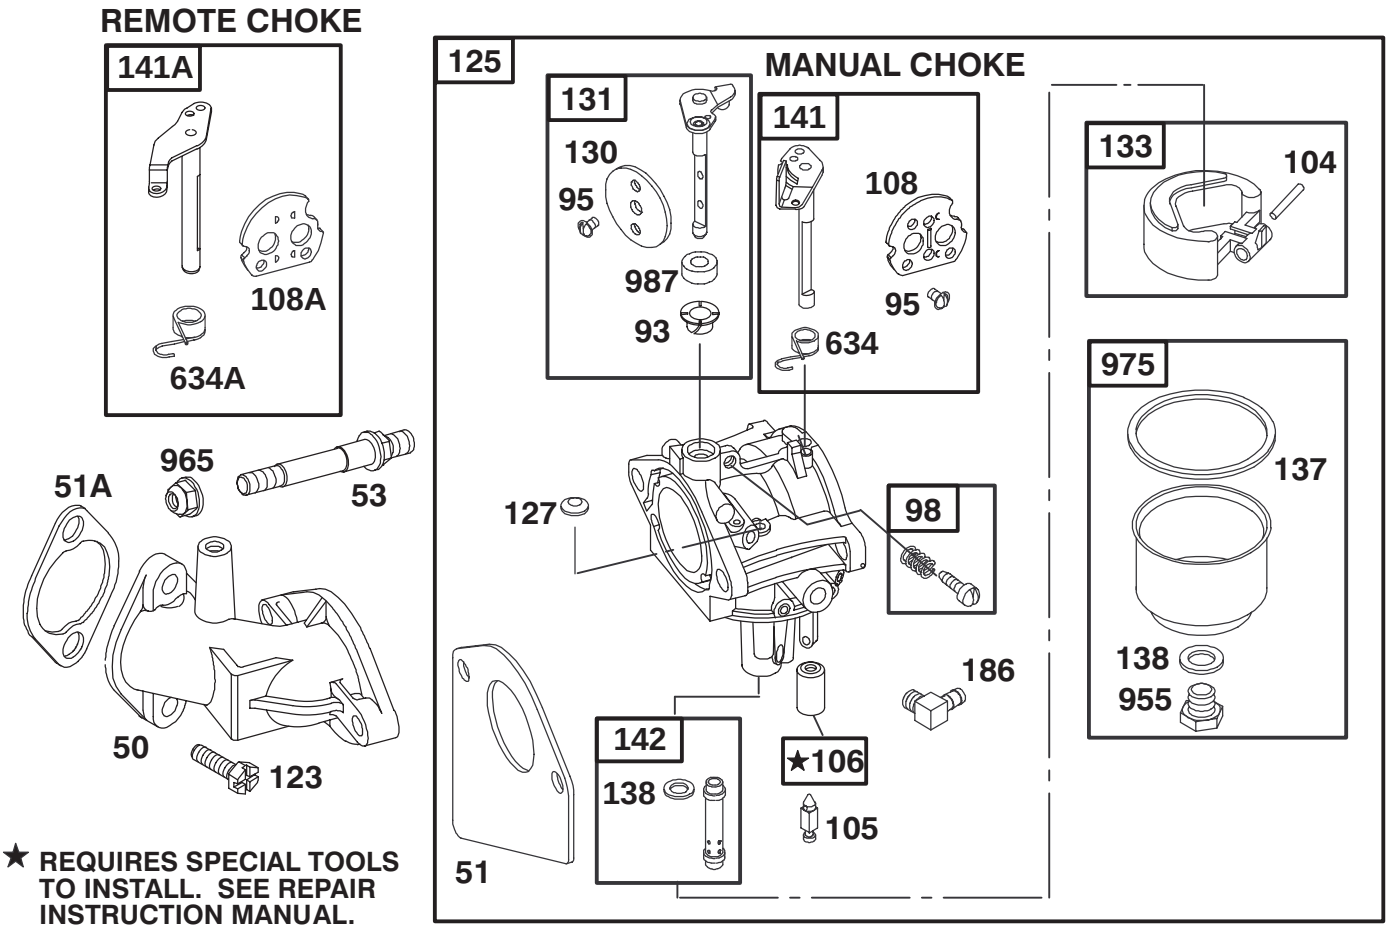

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
50	213819	Manifold–Intake	1
◆●51	272465	Gasket–Carb. Elbow	1
★†51A	272554	Gasket–Carb. Mtg.	1
53	94637	Stud–Carb. Mtg.	1
93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Slotted	1
98	495800	Screw–Idle Speed	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve–Needle	1
●106	231854	Seat–Inlet	1
108	224558	Valve–Manual Choke	1
108A	224540	Valve–Remote Choke	1
123	94913	Screw–TorxRHex.	1
125	692684	Carburetor	1
●127		Plug–Welch	
		Note: Sold in Kit Only.	1
130	224668	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494885	Shaft–Throttle	1
133	494381	Float–Carburetor	1
◆●137	281165	Gasket–Float Bowl	1
◆●138	281164	Washer	1
141	495097	Shaft–Manual Choke	1
141A	495931	Shaft–Remote Choke	1
142	692687	Nozzle–Carburetor (Standard) Nozzle–Carburetor (High Altitude)	1
186	493496	Connector–Hose	1
●634	494453	Seal–Choke Shaft	1
●634A	494455	Seal–Choke Shaft	1
955	94642	Plug	1
965	94010	Nut–Hex.	1
975	495933	Bowl–Float	1
◆987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

PROTOTYPE

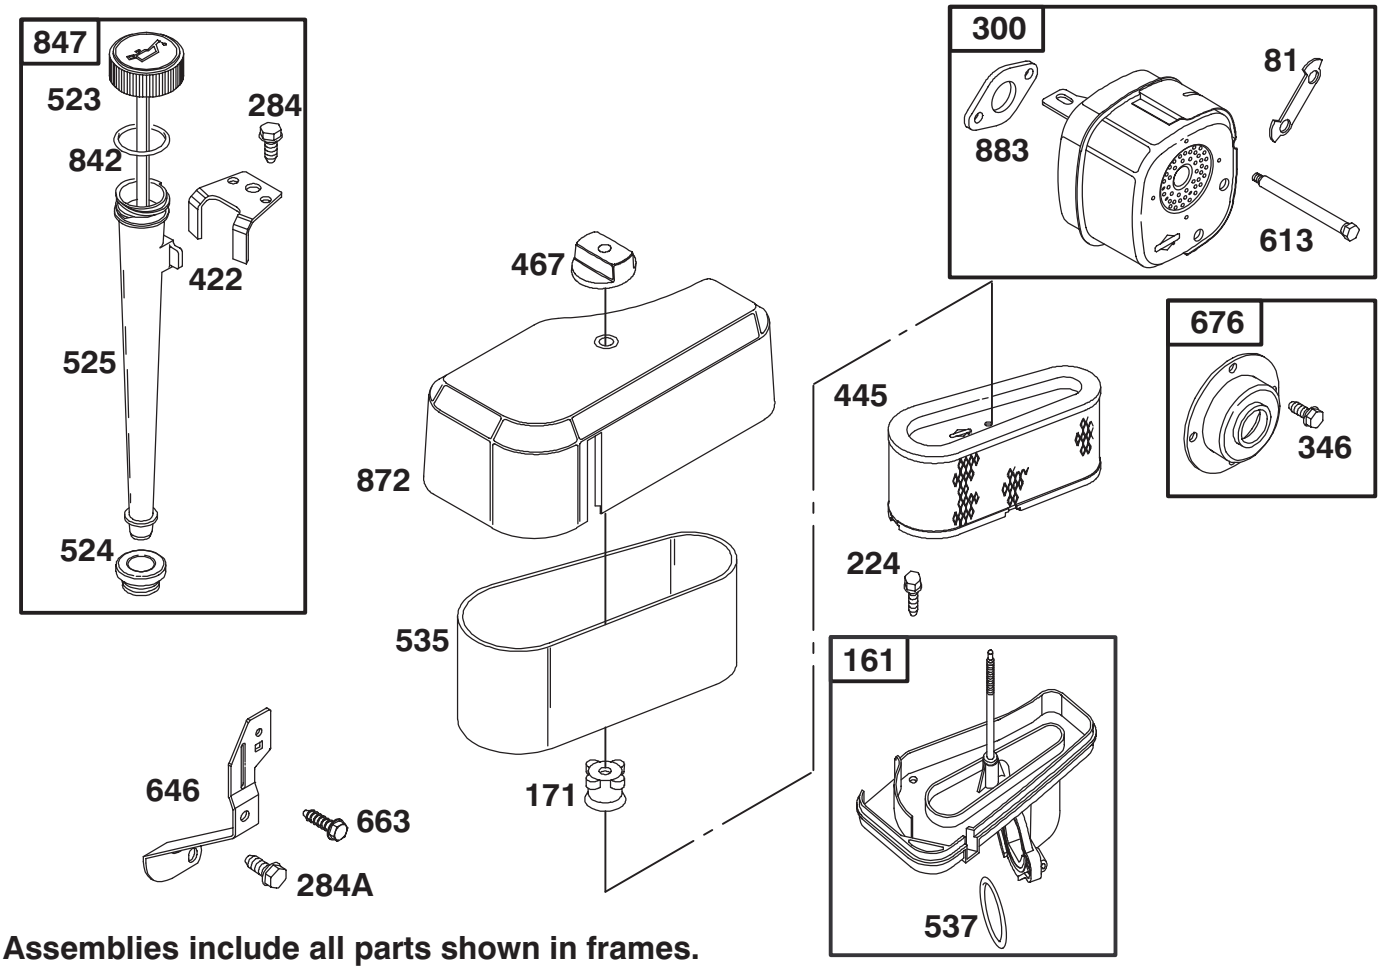

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
81	222263	Lock–Screw	1
161	494827	Base–Air Cleaner	1
171	281051	Nut	1
224	94730	Screw–Hex.	1
284	94874	Screw–Hex.	1
284A	94704	Screw–Hex.	1
300	692304	Muffler–Exhaust	1
346	94896	Screw–Hex.	1
422	224872	Bracket–Oil Fill	1
445	493910	Filter–Air	1
467	493903	Knob	1
523	495228	Dipstick	1

Ref. No.	Part No.	Description	No. Used
★524	81370	Grommet	1
525	280133	Tube–Oil Fill	1
535	272477	Filter–Air	1
★537	281106	Gasket–Air Cleaner	1
613	94042	Screw–Shoulder	1
646	224614	Brace	1
663	94929	Screw–Hex.	1
676	395700	Deflector–Exhaust	1
★842	270920	Seal–O-Ring	1
847	392066	Dipstick/Tube Assembly	1
872	281105	Cover–Air Cleaner	1
†★883	272309	Gasket–Exhaust	1

PROTOTYPE

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

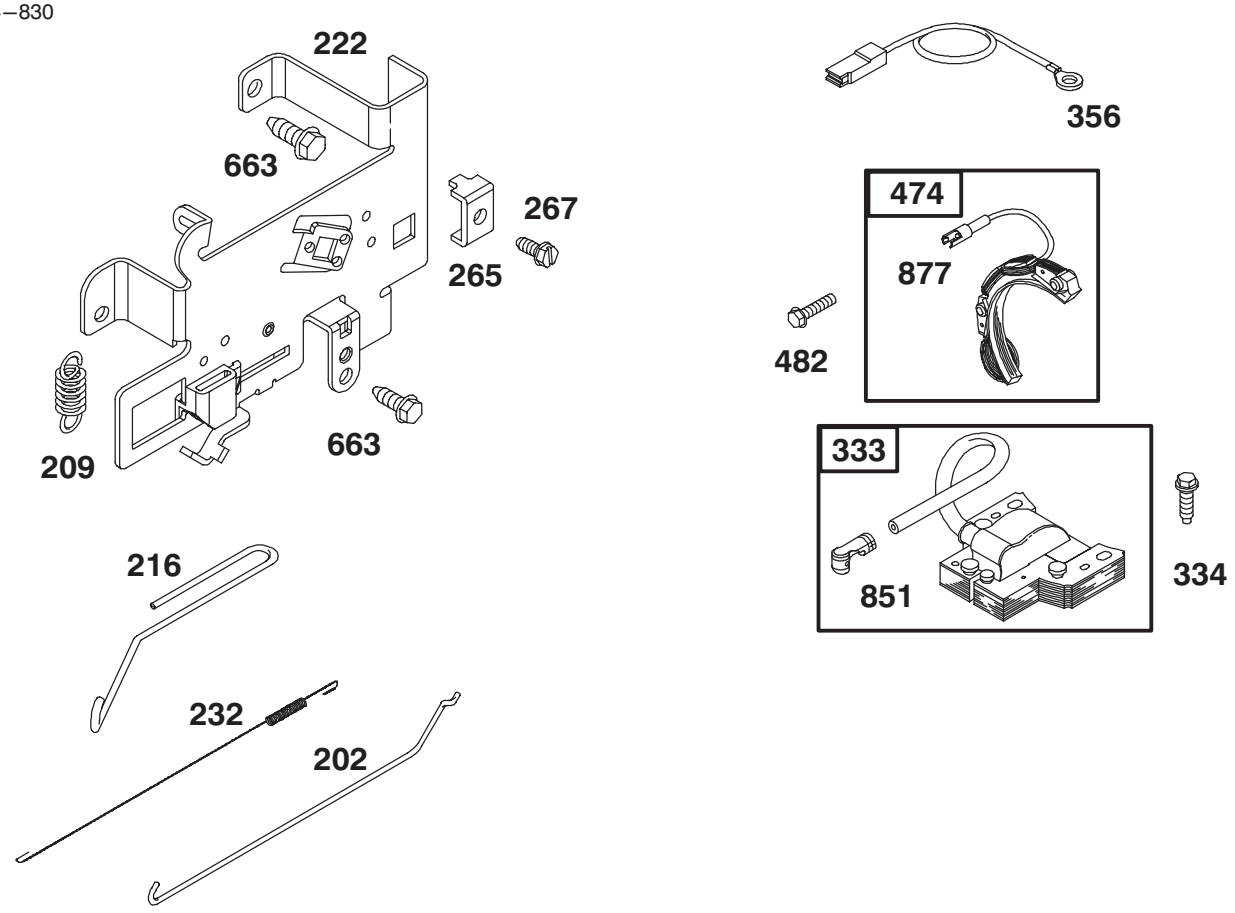


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
202	262769	Link–Mechanical Governor	1
209	260871	Spring–Governor	1
216	262768	Link–Choke	1
222	495611	Bracket–Control	1
232	262787	Spring–Link	1
265	221535	Clamp–Casing	1
267	94906	Screw–Hex.	1

Ref. No.	Part No.	Description	No. Used
333	398811	Armature–Magneto	1
334	94731	Screw–Hex.	1
356	494328	Wire–Stop	1
474	391529	Alternator	1
482	93621	Screw–Hex.	1
663	94929	Screw–Hex.	1
851	493880	Terminal–Cable	1
877	393814	Wire–Alternator	1

PROTOTYPE

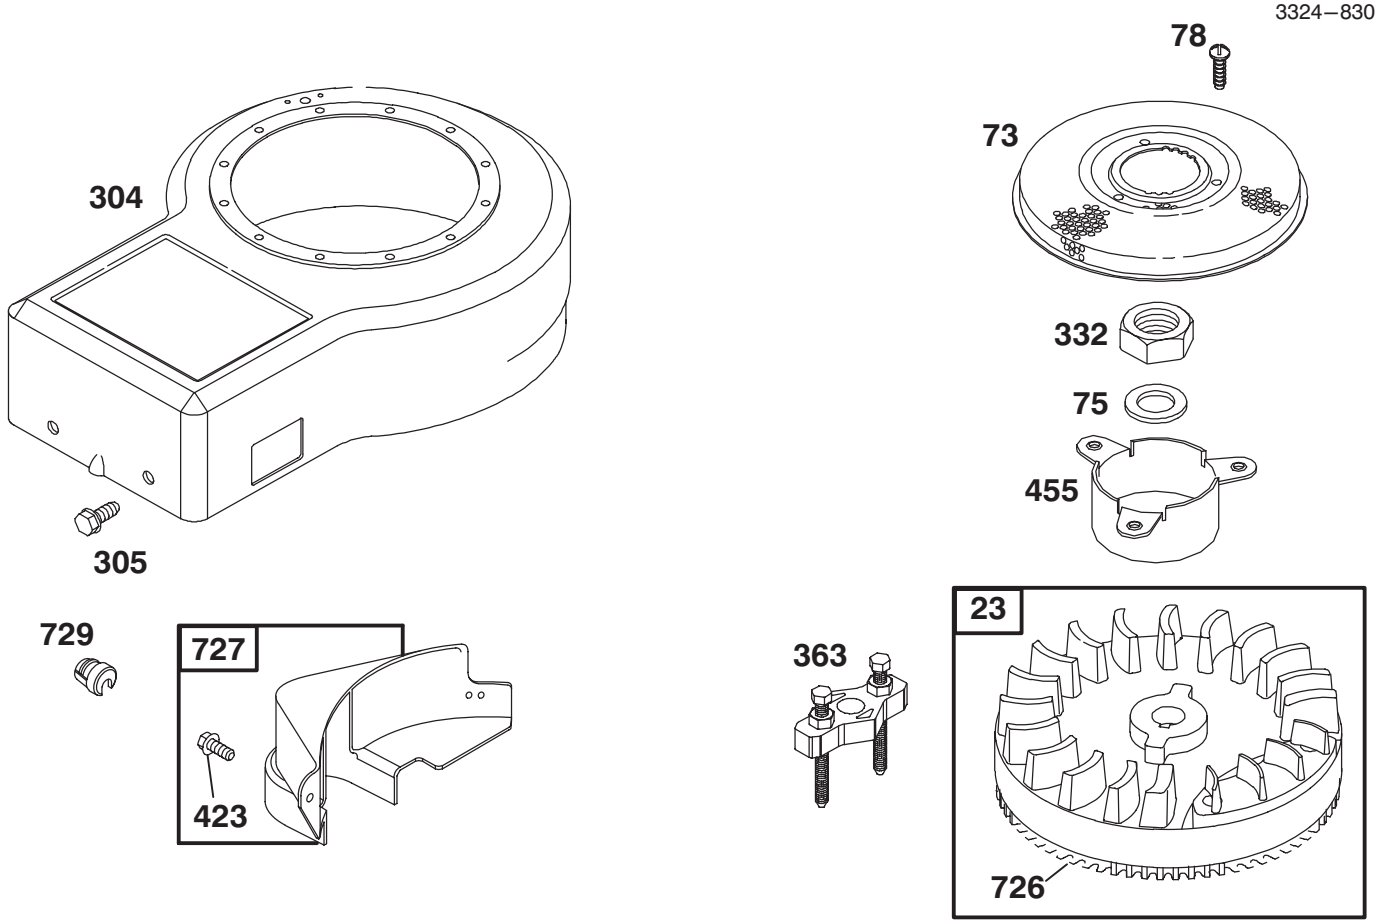

Assemblies include all parts shown in frames.


1036 LABEL KIT–EMISSIONS

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
23	391983	Flywheel	1
73	224517	Screen–Rotating	1
75	225136	Washer–Flywheel	1
78	94626	Screw–Hex.	1
304	494084	Housing–Blower	1
305	94786	Screw–Hex.	1
332	94877	Nut–Flywheel	1

Ref. No.	Part No.	Description	No. Used
363	19165	Flywheel Puller	1
423	94625	Screw–Shoulder	1
455	222561	Cup–Flywheel	1
726	392134	Gear–Ring	1
727	395405	Guard–Starter Drive	1
729	281395	Clip–Wire	1
1036	499356	Label Kit – Emissions	1

PROTOTYPE

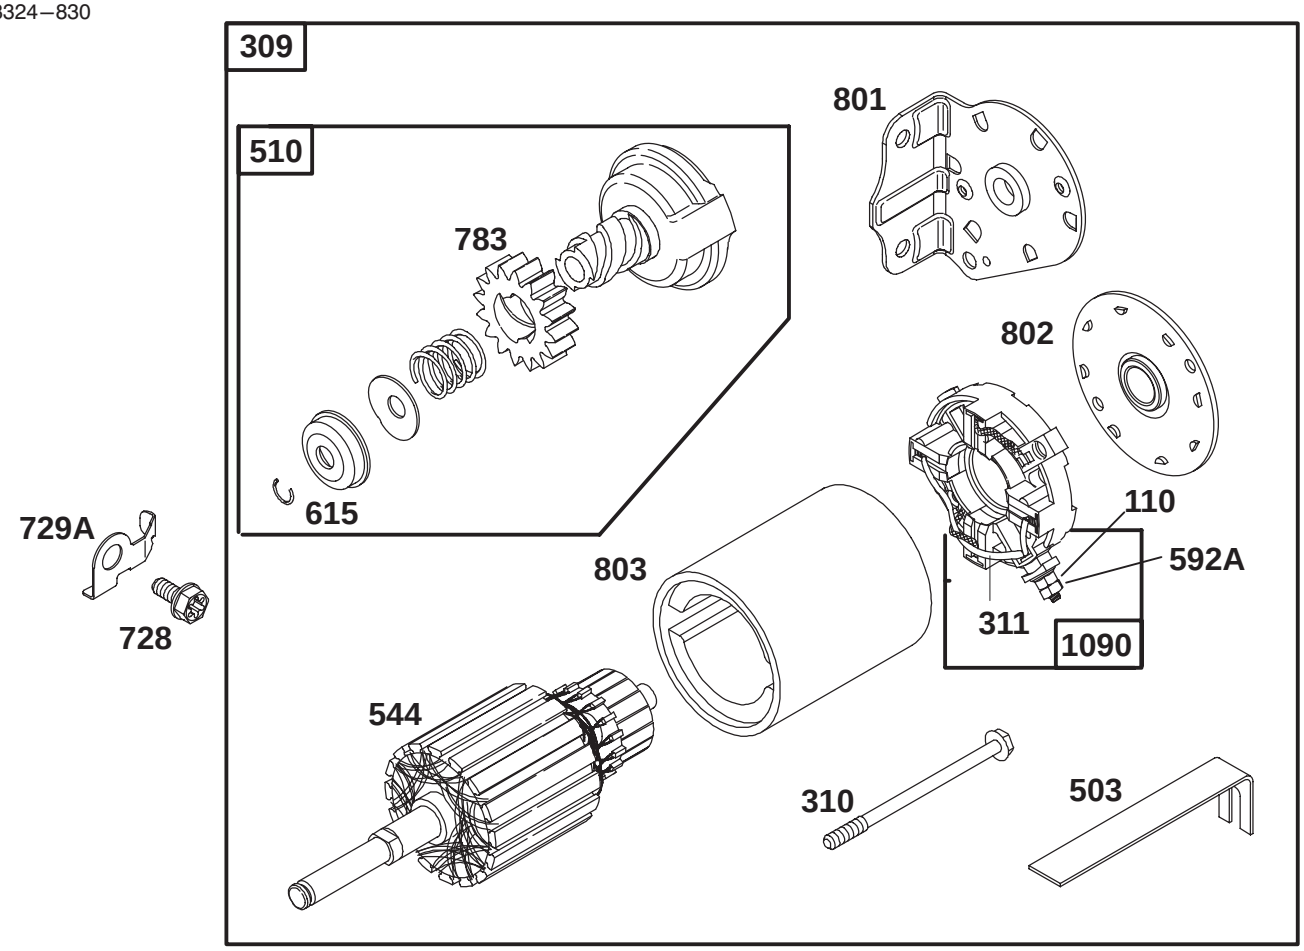


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1


Ref. No.	Part No.	Description	No. Used
110	225137	Washer–Flat	1
309	497595	Motor–Starter	1
310	94003	Screw–Hex.	1
311	497608	Brush Set	1
592A	92278	Nut–Hex.	1
503	806006	Strap–Starter	1
510	497606	Drive–Starter	1
544	497603	Armature–Starter	1


Ref. No.	Part No.	Description	No. Used
615	263080	Retainer	1
728	94951	Screw–Torx®Hex.	1
729A	225170	Clip–Wire	1
783	280104	Gear–Starter	1
801	394856	Cap–Drive	1
802	497607	Cap–End	1
803	497604	Housing–Starter	1
1090	497605	Retainer–Brush	1

PROTOTYPE

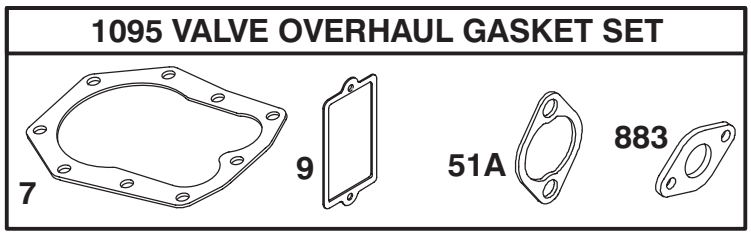

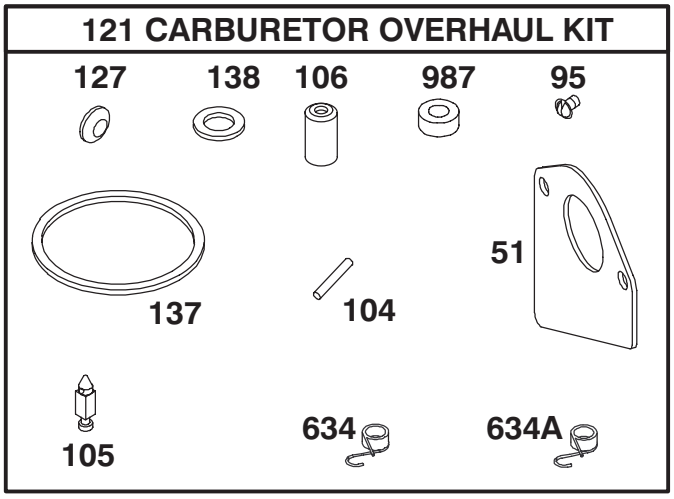

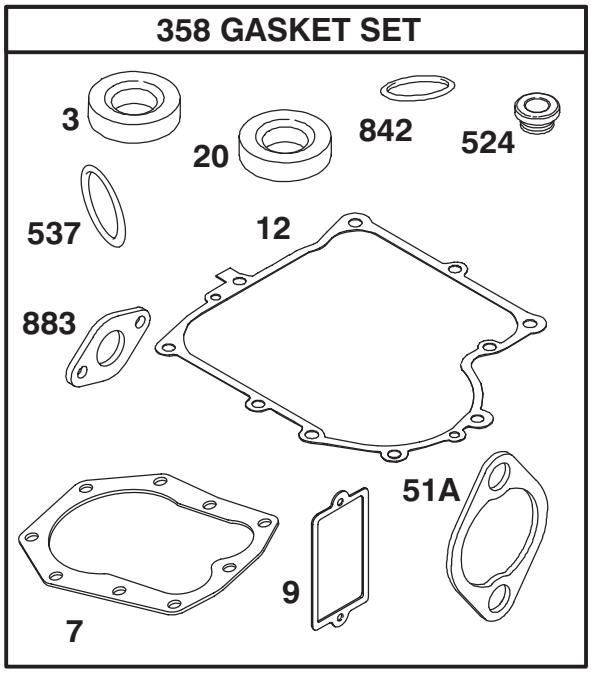

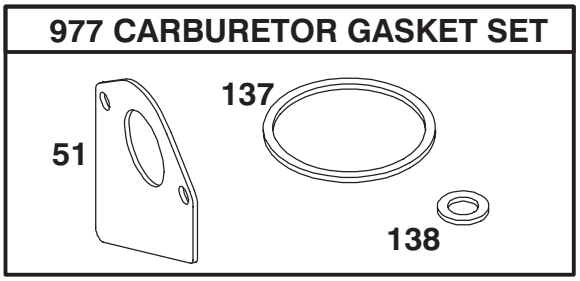

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
†★7	272163	Gasket—Cylinder Head	1
†★9	27803	Gasket—Breather	1
★12	271701	Gasket—Crankcase (.015" Thick, Std.)	1
★	27876	Gasket—Crankcase (.005" Thick)	1
★	27877	Gasket—Crankcase (.009" Thick)	1
★20	391086	Seal—Oil	1
◆●51	272465	Gasket—Carburetor Elbow	1
★†51A	272554	Gasket—Carb. Mtg.	1
●95	94098	Screw–Slotted	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve–Needle	1
●106	231854	Seat–Inlet	1
121	497535	Carburetor Kit	1
●127		Plug—Welch **Note:** Sold in Kit Only.	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer	1
358	299577	Gasket Set	1
★524	281370	Grommet	1
★537	281106	Gasket–Air Cleaner	1
●634	494453	Seal—Choke Shaft	1
●634A	494455	Seal—Choke Shaft	1
★842	270920	Seal–O-Ring	1
†★883	272309	Gasket—Exhaust	1
977	494385	Gasket Set—Carburetor	1
◆987	281166	Seal—Throttle Shaft	1
1095	498536	Gasket Set—Valve Overhaul	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

PROTOTYPE

Maintenance Record

Date								

PROTOTYPE

Maintenance Record

Date								

PROTOTYPE

Maintenance Record

Date								

PROTOTYPE