Form No. 3325-111

TORO®

Proline® 21”
Recycler® Mower
Model No. 22172—210000001 and Up

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000
All Rights Reserved

Contents

Description	Page
Housing Assembly	3
Housing Assembly 98-7146	4
Front Wheel and Tire Assembly	5
Gear Case Assembly No. 74-1861	6
Engine and Blade Brake Clutch Assembly	7
Handle Assembly	8
Panel and Controls Assembly	9
Gear Case and Rear Wheel Assembly	10
Rear Wheel and Tire Assembly No. 74-1720	11
Grass Bag Assembly No. 99-2535	12
Cylinder and Crankcase Assembly	13
Valve and Camshaft Assembly	14
Control Linkage Assembly	15
Fuel Tank and Fuel Valve Assembly	16
Flywheel and Ignition Assembly	17
Carburetor Assembly	18
Piston and Crankshaft Assembly	19
Air Filter and Muffler Assembly	20
Cover and Cooling Assembly	21
Dipstick Assembly	22
Recoil Starter Assembly	23


Accessories

Description	Model / Part No.
Side Discharge Kit	59199

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

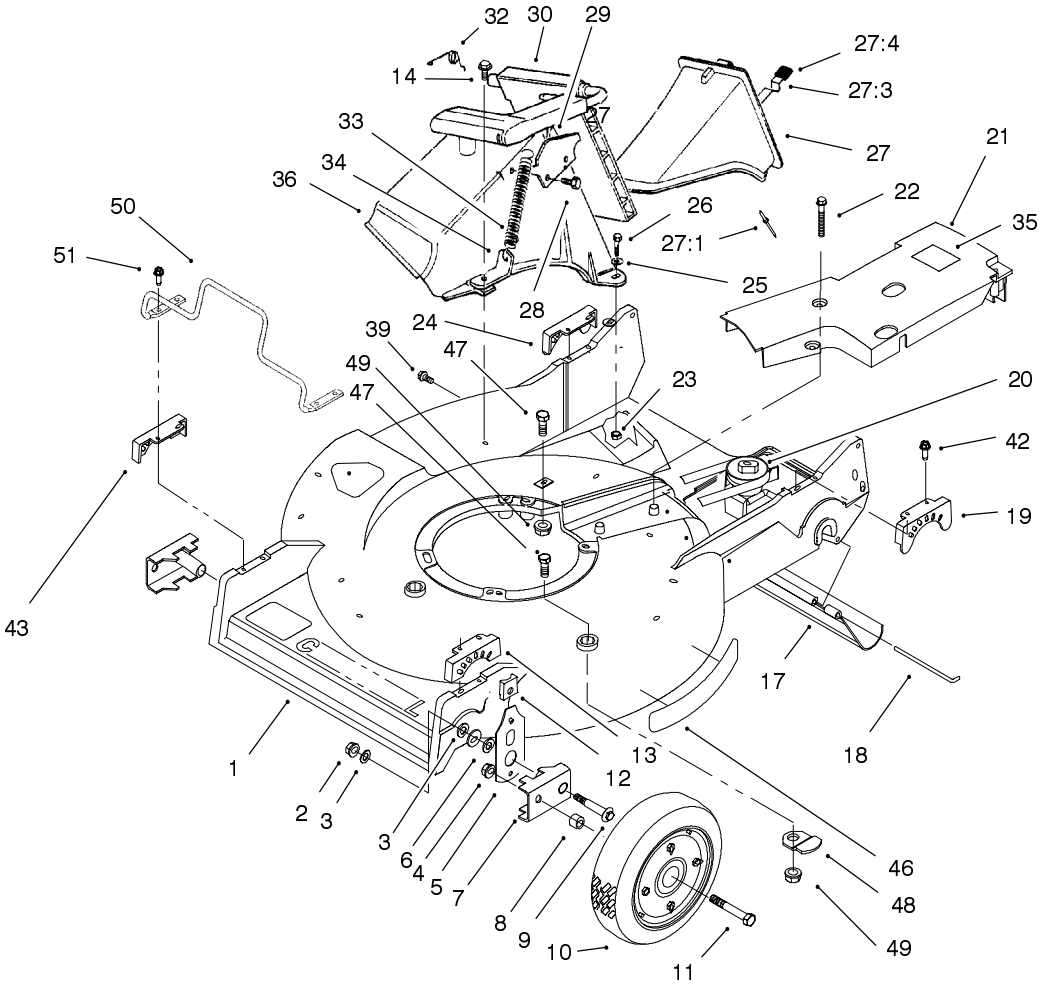


Sheet No.:2

C-2987

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7146	1	Housing
2	3296-6	2	Nut-Lock, NI
3	40-1940	4	Washer
4	32152-2	2	Nut-Conelock
5	66-7560	2	Front Spring Arm ASM
6	257-3	2	Washer-Thrust
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	27-6232	2	Bolt-Wheel
10	53-7720	2	Wheel & Tire ASM
11	323-12	2	Screw-HH
12	25-7740	2	Knob-Arm
13	49-8760	1	Quadrant-Front, LH
14	46-6811	1	Screw-HWH
17	44-0580	1	Shield-Trailing
18	33-3208	1	Rod-Shield
19	49-8740	1	Quadrant-Rear, LH
20	74-1861	1	Gear Case ASM
21	99-6298	1	Cover-Belt
22	37-7260	2	Screw-HH
23	3296-42	2	Nut-Lock NI
24	49-8750	1	Quadrant-Rear, RH
25	3256-22	2	Washer-Flat
26	321-7	2	Screw-HH
27	77-0500	1	Discharge Plug ASM
27:1	3295-35	1	Rivet-Head, Flat

Ref. No.	Part No.	Qty.	Description
27:3	76-4640	1	Latch-Plug, Discharge
27:4	76-4650	1	Grip-Latch
28	46-8090	2	Screw-Plastite
29	93-3154	1	Latch-Plate
30	93-7351	1	Discharge Door ASM
32	80-3770	1	Retainer-Door
33	76-4660	1	Spring-Door
34	71-9350	1	Bracket-Spring
35	52-2620	1	Label-Grease
36	82-9152	1	Tunnel-Discharge
39	46-6810	1	Screw & Washer ASM
42	49-2040	4	Screw-Tapping
43	49-8770	1	Quadrant-Front, RH
46	92-7988	1	Decal - Recycler
47	323-6	3	Screw-HH
48	84-8930	2	Shield-Retainer
49	3296-39	3	Nut-Lock, NI
50	99-6722	1	Guard-Engine
51	32144-86	4	Screw-HH

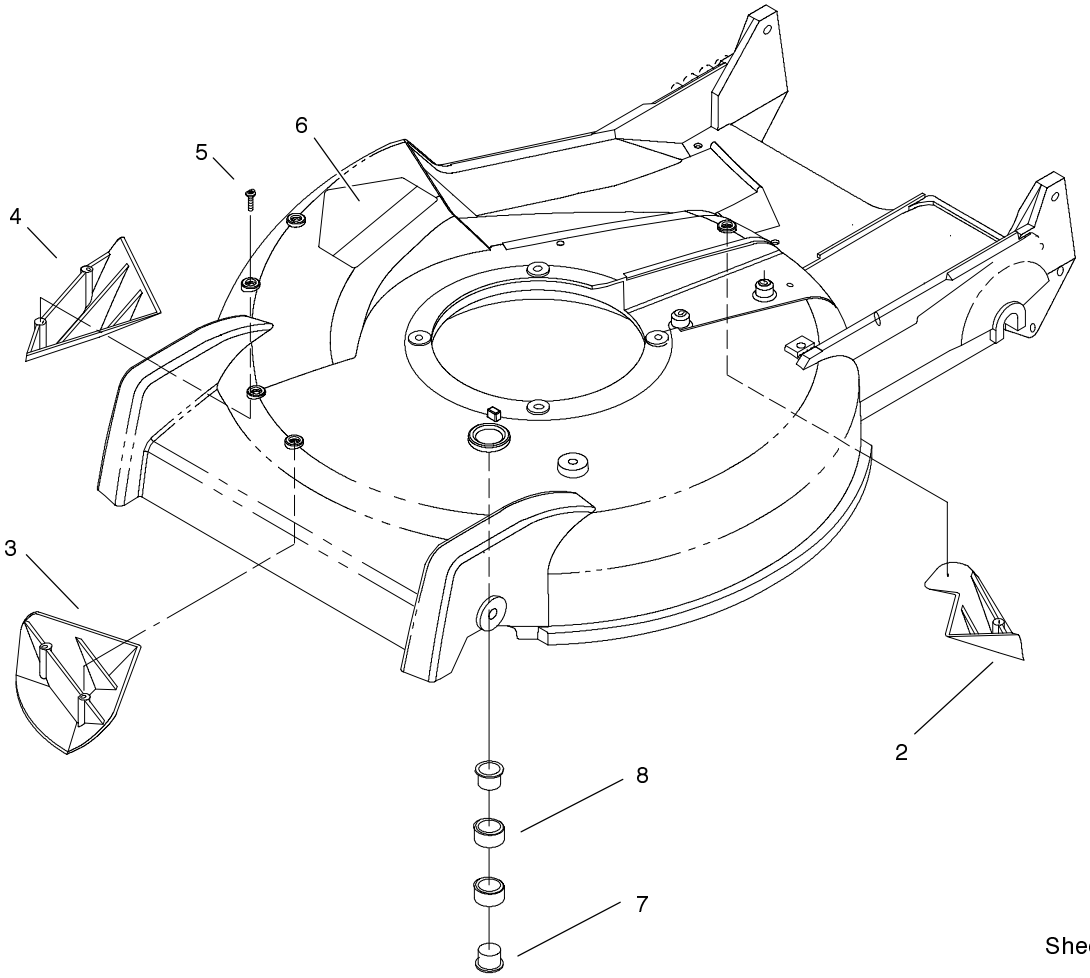


Sheet No.:A1

Housing Assembly 98-7146

Ref. No.	Part No.	Qty.	Description
2	92-1750	1	Kicker-Rear
3	92-1720	1	Kicker-Front
4	92-1730	1	Kicker-RH
5	32144-111	6	Screw-PPH
6	43-8480	1	Decal-Danger
7	2410-72	2	Caplug
8	68-9780	2	Bearing

Ref. No.	Part No.	Qty.	Description

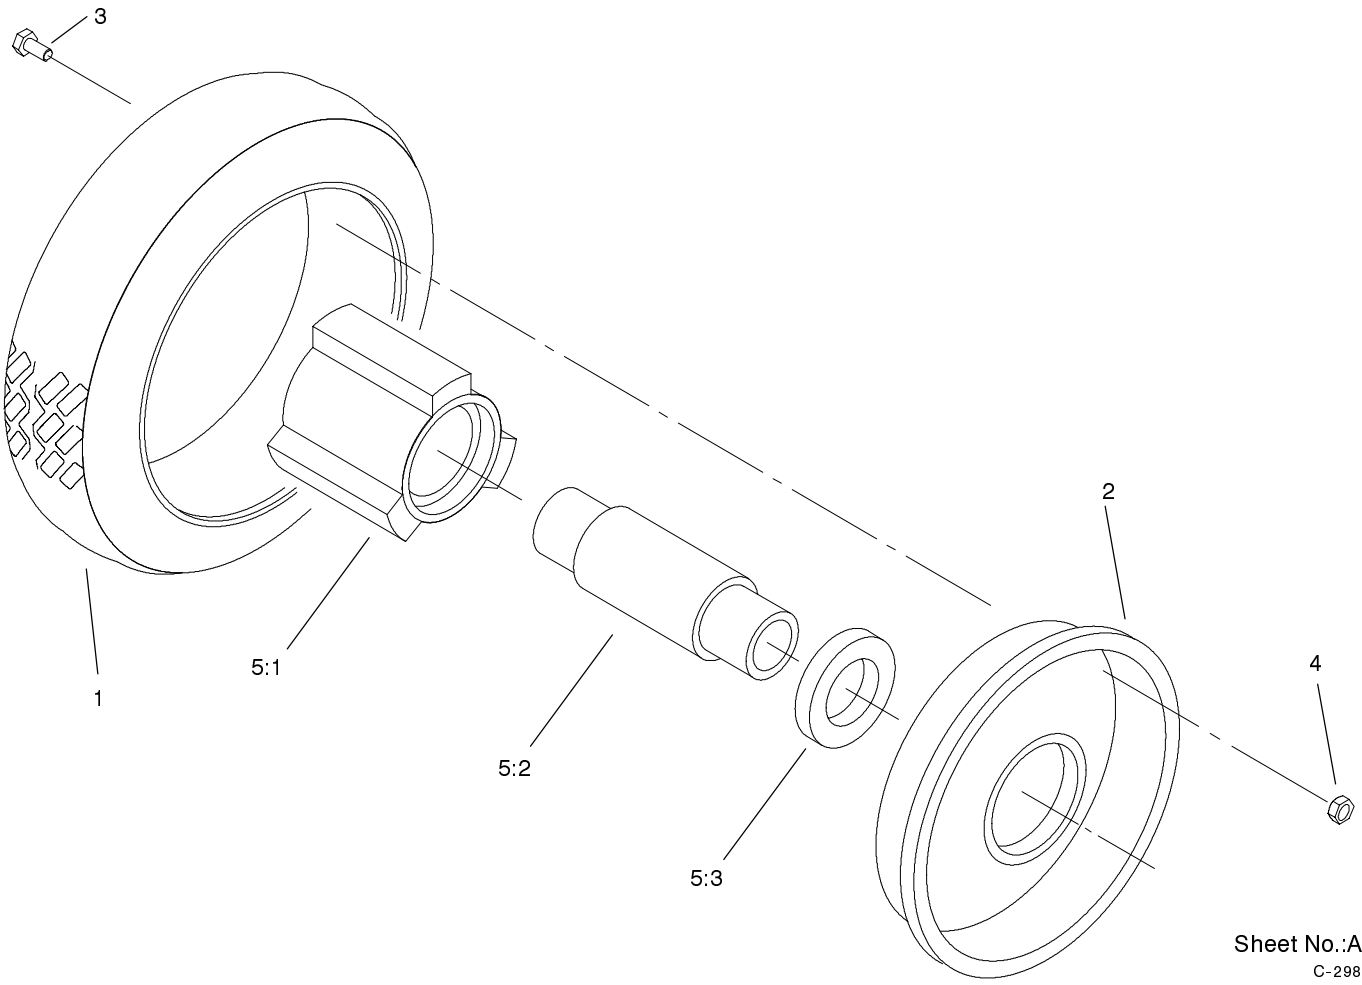


Sheet No.:A2
C-2989

Front Wheel and Tire Assembly

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	2	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock NI
☆5		1	Hub & Bearing ASM
5:1	52-2410	1	Hub-Bearing
5:2	52-2440	1	Spacer-Bearing
5:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description

☆ Not serviced

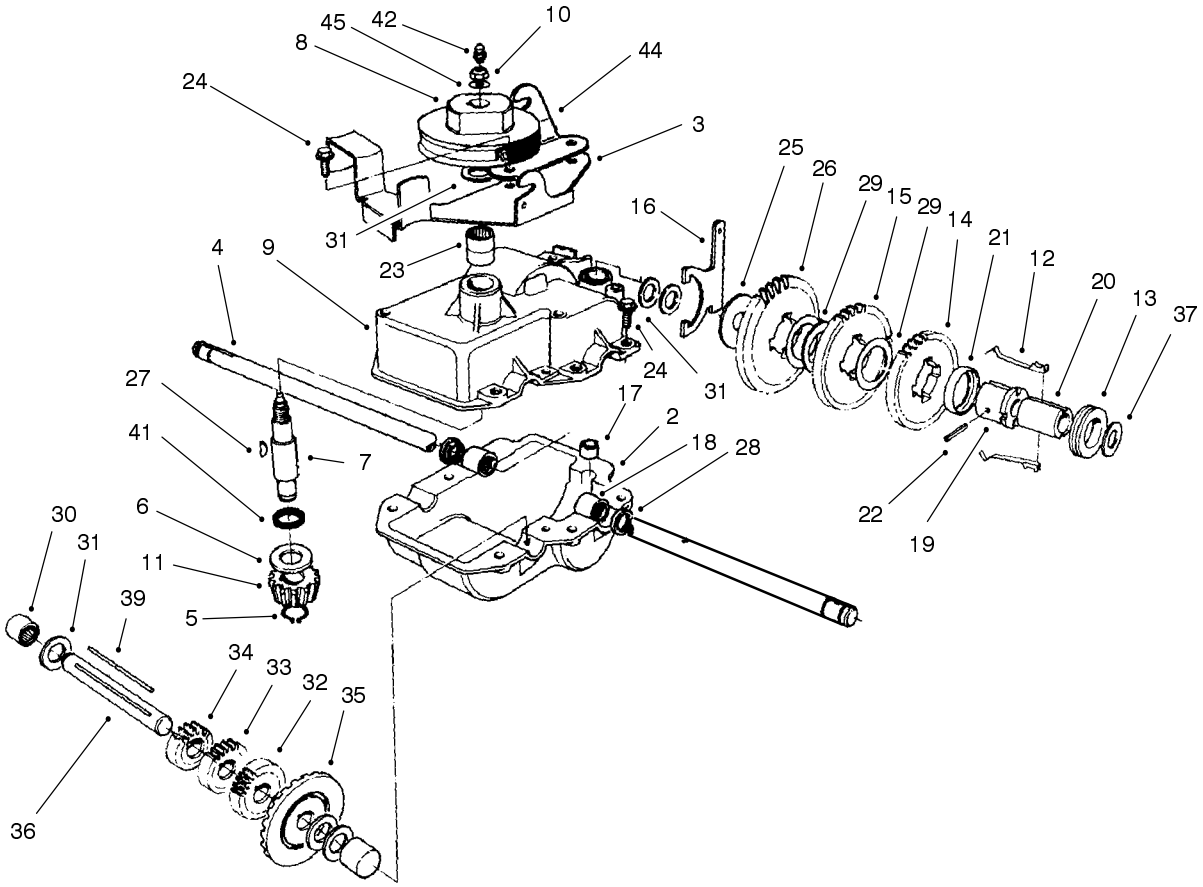


Sheet No.:A3

C-2990

Gear Case Assembly No. 74-1861

Ref. No.	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74-1890	1	Shaft-Output
5	32151-57	1	Ring-Retaining
6	47-2910	1	Washer-Thrust
7	68-8190	1	Shaft-Input
8	39-6740	1	Pulley
9	74-1880	1	Case-Gear, Upper
10	3296-5	1	Nut-Lock Nl
11	39-6660	1	Pinion-Bevel
12	29-9330	2	Key
13	29-9340	1	Collar-Shift
14	42-4740	1	Gear-38 Tooth
15	29-9271	1	Gear-42 Tooth
16	60-8870	1	Yoke-Shift
17	29-9570	1	Bushing-Yoke
18	47-6730	2	Seal-Oil
19	55-8010	1	Sleeve-Gear
20	39-6720	1	Sleeve
21	55-8020	1	Retainer-Key
22	3285-19	1	Pin-Groove
23	47-7270	2	Bearing
24	49-2040	6	Screw-Tapping
25	29-9690	1	Washer
26	46-3560	1	Gear
27	3257-1	2	Key-Woodruff

Ref. No.	Part No.	Qty.	Description
28	48-2060	2	Bearing-Roller
29	36-4770	3	Washer
30	252-103	2	Bearing-Closed
31	36-4792	4	Washer-Thrust
32	39-6650	1	Gear-18t
33	46-3550	1	Gear-14t
34	46-3540	1	Gear-12t
35	74-1760	1	Gear-Bevel
36	53-7950	1	Shaft-Intermediate
37	36-4780	3	Washer
39	39-7842	1	Key
41	47-7260	1	Seal
42	302-63	1	Zerk
44	74-1750-03	1	Brake-Engage, Traction
45	3256-45	1	Washer-Flat

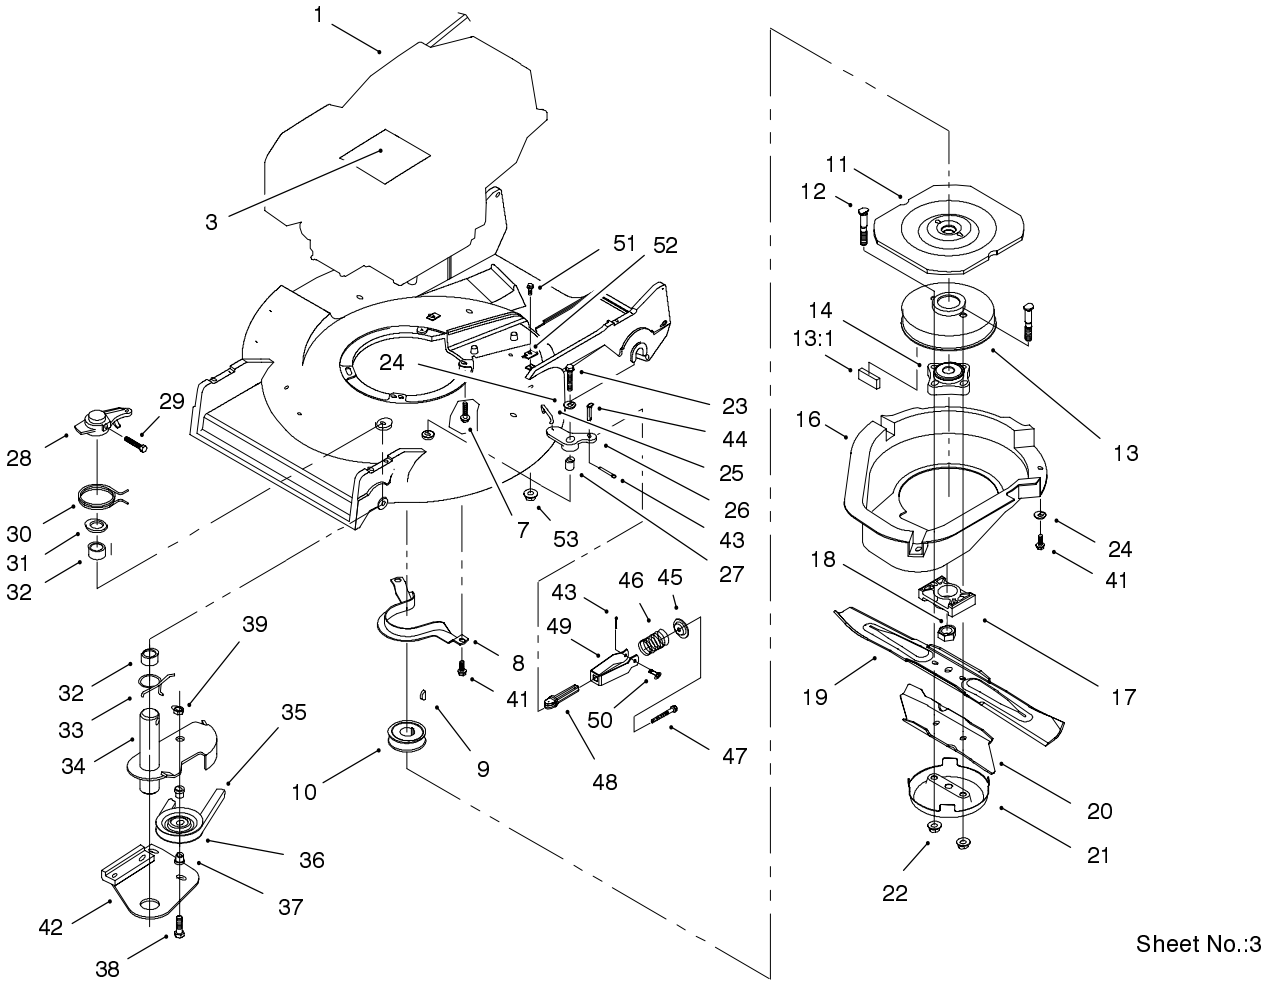


Sheet No.:3

Engine and Blade Brake Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1333	1	Engine-Kawasaki
3	104-1335	1	Decal-Engine
7	100-2835	3	Screw-Mount, Engine
8	66-0570-03	1	Bracket-Guide, Belt
9	3257-17	1	Key-Woodruff
10	56-6180	1	Driver-Pulley
11	56-6160-03	1	Flywheel - Bbc
12	42-3190	2	Bolt-Blade
13	94-9431	1	Brake Drum ASM
13:1	52-3480	2	Dampner-Vibration
14	42-6890	1	Hub ASM
16	46-5693	1	Shield
17	62-4280	1	Spacer-Blade
18	603164	1	Nut-Blade
19	14-9419	1	Blade
20	91-2255-03	1	Stiffener-Blade
21	80-2770	1	Cup-Anti-Scalp
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	2	Washer-Flat
25	49-2810	1	Link - Control
26	49-7960	1	Bellcrank
27	49-7950	1	Sleeve-Bellcrank
28	49-2820	1	Lever
29	32104-96	1	Screw-HH
30	49-7970	1	Spring-Torsion


Ref. No.	Part No.	Qty.	Description
31	70-1160	1	Washer
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Plate-Brake
35	42-0884	1	V-Belt
36	46-5650	1	Pulley-Idler
37	46-5631	2	Hub-Pulley, Idler
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock, Nl
41	32144-70	3	Screw-HH
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring
47	46-7040	1	Screw-HWHTF
48	84-8870	1	Guide-Spring
49	84-8880-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable
51	322-6	1	Screw-HH
52	62-3720	1	Clamp-Cable
53	3296-58	1	Nut-Lock Nl

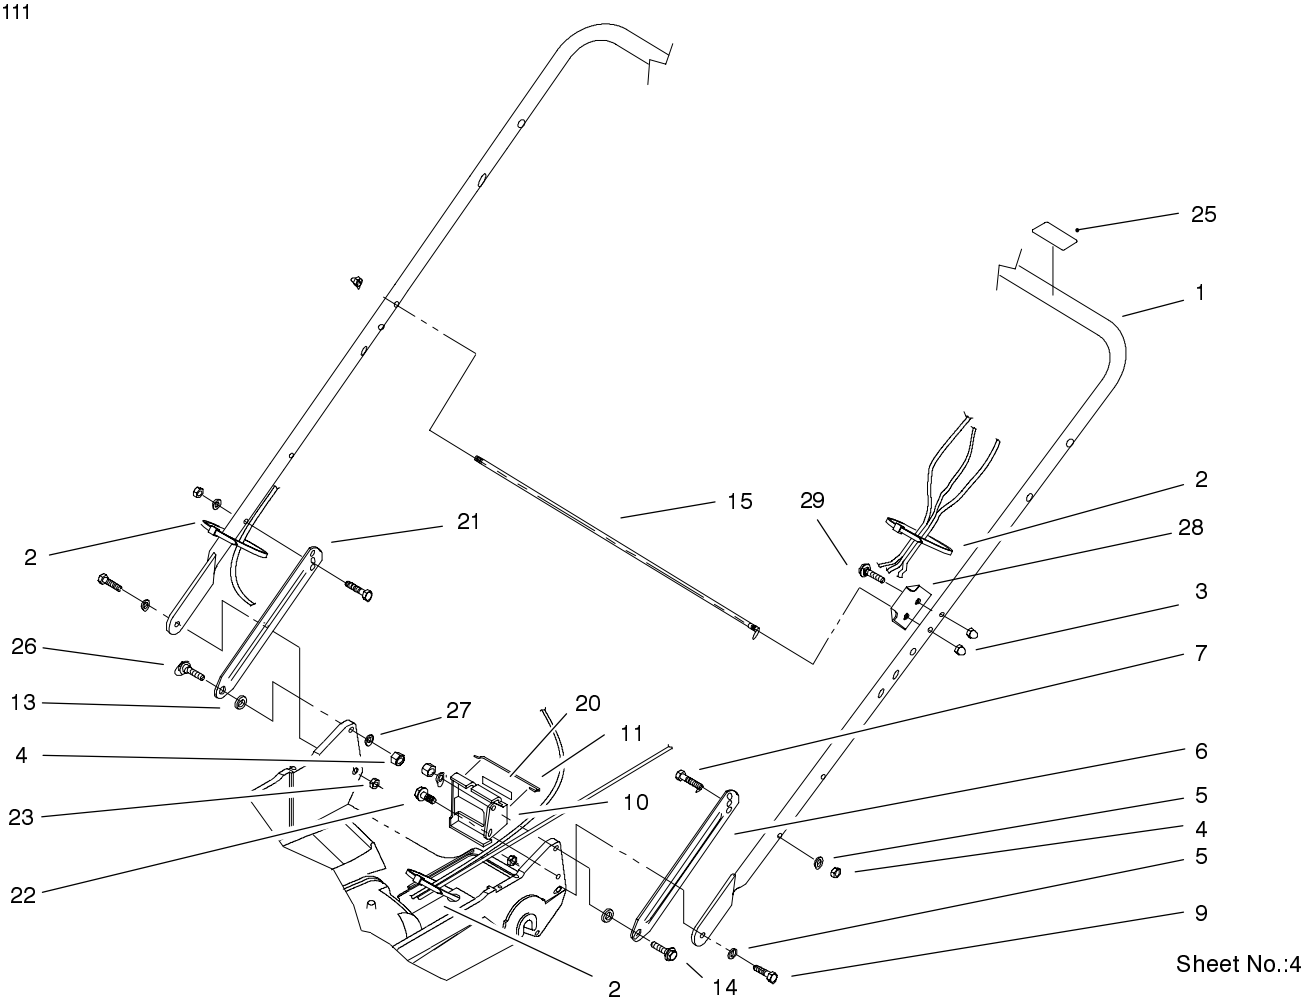

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2385-03	1	Handle
2	3290-378	3	Tie-Cable
3	32111-7	3	Nut-Cap
4	3296-29	4	Nut-Lock
5	3290-456	4	Washer-Belleville
6	100-3298-03	1	Latch-Handle, LH
7	322-7	2	Screw-HH
9	322-6	2	Screw-HH
10	74-1741	1	Bracket-Adjustment, Traction
11	46-7030	1	Retainer-Cable
13	3-3287	2	Spacer-Latch, Handle
14	27-7210	1	Screw-Shoulder
15	48-2810	1	Rod-Support, Bag
20	74-1970	1	Decal-Position, Gear
21	100-3297-03	1	Latch-Handle, RH
22	32144-70	1	Screw-HH
23	3296-47	2	Nut-Lock, NI
25	98-4387	1	Decal-Protection, Ear
26	27-7211	1	Screw-Shoulder
27	3256-23	2	Washer-Flat
28	104-1326	1	Plate - Bag Aligning
29	3229-3	1	Screw-CARR

Ref. No.	Part No.	Qty.	Description

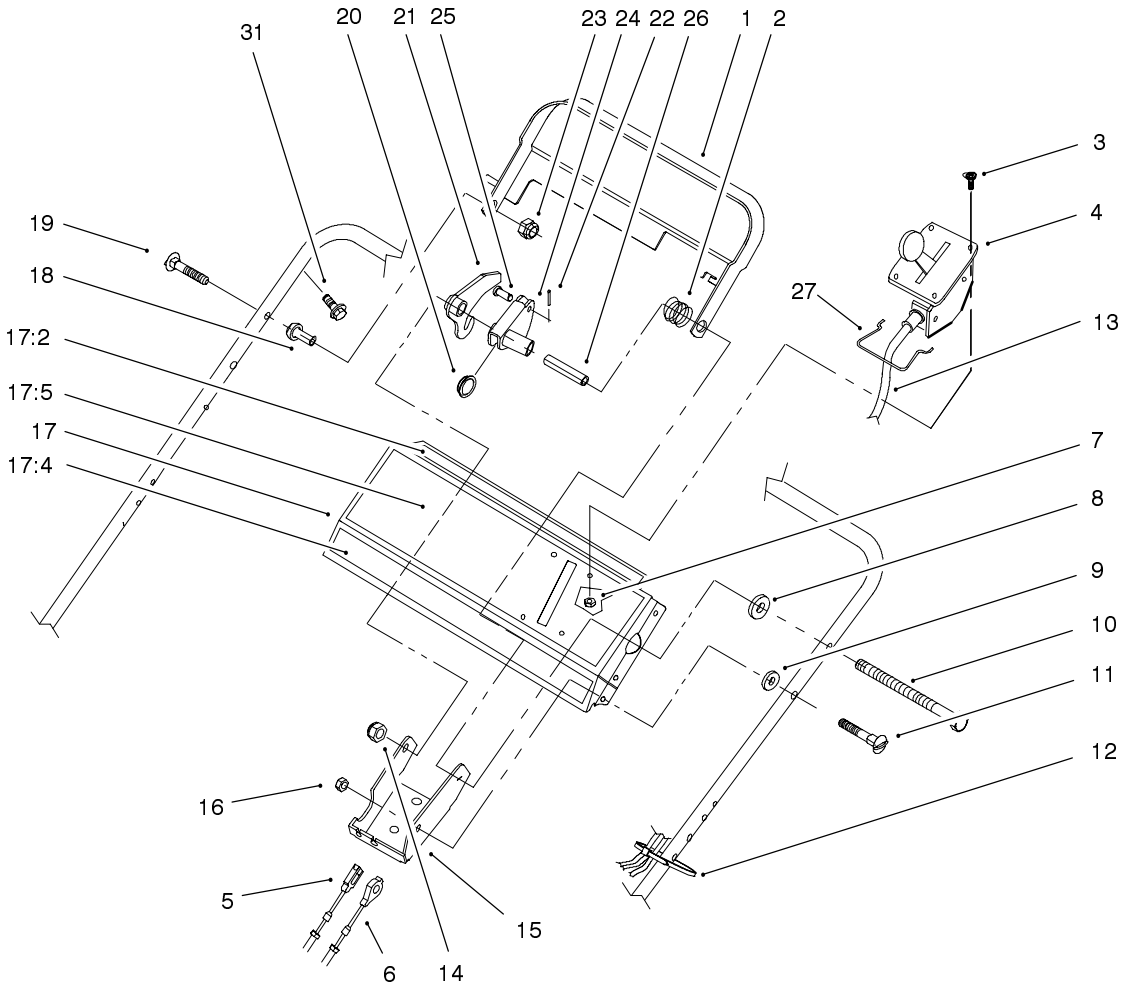


Sheet No.:5

Panel and Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	84-8940-03	1	Bar-Control
2	85-6750	1	Spring-Control
3	3250-12	4	Screw-PPH
4	85-6770	1	Control-Throttle
5	84-9120	1	Cable-Traction
6	84-9110	1	Cable-Clutch
7	3296-2	4	Nut-Lock
8	71-9310	1	Spacer
9	71-9320	1	Spacer
10	322-19	1	Screw-HH
11	46-6430	1	Screw-Handle
12	3290-378	1	Tie-Cable
13	100-2839	1	Cable-Throttle
14	3296-29	1	Nut-Lock
15	92-1778-03	1	Bracket-Control
16	3296-42	1	Nut-Lock NI
17	14-7709	1	Panel W/Decals
17:2	63-9060	1	Decal - Danger Panel
17:4	85-6720	1	Decal-Panel, Proline
17:5	85-6730	1	Decal-Control Panel
18	49-1631	1	Spacer-Support
19	17-9427	1	Screw
20	86-9320	1	Bushing-Flange
21	84-9000	1	Lever-Traction
22	3272-1	1	Pin-Cotter
23	3296-58	1	Nut-Lock NI

Ref. No.	Part No.	Qty.	Description
24	84-8990	1	Lever-Bbc
25	84-9040	1	Pin-Cable
26	84-9030	1	Spacer-Bracket, Control
27	85-6780	1	Retainer-Cable, Throttle
31	32104-76	6	Screw

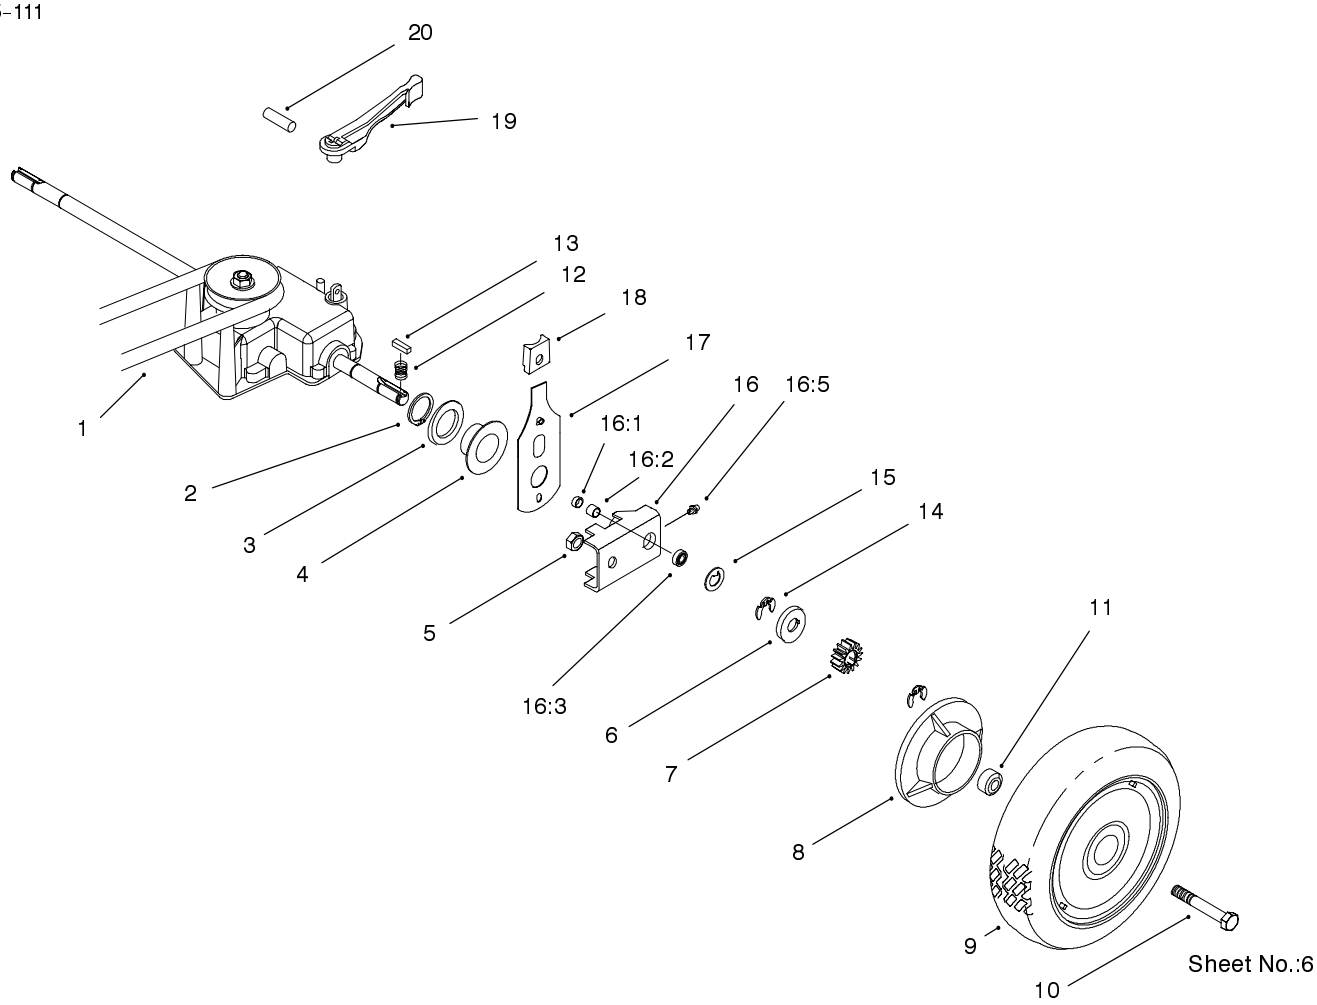


Gear Case and Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Conelock
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel & Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk-Drive, Special
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	74-1960	1	Lever-Shift
20	32121-99	1	Pin-Coil
*99	100-2512	1	Tube-Oil Drain

Ref. No.	Part No.	Qty.	Description

* Not illustrated

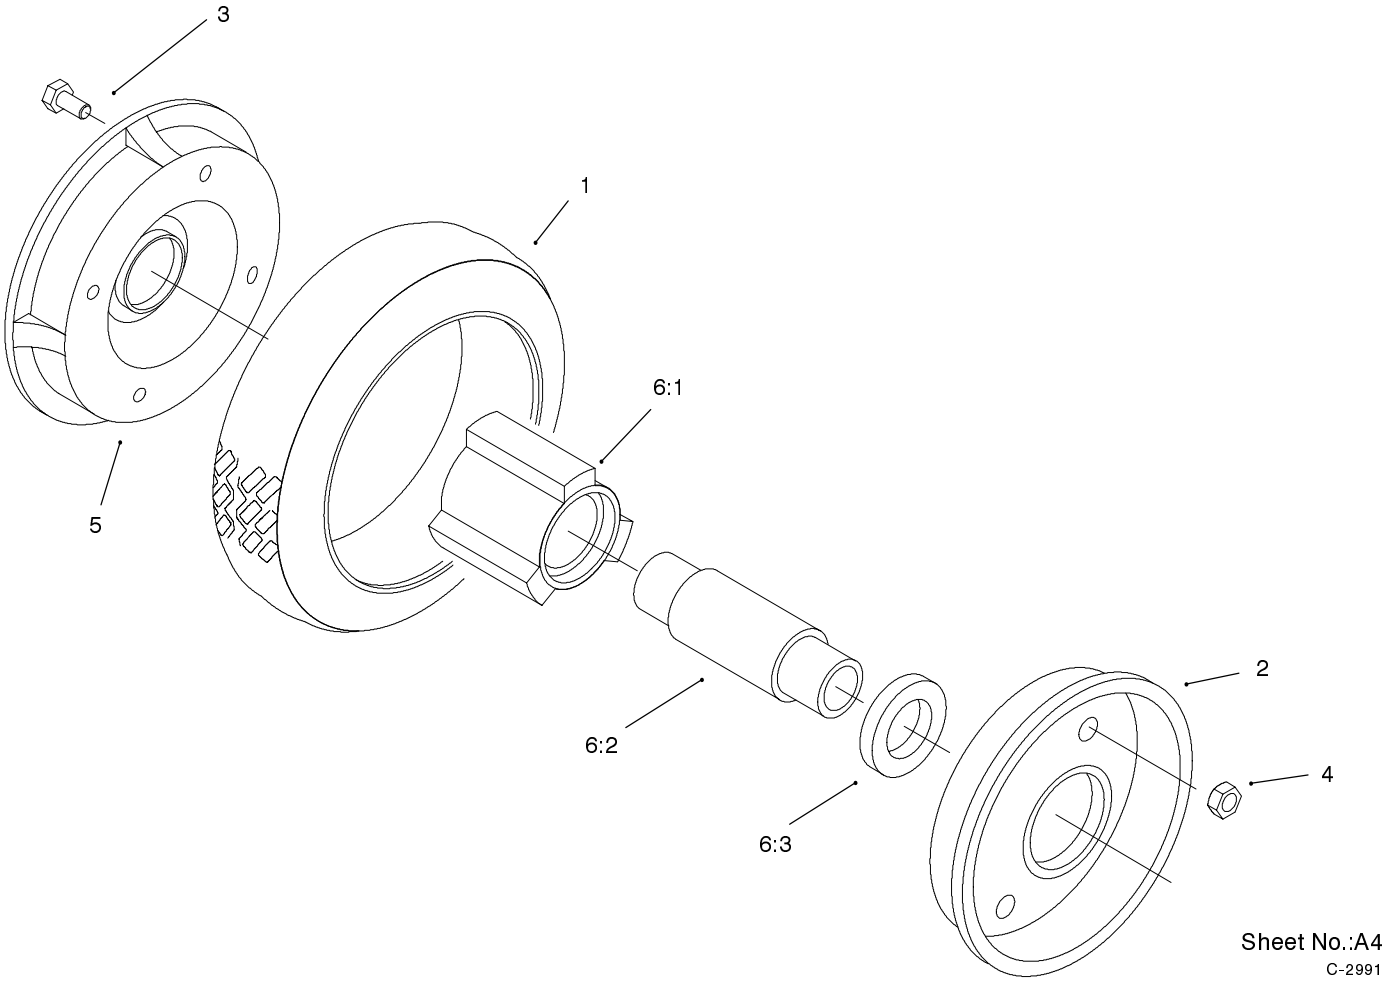


Sheet No.:A4
C-2991

Rear Wheel and Tire Assembly No. 74-1720

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	1	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock NI
5	92-4957-06	1	Wheel Half/Gear ASM
☆6		1	Hub & Bearing ASM
6:1	52-2410	1	Hub-Bearing
6:2	52-2440	1	Spacer-Bearing
6:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description

☆ Not serviced

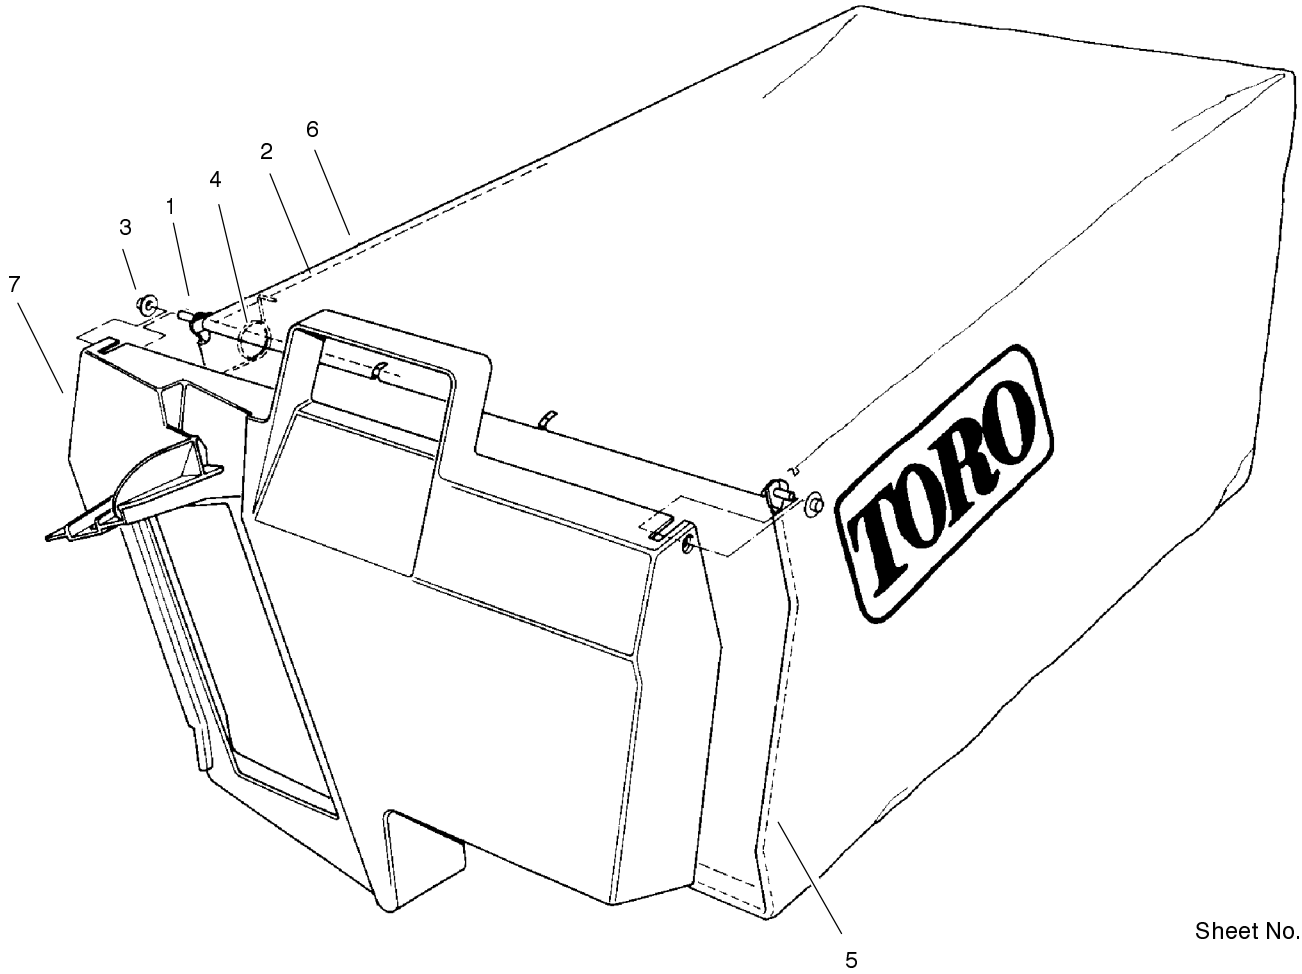


Sheet No.:A5

Grass Bag Assembly No. 99-2535

Ref. No.	Part No.	Qty.	Description
	99-2535	1	Grass Bag ASM
1	33-4820	1	Hinge-Door, Bag
2	42-4030	1	Frame-Bag, Upper
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	98-9225	1	Bag-Grass
7	48-2840	1	Door-Bag, Grass

Ref. No.	Part No.	Qty.	Description

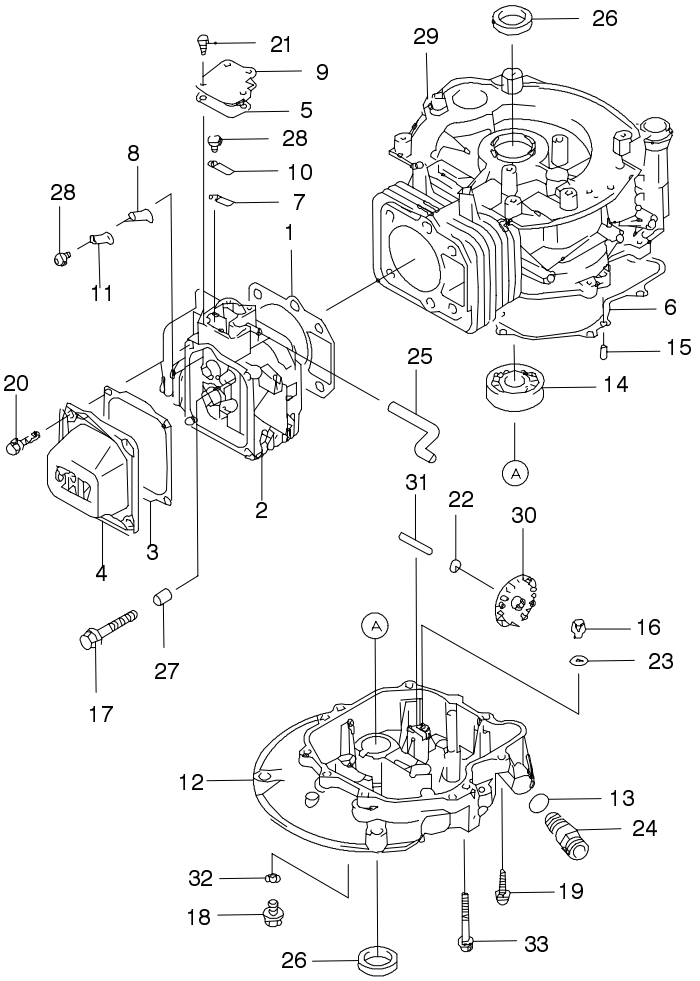


Sheet No.:3

Cylinder and Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2742	1	Gasket-Head
2	100-2743	1	Head-Cylinder, Complete
3	100-2744	1	Gasket-Case, Rocker
4	100-2745	1	Case-Rocker
5	100-2746	1	Cover-Gasket
6	100-2747	1	Gasket-Cover, Crankcase
7	100-2748	1	Plate
8	100-2749	1	Plate
9	100-2779	1	Cover
10	100-2780	1	Valve
11	100-2781	1	Valve
12	100-2782	1	Cover-Crankcase
13	100-2840	1	O-Ring
14	100-2841	1	Bearing-Ball
15	93-8516	2	Pin
16	100-2842	1	Bolt
17	KW10035	4	Bolt-Flanged
18	KW10033	1	Bolt-Flanged
19	100-2610	6	Bolt-Flanged
20	100-2804	4	Bolt-Flanged
21	100-2609	4	Bolt-Flanged
22	100-2843	1	Washer
23	100-2844	1	Washer
24	100-2854	1	Plug

Ref. No.	Part No.	Qty.	Description
25	100-2846	1	Tube
26	100-2847	2	Seal-Oil
27	100-2848	2	Pin
28	93-8549	2	Screw
29	100-2849	1	Crankcase-Complete
30	99-6728	1	Slinger-Oil
31	99-6729	1	Shaft
32	99-6730	1	Gasket
33	100-2855	1	Bolt-Flanged

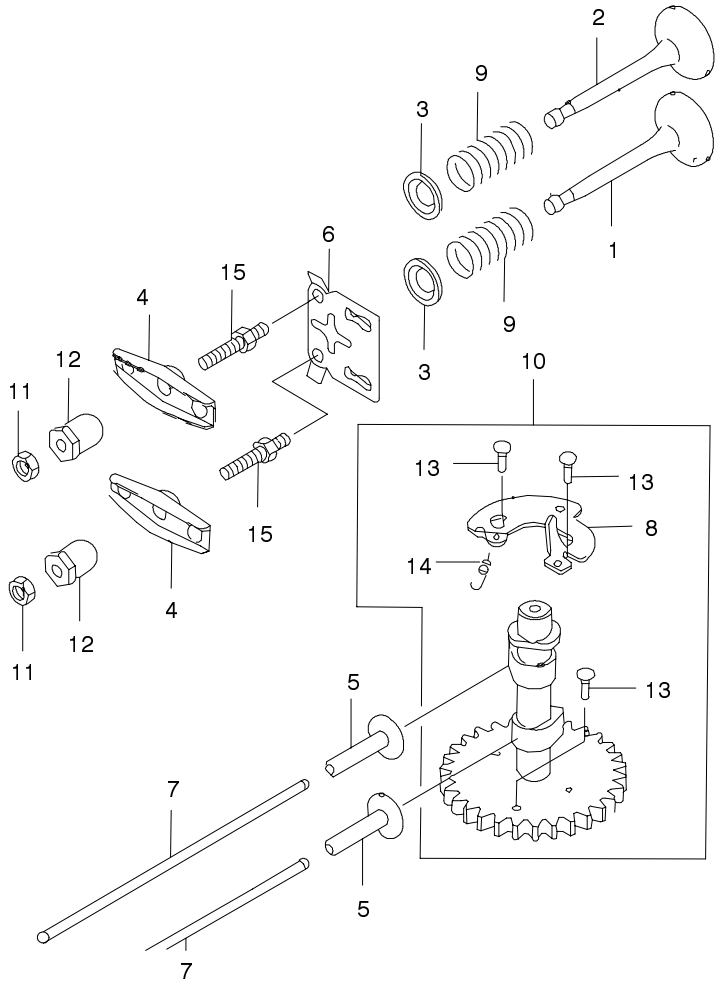


Sheet No.:4

Valve and Camshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2727	1	Valve-Intake
2	100-2728	1	Valve-Exhaust
3	100-2729	2	Retainer-Spring, Valve
4	100-2730	2	Arm-Rocker
5	100-2731	2	Tappet
6	100-2732	1	Guide
7	100-2733	2	Rod-Push
8	100-2734	1	Decompressor
9	100-2735	2	Spring-Valve, Engine
10	100-2736	1	Camshaft-Complete
11	93-8533	2	Nut
12	93-8534	2	Nut
13	100-2739	3	Pin
14	100-2740	1	Spring
15	100-2741	2	Bolt

Ref. No.	Part No.	Qty.	Description

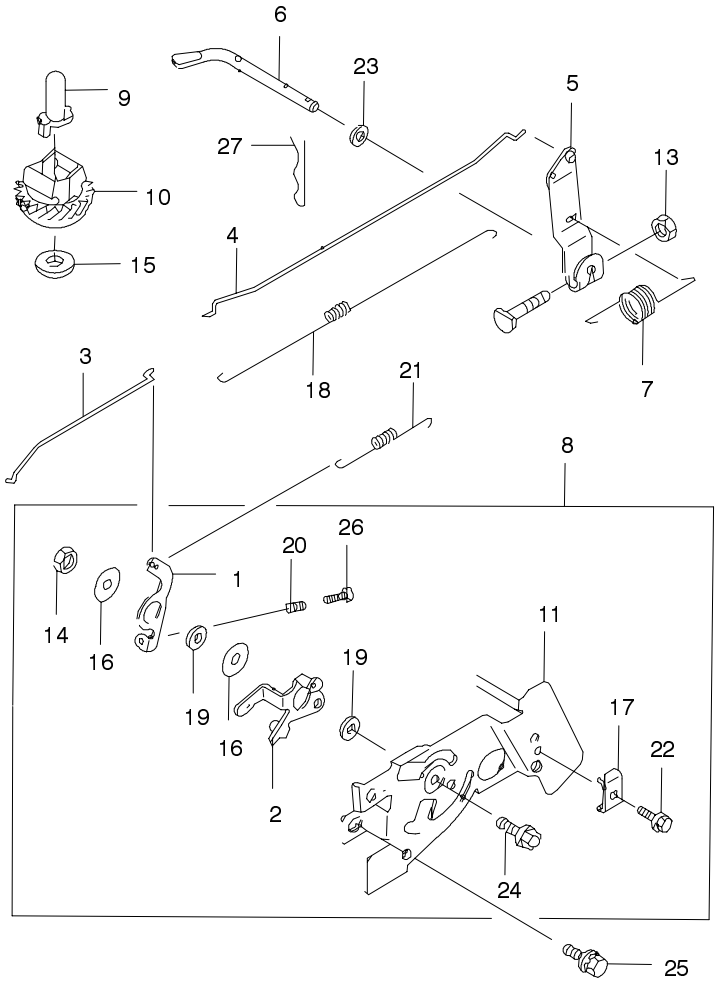


Sheet No.:5

Control Linkage Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2700	1	Lever
2	100-2701	1	Lever
3	100-2702	1	Link-Choke
4	100-2703	1	Link
5	100-2704	1	Arm ASM
6	100-2705	1	Arm-Pivot
7	100-2706	1	Spring-Governor
8	100-2707	1	Control Panel ASM
9	100-2708	1	Sleeve
10	93-8611	1	Governor ASM
11	100-2710	1	Panel-Control
*12	93-8608	1	Washer
13	93-8631	1	Nut
14	93-8595	1	Nut
15	94-6842	1	Washer
16	100-2715	2	Washer
17	95-9849	1	Clamp
18	100-2717	1	Link-Spring
19	100-2718	2	Collar
20	93-8588	1	Spring
21	100-2720	1	Spring
22	95-9853	1	Bolt
23	93-8608	1	Washer
24	95-9837	1	Bolt - Flanged
25	100-2724	2	Bolt
26	100-2725	1	Screw-Pan
27	93-8607	1	Pin-Snap

* Not illustrated

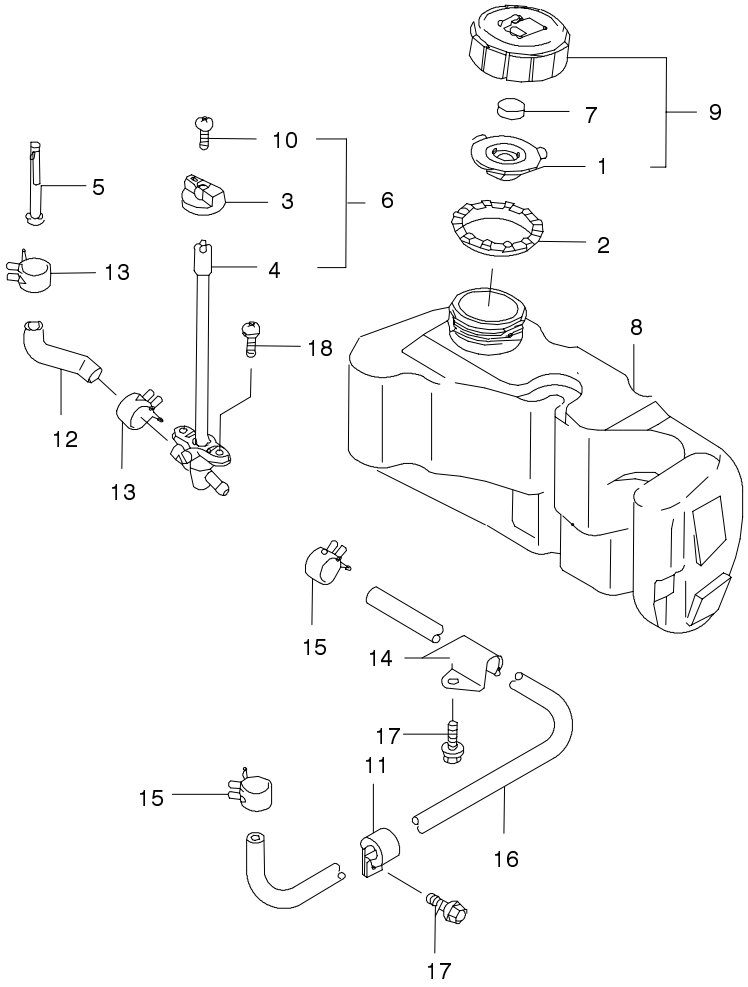


Sheet No.:6

Fuel Tank and Fuel Valve Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2808	1	Gasket
2	100-2809	1	Guide
3	100-2810	1	Lever
4	100-2811	1	Filter-Complete
5	100-2812	1	Filter-Fuel
6	100-2814	1	Valve - Fuel
7	100-2813	1	Element-Breather
8	100-2815	1	Tank-Fuel, Complete
9	100-2816	1	Tank Cap ASM
10	100-2817	1	Screw
11	100-2818	1	Clamp
12	100-2819	1	Tube
13	100-2820	2	Clamp
14	100-2821	1	Clamp
15	100-2822	2	Clamp
16	100-2823	1	Tube
17	100-2804	2	Bolt-Flanged
18	100-2825	2	Screw-Pan

Ref. No.	Part No.	Qty.	Description

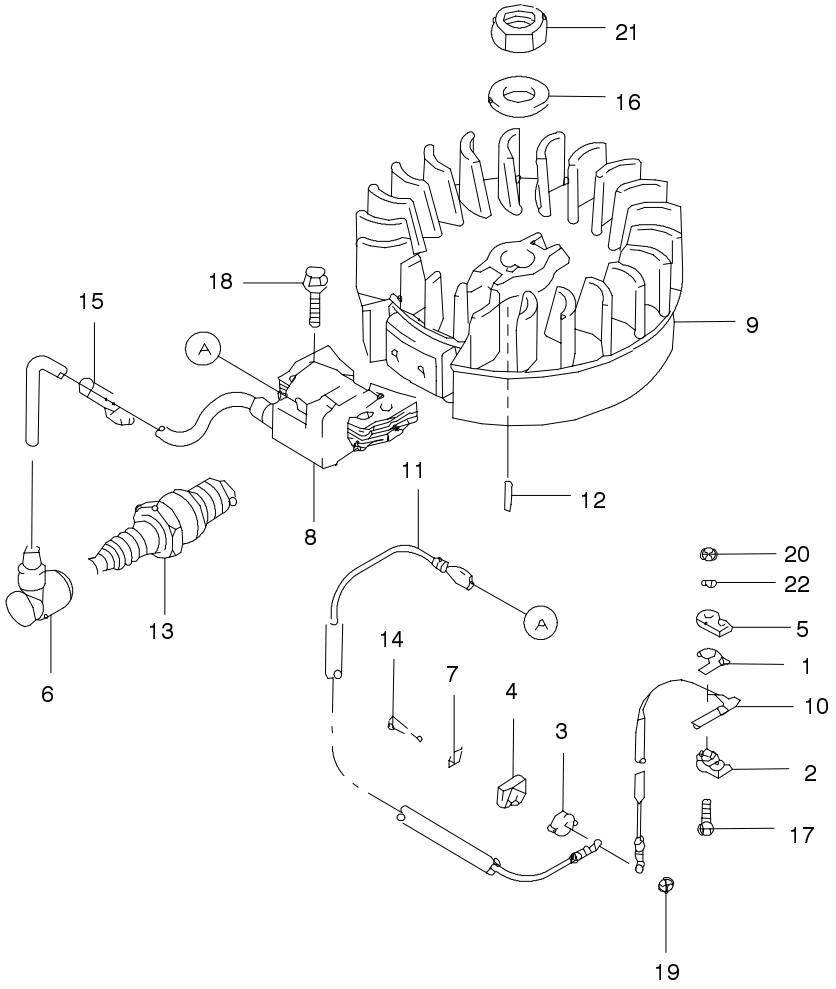


Sheet No.:7

Flywheel and Ignition Assembly

Ref. No.	Part No.	Qty.	Description
3	100-2652	1	Cover
4	100-2653	1	Insulator
6	KW10087	1	Plug-Cap
7	100-2796	1	Terminal
8	100-2657	1	Ignition Coil ASM
9	100-2658	1	Flywheel-Complete
11	100-2660	1	Wire-Lead
12	93-8571	1	Key
13	KW10676	1	Plug-Spark
14	100-2663	1	Bolt
15	100-2664	1	Clamp
16	100-2665	1	Washer
18	100-2610	2	Bolt-Flanged
19	100-2668	1	Nut-Hex
21	93-8568	1	Nut
23	100-2798	1	Washer-Plain

Ref. No.	Part No.	Qty.	Description

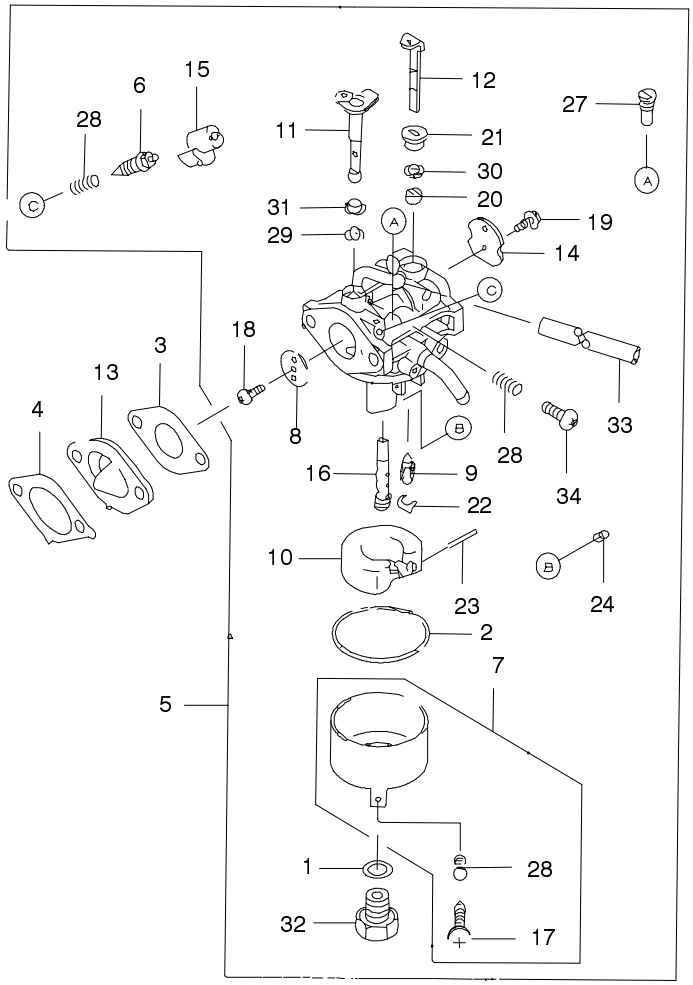


Sheet No.:8

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2611	1	Gasket
2	100-2612	1	Gasket
3	100-2613	1	Gasket-Carburetor
4	100-2614	1	Gasket-Insulator
5	100-2615	1	Carburetor ASM
6	100-2616	1	Screw-Pilot, Air
7	100-2617	1	Float-Chamber
8	100-2618	1	Valve-Throttle
9	100-2619	1	Valve-Float
10	100-2620	1	Float
11	100-2621	1	Shaft-Throttle, Carburetor
12	100-2622	1	Shaft-Choke, Carburetor
13	100-2623	1	Insulator
14	100-2624	1	Valve
15	100-2625	1	Limiter
16	100-2626	1	Nozzle-Main
17	100-2627	1	Screw
18	100-2628	1	Screw
19	100-2629	2	Screw
20	100-2630	1	Collar
21	100-2631	1	Collar
22	KW10297	1	Clip
23	100-2633	1	Pin
24	100-2634	1	Jet-Main

Ref. No.	Part No.	Qty.	Description
27	100-2635	1	Jet-Pilot
28	100-2636	3	Spring
29	100-2637	1	Seal
30	100-2638	1	Seal
31	100-2639	1	Collar
32	100-2640	1	Bolt
33	100-2641	1	Tube
34	100-2642	1	Screw-Pan

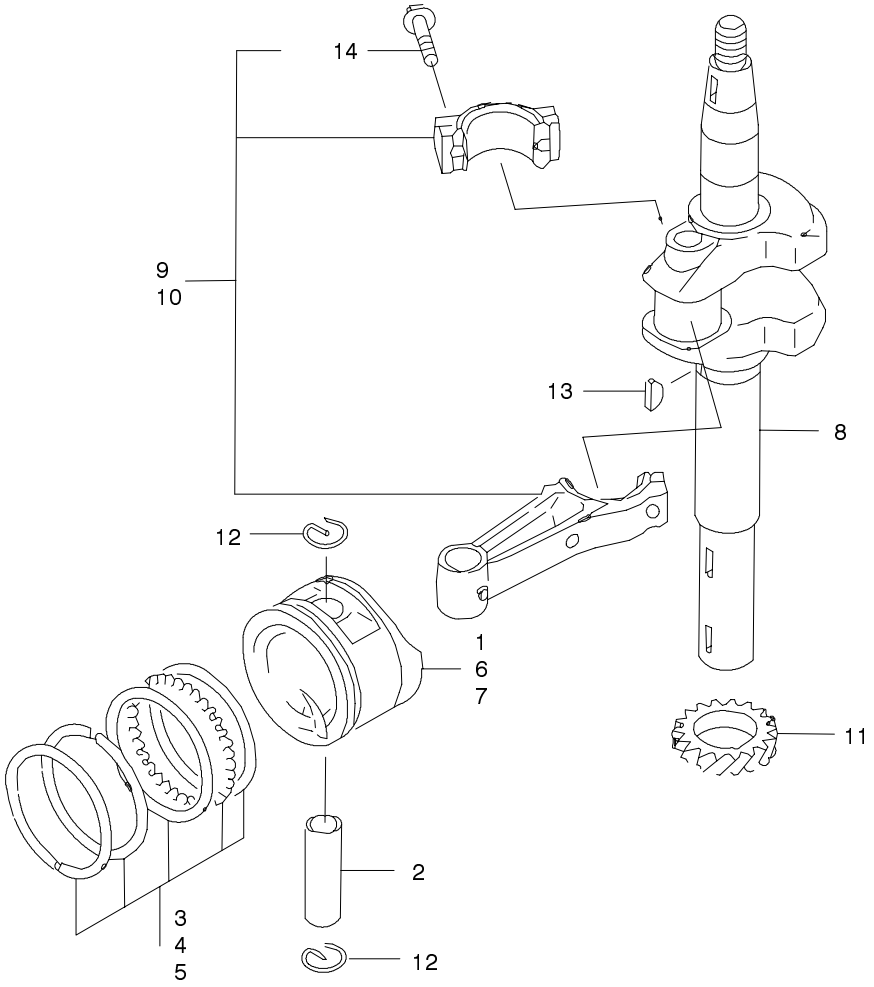


Sheet No.:9

Piston and Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2672	1	Piston-Engine
2	100-2673	1	Pin-Piston
3	100-2674	1	Set-Ring, Piston
4	100-2675	1	Set-Ring, Piston-L0.25
5	100-2676	1	Set-Ring, Piston-L0.50
6	100-2677	1	Piston-Engine, L0.25
7	100-2678	1	Piston-Engine, L0.50
8	100-2828	1	Crankshaft
9	100-2680	1	Connecting Rod ASM
10	100-2681	1	Connecting Rod ASM (U/S=0.50)
11	100-2682	1	Gear-Helical
12	100-2683	2	Ring-Snap
13	93-8526	1	Key
14	93-8527	2	Bolt-Rod

Ref. No.	Part No.	Qty.	Description

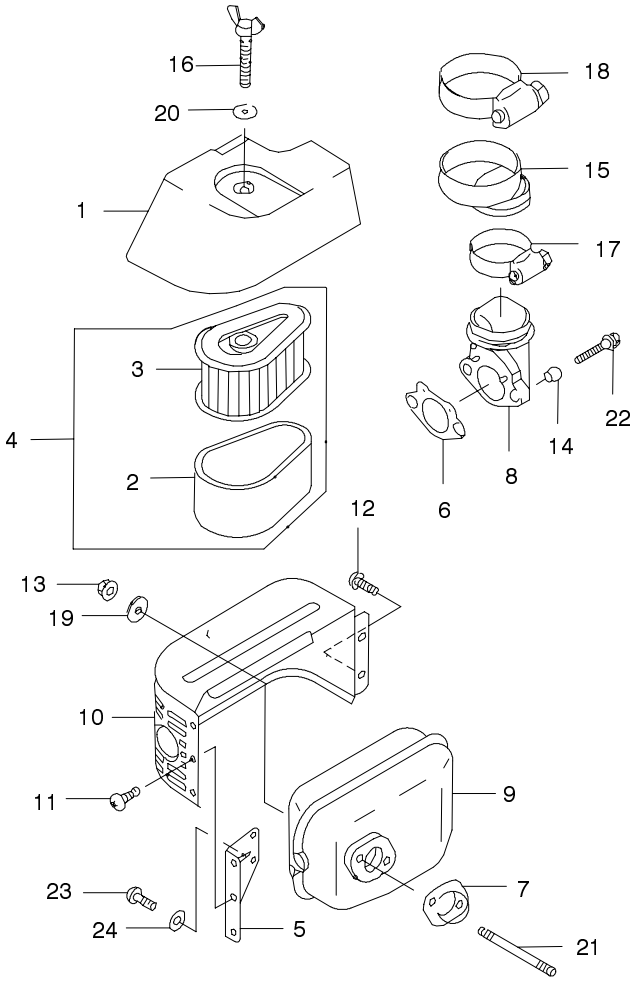


Sheet No.:10

Air Filter and Muffler Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2691	1	Cap-Filter, Air
2	100-2692	1	Element-Filter, Air
3	100-2693	1	Element-Filter, Air
4	100-2694	1	Air Filter Element ASM
5	100-2695	1	Bracket
6	100-2696	1	Gasket-Pipe, Intake
7	100-2697	1	Gasket-Muffler
8	100-2698	1	Pipe-Intake
9	100-2699	1	Muffler-Complete
10	100-2750	1	Cover-Muffler
11	93-8549	3	Screw
12	95-9716	2	Screw
13	93-8631	2	Nut
14	100-2754	2	Spacer
15	100-2755	1	Tube
16	100-2756	1	Bolt
17	100-2757	1	Clamp
18	100-2758	1	Clamp
19	100-2759	2	Washer
20	100-2760	1	Washer
21	100-2761	2	Bolt-Stud
22	100-2762	2	Bolt
23	100-2763	2	Screw-Pan
24	93-8639	2	Washer

Ref. No.	Part No.	Qty.	Description

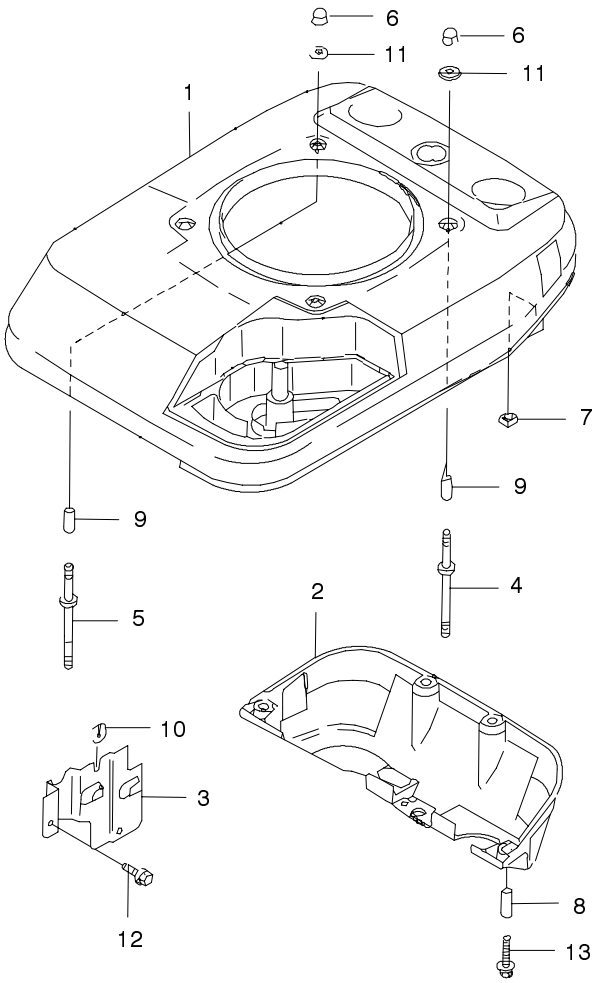


Sheet No.:11

Cover and Cooling Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2600	1	Cover-Upper
2	100-2793	1	Cover-Lower
3	100-2794	1	Cover
4	100-2601	3	Stud
5	100-2602	1	Stud
6	100-2603	4	Nut
7	100-2604	4	Nut
8	100-2606	4	Spacer
9	100-2605	4	Spacer
10	100-2607	1	Grommet
11	100-2760	4	Washer
12	100-2609	2	Bolt-Flanged
13	100-2610	4	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

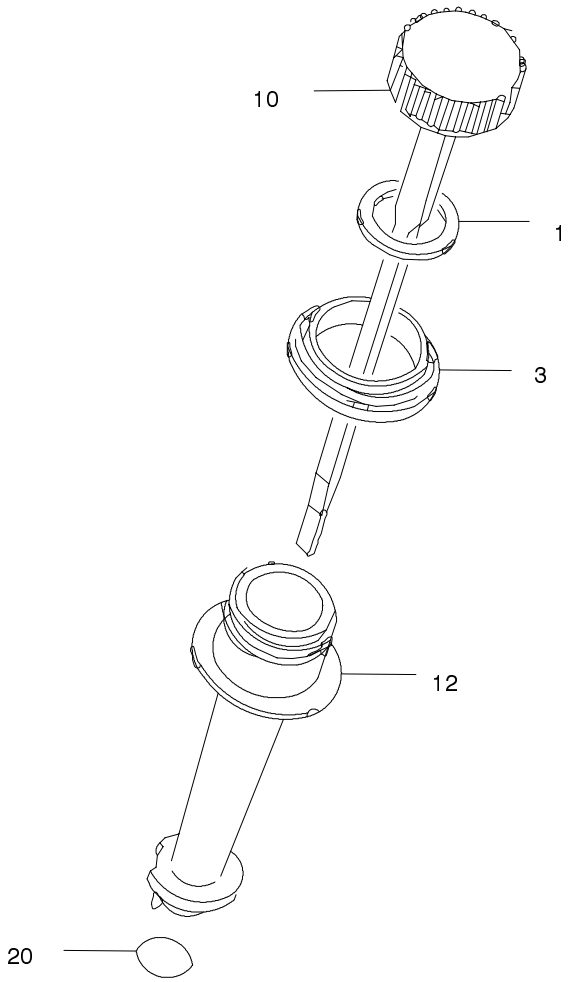


Sheet No.:12

Dipstick Assembly

Ref. No.	Part No.	Qty.	Description
1	KW10010	1	Gasket
3	100-2687	1	Guide
10	100-2688	1	Gauge
12	100-2689	1	Filler
20	100-2690	1	O-Ring
*21	100-2831	1	O-Ring
*22	100-2830	1	Cover
*23	100-2804	3	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

* Not illustrated

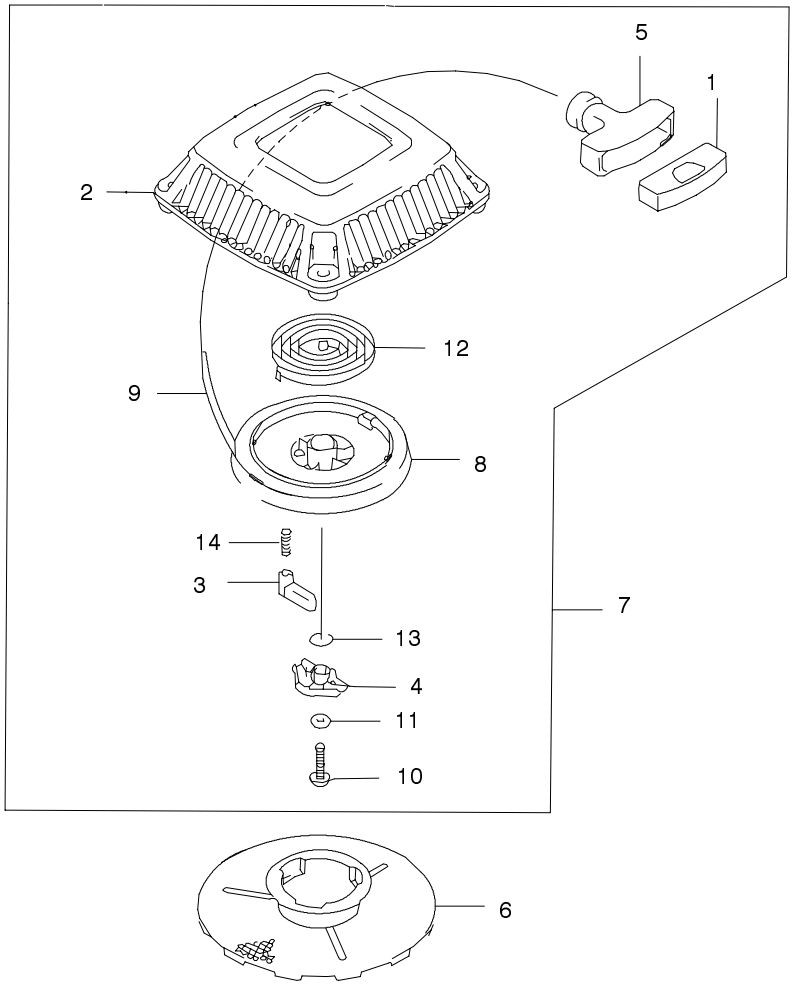

Sheet No.:13

Recoil Starter Assembly

Ref. No.	Part No.	Qty.	Description
1	94-9044	1	Cap - Grip
2	100-2766	1	Holder
3	100-2767	1	Pawl-Starter, Recoil
4	100-2768	1	Retainer-Spring
5	100-2769	1	Grip-Starter, Recoil
6	100-2770	1	Pulley-Starting
7	100-2837	1	Starter-Recoil
8	100-2772	1	Reel-Starter, Recoil
9	100-2773	1	Rope
10	100-2774	1	Screw
11	100-2775	1	Washer
12	100-2776	1	Spring-Recoil
13	100-2777	1	Spring
14	93-8555	1	Spring-Return

Ref. No.	Part No.	Qty.	Description


TORO®