Form No. 3325-259

Mid–Size Mower

ProLine Gear 13HP with 32″ Side Discharge Mower

Model No. 30252—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved


Contents

Description	Page
Fuel Tank and Idler Bracket Assembly	3
Transmission and Idler Pulley Assembly	4
Brake, Wheel Pulley and Wheel Assembly	5
Handle and Control Panel Assembly	6
Engine Assembly	7
Clutch/Brake Assembly No. 54–3200	8
Carrier Frame Assembly	9
Deck Assembly	10
Spindle Assembly	11
Decal and Mulcher Cover Assembly	12
Crankcase (Kohler CV13T–PS–21524)	13
Oil Pan / Lubrication (Kohler CV13T–PS–21524)	14
Cylinder Head, Valves And Breather (Kohler CV13T–PS–21524)	15
Ignition / Electrical (Kohler CV13T–PS–21524)	16
Blower Housing And Baffles (Kohler CV13T–PS–21524)	17
Starter System (Kohler CV13T–PS–21524)	18
Fuel System (Kohler CV13T–PS–21524)	19
Engine Controls (Kohler CV13T–PS–21524)	20
Air Cleaner (Kohler CV13T–PS–21524)	21
Exhaust (Kohler CV13T–PS–21524)	22

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

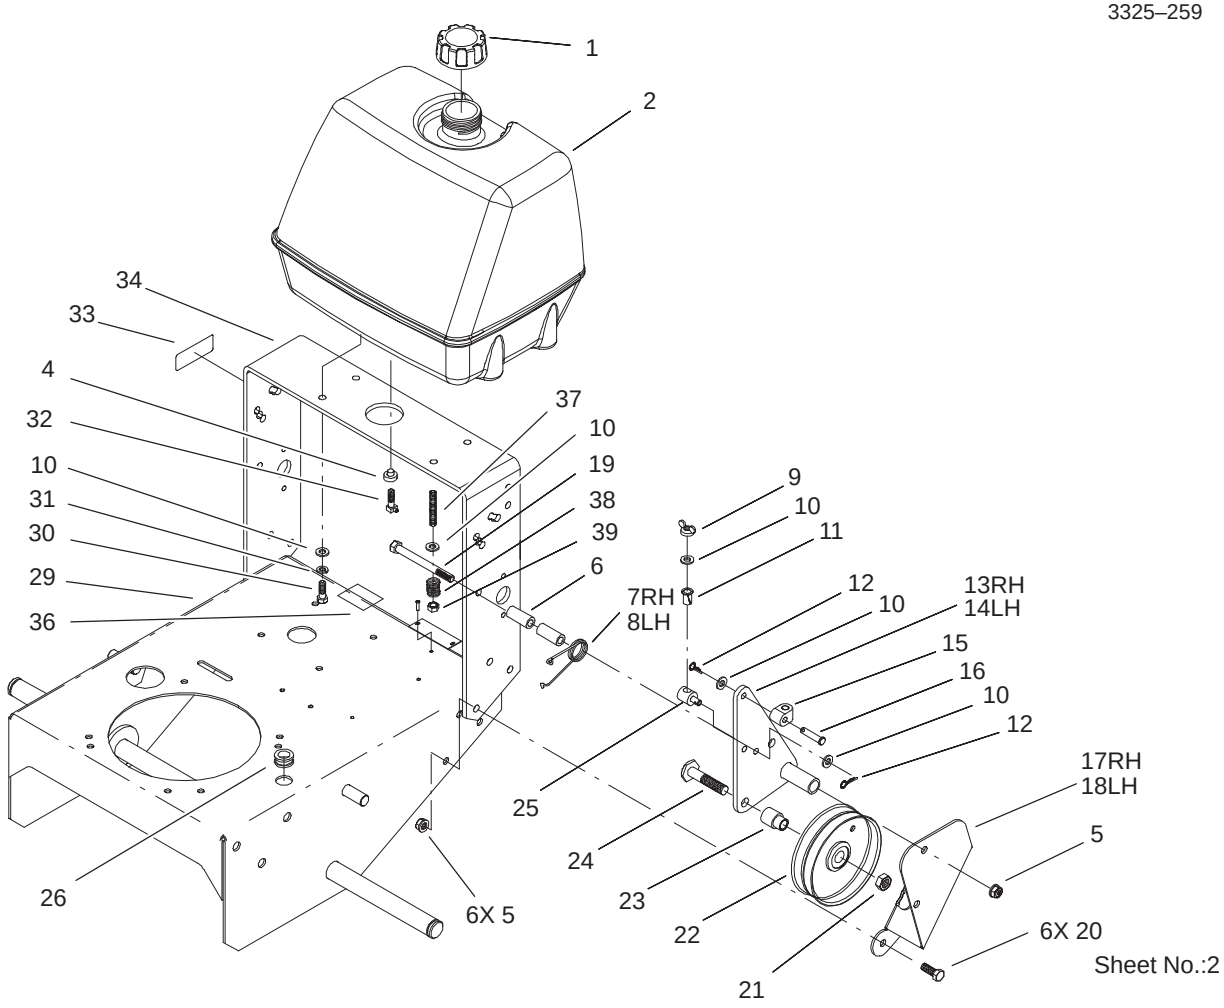

Fuel Tank and Idler Bracket Assembly

Ref. No.	Part No.	Qty.	Description
1	55–3570	1	Gas Cap ASM
2	1–323551	1	Tank–Fuel
4	1–513645	1	Bushing–Valve, Fuel
5	3296–39	8	Nut–Lock, NI
6	74–0040	4	Spacer–Idler Pivot
7	51–4370	1	Spring–RH Torsion
8	51–4380	1	Spring–LH Torsion
9	32103–25	2	Nut–Wing
10	3256–23	10	Washer–Flat
11	52–2890	2	Bushing–Nylon
12	3290–307	4	Pin–Hair
13	74–0230–01	1	Bracket–RH Idler
14	74–0220–01	1	Bracket–LH Idler
15	74–0521	2	Fitting–Rod
16	283–6	2	Pin–Clevis
17	67–6370–01	1	Bracket–RH Support
18	67–6380–01	1	Bracket–LH Support
19	323–16	2	Screw–HH
20	323–6	6	Screw–HH
21	3296–23	2	Nut–Lock, NI
22	95–2800	2	Pulley–Idler
23	95–2801	2	Spacer–Pulley
24	51–4450	2	Screw–Leveler
25	68–9690	2	Fitting–Rod
26	237–124	1	Grommet
29	93–1161–01	1	Frame

Ref. No.	Part No.	Qty.	Description
30	322–4	4	Screw–HH
31	3253–4	2	Washer–Lock
32	1–543277	1	Elbow–Tank, Fuel
33	95–2814	1	Decal–Fuel Shut Off
34	104–6308–01	1	Frame–Rear
36	98–0776	1	Decal–Caution
37	104–8121	2	Stud–Threaded
38	1–633349	2	Spring–Tank, Fuel
39	3296–47	2	Nut–Lock, NI

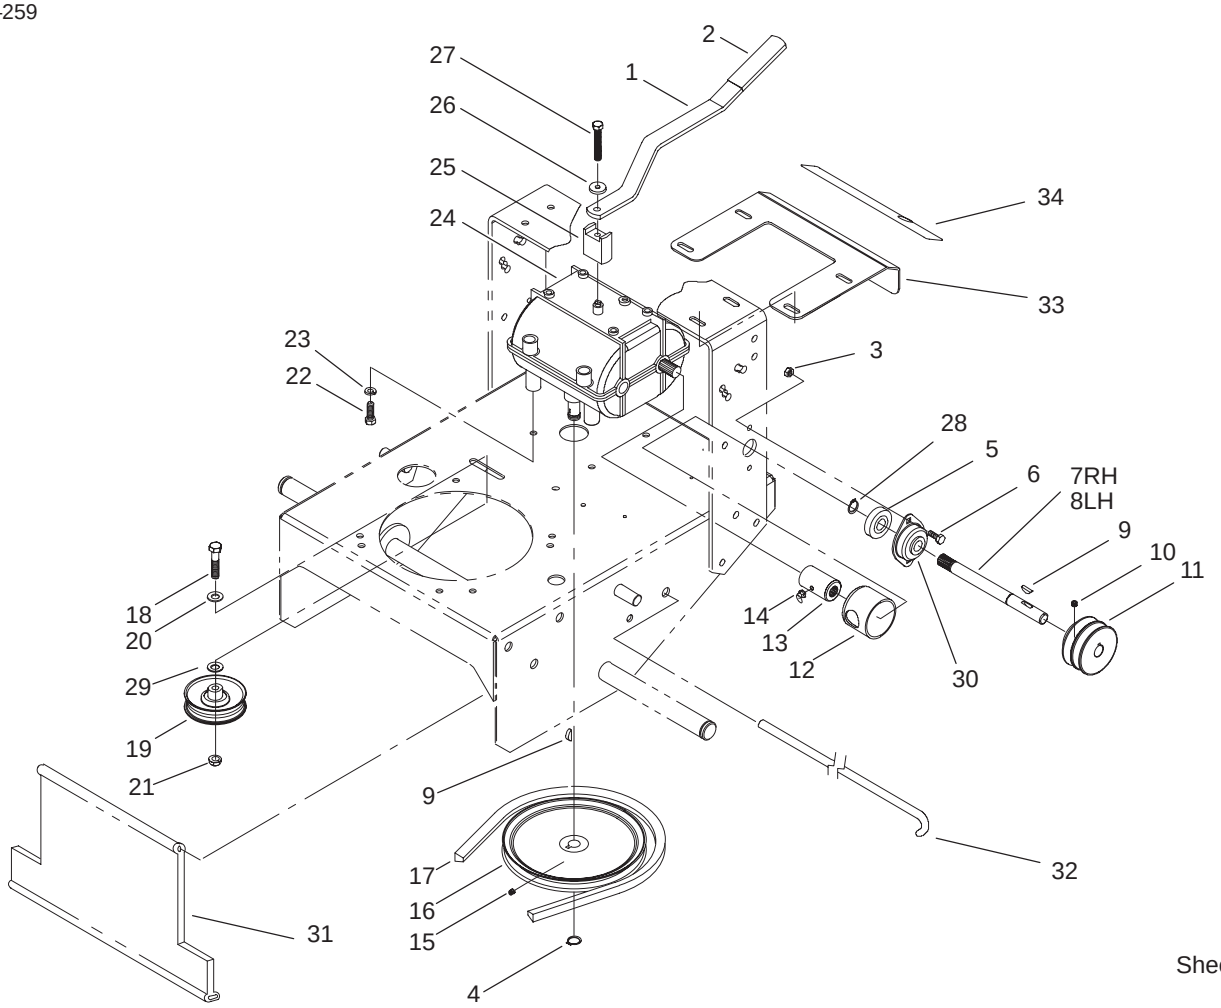


Sheet No.:3

Transmission and Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	74–0320–01	1	Lever–Shift
2	47–1970	1	Grip–Engagement
3	3296–42	4	Nut–Lock, NI
4	32120–64	1	Ring–Snap, External
5	1–323252	2	Bearing–Shaft, Transmission
6	321–4	4	Screw–HH
7	98–0788	1	Shaft–Extension, RH
8	98–0787	1	Shaft–Extension, LH
9	3257–5	3	Key–Woodruff
10	3245–3	2	Screw–Hex Socket Set
11	74–0480	2	Drive Pulley Assembly
12	51–4220	2	Guard–Coupler
13	98–0789	2	Coupler
14	302–5	2	Fitting–Grease
15	3245–1	1	Screw–Set, HSH
16	51–4190	1	Pulley–Driven
17	26–9671	1	V–Belt
18	323–9	1	Screw–HH
19	51–4810	1	Pulley–Idler
20	3256–24	1	Washer–Flat
21	32128–21	1	Nut–HF
22	322–2	4	Screw–HH
23	3253–4	4	Washer–Lock
24	98–0791	1	Transmission


Ref. No.	Part No.	Qty.	Description
25	72–2190	1	Mount–Shift Lever
26	7–5461	1	Spacer
27	329–10	1	Screw–HH
28	32151–62	2	Ring–Retaining
29	3256–24	1	Washer–Flat
30	1–323254	2	Flange–Output
31	95–1526	1	Shield–Trailing
32	95–1529	1	Rod–Shield
33	104–8552	1	Plate–Control
34	82–7750	1	Decal–Ground Speed

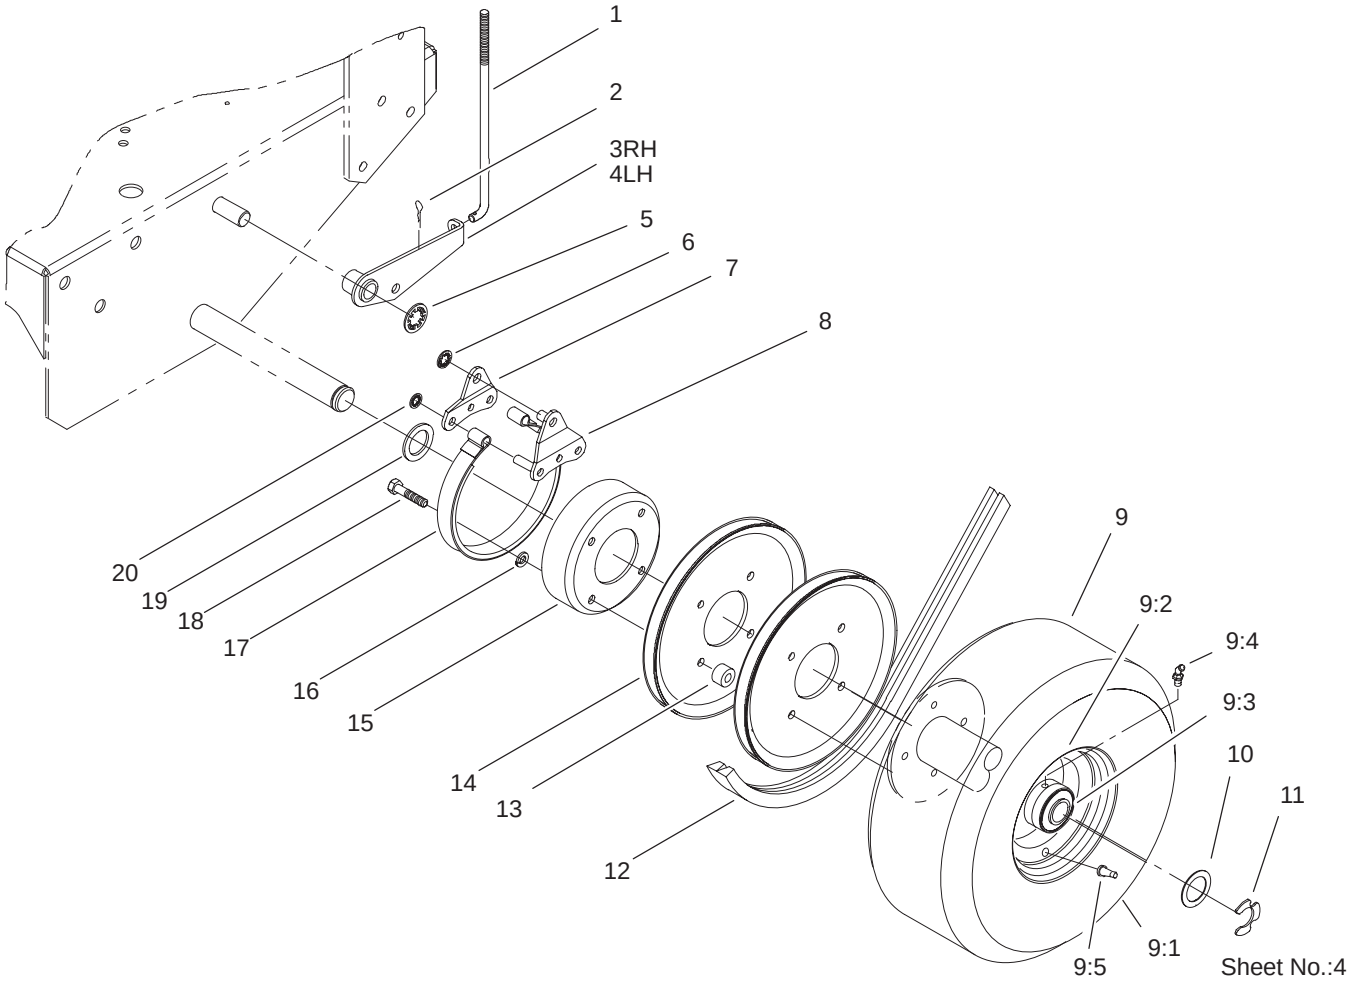

Brake, Wheel Pulley and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	51–4580	2	Rod–Brake
2	3290–307	2	Pin–Hair
3	67–6400–01	1	Arm–Brake, RH
4	67–6420–01	1	Arm–Brake, LH
5	32151–40	2	Ring–Retaining
6	32151–56	2	Ring–Retaining, External
7	51–4660–01	2	Plate–Brake Link
8	51–4650–01	2	Link–Brake
9	93–1163	2	Wheel & Tire Assembly
9:1	231–94	2	Tire–Front
9:2	93–1181	2	Wheel ASM
9:3	92–1746	4	Bearing–Ball
9:4	302–57	2	Fitting–Grease
9:5	232–27	2	Stem–Valve
10	10–8110	8	Washer–Thrust
11	32151–91	2	Ring–Retaining
12	51–4291	2	V–Belt
13	51–4170	8	Spacer–Pulley
14	51–4160–03	4	Pulley–Wheel
15	51–4180–03	2	Drum–Brake
16	3253–4	8	Washer–Lock
17	51–4700	2	Band–Brake
18	322–7	8	Screw–HH
19	51–4230	2	Washer–Wheel
20	32151–72	4	Ring–Retaining

Ref. No.	Part No.	Qty.	Description

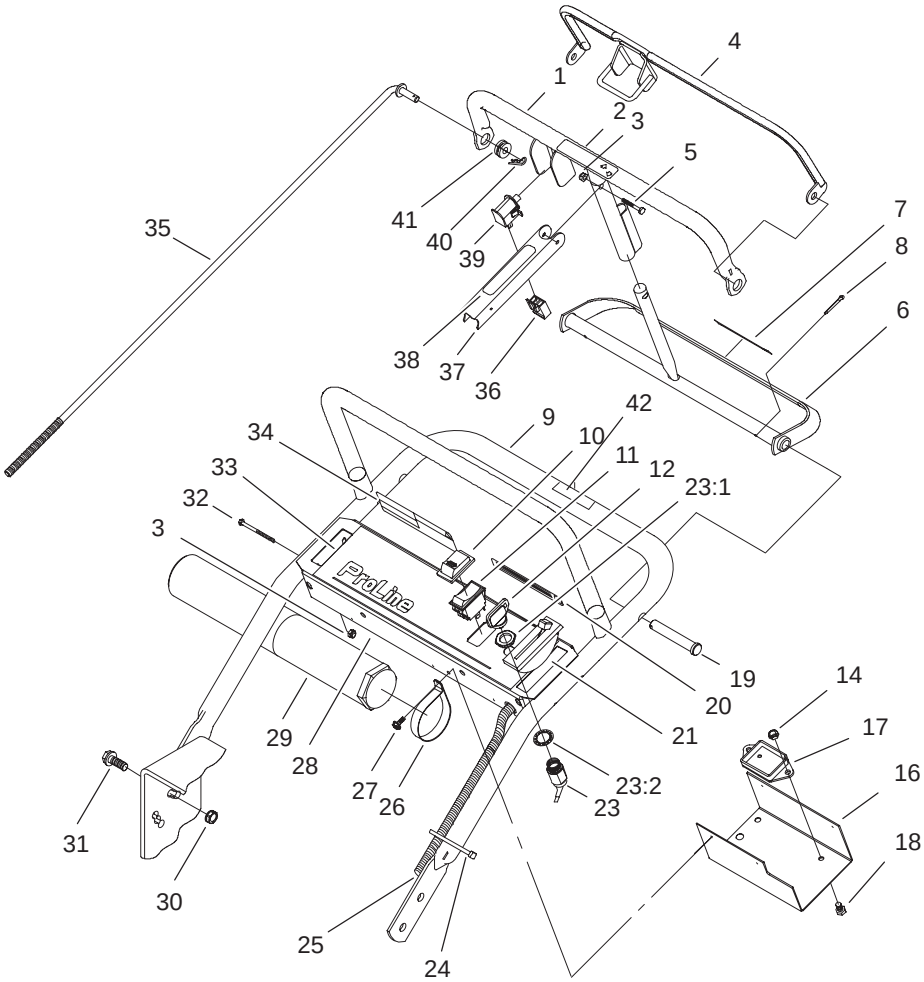


Sheet No.:5

Handle and Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	82–7690–03	1	Bar–Control
2	82–2290	1	Decal–Control Bar
3	3296–2	5	Nut–Lock
4	82–7680–03	1	Bail
5	32105–1	1	Screw–Shh
6	99–8501–03	1	Control–Pivot
7	82–2280	1	Decal–Reverse Handle
8	3272–11	2	Pin–Cotter
9	67–6440–01	1	Handle–Upper
10	82–3820	1	Boot–Switch
11	82–2300	1	Switch
12	63–8360	2	Key–Ignition
14	3296–42	1	Nut–Lock, NI
16	93–1187–03	1	Panel–Bottom
17	100–6170	1	Module–Delay
18	321–2	1	Screw–HH
19	283–55	2	Pin–Clevis
20	65–3090	1	Decal–Instruction
21	74–0630	1	Control–Throttle
23	29–5560	1	Switch–On Off
23:1	218–461	1	Nut–HH
23:2	3254–5	1	Washer–Lock, Internal
24	3290–378	2	Tie–Cable
25	100–3284	1	Harness–Wire, Recoil
26	2412–120	2	R–Clamp

Ref. No.	Part No.	Qty.	Description
27	32104–76	4	Screw
28	82–2180–03	1	Panel–Control
29	74–0720	1	Tube–Manual
30	32128–21	4	Nut–HF
31	3234–11	4	Screw–HHF
32	32105–14	4	Screw
33	82–7730	1	Decal–Control Panel
34	71–1280	1	Decal–Instruction, Safety
35	82–7632	2	Rod–Control
36	218–595	1	Connector–Body
37	51–4850–03	1	Lever–Parking Brake
38	52–2010	1	Decal–Parking Lever
39	82–2190	1	Switch–Bail
40	3290–307	2	Pin–Hair
41	237–141	2	Grommet–Rubber
42	98–4387	1	Decal–Protection, Ear

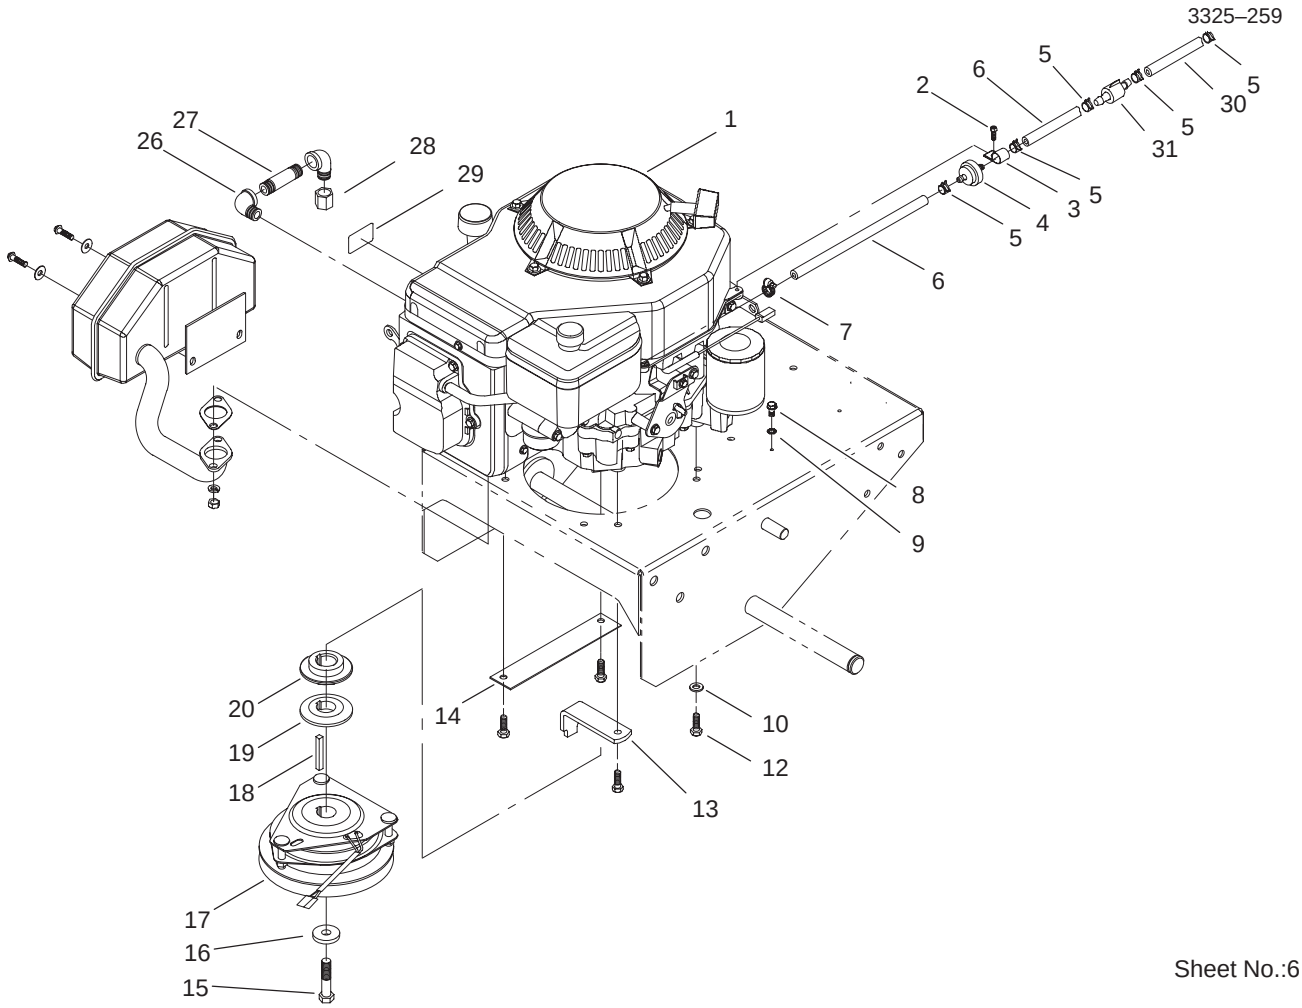


Sheet No.:6

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Engine–Kohler, Cv13t–Ps–21524
2	32144–19	1	Screw–Thread Forming
3	2412–87	1	Clamp–Cable
4	56–6360	1	Filter–Fuel
5	2412–98	5	Clamp
7	2412–108	1	Clamp–Worm
8	12–3270	1	Screw
9	3255–7	1	Washer–Lock/Ext
10	3256–23	1	Washer–Flat
12	33114–025	4	Screw–HH
13	51–4540–03	1	Retainer–Clutch
14	74–0930–01	1	Guard–Pulley
15	3212–9	1	Screw–HH
16	112843	1	Washer
17	54–3200	1	Clutch/Brake
18	608006	1	Key
19	74–0050	1	Sheave–Lower Half
20	74–0060	1	Sheave–Upper Half
26	74–0950	2	Elbow–Street, 90°
27	289–20	1	Nipple–Pipe
28	288–4	1	Cap–Pipe
29	63–8440	1	Decal–Hot Surface
31	1–603770	1	Valve–Fuel

Ref. No.	Part No.	Qty.	Description

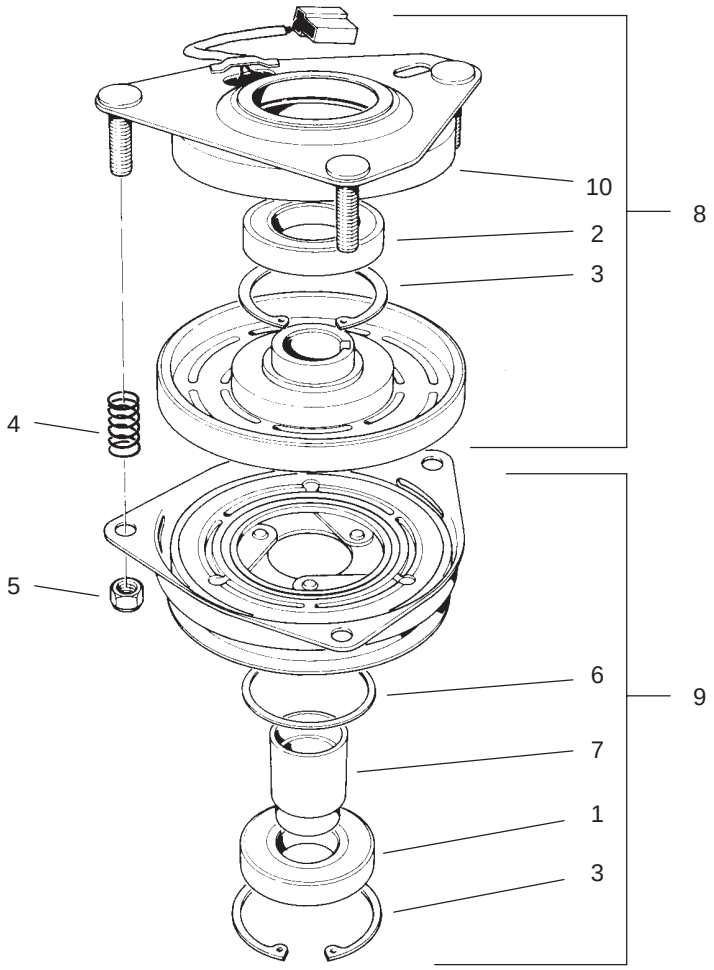


Sheet No.:A1
T–3726

Clutch/Brake Assembly No. 54–3200

Ref. No.	Part No.	Qty.	Description
1	251–291	1	Bearing–Pulley
2	251–292	1	Bearing–Field
3	44–8310	2	Ring–Retaining
4	44–8320	3	Spring
5	3296–6	3	Nut–Lock, NI
6	44–8330	1	Spacer–Pulley Bearing
7	44–8340	1	Collar–Bearing
8	44–8360	1	Field Coil–Rotor / Bearing ASM
9	44–8370	1	Armature / Pulley / Bearing ASM
10	54–0230	1	Field Bearing ASM

Ref. No.	Part No.	Qty.	Description

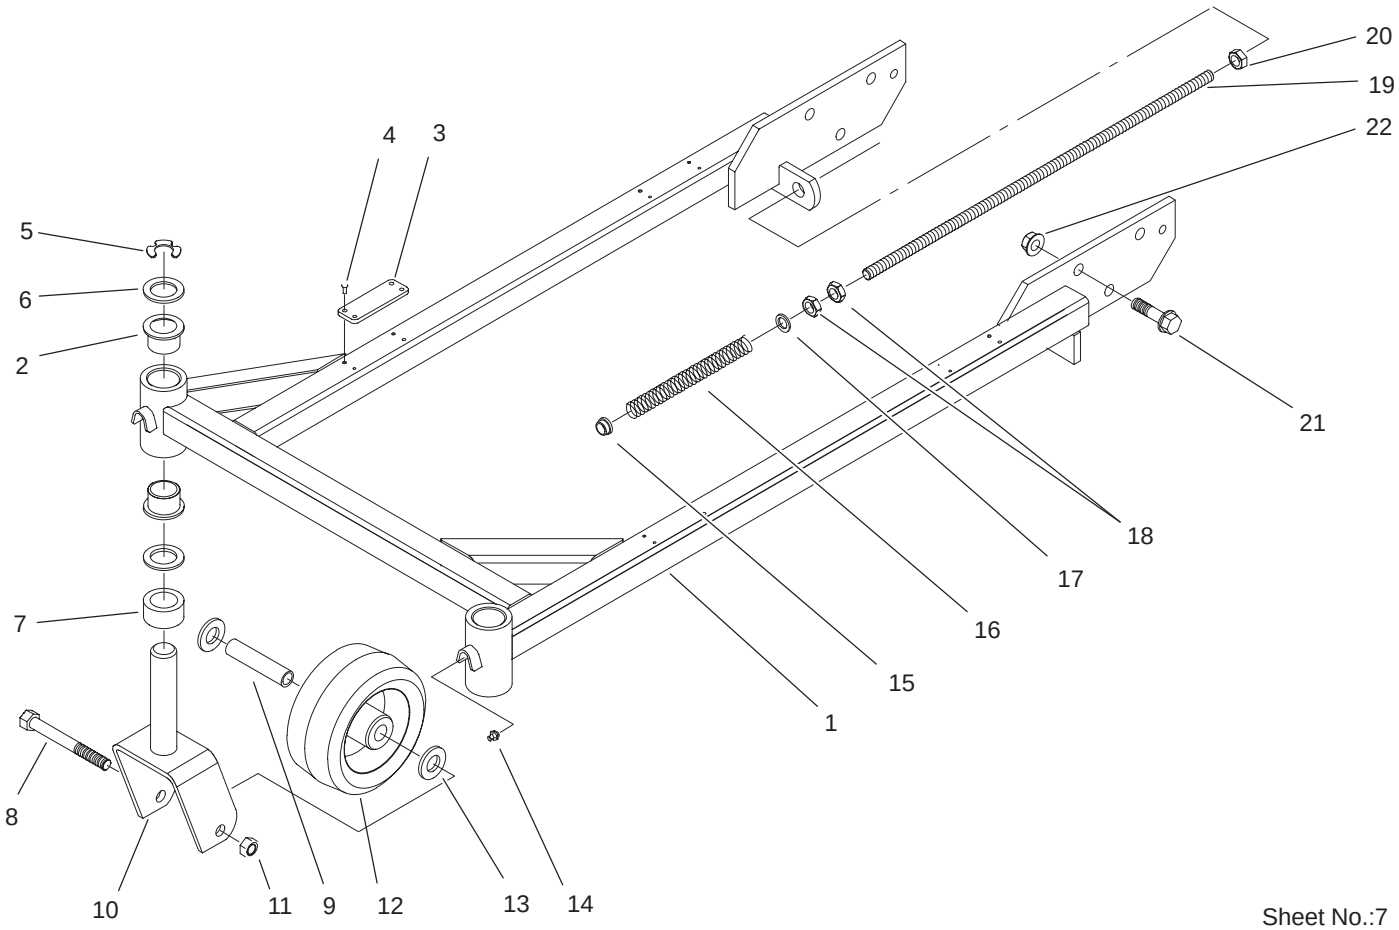


Sheet No.:7

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
☆1		1	Frame–Carrier
2	94–1291	4	Bushing–Special
3	74–0330	4	Pad–Rubber
4	3269–24	16	Rivet
5	32151–91	2	Ring–Retaining
6	3–6781	4	Washer–Thrust
7	93–1166	2	Spacer–Castor
8	325–18	2	Screw–HH
9	67–6220	2	Spanner
10	93–1164–01	2	Fork–Caster
11	32153–5	2	Nut–Lock
12	63–8400	2	Caster–Wheel & Tire
12:1	62–5580	2	Bearing–Outside
12:2	63–8580	1	Bearing–Roller
12:3	302–11	1	Fitting–Lube, 45°
13	67–6570	4	Spacer–Wheel
14	302–5	2	Fitting–Grease
15	256–156	2	Bushing–Flange
16	74–0290	2	Spring
17	41–8440	2	Washer
18	3218–5	4	Nut–Jam
19	74–0310	2	Shaft–Adjusting
20	3296–45	2	Nut–Lock, NI
21	3234–6	6	Screw–HHF
22	32128–23	6	Nut–HF

Ref. No.	Part No.	Qty.	Description

☆ Not serviced

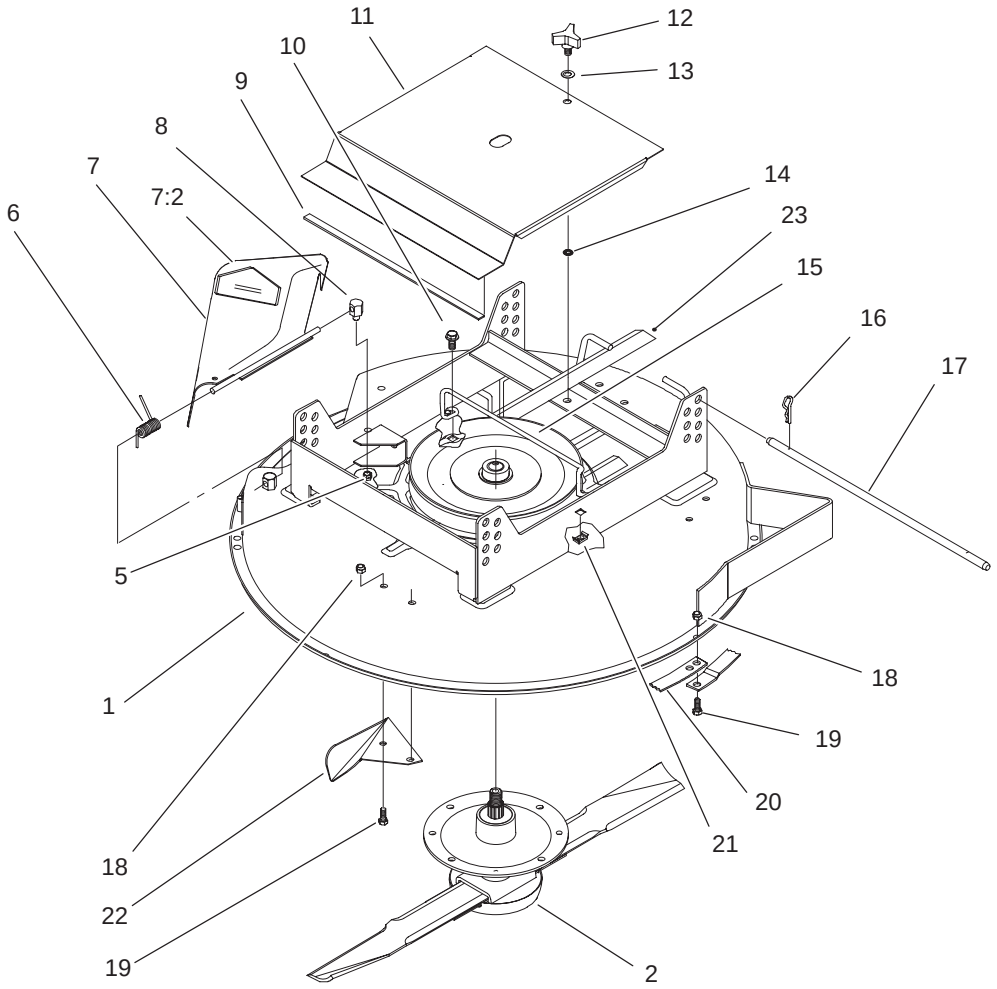


Sheet No.:8

Deck Assembly

Ref. No.	Part No.	Qty.	Description
☆1		1	Deck
☆2		1	Spindle ASM
5	32153–2	1	Nut–Lock
6	28–8010	1	Spring
7	44–5930	1	Deflector ASM
7:2	54–9220	1	Decal–Danger
8	28–7350	1	Post–Pivot
9	67–6180	1	Strip–Magnetic
10	3234–29	2	Screw–HHF
11	67–6160–01	1	Cover
12	62–6520	1	Knob
13	3256–24	1	Washer–Flat
14	32151–72	1	Ring–Retaining
15	74–0570	1	Guide–Belt
16	3290–355	4	Pin–Hair
17	67–6140	2	Rod–Support
19	322–4	24	Screw–HH
20	92–5419–03	4	Ring–Recycler
21	3290–496	2	Nut–Retainer
22	80–2630–03	4	Kicker
23	67–6920	1	V–Belt

Ref. No.	Part No.	Qty.	Description

☆ Not serviced

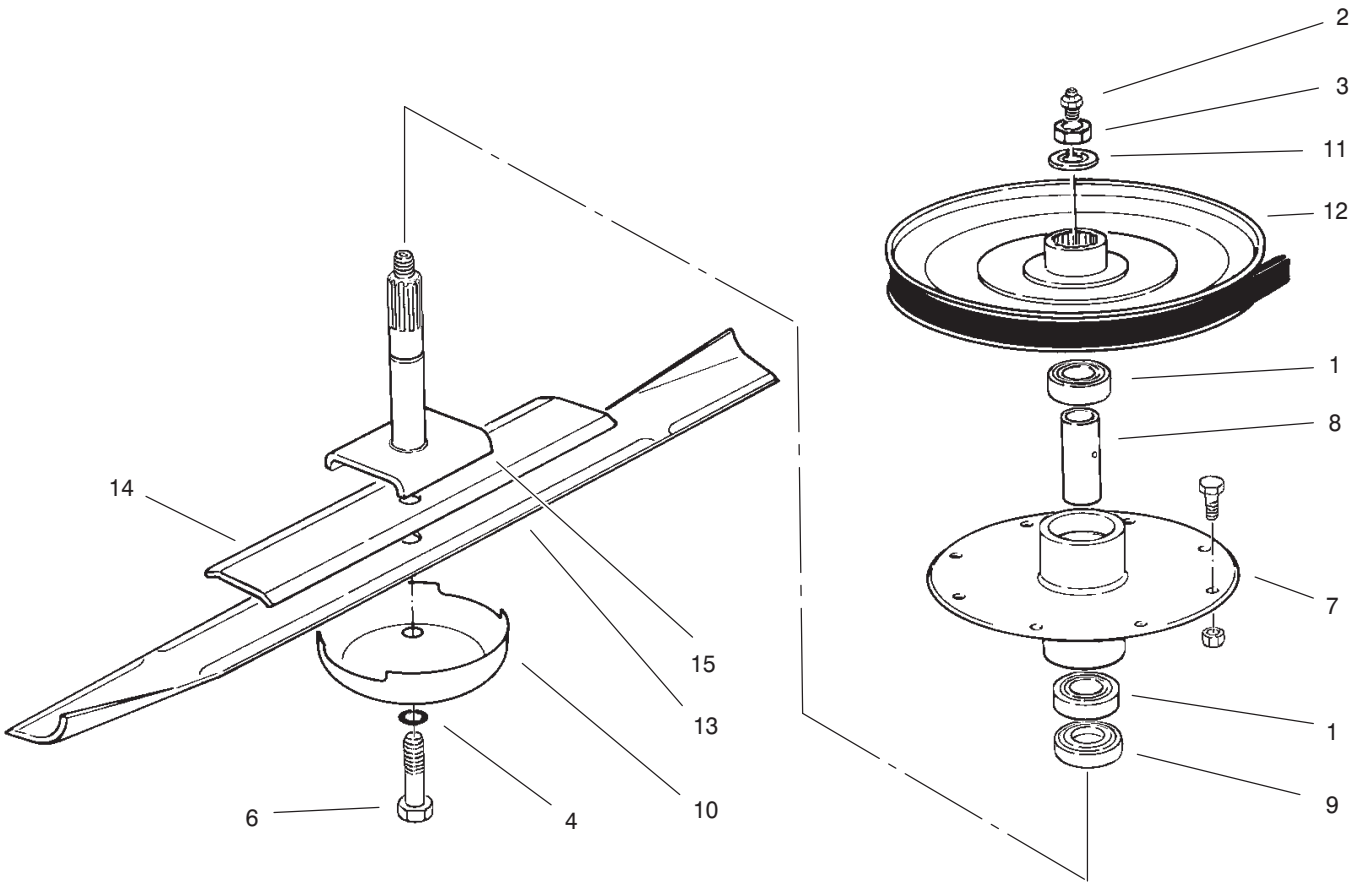

Sheet No.:A2


T–3739

Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	251–257	2	Bearing
2	302–2	1	Fitting–Grease
3	32146–20	1	Nut–Jam
4	3253–23	1	Washer–Lock/Sp
6	51–4060	1	Screw–Blade
7	67–6060	1	Housing–Spindle
8	67–6070	1	Spacer–Bearing
9	67–6080	1	Spacer
10	7–3522	1	Cup–Anti Scalp
11	7–4150	1	Washer–Pinion
12	74–0580	1	Pulley Assembly
13	80–4430	1	Blade–Recycler
14	82–4750	1	Spacer–Blade
15	92–5763	1	Shaft–Spindle

Ref. No.	Part No.	Qty.	Description

☆ Not serviced

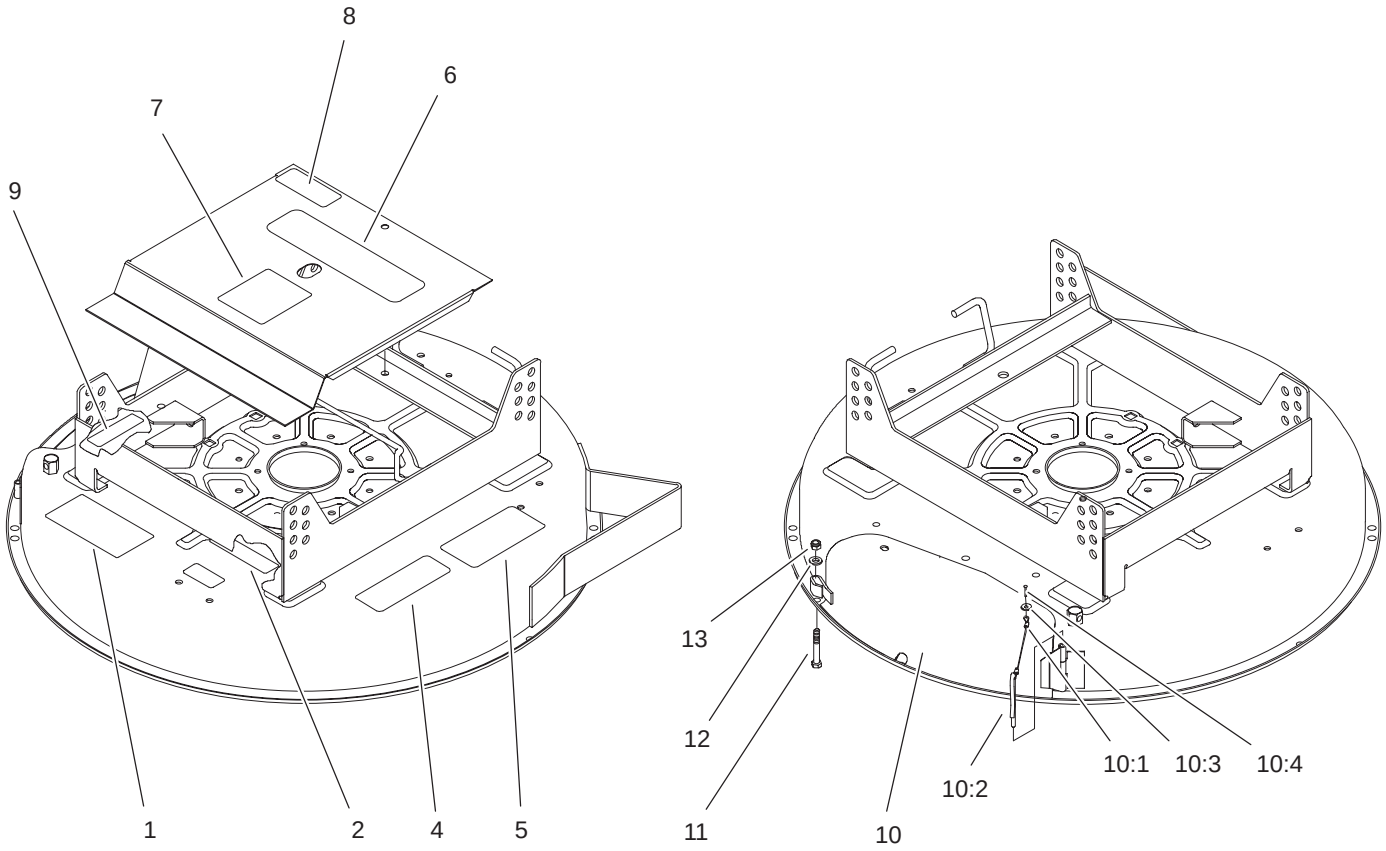


Sheet No.:9

Decal and Mulcher Cover Assembly

Ref. No.	Part No.	Qty.	Description
1	66–1340	1	Decal–Danger
2	67–5360	1	Decal–Danger
4	68–8340	1	Decal–Torque
5	93–1159	1	Decal–HOC
6	74–2080	1	Decal–Proline
7	67–6170	1	Decal
8	54–0910	1	Decal–Hot
9	66–6380	1	Decal–Danger
10	92–5422	1	Mulcher Cover ASM
10:1	28–8070	1	Lanyard
10:2	28–8130	1	Pin–Chute Locking
10:3	3256–49	1	Washer–Flat
10:4	3290–282	1	Rivet–Pop, Steel
11	322–11	1	Screw–HH
12	3256–23	2	Washer–Flat
13	3296–29	1	Nut–Lock

Ref. No.	Part No.	Qty.	Description

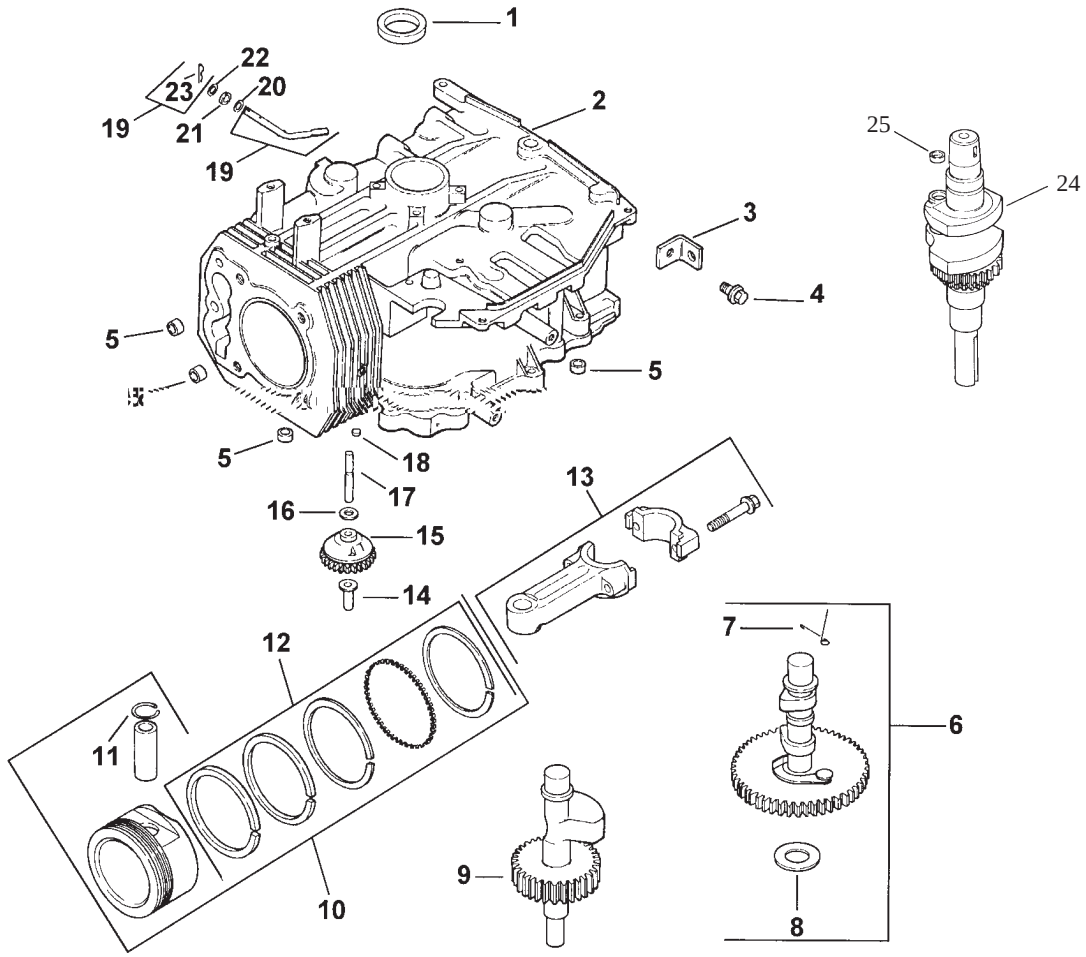


Crankcase Assembly (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal–Crankshaft
2	12 522 33	1	Shortblock
3	12 445 02	1	Strap–Lifting
4	M–0839025	1	Screw M8x1.25x22
5	12 380 17	4	Dowel–Locating
6	12 755 49	1	Kit–Camshaft INC 7–8
7	12 089 31	1	Spring–Actuating
8	12 422 07	A/R	Shim–Camshaft A/R
8	12 422 08	1	Shim–Camshaft A/R
8	12 422 09	A/R	Shim–Camshaft A/R
8	12 422 10	A/R	Shim–Camshaft A/R
8	12 422 11	A/R	Shim–Camshaft A/R
8	12 422 12	A/R	Shim–Camshaft A/R
8	12 422 13	A/R	Shim–Camshaft A/R
9	12 144 27	1	Shaft–Balance
10	12 847 01	1	Set Piston w/Ring STD
10	12 847 02	1	Set–Piston w/Ring .25
10	12 847 03	1	Set–Piston w/Ring .50
11	12 018 02	2	Retainer–Piston Pin
12	12 108 01	1	Ring Set STD
12	12 108 02	1	Ring Set .25
12	12 108 03	1	Ring Set .50
13	12 067 05	1	Rod Connecting STD
13	12 067 06	1	Rod Connecting .25

Ref. No.	Part No.	Qty.	Description
14	12 380 01	1	Pin–Governor Regulating
15	12 043 05	1	Gear–Governor ASM
16	M–0631005	1	Washer–Governor
17	12 144 02	1	Shaft–Governor Gear
18	52 139 09	1	Plug–Cup
19	12 755 64	1	Kit – Shaft–Governor Cross (Incl. Ref.#23)
20	X–25–102	1	Washer–Flat
21	12 032 01	1	Seal–Governor Shaft
22	M–0631015	1	Washer–Governor Shaft
23	12 154 05	1	Clip – Hitch Pin
24	12 014 30	1	Crankshaft ASM
25	12 139 01	1	Plug–Cup
*	12 030 02	1	Bearing – Crankshaft 0.25
*	12 030 03	1	Bearing – Crankshaft 0.50
*	12 755 83	1	Set – Gasket

* Not Illustrated

Obtain parts from Kohler

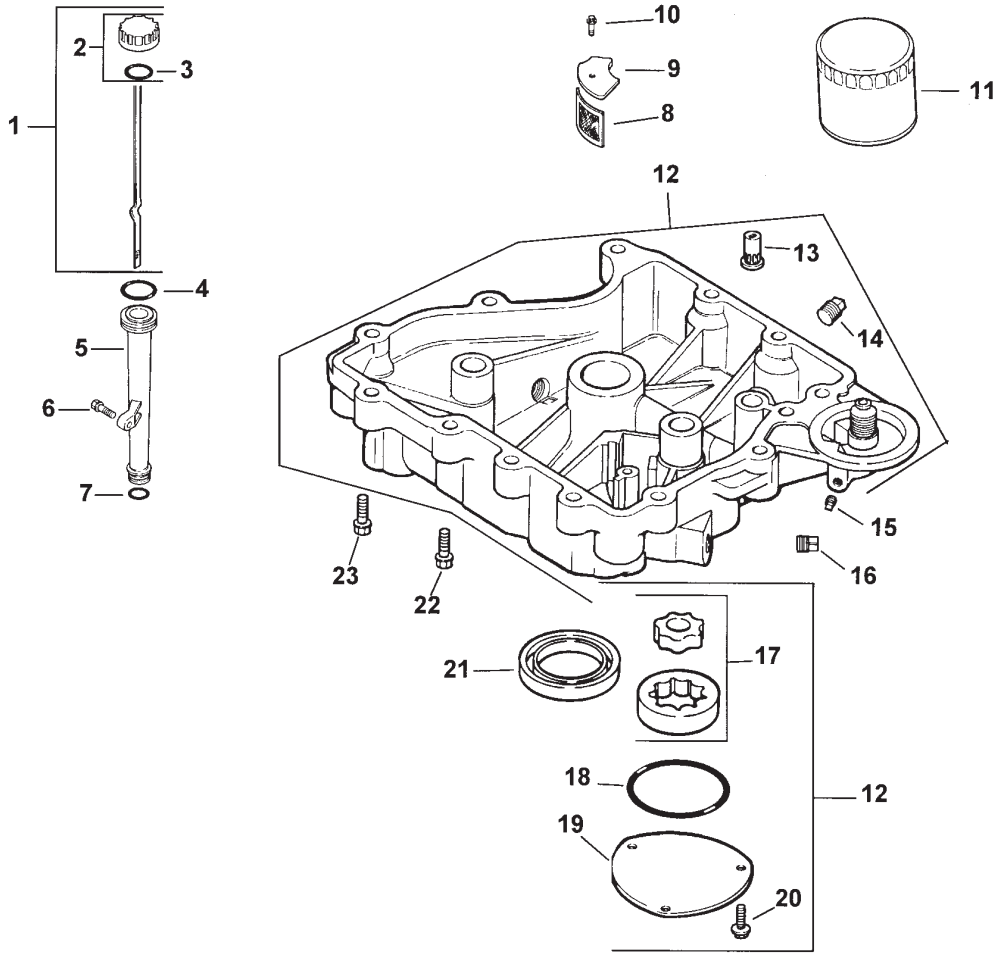

Sheet No.: 2 02


Oil Pan / Lubrication (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INC 2–3
2	25 755 13	1	Kit–Oil Cap INC 3
3	12 153 03	1	O Ring–Fill Cap
4	12 153 02	1	O Ring–Upper Fill Tube
5	12 123 04	1	Tube–Oil Fill
6	M–0545020	1	Screw M5x0.8x20
7	12 153 01	2	O Ring–Lower Fill Tube
8	25 162 07	1	Screen–Oil
9	12 096 03	1	Cover–Oil Pickup Screen
10	M–0545016	1	Screw M5x0.8x16
11	52 050 02	1	Filter–Oil
12	12 755 45	1	Pan – Oil (Incl. Ref. #13, 14, 17–20)
13	25 462 09	1	Valve – Oil Pressure
14	X–75–2	2	Plug–1/4nptf
15	X–75–1	2	Plug–1/8nptf
16	X–75–10	2	Plug–SH 3/8 NPTF
17	12 393 01	1	Pump–Oil
18	12 153 06	1	O Ring–Oil Pump Cover
19	12 096 34	1	Cover–Oil Pump
20	M–0545016	3	Screw M5x0.8x16
21	12 032 03	1	Seal–Crankshaft

Ref. No.	Part No.	Qty.	Description
22	24 086 16	11	Screw–M8X1.25X45
23	24 068 17	1	Screw–M5X1.25X45

*Not illustrated

Obtain parts from Kohler

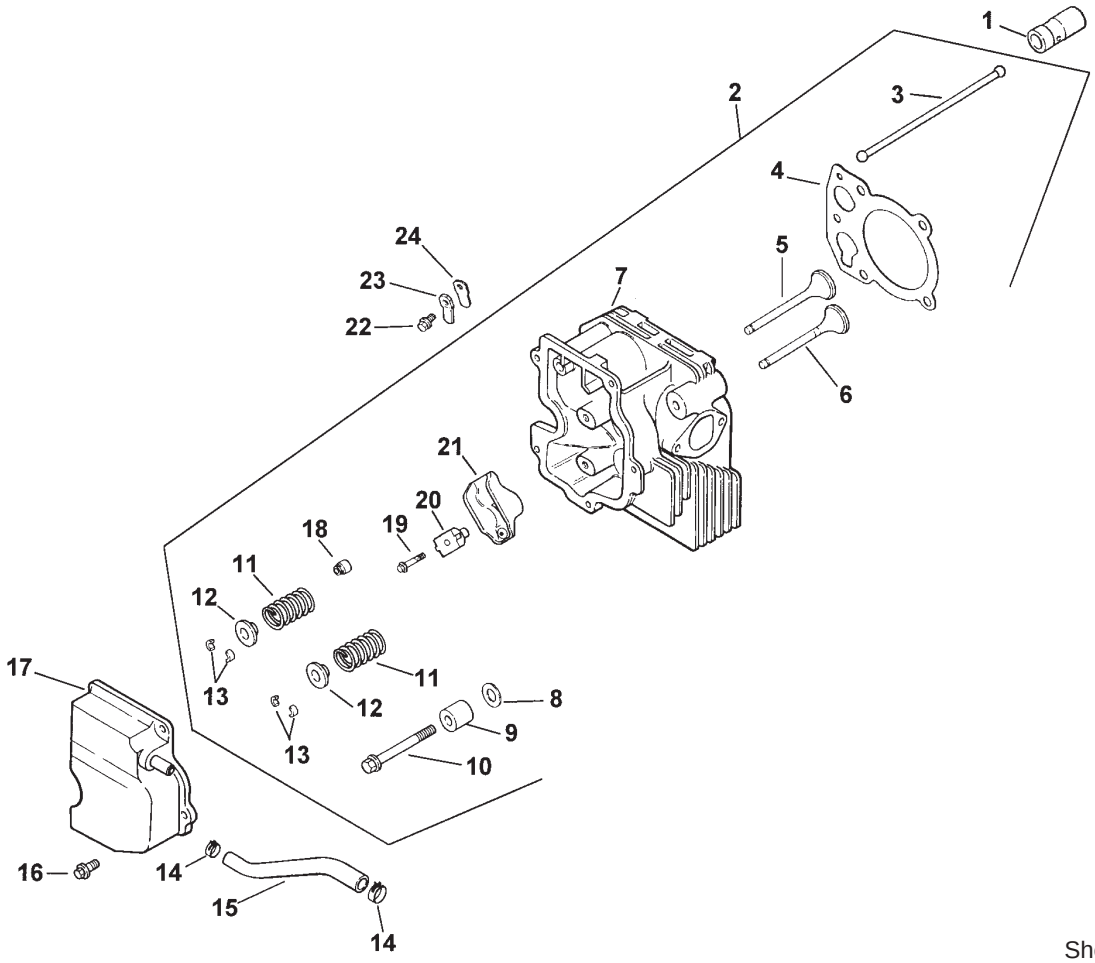

Sheet No.: 2 03


Cylinder Head, Valves And Breather (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	12 351 02	2	Lifter–Valve
2	12 755 81	1	Kit–Cylinder Head
3	12 411 01	2	Rod–Push
4	12 041 08	1	Gasket–Cylinder Head
5	12 017 01	1	Valve–Intake STD
5	12 017 02	1	Valve–Intake .25
6	12 016 01	1	Valve–Exhaust STD
6	12 016 02	1	Valve–Exhaust .25
7	12 318 19	1	Head – Cylinder
8	12 468 05	1	Washer–Flat
9	12 112 13	1	Spacer–Head Bolt Exhaust
10	12 086 15	5	Screw M10x1.5x80
11	12 089 01	1	Spring–Valve
12	12 173 01	2	Cap–Valve Spring
13	12 755 03	2	Kit–Retainer
14	X–426–9	2	Clamp–Hose
15	12 326 03	1	Hose–Breather
16	M–0645020	3	Screw–HH M6x1.0x20
17	12 096 07	1	Cover–Valve w/Nipple
18	24 023 05	1	Seal–Valve Spring
19	M–0640034	2	Screw M6x1.0x34
20	12 599 03	2	Pivot – Rocker Arm
21	25 186 01	2	Arm–Rocker

Ref. No.	Part No.	Qty.	Description
22	M–0545010	1	Screw M5x0.8x10
23	12 018 01	1	Retainer–Breather Reed
24	12 402 02	1	Reed–Breather

*Not illustrated

Obtain parts from Kohler

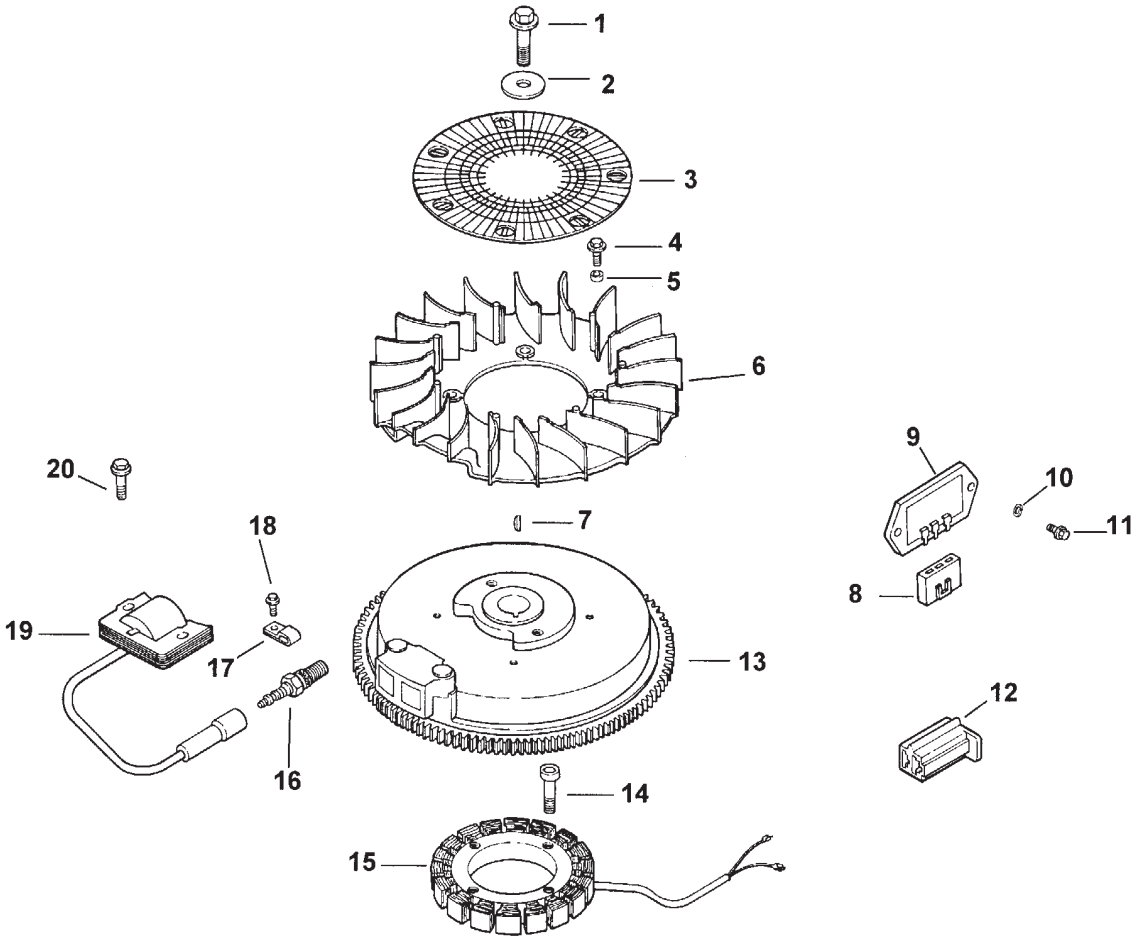


Sheet No.: 2 04

Ignition / Electrical (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw–Flywheel Mounting
2	12 486 03	1	Washer–Flat
3	12 162 03	1	Screen–Grass
4	M–0639016	4	Screw M6x1.0x16
5	12 112 01	4	Spacer–Fan
6	12 157 02	1	Fan
7	X–42–15	1	Key
8	236602	1	Connector–Regulator
9	12 403 01	1	Rectifier–Unregulated
10	X–22–11	2	Washer – Lock
11	M–0639016	2	Screw M6x1.0x16
12	41 155 03	1	Connector
13	12 025 15	1	Flywheel ASM
14	M–0548025	4	Screw M5x0.8x25
15	54 755 09	1	Kit – Stator–15 Amp (Incl. Bracket P/N #24 126 71)
16	12 132 02	1	Spark Plug
17	X–728–1	2	Clip–Kill Lead
18	M–0545010	1	Screw M5x0.8x10
19	12 584 02	1	Module–Ignition
20	M–0545020	2	Screw M5x0.8x20
*	X–25–5	1	Washer
	12 518 01	1	Lead–White
*	25 518 05	1	Lead–Black
*	25 518 29	1	Lead–Black
*	24 126 71	1	Bracket – Stator Wire

* Not illustrated

Obtain parts from Kohler

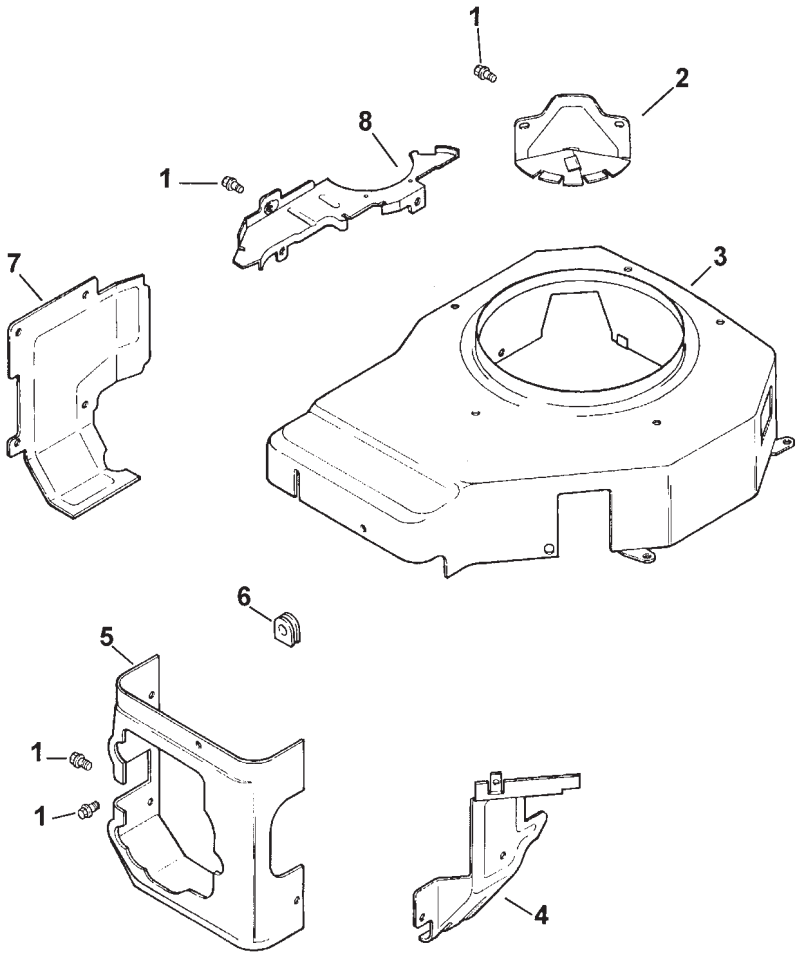

Sheet No.: 2 05


Blower Housing And Baffles (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	M–0545010	15	Screw M5x0.8x10
2	12 096 29	1	Cover–Starter
3	12 027 37	1	Housing–Blower
4	12 063 05	1	Baffle–Carburetor
5	12 063 08	1	Baffle–Cyl. Head
6	12 313 03	1	Grommet–Blower
7	12 063 01	1	Baffle–Cylinder
8	12 146 07	1	Plate–Blower Housing
*	12 133 66	1	Decal–Horsepower

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Obtain parts from Kohler

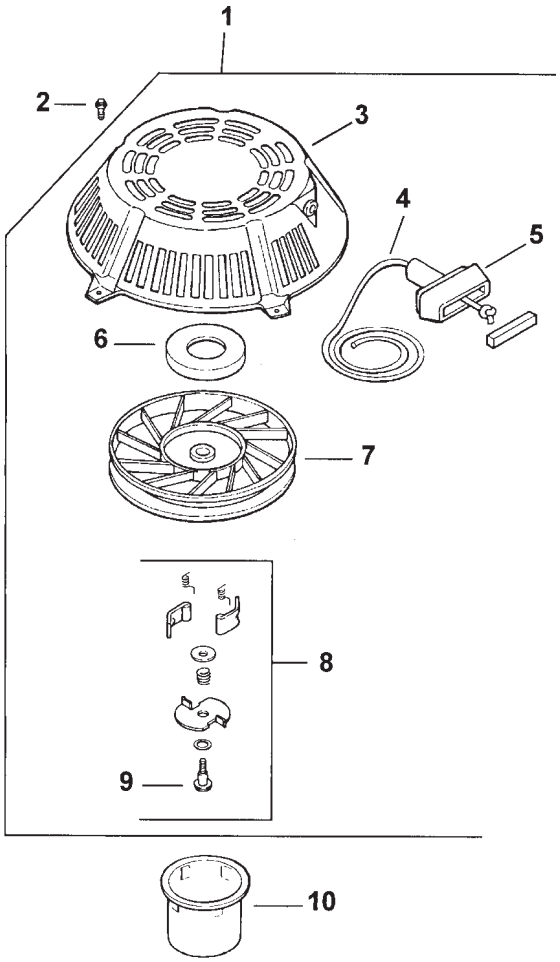

Sheet No.: 2 06


Starter System (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	12 165 01	1	Starter Incl 3–9
2	M–0545010	5	Screw M5x0.8x10
3	12 081 01	1	Housing–Starter
4	12 160 01	1	Rope–Starter
5	25 166 01	1	Handle–Recoil
6	12 089 06	1	Spring & Keeper
7	12 093 01	1	Pulley
8	12 757 06	1	Kit–Dog Replacement (incl. Ref.#9)
9	41 086 09	1	Screw–Posidrive
10	15 109 01	1	Cup–Driver
*	12 113 07	1	Decal–Starting

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Obtain parts from Kohler

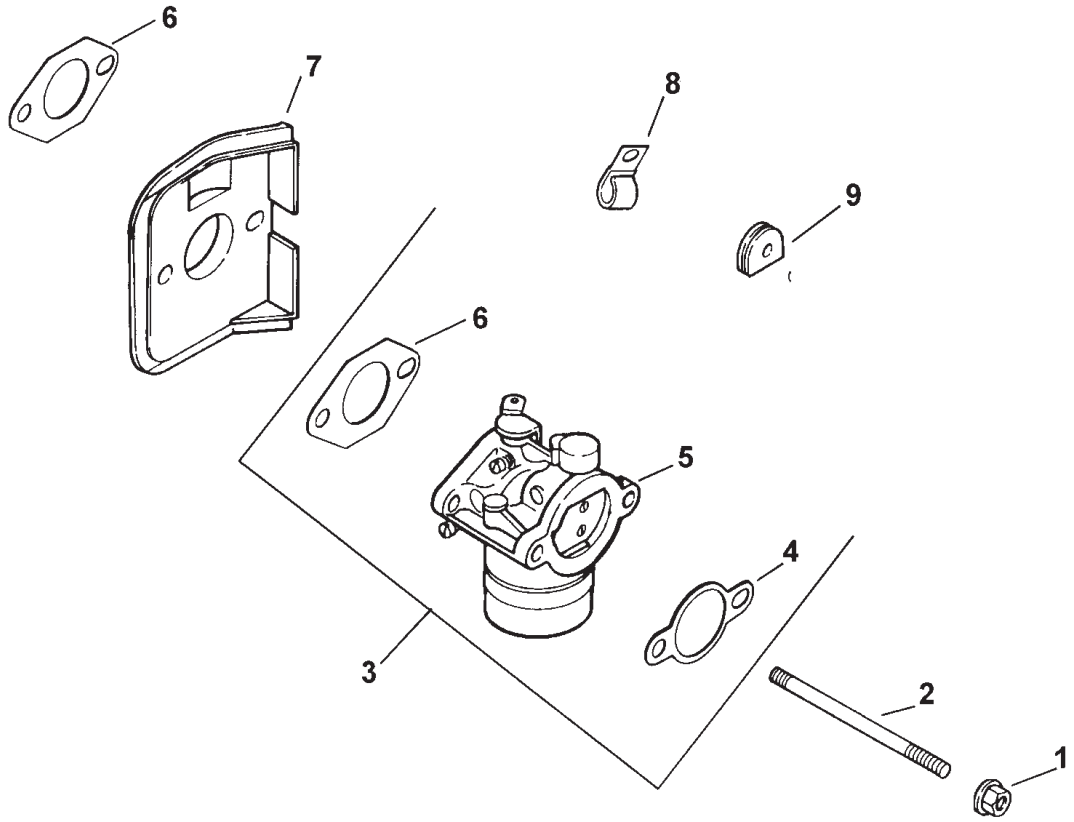

Sheet No.: 2 08


Fuel System (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	M–0641060	2	Nut M6x1.0
2	M–0629122	2	Stud M6x1.0x110
3	12 853 78	1	Kit–Carburetor w/Gaskets
4	12 041 02	1	Gasket–Air Cleaner
5	12 053 78	1	Carburetor ASM
6	12 041 01	2	Gasket–Carburetor
7	12 265 04	1	Deflector–Heat
8	47 154 01	1	Clip–Cable
9	12 313 01	1	Grommet
*	12 757 02	1	Kit–Float
*	12 757 08	1	Kit–Choke Repair
*	12 757 03	1	Kit–Carburetor Repair

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Obtain parts from Kohler

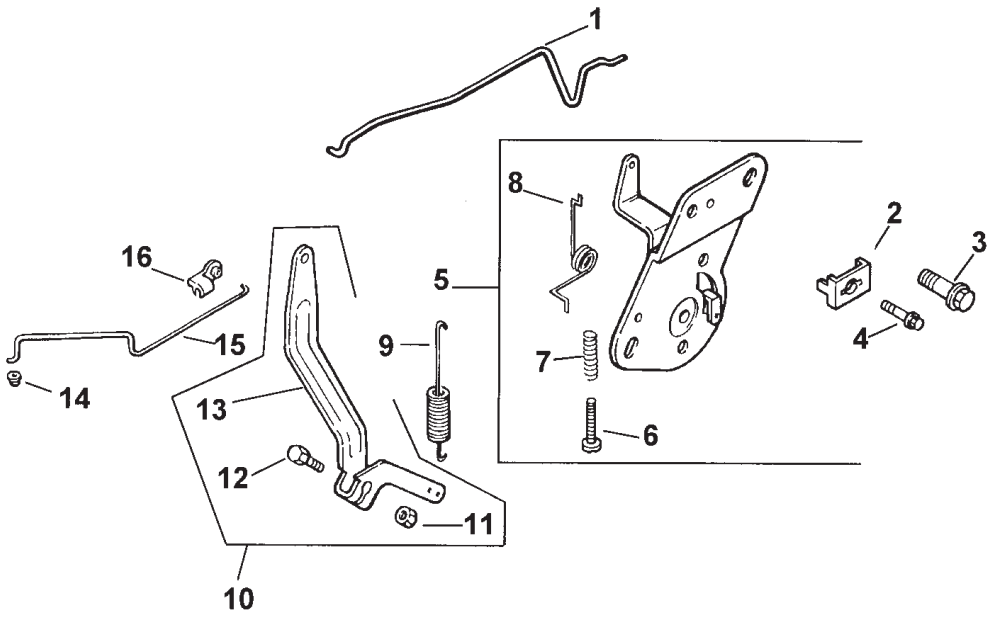


Sheet No.: 2 09

Engine Controls (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage–Choke
2	12 237 01	1	Clamp–Cable
3	M–0664020	2	Screw M6X1.0X20
4	M–0645016	1	Screw–HH M6x1.0x16
5	12 536 01	1	Control–Speed
6	SM–0443025	1	Screw
7	12 089 11	1	Spring
8	12 089 23	1	Spring–Choke Return
9	12 089 19	1	Spring–Governor
10	12 755 83	1	Kit – Governor Lever (Incl. Ref.#11–13)
11	12 100 07	1	Nut
12	52 211 04	1	Bolt – Round HD
13	12 090 26	1	Lever–Governor
14	25 158 08	1	Bushing–Linkage
15	12 079 01	1	Linkage–Throttle
16	25 158 11	1	Bushing–Linkage

Ref. No.	Part No.	Qty.	Description

Obtain parts from Kohler

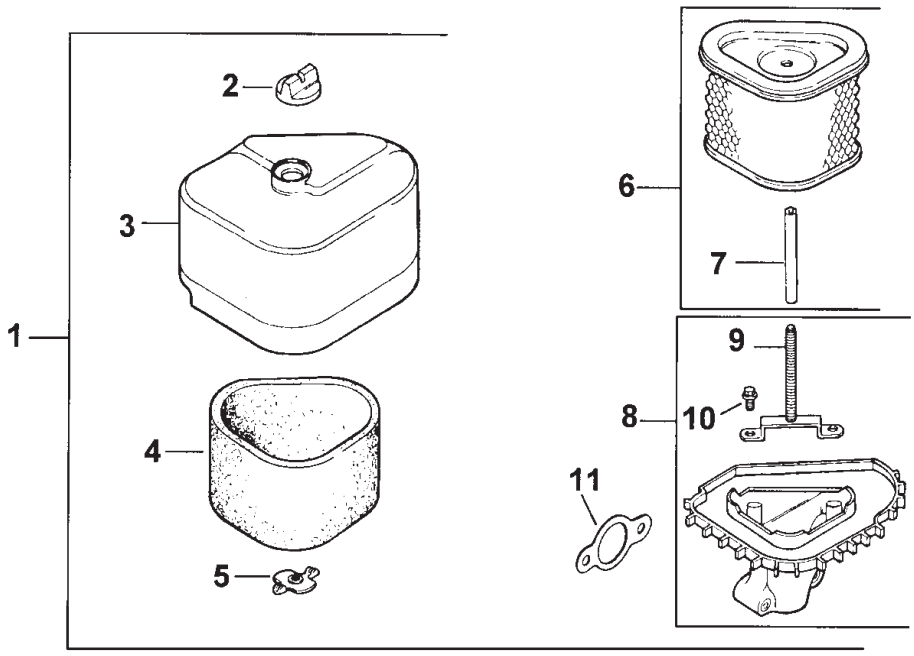


Sheet No.: 207

Air Cleaner Assembly (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	12 734 02	1	Kit–Air Cleaner (Incl. Ref.# 2–11)
2	25 341 03	1	Knob–Cover
3	12 096 16	1	Cover–Air Cleaner
4	12 083 12	1	Precleaner–Element
5	12 100 01	1	Nut–Wing
6	12 083 10	1	Element–Air Cleaner (Incl. Ref.#7)
7	12 032 11	1	Seal
8	12 094 07	1	Base–Air Cleaner (Incl. Ref.#9, 10)
9	12 072 04	1	Stud–Mounting Plate
10	12 086 01	1	Screw–Mounting Plate
11	12 041 02	1	Gasket–Air Cleaner
*	12 113 04	1	Decal–Air Cleaner

Ref. No.	Part No.	Qty.	Description

* Not illustrated
Obtain parts from Kohler

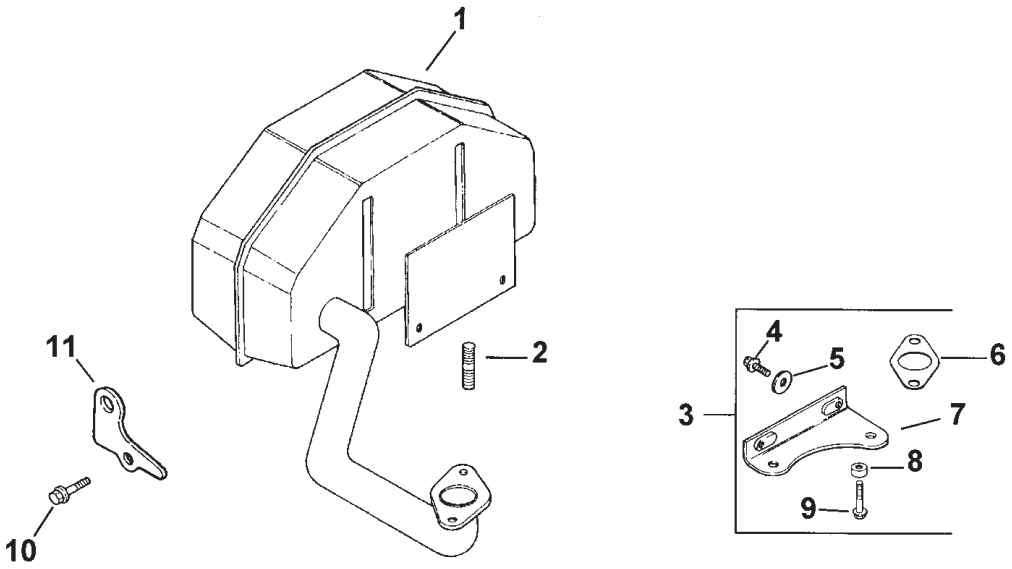

Sheet No.: 2 10

Exhaust (Kohler CV13T–PS–21524)

Ref. No.	Part No.	Qty.	Description
1	12 068 03	1	Muffler
2	M–0829033	2	Stud M8x1.25x20
3	12 755 30	1	Kit–Bracket (Incl. Ref.#4–9)
4	M–0650012	2	Screw
5	X–25–52	2	Washer
6	12 041 03	1	Gasket – Exhaust
7	12 126 55	1	Bracket–Muffler
8	12 468 01	1	Washer
9	12 086 13	1	Screw
10	M–0645025	1	Screw
11	12 445 06	1	Strap–Lifting

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Obtain parts from Kohler

Maintenance Record

Date								


TORO®