Form No. 3325-289

Mid–Size Mower

ProLine Gear 12.5 HP with 91cm. Side Discharge Mower

Model No. 30250TE—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

Contents

Description	Page
Engine, Clutch Assembly	3
Clutch Assembly No. 54–3200	4
Fuel Tank Assembly	5
Lower Controls Assembly	6
Transmission and Drive System Assembly	7
Wheel Drive and Brake System Assembly	8
Upper Handles Assembly	9
Control Panel Assembly	10
Deck Assembly	11
Spindles, Pulleys and Belts Assembly	12
Spindle Housing Assembly No. 104–6319	13
Spindle Housing Assembly No. 104–6317	14
Carrier Frame Assembly	15
Schematic	16
Crankcase Assembly – Kawasaki Model FB460V–LS08	17
Piston and Crankshaft Assembly Kawasaki Model FB460V–LS08	18
Valves and Camshaft Assembly Kawasaki Model FB460V–LS08	19
Lubrication Equipment Assembly Kawasaki Model FB460V–LS08	20
Cooling Equipment Assembly Kawasaki Model FB460V–LS08	21
Electric Equipment Assembly Kawasaki Model FB460V–LS08	22
Control Equipment Assembly Kawasaki Model FB460V–LS08	23
Carburetor Assembly Kawasaki Model FB460V–LS08	24
Air Filter Assembly Kawasaki Model FB460V–LS08	25
Starter Assembly Kawasaki Model FB460V–LS08	26
Muffler Assembly Kawasaki Model FB460V–LS08	27


Accessories

Description	Model / Part No.	Description	Model / Part No.
Bagging Unit	Model No. 30125		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

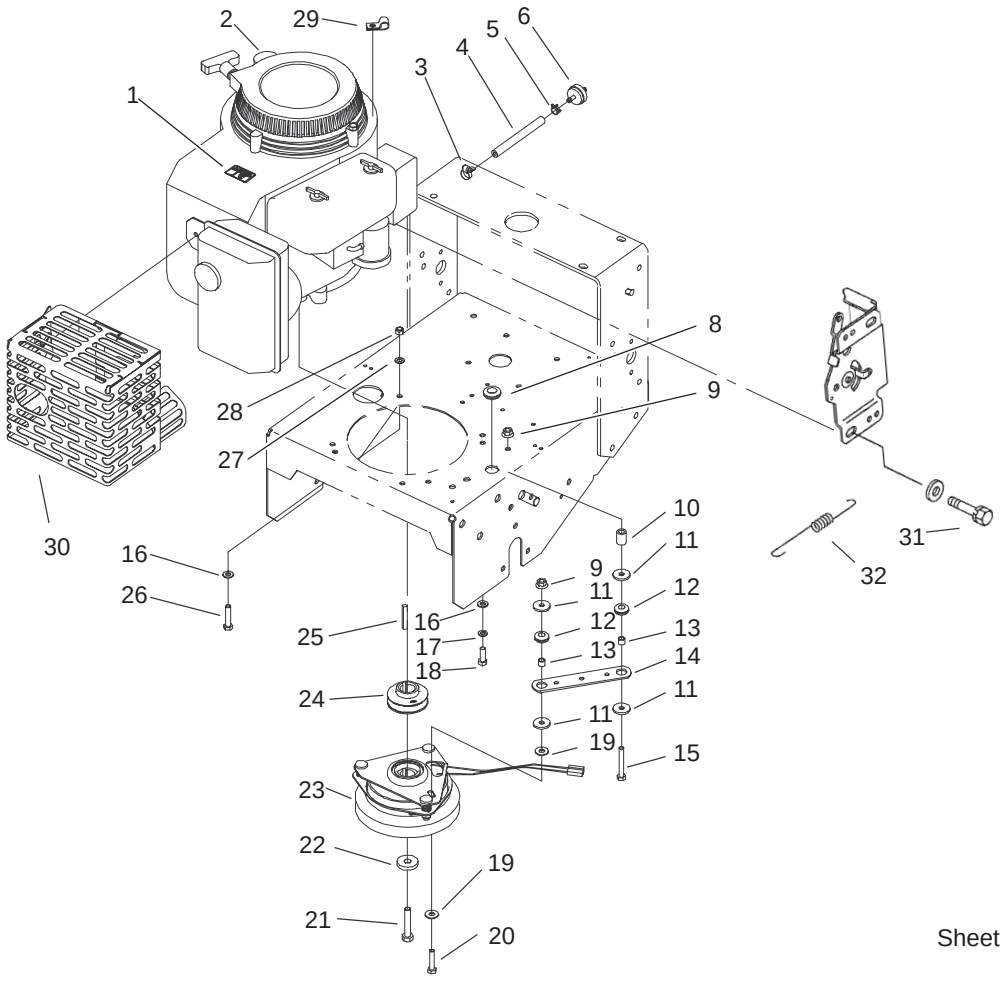


Sheet No.:2

Engine, Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	93–8069	1	Decal–Hot Surface
2	100–6466	1	Engine–12.5 Kawasaki
3	2412–108	1	Clamp–Worm
4	47–2966	1	Hose–Gas
5	2412–98	1	Clamp
6	56–6360	1	Filter–Fuel
*7	104–8135	1	Wire Harness
8	237–124	1	Grommet
9	32128–20	2	Nut–HF
10	104–6373	1	Tube – Retainer
11	1–613235	4	Washer
12	1–633630	2	Grommet–Brake
13	1–633545	2	Spacer–Grommet
14	1–633543	1	Strap–Clutch/Brake
15	322–11	1	Screw–HH
16	3256–23	4	Washer–Flat
17	3253–4	3	Washer–Lock
18	33114–025	3	Screw–HH
19	3256–3	2	Washer–Flat
20	322–7	1	Screw–HH
21	57–6360	1	Screw–Clutch
22	112843	1	Washer
23	54–3200	1	Clutch/Brake
24	105–0827	1	Pulley–Drive
25	92–5436	1	Key
26	57–6370	1	Screw(Eng Ground)

Ref. No.	Part No.	Qty.	Description
27	3255–8	1	Washer–Lock/Ext
28	33024–00	1	Nut–Lock
29	2412–87	1	Clamp–Cable
30	105–0857–03	1	Muffler Guard ASM
31	105–2681	2	Screw–Governor Plate
32	105–2679	1	Spring–Governor

* Not illustrated

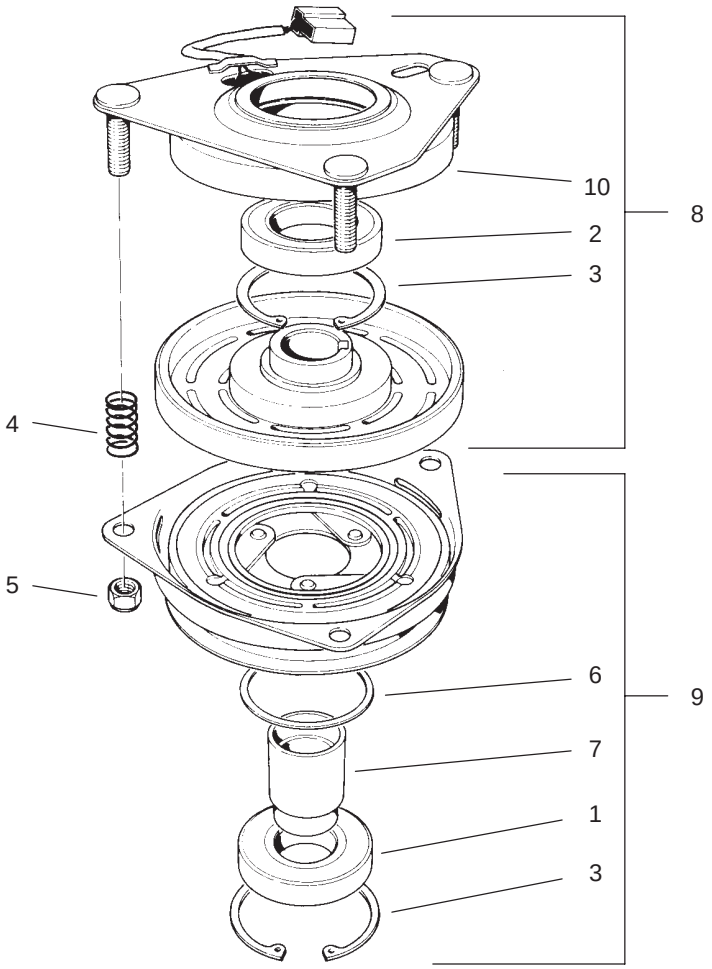


Sheet No.:A1
T–3726

Clutch Assembly No. 54–3200

Ref. No.	Part No.	Qty.	Description
1	251–291	1	Bearing–Pulley
2	251–292	1	Bearing–Field
3	44–8310	2	Ring–Retaining
4	44–8320	3	Spring
5	3296–6	3	Nut–Lock, NI
6	44–8330	1	Spacer–Bearing, Pulley
7	44–8340	1	Collar–Bearing
8	44–8360	1	Field Coil–Rotor / Bearing ASM
9	44–8370	1	Armature / Pulley / Bearing ASM
10	54–0230	1	Field Bearing ASM

Ref. No.	Part No.	Qty.	Description

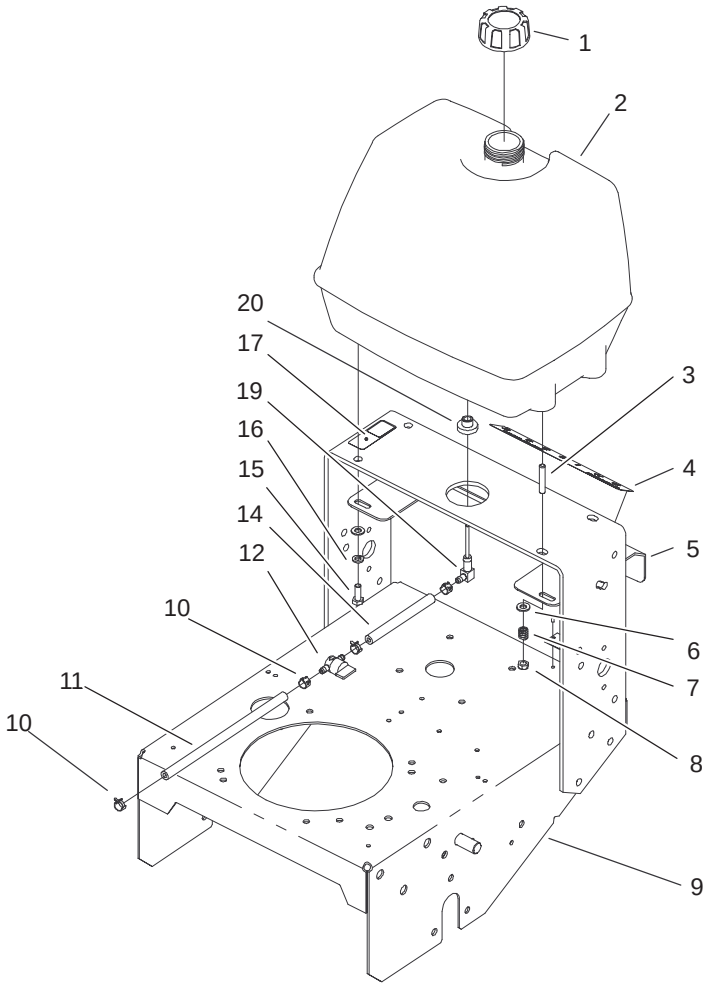


Sheet No.:5

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	55–3570	1	Gas Cap ASM
2	1–323551	1	Tank–Fuel
3	104–8121	2	Stud–Threaded
4	98–3264	1	Decal–Ground Speed
5	104–8102–01	1	Plate–Shift Gate
6	3256–23	4	Washer–Flat
7	1–633349	2	Spring–Tank, Fuel
8	3296–47	2	Nut–Lock, NI
9	104–8100–01	1	Traction Frame ASM
10	2412–98	4	Clamp
11	47–2982	1	Hose–Gas
12	1–603770	1	Valve–Fuel
14	47–2966	1	Hose–Gas
15	322–4	2	Screw–HH
16	3253–4	2	Washer–Lock
17	93–9353	1	Decal – Fuel Shut Off
19	1–543277	1	Elbow–Tank, Fuel
20	1–513645	1	Bushing–Valve, Fuel


Ref. No.	Part No.	Qty.	Description

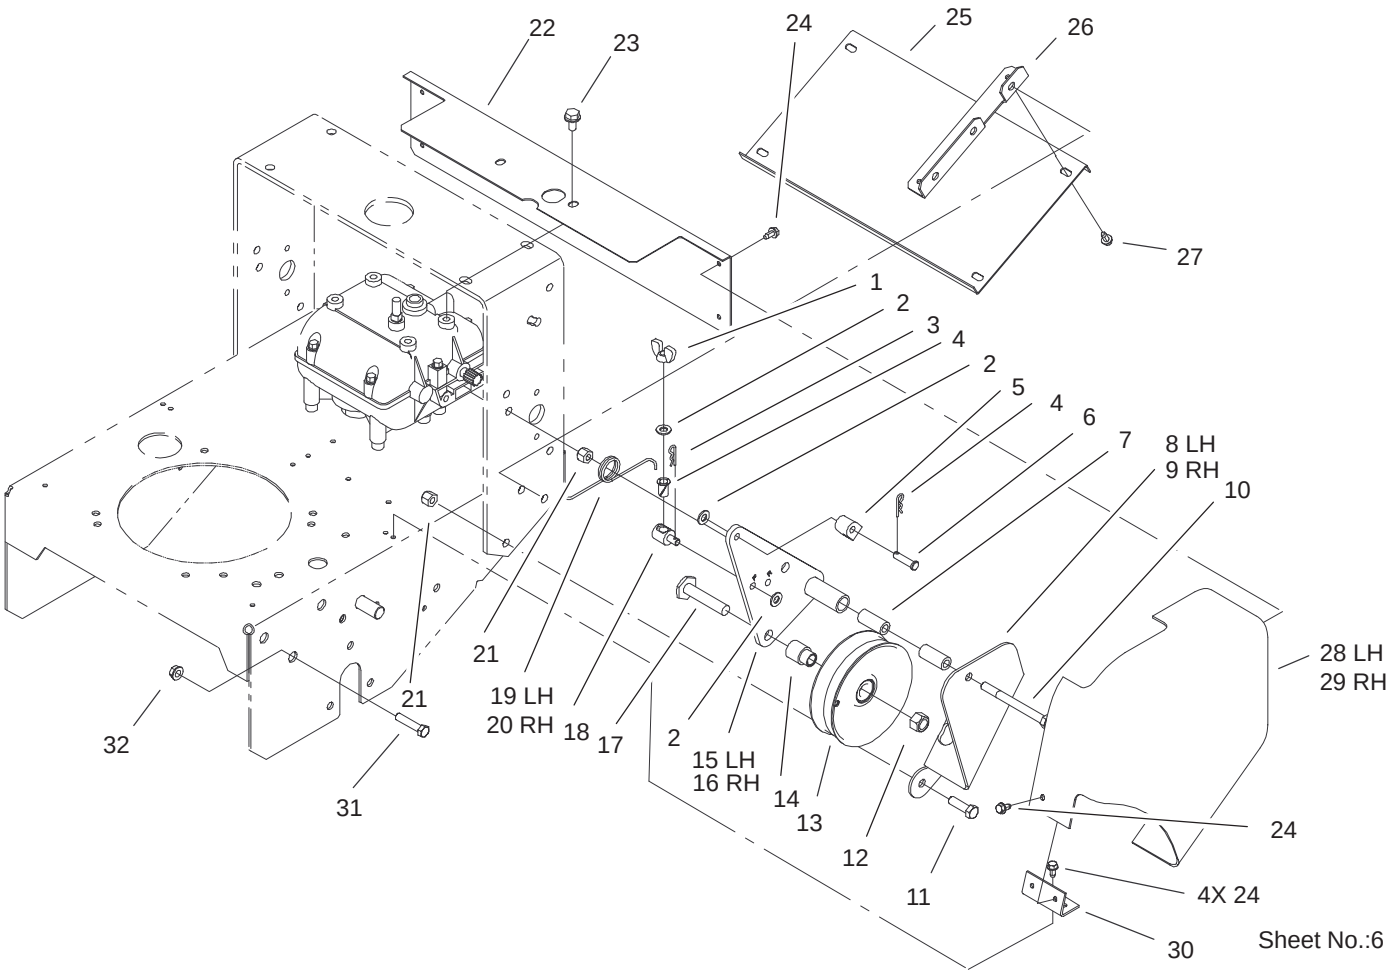

Lower Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	32103–25	2	Nut–Wing
2	3256–23	6	Washer–Flat
3	3290–307	4	Pin–Hair
4	52–2890	2	Bushing–Nylon
5	74–0521	2	Fitting–Rod
6	283–6	2	Pin–Clevis
7	74–0040	4	Spacer–Idler Pivot
8	67–6380–01	1	Bracket–LH Support
9	67–6370–01	1	Bracket–RH Support
10	323–16	2	Screw–HH
11	323–7	4	Screw–HH
12	3296–23	2	Nut–Lock, NI
13	95–2800	2	Pulley–Idler
14	95–2801	2	Spacer–Pulley
15	74–0220–01	1	Bracket–LH Idler
16	74–0230–01	1	Bracket–RH Idler
17	51–4450	2	Screw–Leveler
18	68–9690	2	Fitting–Rod
19	51–4380	1	Spring–LH Torsion
20	51–4370	1	Spring–RH Torsion
21	3296–39	6	Nut–Lock, NI
22	104–8158–03	1	Guard–Shaft, Transmission
23	32144–14	2	Screw–HWH
24	12–3270	10	Screw
25	93–7437–01	1	Panel – Bottom

Ref. No.	Part No.	Qty.	Description
26	93–7436–03	2	Angle – Mounting
27	12–3270	4	Screw
28	104–8159	1	Guard–Belt, LH
29	104–8160	1	Guard–Belt, RH
30	104–6399–01	2	Mount–Belt Guard
31	3234–32	6	Screw–HHF
32	32128–23	6	Nut–HF

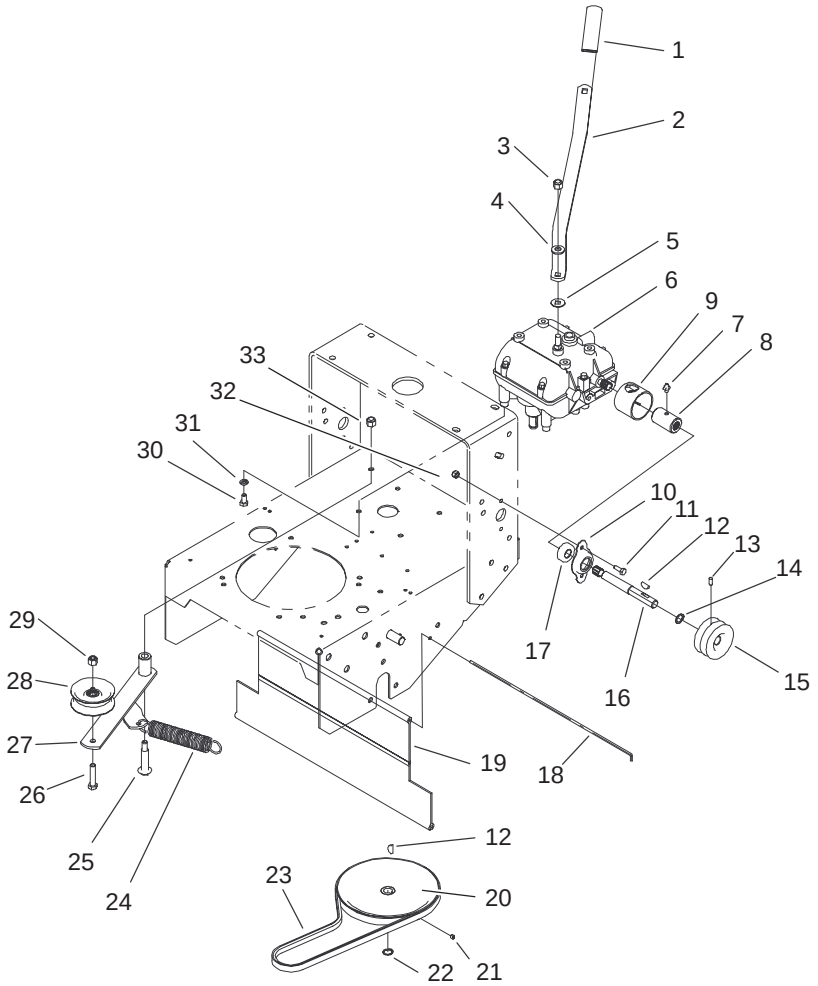


Sheet No.:7

Transmission and Drive System Assembly

Ref. No.	Part No.	Qty.	Description
1	47–1970	1	Grip–Engagement
2	98–3274–03	1	Lever–Shift
3	3296–6	1	Nut–Lock, NI
4	98–5975	1	Washer–Belleville
5	1–323379	1	Washer–Shifter Lever
6	1–323500	1	Transmission,Peerless
7	302–5	2	Fitting–Grease
8	98–0789	2	Coupler
9	51–4220	2	Guard–Coupler
10	1–323254	2	Flange–Output
11	321–4	4	Screw–HH
12	3257–5	3	Key–Woodruff
13	3245–9	2	Screw–Set
14	32151–62	2	Ring–Retaining
15	105–0828	2	Pulley–Transmission
16	104–1102	2	Shaft–Output
17	1–323252	2	Bearing–Shaft, Transmission
18	95–1529	1	Rod–Shield
19	95–1526	1	Shield–Trailing
20	51–4190	1	Pulley–Driven
21	3245–1	1	Screw–Set, HSH
22	32120–64	1	Ring–Snap, External
23	26–9671	1	V–Belt
24	68–2190	1	Spring–Extension
25	27–6230	1	Bolt–Wheel


Ref. No.	Part No.	Qty.	Description
26	323–9	1	Screw–HH
27	16–7509	1	Lever–Idler
28	62–4540	1	Pulley
29	3296–39	1	Nut–Lock, NI
30	322–2	4	Screw–HH
31	3253–4	4	Washer–Lock
32	3296–42	4	Nut–Lock, NI
33	3296–6	1	Nut–Lock, NI

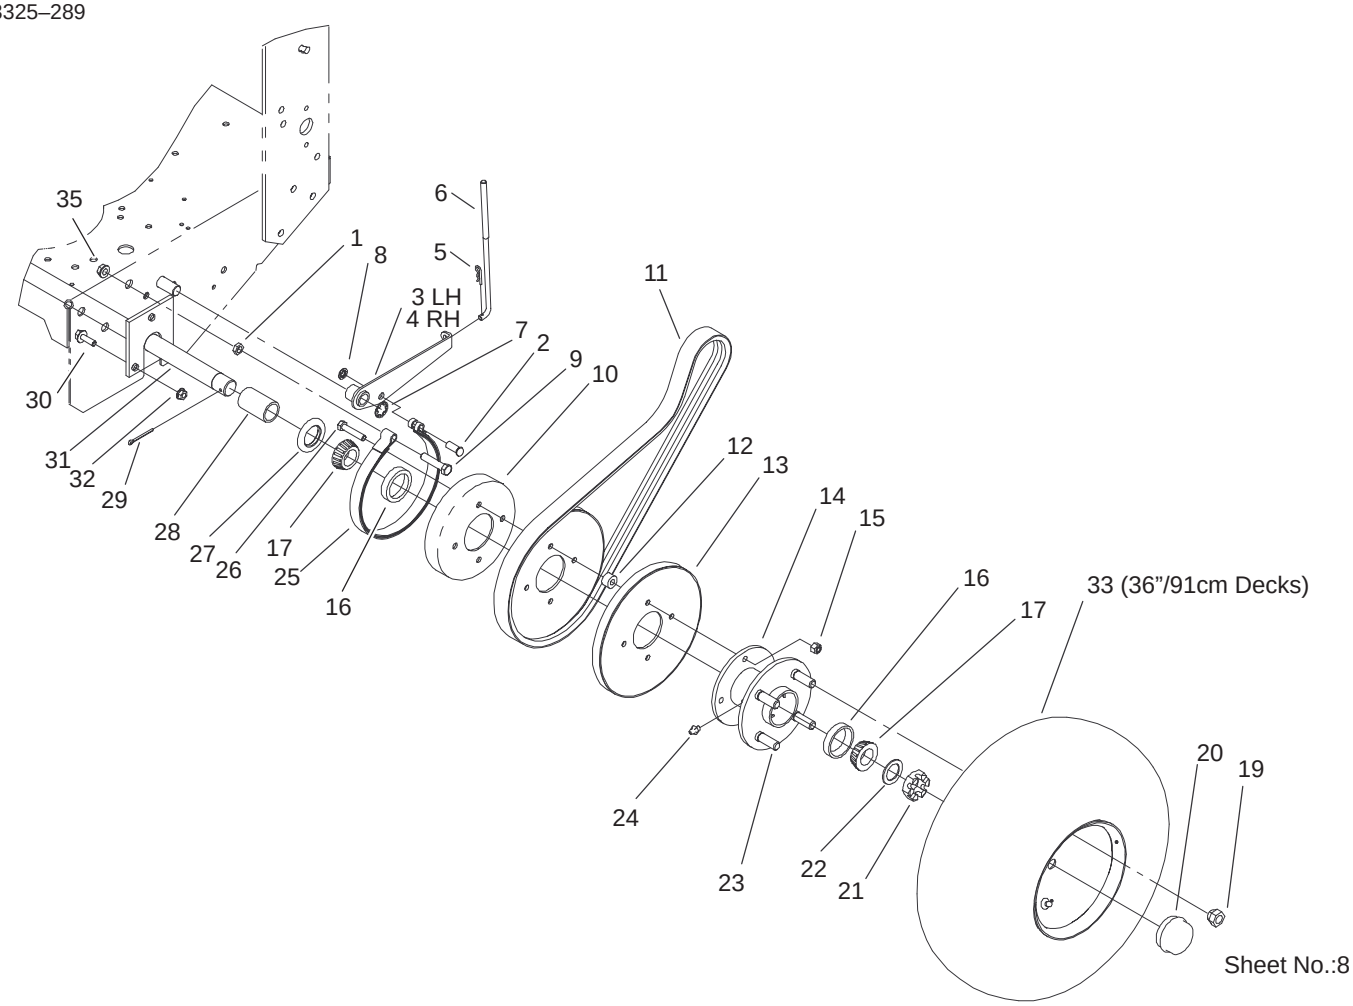

Wheel Drive and Brake System Assembly

Ref. No.	Part No.	Qty.	Description
1	3218–3	2	Nut–Jam
2	1–323307	2	Pin – Clevis
3	51–4610–01	1	Arm–LH Brake
4	51–4600–01	1	Arm–RH Brake
5	3290–307	2	Pin–Hair
6	51–4580	2	Rod–Brake
7	32151–40	2	Ring–Retaining
8	32151–56	2	Ring–Retaining, External
9	323–10	2	Screw–HH
10	1–323261	2	Drum,Brake
11	104–8152	2	Belt–Traction Drive
12	51–4170	8	Spacer–Pulley
13	51–4160–03	4	Pulley–Wheel
14	1–413333	2	Hub,Wheel W/Cups
15	3296–29	8	Nut–Lock
16	254–72	4	Bearing–Taper, Cup
17	254–94	4	Bearing–Taper, Cone
19	242–50	8	Nut–Lug
20	241–119	2	Cap–Dust
21	1–809082	2	Nut, SHH
22	1–523157	2	Washer–Spacer
23	1–633926	8	Stud–Wheel
24	302–19	2	Fitting–Grease
25	1–323262	2	Band,Brake
26	322–8	8	Screw–HH

Ref. No.	Part No.	Qty.	Description
27	1–543511	2	Seal–Grease
28	104–1197	2	Spacer–Wheel
29	1–806800	2	Pin–Cotter
30	3234–11	6	Screw–HHF
31	104–1196–01	1	Axle ASM
32	32128–21	6	Nut–HF
33	104–6321	2	Wheel And Tire ASM
35	3290–357	2	Nut–Flange, Lock

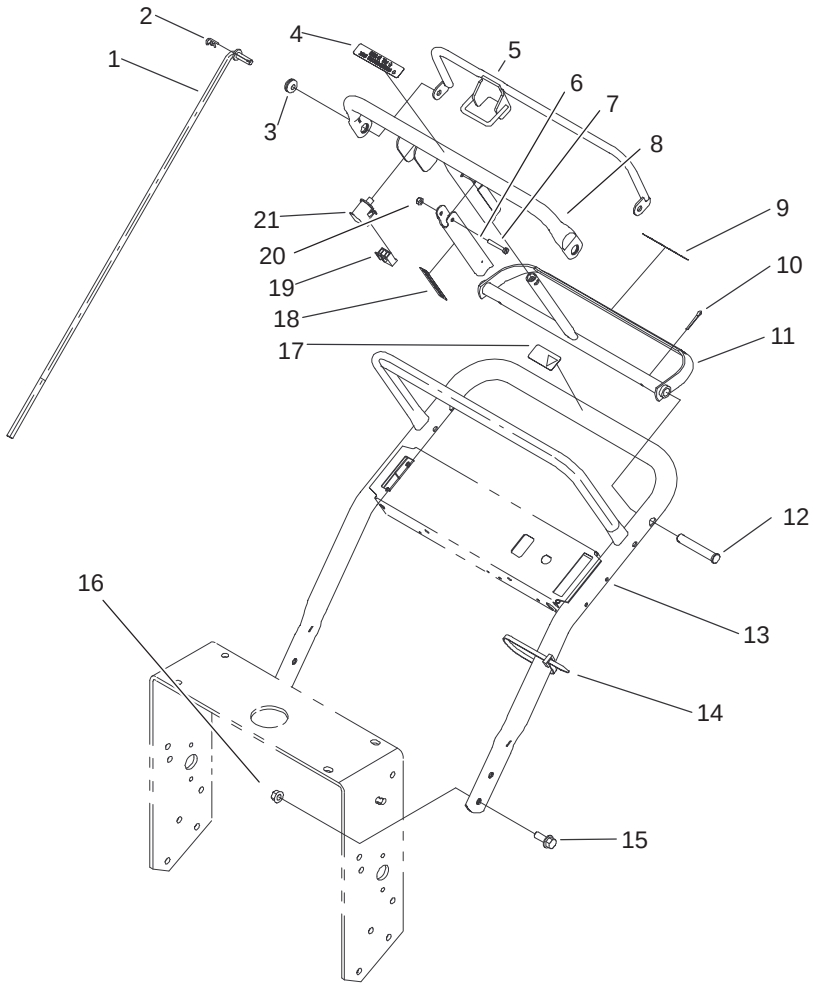


Sheet No.:9

Upper Handles Assembly

Ref. No.	Part No.	Qty.	Description
1	82–7631	2	Rod–Control
2	3290–307	2	Pin–Hair
3	237–141	2	Grommet–Rubber
4	93–7298	1	Decal – Control Bar
5	82–7680–03	1	Bail
6	51–4850–03	1	Lever–Parking Brake
7	32105–1	1	Screw–SHH
8	82–7690–03	1	Bar–Control
9	93–7299	1	Decal – Reverse
10	3272–11	2	Pin–Cotter
11	99–8501–03	1	Control–Pivot
12	283–55	2	Pin–Clevis
13	67–6440–03	1	Handle–Upper
14	3290–378	1	Tie–Cable
15	3234–11	4	Screw–HHF
16	32128–21	4	Nut–HF
17	98–4387	1	Decal–Protection, Ear
18	93–7442	1	Decal – Parking Lever
19	218–595	1	Connector–Body
20	32153–1	1	Nut–Lock
21	82–2190	1	Switch–Bail

Ref. No.	Part No.	Qty.	Description

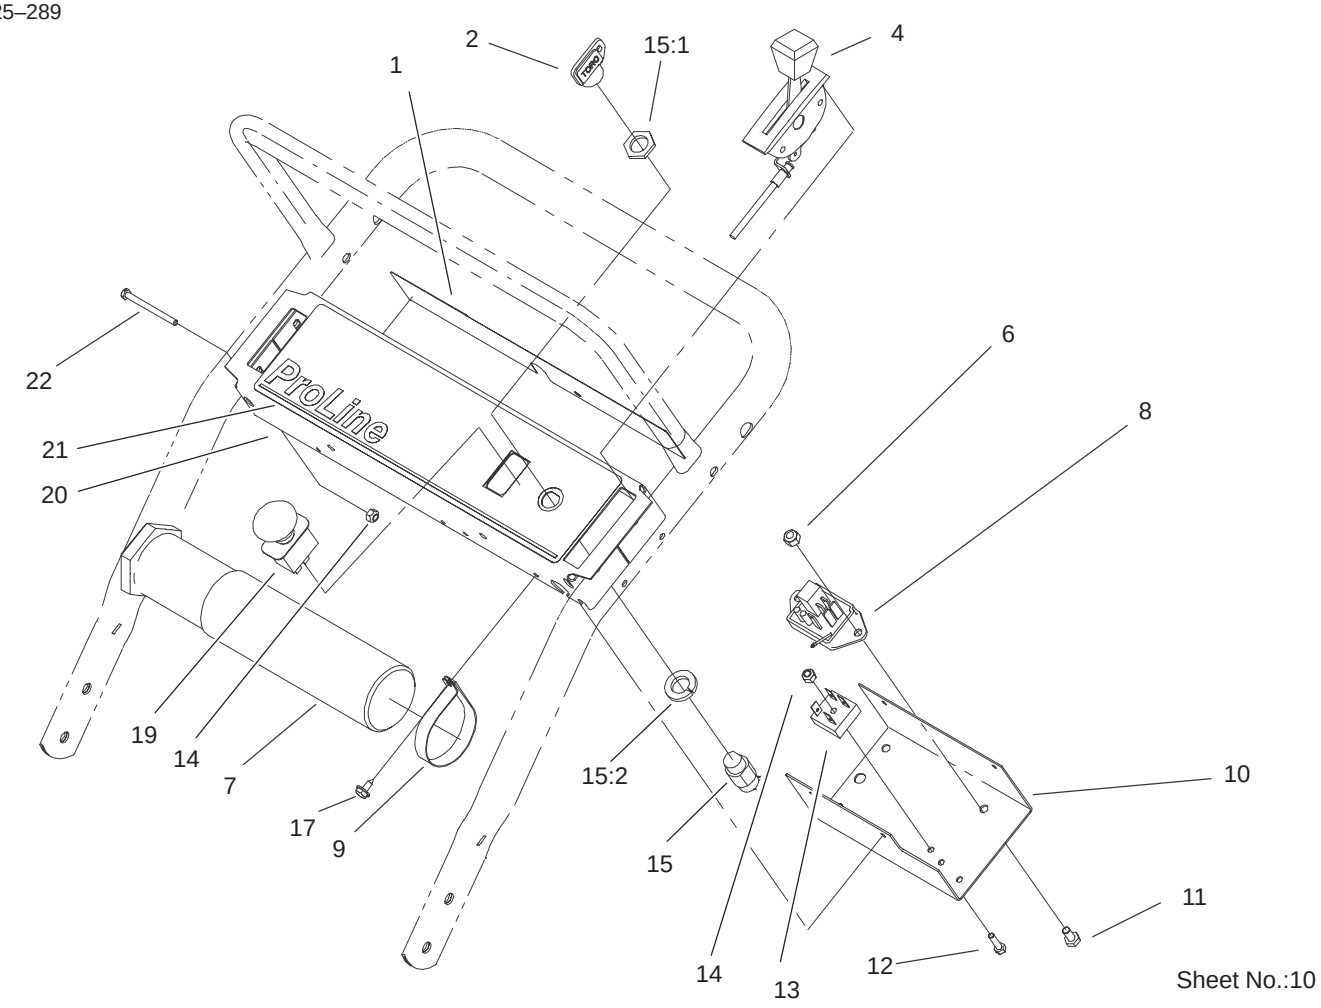


Sheet No.:10

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	105–0885	1	Decal–Danger
2	63–8360	2	Key–Ignition
4	74–0740	1	Control–Throttle
6	3296–42	1	Nut–Lock, NI
7	74–0720	1	Tube–Manual
8	104–8141	1	Module–Delay
9	2412–120	2	R–Clamp
10	93–1187–03	1	Panel–Bottom
11	321–2	1	Screw–HH
12	32105–13	1	Screw–SHH
13	37–7600	1	Rectifier–Bridge
14	3296–2	5	Nut–Lock
15	29–5560	1	Switch–On Off
15:1	218–461	1	Nut–HH
15:2	3254–5	1	Washer–Lock, Internal
17	32104–76	4	Screw
19	104–8140	1	Switch–PTO
20	104–8177–03	1	Panel–Control
21	104–8181	1	Decal–Control Panel
22	32105–14	4	Screw

Ref. No.	Part No.	Qty.	Description

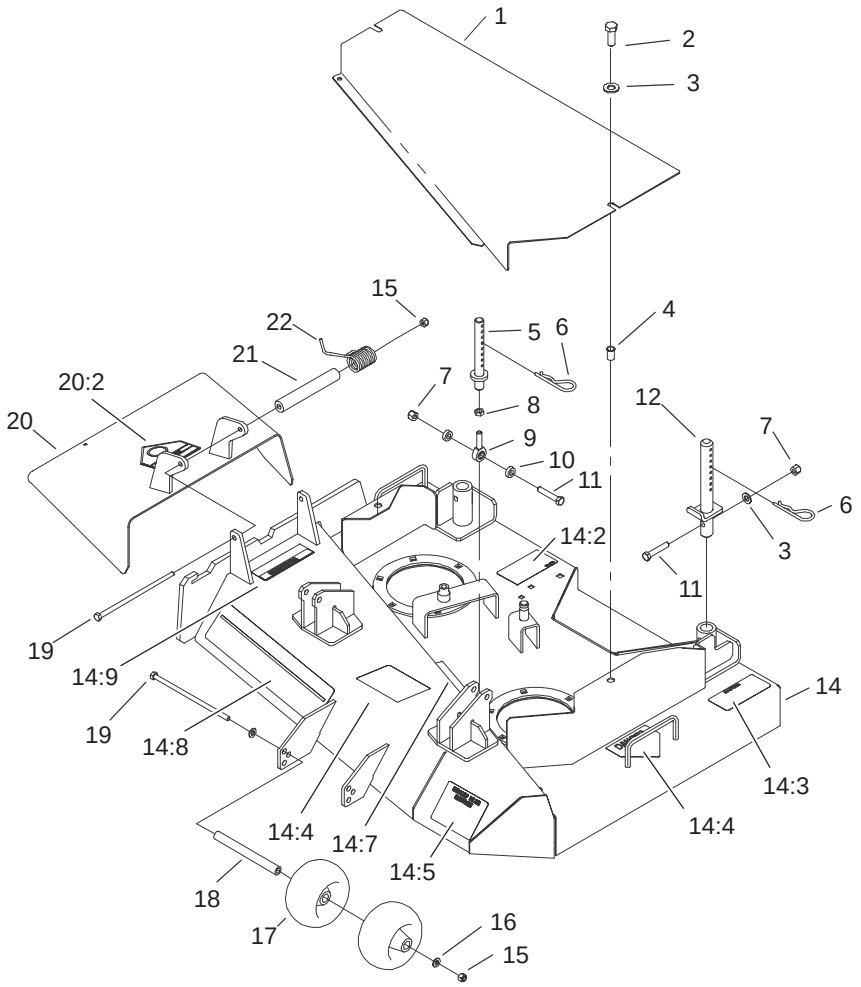


Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	104–8170–01	1	Cover–36
2	323–6	2	Screw–HH
3	3256–24	4	Washer–Flat
4	32148–9	2	Nut–Insert
5	105–0832	2	Link–Support
6	3290–256	6	Pin–Hair
7	3296–39	4	Nut–Lock, NI
8	3220–3	2	Nut–Jam
9	1–613204	2	Balljoint
10	104–1156	4	Spacer
11	323–10	4	Screw–HH
12	105–0831	2	Rod ASM
14	104–6391	1	Deck ASM
14:2	104–8185	1	Decal–Belt Routing
14:3	93–7818	1	Decal–Torque, Blade Bolt
14:4	93–7010	2	Decal–Danger
14:5	105–0841	1	Decal–Anti Scalp
14:7	98–1977	1	Decal–Warning,
14:8	104–8192	1	Decal–Proline 91 Cm
14:9	93–7828	1	Decal–Danger, Int'l
15	3296–29	2	Nut–Lock
16	3256–23	2	Washer–Flat
17	68–2730	2	Gage–Wheel
18	98–5967	1	Spacer – Wheel
19	322–50	2	Screw–Cap

Ref. No.	Part No.	Qty.	Description
20	105–0825	1	Deflector ASM
20:2	93–7316	1	Decal–Danger, Int'l
21	104–8555	1	Spacer–Mounting, Deflector
22	104–8554	1	Spring–Torsion

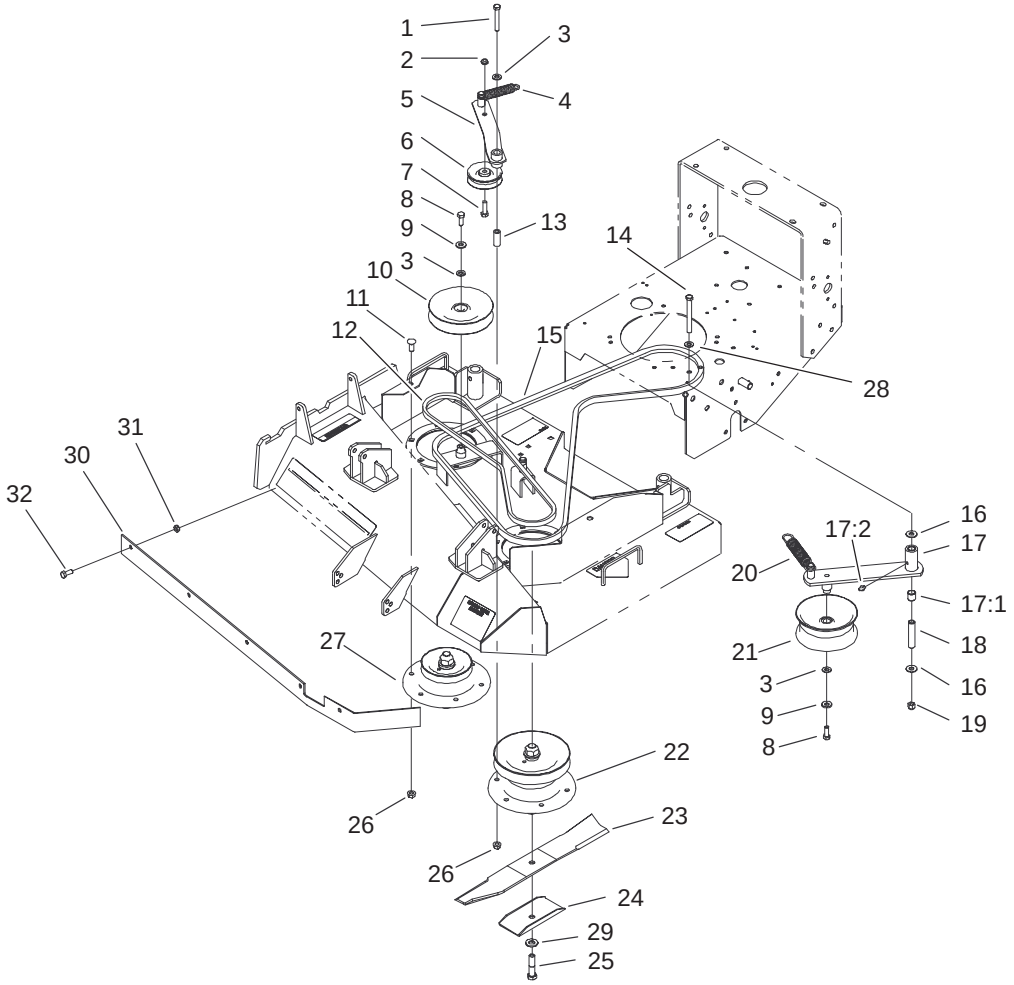


Sheet No.:3

Spindles, Pulleys and Belts Assembly

Ref. No.	Part No.	Qty.	Description
1	323–12	1	Screw–HH
2	3296–5	1	Nut–Lock NI
3	3256–24	3	Washer–Flat
4	105–2673	1	Spring – Extension
5	105–0889	1	Idler Arm ASM
6	51–3660	1	Pulley–Idler
7	3211–5	1	Screw–HH
8	323–6	2	Screw–HH
9	98–5975	2	Washer–Belleville
10	1–633166	1	Idler Pulley
11	3231–22	11	Screw–CARR
12	51–3530	1	V–Belt, Deck Drive
13	51–3641	1	Idler–Pivot Sleeve
14	323–42	1	Screw–HH
15	105–0887	1	Belt–Drive, PTO
16	1–809107	2	Washer–Hardened
17	104–6370	1	Idler Arm ASM
17:1	1–513034	2	Sleeve–Bearing
17:2	302–5	1	Fitting–Grease
18	104–6377	1	Tube – Idler
19	3296–39	1	Nut–Lock, NI
20	104–8161	1	Spring–Extension
21	1–413099	1	Pulley–Idler
22	104–6319	1	Spindle Housing ASM
23	27–0990	2	Blade
24	92–9820	2	Stiffener – Blade

Ref. No.	Part No.	Qty.	Description
25	44–2200	2	Screw – Blade
26	32128–21	12	Nut–HF
27	104–6317	1	Spindle Housing ASM
28	3256–4	1	Washer–Flat
30	93–9479–01	1	Baffle – Front
31	3296–47	6	Nut–Lock, NI
32	322–3	6	Screw–HH

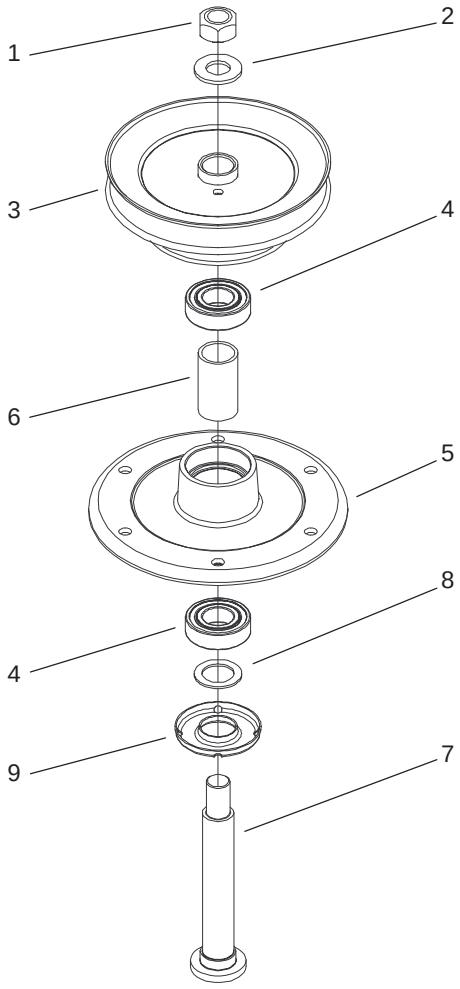


Sheet No.:A1
C–3011

Spindle Housing Assembly No. 104–6319

Ref. No.	Part No.	Qty.	Description
1	3219–7	1	Nut–Hex
2	7–4150	1	Washer–Pinion
3	104–1180	1	Pulley And Hub ASM
4	104–6325	2	Bearing
5	104–6307	1	Spindle Housing
6	104–6313	1	Spacer–Bearing
7	104–6311	1	Shaft–Spindle
8	88–7540	1	Washer – Backup
9	79–1920	1	Shield–Bearing

Ref. No.	Part No.	Qty.	Description

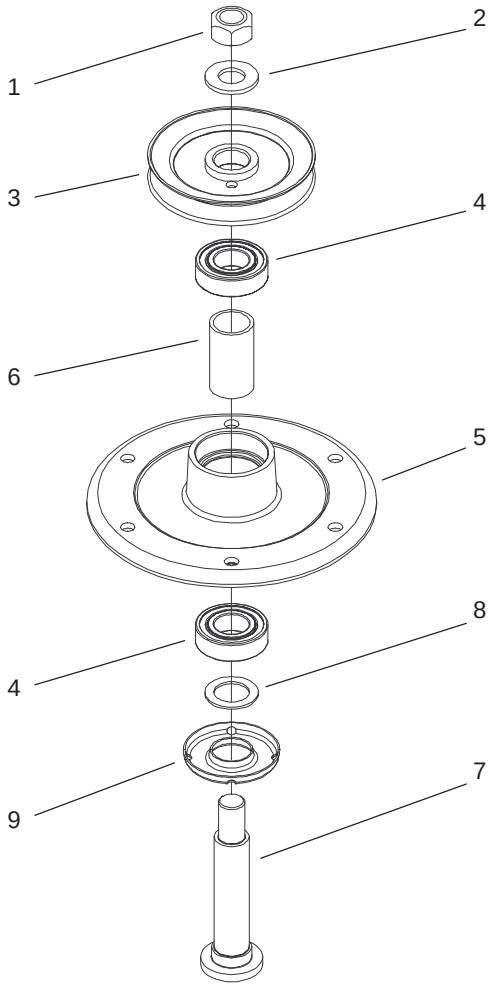


Sheet No.:A2
C–3012

Spindle Housing Assembly No. 104–6317

Ref. No.	Part No.	Qty.	Description
1	3219–7	1	Nut–Hex
2	7–4150	1	Washer–Pinion
3	104–1118	1	Pulley And Hub ASM
4	104–6325	2	Bearing
5	104–6307	1	Spindle Housing
6	104–6313	1	Spacer–Bearing
7	104–6310	1	Shaft–Spindle
8	88–7540	1	Washer – Backup
9	79–1920	1	Shield–Bearing

Ref. No.	Part No.	Qty.	Description

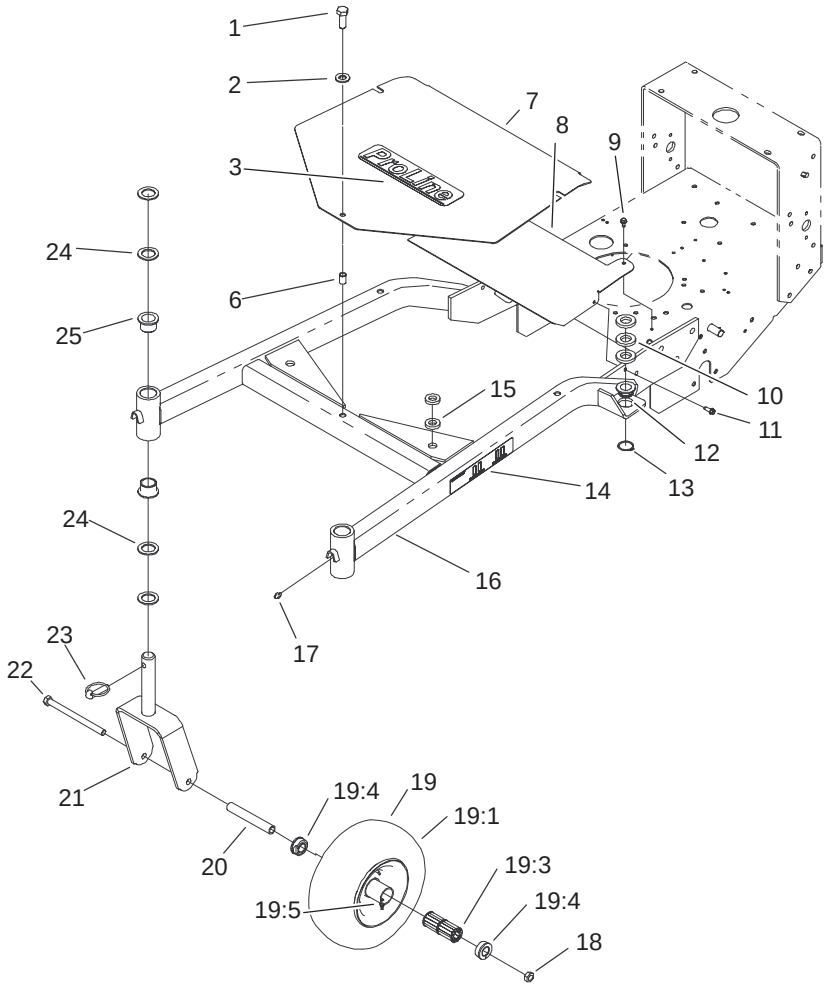


Sheet No.:4


Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	323–6	3	Screw–HH
2	3256–24	3	Washer–Flat
3	74–2080	1	Decal–Proline
6	32148–9	3	Nut–Insert
7	104–8167–01	1	Cover–Carrier Frame
8	105–0846–01	1	Sheild–Heat
9	12–3270	2	Screw
10	104–1105	6	Spacer–Deck Support
11	49–2040	2	Screw–Tapping
12	1–513336	2	Bushing – Deck
13	32120–33	2	Ring–Retaining
14	104–8184	2	Decal–HOC
15	105–0842	4	Spacer
16	104–1108–01	1	Carrier Frame ASM
17	302–5	2	Fitting–Grease
18	32153–5	2	Nut–Lock
19	104–1170	2	Castor Wheel ASM
19:1	104–1169	1	Tire And Tube ASM
19:3	62–5570	2	Bearing–Roller
19:4	62–5580	2	Bearing–Outside
19:5	302–11	1	Fitting–Lube, 45°
20	104–1189	2	Bushing–Spanner
21	104–1183–01	2	Castor Fork ASM
22	325–33	2	Screw–HH
23	283–71	2	Pin–Lynch
24	3–6781	8	Washer–Thrust
25	94–1291	4	Bushing–Special

Schematic

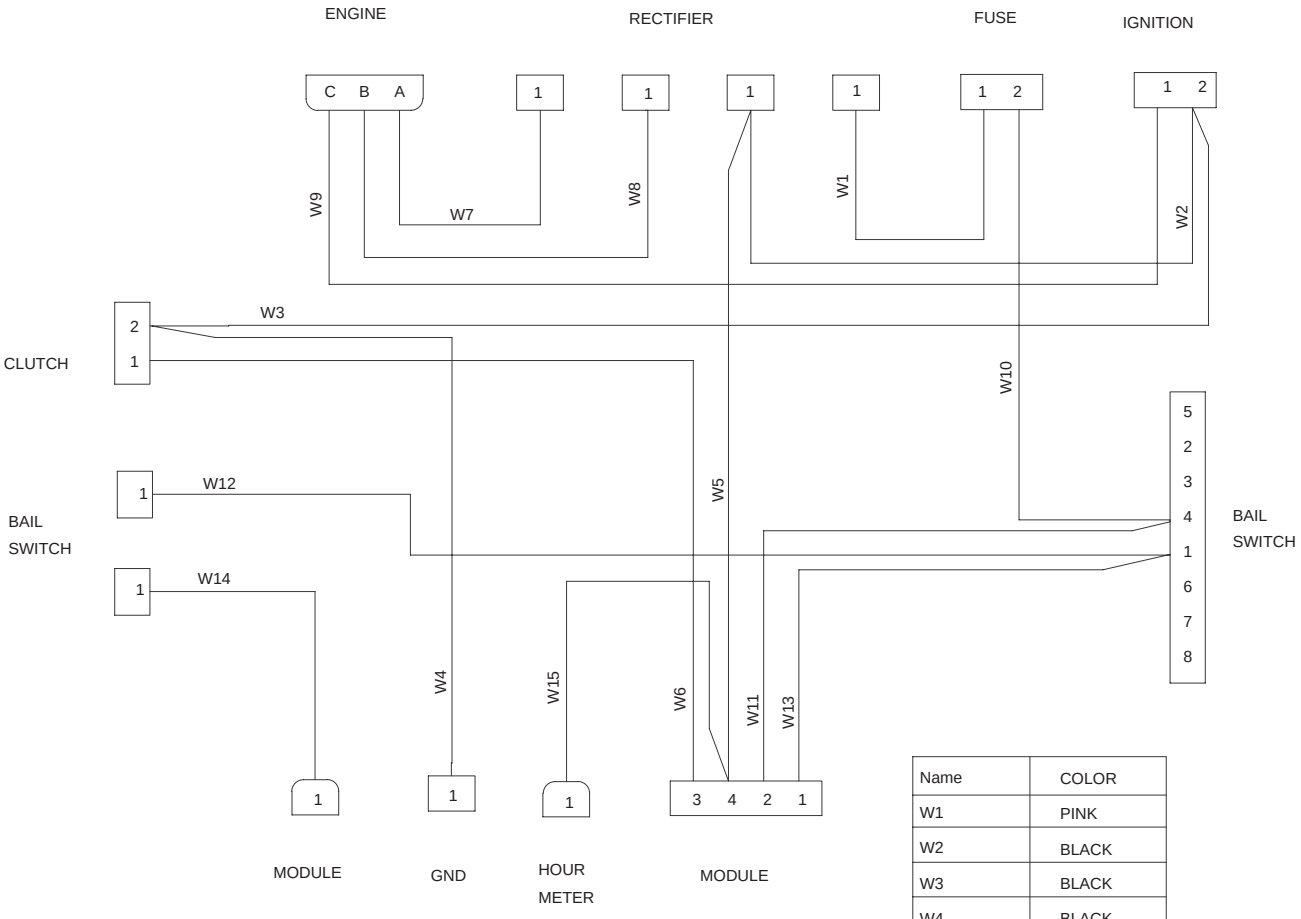

Name	COLOR
W1	PINK
W2	BLACK
W3	BLACK
W4	BLACK
W5	BLACK
W6	GREEN
W7	BLUE
W8	BLUE
W9	WHITE
W10	PINK
W11	PINK
W12	ORANGE
W13	ORANGE
W14	BROWN
W15	BLACK

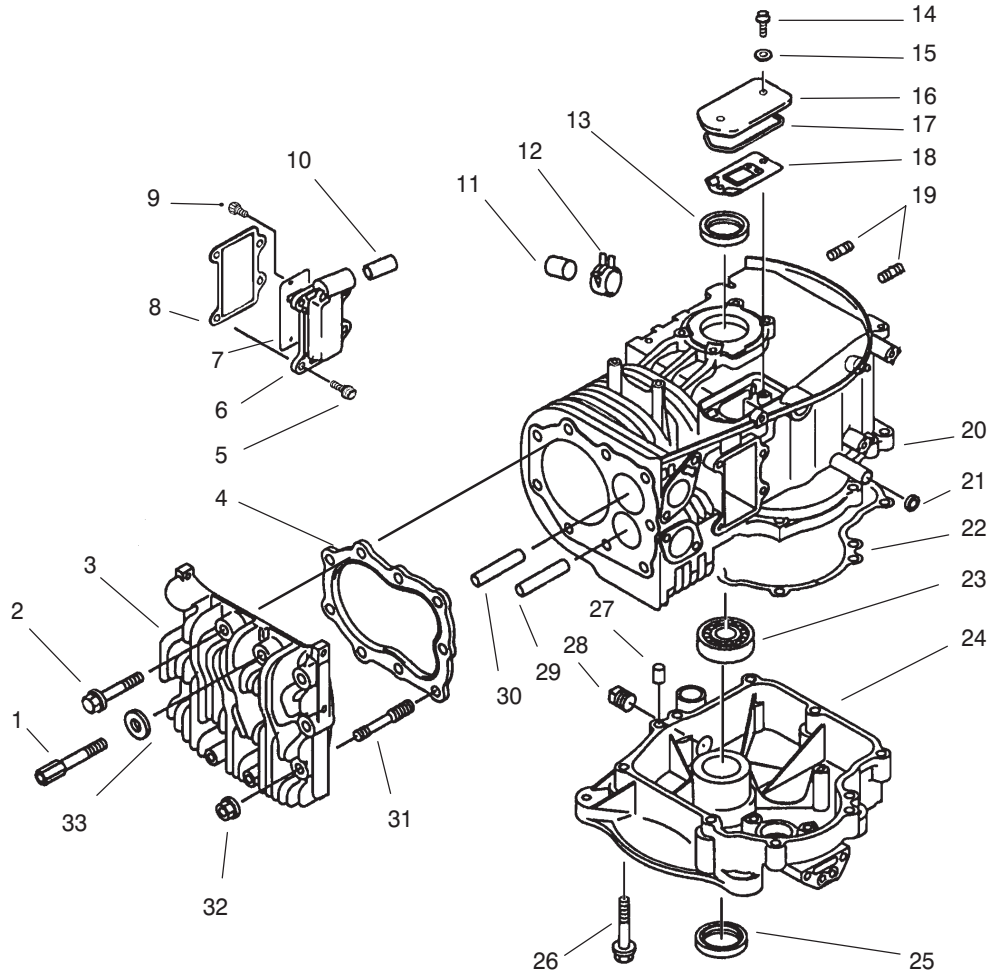


Crankcase Assembly – Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	92002–2258	2	Bolt
2	130g1055	4	Bolt–Flange
3	11001–2151	1	Head–Cylinder
4	11004–2091	1	Gasket–Head
5	130g0616	4	Bolt–Flange
6	49108–2011	1	Cover–Valve Chamber
7	14025–2143	1	Cover
8	11060–2059	1	Gasket
9	92009–2307	2	Screw
10	92059–2142	1	Tube
11	92066–2096	1	Plug
12	92170–2088	1	Clamp
13	92049–2096	1	Seal–Oil
14	92002–2087	2	Bolt
15	11060–2323	2	Gasket
16	14025–2040	1	Cover–Breather
17	11009–2339	1	Gasket–Cover
18	14069–2062	1	Breather
19	92004–2083	4	Stud–6 X 14
20	49120–6108	1	Crankcase–Complete
21	92049–2097	1	Seal–Oil
22	11060–2015	1	Gasket–Crankcase
23	601a6207	1	Bearing–Ball
24	49015–6176	1	Cover–Crankcase
25	92049–2227	1	Seal–Oil
26	130g0845	8	Bolt–Flange

Ref. No.	Part No.	Qty.	Description
27	92043–1263	2	Pin
28	92066–2097	1	Plug
29	49002–2071	1	Guide–Valve Exhaust
30	49002–2070	1	Guide–Valve Intake
31	92004–2082	3	Stud
32	92015–2115	3	Nut
33	410b1000	2	Washer–Plain

*Order Parts from Kawasaki

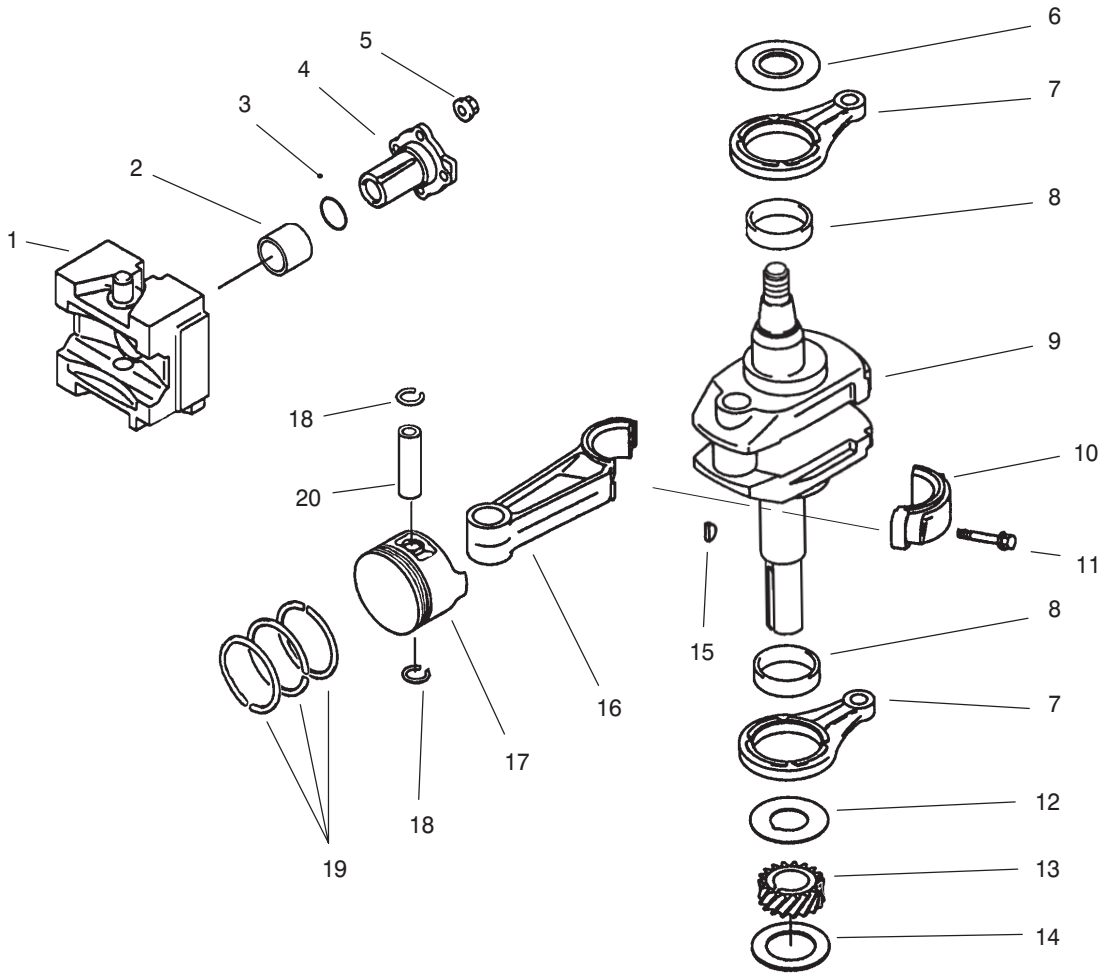


Piston and Crankshaft Assembly
Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	13042–6006	1	Weight Incl #2
2	92141–2097	1	Bearing–Plane
3	92055–2072	1	O–Ring
4	13107–2253	1	Shaft
5	92015–1193	4	Nut
6	92026–2164	1	Spacer
7	46102–6007	2	Rod Incl #8
8	92141–2108	2	Bearing–Plane
9	49119–2177	1	Crankshaft ASM
11	92050–2193	2	Bolt
12	92026–2156	1	Spacer
13	59056–2105	1	Gear–Helical
14	92025–2145	A/R	Shim T=1.18
14	92025–2146	A/R	Shim T=1.25
14	92025–2147	A/R	Shim T=1.32
14	92025–2148	A/R	Shim T=1.39
14	92025–2149	A/R	Shim T=1.46
14	92025–2150	A/R	Shim T=1.53
14	92025–2151	A/R	Shim T=1.60
14	92025–2152	A/R	Shim T–1.67
14	92025–2153	A/R	Shim T=1.74
14	92180–2015	A/R	Shim T=1.11
14	92180–2016	A/R	Shim T=1.81
15	92038–2094	1	Key

Ref. No.	Part No.	Qty.	Description
16	13251–6005	1	Rod ASM Incl #10 11
16	13251–6007	A/R	Rod ASM Incl #10 11 0.50
17	13001–2084	1	Piston
17	13029–2019	A/R	Piston 0.25
17	13029–2020	A/R	Piston 0.50
18	92033–2066	2	Ring–Snap
19	13008–6001	1	Set–Ring Piston
19	13008–6002	A/R	Set–Ring Piston 0.25
19	13008–6003	A/R	Set–Ring Piston 0.50
20	13002–2066	1	Pin–Piston

*Order Parts from Kawasaki

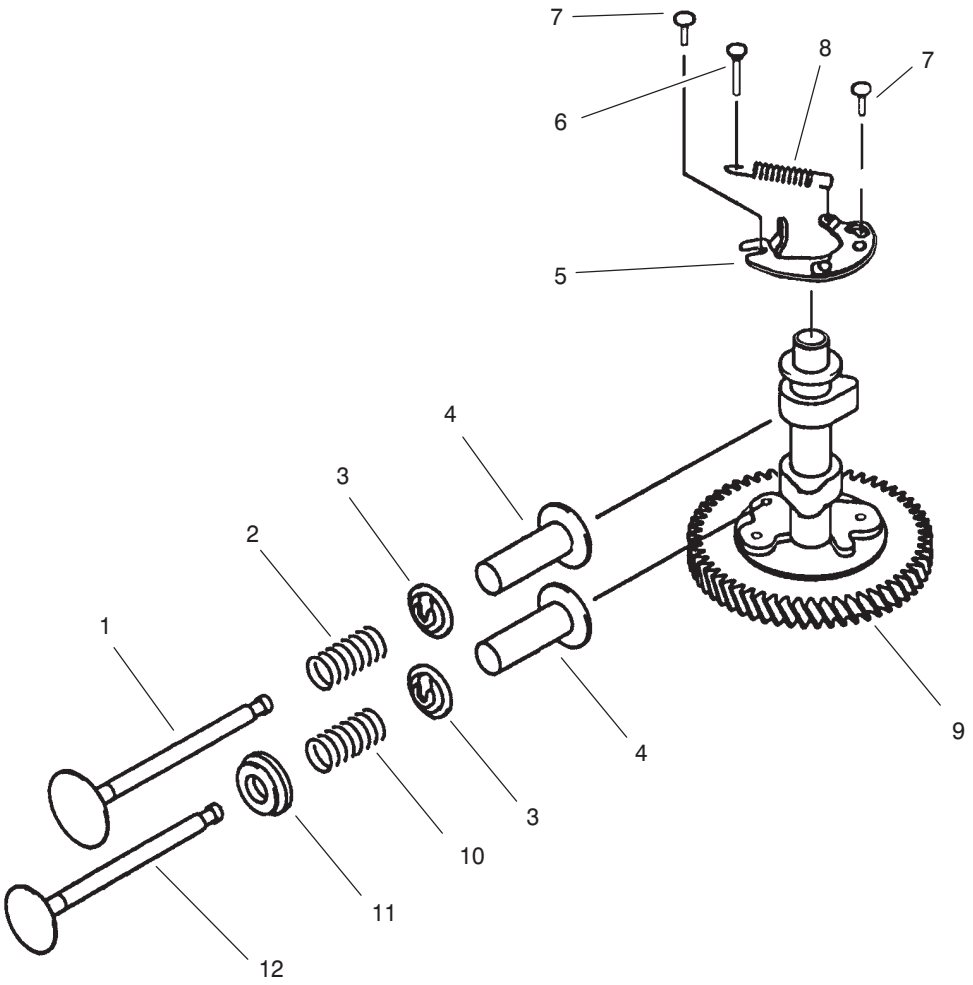


Valves and Camshaft Assembly
Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	12004–2076	1	Valve–Intake
2	49078–2059	1	Spring–Valve
3	39108–2054	2	Retainer–Spring
4	12032–2058	2	Tappet
5	21118–2068	1	Decompressor
6	92043–2167	1	Pin
7	92043–2113	2	Pin
8	92144–2171	1	Spring
9	49118–2134	1	Camshaft Incl # 5–8
10	49078–2058	1	Spring–Valve
11	12039–2052	1	Rotator
12	12005–2066	1	Valve–Exhaust

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

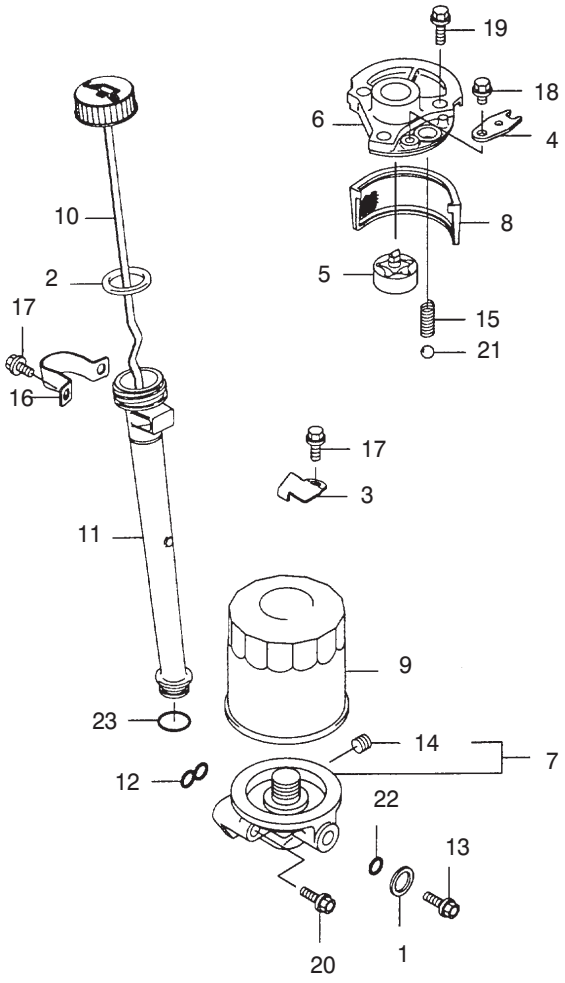


Lubrication Equipment Assembly
Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	11009–2175	1	Gasket
2	11009–2346	1	Gasket–Oil Gauge
3	13169–2359	1	Plate
4	13270–2054	1	Plate
5	16082–2057	1	Pump Assy–Oil
6	16142–6001	1	Cover–Pump
7	23062–6001	1	Bracket–Comp
8	49065–2056	1	Filter–Oil
9	49065–2071	1	Filter–Oil
10	52005–2058	1	Gauge–Oil
11	59231–2059	1	Filler
12	92055–2063	1	Ring–O
13	92066–2093	1	Plug
14	92066–2211	1	Plug
15	92081–2216	1	Spring
16	92170–2014–9H	1	Clamp
17	130B0508	3	Bolt–Flanged
18	130B610	1	Bolt–Flanged
19	130G0825	3	Bolt–Flanged
20	130G0845	2	Bolt–Flanged
21	600A1000	1	Ball–Steel
22	670D1507	1	O Ring
23	670D2016	1	O Ring

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

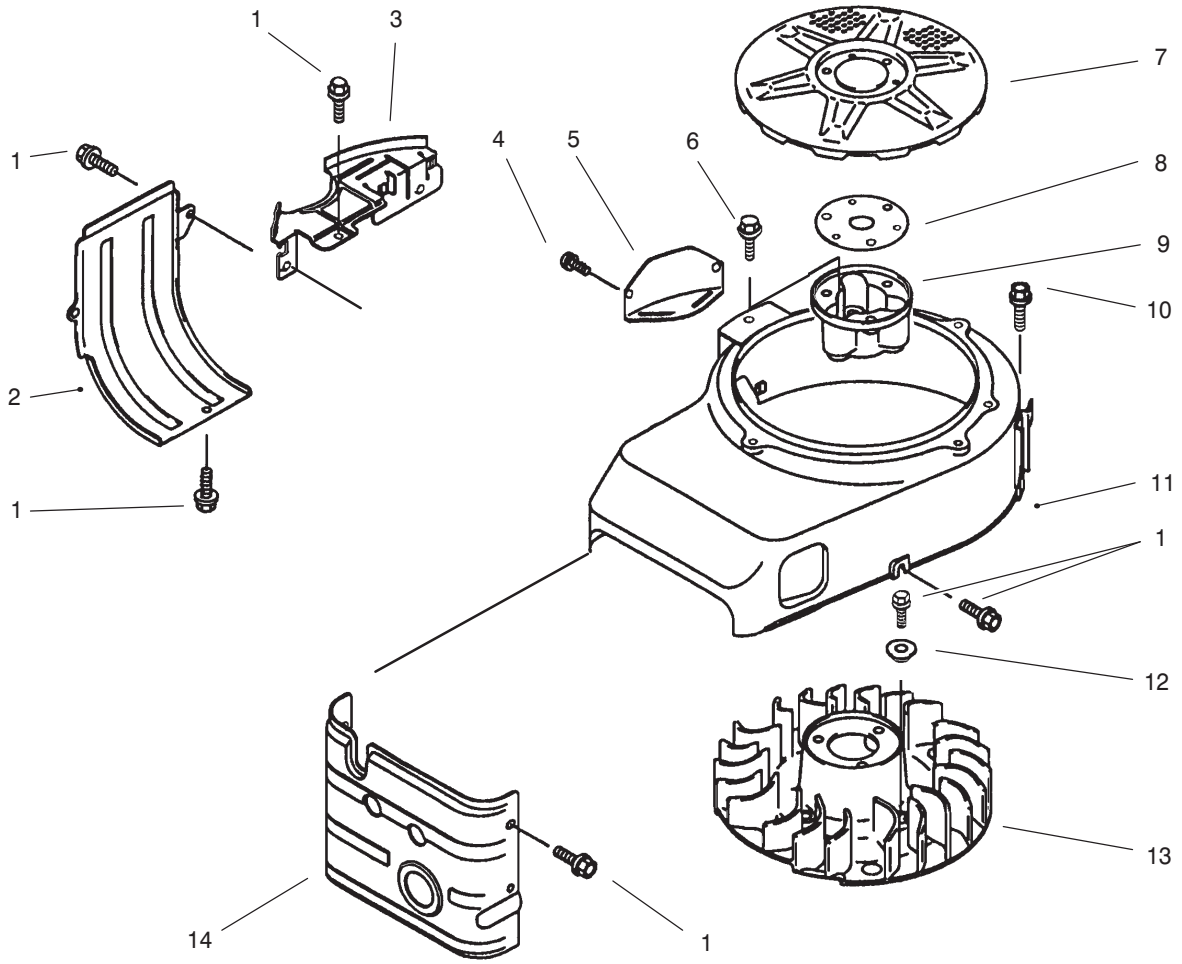


Cooling Equipment Assembly
Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	130g0610	9	Bolt–Flange
2	49089–2199–9H	1	Shroud–Engine
3	59066–2295–9H	1	Housing–Fan
4	234b0408	2	Screw
5	14024–2038–9H	1	Cover
6	130b0820	3	Bolt–Flange
7	14037–2104–9H	1	Screen
8	92025–2003	1	Shim T–1.20
9	11044–2084	1	Bracket
10	130go614	6	Bolt–Flange
11	59066–2677–9H	1	Housing–Fan
12	92143–2179	4	Collar
13	59041–2081	1	Fan
14	49089–2181–9H	1	Shroud–Engine

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

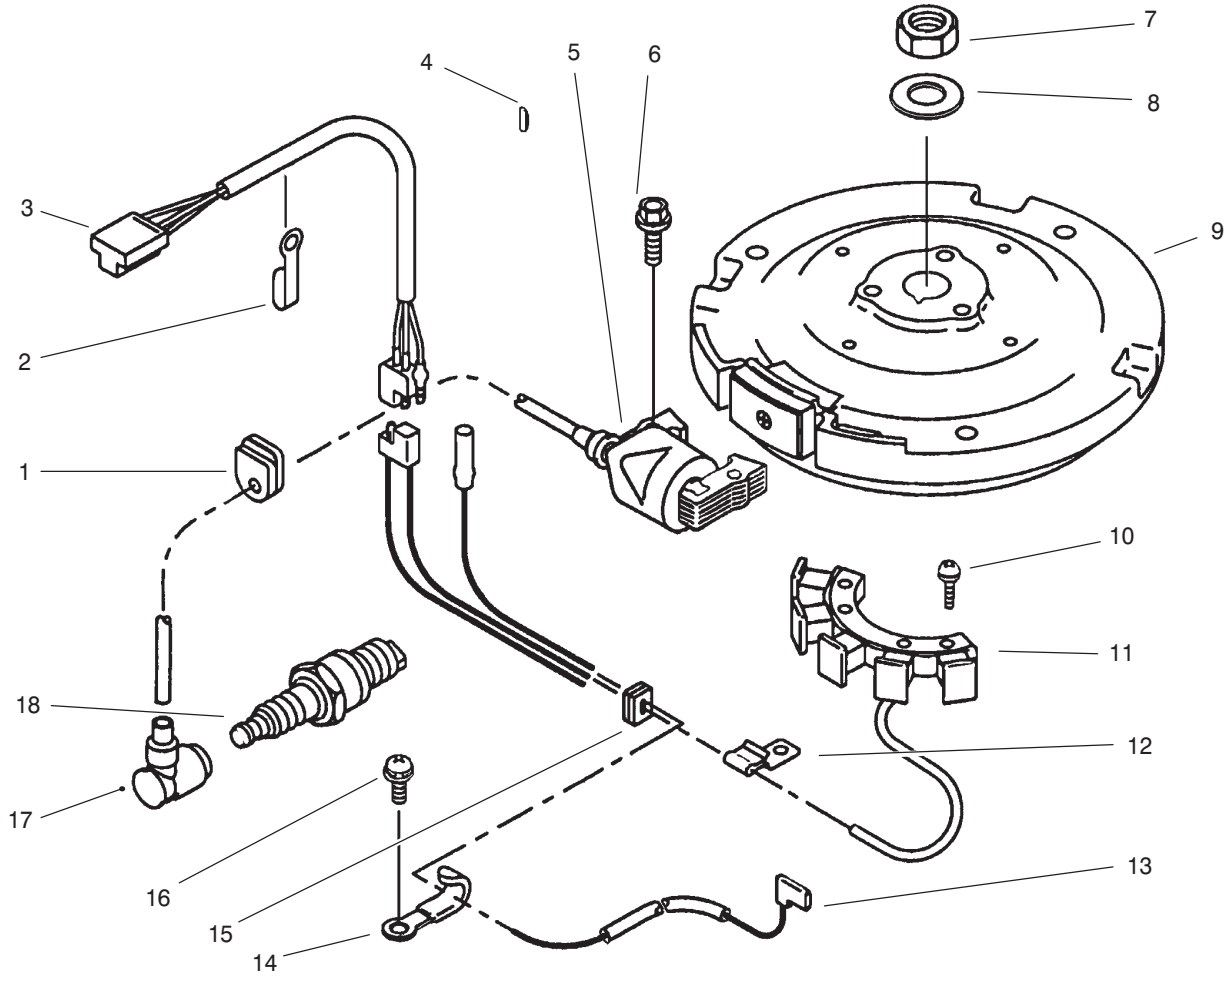


Electric Equipment Assembly
Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
192071–2100		1	Grommet
2	92037–2063	1	Clamp
3	26001–2113	1	Harness–Wire
4	92038–2094	1	Key
5	21121–2086	1	Coil–Ignition
6	130b0520	2	Bolt–Flange
7	314g1800	1	Nut–Hex
8	92022–2178	1	Washer
9	21194–2323	1	Flywheel
10	224b0620	2	Screw
11	59031–2106	1	Coil–Charging
12	92037–2158	1	Clamp
13	26011–2329	1	Wire–Lead
14	92170–2029	1	Clamp
15	92071–2099	1	Grommet
16	234b0408	1	Screw
17	21130–2060	1	Cap–Spark Plug
18	92070–2101	1	Spark Plug–Rcj8

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

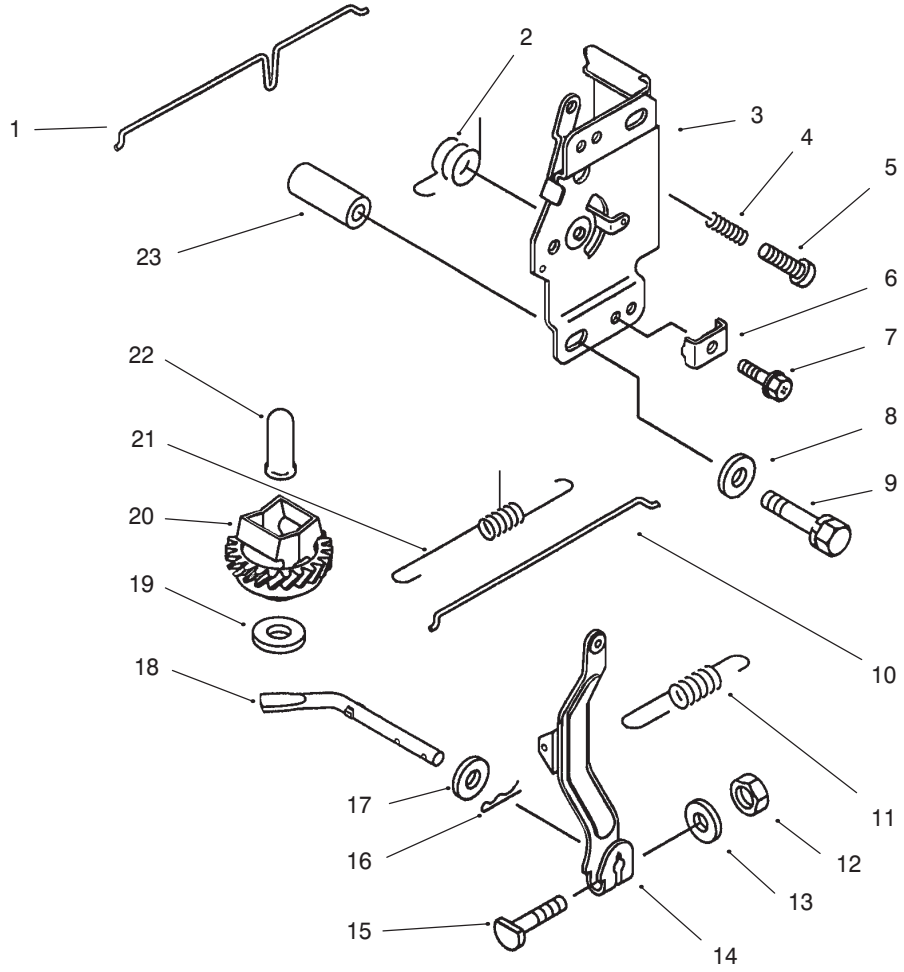


Control Equipment Assembly
Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	16169–2126	1	Link–Choke
2	92081–2316	1	Spring
3	49113–2067	1	Panel Incl #2 4–7
4	92144–2266	1	Spring
5	214b0425	1	Screw
6	92037–2020	1	Clamp
7	92150–2128	1	Bolt
8	92200–2070	2	Washer
9		2	Bolt
10	16171–2083	1	Link
11	39129–2019	1	Spring–Governor
12	311b0600	1	Nut–HH
13	411b0600	1	Washer
14	21187–2052	1	Arm ASM
15	92002–2269	1	Bolt
16	554a0600	1	Pin–Snap
17	92200–2029	1	Washer
18	39003–2072	1	Arm–Pivot
19	92200–2036	1	Washer
20	49110–2067	1	Governor ASM
21	92081–2213	1	Spring
22	42036–2060	1	Sleeve
23	92027–2071	2	Collar

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

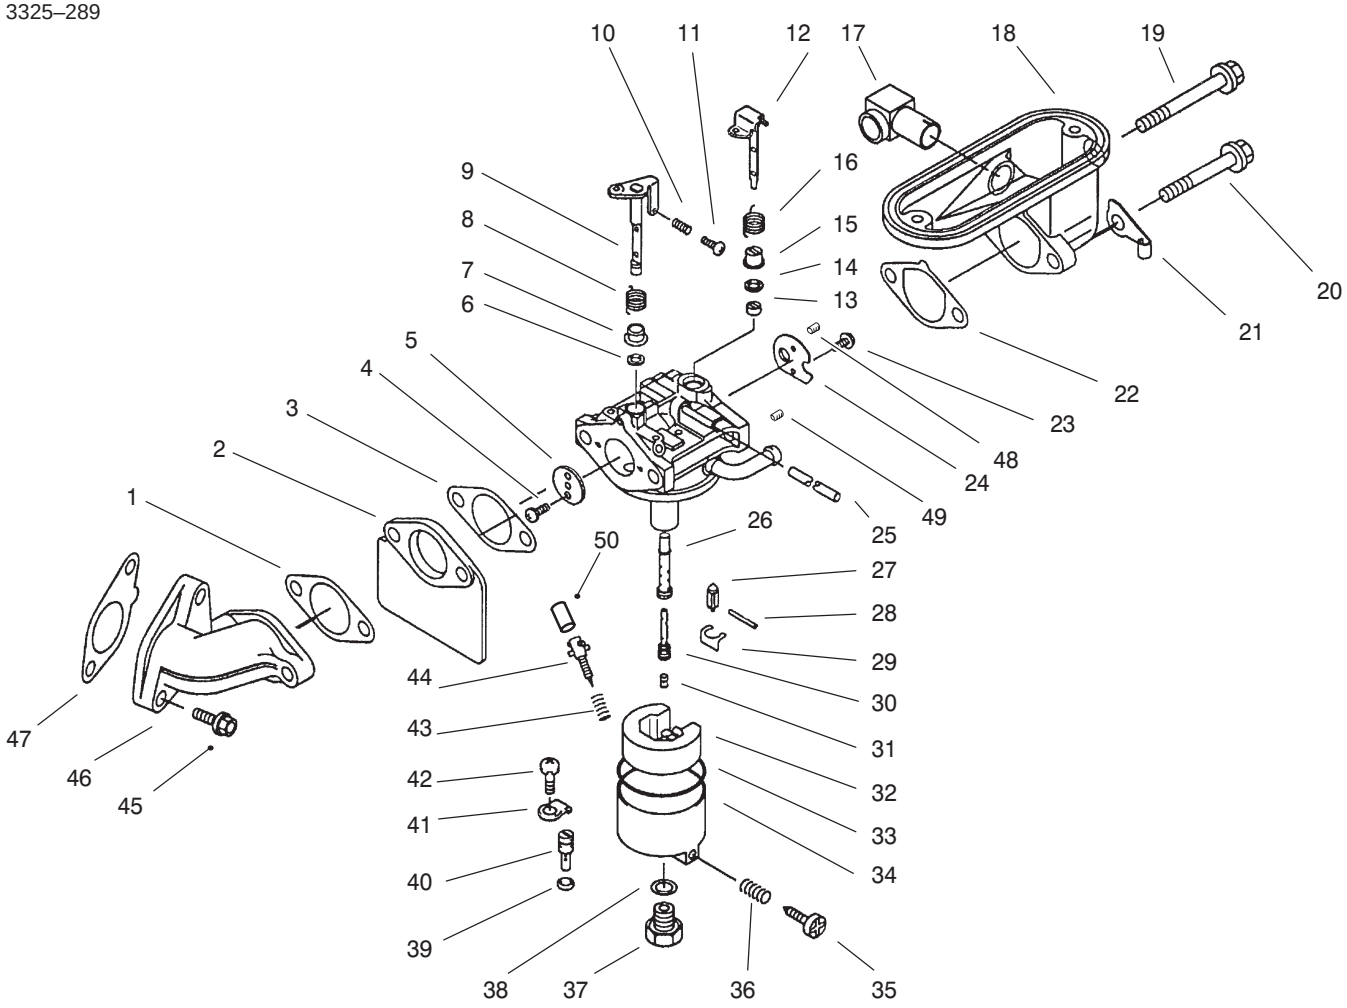


Carburetor Assembly – Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
0	15003–2467	1	Carburetor ASM
1	11060–2338	1	Gasket–Intake Pipe
2	16073–2091	1	Insulator
3	11060–2339	2	Gasket–Carburetor
4	92009–2080	2	Screw
5	16025–2141	1	Valve–Throttle #110
6	92093–2082	1	Seal
7	92027–2025	1	Collar
8	92081–2077	1	Spring
9	16041–2009	1	Shaft–Throttle
10	92081–2046	1	Spring
11	92009–2079	1	Screw
12	16041–2010	1	Shaft–Choke
13	92027–2003	1	Collar
14	92093–2069	1	Seal
15	92143–2142	1	Collar
16	92144–2160	1	Spring
17	59071–2062	1	Joint
18	16060–2108	1	Pipe–Intake
19	92002–2254	1	Bolt
20	92002–2253	1	Bolt
21	92170–2019	1	Clamp
22	11009–2025	1	Gasket
23	92009–2081	2	Screw
24	16126–2206	1	Valve–Choke
25	92059–2266	1	Tube

Ref. No.	Part No.	Qty.	Description
26	49121–2207	1	Nozzle–Main
27	16030–2073	1	Valve–Float
28	92043–2006	1	Pin
29	92033–2067	1	Ring–Snap
30	49123–2078	1	Holder–Main Jet
31	92063–2294	1	Jet–Main
32	16031–2066	1	Float
33	11009–2024	1	Gasket
34	16020–2109	1	Chamber–Float Incl 35 36
35	92009–2015	1	Screw
36	92081–2009	1	Spring
37	92150–2146	1	Bolt
38	1100a–2025	1	Gasket
39	16038–024	1	Gasket
40	92064–2108	1	Jet–Pilot
41	13183–2252	1	Plate
42	92009–2244	1	Screw
43	92081–2008	1	Spring
44	16014–2076	1	Screw–Pilot Air
45	130g0825	2	Bolt–Flange
46	16060–2109	1	Pipe–Intake
47	11060–2337	1	Gasket–Intake Pipe
48	16035–2063	1	Jet–Air #0.9
49	16035–2051	1	Jet–Air #1.4
50	39076–2053	1	Limiter

*Order Parts from Kawasaki

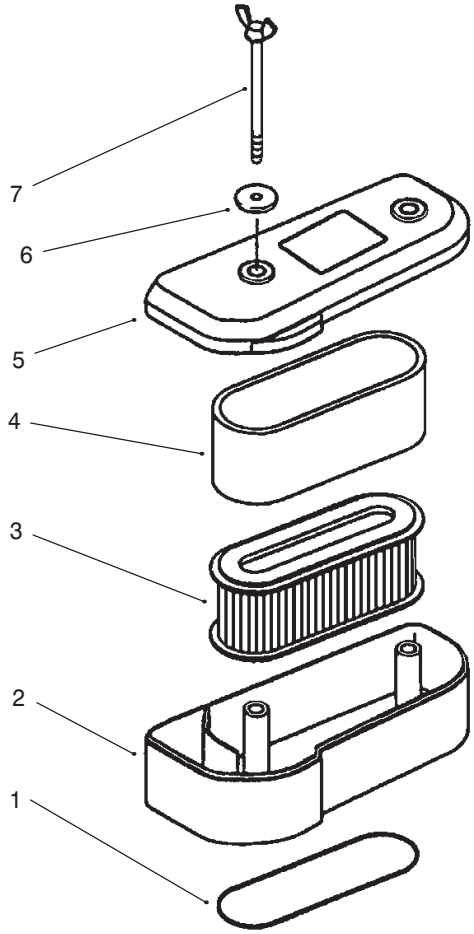


Air Filter Assembly – Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	11009–2443	1	Gasket–Air Filter
2	11011–2174	1	Case–Air Filter
3	11013–2021	1	Element–Air Filter
4	11013–2020	1	Element–Air Filter
5	11012–2192	1	Cap–Air Filter
6	92022–2220	2	Washer
7	92002–2230	2	Bolt
	11010–2291	1	Filter ASM

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

3325–289

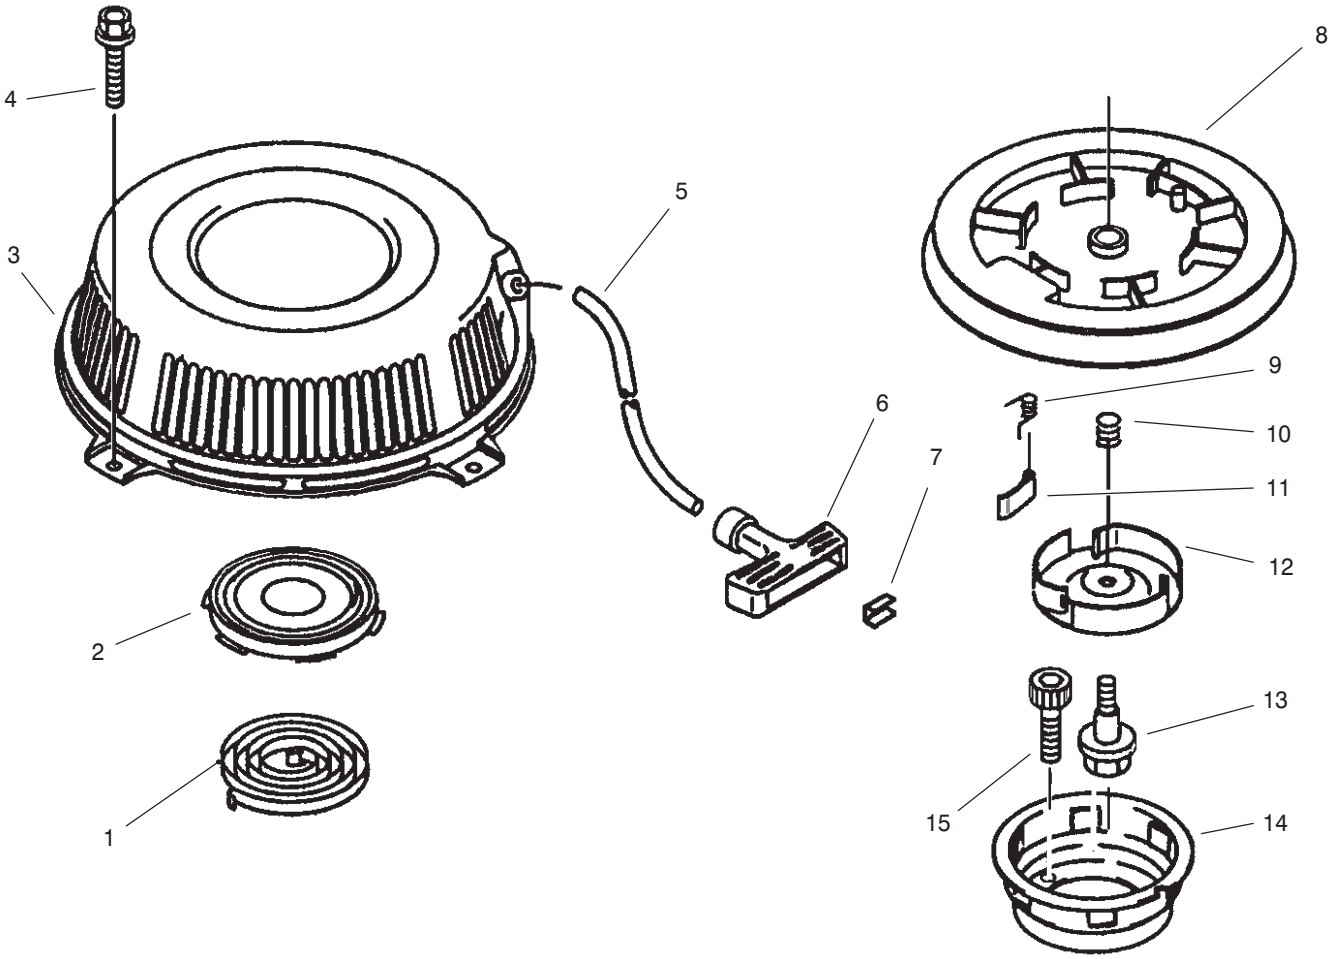


Starter Assembly – Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	90281–2267	1	Spring–Recoil
2	32099–2060	1	Case–Spring
3	32099–2239–yk	1	Case–Recoil Starter
4	130b0610	4	Bolt–Flange
5	59106–2060	1	Rope–Starter
6	46075–2059	1	Grip–Starter Rope
7	92022–2248	1	Washer
8	59101–2054	1	Reel–Recoil Starter
9	92081–2021	3	Spring
10	92081–2268	1	Spring–Return
11	13165–2073	3	Pawl–Recoil Starter
12	14020–2054	1	Retainer–Recoil
13	92001–2027	1	Bolt
14	49080–2144	1	Pulley–Starting
15	120p0620	3	Bolt–Socket
	49088–2412–yk	1	Starter Incl #1–5 8–14

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

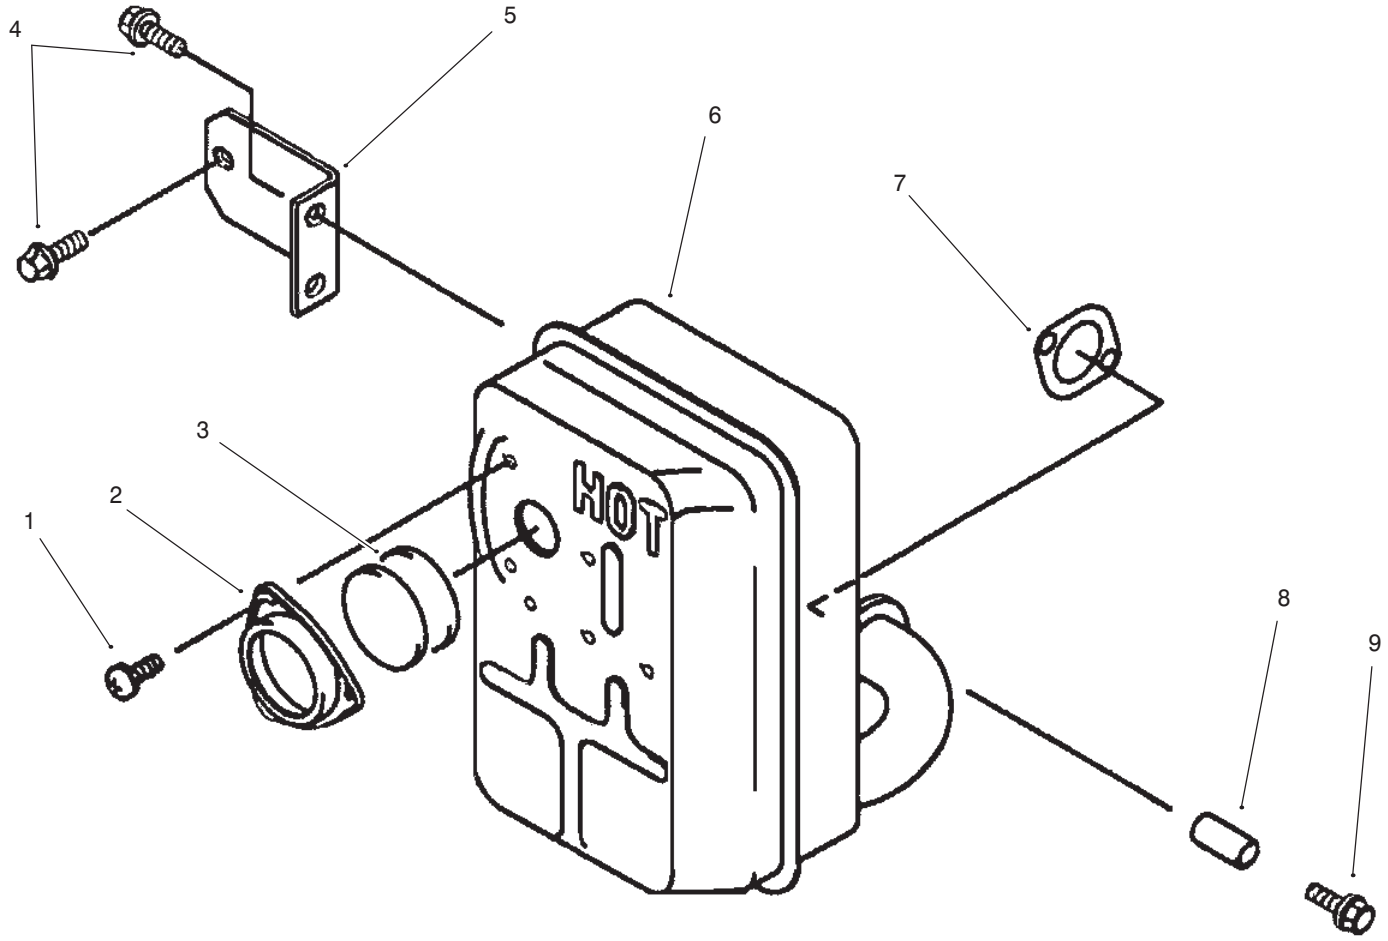

Muffler Assembly – Kawasaki Model FB460V–LS08

Ref. No.	Part No.	Qty.	Description
1	92009–2166	2	Screw
2	11012–2165–9Y	1	Cap–Spark Arrestor
3	18077–2054	2	Arrestor–Spark
4	130b0812	4	Bolt–Flange
5	11044–2069–9Y	1	Bracket
6	49069–2190–9Y	1	Muffler ASM
7	11009–2527	1	Gasket–Muffler
8	92027–2081	1	Collar
9	130g0845	1	Bolt–Flange

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki


TORO®