Form No. 3325-357

5, 7 and 11 Blade Cutting Unit

Reelmaster® 335D, 450D and 4500D

Model No. 03753—210000001 and Up
Model No. 03756—210000001 and Up
Model No. 03751—210000001 and Up
Model No. 03752—210000001 and Up
Model No. 03754—210000001 and Up
Model No. 03741—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000
All Rights Reserved


Contents

Description	Page
Right Hand and Center Cutting Unit Assembly	3
Left Hand Cutting Unit Assembly	6
Overhaul Kit No. 95-4389	9
Gauge Bar, Angle Indicator and Handle Assembly	10
Roller Assembly No. 59-5630	11

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

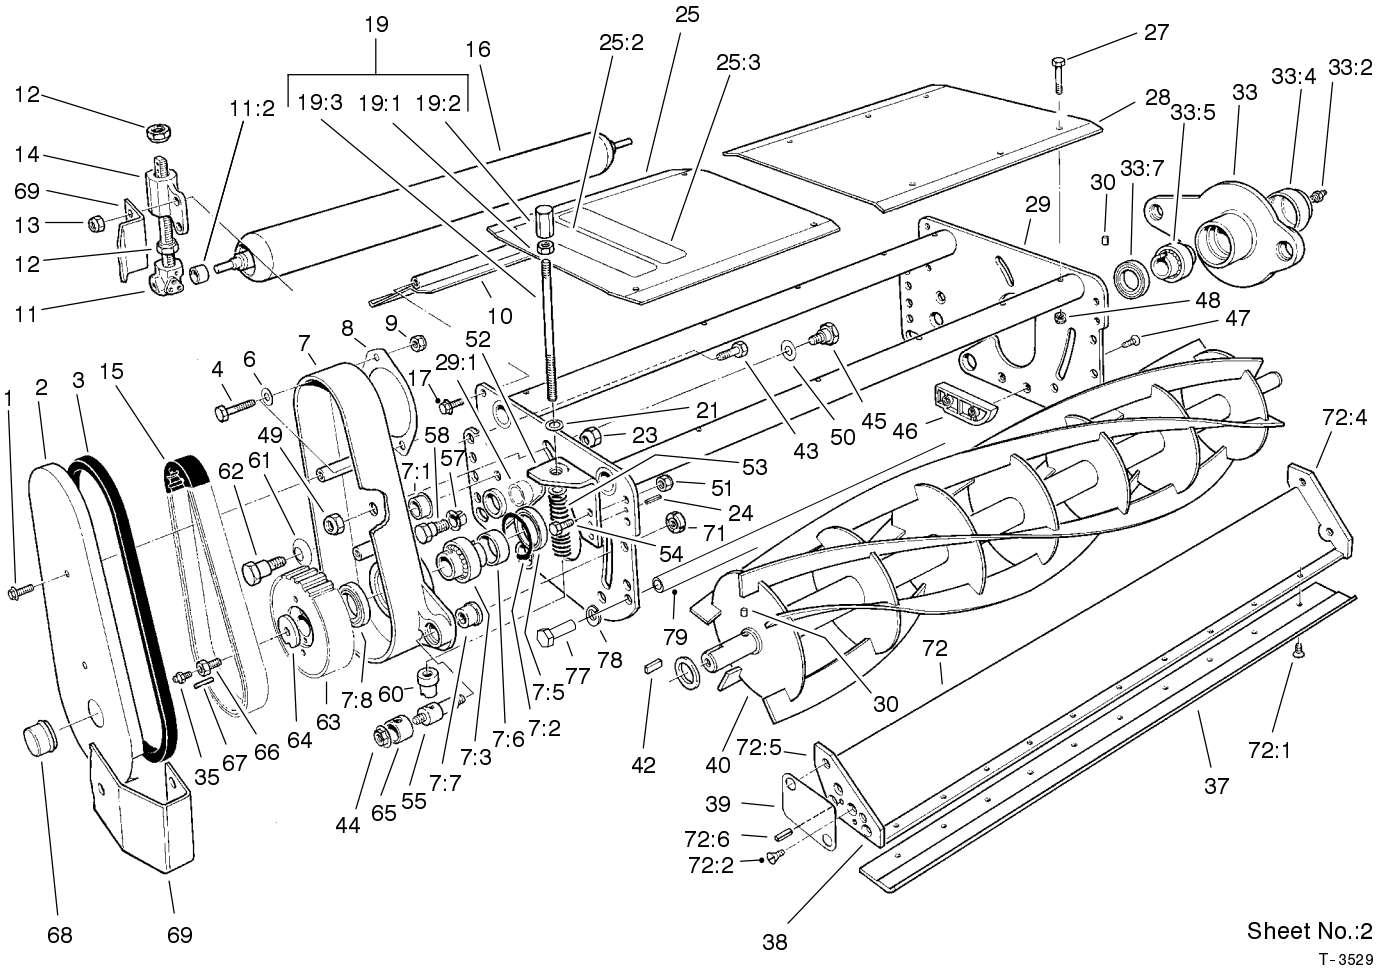


Right Hand and Center Cutting Unit Assembly

Ref. No.	Part No.	Qty.	Description
1	3234-14	2	Screw-HHF
2	75-7580-01	1	Cover-Plate, RH
3	47-7170	1	Gasket-Cover
4	324-6	2	Screw-HH
6	3256-25	1	Washer-Flat
7	13-7759	1	Housing & Bearing ASM
7:1	256-252	1	Bearing-Flange
7:2	32151-71	1	Ring-Retaining
7:3	59-6140	1	Bearing
7:5	92-9250	1	Seal - Grease
7:6	92-9251	1	Sleeve - Wear
7:7	92-9252	1	Bushing-Flange
7:8	93-1414	1	Seal - Grease
8	48-9050	1	Shield-Plate, Drive
9	3296-48	2	Nut-Lock NI
10	75-7680-01	1	Deflector-Grass
11	84-6160	2	Collar & Bushing ASM
11:2	59-5780	1	Roller Bushing ASM
12	59-5820	4	Nut-Cone
13	3296-25	4	Nut-Lock NI
14	59-5770-01	2	Housing-Adj
15	47-7160	1	Belt
16	59-5630	1	Roller ASM
17	3234-12	2	Screw-HHF

Ref. No.	Part No.	Qty.	Description
19	13-9399	2	Adj Screw & Knob ASM
19:1	3218-5	1	Nut-Jam
19:2	72-0380	1	Hex - Knob
19:3	72-0390	1	Rod-Adjusting
21	257-5	4	Washer-Thrust
23	242-50	2	Nut - Lug
24	32121-2	2	Pin-Roll
25	100-9993	1	Front Cover ASM
25:2	93-6688	1	Decal-Danger, Europe
25:2	67-7960	1	Decal-Danger
25:3	93-7814	1	Decal-Danger, Europe
25:3	85-6410	1	Decal-Danger
27	3234-34	10	Flange
28	59-5830-01	1	Cover-Frame
29	14-0829	1	Reel Frame ASM
29:1	62-6110	4	Bushing ASM
30	48-8880	2	Pin-Dowel
33	13-7749	1	Housing & Bearing ASM
*33:1	256-252	1	Bearing-Flange
33:2	302-5	1	Fitting-Grease
33:4	59-5560	1	Cap - Dust
33:5	59-6140	1	Bearing
*33:6	92-9252	1	Bushing-Flange
33:7	93-1414	1	Seal - Grease

* Not illustrated

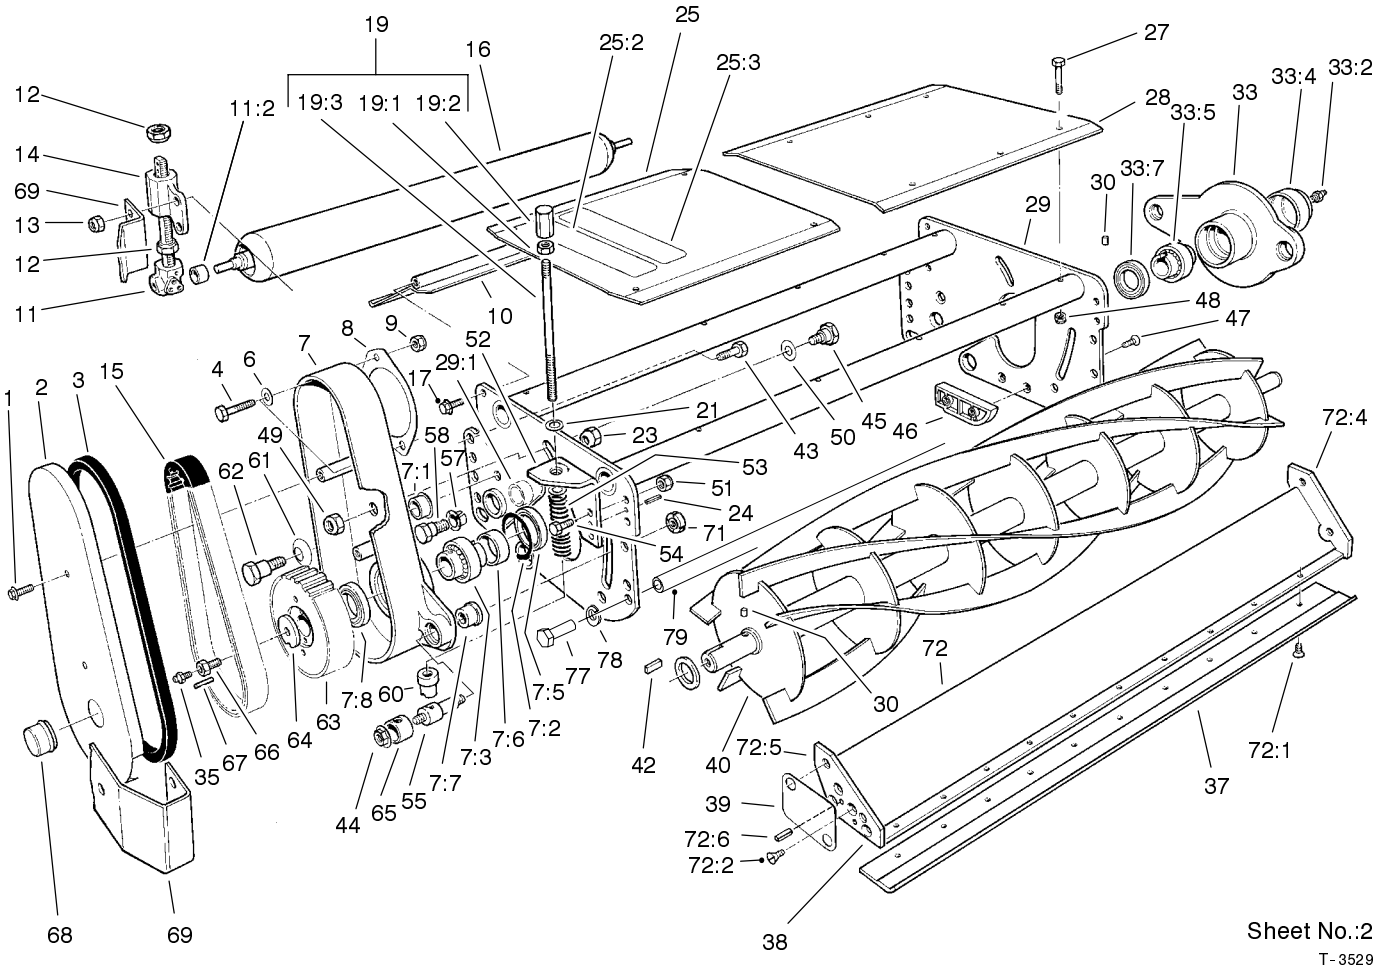


Right Hand and Center Cutting Unit Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
35	302-5	1	Fitting-Grease
*37	72-0480	1	Bedknife-5 Blade (only on: 03753)
37	76-3620	1	Bedknife-11 Blade (only on: 03751)
*37	59-5890	1	Bedknife-7 Blade (only on: 03756)
38	77-4340-01	1	Bedbar-11 Bld (Mach) (only on: 03751)
*38	59-5470-01	1	Bedbar-5 & 7 Blade (only on: 03753, 03756)
39	76-3580	2	Spacer-Bedbar & Sideplate
40	14-7419	1	Reel-5 Blade (only on: 03753)
*40	14-0919	1	Reel-11 Blade (only on: 03751)
*40	13-8219	1	Reel-7 Blade (only on: 03756)
42	75-7570	1	Key
43	325-7	4	Screw-HH
44	32128-15	2	Nut-Lock, Flange
45	62-6080	1	Bolt-Shoulder
46	77-4810	2	Block-Deflector (only on: 03756, 03751)

Ref. No.	Part No.	Qty.	Description
47	32108-101	4	Screw-FH (only on: 03756, 03751)
48	3296-42	10	Nut-Lock NI
49	3296-28	1	Nut-Lock NI
50	3256-69	1	Washer-Flat
51	3296-26	4	Nut-Lock NI
*52	72-0450-01	1	Bracket-RH
52	72-0460-01	1	Bracket-LH
53	92-9231	2	Spring
54	323-7	4	Screw-HH
55	72-0440	2	Pin-Adj
57	256-292	4	Bushing-Flange, NI
58	84-6090	4	Bolt-Shoulder
60	72-0410	2	Stand - Off
61	3290-440	2	Washer-Belleville
62	48-9020	2	Bolt-Shoulder
63	47-7140	1	Pulley-Driven
64	59-6150	1	Washer-Pulley
65	72-0420	2	Clamp-Tube
66	59-6190	1	Capscrew-Shaft, Reel
67	32121-50	1	Pin-Spring
68	59-7490	1	Plug-Fitting, Grease
69	72-0470-01	2	Guard
71	82-9390	2	Nut-Special
72		1	Bedbar/Knife ASM


* Not illustrated

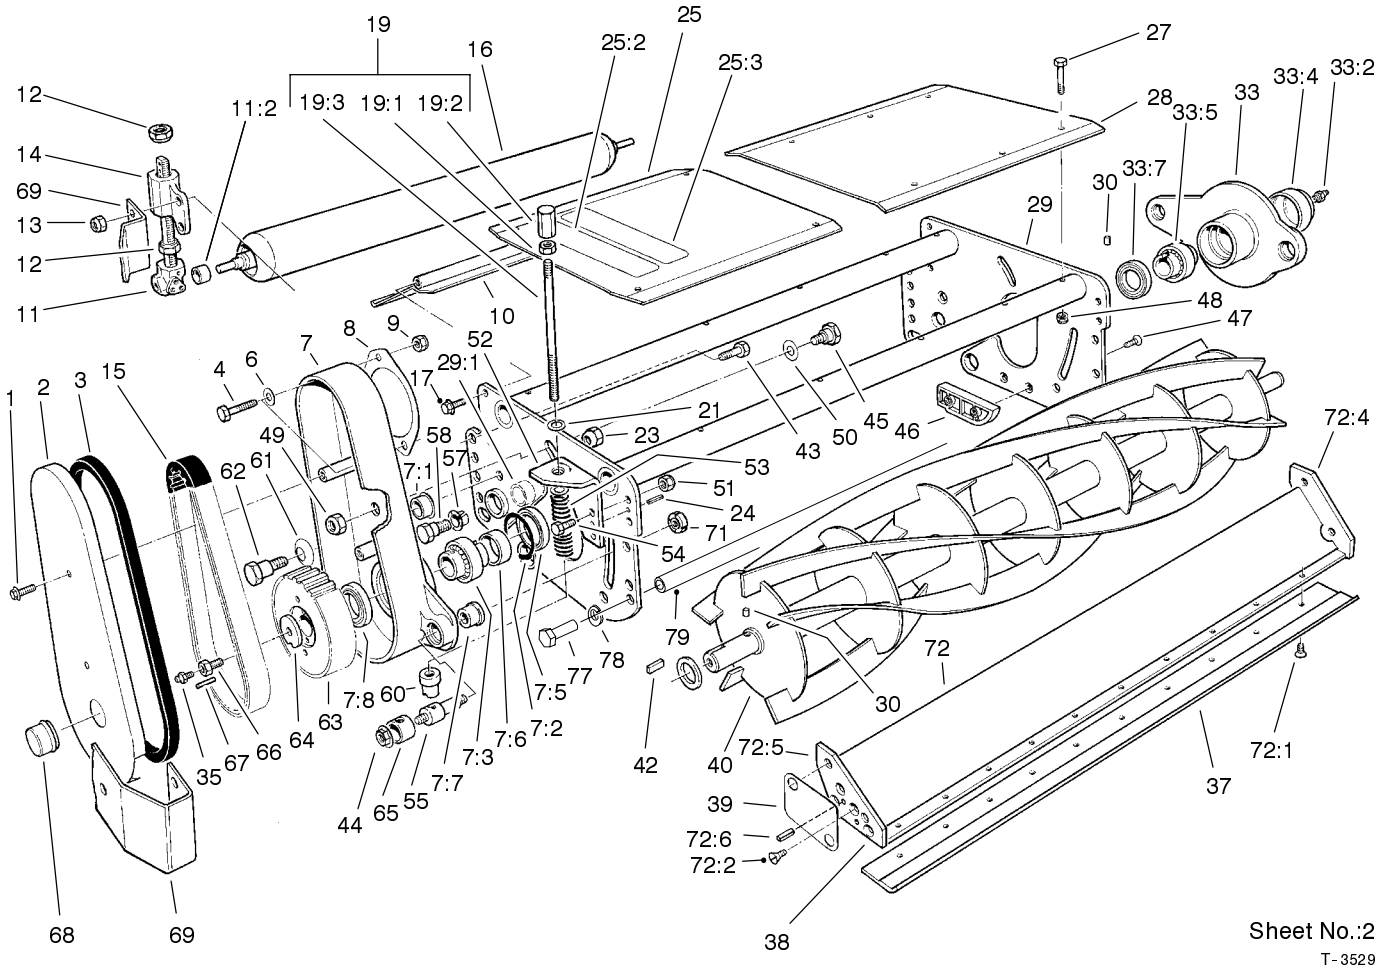

Right Hand and Center Cutting Unit Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
72:1	57-4910	10	Screw (only on: 03753, 03756)
72:2	57-4910	19	Screw (only on: 03751)
72:4	76-3600	1	Plate-End, LH (only on: 03751)
72:5	76-3610	1	Plate-End, RH (only on: 03751)
72:6	32121-11	4	Pin-Roll (only on: 03751)
77	325-4	2	Screw-HH
78	3253-7	2	Washer-Lock
79	93-7769	1	Rod-Support, Frame

Ref. No.	Part No.	Qty.	Description

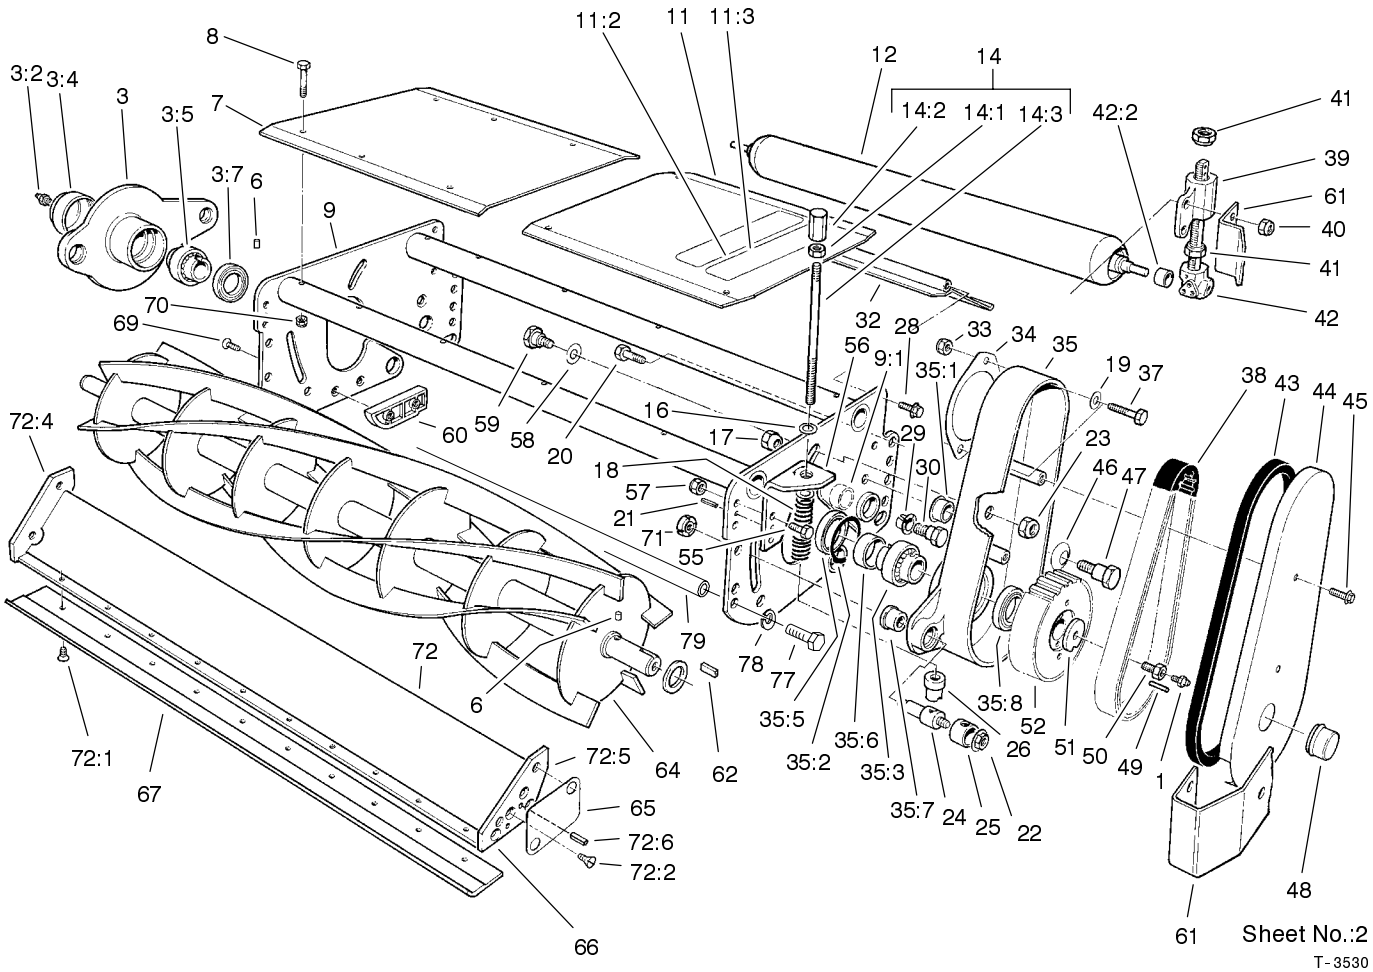


Left Hand Cutting Unit Assembly

Ref. No.	Part No.	Qty.	Description
1	302-5	1	Fitting-Grease
3	13-7749	1	Housing & Bearing ASM
*3:1	256-252	1	Bearing-Flange
3:2	302-5	1	Fitting-Grease
3:4	59-5560	1	Cap - Dust
3:5	59-6140	1	Bearing
*3:6	92-9252	1	Bushing-Flange
3:7	93-1414	1	Seal - Grease
6	48-8880	2	Pin-Dowel
7	59-5830-01	1	Cover-Frame
8	3234-34	10	Flange
9	14-0829	1	Reel Frame ASM
9:1	62-6110	4	Bushing ASM
11	100-9993	1	Front Cover ASM
11:2	93-6688	1	Decal-Danger, Europe
11:2	67-7960	1	Decal-Danger
11:3	93-7814	1	Decal-Danger, Europe
11:3	85-6410	1	Decal-Danger
12	59-5630	1	Roller ASM
14	13-9399	2	Adj Screw & Knob ASM
14:1	3218-5	1	Nut-Jam
14:2	72-0380	1	Hex - Knob
14:3	72-0390	1	Rod-Adjusting
16	257-5	4	Washer-Thrust

Ref. No.	Part No.	Qty.	Description
17	242-50	2	Nut - Lug
18	92-9231	2	Spring
19	3256-25	1	Washer-Flat
20	325-7	4	Screw-HH
21	32121-2	2	Pin-Roll
22	32128-15	2	Nut-Lock, Flange
23	3296-28	1	Nut-Lock NI
24	72-0440	2	Pin-Adj
25	72-0420	2	Clamp-Tube
26	72-0410	2	Stand - Off
28	3234-12	2	Screw-HHF
29	256-292	4	Bushing-Flange, NI
30	84-6090	4	Bolt-Shoulder
32	75-7680-01	1	Deflector-Grass
33	3296-48	2	Nut-Lock NI
34	48-9050	1	Shield-Plate, Drive
35	13-7769	1	LH Housing & Bearing ASM
35:1	256-252	1	Bearing-Flange
35:2	32151-71	1	Ring-Retaining
35:3	59-6140	1	Bearing
35:5	92-9250	1	Seal - Grease
35:6	92-9251	1	Sleeve - Wear
35:7	92-9252	1	Bushing-Flange
35:8	93-1414	1	Seal - Grease
37	324-6	2	Screw-HH

* Not illustrated

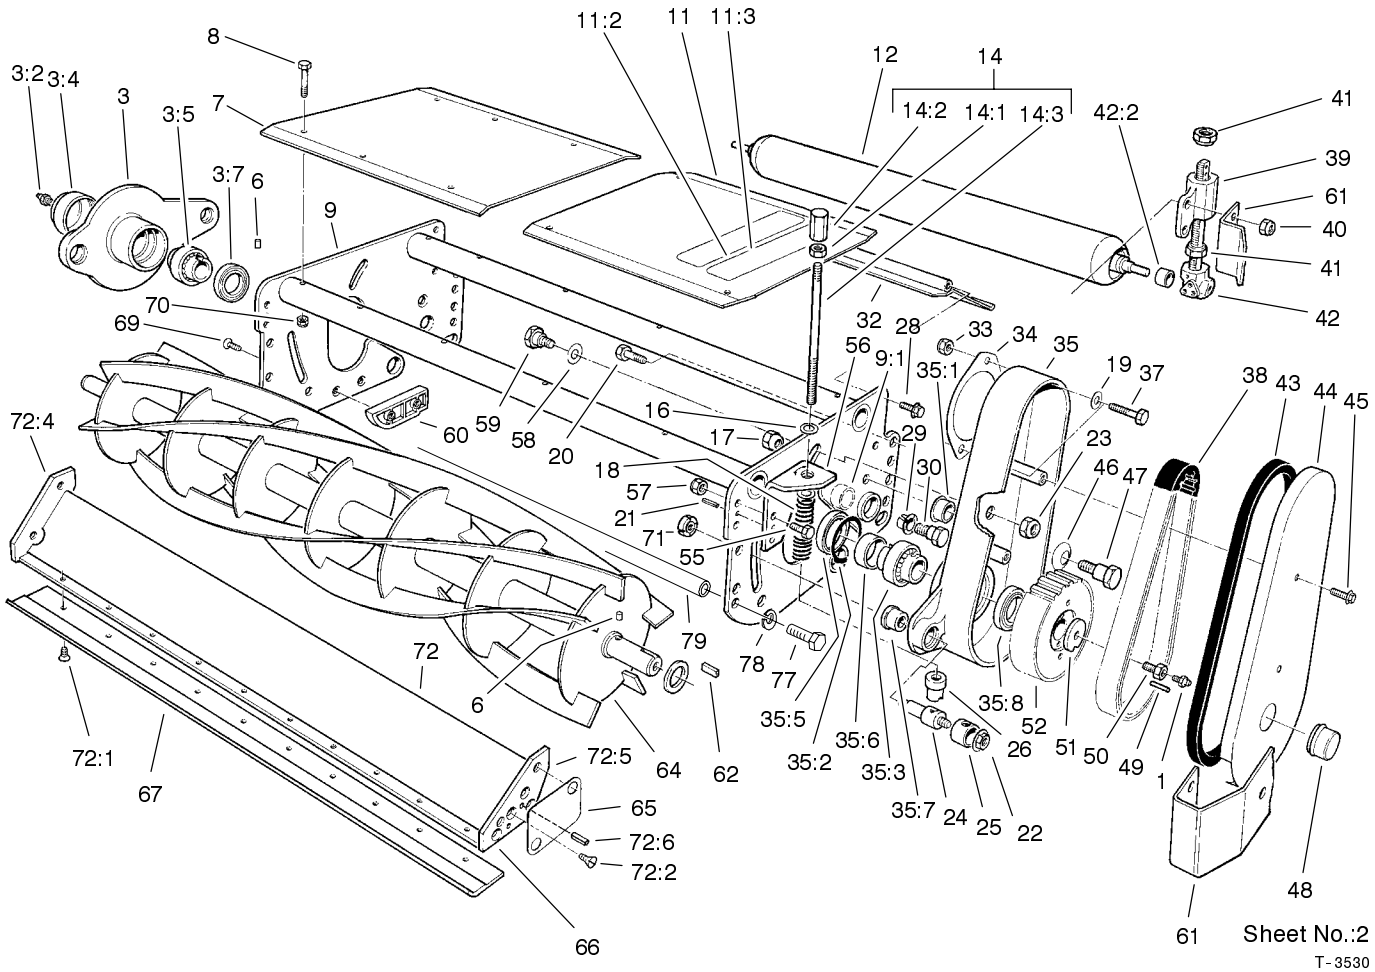


Left Hand Cutting Unit Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
38	47-7160	1	Belt
39	59-5770-01	2	Housing-Adj
40	3296-25	4	Nut-Lock NI
41	59-5820	4	Nut-Cone
42	84-6160	2	Collar & Bushing ASM
42:2	59-5780	1	Roller Bushing ASM
43	47-7170	1	Gasket-Cover
44	75-7590-01	1	Cover-Drive Housing, LH
45	3234-14	2	Screw-HHF
46	3290-440	2	Washer-Belleville
47	48-9020	2	Bolt-Shoulder
48	59-7490	1	Plug-Fitting, Grease
49	32121-50	1	Pin-Spring
50	59-6190	1	Capscrew-Shaft, Reel
51	59-6150	1	Washer-Pulley
52	47-7140	1	Pulley-Driven
55	323-7	4	Screw-HH
56	72-0450-01	1	Bracket-RH
56	72-0460-01	1	Bracket-LH
57	3296-26	4	Nut-Lock NI
58	3256-69	1	Washer-Flat
59	62-6080	1	Bolt-Shoulder
60	77-4810	2	Block-Deflector (only on: 03754, 03741)
61	72-0470-01	2	Guard

Ref. No.	Part No.	Qty.	Description
62	75-7570	1	Key
64	14-7419	1	Reel-5 Blade (only on: 03752)
64	13-8219	1	Reel-7 Blade (only on: 03754)
64	14-0919	1	Reel-11 Blade (only on: 03741)
65	76-3580	2	Spacer-Bedbar & Sideplate
66	77-4340-01	1	Bedbar-11 Bld (Mach) (only on: 03741)
*66	59-5470-01	1	Bedbar-5 & 7 Blade (only on: 03752, 03754)
*67	72-0480	1	Bedknife-5 Blade (only on: 03752)
*67	59-5890	1	Bedknife-7 Blade (only on: 03754)
67	76-3620	1	Bedknife-11 Blade (only on: 03741)
69	32108-101	4	Screw-FH (only on: 03754, 03741)
70	3296-42	10	Nut-Lock NI
71	82-9390	2	Nut-Special
72		1	Bedbar/Bedknife ASM


* Not illustrated

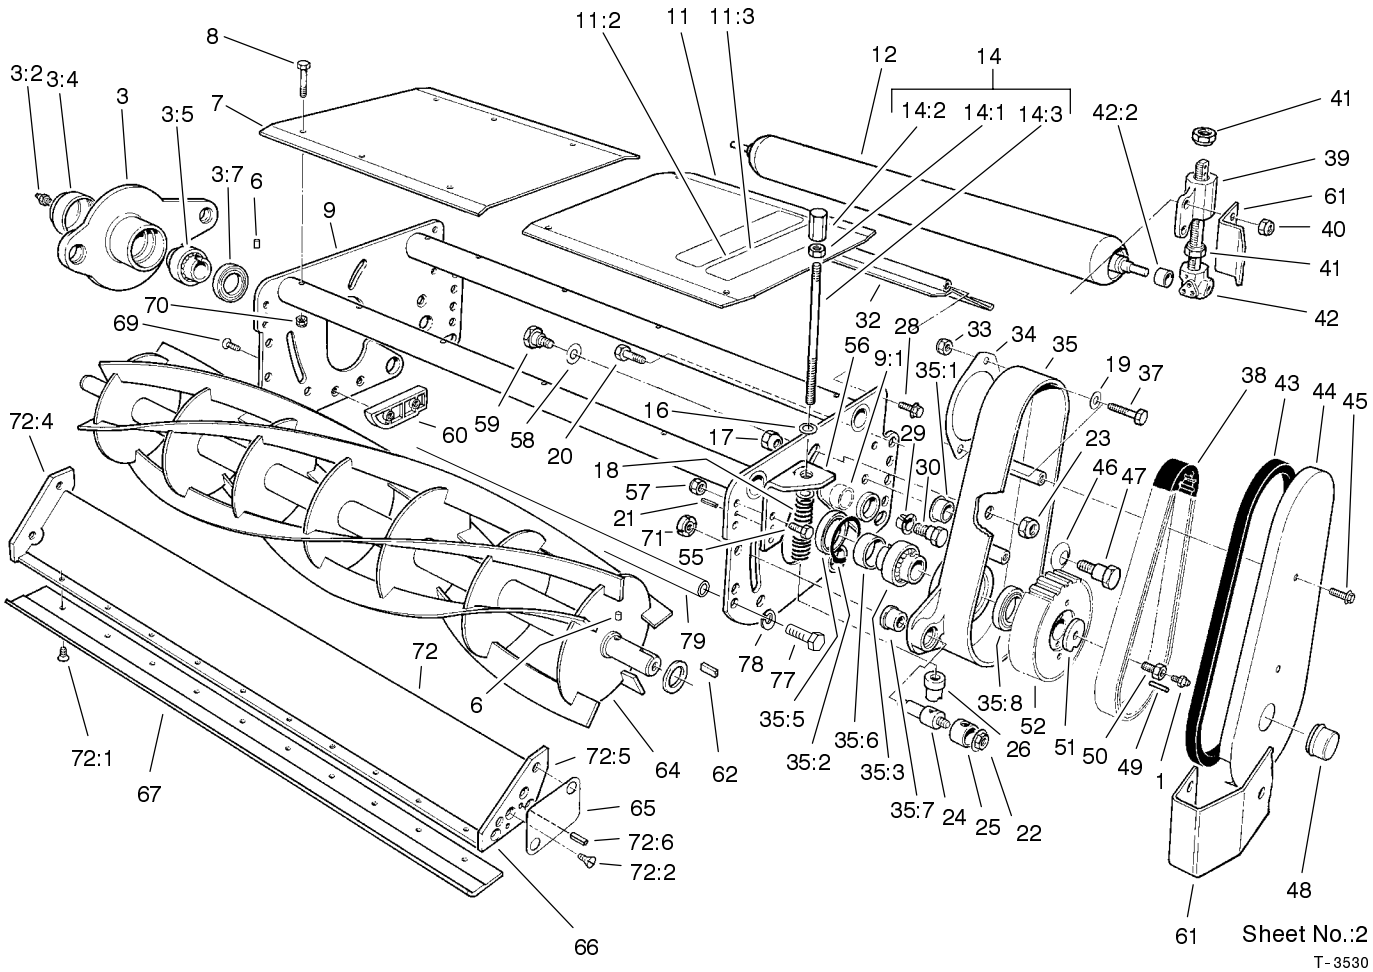

Left Hand Cutting Unit Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
72:1	57-4910	10	Screw (only on: 03752, 03754)
72:2	57-4910	19	Screw (only on: 03741)
72:4	76-3600	1	Plate-End, LH (only on: 03741)
72:5	76-3610	1	Plate-End, RH (only on: 03741)
72:6	32121-11	4	Pin-Roll (only on: 03741)
77	325-4	2	Screw-HH
78	3253-7	2	Washer-Lock/Sp
79	93-7769	1	Rod-Support, Frame

Ref. No.	Part No.	Qty.	Description

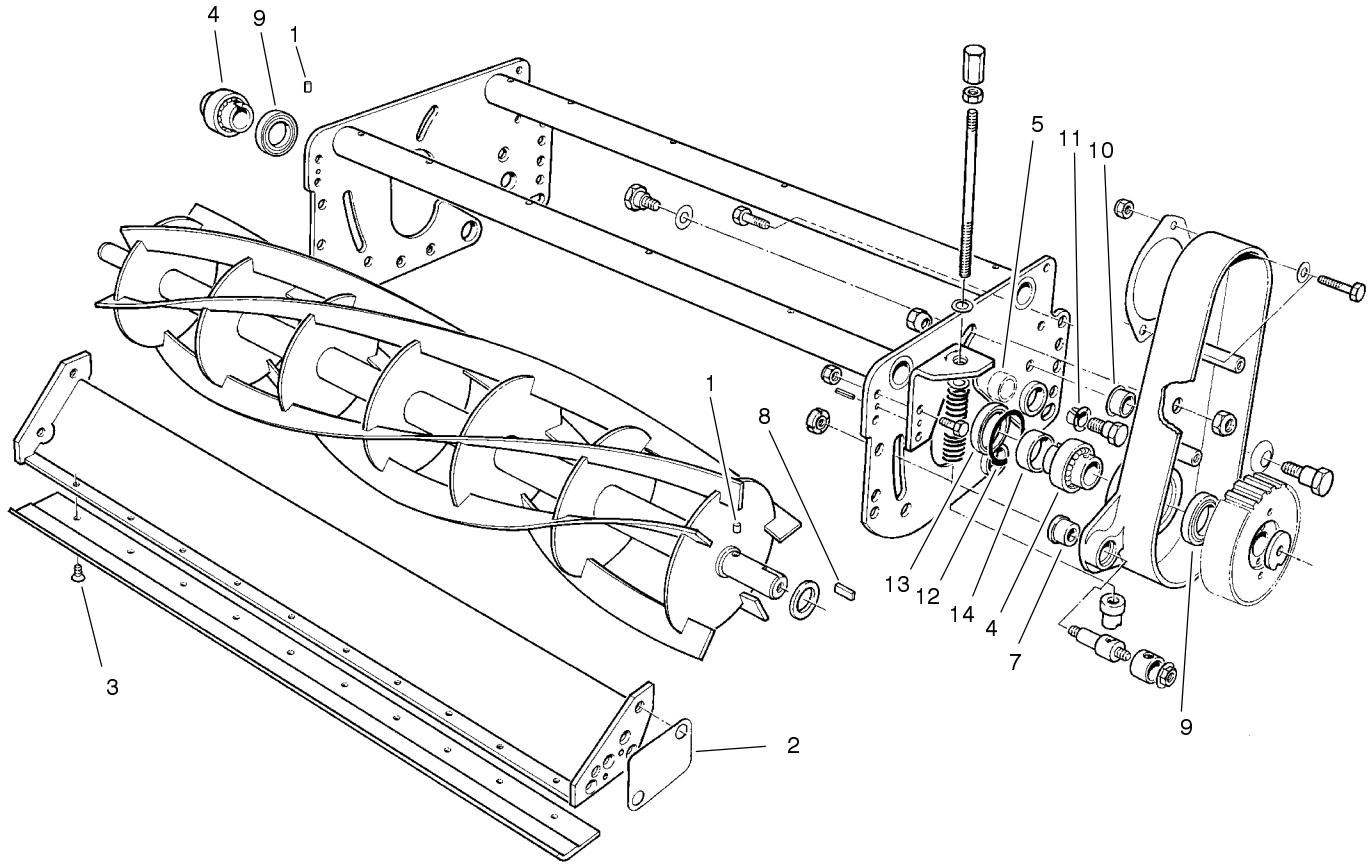


Sheet No.:A1

T-3725

Overhaul Kit No. 95-4389

Ref. No.	Part No.	Qty.	Description
1	48-8880	2	Pin-Dowel
2	76-3580	2	Spacer-Bedbar & Sideplate
3	57-4910	11	Screw
4	59-6140	2	Bearing
5	62-6110	4	Bushing ASM
7	72-0430	2	Bushing-Flange
8	75-7570	1	Key
9	93-1414	3	Seal - Grease
10	256-252	2	Bearing-Flange
11	256-292	4	Bushing-Flange, Nl
12	32151-71	1	Ring-Retaining
13	92-9250	1	Seal - Grease
14	92-9251	1	Sleeve - Wear

Ref. No.	Part No.	Qty.	Description

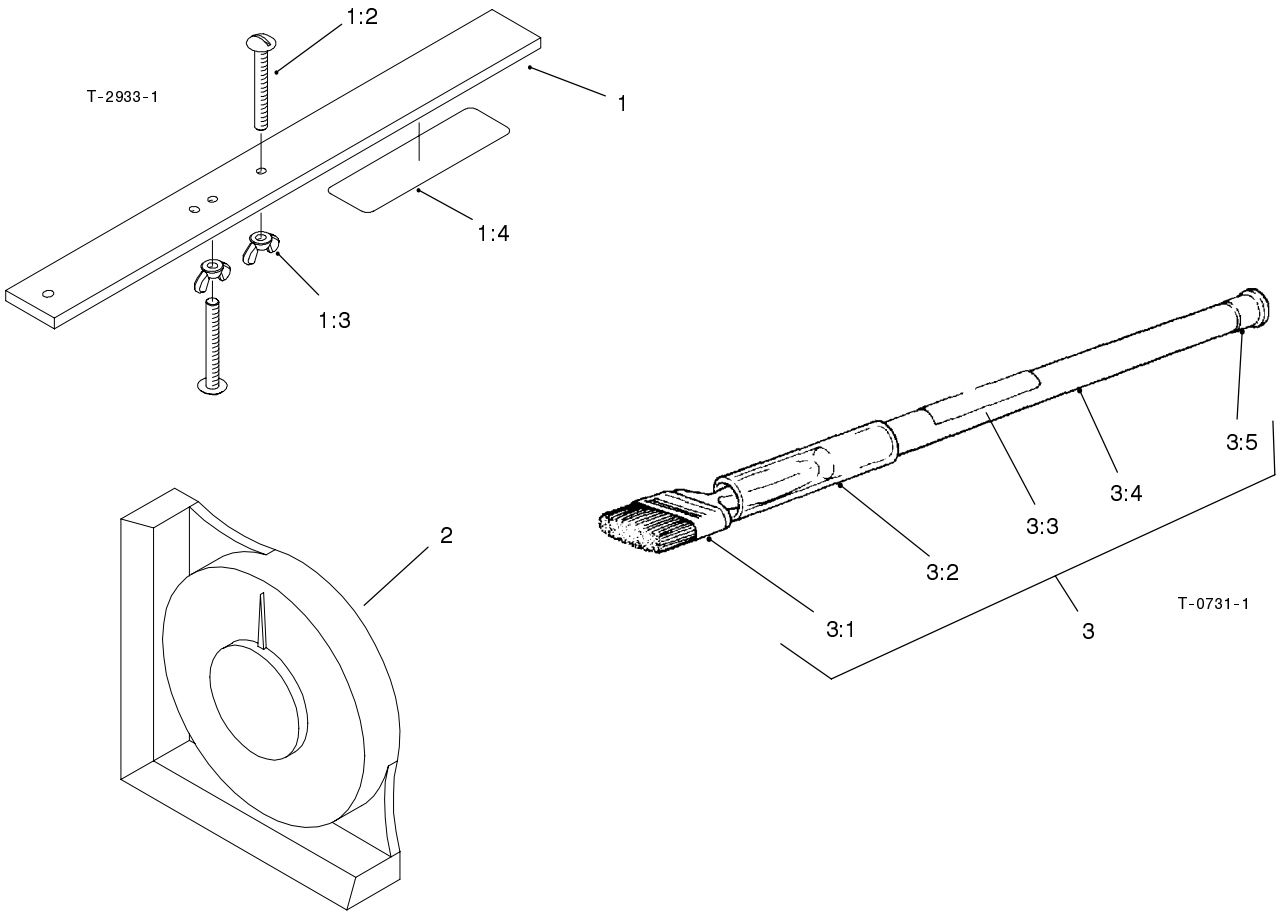


Sheet No.:A2

Gauge Bar, Angle Indicator and Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1852	1	Gauge Bar ASM
1:2	32122-54	2	Screw-Head, Truss
1:3	32103-3	2	Nut-Wing
1:4	98-7976	1	Decal-Bar, Gauge
2	99-3503	1	Indicator-Angle
3	29-9100	1	Handle ASM
3:1	36-4310	1	Brush
3:2	29-9090	1	Hose-Handle
3:3	12-9140	1	Decal-Body, Front
3:4	29-9080	1	Handle
3:5	2410-18	1	Cap-Plastic

Ref. No.	Part No.	Qty.	Description

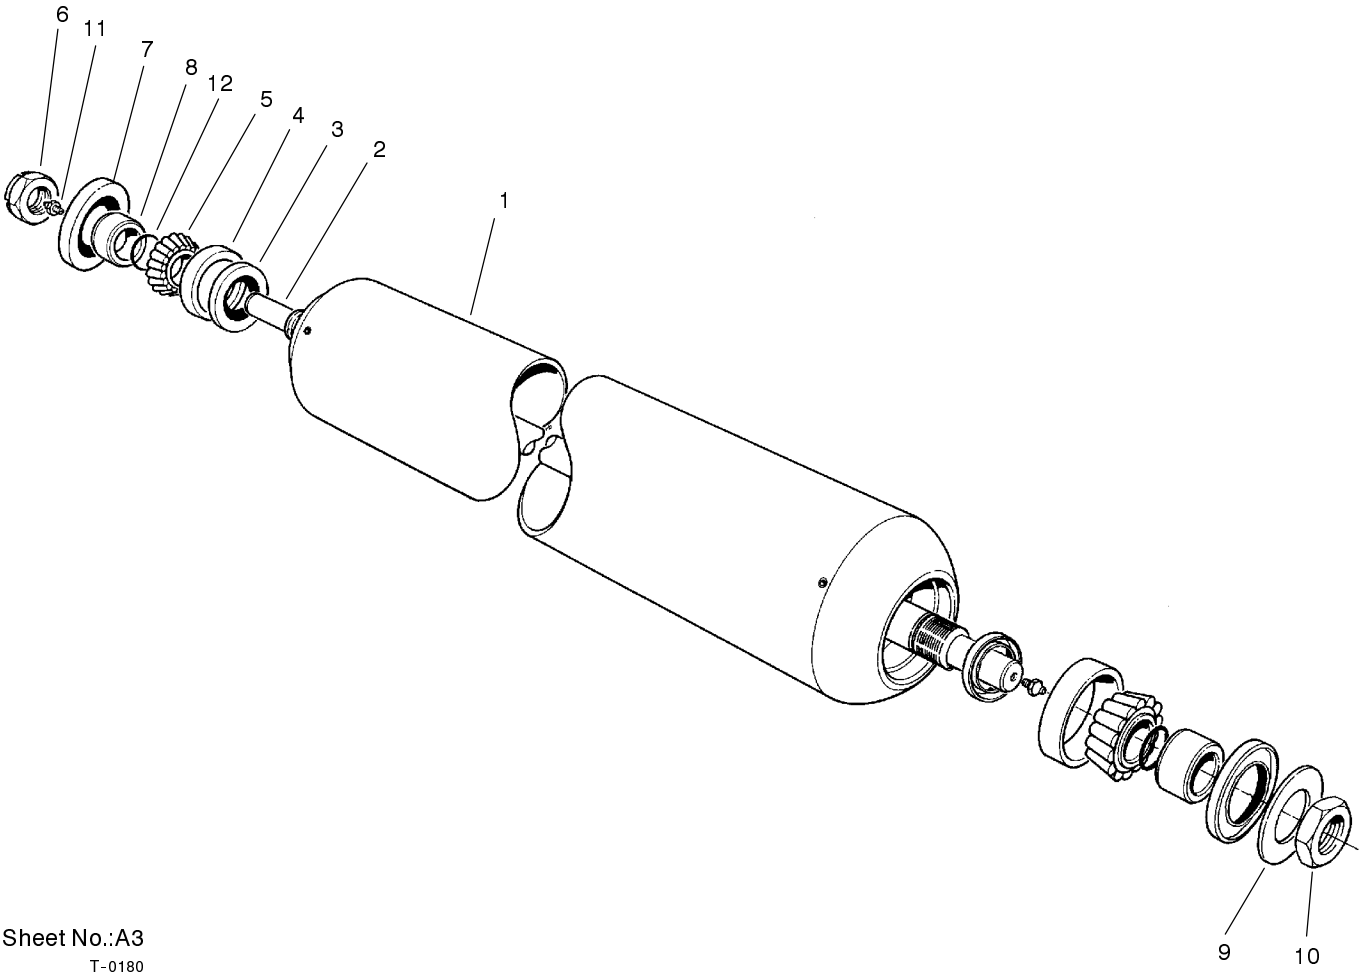

Sheet No.:A3
T-0180

Roller Assembly No. 59-5630

Ref. No.	Part No.	Qty.	Description
1	104-4623-01	1	Tube & End Cap ASM
2	66-5640	1	Shaft
3	253-122	2	Seal-Oil
4	254-79	2	Bearing-Roller, Cup
5	254-78	2	Bearing-Cone
6	3296-15	1	Nut-Lock NI
7	253-165	2	Oil Seal
8	59-5690	2	Sleeve-Wear
9	66-5620	2	Washer
10	3220-7	1	Nut-Jam
11	302-5	2	Fitting-Grease
12	237-54	2	O-Ring

Ref. No.	Part No.	Qty.	Description


TORO®