Form No. 3325–672

Hydraulic Blade

Dingo® Attachment

Model No. 22414—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

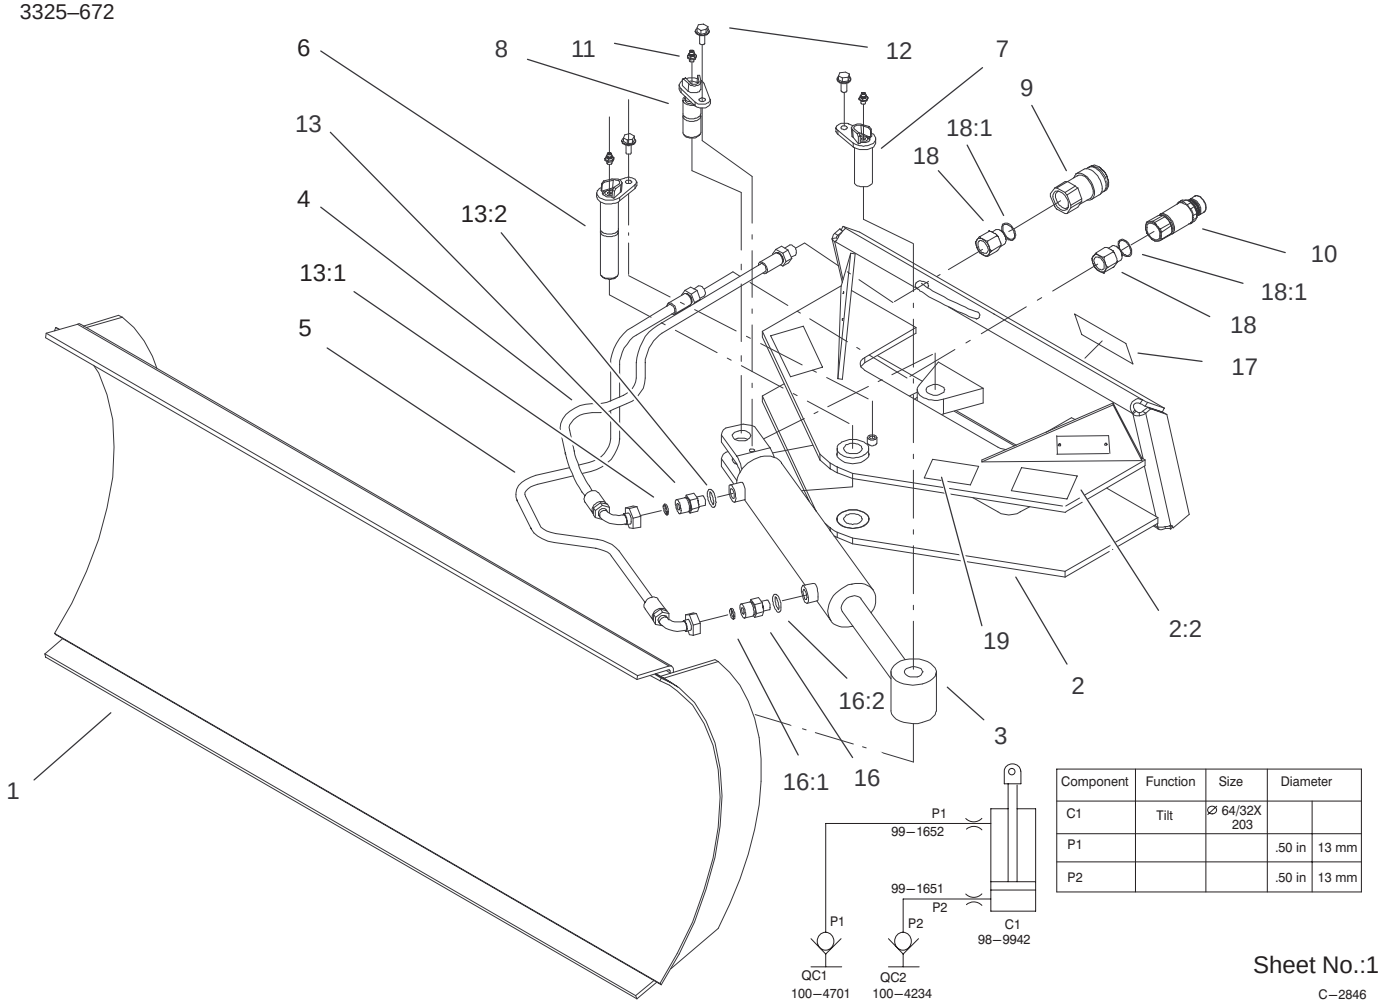


Hydraulic Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	98–8240–03	1	Blade ASM
2	99–4306	1	Blade Pivot ASM
2:2	100–4650	1	Decal–Warning
3	98–9942	1	Cylinder – Hydraulic
4	99–1651	1	Hose – Hydraulic
5	99–1652	1	Hose – Hydraulic
6	94–1598	1	Pin–Pivot
7	94–9797	1	Pin–Pivot
8	98–4870	1	Pin–Pivot
9	100–4234	1	Coupler–Face, Flush
*9:1	100–6119	1	Kit–Seal
10	100–4701	1	Nipple–Connect, Pressure
*10:1	100–6120	1	Kit–Seal
11	302–5	3	Fitting–Grease
12	32144–70	3	Screw–HH
13	340–5	1	Fitting–Straight
13:1	237–42	1	O–Ring
13:2	237–30	1	O–Ring
16	99–1650	1	Straight – Connector
16:1	237–42	1	O–Ring
16:2	237–30	1	O–Ring
17	98–4683	1	Decal–Attachment, Dingo
18	100–4617	2	Adapter–Hydraulic

Ref. No.	Part No.	Qty.	Description
18:1	237–80	1	O–Ring
19	98–3269	1	Decal–Made In USA

* Not illustrated

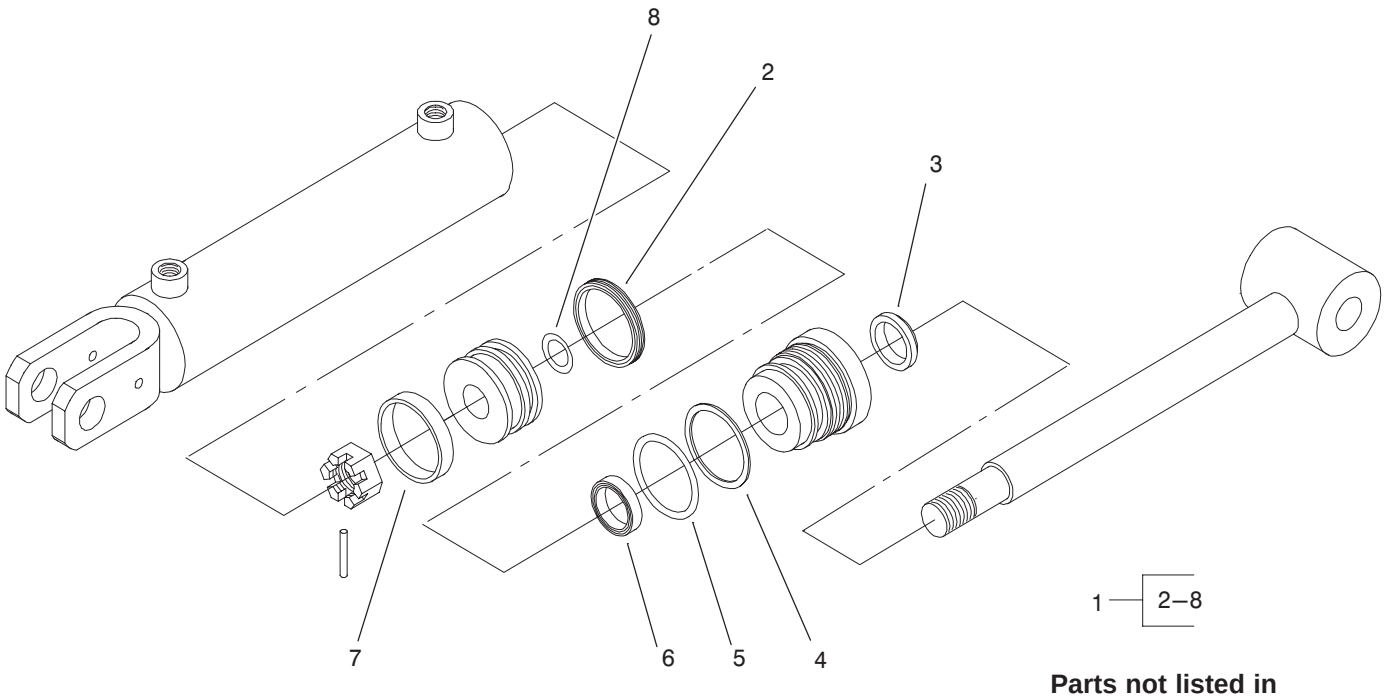

Parts not listed in part list are not serviced separately

Sheet No.:A1
c–2767

Hydraulic Cylinder Assembly No. 98–9942

Ref. No.	Part No.	Qty.	Description
1	99–1352	1	Seal Kit – Cylinder

Ref. No.	Part No.	Qty.	Description


TORO®