Form No. 3325–736

Proline 12.5 HP

Mid–Size Traction Unit

Model No. 30167–210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000
All Rights Reserved

Contents

Description	Page
Fuel Tank & Idler Bracket Assembly	3
Transmission & Idler Pulley Assembly	4
Brake, Wheel Pulley & Wheel Assembly	5
Wheel Assembly	6
Handle & Control Panel Assembly	7
Engine Assembly	8
Crankcase	9
Piston / Crankshaft	10
Valve / Camshaft	11
Lubrication Equipment	12
Cooling Equipment	13
Electric Equipment	14
Control Equipment	15
Carburetor	16
Air Filter	17
Starter	18
Muffler	19
Clutch Asm No. 54–3200	20
Peerless Transmission Model 700–082	21
Schematic	22
Maintenance	23


Accessories

Description	Model / Part No.
36” Cutting Unit	Model No. 30135
37” Recycler Deck	Model No. 30137
44” Cutting Unit	Model No. 30144
44” Recycler Deck	Model No. 30146
37” Deck Bagging Kit (Cloth Bag)	Model No. 30129
37’ Deck Bagging Kit (Steel Hopper)	Model No. 30130
44”/52” Deck Bagging Kit	Model No. 30128
Front Weight Kit (37” Decks)	Part No. 80–3350
Steerable Sulky	Model No. 30123

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

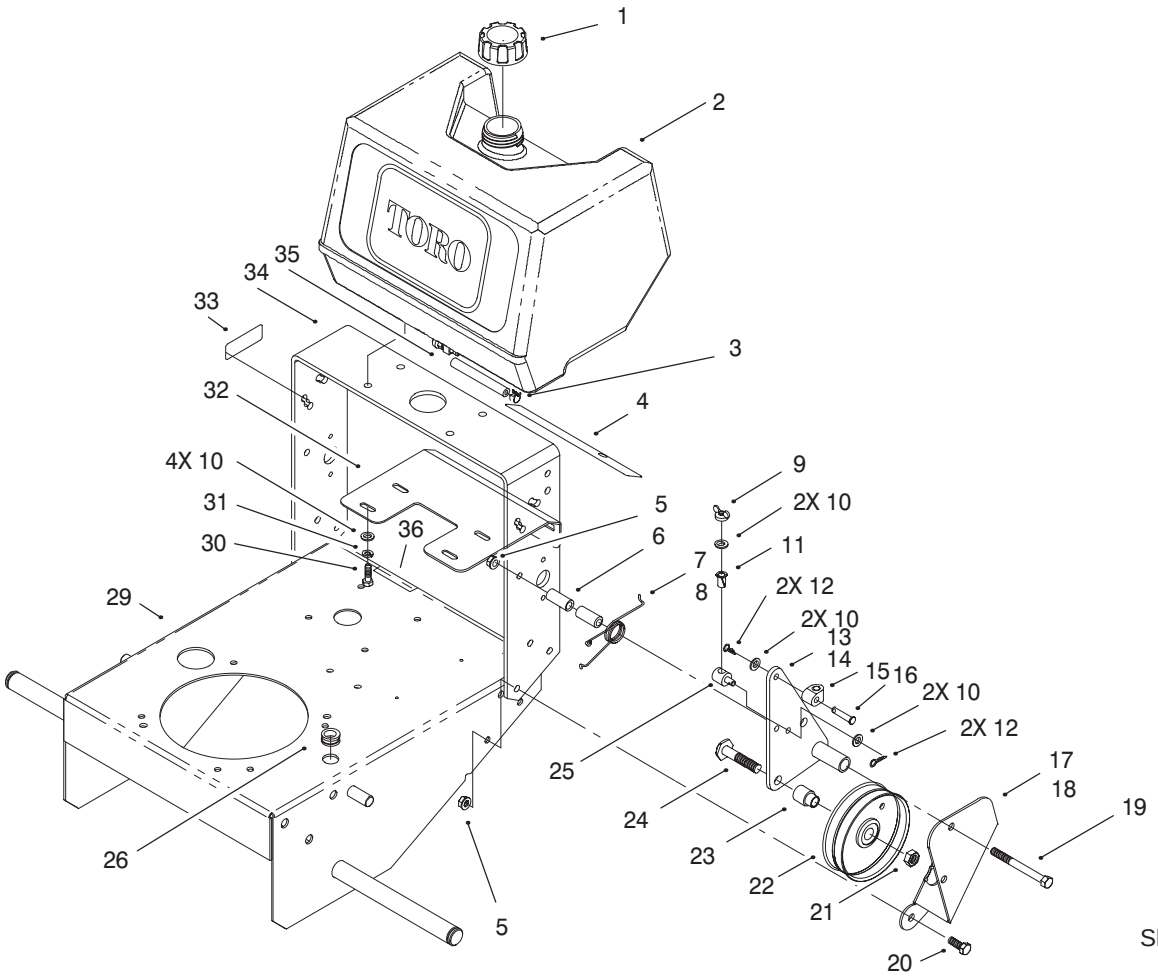


Sheet No.:2

Fuel Tank & Idler Bracket Assembly

Ref. No.	Part No.	Qty.	Description
1	55–3570	1	Gas Cap Assembly
2	95–2802	1	Tank – Fuel
3	2412–98	2	Clamp
4	82–7750	1	Decal–Ground Speed
5	3296–39	8	Nut–Lock, NI
6	74–0040	4	Spacer–Idler Pivot
7	51–4370	1	Spring–RH Torsion
8	51–4380	1	Spring–LH Torsion
9	32103–25	2	Nut–Wing
10	3256–23	10	Washer–Flat
11	52–2890	2	Bushing–Nylon
12	3290–307	4	Hairpin
13	74–0230–01	1	Bracket–RH Idler
14	74–0220–01	1	Bracket–LH Idler
15	74–0521	2	Fitting–Rod
16	283–6	2	Pin–Clevis
17	67–6370–01	1	Bracket–RH Support
18	67–6380–01	1	Bracket–LH Support
19	323–16	2	Screw–HH
20	323–6	6	Screw–HH
21	3296–23	2	Nut–Lock, NI
22	95–2800	2	Pulley – Idler
23	95–2801	2	Spacer – Pulley
24	51–4450	2	Screw–Leveler
25	68–9690	2	Fitting–Rod
26	237–124	1	Grommet

Ref. No.	Part No.	Qty.	Description
29	93–1156–01	1	Frame Wa
30	322–4	4	Screw–HH
31	3253–4	4	Washer–Lock/Sp
32	66–7400–01	1	Plate–Control
33	95–2814	1	Decal – Fuel Shut Off
34	74–0360–01	1	Frame–Rear
35	47–2982	1	Gas Hose
36	98–0776	1	Decal–Caution
			Attachments

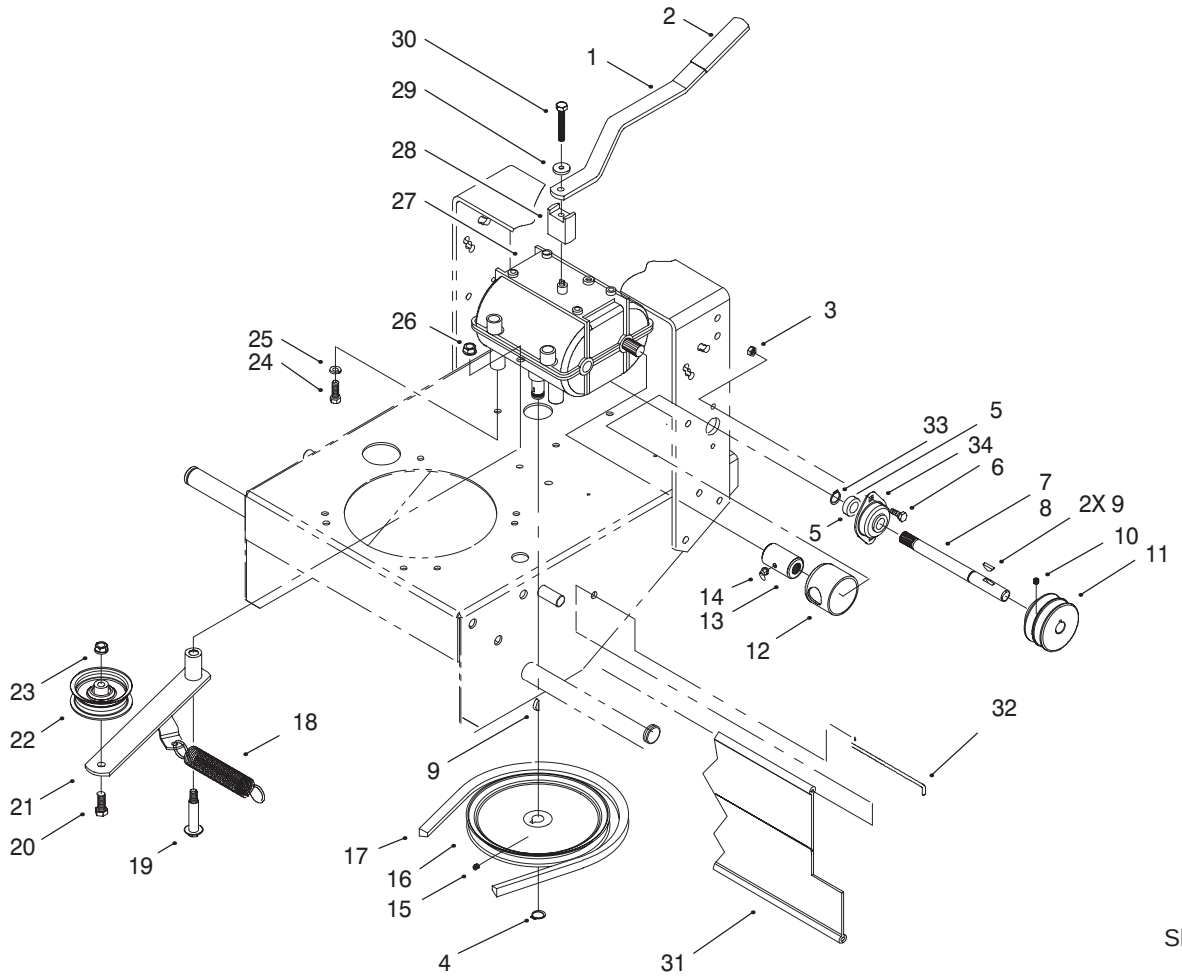


Sheet No.:3

Transmission & Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	74–0320–01	1	Lever–Shift
2	47–1970	1	Grip–Engagement
3	3296–42	4	Nut–Lock
4	32120–64	1	Ring–External Snap
5	1–323252	2	Bearing–External Shaft
6	321–4	4	Screw–HH
7	98–0788	1	Shaft – Extension, RH
8	98–0787	1	Shaft – Extension, LH
9	3257–5	3	Key–Woodruff
10	3245–3	2	Screw–Hex Socket Set
11	74–0480	2	Drive Pulley Assembly
12	51–4220	2	Guard–Coupler
13	98–0789	2	Coupler
14	302–5	2	Fitting–Lube
15	3245–1	1	Screw–Set, HSH
16	51–4190	1	Pulley–Driven
17	26–9671	1	V–Belt
18	68–2190	1	Spring–Extension
19	27–6230	1	Bolt–Wheel
20	323–9	1	Screw–HH
21	16–7509	1	Lever–Idler w/Bushings
22	62–4540	1	Pulley
23	3296–39	1	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description
24	322–2	4	Screw–HH
25	3253–4	4	Washer–Lock/Sp
26	3296–6	1	Nut–Lock, NI
27	98–0791	1	Transmission
28	72–2190	1	Mount–Shift Lever
29	7–5461	1	Spacer
30	329–10	1	Screw–HH
31	95–1526	1	Shield – Trailing
32	95–1529	1	Rod – Shield
33	32151–62	2	Ring–Retaining H D
34	1–323254	2	Flange–Bearing

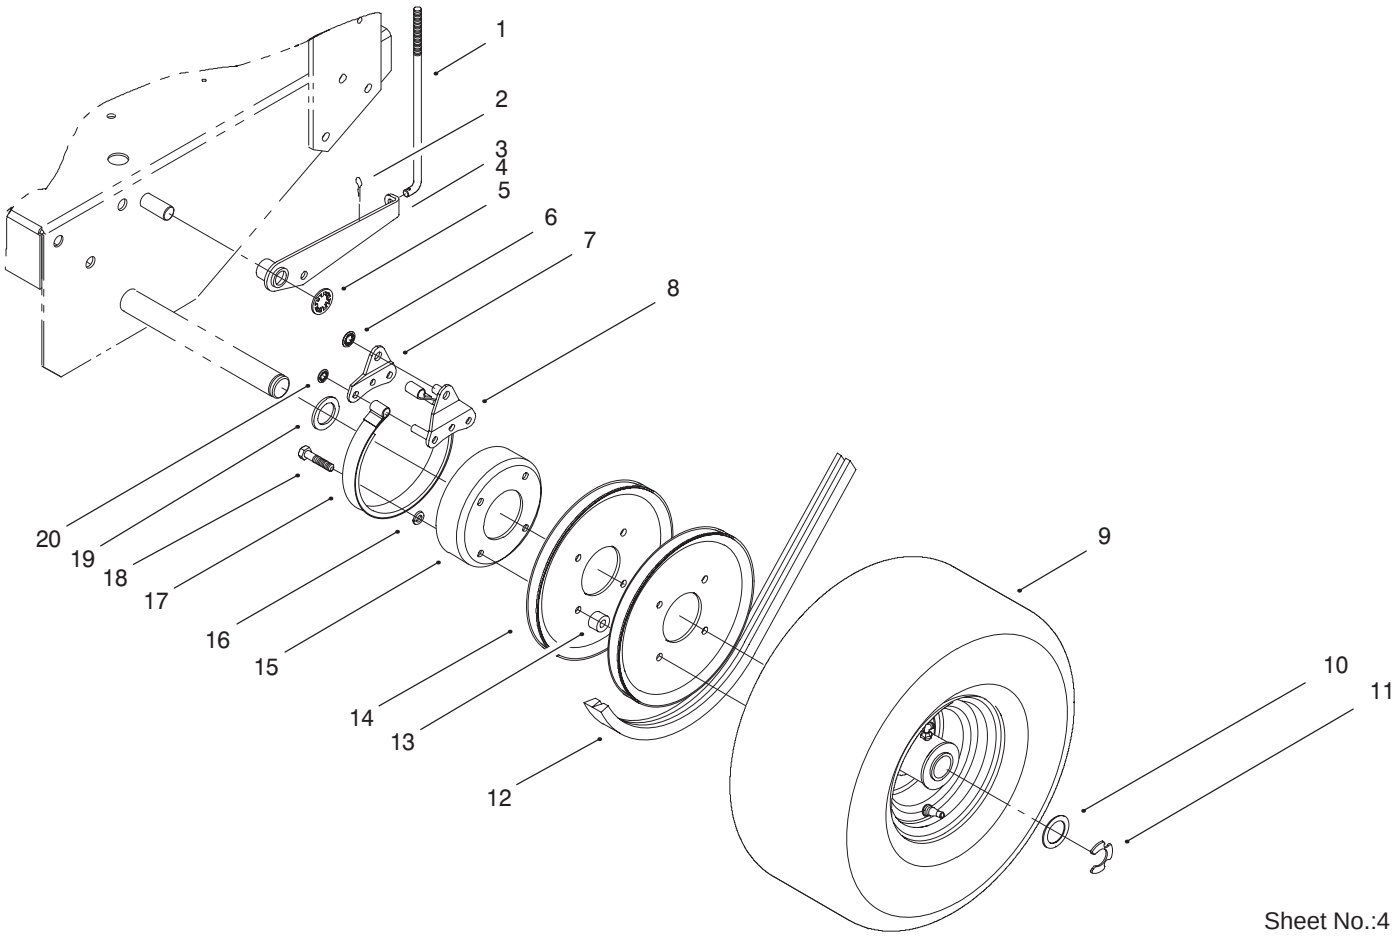


Sheet No.:4

Brake, Wheel Pulley & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	51–4580	2	Rod–Brake
2	3290–307	2	Hairpin
3	51–4600–01	1	Arm–RH Brake
4	51–4610–01	1	Arm–LH Brake
5	32151–40	2	Ring–Retaining
6	32151–56	2	Ring–Retaining, Ext
7	51–4660–01	2	Plate–Brake Link
8	51–4650–01	2	Link–Brake
☆9		2	Wheel/Tire ASM
10	10–8110	8	Washer–Thrust
11	32151–91	2	Ring–Retaining
12	51–4290	2	Belt–Drive
13	51–4170	8	Spacer–Pulley
14	51–4160–03	4	Pulley–Wheel
15	51–4180–03	2	Drum–Brake
16	3253–4	4	Washer–Lock/Sp
17	51–4700	2	Band–Brake
18	322–7	8	Screw–HH
19	51–4230	2	Washer–Wheel
20	32151–72	4	Ring–Retaining

Ref. No.	Part No.	Qty.	Description

☆ Not serviced

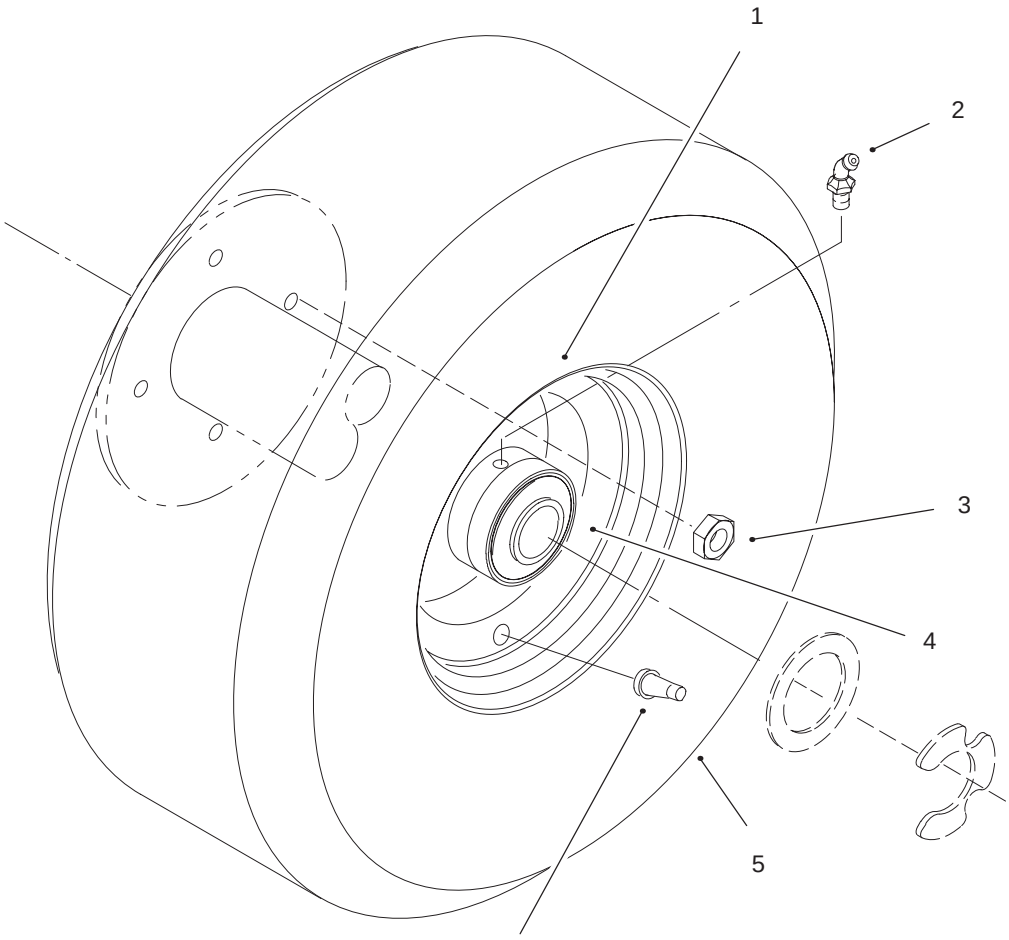


Sheet No.:A2

Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	242–80	2	Rim
2	302–11	2	Fitting–Grease
3	3296–29	8	Nut–Lock
4	92–1746	4	Bearing
5	231–117	2	Tire–15x6
6	232–27	2	Valve Stem

Ref. No.	Part No.	Qty.	Description

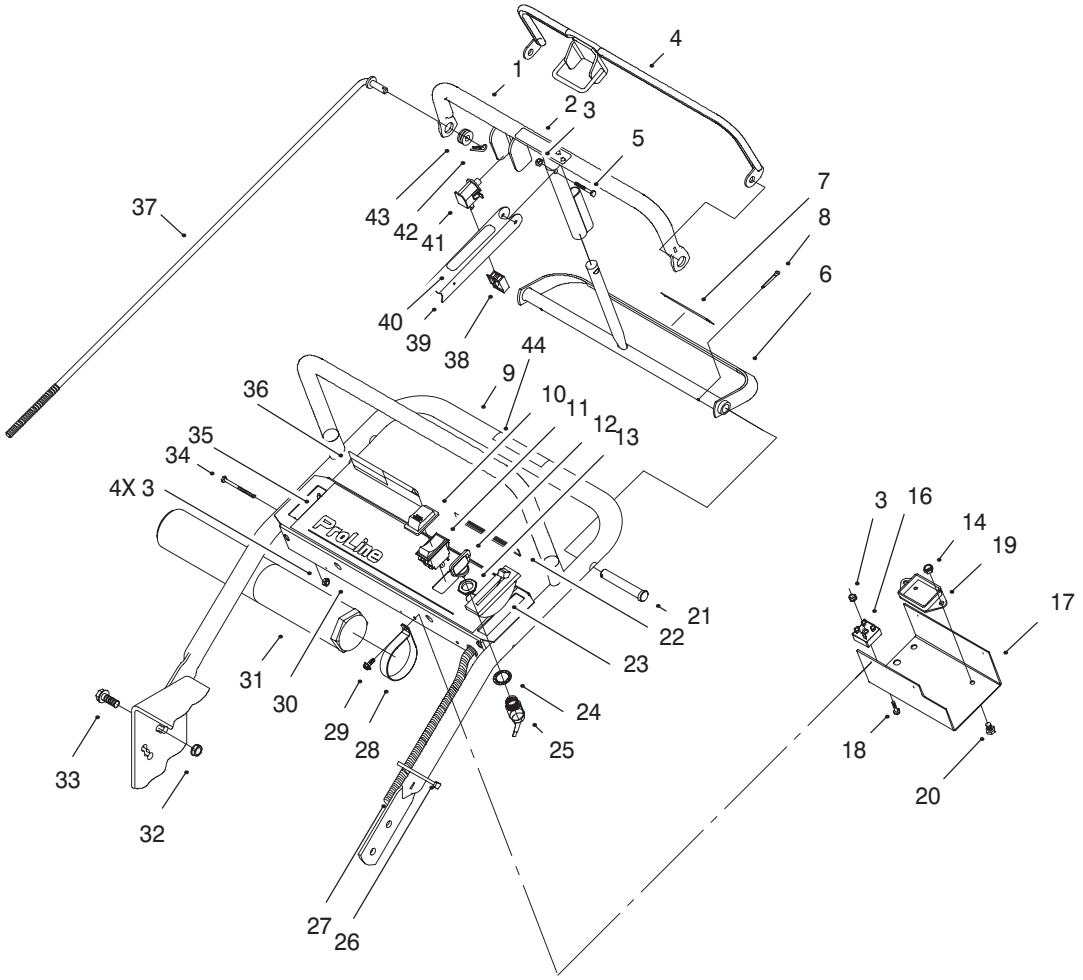


Sheet No.:5

Handle & Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	82–7690–03	1	Bar–Control
2	82–2290	1	Decal – Control Bar
3	3296–2	6	Nut–Lock
4	82–7680–03	1	Bail Wa
5	32105–1	1	Screw–Srh
6	99–8501–03	1	Control–Pivot
7	82–2280	1	Decal–Reverse Handle
8	3272–11	2	Pin–Cotter
9	67–6440–01	1	Handle–Upper
10	82–3820	1	Boot–Switch
11	82–2300	1	Switch
12	63–8360	2	Key–Ignition
13	218–461	1	Nut–HH
14	3296–42	2	Nut–Lock
16	37–7600	1	Bridge Rectifier
17	93–1187–03	1	Panel – Bottom
18	32105–13	1	Screw–Shh
19	100–6170	1	Module– Delay
20	321–2	2	Screw–HH
21	283–55	2	Pin–Clevis
22	65–3090	1	Decal – Instruction
23	74–0740	1	Throttle Control
24	3254–5	1	Washer–Lock/Int
25	29–5560	1	Switch–On Off
26	3290–378	2	Tie–Cable

Ref. No.	Part No.	Qty.	Description
27	100–6459	1	Harness– Wire,Recoil
28	2412–120	2	R–Clamp
29	32104–76	4	Screw–Acorn Slot
30	82–2180–03	1	Panel–Control
31	74–0720	1	Tube–Manual
32	32128–21	4	Nut–HF
33	3234–11	4	Screw–HHF
34	32105–14	4	Screw–Slotted Hd
35	82–7730	1	Decal – Control Panel
36	71–1280	1	Decal – Safety Instruct
37	82–7631	2	Rod–Control
38	218–595	1	Connector–Body
39	51–4850–03	1	Lever–Parking Brake
40	52–2010	1	Decal–Parking Lever
41	82–2190	1	Switch–Bail
42	3290–307	2	Hairpin
43	237–141	2	Grommet–Rubber
44	98–4387	2	Decal–Protection Ear

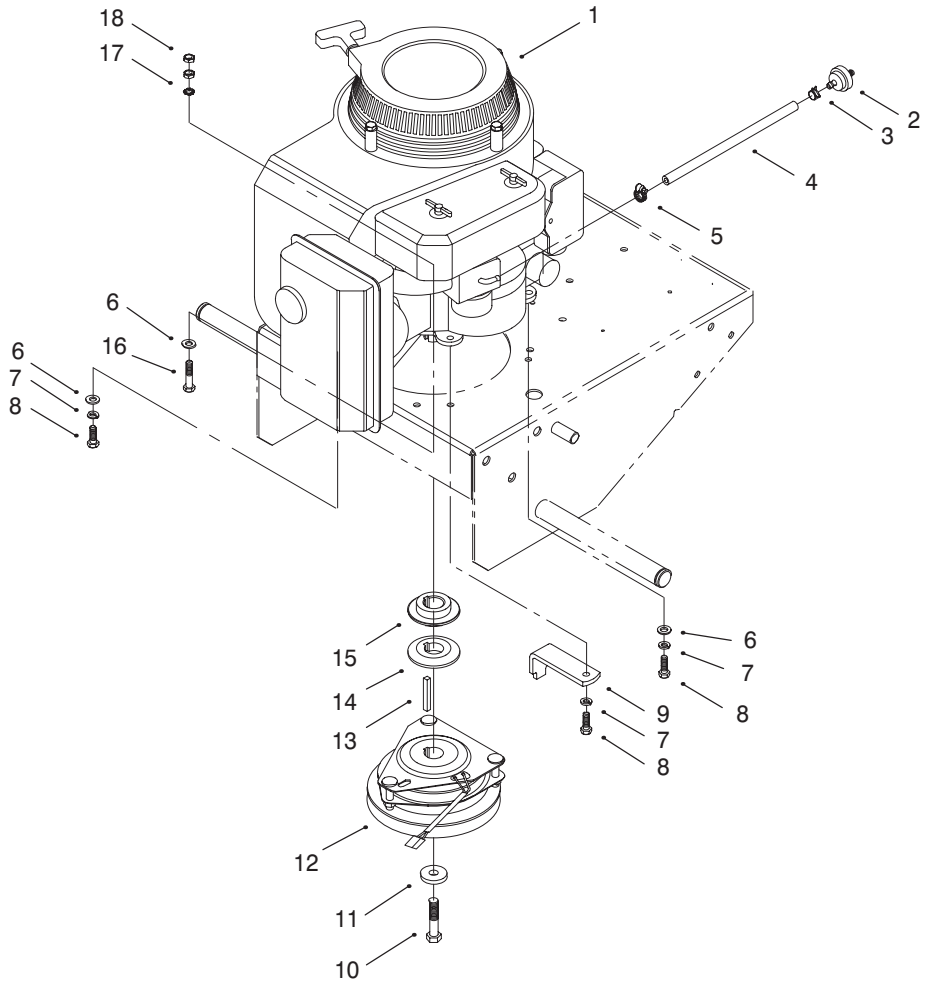


Sheet No.:6

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	100–6466	1	Engine–12.5 Kawasaki Model Fb460v–Ls08
2	56–6360	1	Filter–Fuel
3	2412–98	1	Clamp
4	47–2982	1	Gas Hose
5	2412–108	1	Clamp–Worm
6	3256–23	3	Washer–Flat
7	3253–4	3	Washer–Lock/Sp
8	33114–025	3	Screw–HH
9	51–4540–03	1	Retainer–Clutch
10	57–6360	1	Clutch Screw
11	112843	1	Washer
12	54–3200	1	Clutch/Brake
13	92–5436	1	Key
14	74–0050	1	Sheave–Lower Half
15	74–0060	1	Sheave–Upper Half
16	57–6370	1	Screw–Eng Ground
17	3255–8	1	Washer–Lock/Ext
18	57–6390	2	Jam Nut

Ref. No.	Part No.	Qty.	Description

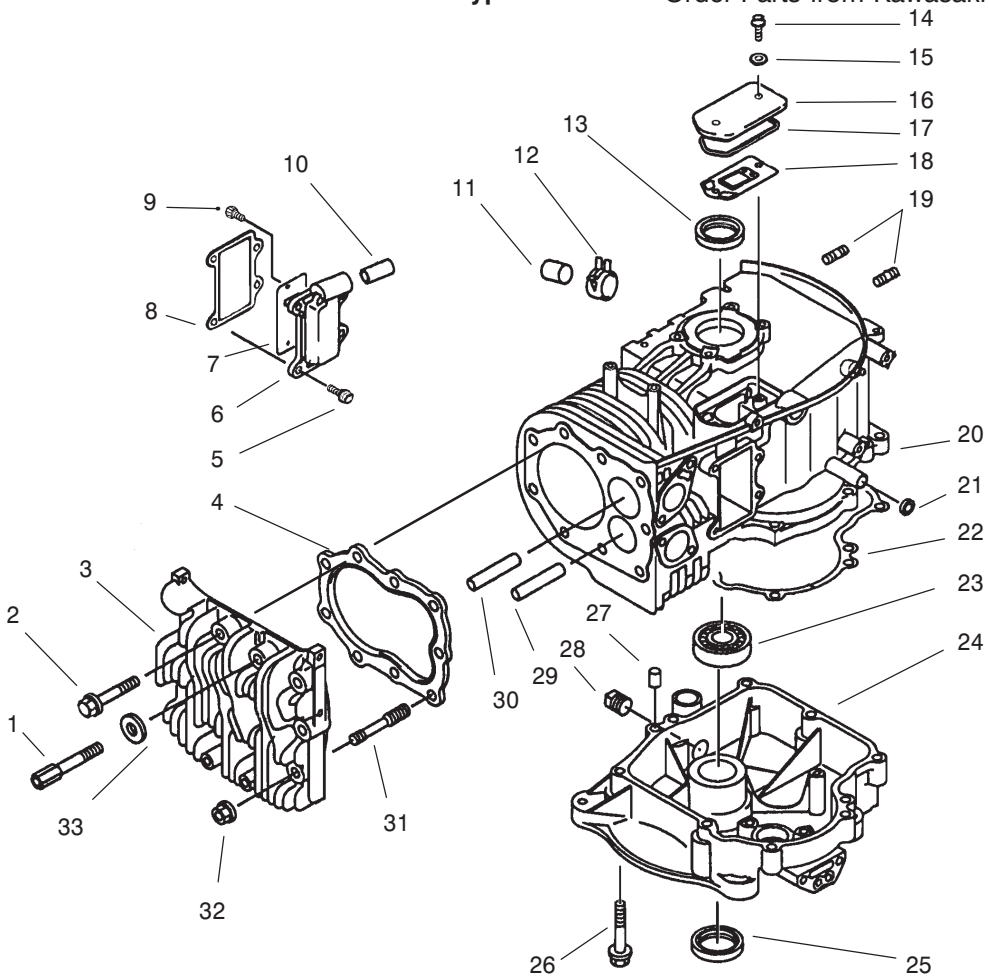

Sheet No.: 201


Crankcase

Ref. No.	Part No.	Qty.	Description
1	92002–2258	2	Bolt
2	130g1055	4	Bolt–Flange
3	11001–2151	1	Head–Cylinder
4	11004–2091	1	Gasket–Head
5	130g0616	4	Bolt–Flange
6	49108–2011	1	Cover–Valve Chamber
7	14025–2143	1	Cover
8	11060–2059	1	Gasket
9	92009–2307	2	Screw
10	92059–2142	1	Tube
11	92066–2096	1	Plug
12	92170–2088	1	Clamp
13	92049–2096	1	Seal–Oil
14	92002–2087	2	Bolt
15	11060–2323	2	Gasket
16	14025–2040	1	Cover–Breather
17	11009–2339	1	Gasket–Cover
18	14069–2062	1	Breather
19	92004–2083	4	Stud–6 X 14
20	49120–6108	1	Crankcase–Complete
21	92049–2097	1	Seal–Oil
22	11060–2015	1	Gasket–Crankcase
23	601a6207	1	Bearing–Ball
24	49015–6176	1	Cover–Crankcase
25	92049–2227	1	Seal–Oil
26	130g0845	8	Bolt–Flange

Ref. No.	Part No.	Qty.	Description
27	92043–1263	2	Pin
28	92066–2097	1	Plug
29	49002–2071	1	Guide–Valve Exhaust
30	49002–2070	1	Guide–Valve Intake
31	92004–2082	3	Stud
32	92015–2115	3	Nut
33	410b1000	2	Washer–Plain

Kawasaki Model FB460V Type LS08

* Order Parts from Kawasaki

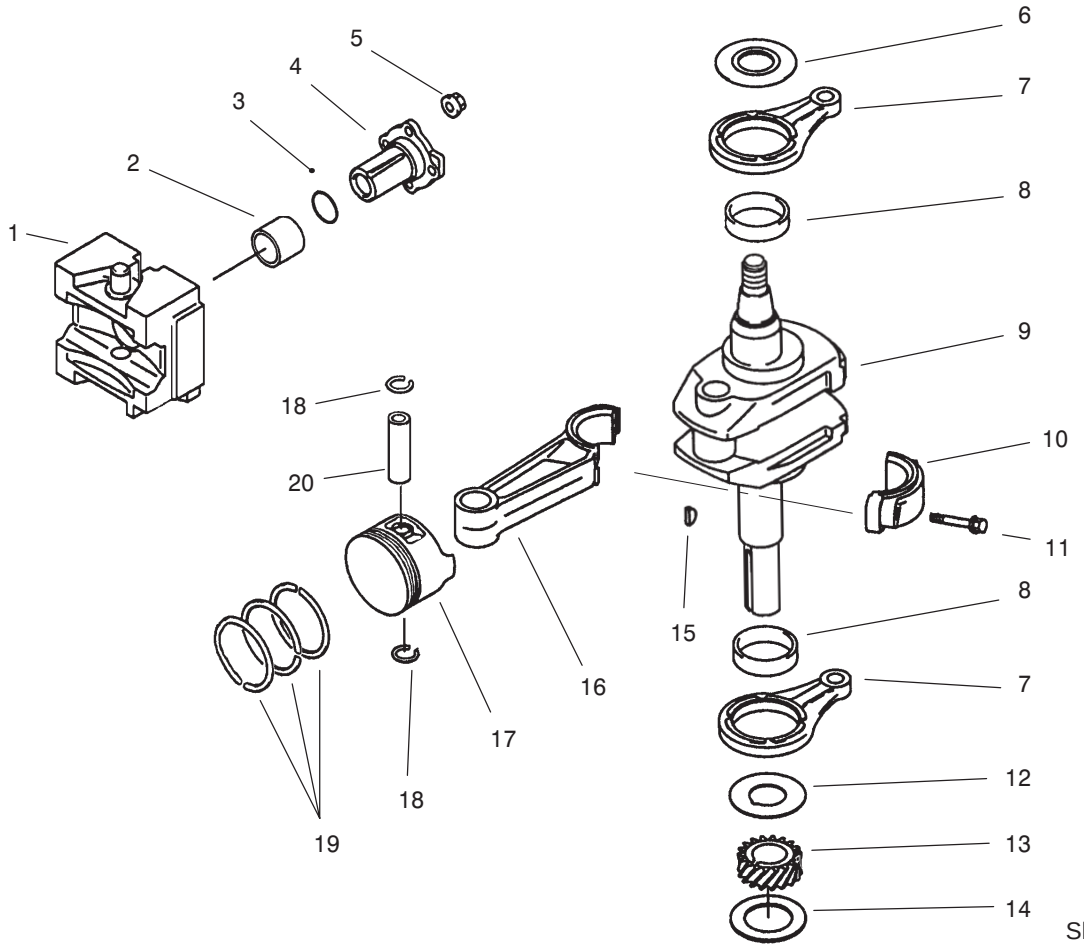


Sheet No.: 202

Piston / Crankshaft

Ref. No.	Part No.	Qty.	Description
1	13042–6006	1	Weight Incl #2
2	92141–2097	1	Bearing–Plane
3	92055–2072	1	O–Ring
4	13107–2253	1	Shaft
5	92015–1193	4	Nut
6	92026–2164	1	Spacer
7	46102–6007	2	Rod Incl #8
8	92141–2108	2	Bearing–Plane
9	49119–2177	1	Crankshaft ASM
11	92050–2193	2	Bolt
12	92026–2156	1	Spacer
13	59056–2105	1	Gear–Helical
14	92025–2145	A/R	Shim T=1.18
14	92025–2146	A/R	Shim T=1.25
14	92025–2147	A/R	Shim T=1.32
14	92025–2148	A/R	Shim T=1.39
14	92025–2149	A/R	Shim T=1.46
14	92025–2150	A/R	Shim T=1.53
14	92025–2151	A/R	Shim T=1.60
14	92025–2152	A/R	Shim T–1.67
14	92025–2153	A/R	Shim T=1.74
14	92180–2015	A/R	Shim T=1.11
14	92180–2016	A/R	Shim T=1.81
15	92038–2094	1	Key
16	13251–6005	1	Rod ASM Incl #10 11

Ref. No.	Part No.	Qty.	Description
16	13251–6007	A/R	Rod ASM Incl #10 11 0.50
17	13001–2084	1	Piston
17	13029–2019	A/R	Piston 0.25
17	13029–2020	A/R	Piston 0.50
18	92033–2066	2	Ring–Snap
19	13008–6001	1	Set–Ring Piston
19	13008–6002	A/R	Set–Ring Piston 0.25
19	13008–6003	A/R	Set–Ring Piston 0.50
20	13002–2066	1	Pin–Piston

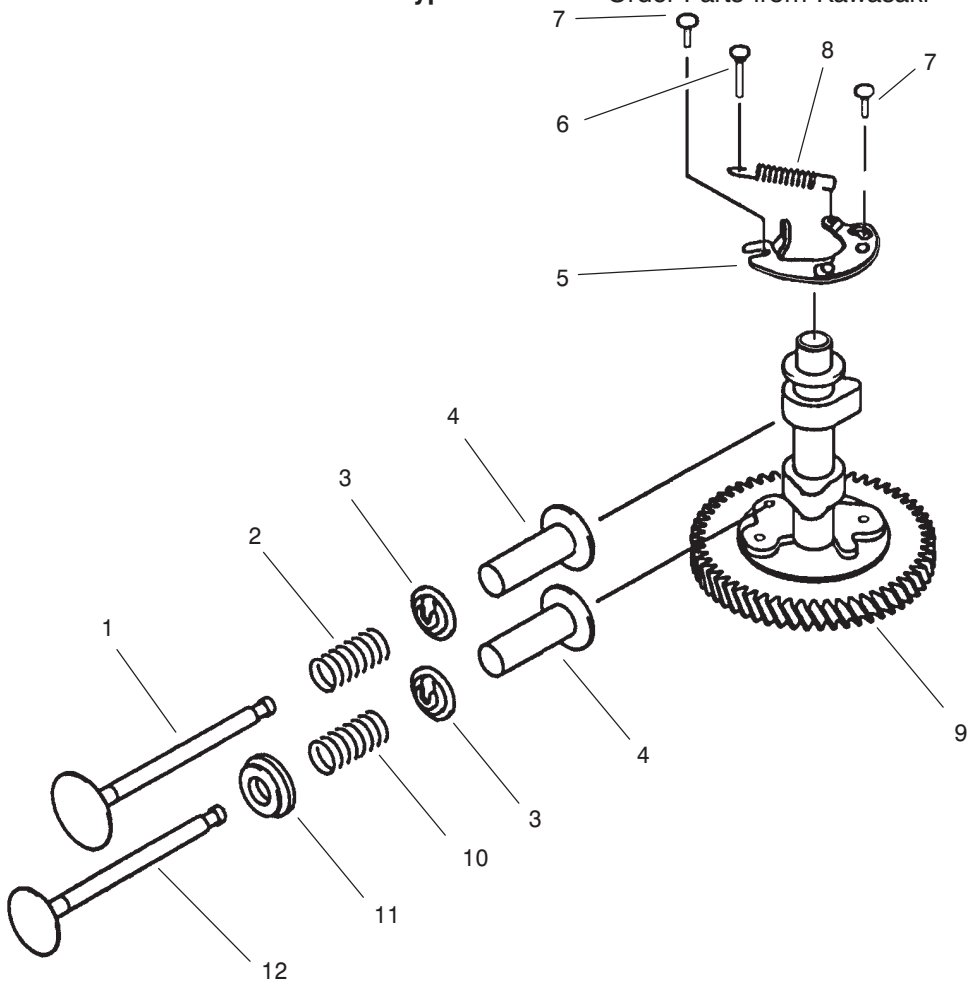

Sheet No.: 203


Valve / Camshaft

Ref. No.	Part No.	Qty.	Description
1	12004–2076	1	Valve–Intake
2	49078–2059	1	Spring–Valve
3	39108–2054	2	Retainer–Spring
4	12032–2058	2	Tappet
5	21118–2068	1	Decompressor
6	92043–2167	1	Pin
7	92043–2113	2	Pin
8	92144–2171	1	Spring
9	49118–2134	1	Camshaft Incl # 5–8
10	49078–2058	1	Spring–Valve
11	12039–2052	1	Rotator
12	12005–2066	1	Valve–Exhaust

Ref. No.	Part No.	Qty.	Description

Kawasaki Model FB460V Type LS08

* Order Parts from Kawasaki

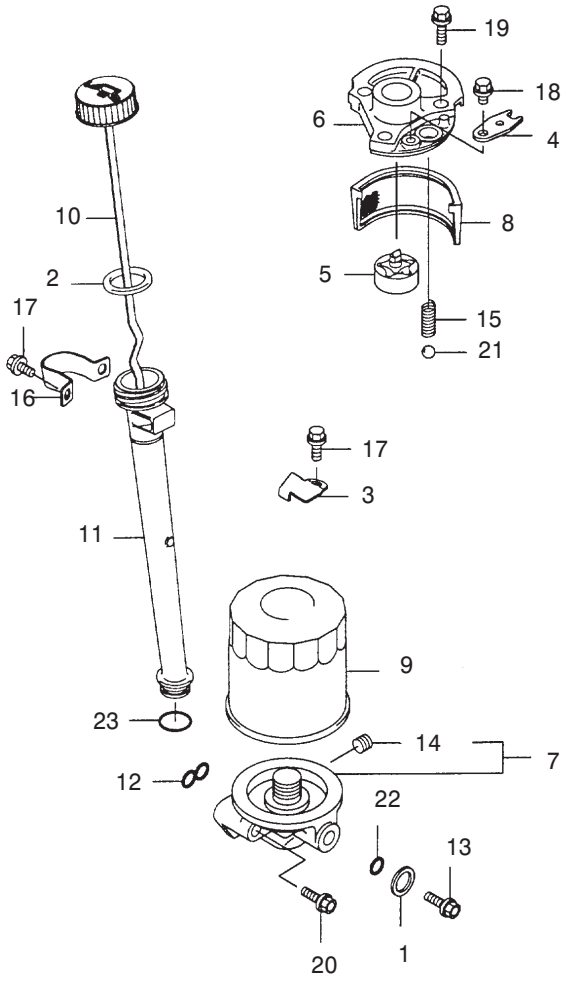


Sheet No.: 204

Lubrication Equipment

Ref. No.	Part No.	Qty.	Description
1	11009–2175	1	Gasket
2	11009–2346	1	Gasket–Oil Gauge
3	13169–2359	1	Plate
4	13270–2054	1	Plate
5	16082–2057	1	Pump Assy–Oil
6	16142–6001	1	Cover–Pump
7	23062–6001	1	Bracket–Comp
8	49065–2056	1	Filter–Oil
9	49065–2071	1	Filter–Oil
10	52005–2058	1	Gauge–Oil
11	59231–2059	1	Filler
12	92055–2063	1	Ring–O
13	92066–2093	1	Plug
14	92066–2211	1	Plug
15	92081–2216	1	Spring
16	92170–2014–9H	1	Clamp
17	130B0508	3	Bolt–Flanged
18	130B610	1	Bolt–Flanged
19	130G0825	3	Bolt–Flanged
20	130G0845	2	Bolt–Flanged
21	600A1000	1	Ball–Steel
22	670D1507	1	O Ring
23	670D2016	1	O Ring

Ref. No.	Part No.	Qty.	Description

Kawasaki Model FB460V Type LS08 * Order Parts from Kawasaki 3325–736

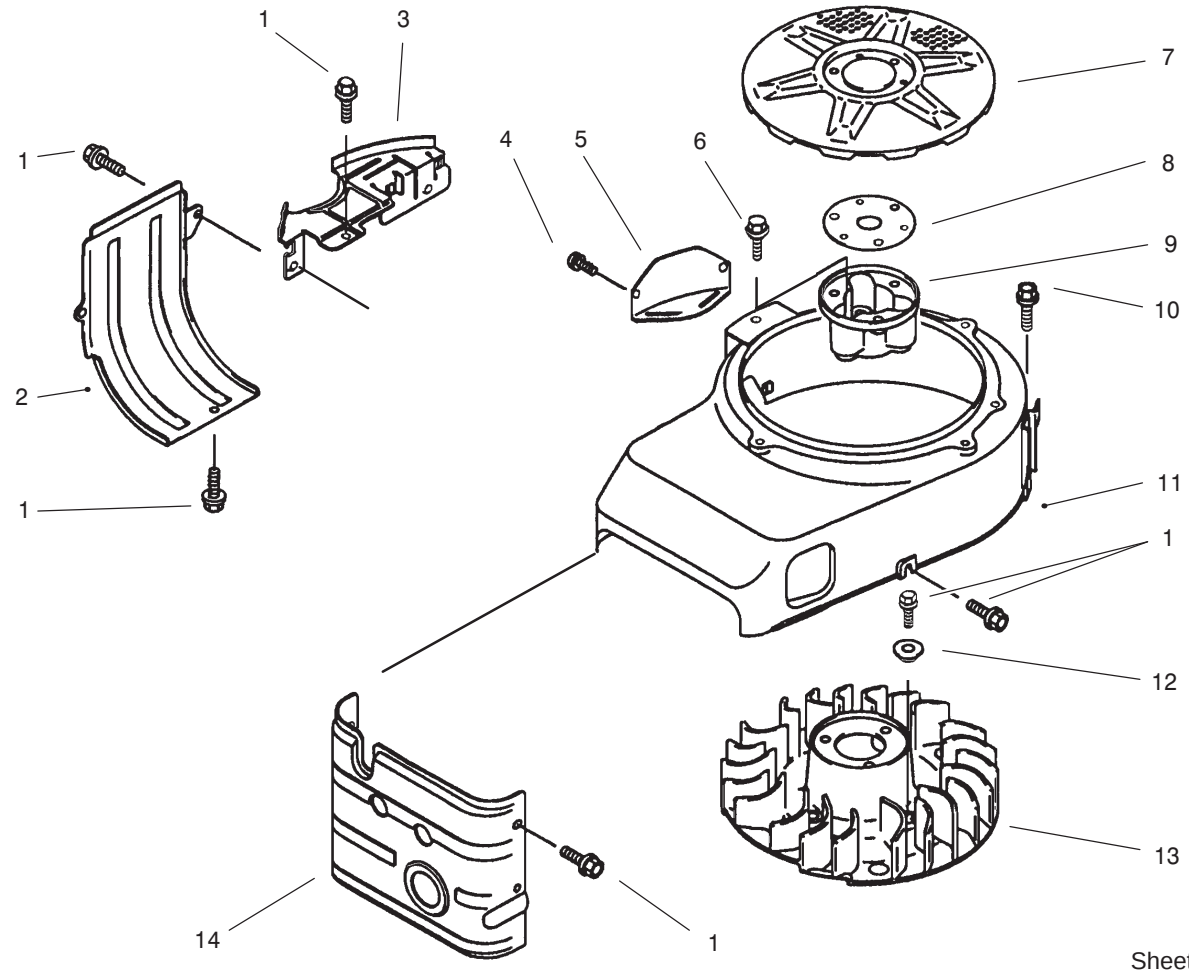

Sheet No.: 205


Cooling Equipment

Ref. No.	Part No.	Qty.	Description
1	130g0610	9	Bolt–Flange
2	49089–2199–9H	1	Shroud–Engine
3	59066–2295–9H	1	Housing–Fan
4	234b0408	2	Screw
5	14024–2038–9H	1	Cover
6	130b0820	3	Bolt–Flange
7	14037–2104–9H	1	Screen
8	92025–2003	1	Shim T–1.20
9	11044–2084	1	Bracket
10	130go614	6	Bolt–Flange
11	59066–2677–9H	1	Housing–Fan
12	92143–2179	4	Collar
13	59041–2081	1	Fan
14	49089–2181–9H	1	Shroud–Engine

Ref. No.	Part No.	Qty.	Description

Kawasaki Model FB460V Type LS08

* Order Parts from Kawasaki

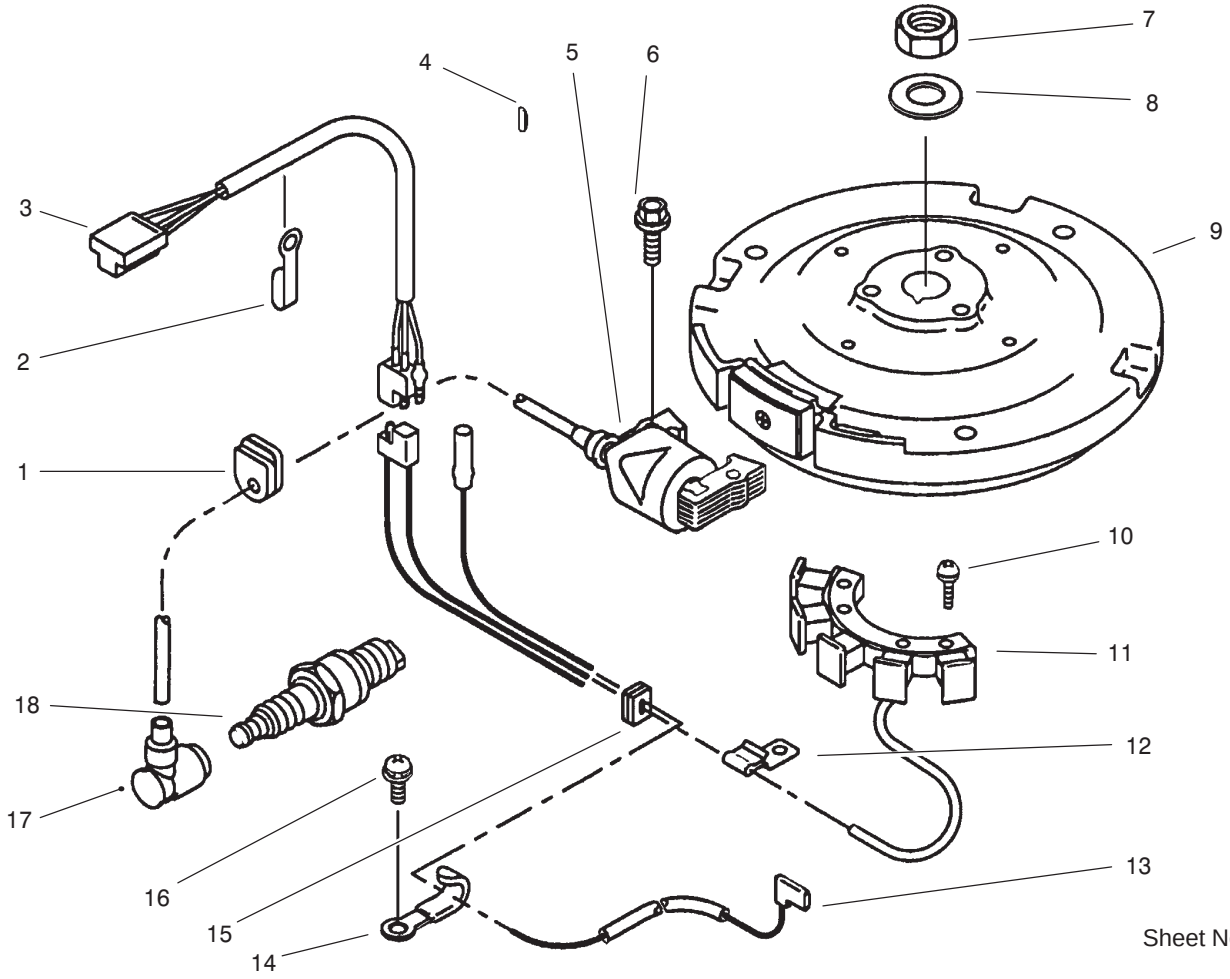


Sheet No.: 206

Electric Equipment

Ref. No.	Part No.	Qty.	Description
1	92071–2100	1	Grommet
2	92037–2063	1	Clamp
3	26001–2113	1	Harness–Wire
4	92038–2094	1	Key
5	21121–2086	1	Coil–Ignition
6	130b0520	2	Bolt–Flange
7	314g1800	1	Nut–Hex
8	92022–2178	1	Washer
9	21194–2323	1	Flywheel
10	224b0620	2	Screw
11	59031–2106	1	Coil–Charging
12	92037–2158	1	Clamp
13	26011–2329	1	Wire–Lead
14	92170–2029	1	Clamp
15	92071–2099	1	Grommet
16	234b0408	1	Screw
17	21130–2060	1	Cap–Spark Plug
18	92070–2101	1	Spark Plug–Rcj8

Ref. No.	Part No.	Qty.	Description

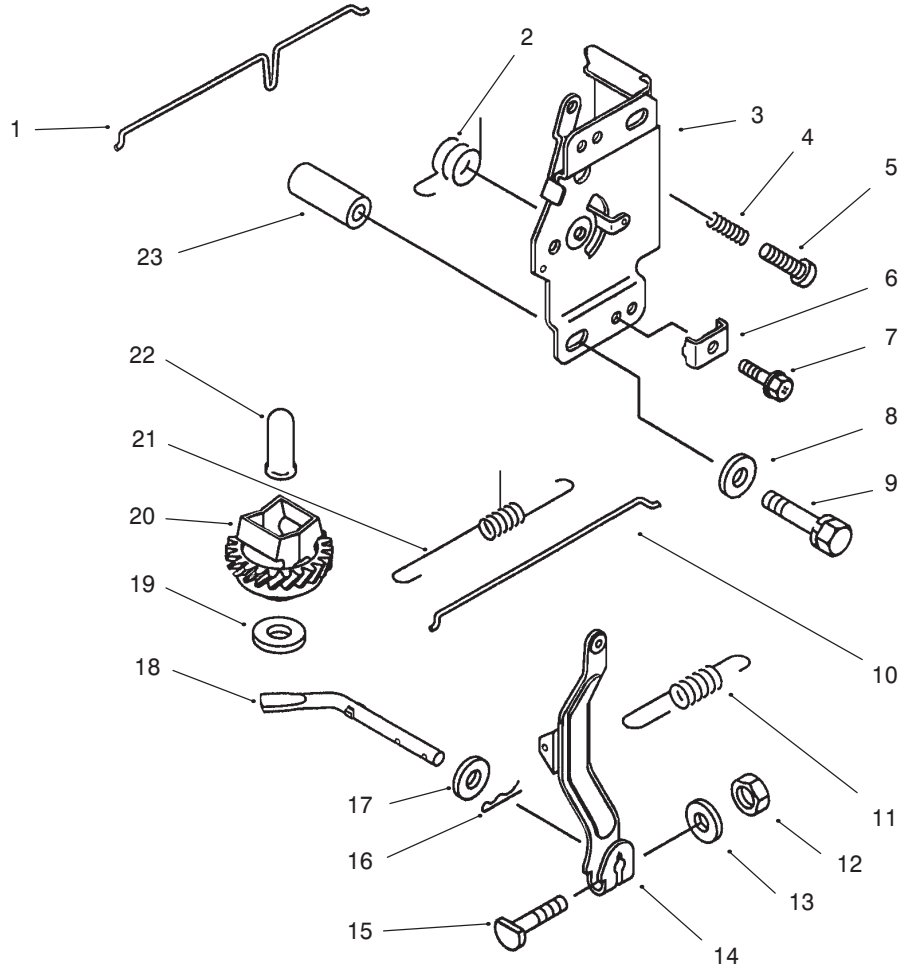

Sheet No.: 207


Control Equipment

Ref. No.	Part No.	Qty.	Description
1	16169–2126	1	Link–Choke
2	92081–2316	1	Spring
3	49113–2067	1	Panel Incl #2 4–7
4	92144–2266	1	Spring
5	214b0425	1	Screw
6	92037–2020	1	Clamp
7	92150–2128	1	Bolt
8	92200–2070	2	Washer
9	180b0650	2	Bolt
10	16171–2083	1	Link
11	39129–2010	1	Spring–Governor
12	311b0600	1	Nut–HH
13	411b0600	1	Washer
14	21187–2052	1	Arm ASM
15	92002–2269	1	Bolt
16	554a0600	1	Pin–Snap
17	92200–2029	1	Washer
18	39003–2072	1	Arm–Pivot
19	92200–2036	1	Washer
20	49110–2067	1	Governor ASM
21	92081–2213	1	Spring
22	42036–2060	1	Sleeve
23	92027–2071	2	Collar

Ref. No.	Part No.	Qty.	Description

Kawasaki Model FB460V Type LS08

* Order Parts from Kawasaki

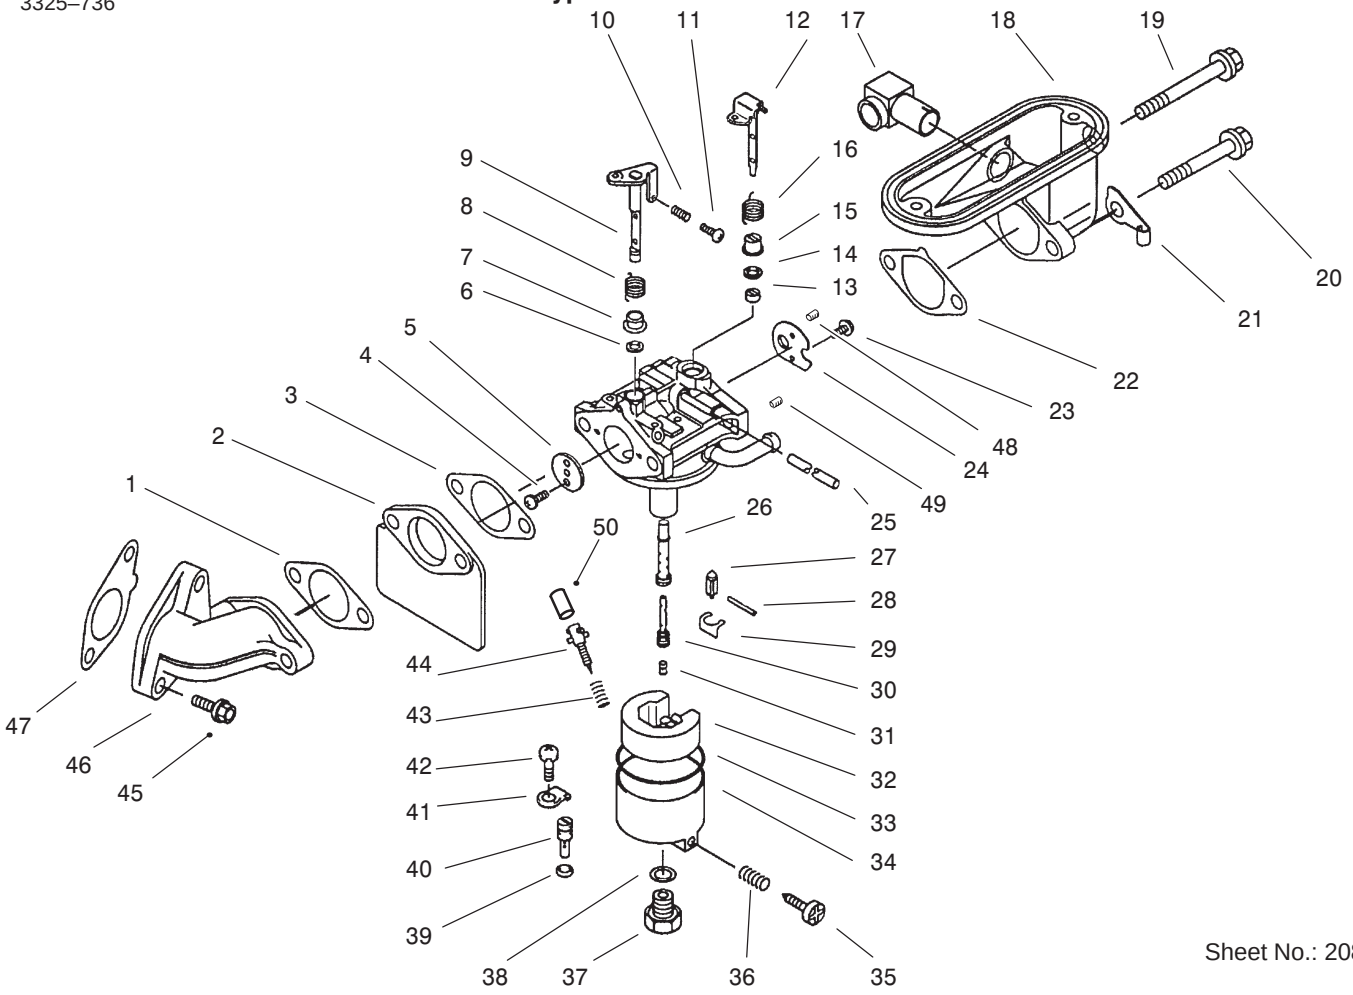


Sheet No.: 208

Carburetor

Ref. No.	Part No.	Qty.	Description
0	15003–2467	1	Carburetor ASM
1	11060–2338	1	Gasket–Intake Pipe
2	16073–2091	1	Insulator
3	11060–2339	2	Gasket–Carburetor
4	92009–2080	2	Screw
5	16025–2141	1	Valve–Throttle #110
6	92093–2082	1	Seal
7	92027–2025	1	Collar
8	92081–2077	1	Spring
9	16041–2009	1	Shaft–Throttle
10	92081–2046	1	Spring
11	92009–2079	1	Screw
12	16041–2010	1	Shaft–Choke
13	92027–2003	1	Collar
14	92093–2069	1	Seal
15	92143–2142	1	Collar
16	92144–2160	1	Spring
17	59071–2062	1	Joint
18	16060–2108	1	Pipe–Intake
19	92002–2254	1	Bolt
20	92002–2253	1	Bolt
21	92170–2019	1	Clamp
22	11009–2025	1	Gasket
23	92009–2081	2	Screw
24	16126–2206	1	Valve–Choke
25	92059–2266	1	Tube

Ref. No.	Part No.	Qty.	Description
26	49121–2207	1	Nozzle–Main
27	16030–2073	1	Valve–Float
28	92043–2006	1	Pin
29	92033–2067	1	Ring–Snap
30	49123–2078	1	Holder–Main Jet
31	92063–2294	1	Jet–Main
32	16031–2066	1	Float
33	11009–2024	1	Gasket
34	16020–2109	1	Chamber–Float Incl 35 36
35	92009–2015	1	Screw
36	92081–2009	1	Spring
37	92150–2146	1	Bolt
38	1100a–2025	1	Gasket
39	16038–024	1	Gasket
40	92064–2108	1	Jet–Pilot
41	13183–2252	1	Plate
42	92009–2244	1	Screw
43	92081–2008	1	Spring
44	16014–2076	1	Screw–Pilot Air
45	130g0825	2	Bolt–Flange
46	16060–2109	1	Pipe–Intake
47	11060–2337	1	Gasket–Intake Pipe
48	16035–2063	1	Jet–Air #0.9
49	16035–2051	1	Jet–Air #1.4
50	39076–2053	1	Limiter

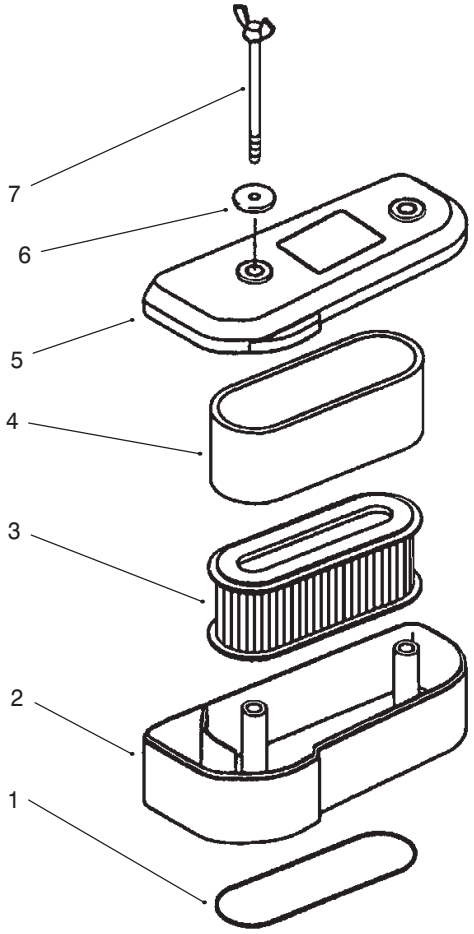

Sheet No.: 210

Air Filter


Ref. No.	Part No.	Qty.	Description
1	11009–2443	1	Gasket–Air Filter
2	11011–2174	1	Case–Air Filter
3	11013–2021	1	Element–Air Filter
4	11013–2020	1	Element–Air Filter
5	11012–2192	1	Cap–Air Filter
6	92022–2220	2	Washer
7	92002–2230	2	Bolt
	11010–2291	1	Filter ASM

Ref. No.	Part No.	Qty.	Description

3325–736

Kawasaki Model FB460V Type LS08

* Order Parts from Kawasaki

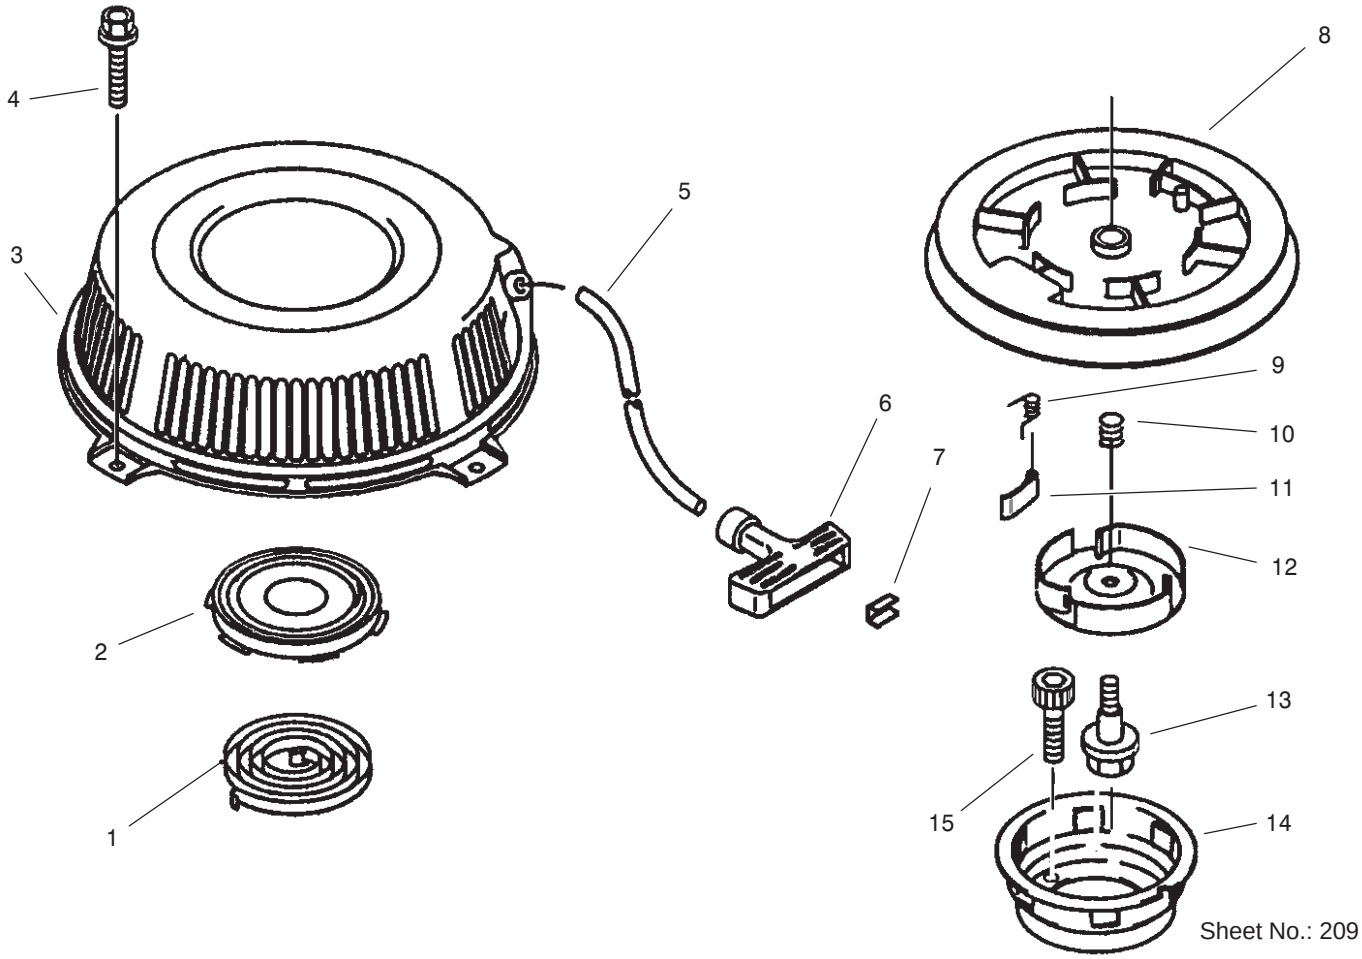


Sheet No.: 209

Starter

Ref. No.	Part No.	Qty.	Description
1	90281–2267	1	Spring–Recoil
2	32099–2060	1	Case–Spring
3	32099–2239–yk	1	Case–Recoil Starter
4	130b0610	4	Bolt–Flange
5	59106–2060	1	Rope–Starter
6	46075–2059	1	Grip–Starter Rope
7	92022–2248	1	Washer
8	59101–2054	1	Reel–Recoil Starter
9	92081–2021	3	Spring
10	92081–2268	1	Spring–Return
11	13165–2073	3	Pawl–Recoil Starter
12	14020–2054	1	Retainer–Recoil
13	92001–2027	1	Bolt
14	49080–2144	1	Pulley–Starting
15	120p0620	3	Bolt–Socket
*	49088–2412–yk	1	Starter Incl #1–5 8–14

Ref. No.	Part No.	Qty.	Description

*Not illustrated

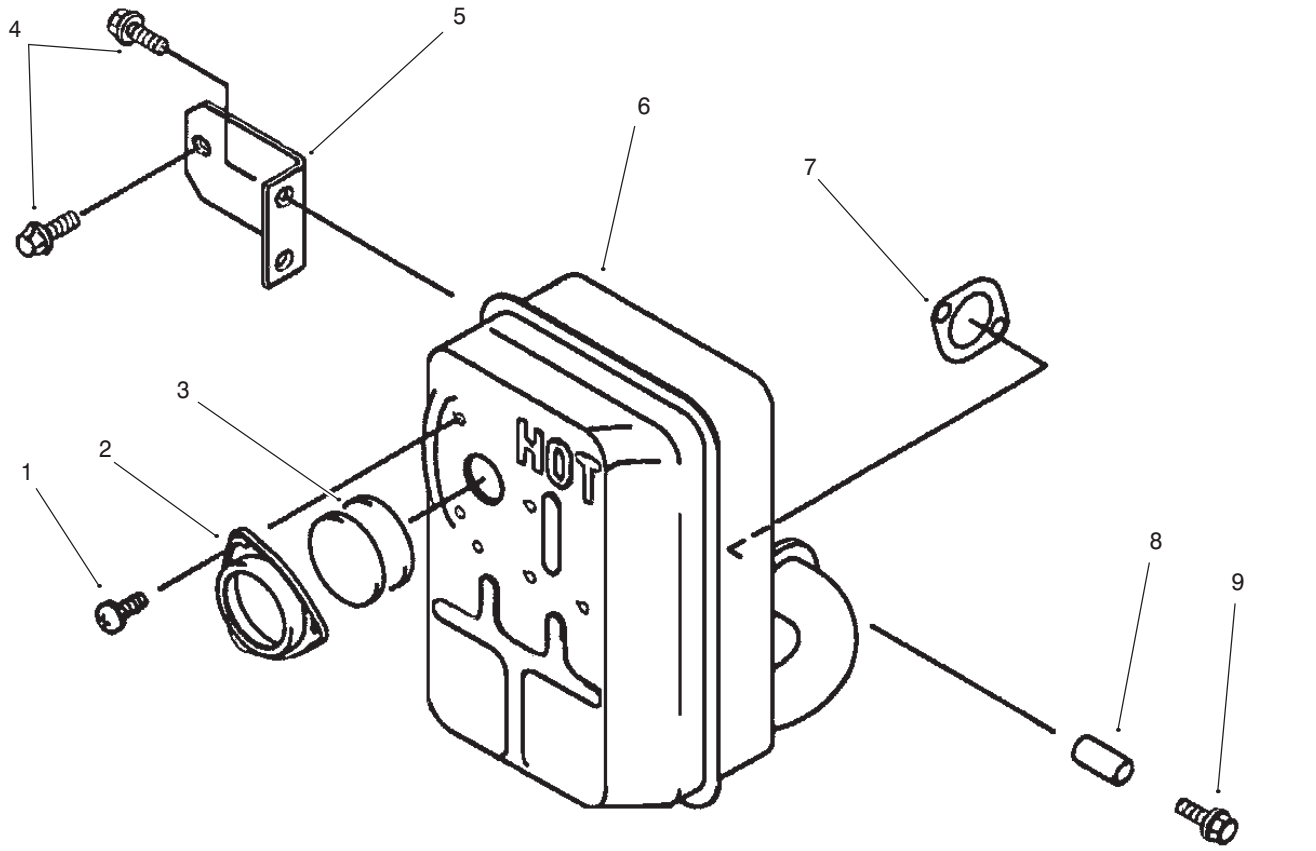


Sheet No.: 211

Muffler

Ref. No.	Part No.	Qty.	Description
1	92009–2166	2	Screw
2	11012–2165–9Y	1	Cap–Spark Arrestor
3	18077–2054	2	Arrestor–Spark
4	130b0812	4	Bolt–Flange
5	11044–2069–9Y	1	Bracket
6	49069–2190–9Y	1	Muffler ASM
7	11009–2527	1	Gasket–Muffler
8	92027–2081	1	Collar
9	130g0845	1	Bolt–Flange

Ref. No.	Part No.	Qty.	Description

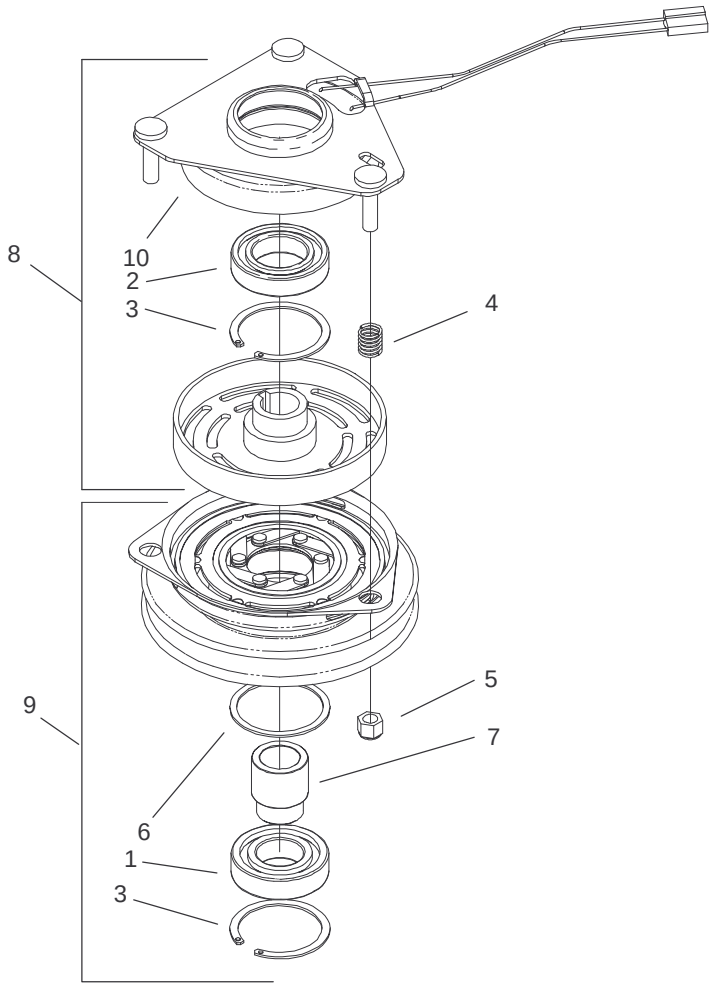


Sheet No.:A1

Clutch Asm No. 54–3200

Ref. No.	Part No.	Qty.	Description
1	251–291	1	Pulley Brg
2	251–292	1	Field Brg
3	44–8310	2	Retaining Ring
4	44–8320	3	Spring
5	3296–6	3	Nut–Lock, NI
6	44–8330	1	Spacer–Pulley Brg
7	44–8340	1	Bearing Collar
8	44–8360	1	Field Coil,Rotor/Brg ASM
9	44–8370	1	Armature/Pulley/Brg
10	54–0230	1	Field ASM/Brg

Ref. No.	Part No.	Qty.	Description

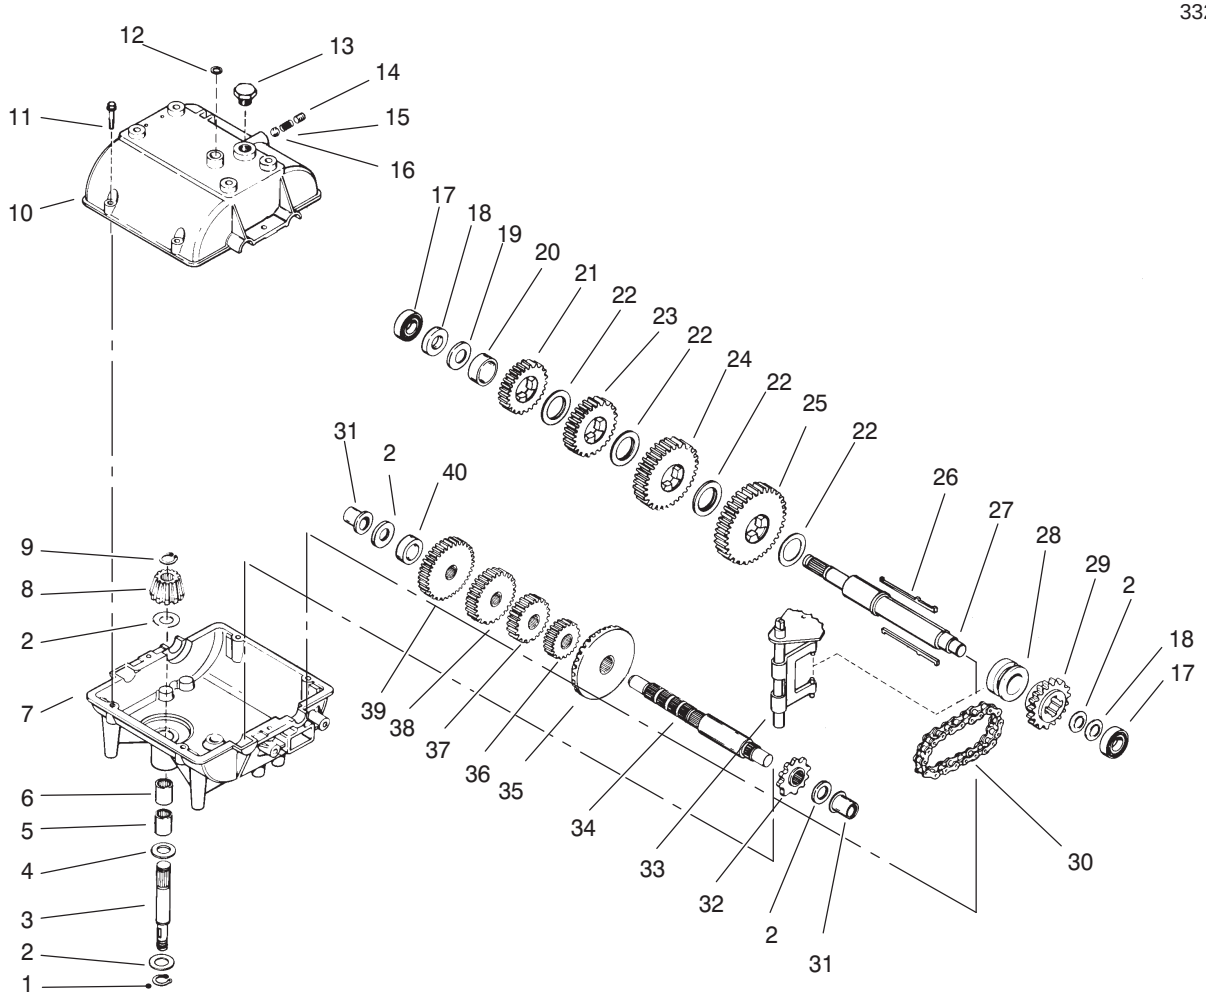


Peerless Transmission Model 700–082

Ref. No.	Part No.	Qty.	Description
1	792035	1	Ring – Retaining
2	780072	5	Washer – Thrust
3	776135	1	Shaft – Input
4	792001	2	”O”Ring
5	780142	1	Bearing – Needle
6	780086A	1	Bearing – Needle
7	770090A	1	Case – Transmission
8	778153	1	Bevel Pinion – Input
9	788040	1	Ring – Retaining
10	772099A	1	Cover – Transmission
11	792073A	6	Screw – Self Tapping
12	788069	1	Seal – Square Cut
13	792074	1	Plug – Threaded
14	792078	1	Screw – Set
15	792079	1	Spring
16	792077A	1	Ball – Steel
17	780092	2	Bearing – Ball
18	780065	2	Washer – Thrust
19	780139	1	Washer – Thrust
20	786072	1	Spacer
21	778123A	1	Gear – Spur (25 Teeth)
22	780108	4	Washer – Thrust
23	778250	1	Gear – Spur (27 Teeth)
24	778124A	1	Gear – Spur (30 Teeth)
25	778125	1	Gear – Spur (35 Teeth)
26	792089A	4	Key

Ref. No.	Part No.	Qty.	Description
27	776421	1	Shaft – Shifter & Brake
28	784266	1	Collar – Shift
29	786083	1	Sprocket (18 Teeth)
30	786081	1	Chain – Roller (No. 41 Chain 24 Links)
31	780105A	2	Bushing – Flanged
32	786082	1	Sprocket (9 Teeth)
33	784267	1	Rod & Fork Asm – Shift
34	776134	1	Shaft – Counter
35	778154	1	Gear – Bevel (42Teeth)
36	778136	1	Gear – Spur (15 Teeth)
37	778126A	1	Gear – Spur (20 Teeth)
38	778249	1	Gear – Spur (23 Teeth)
39	778127A	1	Gear – Spur (25 Teeth)
40	786071	1	Spacer
*	788067B	1	Grease 32oz Bottle
*	510334	1	Grease Eliminator

*Not Illustrated

Order Parts from Peerless

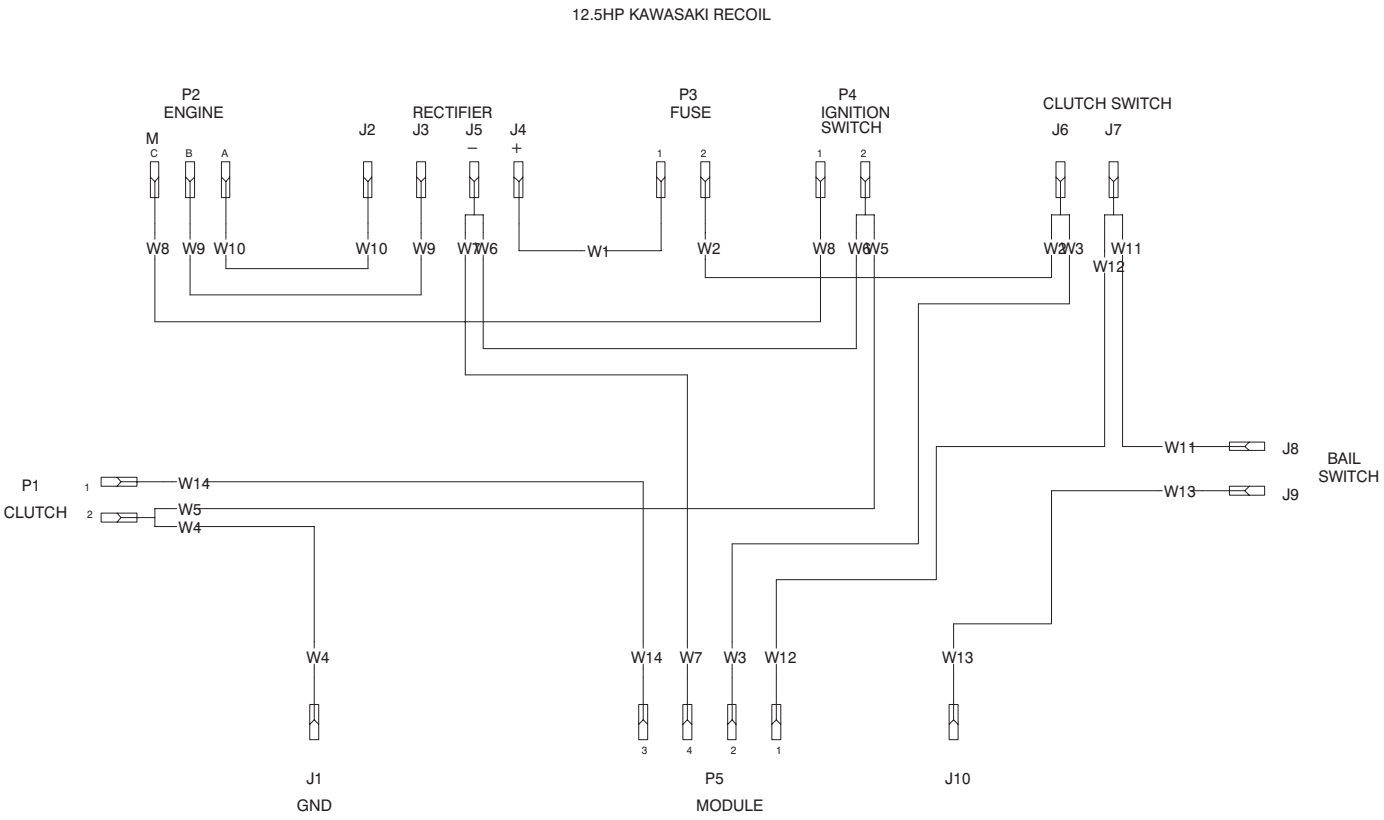

Electrical Schematic

Ref. No.	Part No.	Qty.	Description
		1	Fuse–7.5 Amp

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								


TORO®