FORM NO. 3319–734 REV A

TORO®

Wheel Horse®

48” Vac–Bagger

Model No. 79310–8900001 & Up

Model No. 79448–8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Drive Components Assembly	1
Blower Housing Assembly	2
Bag Assembly – Top	3
Deck Components Assembly	4
Bag and Frame Assembly	5
Belt Cover and Weight Assembly	6

Note:

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

© The TORO Company — 1997
All Rights Reserved

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

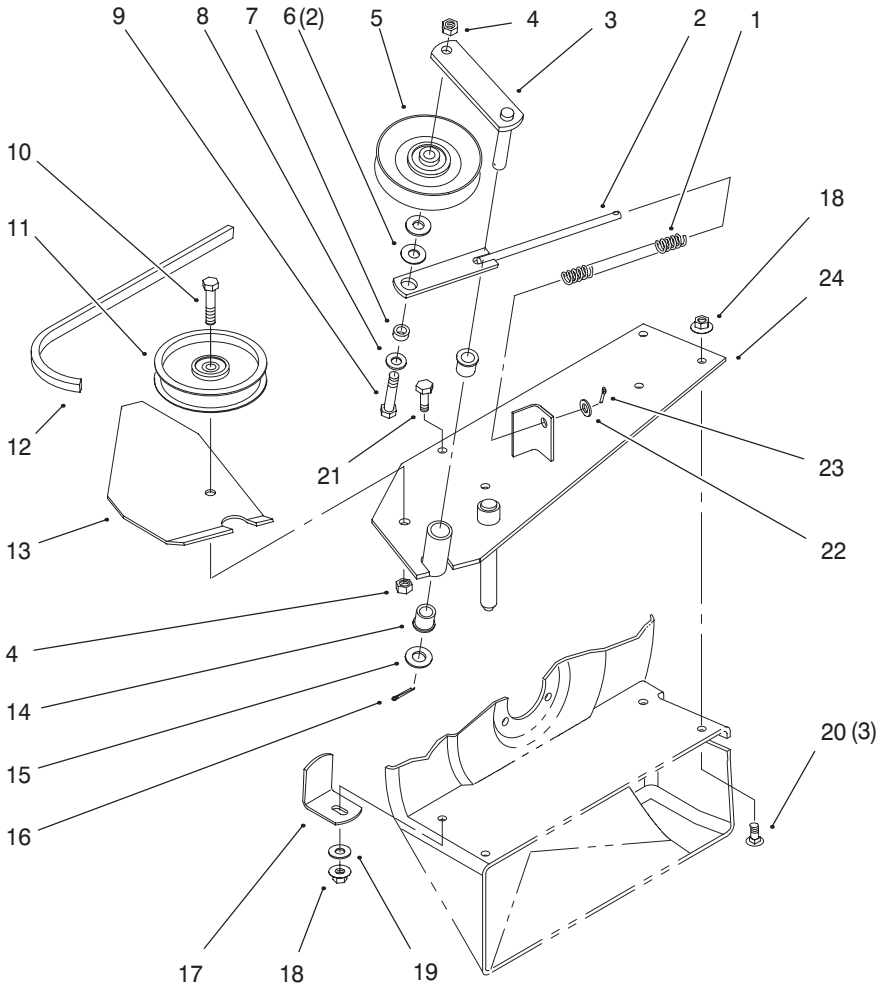


Sheet No.: 2

Drive Components Assembly

Ref. No.	Part No.	Qty.	Description
1	79–7110	1	Spring–Compression
2	79–2020	1	Bar–Spring
3	79–1970–01	1	Arm–Idler
4	3296–39	2	Nut–Lock
5	92–7099	1	Pulley–Idler
6	3256–4	2	Washer–Flat
7	107213	1	Spacer–Pivot
8	3256–24	1	Washer–Flat
9	323–10	2	Screw–HH
10	323–9	1	Screw–HH
11	93–1622	1	Pulley–Idler
12	79–7490	1	Belt
13	79–7280–01	1	Support–Shield
14	100284	2	Bushing
15	3256–26	1	Washer–Flat
16	3272–7	1	Pin–Cotter
17	79–7440	1	Bracket–Support
18	32128–20	4	Nut–Lock
19	3256–3	1	Washer–Flat
20	3230–1	3	Bolt–CARR
21	322–5	1	Screw–HH
22	3256–23	1	Washer–Flat
23	3272–10	1	Pin–Cotter
24	79–1380	1	Mounting–Blower

Ref. No.	Part No.	Qty.	Description

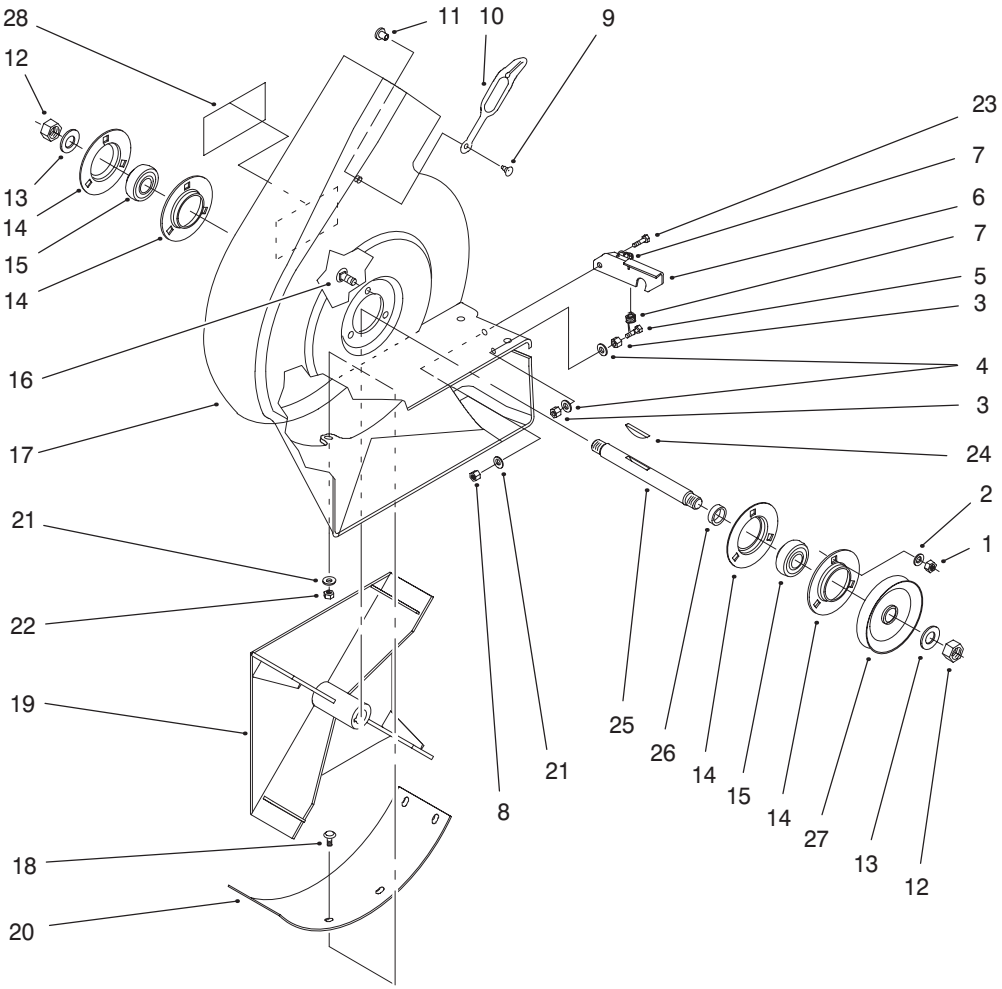


Sheet No.: 3

Blower Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	3217–6	6	Nut–Hex
2	3253–4	6	Washer–Lock
3	3217–26	2	Nut–HH
4	3256–14	2	Washer–Flat
5	32105–13	1	Screw–HH
6	79–7230	1	Latch–Blower
7	79–7390	1	Spring–Extension
8	3296–42	1	Nut–Lock
9	3290–479	1	Fastener–Panel
10	82–5690	1	Retainer
11	22–9741	1	Spacer–Interlock
12	3220–6	2	Nut–Jam
13	3253–8	2	Washer–Lock
14	251–341	4	Bearing–Flange
15	251–288	2	Bearing–Ball
16	3230–16	6	Screw–CARR
17	79–6890	1	Housing–Blower
18	3229–22	6	Screw–CARR
19	79–4300–01	1	Impeller
20	79–7170–01	1	Cover–Blower
21	3256–22	6	Washer–Flat
22	3296–56	6	Nut–Lock
23	321–4	1	Screw–HH
24	3257–40	1	Key–Woodruff
25	79–1470	1	Shaft–Blower
26	7038	1	Spacer


Ref. No.	Part No.	Qty.	Description
27	79–1460	1	Pulley–Blower
28	93–6658	1	Decal–Danger (Only On: 79448)

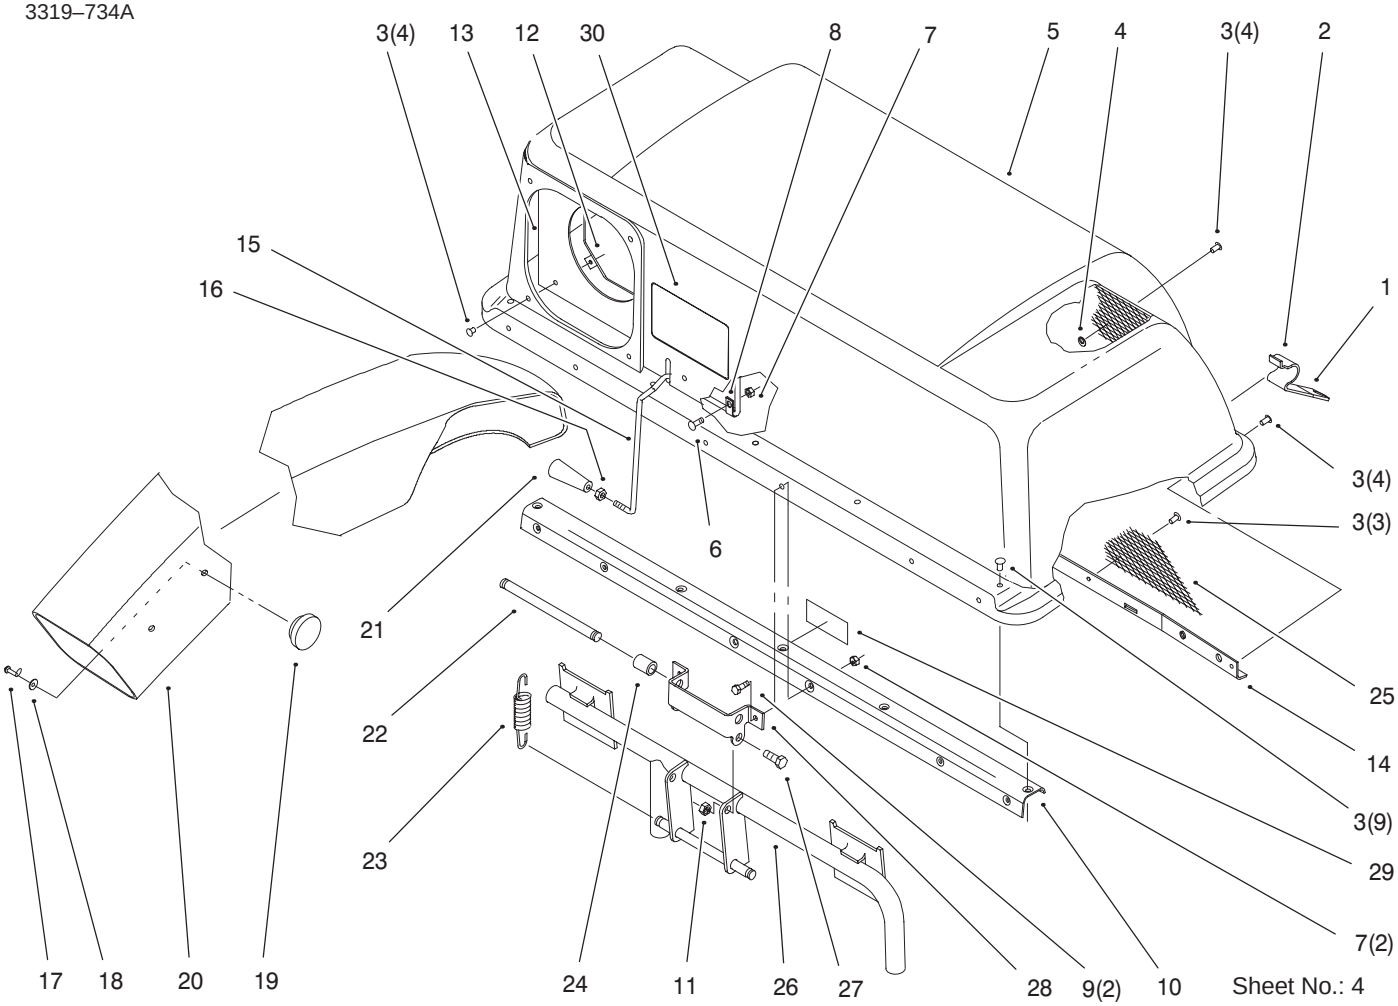

Bag Assembly – Top

Ref. No.	Part No.	Qty.	Description
1	115880	2	Grip
2	115481–03	2	Latch–Bag Top
3	114439	24	Rivet–Pop
4	9202704	4	Washer–Flat
5	92–1734	1	Top–Bagger
6	321–4	2	Screw–HH
7	3296–42	4	Nut–Lock
8	2412–91	2	Clamp–Cable
9	321–4	2	Screw–HH
10	88–9570	1	Stiffener ASM (Only On: 79310)
10:1	92–7113	1	Decal–Caution (Only On: 79310)
11	3296–39	2	Nut–Lock
12	114966	1	Clamp–Seal
13	117239	1	Chute–Seal
14	92–1736–03	1	Support–Screen
15	114969	1	Feeler–Bag
16	3218–1	1	Nut–Hex Jam
17	32144–8	1	Screw–PPH
18	3256–49	1	Washer–Flat
19	233–68	1	Knob
20	95–3873	1	Chute–Discharge
21	118320	1	Handle
22	114960	1	Pin–Spring
23	114962	2	Spring–Extension

Ref. No.	Part No.	Qty.	Description
24	9790944	2	Spacer
25	114967	1	Bagger–Screen
26	114955–03	1	Frame
27	323–6	2	Screw–HH
28	114961–03	1	Hinge–Bagger Top
30	116347	1	Decal–Easy Twin (Only On: 79310)
30	93–7329	1	Decal–Easy Twin (Only On: 79448)

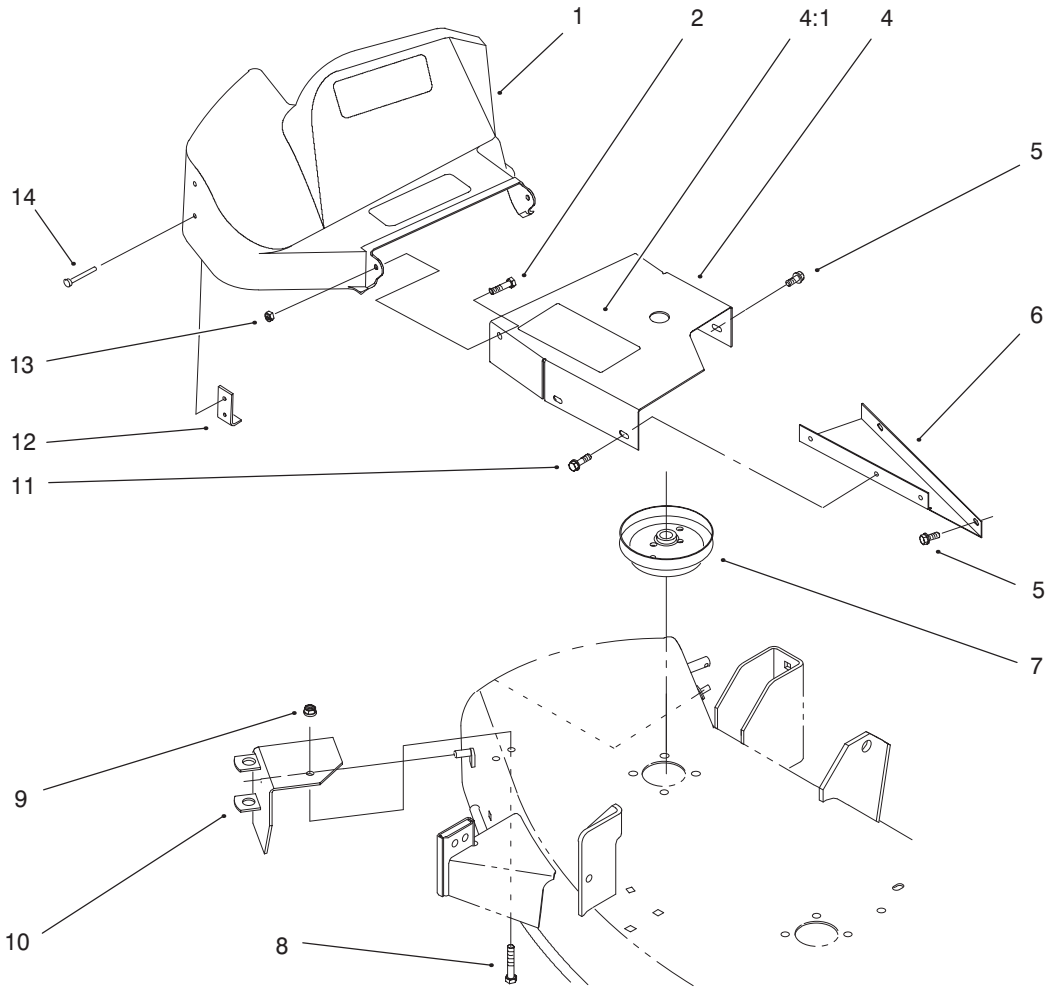


Sheet No.: 5

Deck Components Assembly

Ref. No.	Part No.	Qty.	Description
1	86–9300	1	Belt Shield ASM (Only On: 79310)
1	98–5000	1	Belt Shield ASM (Only On: 79448)
2	321–3	2	Screw–HH
4	98–5096–03	1	Shield/Decal ASM (Only On: 79310)
4	98–5097–03	1	Shield/Decal ASM (Only On: 79448)
4:1	92–7108	1	Decal–Danger (Only On: 79310)
4:1	93–7317	1	Decal–Danger (Only On: 79448)
5	3234–26	3	Screw–HHF
6	94–7589	1	Shield–Adapter
7	79–7130	1	Pulley
8	322–3	1	Screw–HH
9	32128–20	1	Nut–Lock
10	79–7000	1	Pivot
11	9266714	2	Screw–HWHTF
12	88–1870	2	Bracket–Support
13	3296–42	2	Nut–Lock
14	79–0470	4	Rivet–Pop

Ref. No.	Part No.	Qty.	Description

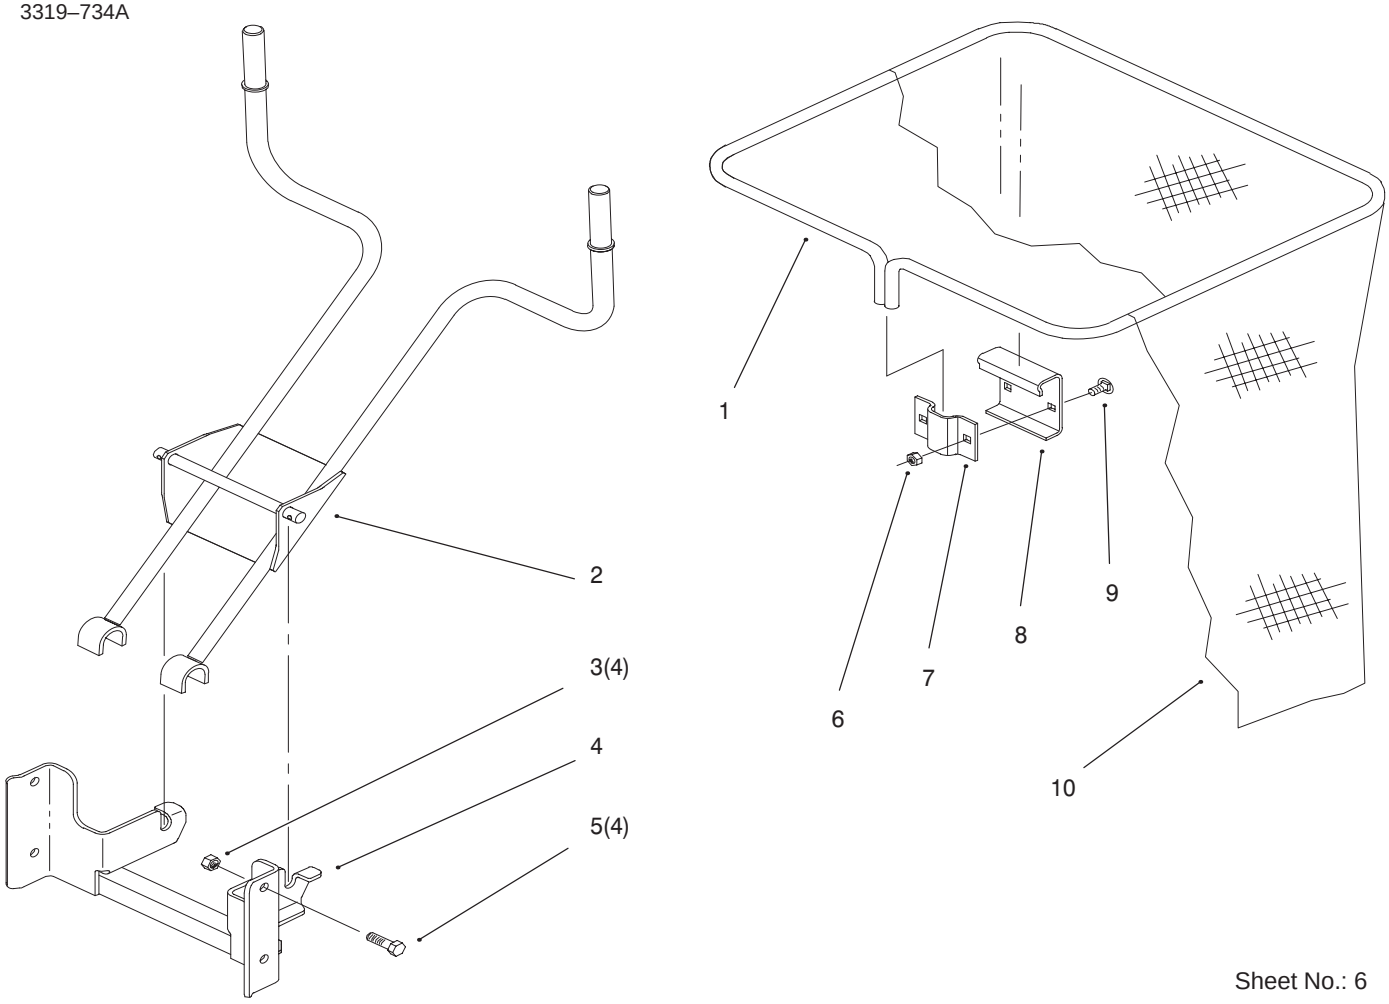


Sheet No.: 6

Bag and Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	114972–03	2	Frame–Bag
2	95–3865–01	1	Bracket–Quick Attach
3	3296–39	4	Nut–Lock
4	94–7899–01	1	Support–Bagger
5	323–6	4	Screw–HH
6	3296–29	4	Nut–Lock
7	114974–03	2	Clamp
8	114973–03	2	Hanger–Bag
9	3230–1	4	Bolt–CARR
10	93–1623	2	Bag
11	9335064	2	Hairpin

Ref. No.	Part No.	Qty.	Description

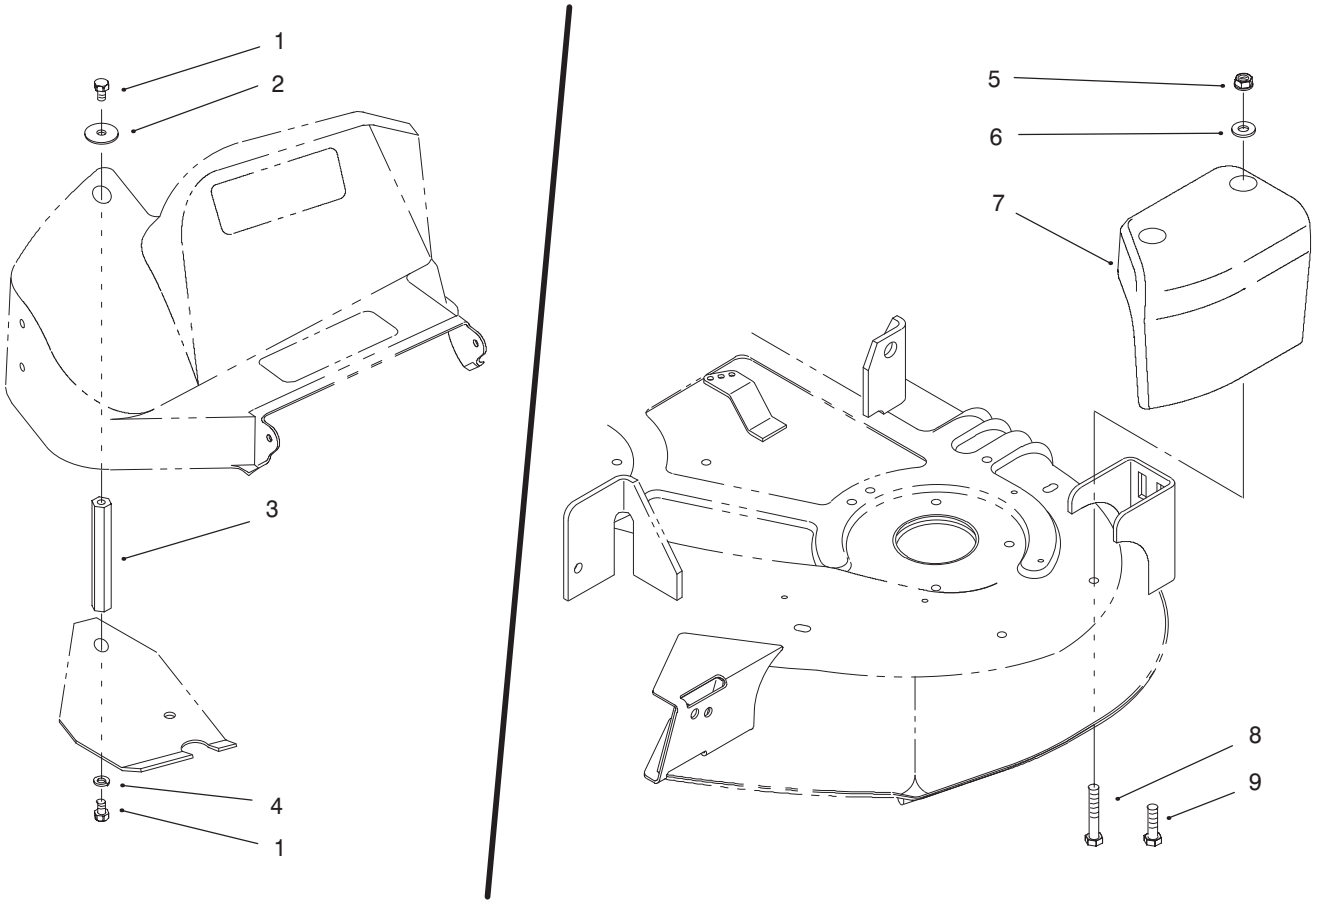

Sheet No.:100

Belt Cover and Weight Assembly

Ref. No.	Part No.	Qty.	Description
1	322–1	2	Screw–HH (Only On: 79448)
2	3256–57	1	Washer–Flat (Only On: 79448)
3	93–9277	1	Shaft–Vac Bagger (Only On: 79448)
4	3253–4	1	Washer–Lock (Only On: 79448)
5	3296–39	4	Nut–Lock
6	3256–56	3	Washer–Flat
7	98–3096	1	Weight–Bagger
8	323–45	2	Screw–HH
9	323–4	2	Screw–HH

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
7038	2	26	1	Spacer
100284	1	14	2	Bushing
107213	1	7	1	Spacer−Pivot
114439	3	3	24	Rivet−Pop
114960	3	22	1	Pin−Spring
114962	3	23	2	Spring−Extension
114966	3	12	1	Clamp−Seal
114967	3	25	1	Bagger−Screen
114969	3	15	1	Feeler−Bag
115880	3	1	2	Grip
116347	3	30	1	Decal−Easy Twin (Only On: 79310)
117239	3	13	1	Chute−Seal
118320	3	21	1	Handle
22−9741	2	11	1	Spacer−Interlock
9202704	3	4	4	Washer−Flat
9266714	4	11	2	Screw−HWHTF
9335064	5	11	2	Hairpin
9790944	3	24	2	Spacer
79−0470	4	14	4	Rivet−Pop
79−1380	1	24	1	Mounting−Blower
79−1460	2	27	1	Pulley−Blower
79−1470	2	25	1	Shaft−Blower
79−1970−01	1	3	1	Arm−Idler
79−2020	1	2	1	Bar−Spring
79−4300−01	2	19	1	Impeller
79−6890	2	17	1	Housing−Blower
79−7000	4	10	1	Pivot
79−7110	1	1	1	Spring−Compression
79−7130	4	7	1	Pulley
79−7170−01	2	20	1	Cover−Blower
79−7230	2	6	1	Latch−Blower
79−7280−01	1	13	1	Support−Shield
79−7390	2	7	1	Spring−Extension
79−7440	1	17	1	Bracket−Support
79−7490	1	12	1	Belt
82−5690	2	10	1	Retainer
86−9300	4	1	1	Belt Shield ASM (Only On: 79310)
88−1870	4	12	2	Bracket−Support
88−9570	3	10	1	Stiffener ASM (Only On: 79310)
92−1736−03	3	14	1	Support−Screen
92−7099	1	5	1	Pulley−Idler
92−7108	4	4:1	1	Decal−Danger (Only On: 79310)
92−7113	3	10:1	1	Decal−Caution (Only On: 79310)
93−1622	1	11	1	Pulley−Idler
93−1623	5	10	2	Bag
93−6658	2	28	1	Decal−Danger (Only On: 79448)
93−7317	4	4:1	1	Decal−Danger (Only On: 79448)
93−7329	3	30	1	Decal−Easy Twin (Only On: 79448)
93−9277	6	3	1	Shaft−Vac Bagger (Only On: 79448)
94−7589	4	6	1	Shield−Adapter
94−7899−01	5	4	1	Support−Bagger
95−3865−01	5	2	1	Bracket−Quick Attach
95−3873	3	20	1	Chute−Discharge
98−3096	6	7	1	Weight−Bagger
98−5000	4	1	1	Belt Shield ASM (Only On: 79448)
98−5096−03	4	4	1	Shield/Decal ASM (Only On: 79310)
98−5097−03	4	4	1	Shield/Decal ASM (Only On: 79448)
114955−03	3	26	1	Frame
114961−03	3	28	1	Hinge−Bagger Top
114972−03	5	1	2	Frame−Bag
114973−03	5	8	2	Hanger−Bag
114974−03	5	7	2	Clamp

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
115481−03	3	2	2	Latch−Bag Top
233−68	3	19	1	Knob
2412−91	3	8	2	Clamp−Cable
251−288	2	15	2	Bearing−Ball
251−341	2	14	4	Bearing−Flange
321−3	4	2	2	Screw−HH
321−4	2	23	1	Screw−HH
321−4	3	6	2	Screw−HH
321−4	3	9	2	Screw−HH
322−1	6	1	2	Screw−HH (Only On: 79448)
322−3	4	8	1	Screw−HH
322−5	1	21	1	Screw−HH
323−4	6	9	2	Screw−HH
323−6	3	27	2	Screw−HH
323−6	5	5	4	Screw−HH
323−9	1	10	1	Screw−HH
323−10	1	9	2	Screw−HH
323−45	6	8	2	Screw−HH
3217−6	2	1	6	Nut−Hex
3217−26	2	3	2	Nut−HH
3218−1	3	16	1	Nut−Hex Jam
3220−6	2	12	2	Nut−Jam
3229−22	2	18	6	Screw−CARR
3230−1	1	20	3	Bolt−CARR
3230−1	5	9	4	Bolt−CARR
3230−16	2	16	6	Screw−CARR
3234−26	4	5	3	Screw−HHF
3253−4	2	2	6	Washer−Lock
3253−4	6	4	1	Washer−Lock (Only On: 79448)
3253−8	2	13	2	Washer−Lock
3256−3	1	19	1	Washer−Flat
3256−4	1	6	2	Washer−Flat
3256−14	2	4	2	Washer−Flat
3256−22	2	21	6	Washer−Flat
3256−23	1	22	1	Washer−Flat
3256−24	1	8	1	Washer−Flat
3256−26	1	15	1	Washer−Flat
3256−49	3	18	1	Washer−Flat
3256−56	6	6	3	Washer−Flat
3256−57	6	2	1	Washer−Flat (Only On: 79448)
3257−40	2	24	1	Key−Woodruff
3272−7	1	16	1	Pin−Cotter
3272−10	1	23	1	Pin−Cotter
3290−479	2	9	1	Fastener−Panel
3296−29	5	6	4	Nut−Lock
3296−39	1	4	2	Nut−Lock
3296−39	3	11	2	Nut−Lock
3296−39	5	3	4	Nut−Lock
3296−39	6	5	4	Nut−Lock
3296−42	2	8	1	Nut−Lock
3296−42	3	7	4	Nut−Lock
3296−42	4	13	2	Nut−Lock
3296−56	2	22	6	Nut−Lock
32105−13	2	5	1	Screw−HH
32128−20	1	18	4	Nut−Lock
32128−20	4	9	1	Nut−Lock
32144−8	3	17	1	Screw−PPH

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.