Form No. 3325–895

Mid–Size Mower

ProLine Hydro with 52in. Side Discharge Mower

Model No. 30341—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

Contents

Description	Page
Engine and Clutch Assembly	4
Clutch Assembly No. 54–3200	5
Fuel Tank, Hydraulic Tank, Pump and Filter Assembly	6
Wheel Motor, Pump Idler & Belt Assembly	7
Lower Control Assembly	8
Hydraulic Hose Assembly	9
Upper Handle Assembly	10
Control Panel Assembly	11
Battery Assembly	12
Deck Assembly	13
Spindle, Idler Pulley, and Belt Assembly	14
Carrier Frame Assembly	17
Cylinder/Crankcase Kawasaki FH500V–AS30	18
Piston/Crankshaft Kawasaki FH500V–AS30	20
Valve/Camshaft Kawasaki FH500V–AS30	22
Lubrication Equipment Kawasaki FH500V–AS30	24
Cooling Equipment Kawasaki FH500V–AS30	26
Electric Equipment Kawasaki FH500V–AS30	28
Control Equipment Kawasaki FH500V–AS30	30
Carburetor Kawasaki FH500V–AS30	32
Air Filter/Muffler Kawasaki FH500V–AS30	34
Fuel Tank/Fuel Valve Kawasaki FH500V–AS30	36
Starter Kawasaki FH500V–AS30	38
Label Kawasaki FH500V–AS30	40
Electrical Schematic	41


Accessories

Description	Model / Part No.
Parking Brake Assembly Kit	105–0898
Mid–Size Sulky	30123
ProLine Mid–Size Platform Sulky	30110
Soft Bagger	30104
Steel Bagger	30107
Striping Kit	30121
Recycler Kit	59225
Mulching Kit	59227
Blade Assembly–Atomic 18	104–1301
Blade	56–2390
Blade	92–7961

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

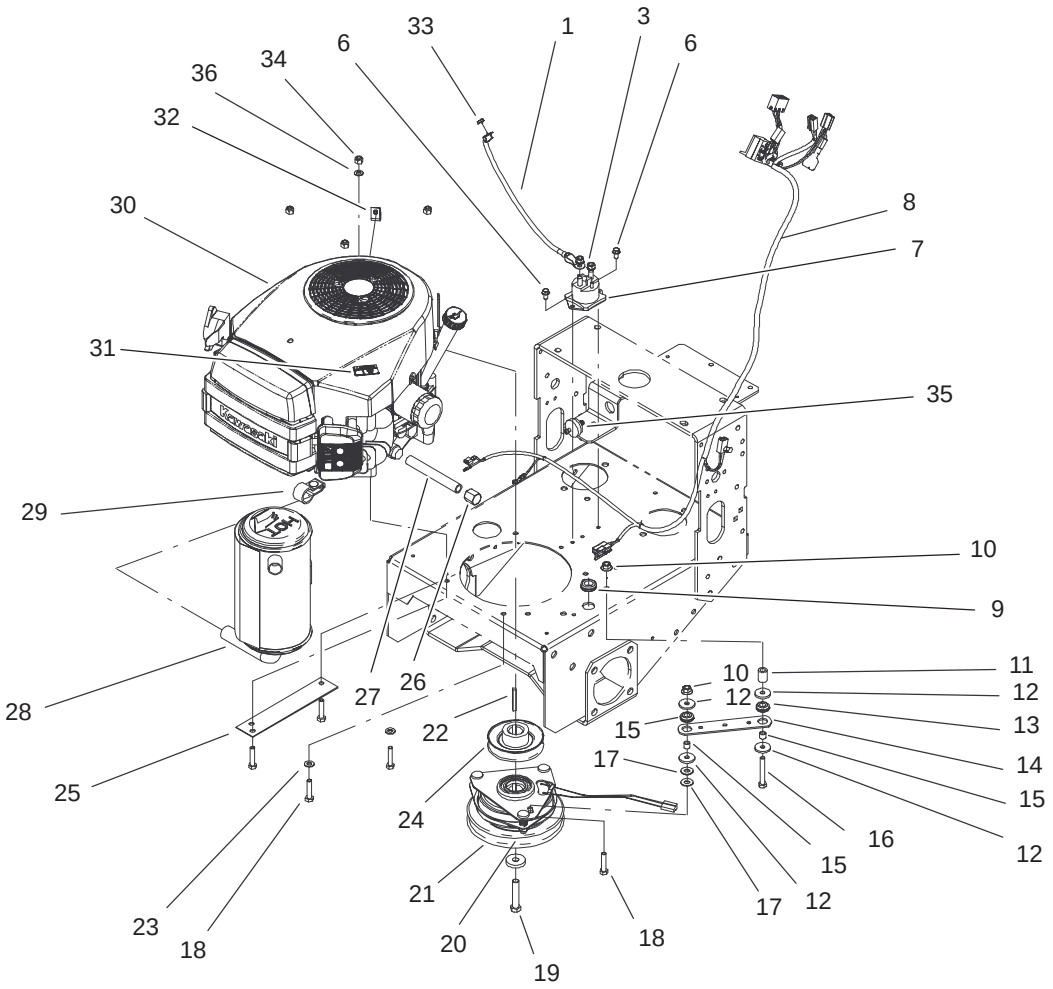


Sheet No.: 3

Engine and Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	105–0834	1	Cable–Battery, Red
3	32149–1	2	Nut
6	32144–4	2	Screw–HWH
7	28–4210	1	Solenoid
8	104–9823	1	Harness–Wire
9	237–124	1	Grommet
10	32128–20	2	Nut–HF
11	104–6373	1	Tube – Retainer
12	1–613235	4	Washer
13	1–633630	2	Grommet–Brake
14	1–633543	1	Strap–Clutch/Brake
15	1–633545	2	Spacer–Grommet
16	322–11	1	Screw–HH
17	3256–3	2	Washer–Flat
18	322–7	5	Screw–HH
19	3212–9	1	Screw–HH
20	112843	1	Washer
21	54–3200	1	Clutch/Brake
22	608006	1	Key
23	3256–23	2	Washer–Flat
24	44–5940	1	Pulley
25	94–5847–01	1	Cover – Pulley
26	288–10	1	Cap–Pipe
27	289–19	1	Nipple
28	100–6467	1	Muffler
29	100–6468	1	Clamp–Muffler

Ref. No.	Part No.	Qty.	Description
☆30		1	Engine–Kawasaki, Fh500v–As30
31	63–8440	1	Decal–Surface, Hot
32	2412–87	1	Clamp–Cable
33	32149–2	1	Nut
34	3296–29	4	Nut–Lock
35	56–6360	1	Filter–Fuel
36	3255–8	1	Washer–Lock/Ext

☆ Not serviced

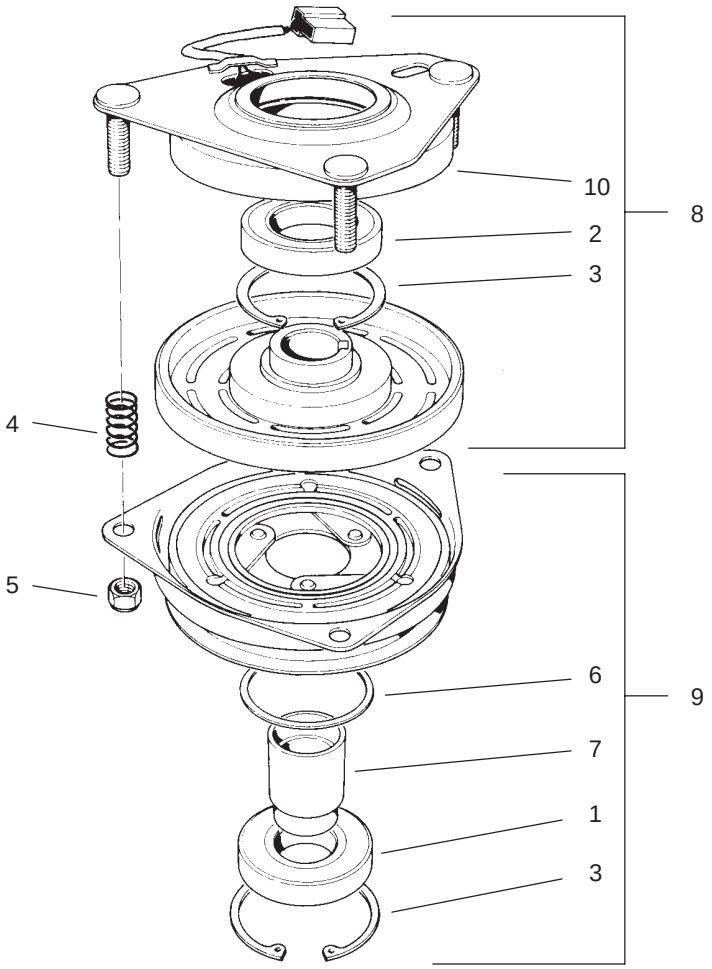


Sheet No.: A1
T–3726

Clutch Assembly No. 54–3200

Ref. No.	Part No.	Qty.	Description
1	251–291	1	Bearing–Pulley
2	251–292	1	Bearing–Field
3	44–8310	2	Ring–Retaining
4	44–8320	3	Spring
5	3296–6	3	Nut–Lock, NI
6	44–8330	1	Spacer–Bearing, Pulley
7	44–8340	1	Collar–Bearing
8	44–8360	1	Field Coil–Rotor / Bearing ASM
9	44–8370	1	Armature / Pulley / Bearing ASM
10	54–0230	1	Field Bearing ASM

Ref. No.	Part No.	Qty.	Description

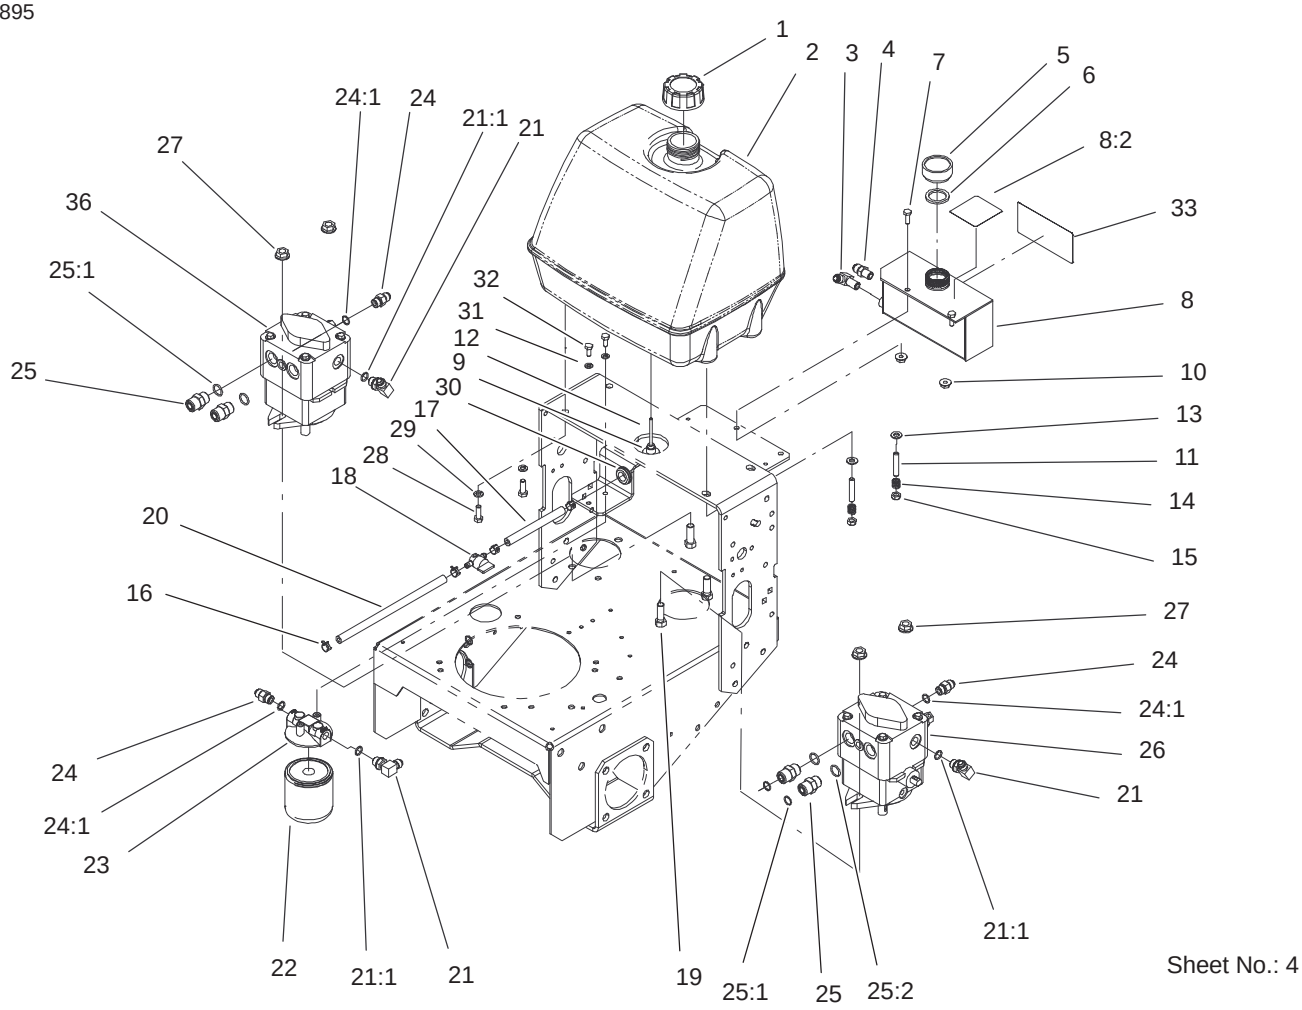


Sheet No.: 4

Fuel Tank, Hydraulic Tank, Pump and Filter Assembly

Ref. No.	Part No.	Qty.	Description
1	55–3570	1	Gas Cap ASM
2	1–323551	1	Tank–Fuel
3	1–603988	1	Fitting–Elbow
4	1–513510	1	Fitting–Straight
5	1–513167	1	Cap
6	1–523103	1	Gasket–Cap, Tank
7	321–4	2	Screw–HH
8	99–4625	1	Hydraulic Tank ASM
8:2	1–523552	1	Decal–Tank, Hydraulic
9	1–513645	1	Bushing–Valve, Fuel
10	32128–33	2	Nut–HF
11	104–8121	2	Stud–Threaded
12	1–543277	1	Elbow–Tank, Fuel
13	3256–23	4	Washer–Flat
14	1–633349	2	Spring–Tank, Fuel
15	3296–47	2	Nut–Lock, NI
16	2412–98	4	Clamp
17	47–2980	1	Hose–Gas
18	1–603770	1	Valve–Fuel
19	324–5	4	Screw–HH
20	47–2982	1	Hose–Gas
21	105–0858	3	Fitting–90°
21:1	237–42	1	O–Ring
22	1–633750	1	Filter–HYD
22	1–633752	1	Filter–HYD, Winter
23	104–7836	1	Head – Filter

Ref. No.	Part No.	Qty.	Description
24	353–384	3	Fitting–Straight
24:1	237–42	1	O–Ring
25	340–4	4	Adapter
25:1	237–30	1	O–Ring
25:2	237–79	1	O–Ring
26	104–1167	1	Pump–Hydraulic
27	32128–42	4	Nut–HF
28	322–4	2	Screw–HH
29	3253–4	2	Washer–Lock
30	237–124	1	Grommet
31	3253–3	2	Washer–Lock
32	321–3	2	Screw–HH
33	104–8172	1	Decal–Mobil 1
36	105–4101	1	Pump–Hydraulic

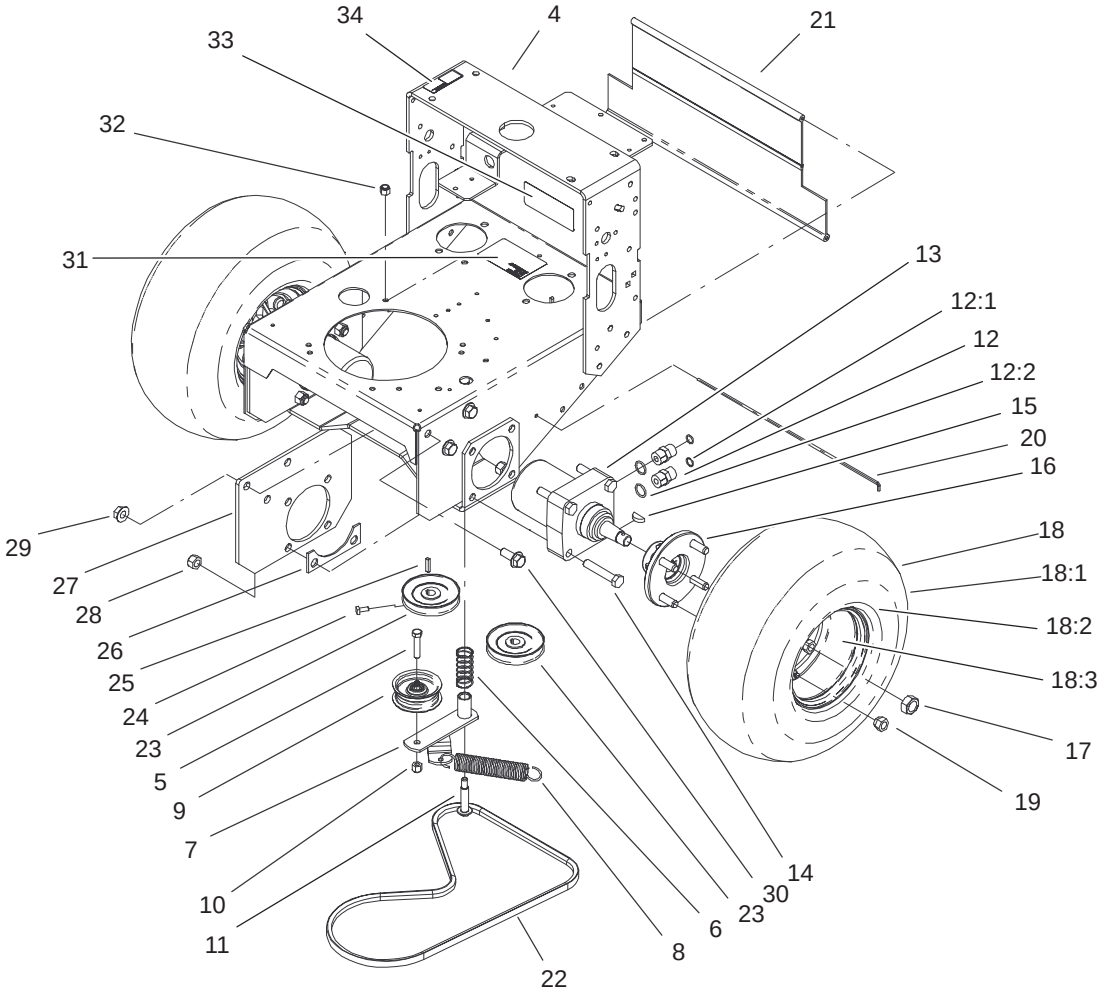


Sheet No.: 5

Wheel Motor, Pump Idler & Belt Assembly

Ref. No.	Part No.	Qty.	Description
4	104–1100–01	1	Frame ASM
5	323–9	1	Screw–HH
6	88–1880	1	Spring–Compression
7	86–4770	1	Idler Lever ASM
8	68–2190	1	Spring
9	62–4540	1	Pulley
10	3296–39	1	Nut–Lock, NI
11	27–6230	1	Bolt–Wheel
12	340–6	4	Fitting–Straight, HYD
12:1	237–30	1	O–Ring
12:2	237–80	1	O–Ring
13	104–1171	2	Motor–Wheel
14	325–11	8	Screw–HH
15	80–6090	2	Key – Pump
16	105–0800	2	Wheel Hub/Stud ASM
17	85–7310	2	Nut–Motor, Wheel
18	104–1198	2	Wheel And Tire ASM
18:1	104–6320	1	Tire
18:2	104–1199	1	Wheel
18:3	232–27	1	Stem–Valve
19	242–50	8	Nut–Lug
20	95–1529	1	Rod–Shield
21	95–1526	1	Shield–Trailing
22	82–4110	1	V–Belt
23	95–1528	2	Pulley – Pump
24	3241–5	4	Screw–Set

Ref. No.	Part No.	Qty.	Description
25	3257–8	2	Key–Woodruff
26	86–4740–01	2	Spacer – Frame
27	104–6326–01	2	Plate–Frame
28	3296–23	8	Nut–Lock, NI
29	32128–23	6	Nut–HF
30	3234–22	2	Screw–HHF
30	3234–32	4	Screw–HHF
31	95–1543	1	Decal–Adjustment, Valve
32	3296–6	1	Nut–Lock, NI
33	98–0776	1	Decal–Caution
34	95–2814	1	Decal–Shut Off, Fuel

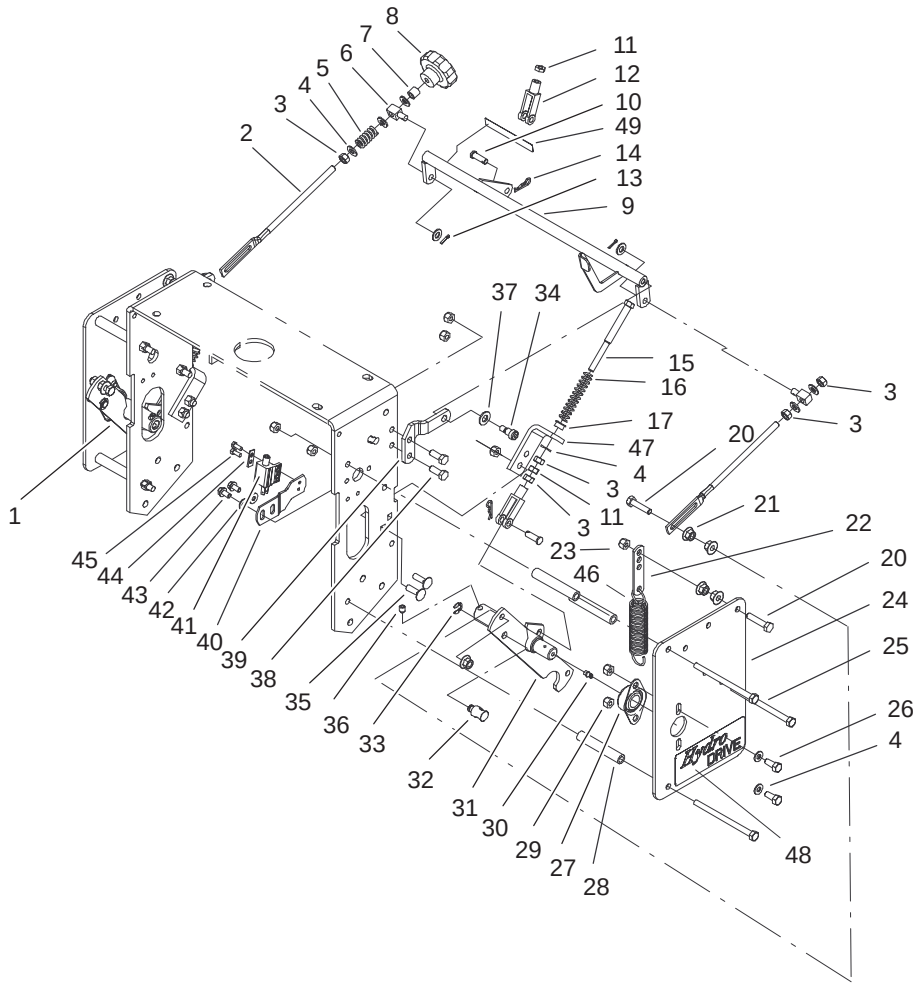


Sheet No.: 6

Lower Control Assembly

Ref. No.	Part No.	Qty.	Description
1	104–9810	1	Shaft Control ASM–RH
2	1–413350	2	Link,Speed Control
3	3219–2	7	Nut–Hex
4	3256–23	13	Washer–Flat
5	1–323245	2	Spring–Compression
6	1–603676	2	Swivel,Short Adjustable
7	1–603903	1	Spacer
8	1–413151	1	Knob,Tracking
9	104–9807–01	1	Crank–Speed Control
10	1–808280	3	Pin–Clevis
11	3220–2	3	Nut
12	1–303105	3	Yoke–Adjustable
13	3272–5	2	Pin–Cotter
14	3290–307	3	Pin–Hair
15	1–603737	2	Bolt–Return, Neutral
16	1–603807	2	Spring–Return, Neutral
17	1–603735	2	Bushing–Flanged
20	1–403180	4	Screw–HH
21	32128–20	10	Nut–HF
22	1–613089	2	Tab,Spring Extension
23	32128–25	2	Nut–Flange
24	104–9817–01	2	Plate–Side, Hydro
25	322–38	6	Screw–HH

Ref. No.	Part No.	Qty.	Description
26	322–3	4	Screw–HH
27	1–633102	2	Bearing–Flange, Side
28	104–9820	6	Spacer–Shield
29	3296–29	18	Nut–Lock
30	302–5	2	Fitting–Grease
31	104–9815	1	Shaft Control ASM–LH
32	103–1235	2	Swivel–Drive Lever
33	32151–47	2	Ring–Retaining
34	1–809056	2	Screw
35	3230–2	4	Screw–CARR
36	3246–3	4	Screw–HS
37	3256–24	2	Washer–Flat
38	322–4	4	Screw–HH
39	104–9827–01	1	Crank Support ASM
40	104–9836–01	1	Bracket–Neutral
41	65–7410	1	Switch – Single Pole
42	3256–1	4	Washer–Flat
43	32144–4	4	Screw–HWH
44	82–4570	1	Plate–Switch
45	32144–1	4	Screw–Taptite
46	1–603693	2	Spring,Extension
47	104–9802–01	2	Bracket–Spring Mount
48	82–4600	2	Decal–Hydro
49	105–4109	1	Decal–Tracking

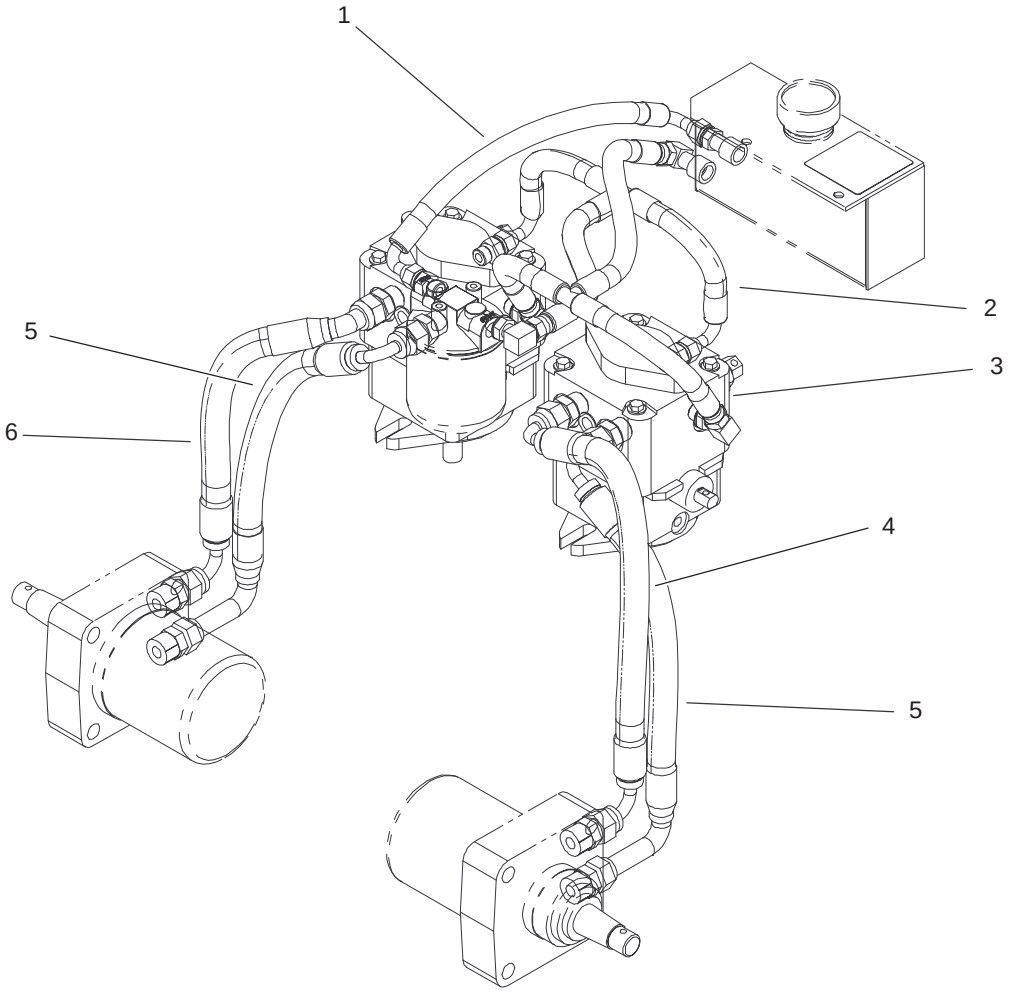


Sheet No.: 7

Hydraulic Hose Assembly

Ref. No.	Part No.	Qty.	Description
1	105–0847	1	Hydraulic Hose ASM
2	105–0848	1	Hydraulic Hose ASM
3	105–0849	1	Hydraulic Hose ASM
4	82–4560	1	Hydraulic Hose ASM
5	82–4550	2	Hydraulic Hose ASM
6	82–4540	1	Hydraulic Hose ASM

Ref. No.	Part No.	Qty.	Description

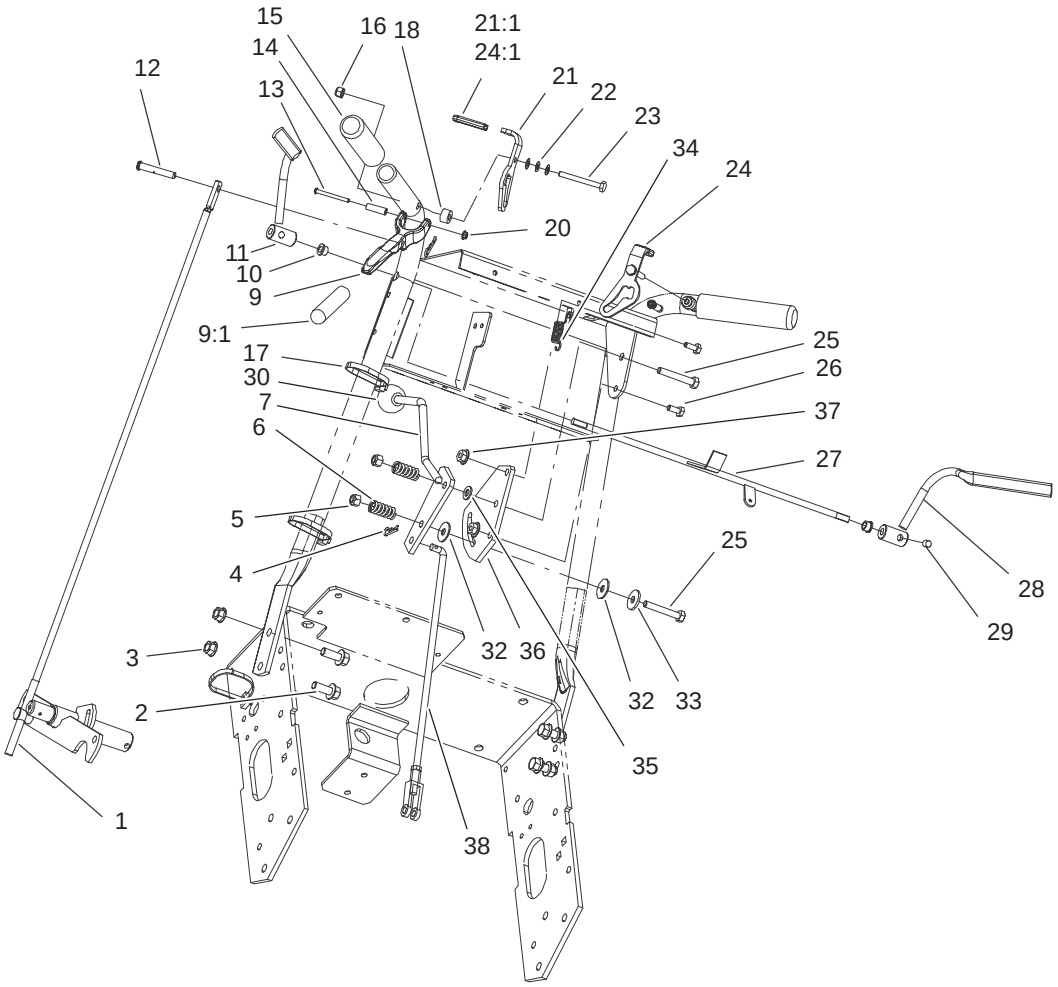


Sheet No.: 8

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	1–413219	2	Rod–Drive Lever
2	3234–11	4	Screw–HHF
3	32128–21	4	Nut–HF
4	3290–307	3	Pin–Hair
5	3296–29	2	Nut–Lock
6	1–323245	2	Spring–Compression
7	1–602733	1	Lever – Shift
9	1–302006	2	Drive Lever ASM
9:1	1–303021	1	Grip–Lever, Drive
10	1–303365	2	Bushing–Nylon
11	1–412183–03	1	Lever–LH
12	1–808286	2	Pin–Clevis
13	1–808250	2	Pin–Clevis
14	1–806340	2	Pin–Roll
15	104–9838	2	Grip–Foam
16	3296–42	4	Nut–Lock, NI
17	3290–378	3	Tie–Cable
18	1–323549	2	Spacer
20	1–803001	2	Nut
21	104–6261	1	Thumb Latch ASM, LH
21:1	1–303019	1	Grip–Latch
22	1–303435	6	Washer–Spring
23	321–18	2	Screw–HH
24	104–6262	1	Thumb Latch ASM, RH
24:1	1–303019	1	Grip–Latch
25	322–11	2	Screw–HH


Ref. No.	Part No.	Qty.	Description
26	321–3	2	Screw–HH
27	104–9803	1	Rod ASM
28	1–412185–03	1	Lever–RH
29	1–803322	2	Screw–Set
30	233–42	1	Knob
32	1–323244	2	Washer–Friction
33	1–603716	1	Washer–Friction
34	1–303363	1	Spring–Extension
35	3256–23	1	Washer–Flat
36	1–603730	1	Plate–Shifter Lever
37	32128–33	2	Nut–HF
38	105–4103	1	Rod–Speed Control

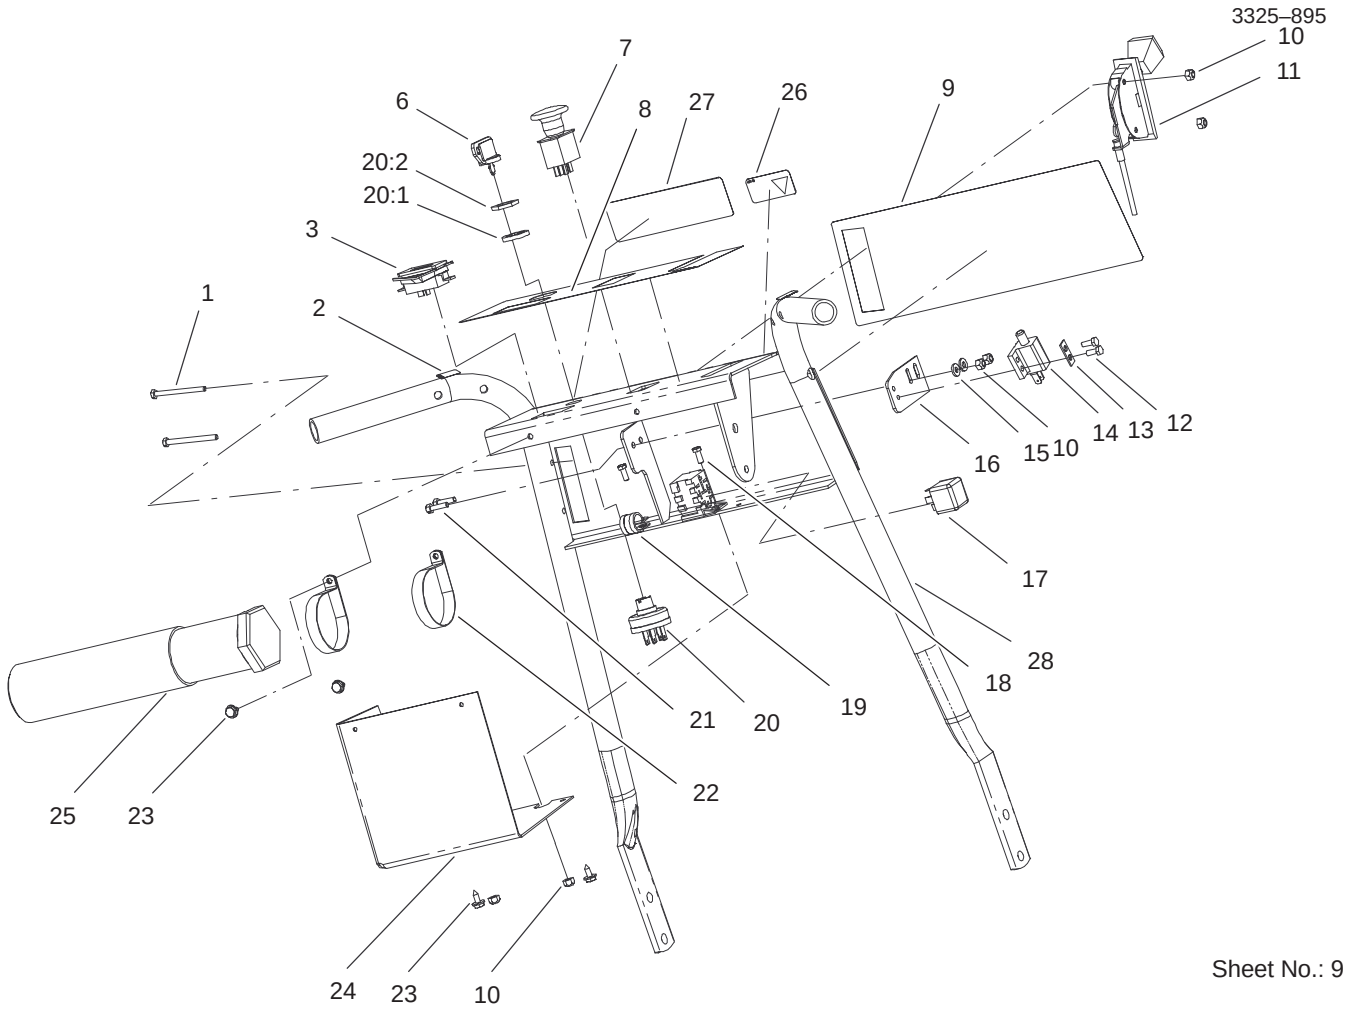

Sheet No.: 9

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	32105–14	2	Screw
2	105–4110	2	Decal–Neutral Lock
3	104–8143	1	Hourmeter
6	63–8360	1	Key–Ignition
7	95–7489	1	Switch – PTO
8	105–4107	1	Decal–Warning
9	105–4108	1	Decal–Proline
10	3296–2	6	Nut–Lock
11	105–4113	1	Control–Throttle
12	32144–1	2	Screw–Taptite
13	82–4570	1	Plate–Switch
14	65–7410	1	Switch – Single Pole
15	3256–14	2	Washer–Flat
16	105–4137–03	1	Plate–Switch Mounting
17	98–7249	1	Relay
18	3290–321	2	Screw–HWH
19	2412–134	1	R–Clamp
20	88–9830	1	Switch–Ignition
20:1	3254–5	1	Washer–Lock, Internal
20:2	218–461	1	Nut–HH
21	32105–13	2	Screw–SHH
22	2412–120	2	R–Clamp
23	32104–76	4	Screw
24	105–4112–03	1	Bracket–Cover
25	74–0720	1	Tube–Manual
26	98–4387	1	Decal–Protection, Ear
27	82–4590	1	Decal – Warning
28	105–4140	1	Handle ASM

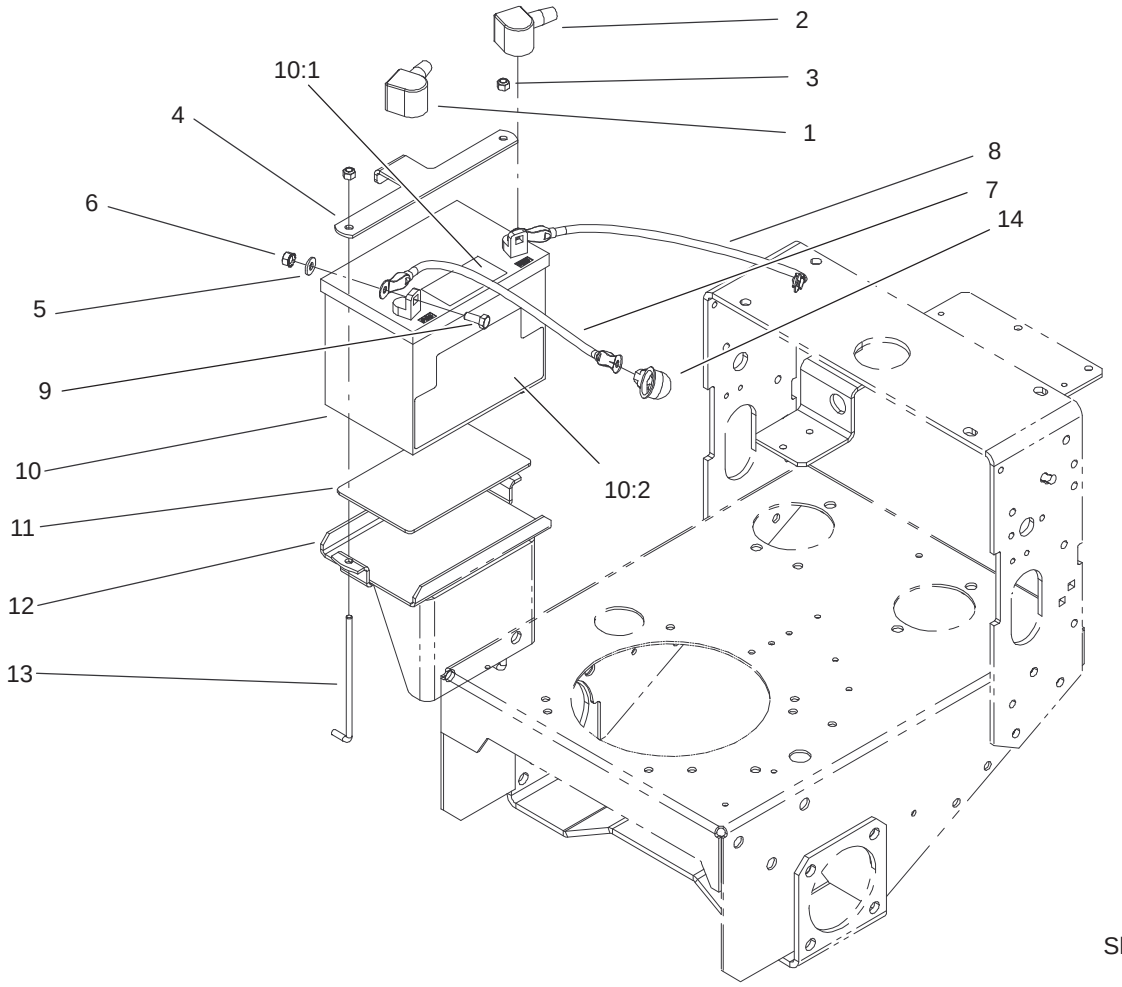


Sheet No.: 10

Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	77–0981	1	Boot–Terminal
2	77–0980	1	Boot–Terminal
3	3296–42	2	Nut–Lock, NI
4	104–8568–03	1	Plate–Battery Hold Down
5	3256–2	2	Washer–Flat
6	32149–1	2	Nut
7	105–0833	1	Cable–Battery, Black
8	100–6457	1	Cable–Battery,Red
9	322–3	2	Screw–HH
10	104–8162	1	Battery–300 Cca
10:1	104–4163	1	Decal–Battery
10:2	104–4164	1	Decal–Battery
11	62–4300	1	Pad–Anti Skid
12	105–0804–01	1	Battery Plate ASM
13	104–8567	2	Holdown–Battery
14	93–3190	1	Boot–Terminal Insulator

Ref. No.	Part No.	Qty.	Description

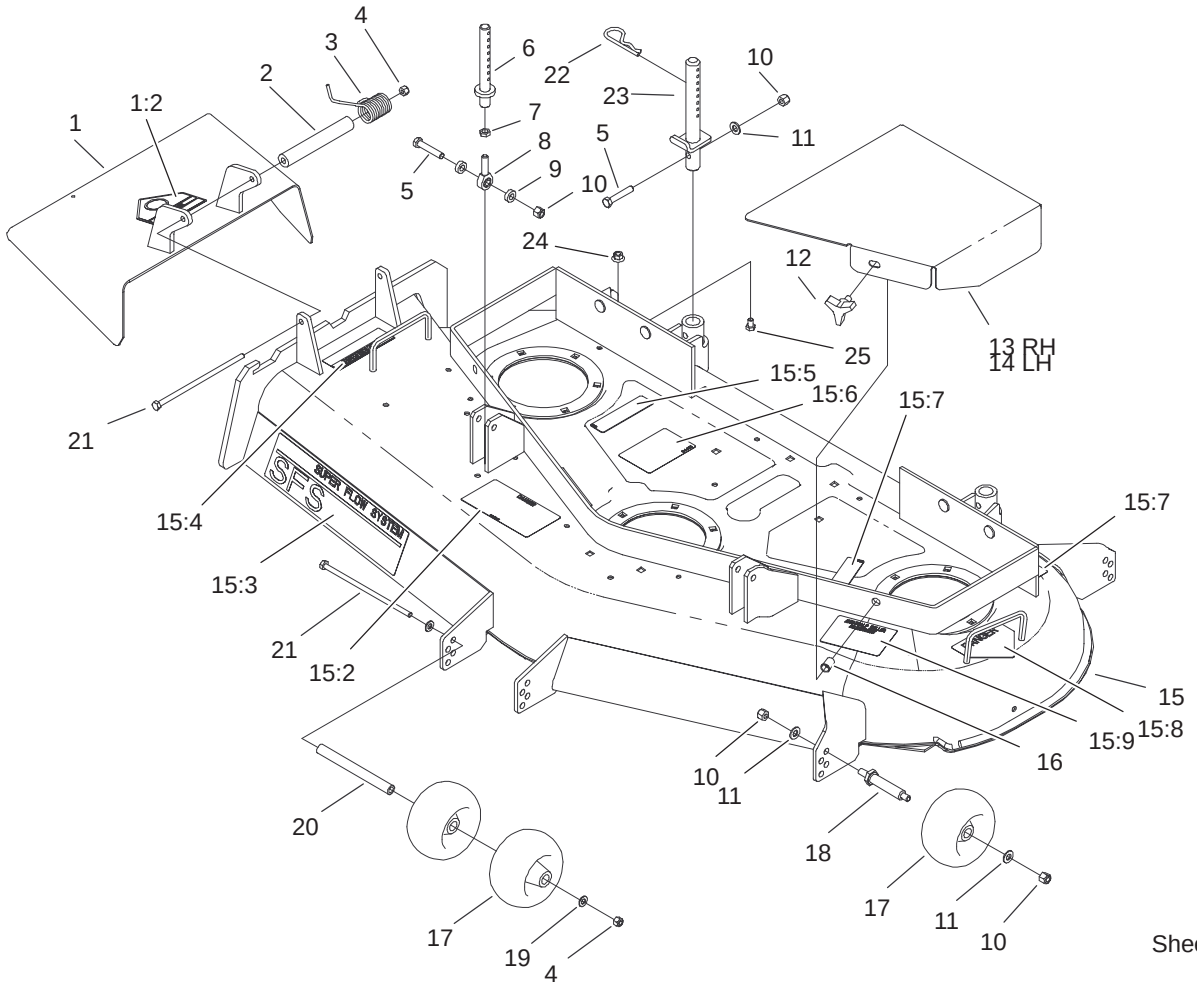


Sheet No.: 2

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	104–7753	1	Deflector ASM
1:2	54–9220	1	Decal–Danger
2	104–8555	1	Spacer–Mounting, Deflector
3	104–8554	1	Spring–Torsion
4	3296–29	2	Nut–Lock
5	323–10	4	Screw–HH
6	105–0832	2	Link–Support
7	3220–3	2	Nut–Jam
8	1–613204	2	Balljoint
9	104–1156	4	Spacer
10	3296–39	12	Nut–Lock, NI
11	3256–24	10	Washer–Flat
12	104–8587	2	Knob
13	104–8118–01	1	Cover–Belt,Right
14	104–8117–01	1	Cover–Belt,Left
15	104–6394	1	Deck ASM
15:2	66–1340	1	Decal–Danger
15:3	98–5953	1	Decal–Sfs
15:4	104–8569	1	Decal–Deflector Warning
15:5	67–5360	3	Decal–Danger
15:6	104–8186	1	Decal–Belt Routing
15:7	68–8340	1	Decal–Torque
15:8	43–8480	1	Decal–Danger
15:9	105–0840	1	Decal–Anti Scalp

Ref. No.	Part No.	Qty.	Description
16	32148–10	2	Insert–Threaded
17	68–2730	6	Wheel–Gage
18	99–2842	4	Spacer–Wheel
19	3256–23	2	Washer–Flat
20	98–5967	1	Spacer – Wheel
21	322–50	2	Screw–Cap
22	3290–256	6	Pin–Hair
23	105–0831	2	Rod ASM
24	32128–20	7	Nut–HF
25	322–1	7	Screw–HH

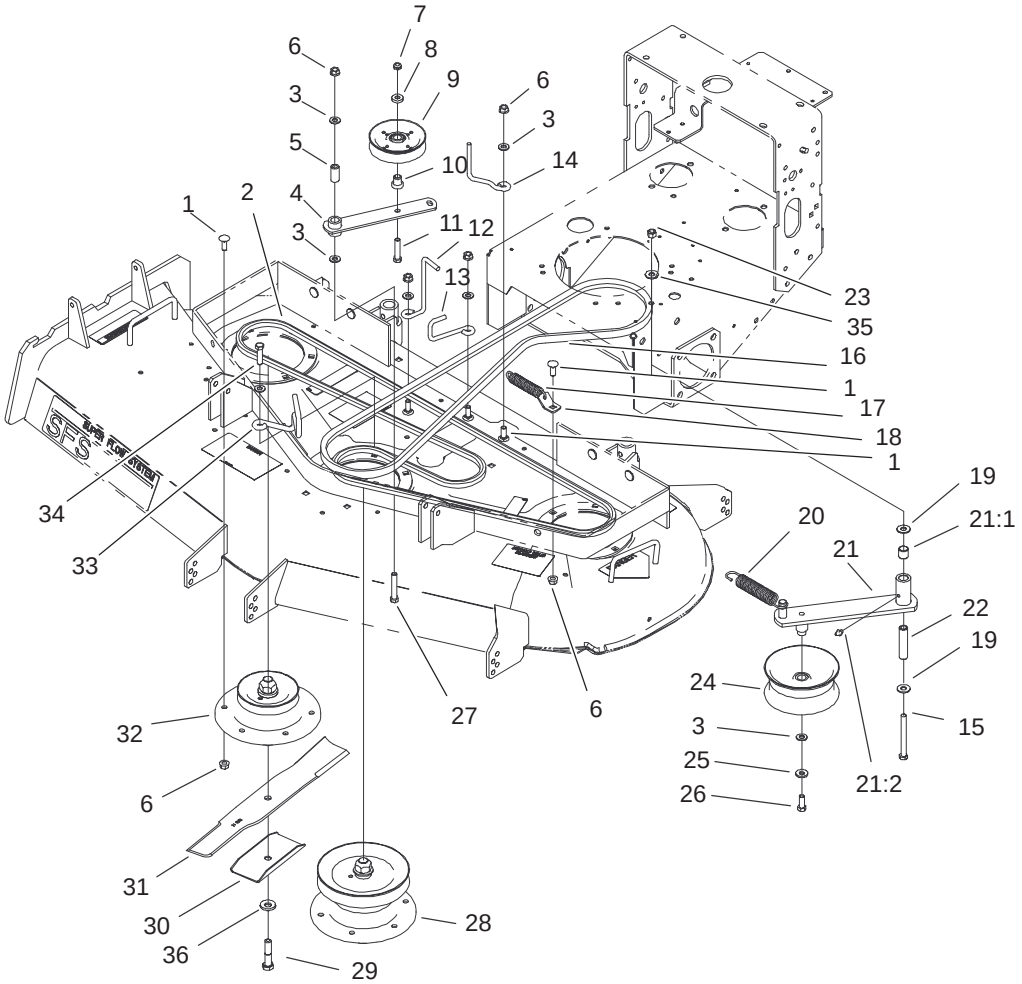


Sheet No.: 3

Spindle, Idler Pulley, and Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	3231–22	19	Screw–CARR
2	104–6397	1	V–Belt, Deck
3	3256–24	7	Washer–Flat
4	104–6375	1	Idler Arm ASM
5	51–3640	1	Sleeve–Pivot, Idler
6	32128–21	21	Nut–HF
7	3296–5	1	Nut–Lock NI
8	7–0081	1	Washer–Flat
9	65–5940	1	Pulley–Idler
10	104–6379	1	Bushing–Pulley
11	3211–8	1	Screw–HH
12	98–5980	1	Guide – Belt
13	104–6396	1	Guide–Belt
14	52–4780	1	Rod–Belt
15	323–42	1	Screw–HH
16	104–6398	1	V–Belt, PTO
17	51–3650	1	Spring–Extension
18	104–6374	1	Plate – Spring
19	1–809107	2	Washer–Hardened
20	104–8161	1	Spring–Extension
21	104–6370	1	Idler Arm ASM
21:1	1–513034	2	Sleeve–Bearing
21:2	302–5	1	Fitting–Grease
22	104–6377	1	Tube – Idler
23	3296–39	1	Nut–Lock, NI
24	1–413099	1	Pulley–Idler

Ref. No.	Part No.	Qty.	Description
25	98–5975	1	Washer–Belleville
26	323–6	1	Screw–HH
27	323–11	1	Screw–HH
28	104–6315	1	Spindle Housing ASM
29	44–2200	3	Screw–Blade
30	92–9820	3	Stiffener–Blade
31	27–0990	3	Blade
32	104–6317	2	Spindle Housing ASM
33	105–0850	1	Guide–Belt
34	323–8	1	Screw–HH
35	3256–4	1	Washer–Flat
36	3256–6	3	Washer–Flat

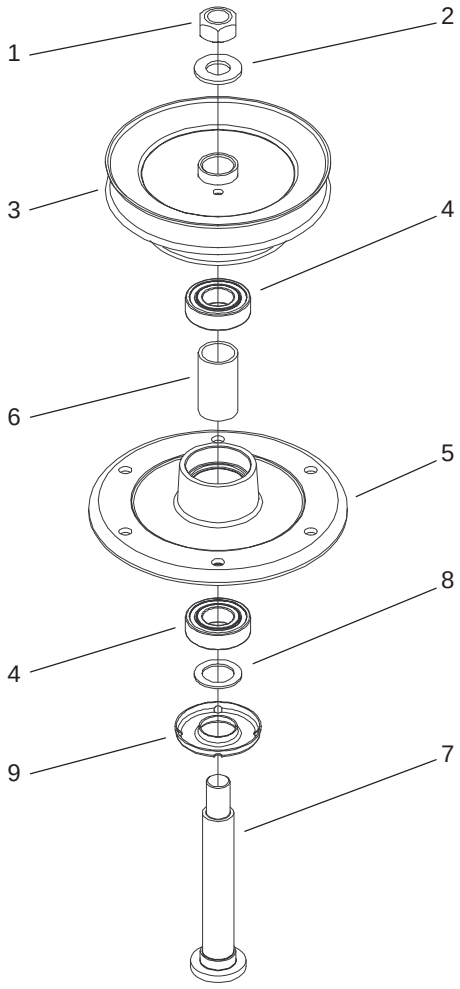


Sheet No.: A1

C–3011

Spindle Housing Assembly No. 104–6315

Ref. No.	Part No.	Qty.	Description
1	3219–7	1	Nut–Hex
2	7–4150	1	Washer–Pinion
3	104–1117	1	Pulley And Hub ASM
4	104–6325	2	Bearing
5	104–6307	1	Spindle Housing
6	104–6313	1	Spacer–Bearing
7	104–6311	1	Shaft–Spindle
8	88–7540	1	Washer–Backup
9	79–1920	1	Shield–Bearing

Ref. No.	Part No.	Qty.	Description

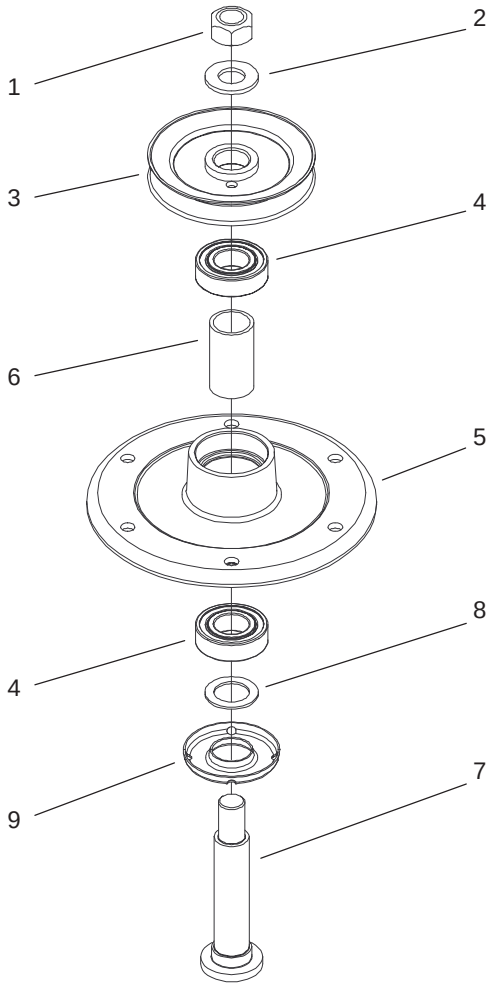


Sheet No.: A2

C–3012

Spindle Housing Assembly No. 104–6317

Ref. No.	Part No.	Qty.	Description
1	3219–7	1	Nut–Hex
2	7–4150	1	Washer–Pinion
3	104–1118	1	Pulley And Hub ASM
4	104–6325	2	Bearing
5	104–6307	1	Spindle Housing
6	104–6313	1	Spacer–Bearing
7	104–6310	1	Shaft–Spindle
8	88–7540	1	Washer–Backup
9	79–1920	1	Shield–Bearing

Ref. No.	Part No.	Qty.	Description

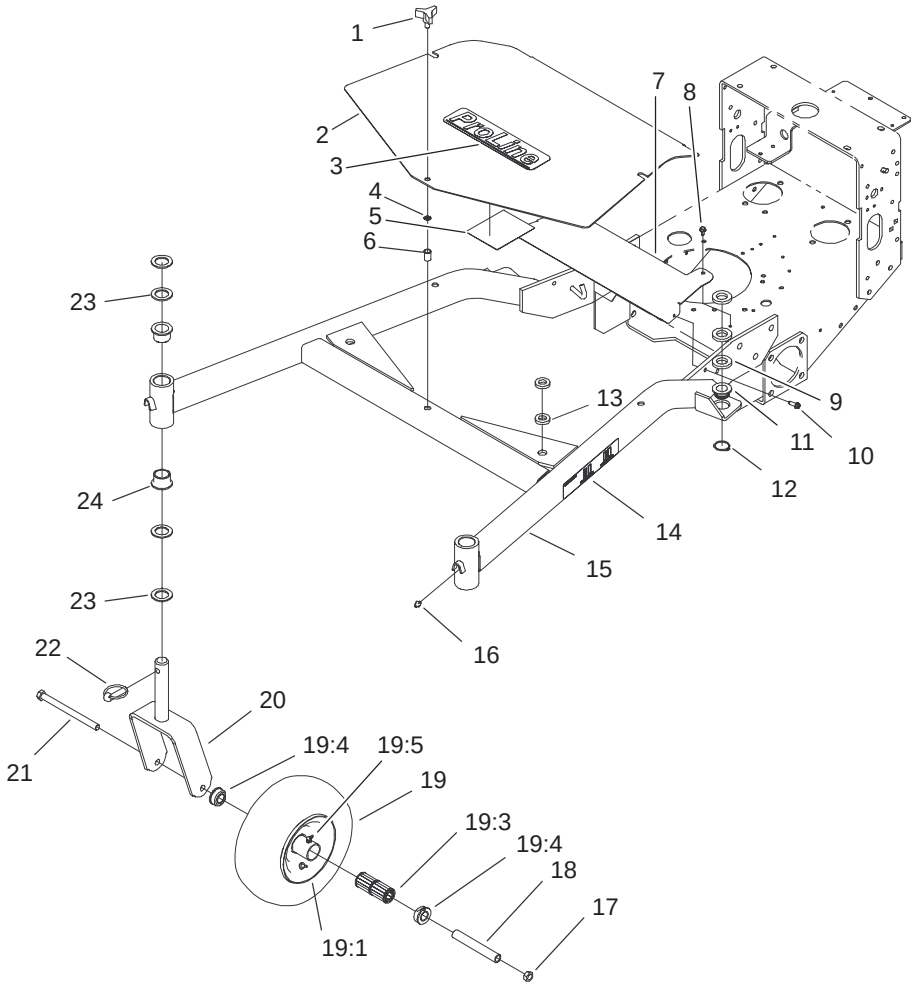

Sheet No.: 4


Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	104–8587	3	Knob
2	104–8153–01	1	Cover–Carrier Frame
3	74–2080	1	Decal–Proline
4	32151–72	1	Ring–Retaining
5	105–4144	1	Decal–Service
6	32148–9	3	Nut–Insert
7	105–0845–01	1	Shield–Heat
8	12–3270	2	Screw
9	104–1105	6	Spacer–Deck Support
10	49–2040	2	Screw–Tapping
11	1–513336	2	Bushing – Deck
12	32120–33	2	Ring–Retaining
13	105–0842	4	Spacer
14	104–8171	2	Decal–HOC
15	104–1109–01	1	Carrier Frame ASM
16	302–5	2	Fitting–Grease
17	32153–5	2	Nut–Lock
18	104–1189	2	Bushing–Spanner
19	104–1170	2	Castor Wheel ASM
19:1	104–1169	1	Tire And Tube ASM
19:3	62–5570	2	Bearing–Roller
19:4	62–5580	2	Bearing–Outside
19:5	302–11	1	Fitting–Lube 45°
20	104–1183–01	2	Castor Fork ASM
21	325–33	2	Screw–HH
22	283–71	2	Pin–Lynch

Ref. No.	Part No.	Qty.	Description
23	3–6781	8	Washer–Thrust
24	94–1291	4	Bushing–Special

Cylinder/Crankcase
Kawasaki FH500V–AS30

E0110-A356A

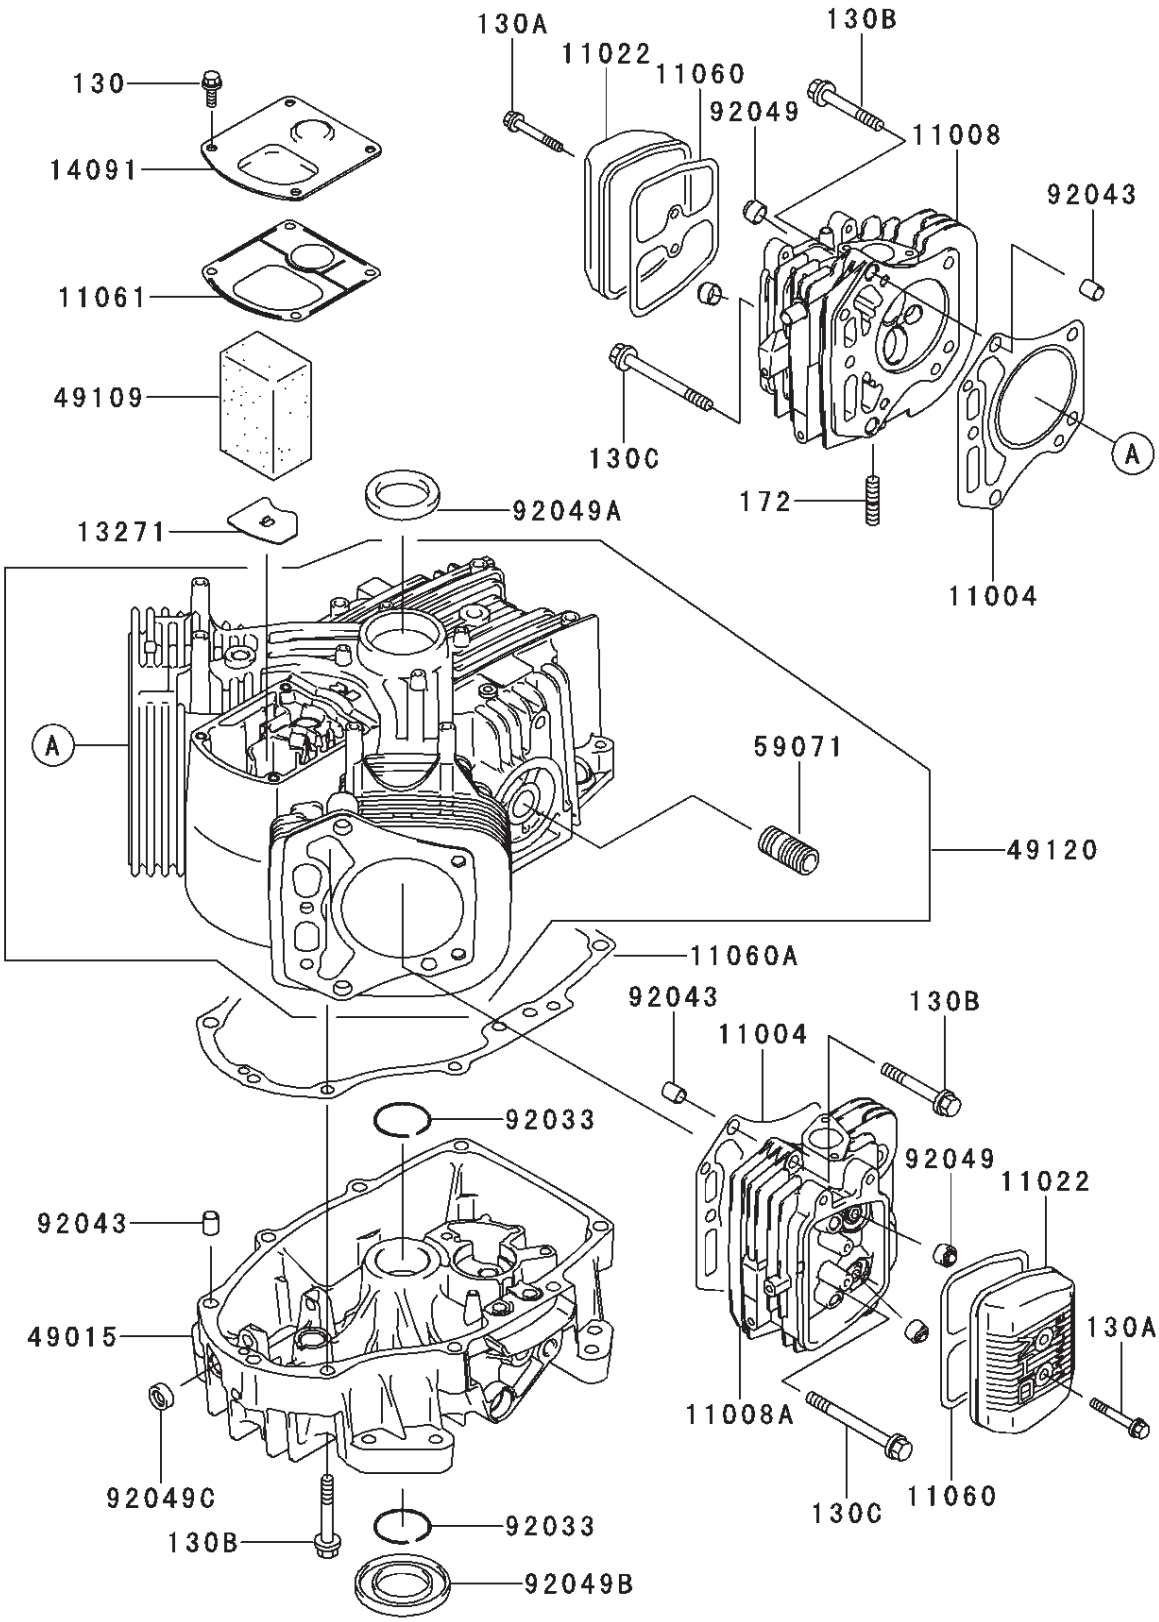


Cylinder/Crankcase
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
11004	11004–7005	2	Gasket–Head
11008	11008–6042	1	Head–Comp–Cylinder No. 1
11008A	11008–7009	1	Head–Comp–Cylinder No. 2
11022	11022–7003	2	Case–Rocker
11060	11060–7001	2	Gasket, Rocker Case
11060A	11060–7008	1	Gasket, Crankcase Cover
11061	11061–7001	1	Gasket
13271	13271–7016	1	Plate
14091	14091–7006	1	Cover
49015	49015–6215	1	Cover–Crankcase
49109	49109–7002	1	Element–Breather
49120	49120–6132	1	Crankcase–Comp
59071	59071–2079	1	Joint
92033	92033–7003	2	Ring–Snap
92043	92043–7001	6	Pin
92049	92049–7001	4	Seal–Oil
92049A	92049–7002	1	Seal–Oil
92049B	92049–7004	1	Seal–Oil
92049C	92049–7005	1	Seal–Oil
130	130B0612	4	Bolt–Flanged
130A	130B0640	4	Bolt–Flanged
130B	130T0850	17	Bolt–Flanged
130C	130T0875	2	Bolt–Flanged
172	172G0818	4	Bolt–Stud

Ref. No.	Part No.	Qty.	Description

Piston/Crankshaft
Kawasaki FH500V–AS30

E0120-A186A

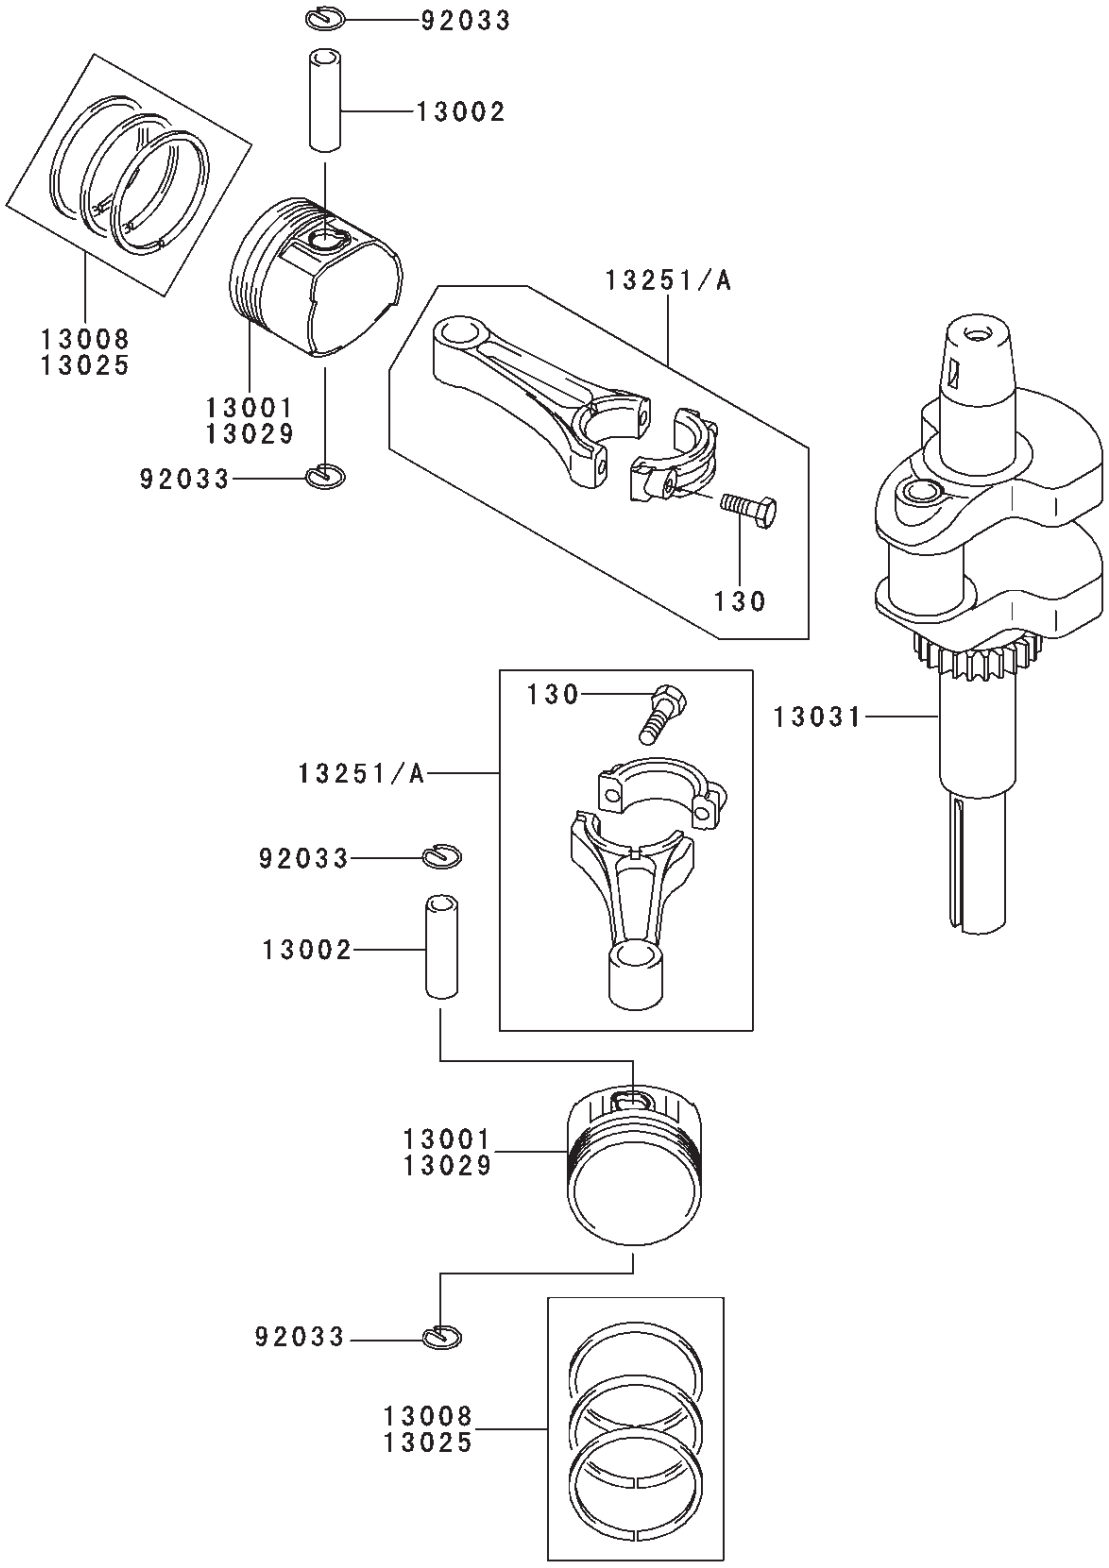


Piston/Crankshaft
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
13001	13001–7008	2	Piston–Engine
13002	13002–7001	2	Pin–Piston
13008	13008–6055	2	Ring–Set–Piston
13025	13025–7001	AR	Ring–Set–Piston
13029	13029–7004	AR	Piston–Engine
13031	13031–7001	1	Crankshaft–Comp
13251	13251–7003	2	Rod–Assy–Connecting
13251A	13251–7004	2	Rod–Assy–Connecting
92033	92033–7005	4	Ring–Snap
130	130G0630	4	Bolt–Flanged

Ref. No.	Part No.	Qty.	Description

Valve/Camshaft
Kawasaki FH500V–AS30

E0130-A087A

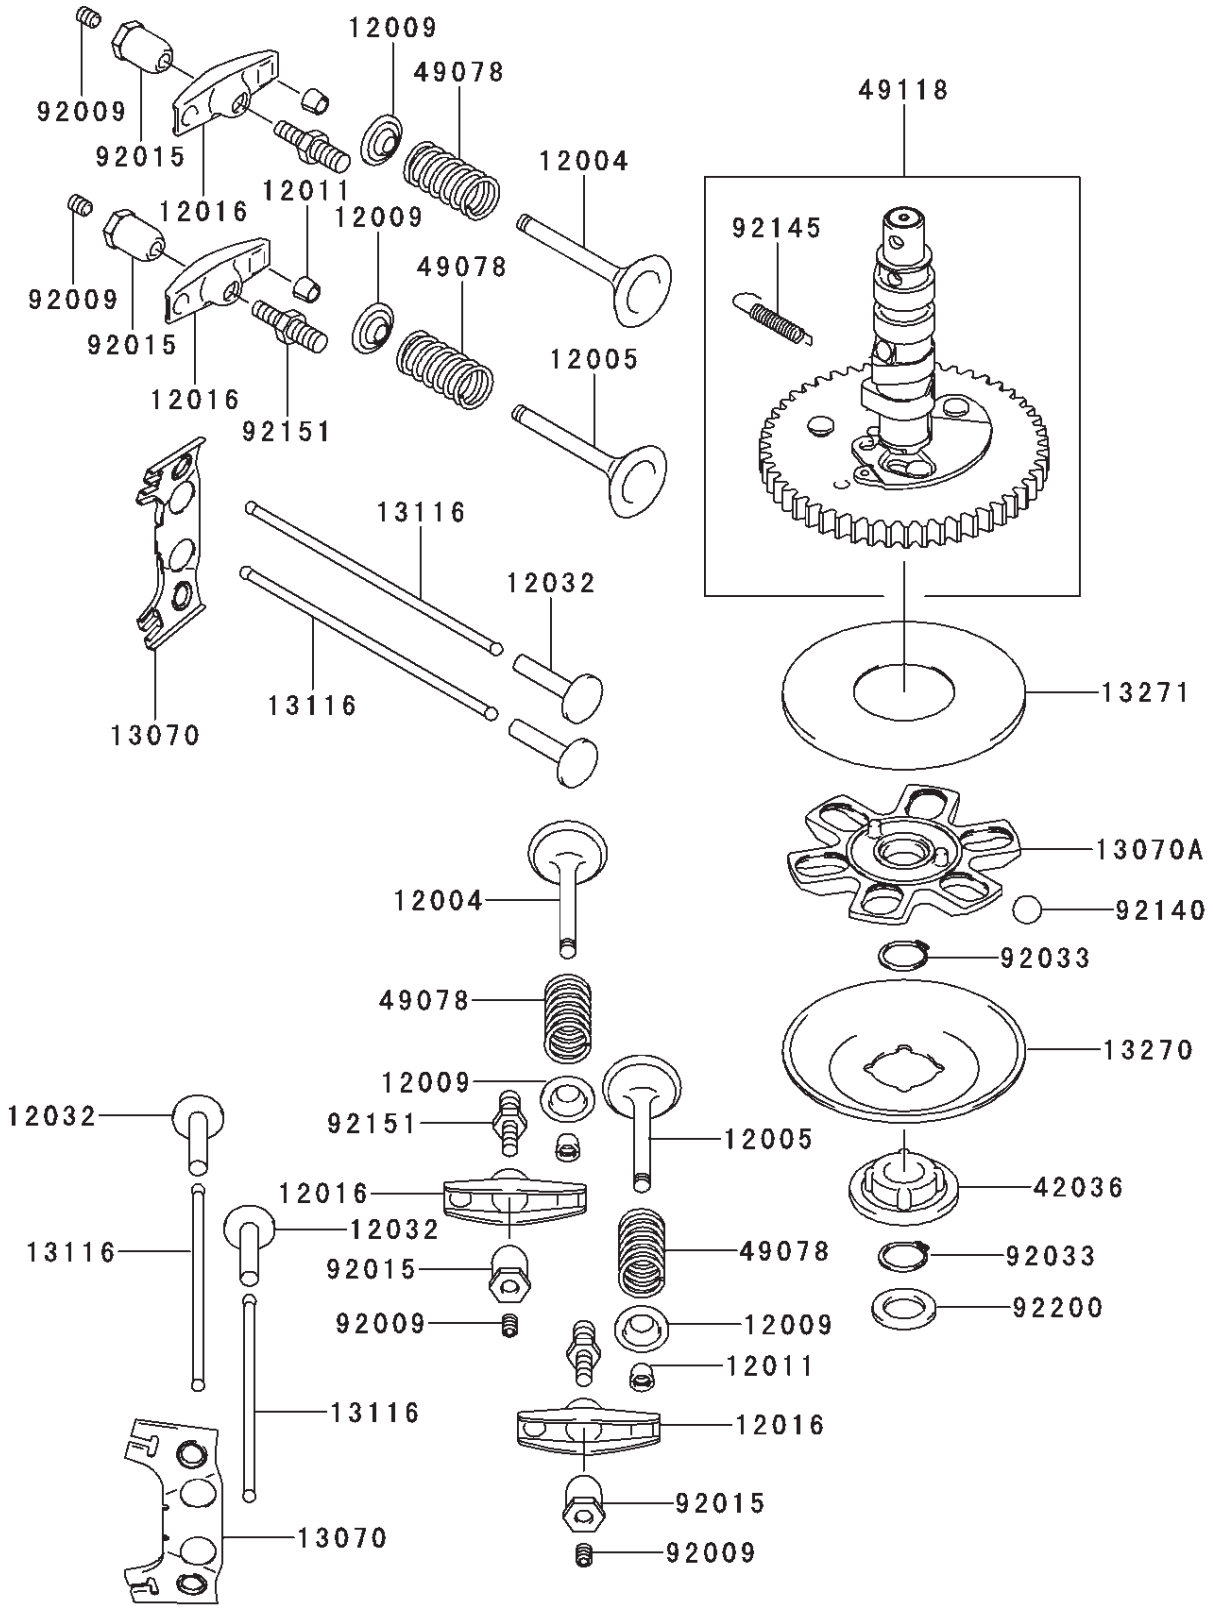


Valve/Camshaft
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
12004	12004–7003	2	Valve–Intake
12005	12005–7003	2	Valve–Exhaust
12009	12009–7001	4	Retainer–Valve Spring
12011	12011–2056	8	Collet
12016	12016–7001	4	Arm–Rocker
12032	12032–7001	4	Tappet
13070	13070–7001	2	Guide
13070A	13070–7002	1	Guide
13116	13116–2057	4	Rod–Push
13270	13270–7002	1	Plate
13270A	13270–7004	1	Plate
13271	13271–7007	1	Plate
42036	42036–7001	1	Sleeve
49078	49078–7001	4	Spring–Engine Valve
49118	49118–7002	1	Camshaft–Comp
92009	92009–2341	4	Screw
92015	92015–2253	4	Nut
92033	92033–7001	2	Ring–Snap
92140	92140–7002	6	Ball
92145	92145–7001	1	Spring
92151	92151–7019	4	Bolt
92200	92200–7001	1	Washer

Ref. No.	Part No.	Qty.	Description

Lubrication Equipment
Kawasaki FH500V–AS30

E0140-A178A

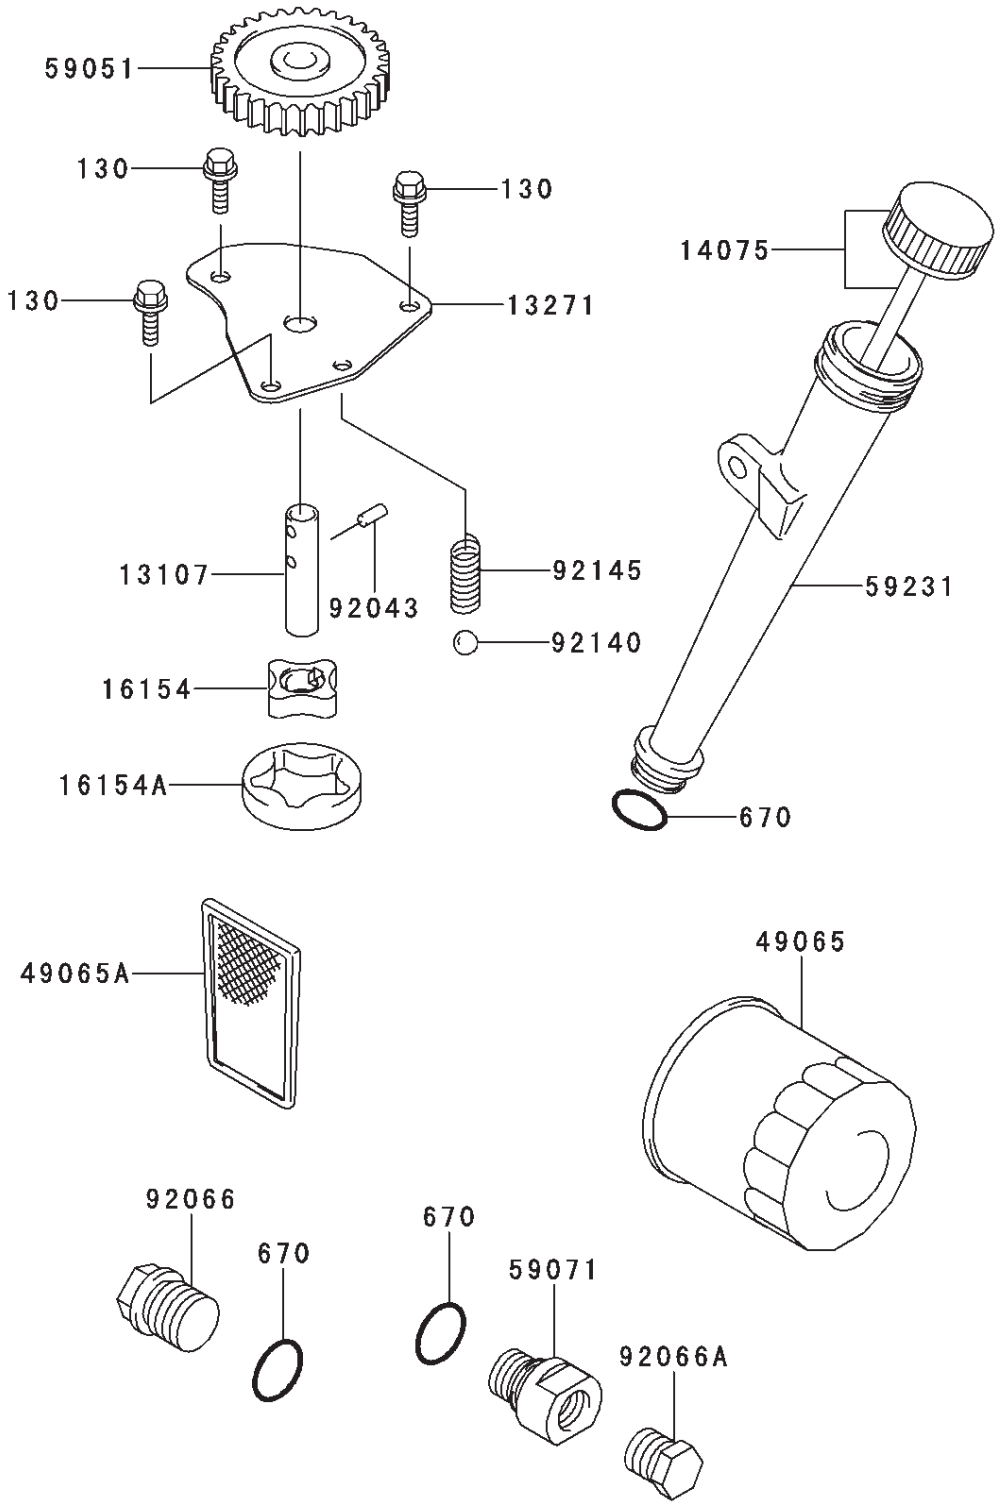


Lubrication Equipment
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
13107	13107–7009	1	Shaft, Oil Pump
14075	14075–7001	1	Cap–Assy
16154	16154–2053	1	Rotor–Pump, Out
16154A	16154–2054	1	Rotor–Pump, Out
49065	49065–2078	1	Filter–Oil
49065A	49065–7004	1	Filter–Oil
59051	59051–7004	1	Gear–Spur
59071	59071–7004	1	Joint
59231	59231–7001	1	Filler
92043	92043–7003	1	Pin
92066	92066–7003	1	Plug
92066A	92066–7006	1	Plug
92140	92140–7003	1	Ball
92145	92145–7002	1	Spring
130	130B0612	3	Bolt–Flanged
670	670D2016	3	O–Ring

Ref. No.	Part No.	Qty.	Description

Cooling Equipment
Kawasaki FH500V–AS30

E0150-A323A

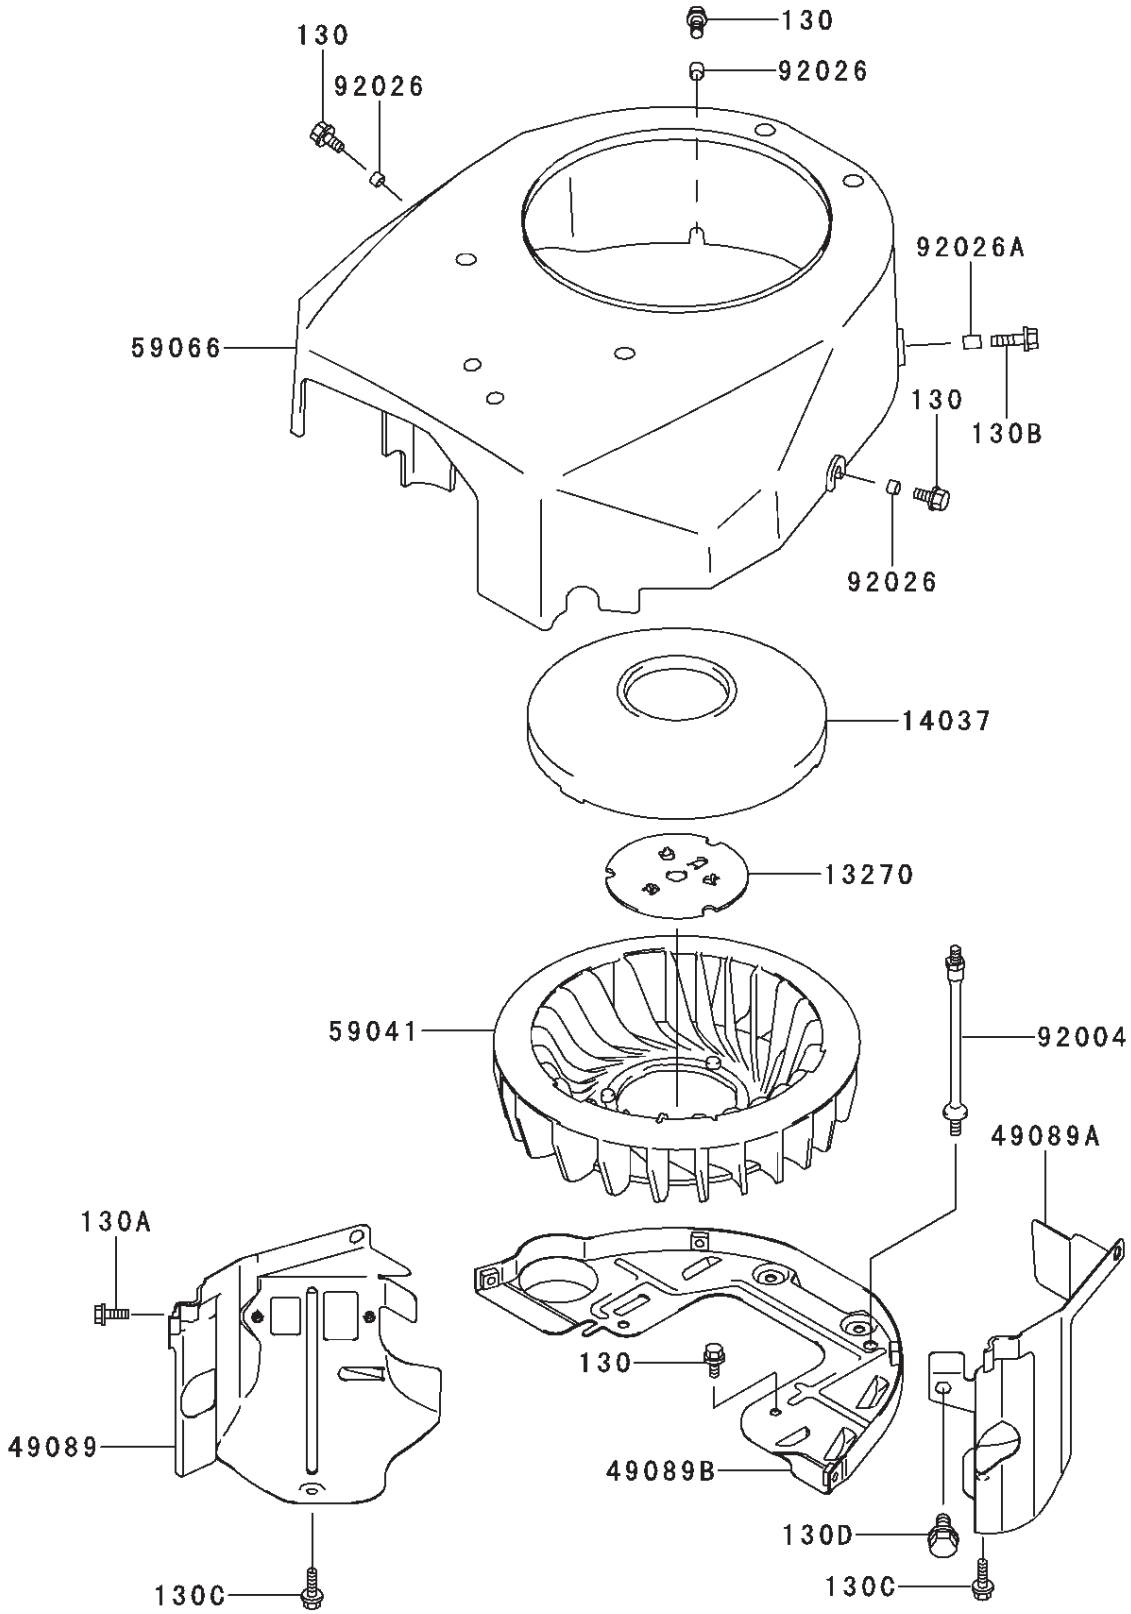


Cooling Equipment
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
130	130B0612	6	Bolt–Flanged
130A	130B0616	2	Bolt–Flanged
130B	130B0620	1	Bolt–Flanged
130C	130B0625	2	Bolt–Flanged
130D	130B0816	1	Bolt–Flanged
13270	13270–7007	1	Plate
14037	14037–7006–9H	1	Screen
49089	49089–7001	1	Shroud–Engine
49089A	49089–7002	1	Shroud–Engine
49089B	49089–7003	1	Shroud–Engine
59041	59041–7001	1	Fan
59066	59066–7002	1	Housing–Fan
92004	92004–2148	2	Stud
92026	92026–7001	3	Spacer, 6.2x7.9x5
92026A	92026–7003	1	Spacer, 6.5x7.9x10.5

Ref. No.	Part No.	Qty.	Description

Electric Equipment
Kawasaki FH500V–AS30

E0160-A605A

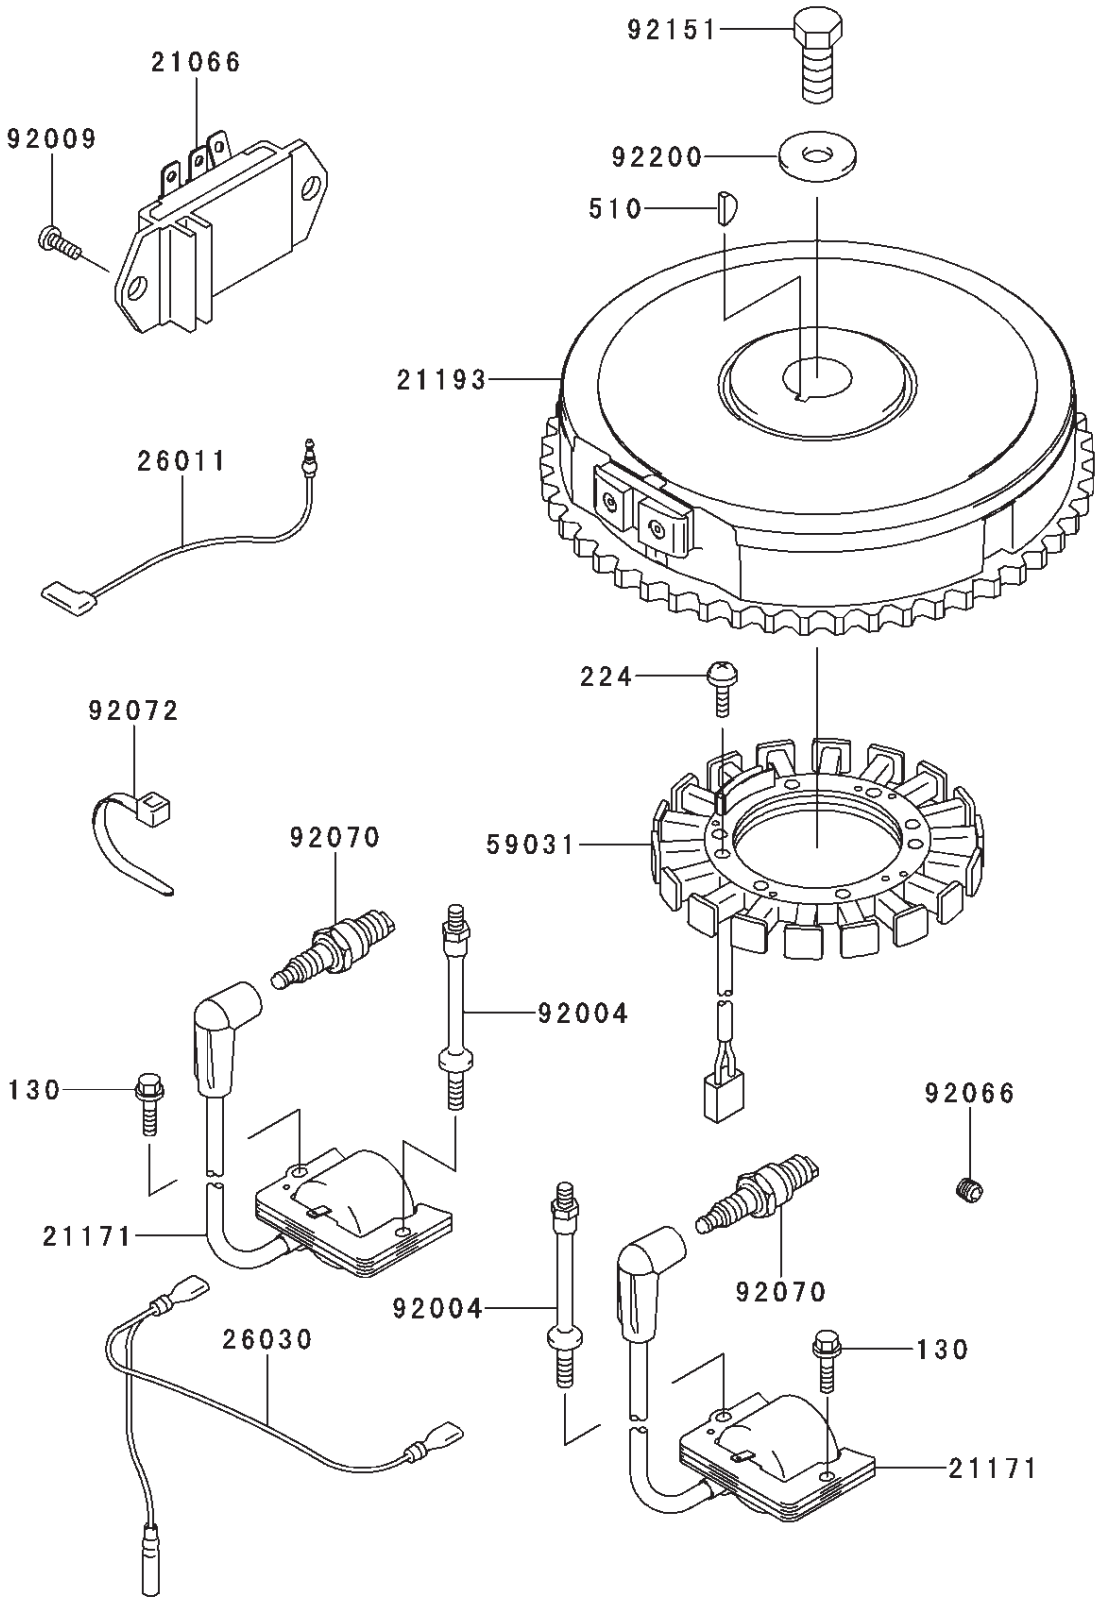


Electric Equipment
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
21066	21066–7001	1	Regulator–Voltage
21171	21171–7001	2	Coil–Assy–Ignition
21193	21193–7007	1	Flywheel–Assy
26011	26011–7001	1	Wire–Lead
26030	26030–7001	1	Harness
59031	59031–7001	1	Coil–Charging
92004	92004–2147	2	Stud
92009	92009–2308	2	Screw
92066	92066–7002	1	Plug
92070	92070–7003	2	Plug–Spark (RCJ8Y)
92072	92072–7003	2	Band
92151	92151–2097	1	Bolt, 12x30
92200	92200–7002	1	Washer
130	130B0620	2	Bolt–Flanged
224	224B0520	4	Screw–Pan–WP–Cros
510	510A5100	1	Key–Woodruff

Ref. No.	Part No.	Qty.	Description

Control Equipment
Kawasaki FH500V–AS30

E0170-A336A

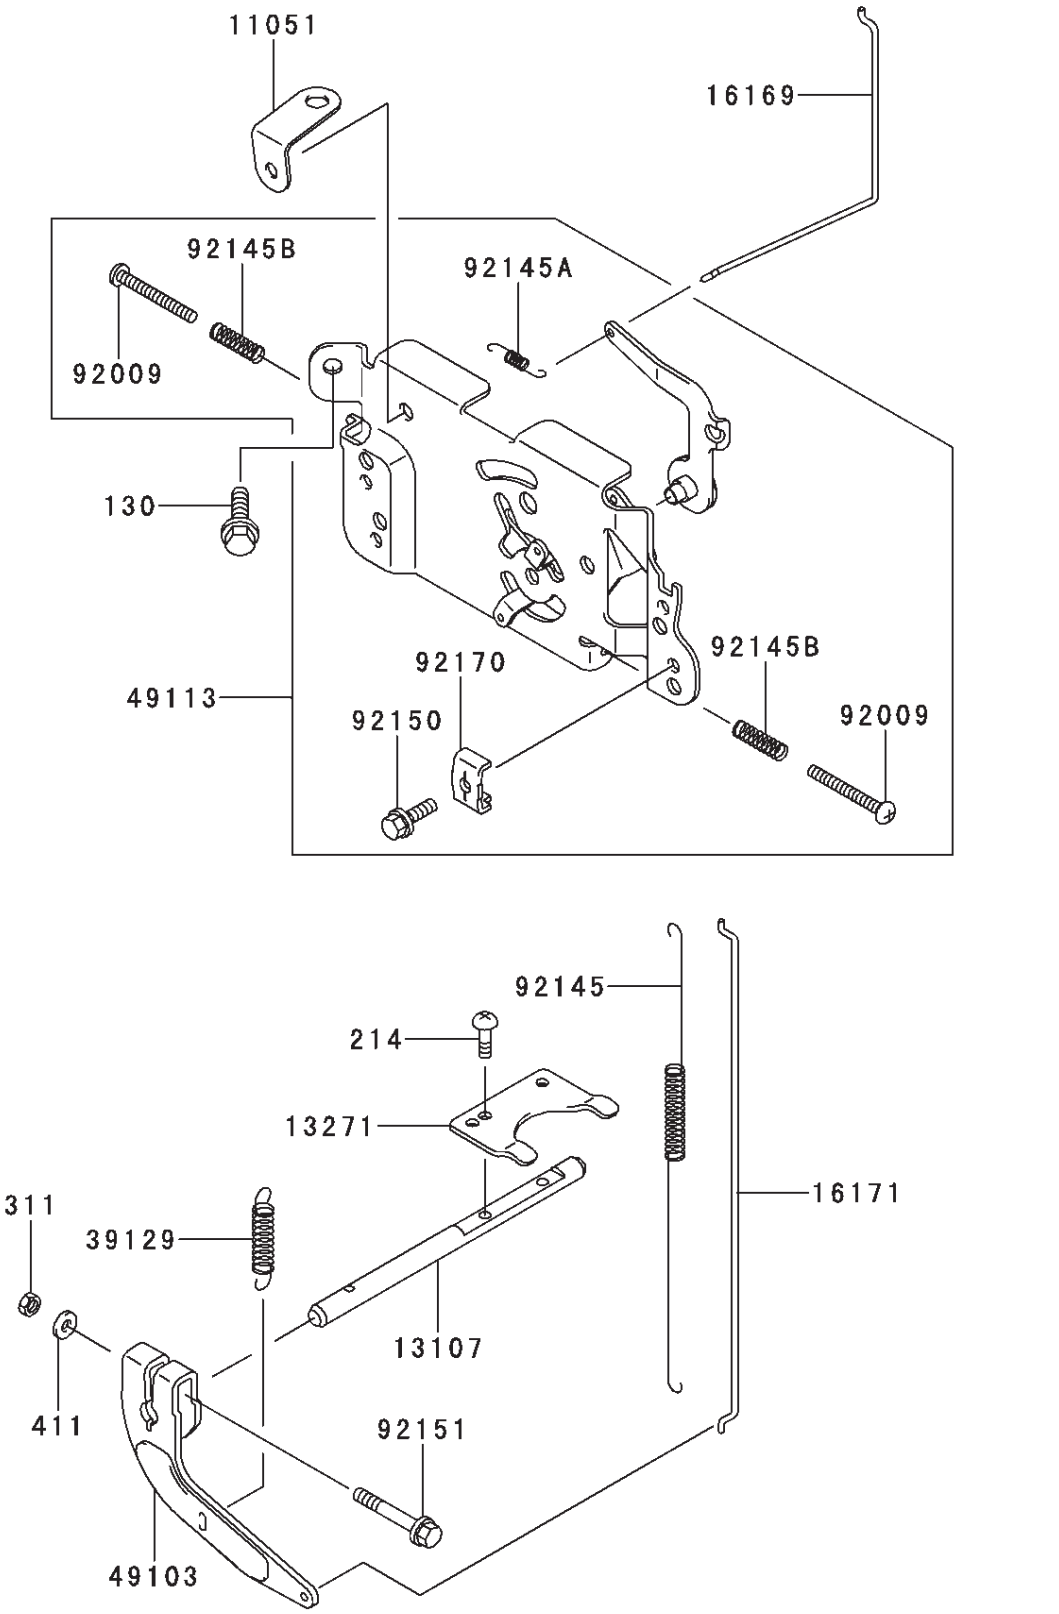


Control Equipment
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
11051	11051–7008	1	Bracket
13107	13107–7010	1	Shaft
13271	13271–7018	1	Plate
16169	16169–7001	1	Link–Choke
16171	16171–7001	1	Link
39129	39129–7003	1	Spring–Governor
49103	49103–7002	1	Arm–Governor
49113	49113–7005	1	Panel–Comp–Control
92009	92009–7007	1	Screw, 4x30
92145	92145–7003	1	Spring
92145A	92145–7004	1	Spring
92145B	92145–7005	1	Spring
92150	92150–2182	1	Bolt, 5x18
92151	92151–7006	1	Bolt, 6x30
92170	92170–7001	1	Clamp
130	130B0612	2	Bolt–Flanged
214	214B0408	2	Screw–Pan
311	311B0600	1	Nut–Hex
411	411B0600	1	Washer–Plain

Ref. No.	Part No.	Qty.	Description

Carburetor
Kawasaki FH500V–AS30

E0180-A415A

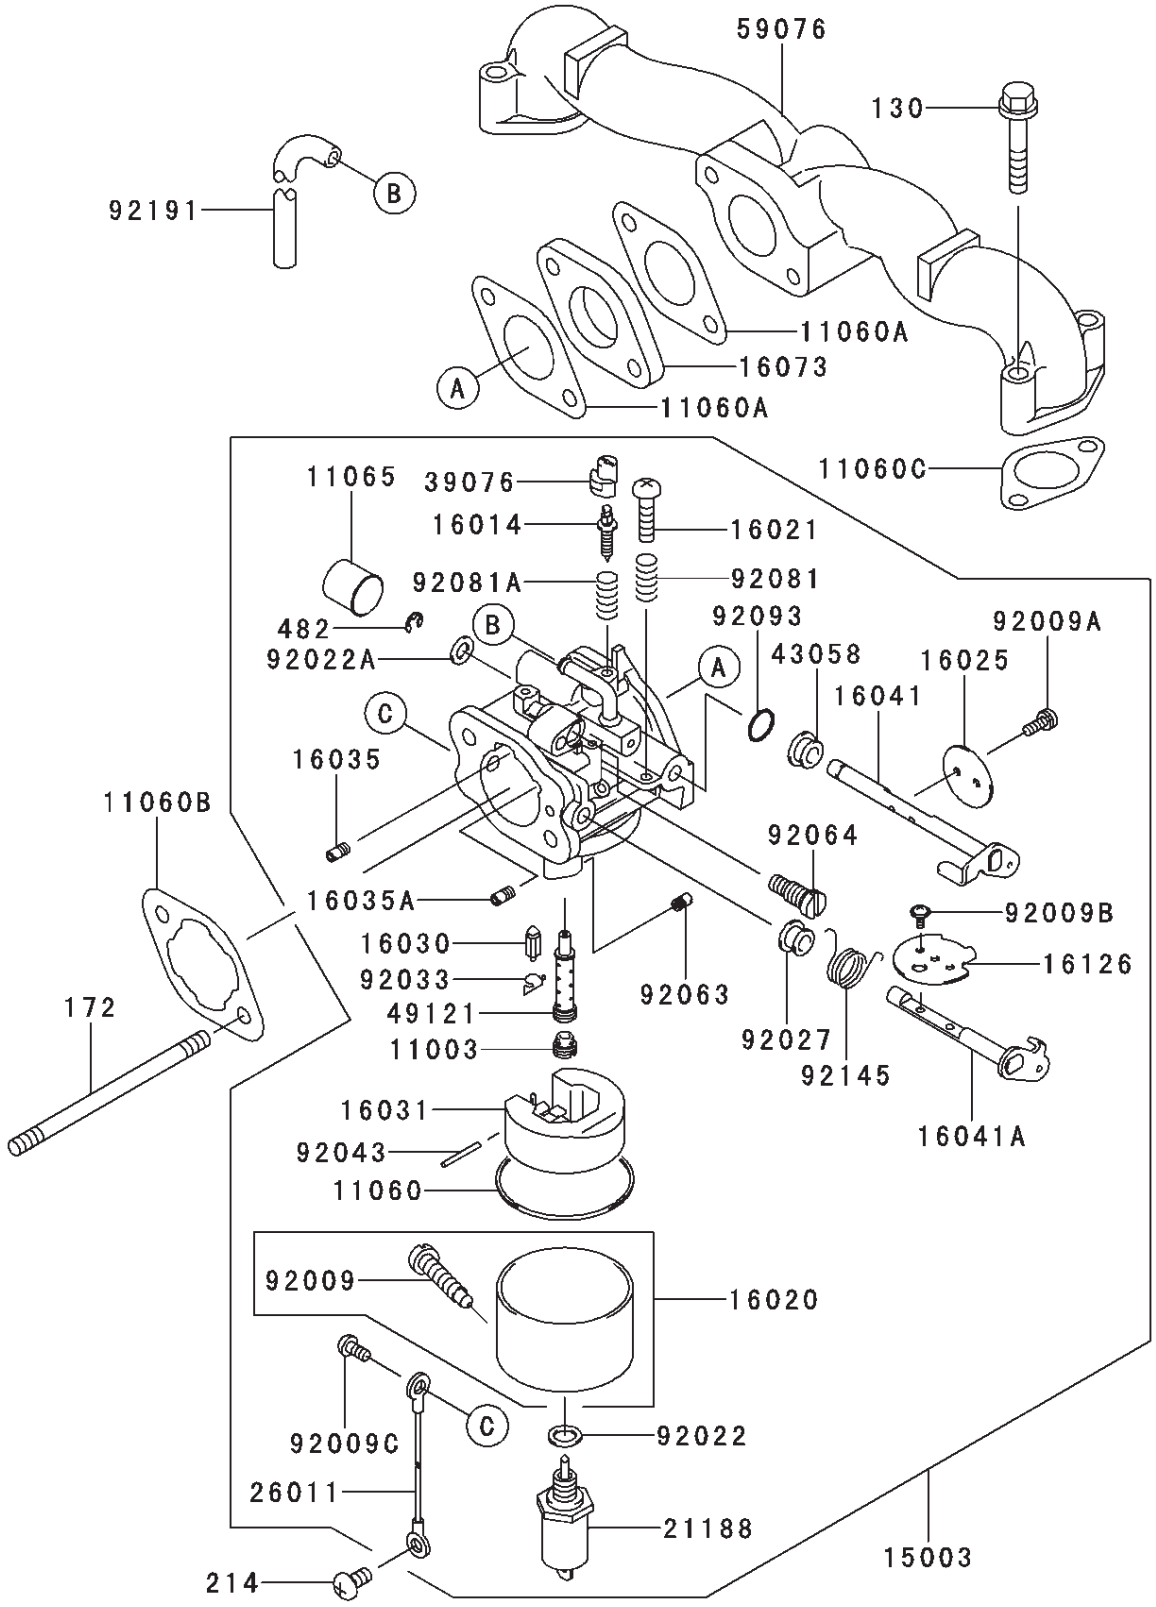


Carburetor
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
11003	11003–2105	1	Seat–Valve
11060	11060–2406	1	Gasket
11060A	11060–7003	2	Gasket, Insurator
11060B	11060–7004	1	Gasket, Air Filter
11060C	11060–7005	2	Gasket
11065	11065–2061	1	Cap
15003	15003–7037	1	Carburetor–Assy
16014	16014–2080	1	Screw–Pilot Air
16020	16020–2141	1	Chamber–Float
16021	16021–2060	1	Screw–Throttlestop
16025	16025–2195	1	Valve–Throttle, #130
16030	16030–2067	1	Valve–Float
16031	16031–2066	1	Float
16035	16035–2077	1	Jet–Air, #1.7
16035A	16035–2081	1	Jet–Air, #1.2
16041	16041–2253	1	Shaft–Carburetor, Choke
16041A	16041–7006	1	Shaft–Carburetor Throttle
16073	16073–7001	1	Insulator
16126	16126–7008	1	Valve
21188	21188–2011	1	Solenoid
26011	26011–2281	1	Wire–Lead
39076	39076–2053	1	Limiter
43058	43058–3716	1	Ring
49121	49121–2231	1	Nozzle–Main
59076	59076–7001	1	Manifold–Intake
92009	92009–2015	1	Screw
92009A	92009–2024	2	Screw
92009B	92009–2081	1	Screw
92009C	92009–2400	1	Screw
92022	92022–2231	1	Washer
92022A	92022–2239	1	Washer
92027	92027–2025	1	Collar
92033	92033–2067	1	Ring–Snap
92043	92043–2226	1	Pin
92063	92063–2380	1	Jet–Main
92064	92064–2127	1	Jet–Pilot
92081	92081–2009	2	Spring
92081A	92081–2256	1	Spring
92093	92093–2002	1	Seal
92145	92145–2061	1	Spring
92191	92191–7016	1	Tube
130	130B0635	4	Bolt–Flanged
172	172G0685	2	Bolt–Stud
214	214B0510	1	Screw–P
482	482L4000	1	Circlip–Type–E

Ref. No.	Part No.	Qty.	Description

Air Filter/Muffler
Kawasaki FH500V–AS30

E0190-A493A

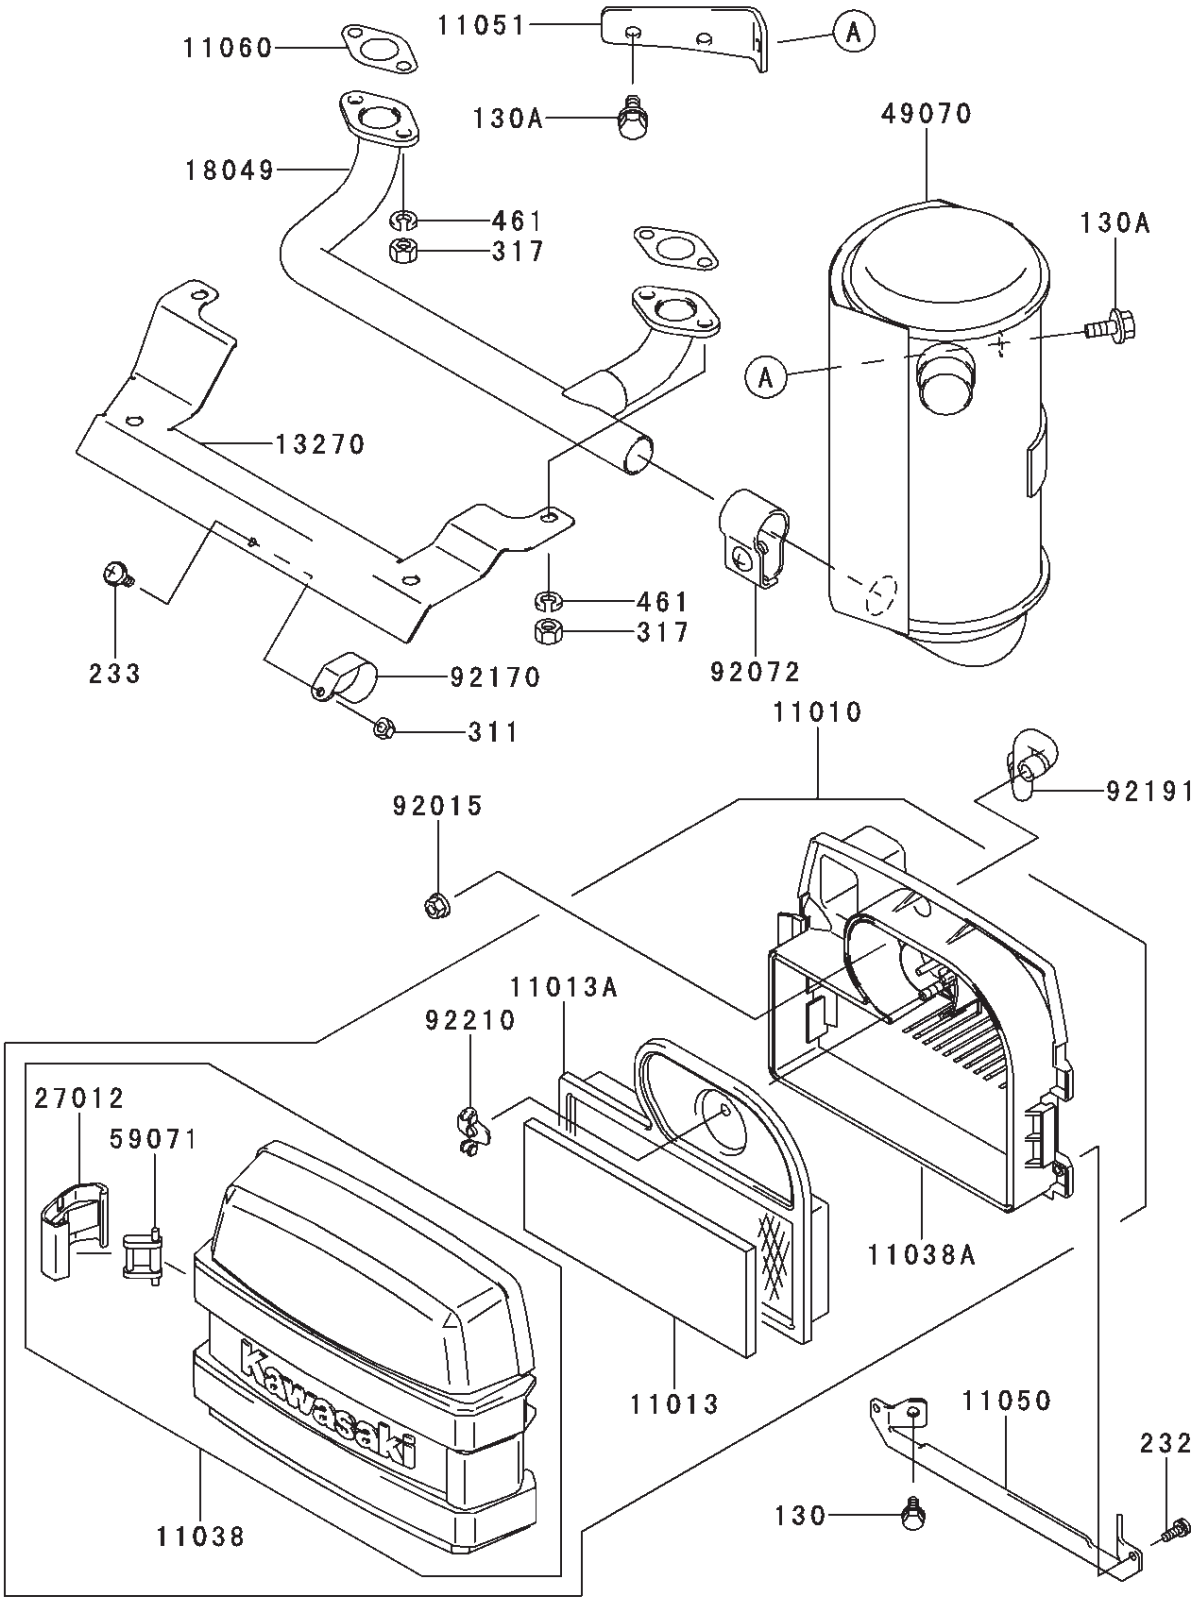


Air Filter/Muffler
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
11010	11010–7001	1	Filter–Assy–Air
11013	11013–7001	1	Element–Air Filter
11013A	11013–7002	1	Element–Air Filter
11038	11038–7001	1	Case–Assy–Air Filter
11038A	11038–7003	1	Case–Assy–Air Filter
11050	11050–7006	1	Bracket
11051	11051–7005–9H	1	Bracket
11060	11060–7021	2	Gasket, Muffler
13270	13270–7008	1	Plate
18049	18049–7001	1	Pipe–Exhaust
27012	27012–7001	2	Hook, Air Filter
49070	49070–7002	1	Muffler–Comp
59071	59071–7001	2	Joint
92072	92072–7002	1	Band
92015	92015–1193	2	Nut
92170	92170–7002	1	Clamp
92191	92191–7001	1	Tube
92210	92210–7004	1	Nut
130	130B0612	2	Bolt–Flanged
130A	130B0816	2	Bolt–Flanged
232	232B0514	2	Screw–Pan–WS
233	233B0416	1	Screw–Pan WP
311	311B0400	1	Nut–Hex
317	317R0800	4	Nut–Hex–Small
461	461F0800	4	Washer–Spring

Ref. No.	Part No.	Qty.	Description

Fuel Tank/Fuel Valve
Kawasaki FH500V–AS30

E0200-A275A

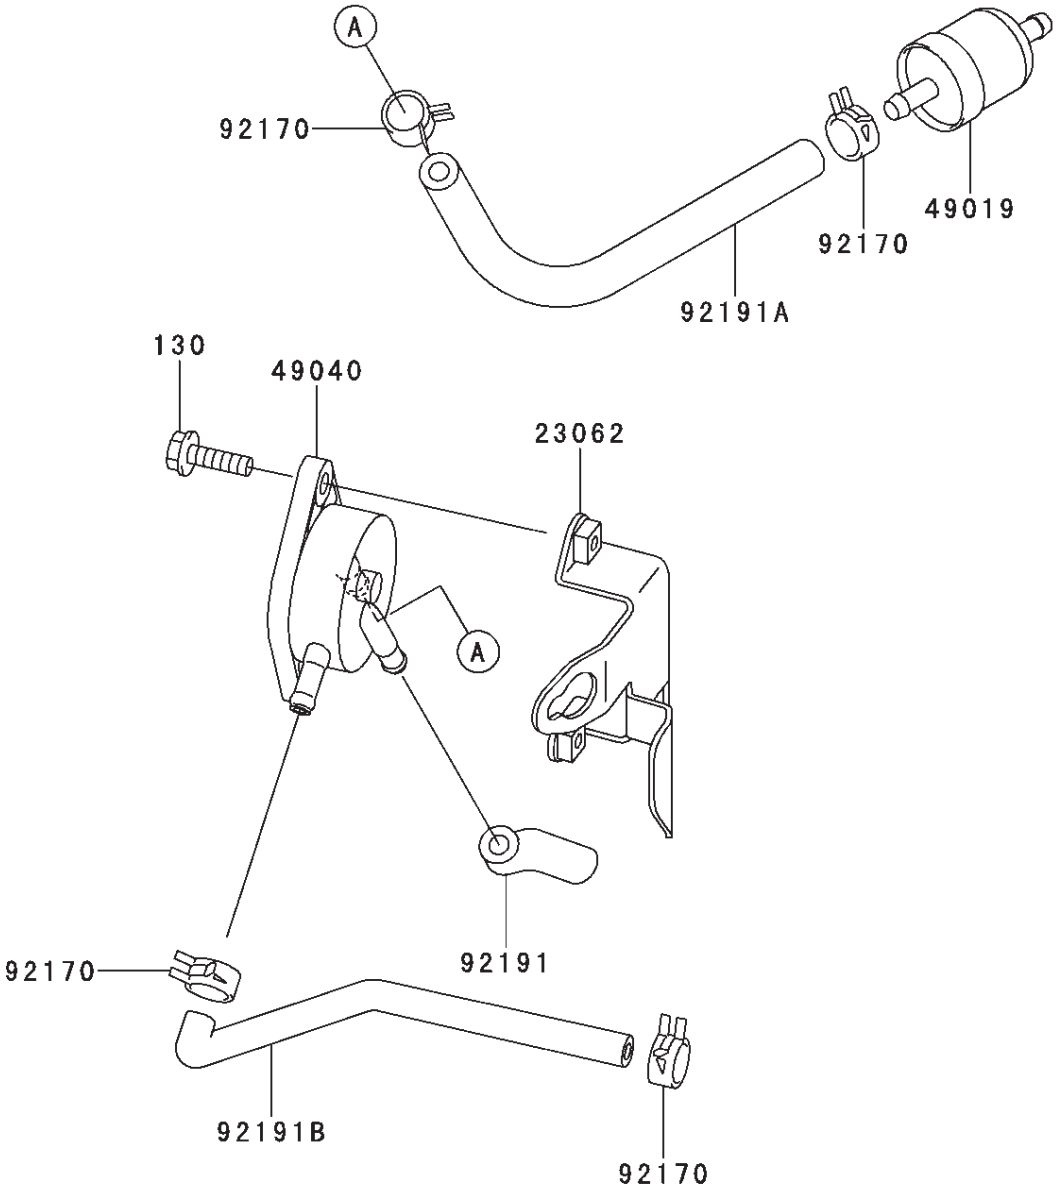


Fuel Tank/Fuel Valve
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
23062	23062–7001–9H	1	Bracket–Comp
49019	49019–7001	1	Filter–Fuel
49040	49040–7001	1	Pump–Fuel
92170	92170–2088	4	Clamp
92191	92191–7002	1	Tube
92191A	92191–7003	1	Tube,6.35x12.7x160
92191B	92191–7004	1	Tube
130	130B0620	2	Bolt–Flanged

Ref. No.	Part No.	Qty.	Description

Starter
Kawasaki FH500V–AS30

E0210-A240A

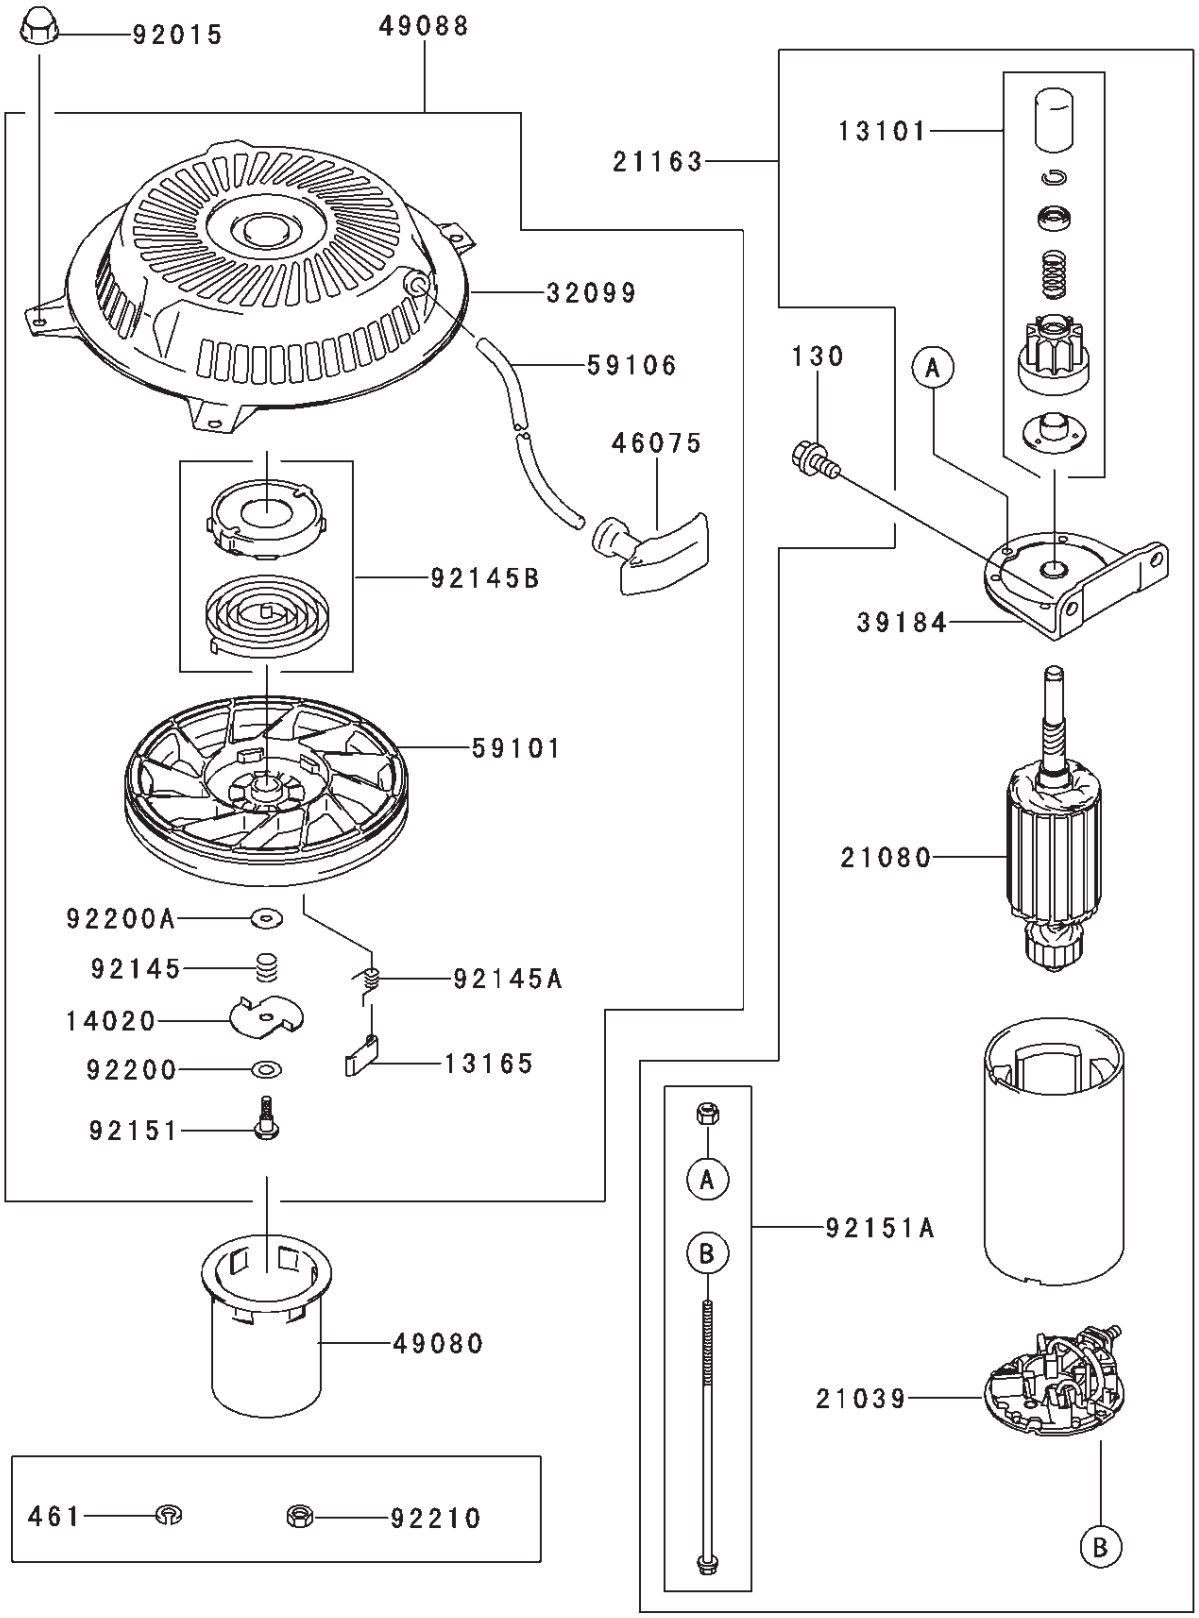


Starter
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
13101	13101–7001	1	Gear ASM
13165	13165–7001	2	Pawl, Recoil Starter
14020	14020–7001	1	Retainer
21039	21039–7001	1	Brush
21080	21080–7001	1	Armature
21163	21163–7001	1	Starter–Electric
32099	32099–7001	1	Case, Recoil Starter
39184	39184–7001	1	Bracket ASM
46075	46075–7001	1	Grip–Recoil Starter
49080	49080–7001	1	Pulley–Starting
49088	49088–7001	1	Starter–Recoil
59101	59101–7001	1	Reel, Recoil Starter
59106	59106–7001	1	Rope
92015	92015–1170	4	Nut
92145	92145–7006	1	Spring
92145A	92145–7007	2	Spring
92145B	92145–7008	1	Spring
92151	92151–7008	1	Bolt
92151A	92151–7013	1	Bolt
92200	92200–7004	1	Washer
92200A	92200–7005	1	Washer
92210	92210–7013	1	Nut
130	130B0816	2	Bolt–Flanged
461	461F0600	1	Washer–Spring

Ref. No.	Part No.	Qty.	Description

F0290-A868A

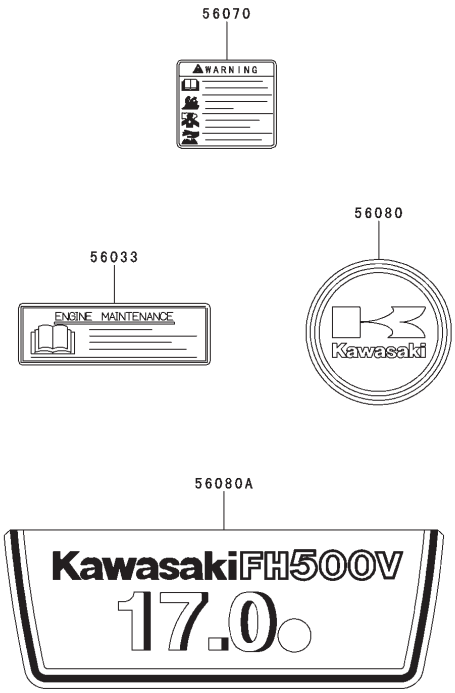


Label
Kawasaki FH500V–AS30

Ref. No.	Part No.	Qty.	Description
56033	56033–7001	1	Label–Manual
56070	56070–7001	1	Label–Warning
56080	56080–2077	1	Label–Brand
56080A	56080–7011	1	Label–Brand

Ref. No.	Part No.	Qty.	Description

Electrical Schematic

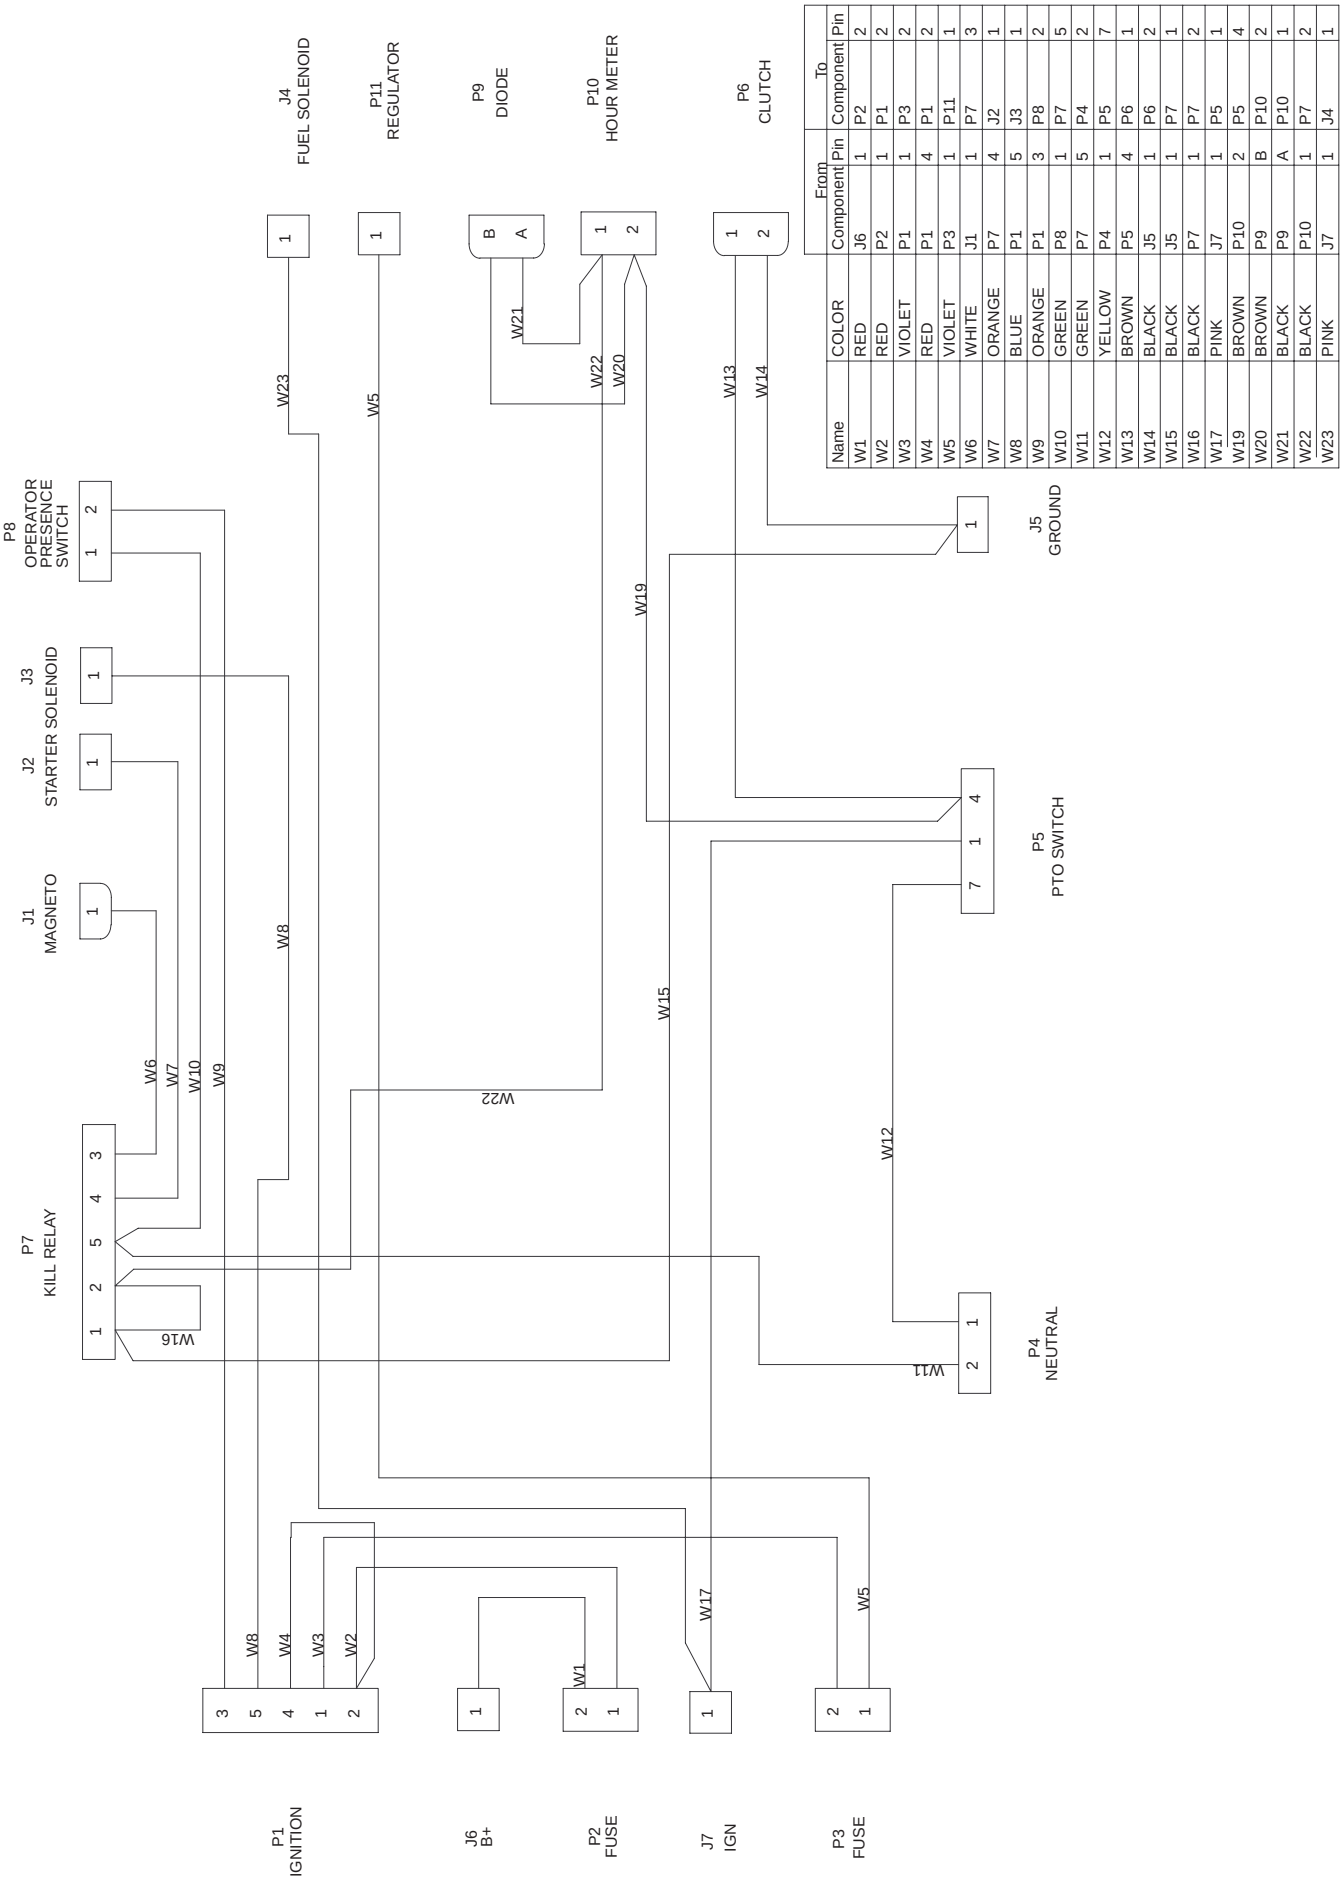

Name	COLOR	From Component	From Pin	To Component	To Pin
W1	RED	J6	1	P2	2
W2	RED	P2	1	P1	2
W3	VIOLET	P1	1	P3	2
W4	RED	P1	4	P1	2
W5	VIOLET	P3	1	P11	1
W6	WHITE	J1	1	P7	3
W7	ORANGE	P7	4	J2	1
W8	BLUE	P1	5	J3	1
W9	ORANGE	P1	3	P8	2
W10	GREEN	P8	1	P7	5
W11	GREEN	P7	5	P4	2
W12	YELLOW	P4	1	P5	7
W13	BROWN	P5	4	P6	1
W14	BLACK	J5	1	P6	2
W15	BLACK	J5	1	P7	1
W16	BLACK	P7	1	P7	2
W17	PINK	J7	1	P5	1
W19	BROWN	P10	2	P5	4
W20	BROWN	P9	B	P10	2
W21	BLACK	P9	A	P10	1
W22	BLACK	P10	1	P7	2
W23	PINK	J7	1	J4	1

Maintenance Record

Date								

Maintenance Record

Date								


TORO®