Form No. 3325–908

# French Decal Kit

## Timecutter™ Z Riding Mowers

**Part No. 105–1930**
**Part No. 105–1931**
**Part No. 105–1932**
**Part No. 105–1933**

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved


# Contents


| Description | Page |
|---|---|
| Deck Height Decal Assembly | 3 |
| Console Decal Assembly | 4 |
| Transport Decal Assembly | 5 |
| Briggs and Stratton Engine Decal Assembly Only on No. 105–1930, 105–1931, and 105–1932 | 6 |
| Kohler Engine Decal Assembly Only on No. 105–1932, 105–1932 | 7 |
| Cutting Unit Decal Assembly | 8 |


## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning |
|---|---|
| AR | as required |
| ASM | assembly |
| CARR | carriage |
| DEG | degrees |
| FH | flat head |
| GA | gauge |
| HF | hex flange |
| HH | hex head |
| HHF | hex head flange |
| HLH | hex lag head |
| HJ | hex jam |
| HOC | height-of-cut |
| HS | hex socket |
| HSBH | hex socket button head |
| HSFH | hex socket flat head |
| HSH | hex socket head |
| HWH | hex washer head |
| HWHTF | hex washer head thread forming |
| HYD | hydraulic |
| INC | incorporated |
| LH | left hand |
| NI | nylon insert |
| PPH | Phillips pan head |
| PTH | Phillips truss head |
| PTO | power take off |
| RH | right hand |
| SFH | slotted fillister head |
| SHH | slotted hex head |
| SQH | square head |
| SHWH | slotted hex washer head |
| SPH | slotted pan head |
| SRH | slotted round head |
| STD | standard |
| TAP | self tapping |
| TTH | Torx truss head |
| WH | wing head |

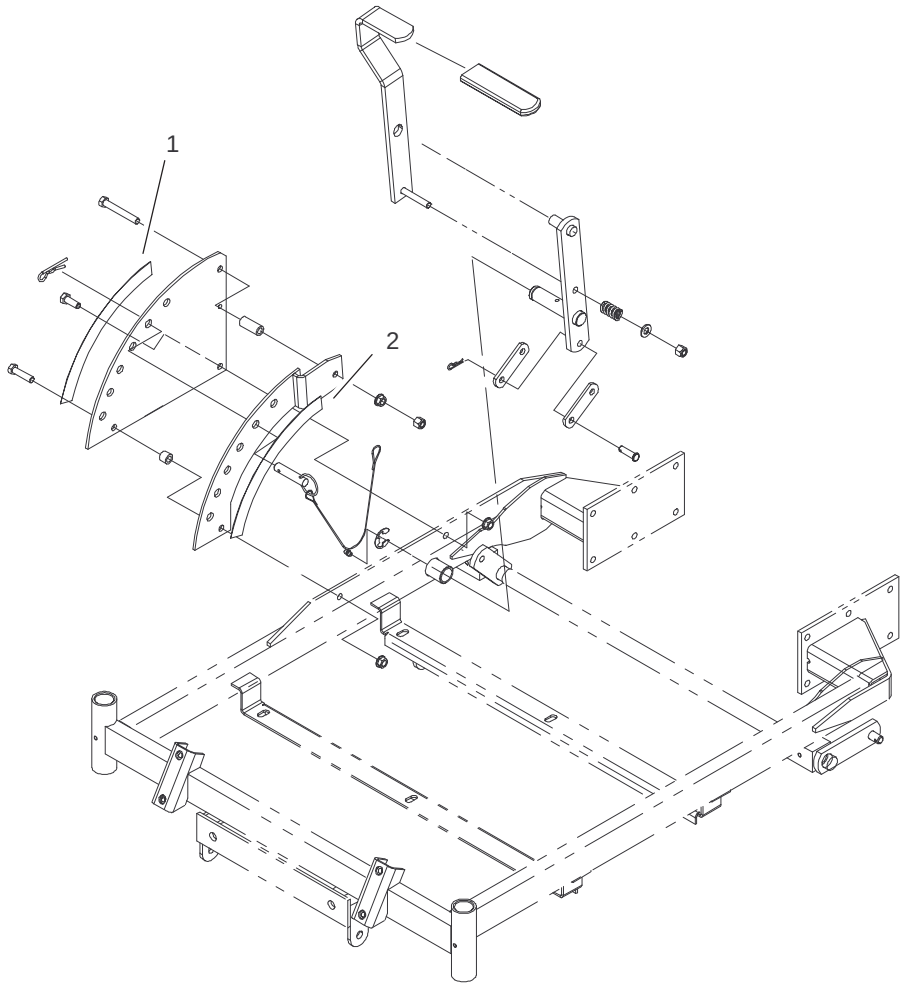



Sheet No.:3

# Deck Height Decal Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104–8063 | 1 | Decal–Deck Height, Outer International |
| 2 | 104–8062 | 1 | Decal–Deck Height, Inner International |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

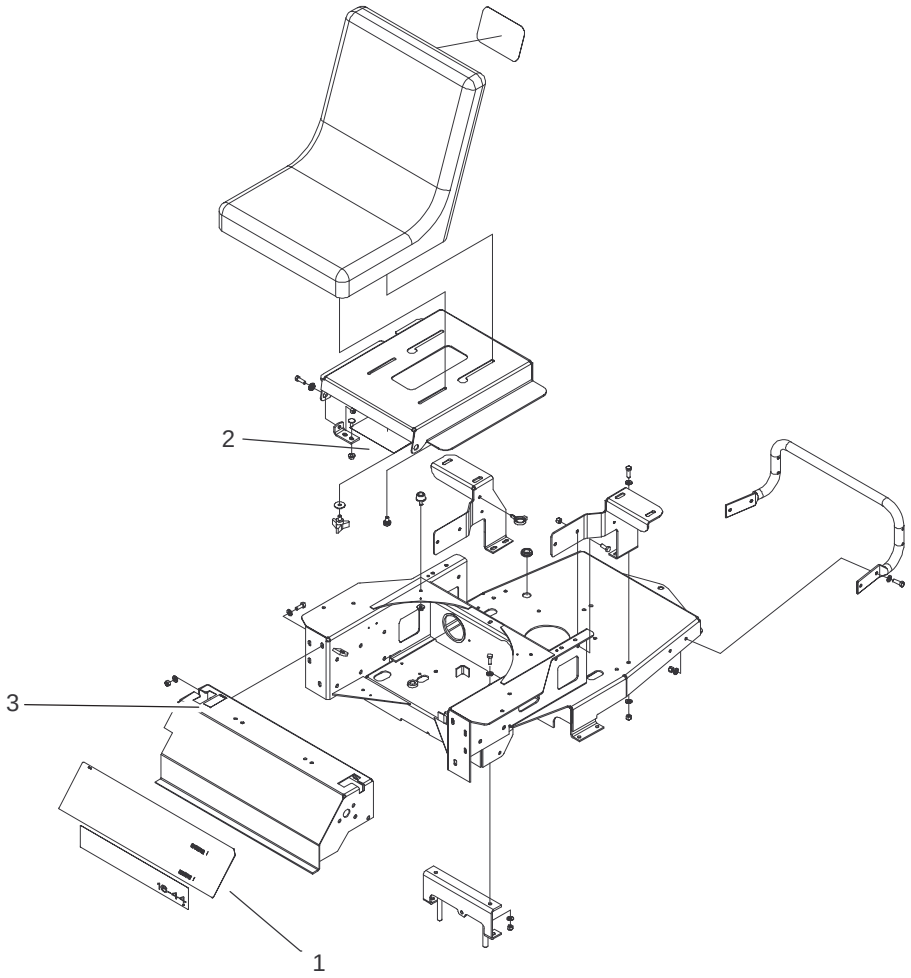



Sheet No.:4

# Console Decal Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104–8064 | 1 | Decal–Console International |
| 2 | 104–8086 | 1 | Decal–Services International |
| 3 | 99–8936 | 2 | Decal–Control, Motion |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

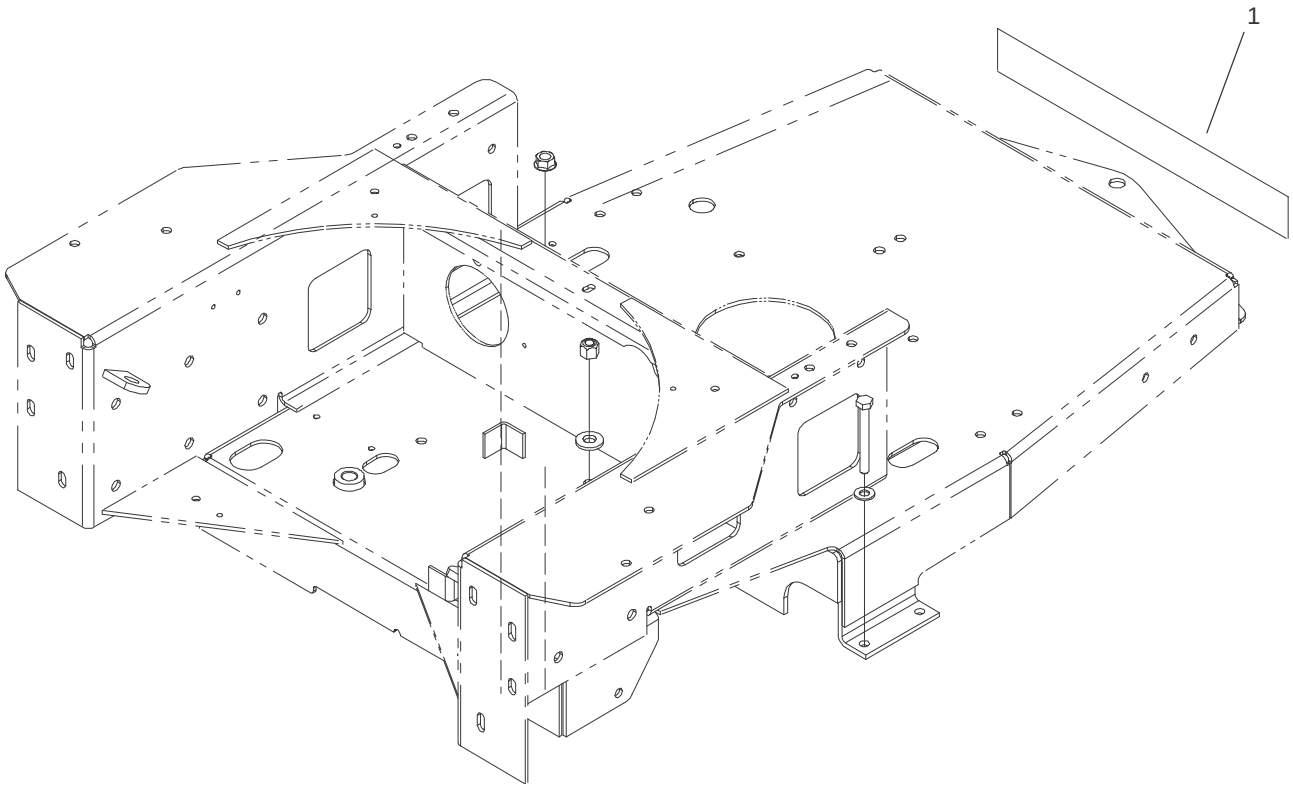



Sheet No.:8

# Transport Decal Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104–8061 | 1 | Decal–Transport International |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

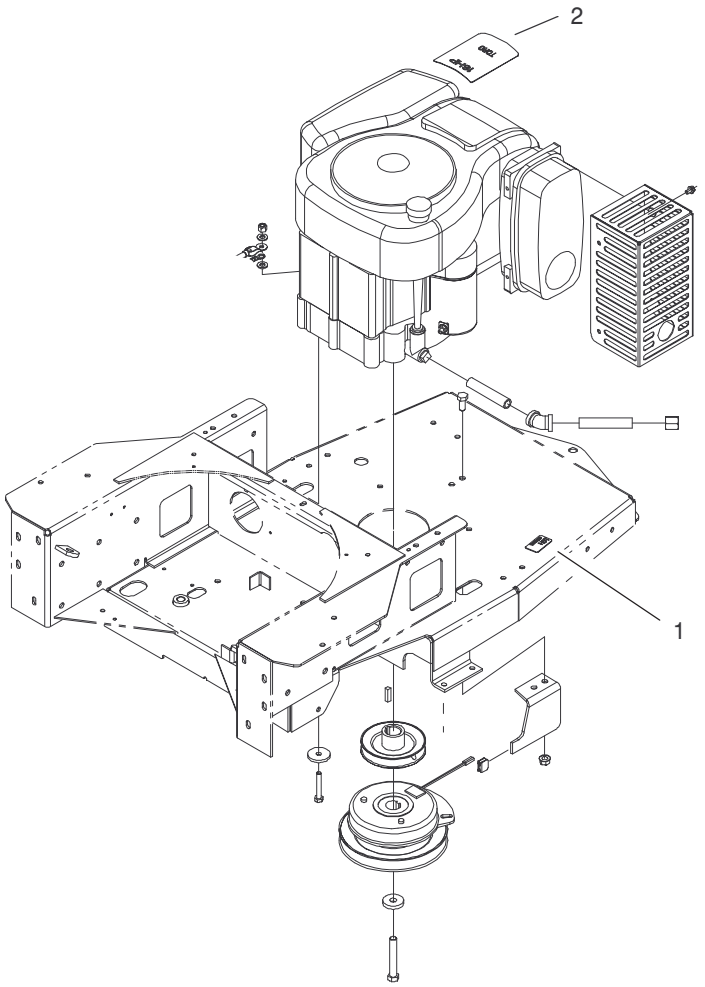



Sheet No.:9

# Briggs and Stratton Engine Decal Assembly (No. 105–1930, 105–1931, and 105–1932 Only)

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104–8065 | 1 | Decal–Surface, Hot International (only on: 105–1930, 105–1931, 105–1932) |
| 2 | 105–1860 | 1 | Decal–Engine B&s International (only on: 105–1930) |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

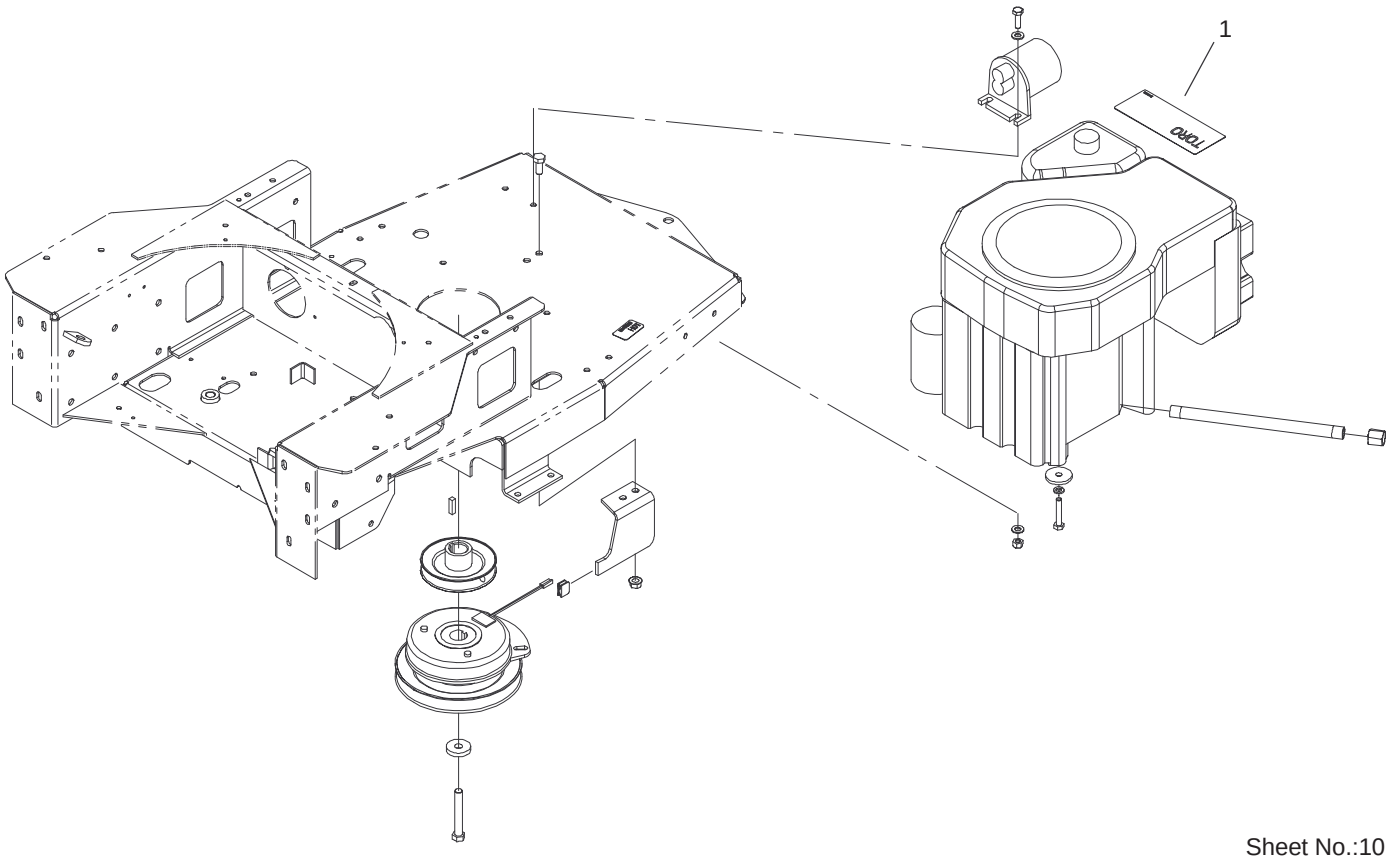



Sheet No.:10

# Kohler Engine Decal Assembly (No. 105–1931, 105–1932 Only)

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 105–1861 | 1 | Decal–Engine Kohler International (only on: 105–1931, 105–1932) |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

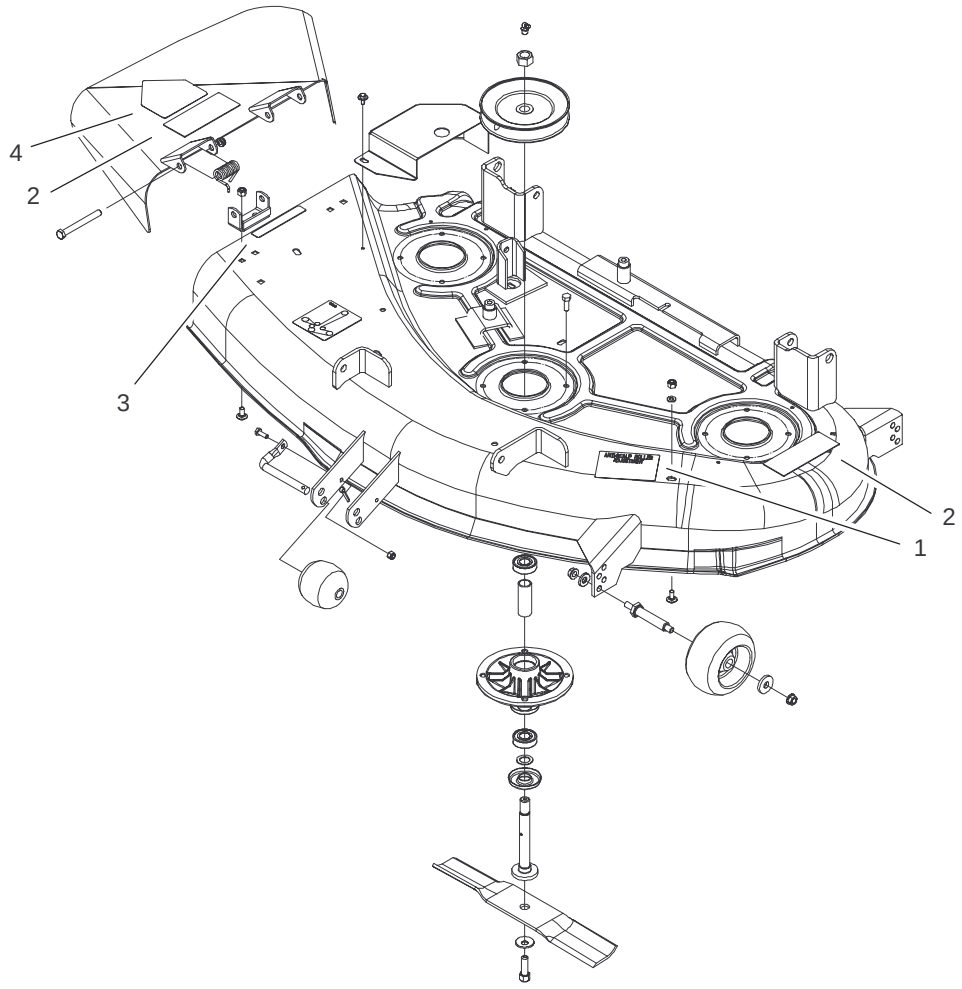


Sheet No.:11

# Cutting Unit Decal Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 99–8939 | 1 | Decal–Anti Scalp |
| 2 | 93–7317 | 2 | Decal – Danger |
| 3 | 93–7009 | 1 | Decal–Danger |
| 4 | 93–7316 | 1 | Decal–Danger, Int'l |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

# Maintenance Record

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

# Maintenance Record

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

# Maintenance Record

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |


TORO®