Form No. 3325–933

Stand Kit

Z Master® 100 Series Attachment

Model No. 105–1621

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

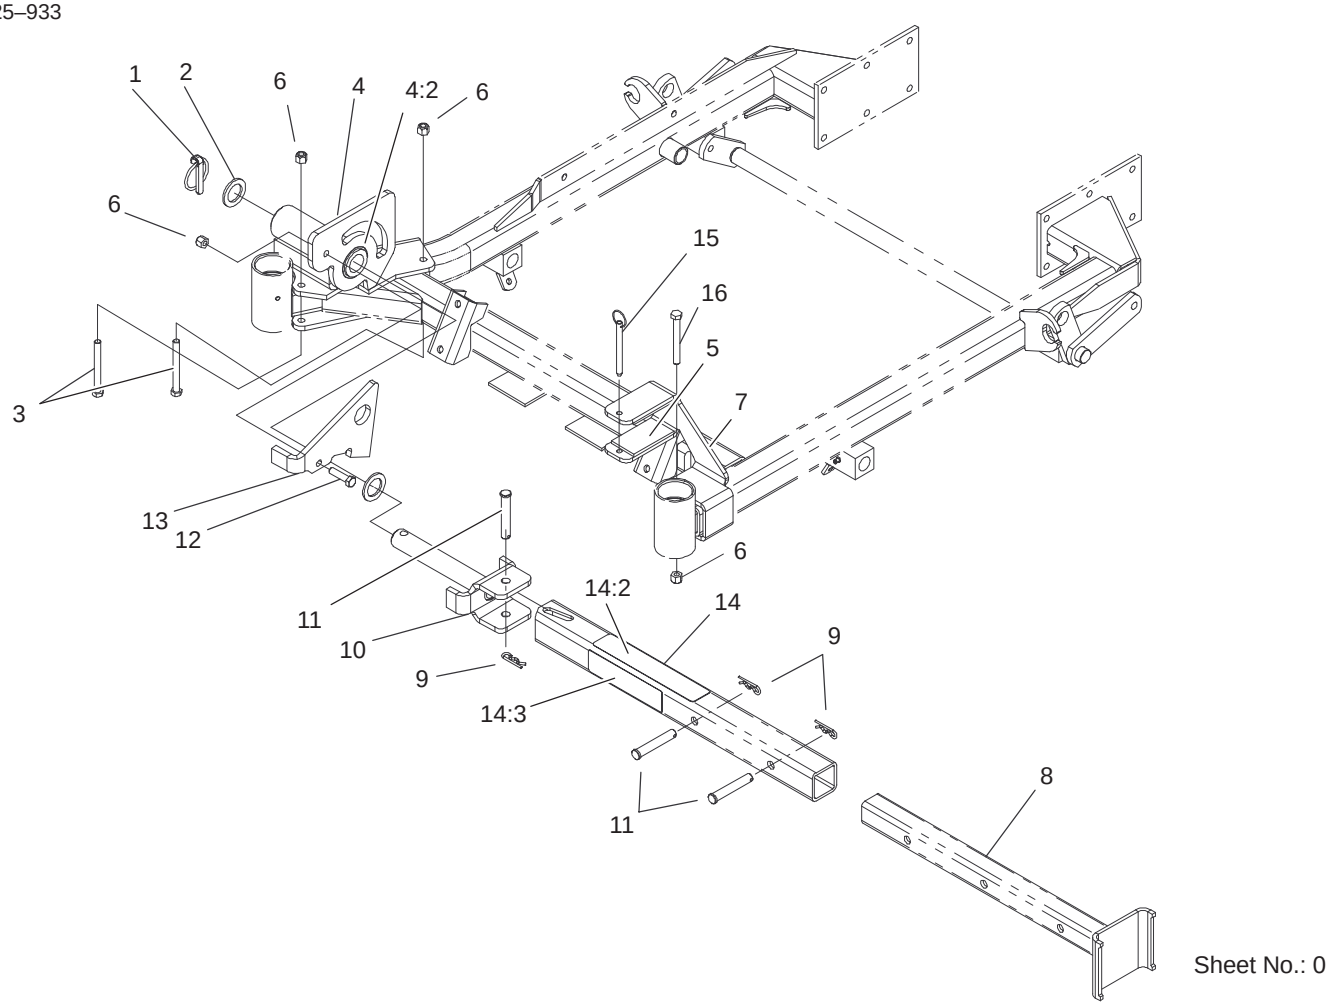

Sheet No.: 0

Stand Assembly

Ref. No.	Part No.	Qty.	Description
1	283–71	1	Pin–Lynch
2	3–6781	2	Washer–Thrust
3	323–15	2	Screw–HH
4	105–1610	1	Hub & Clamp ASM
4:2	94–1291	2	Bushing–Special
5	100–6547	2	Cushion – Rubber
6	3296–39	4	Nut–Lock, NI
7	100–6538–01	1	Bracket–Cradle
8	105–1612–01	1	Inner Leg ASM
9	3290–355	3	Pin–Hair
10	100–9692–01	1	Pivot Pin ASM
11	283–55	3	Pin–Clevis
12	323–8	1	Screw–HH
13	100–9686–01	1	Bracket–Latch
14	105–1642	1	Leg ASM
14:2	104–7758	1	Decal–Z Stand
14:3	104–7759	1	Decal–Warning
15	105–1647	1	Pin – Hitch, Cotterless
16	323–20	1	Screw–HH

Ref. No.	Part No.	Qty.	Description