
FORM NO. 3310-746 Rev. C

TORO

MODEL NO. 01075—60001 thru 90001 & UP (5 BLADE)
MODEL NO. 01077—60001 thru 90001 & UP (7 BLADE)

PARTS CATALOG

SPARTAN® 5 AND 7

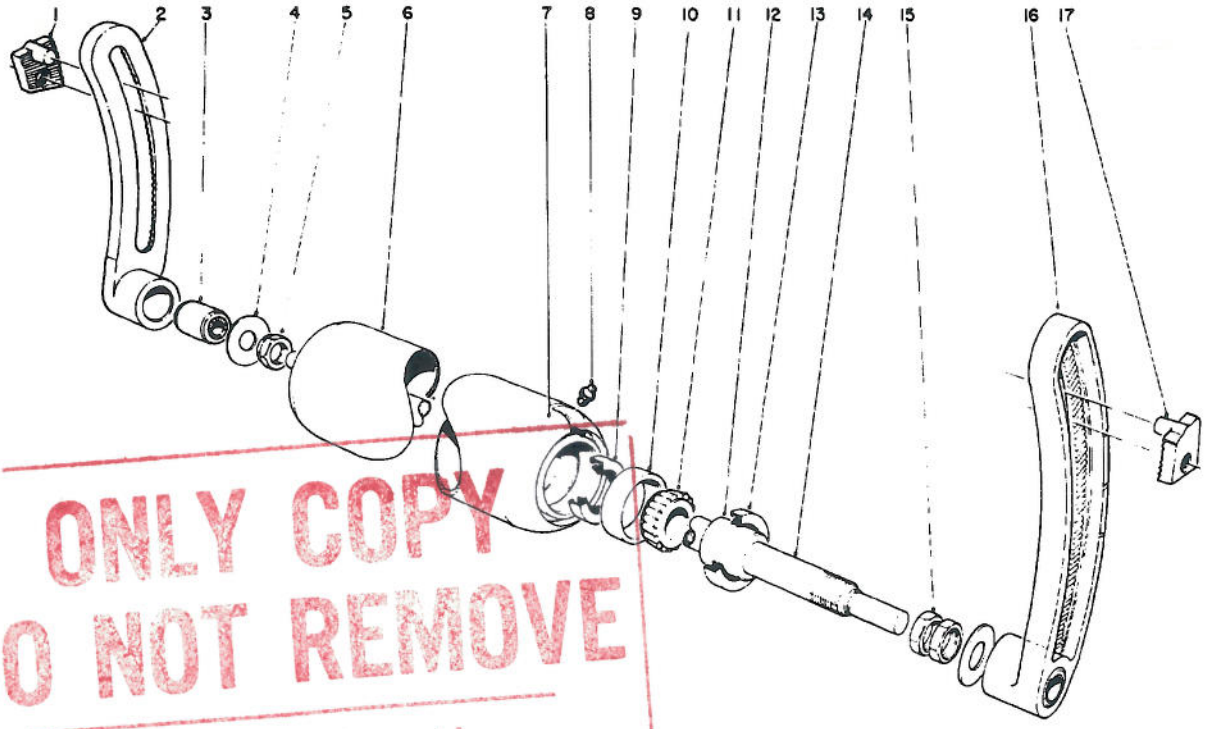

ONLY COPY
DO NOT REMOVE
Tech. Publications

ROLLER AND BRACKET ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	6-1120	Adjusting Nut, R.H.	1
2	2-2139	Roller Bracket, R.H. (Incl. Ref. 3)	1
3	3-4010	Bushing	2
4	5-4527	Thrust Washer	2
5	3296-15	Locknut	1
6	5-3939	Roller Assembly (Incl. Ref. 4-15)	1
7	4-5659	End Cap (Incl. Ref. 8)	2
8	302-5	Grease Fitting	2
9	253-122	Seal	2
10	254-79	Bearing Cup	2
11	254-78	Bearing Cone	2
12	5-4523	Sleeve	2
13	253-117	Seal	2
14	8-3980	Roller Shaft	1
15	3220-7	Jam Nut	2
16	2-2149	Roller Bracket, L.H. (Incl. Ref. 3)	1
17	6-1130	Adjusting Nut, L.H.	1

3-SECTIONAL RUBBER ROLLER (Not Illustrated) - Optional

Ref. No.	Part No.	Description	No. Used
*	22-0990	Roller	1
*	22-0970	Bracket, L.H. (Includes Items marked †)	1
*	22-0980	Bracket, R.H. (Includes Items marked †)	1
*†	22-0040	Bushing	2
*†	302-11	Grease Fitting	2
*†	284-3	Welsh Plug	2

* Not Illustrated


COPYRIGHT © ALL RIGHTS RESERVED
The Toro Company — 1977, Rev. 1978

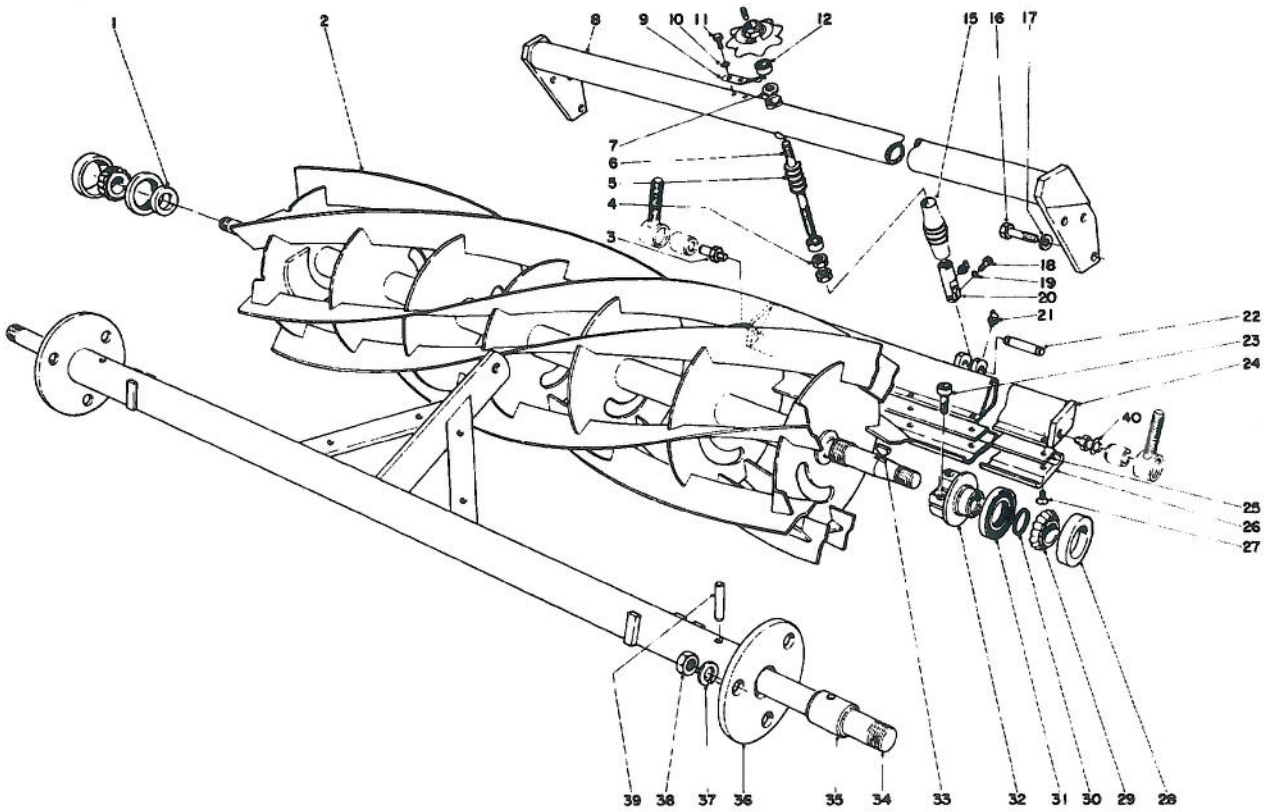

REEL AND BED BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-7444	Adjusting Sleeve	1
2	26-2500	Reel Assembly 5 Blade (Model 01075)	1
*	26-2700	Reel Assembly 7 Blade (Model 01077)	1
3	19-9820	Bed Bar Pivot	2
4	3220-12	Jam Nut	2
5	5-4373	Spring	1
6	11-5820	Adjusting Rod w/Knob	1
7	8-2490	Washer	1
8	8-3970	Rear Cross Bar	1
9	8-1750	Spring Arm	1
10	3253-3	Lockwasher	2
11	329-2	Capscrew	2


Ref. No.	Part No.	Description	No. Used
12	8-2570	Thrust Bearing	2
15	12-0430	Shield Adj. Rod	1
16	324-5	Capscrew	2
17	3253-6	Lockwasher	2
18	3210-4	Capscrew	1
19	3253-4	Lockwasher	1
20	12-1800	Tube Adjustment	1
21	302-11	Grease Fitting	3
22	20-0480	Rod Pivot	1
23	3273-14	Screw Allen Head	2
24	11-5770	Bedbar	1
25	5-6040	Spacer Plate	1
26	12-9650	Bedknife	1
27	3-6462	Screw Special	11

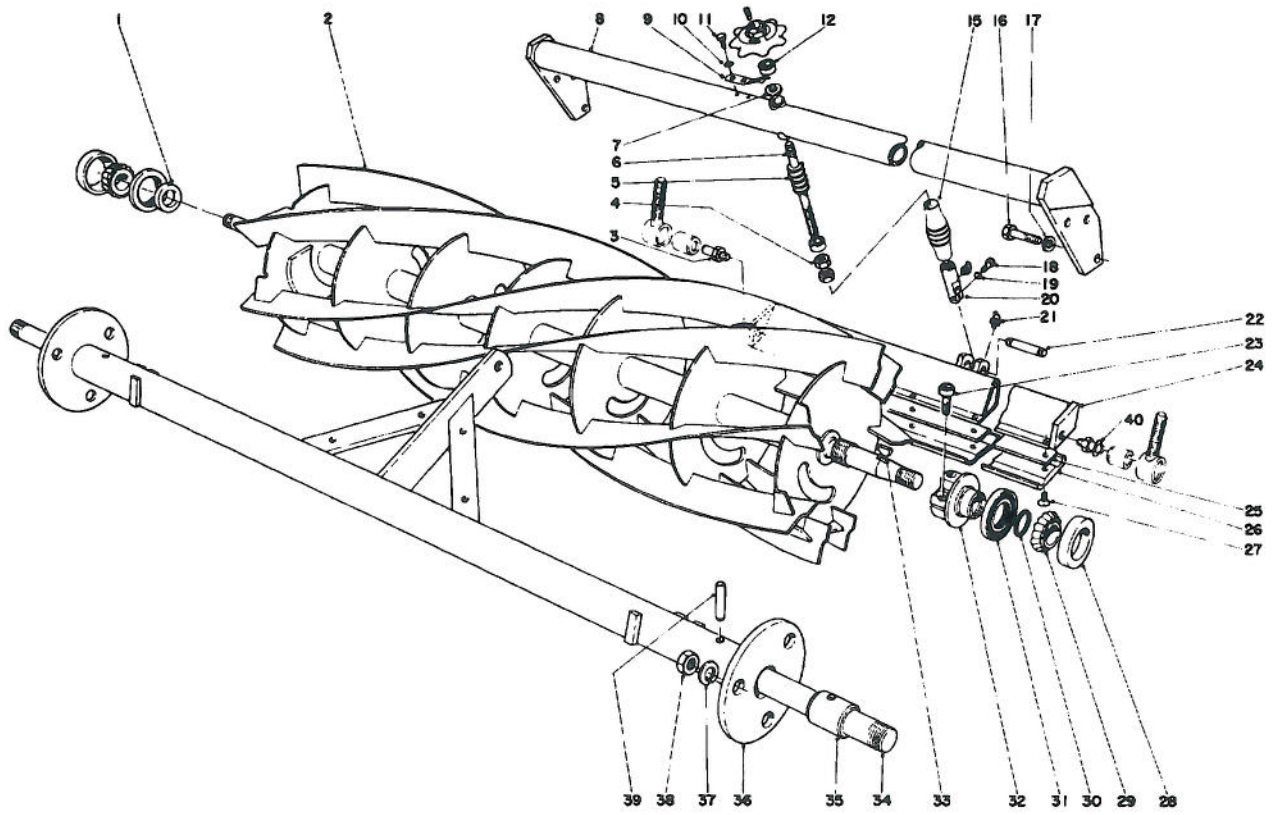

REEL AND BED BAR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
28	254-79	Bearing Cup	2
29	254-78	Bearing Cone	2
30	237-58	O-Ring	1
31	5-3820	Oil Seal	2
32	2-4219	Adjustment Nut (Incl. Ref. # 23)	1
33	3257-3	Woodruff Key	2
34	5-2673	Axle Shaft	1

Ref. No.	Part No.	Description	No. Used
35	5-3137	Bushing	2
36	5-3889	Spacer Tube (Incl. Ref. # 34 & 39)	1
37	3253-7	Lockwasher	6
38	3219-5	Hex Nut	6
39	32121-12	Roll Pin	2
40	3256-27	Washer	1

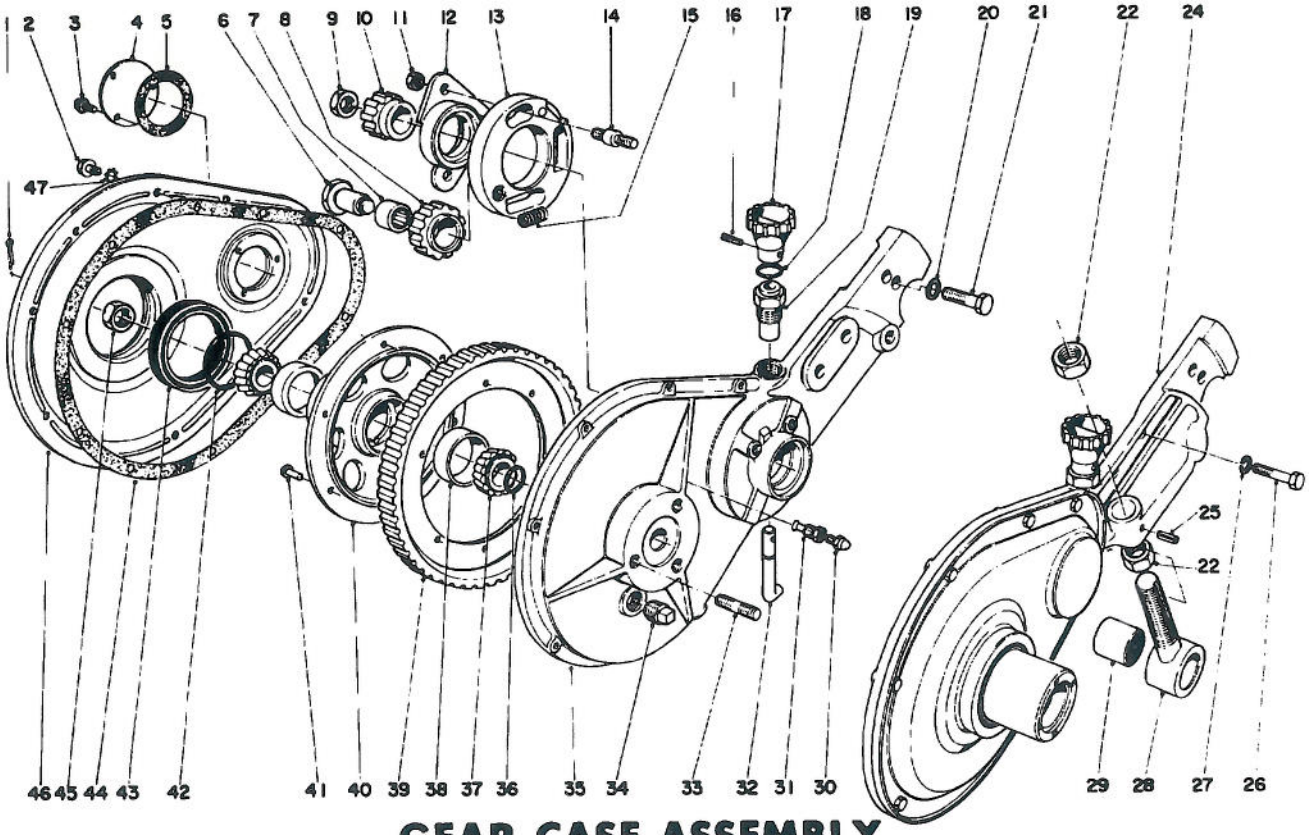


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-16	Cotter Pin	2
2	32140-94	Screw	20
3	11-8960	Special Bolt	3
4	5-1460	Cover, Reel Pinion	1
5	5-1458	Gasket	1
6	3-9117	Ratchet Gear, Stud	1
*	3-9116	Ratchet Gear, Stud	1
7	252-6	Bearing	2
8	12-1190	Ratchet Gear	2
9	3-8386	Nut	2
10	5-1463	Pinion Gear	2
11	3296-6	Locknut	6
12	3-3996	Ratchet Ring R.H.	1
*	3-3997	Ratchet Ring L.H.	1
13	3-4170	Ratchet Gear Ring	1
*	3-4160	Ratchet Gear Ring	1
14	3-7445	Ratchet Ring Stud	6
15	3-3251	Spring	4
16	3283-1	Drive Pin	2
17	5-1464	Throwout Handle	2
18	237-21	"O"-Ring	2
19	3-3892	Throwout Sleeve	2
20	3253-7	Lockwasher	2
21	325-7	Capscrew	2
22	217-104	Taper Nut	4
24	6-0749	Gear Case L.H. (Incl. Ref. Nos. 14, 30-31, 33-34)	1

Ref. No.	Part No.	Description	No. Used
25	32121-2	Roll Pin	2
26	324-6	Capscrew	4
27	3253-6	Lockwasher	4
28	19-9870	Rod End Bearing (Incl. Ref. No. 29)	2
29	19-9750	Bushing	2
30	302-14	Relief Fitting	2
31	5-4641	Air Vent Fitting	2
32	3-3904	Finger, Throwout R.H.	1
*	3-3891	Finger, Throwout L.H.	1
33	3-7446	Spacer Tube Stud	6
34	281-3	Pipe Plug	2
35	6-0739	Gear Case R.H. (Incl. Ref. Nos. 14, 30-31, 33-34)	1
36	237-54	"O"-Ring	2
37	254-78	Bearing Cone	4
38	254-79	Bearing Cup	4
39	5-1457	Gear	2
40	3-4001	Ring Gear Hub	2
41	3262-3	Rivet	12
42	237-38	"O"-Ring	2
43	253-101	Oil Seal	2
44	3-5002	Gasket	2
45	5-1462	Nut	2
46	11-6270	Gear Case Cover R.H.	1
47	3255-7	Lockwasher	20
*	3-5440	Gear Case Cover L.H.	1


* Not Illustrated

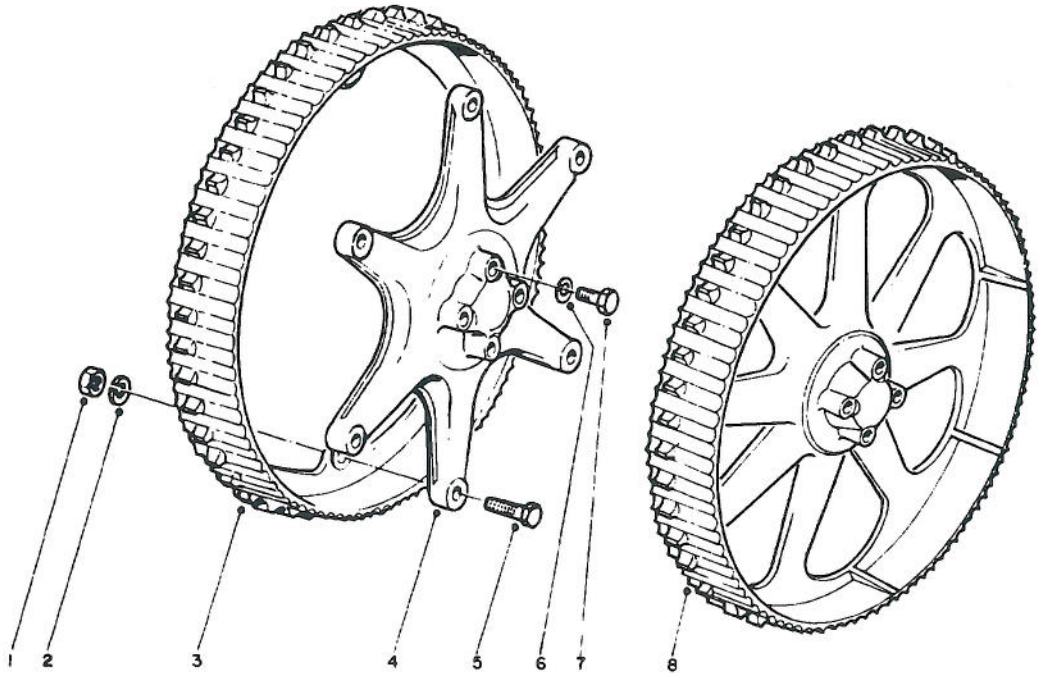

CAST DRIVE WHEEL KITS NO. 01336 & 01343 (Optional)

Ref. No.	Part No.	Description	No. Used
		14" Cast Drive Wheels Kit No. 01343	
1	3219-3	Nut	12
2	3253-5	Lockwasher	12
3	5-2682	Rim, Drive Wheel	2
4	5-2683	Hub, Drive Wheel	2
5	3211-6	Capscrew	12

Ref. No.	Part No.	Description	No. Used
6	3253-4	Lockwasher (Used with both 14" and 16" Wheels)	8
7	5-1470	Capscrew (Used with both 14" and 16" Wheels)	8
		16" Cast Drive Wheels Kit No. 01336	
8	01336	Wheel	2

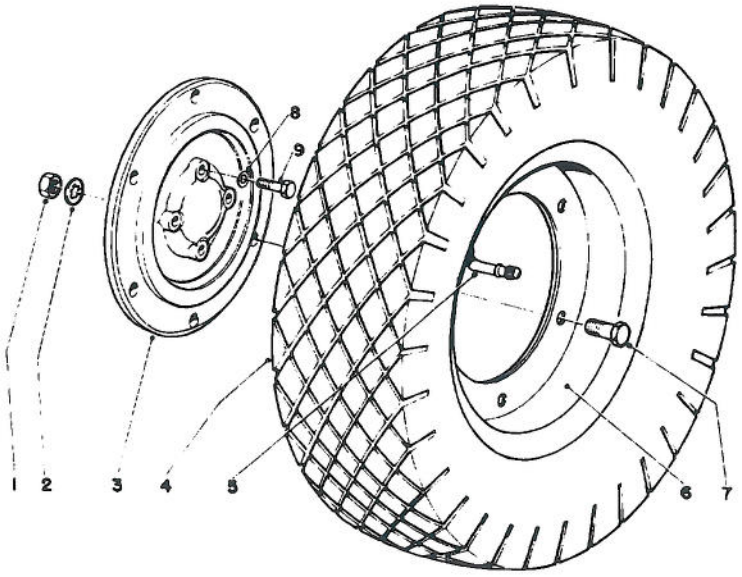


16" PNEUMATIC WHEEL KIT NO. 01323

Ref. No.	Part No.	Description	No. Used
1	3219-3	Nut	12
2	3254-6	Lockwasher	12
3	5-1468	Hub, Wheel	2
4	231-3	Tire	2
5	232-3	Tube	2

Ref. No.	Part No.	Description	No. Used
6	5-3256	Wheel Disc w/Valve Hole	2
*	5-3257	Wheel Disc	2
7	3211-4	Capscrew	12
8	3253-4	Lockwasher	8
9	5-1470	Capscrew	8

* Not Illustrated

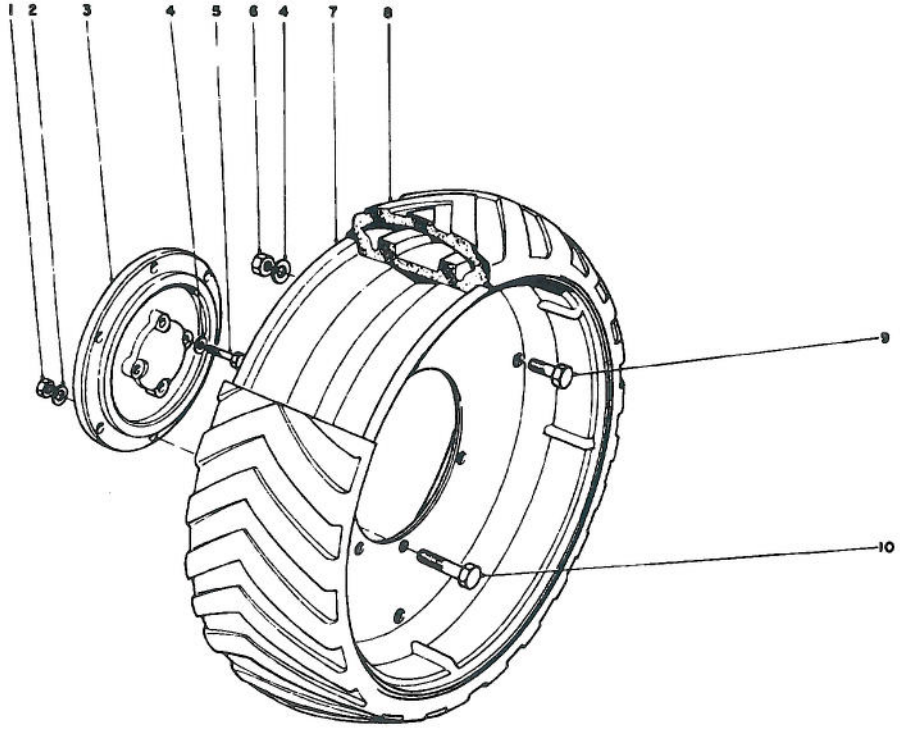

16" SEMI-PNEUMATIC WHEEL KIT NO. 01304 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3219-3	Nut	12
2	3254-6	Lockwasher	12
3	5-1468	Wheel Hub	2
4	3253-4	Lockwasher	16
5	5-1470	Capscrew	8

Ref. No.	Part No.	Description	No. Used
6	3217-6	Nut	8
7	12-9460	Disc Half	4
8	12-9390	Tire	2
9	322-2	Capscrew	8
10	3211-4	Capscrew	12