Form No. 3326-336

Parking Brake

ProLine Mid–Size Hydro Mower Attachment

Part No. 105–0898

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

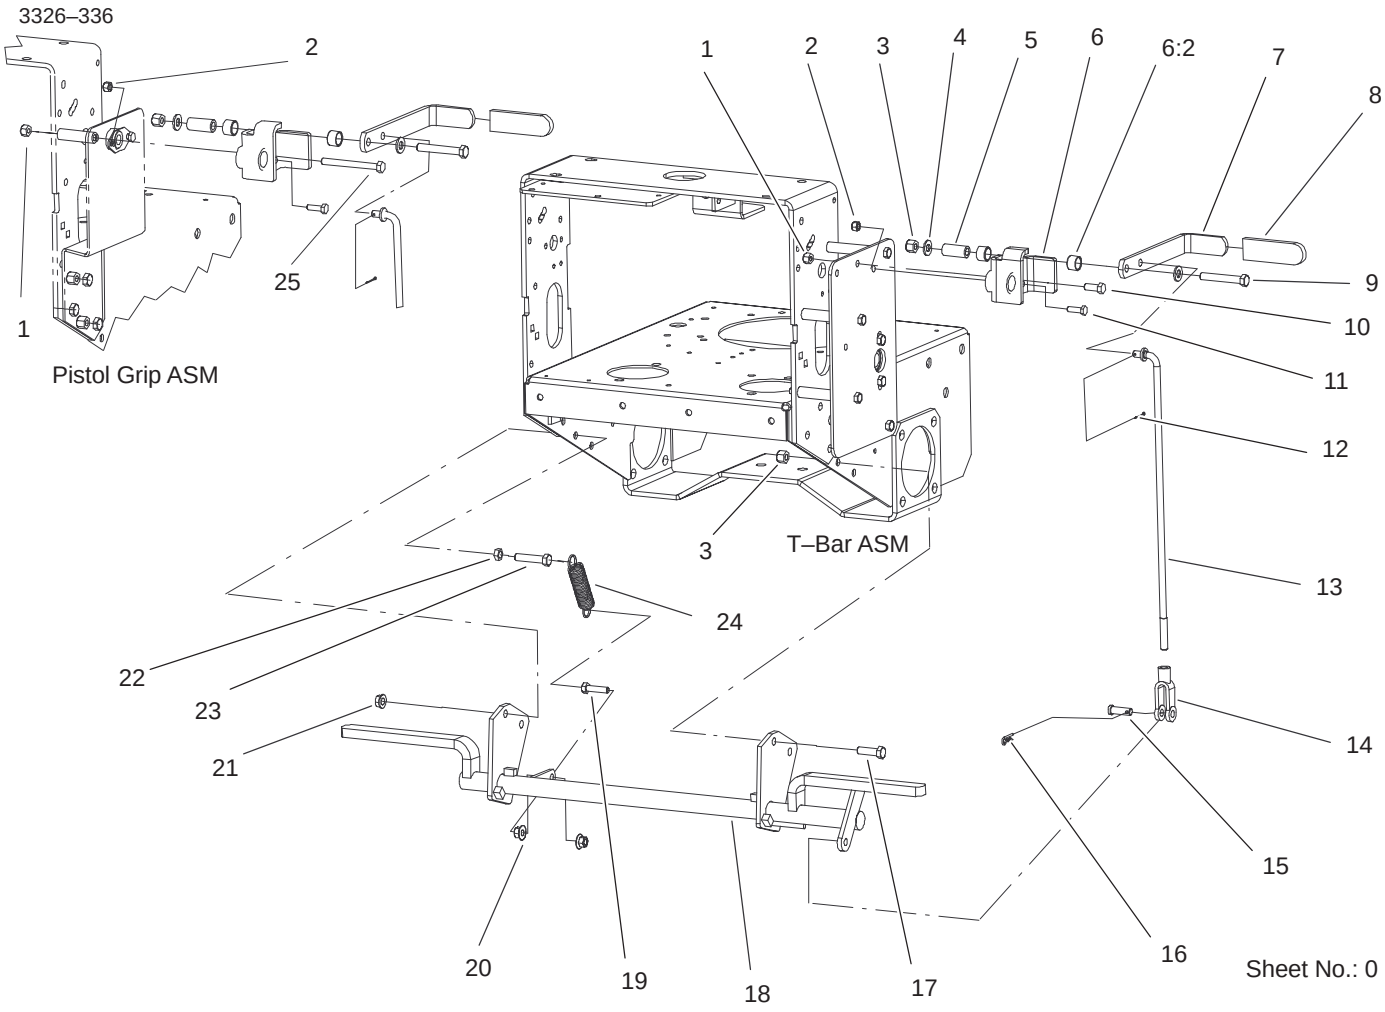

Parking Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	3296–29	1	Nut–Lock NI
2	3296–42	1	Nut–Lock, NI
3	3296–39	4	Nut–Lock, NI
4	3256–24	2	Washer–Flat
5	105–0897	1	Bushing–Pivot
6	105–2674	1	Bracket ASM
6:2	1–413347	2	Sleeve–Bushing
7	105–0881–01	1	Handle–Parking Brake
8	1–303020	1	Grip,Lever
9	323–12	1	Screw–HH
10	322–4	1	Screw–HH
11	321–5	1	Screw–HH
12	3272–4	1	Pin–Cotter
13	105–0880	1	Rod–Link
14	1–633131	1	Yoke–Linkage, Brake
15	1–808285	1	Pin–Clevis
16	3290–307	1	Pin–Hair
17	323–7	3	Screw–HH
18	105–0865–01	1	Brake ASM
19	322–6	1	Screw–HH
20	32128–20	2	Nut–HF
21	3290–357	1	Nut–Flange, Lock
22	3218–3	1	Nut–Jam
23	323–9	1	Screw–HH
24	1–323161	1	Spring–Idler
25	322–20	1	Screw–HH

Ref. No.	Part No.	Qty.	Description