Form No. 3326–418

# Tri–Roller Kit

## For Greensmaster® 3000 Series

**Model No. 04495—210000001 and Up**

# Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

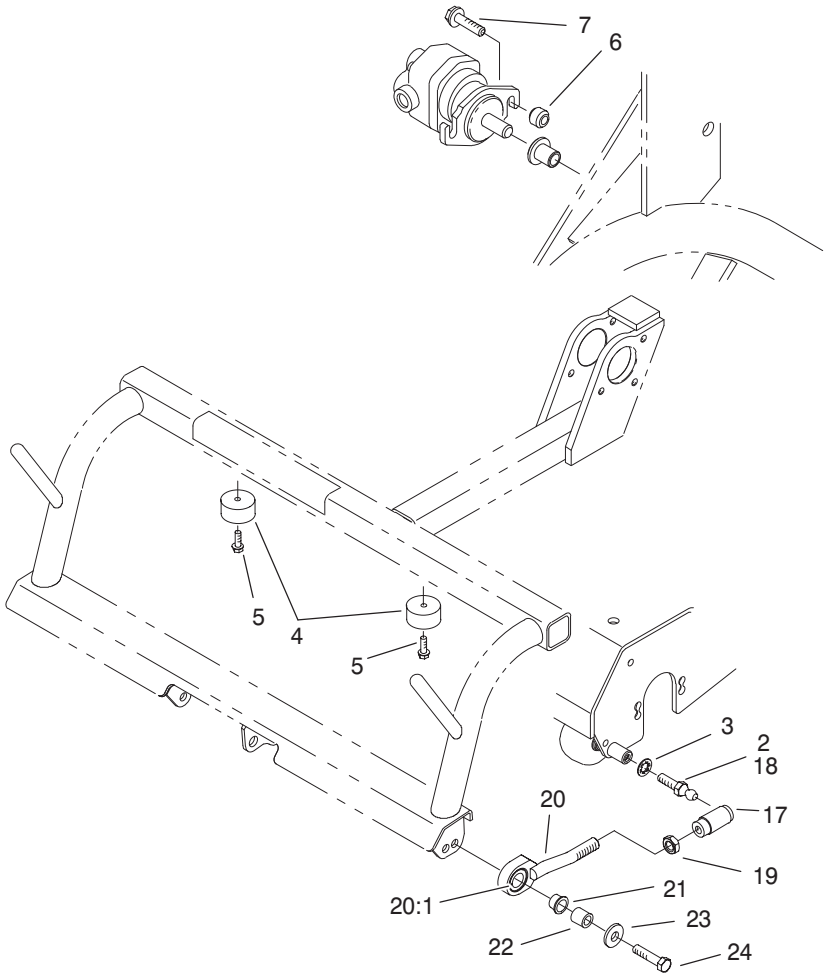


Sheet No.:0


# Tri–Roller Mounting Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| ☆1 | | 3 | Tri–Roller ASM |
| †2 | 94–2958 | 6 | Stud–Ball |
| 3 | 3254–6 | 6 | Washer–Lock, Internal |
| 4 | 94–4548 | 6 | Bumper–Recessed |
| 5 | 32144–44 | 6 | Screw–HWH |
| †6 | 61–2370 | 1 | Spacer |
| †7 | 32144–102 | 1 | Screw–HWH |
| *†8 | 3256–24 | 2 | Washer–Flat |
| *†9 | 95–1642–01 | 1 | Weight–Counter |
| 17 | 54–7460 | 6 | Ball Joint |
| 18 | 54–7430 | 6 | Stud–Ball |
| 19 | 3220–5 | 6 | Nut–Jam |
| 20 | 18–3049 | 6 | Pull Link ASM |
| 20:1 | 95–0532 | 1 | Rubber Bushing ASM |
| 21 | 256–292 | 6 | Bushing–Flange, NI |
| 22 | 75–5270 | 6 | Spacer–Knob, Seat |
| 23 | 3256–4 | 6 | Washer–Flat |
| 24 | 3211–6 | 6 | Screw–HH |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

☆ Not serviced
* Not illustrated

† Greensmaster 3050 & 3100

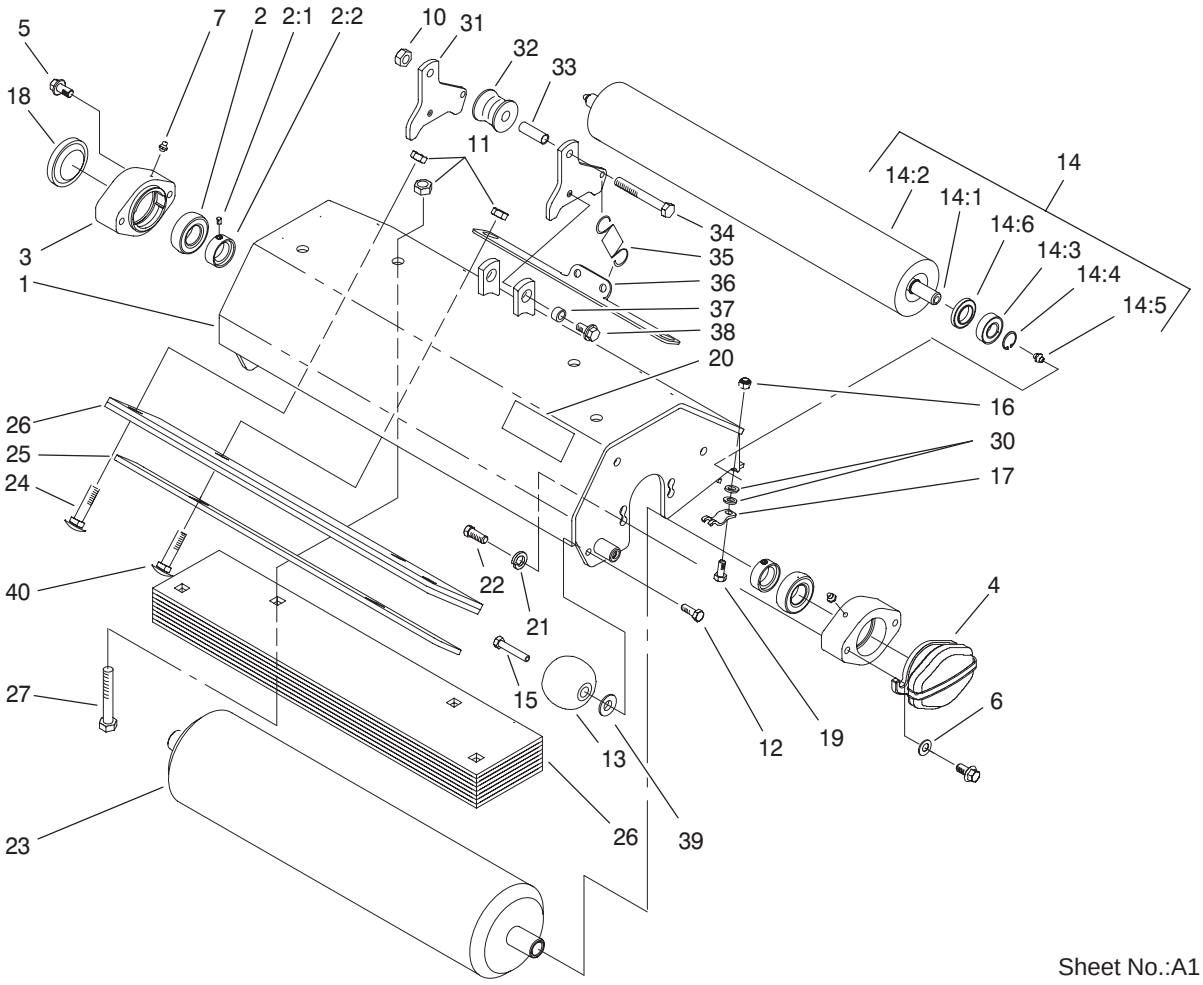


Sheet No.:A1

# Tri–Roller Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100–6443–01 | 1 | Frame ASM |
| 2 | 94–3405 | 2 | Bearing–Ball |
| 2:1 | 3245–35 | 1 | Screw–HS |
| 2:2 | 251–77 | 1 | Bearing–Lockcollar |
| 3 | 95–7148 | 2 | Housing–Bearing |
| 4 | 95–1642–01 | 1 | Weight–Counter |
| 5 | 93–2569 | 4 | Screw–HHF |
| 6 | 3256–24 | 2 | Washer–Flat |
| 7 | 302–5 | 2 | Fitting–Grease |
| 10 | 3296–39 | 1 | Nut–Lock, NI |
| 11 | 33026–00 | 6 | Nut–Lock |
| 12 | 323–5 | 2 | Screw–HH |
| 13 | 99–4210 | 2 | Roller–Anti Scalp |
| 14 | 99–1615 | 1 | Rear Roller ASM |
| 14:1 | 93–2466 | 1 | Shaft–Roller |
| 14:2 | 99–1616 | 1 | Rear Roller Tube ASM |
| 14:3 | 93–2559 | 2 | Bearing–Ball |
| 14:4 | 93–2525 | 2 | Ring–Retaining |
| 14:5 | 302–5 | 2 | Fitting–Grease |
| 14:6 | 98–2194 | 2 | Sleeve–Grease |
| 15 | 99–4209 | 2 | Shaft–Roller |
| 16 | 33024–00 | 2 | Nut–Lock |
| 17 | 99–8168 | 2 | Collar–HOC |
| 18 | 2410–30 | 1 | Cap–Plastic |
| 19 | 33114–025 | 2 | Screw–HH |
| 20 | 67–1300 | 1 | Decal–Toro |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 21 | 48–9590 | 4 | Washer–Lock |
| 22 | 33115–025 | 4 | Screw–HH |
| 23 | 99–1614 | 1 | Roller ASM |
| 24 | 33126–040 | 2 | Screw–CARR |
| 25 | 99–1637–01 | 1 | Plate–Scraper |
| 26 | 99–1620–01 | 9 | Plate–Weight, Long |
| 27 | 33116–070 | 2 | Screw–HH |
| 30 | 3256–74 | 4 | Washer–Flat |
| 31 | 100–6446–01 | 2 | Plate–Pivot |
| 32 | 100–6449 | 1 | Roller–Lift |
| 33 | 100–6448 | 1 | Spacer–Roller |
| 34 | 323–12 | 1 | Screw–HH |
| 35 | 88–6330 | 1 | Spring–Extension |
| 36 | 100–9818–01 | 1 | Plate–Spring Mount |
| 37 | 100–6447 | 2 | Tube–Spacer |
| 38 | 3234–1 | 2 | Screw–HHF |
| 39 | 3256–45 | 2 | Washer–Flat |
| 40 | 33126–045 | 2 | Screw–CARR |


TORO®