Form No. 3326-968

Debris Blower 600

Model No.44536–220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved


Contents

Description	Page
Housing and Impeller Assembly	3
Drive Assembly	4
Chute and Roller Assembly	5

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

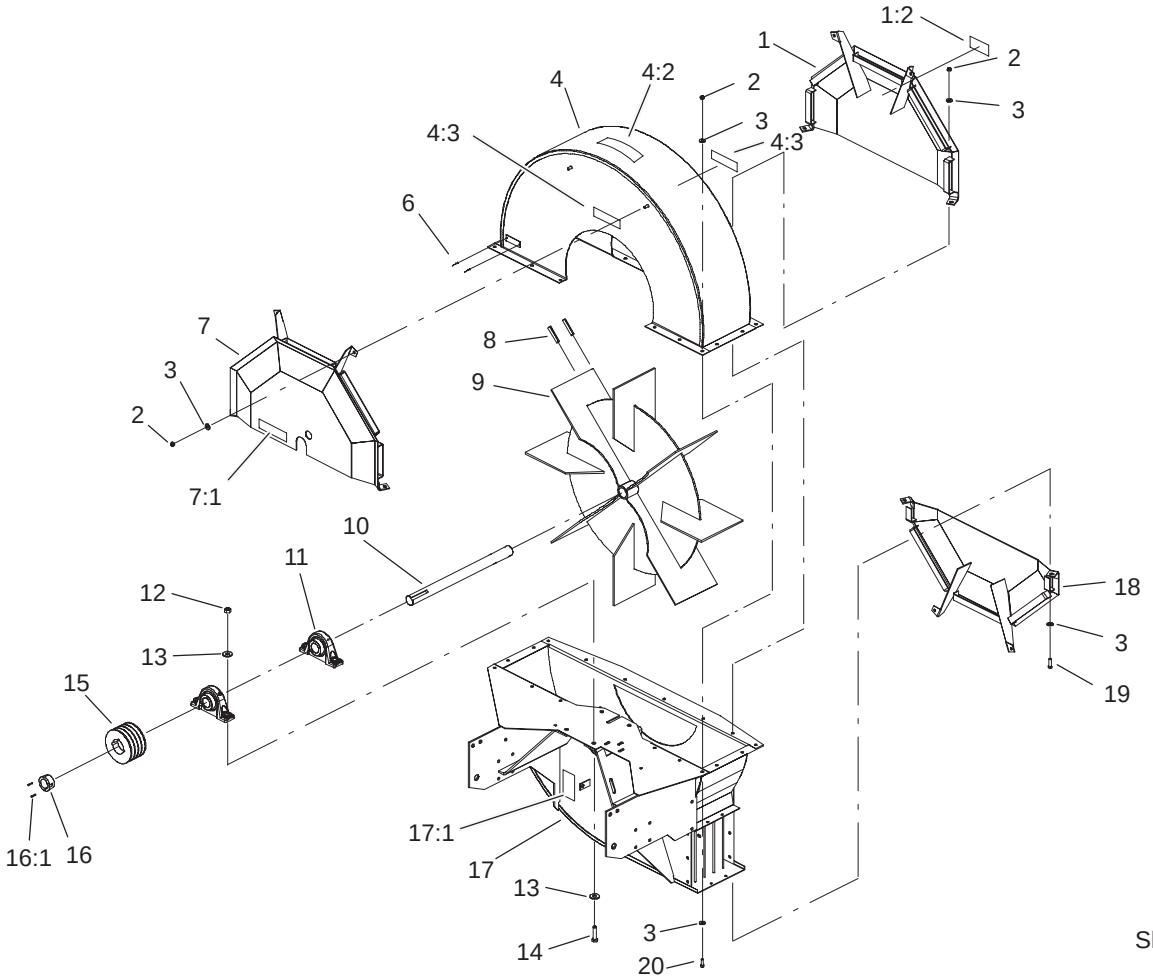


Sheet No.:2

Housing and Impeller Assembly

Ref. No.	Part No.	Qty.	Description
1	105–0689	1	Shield–Fan
1:2	67–1300	1	Decal–Toro
2	3296–29	23	Nut–Lock, NI
3	3256–23	40	Washer–Flat
4	105–0687	1	Blower Top
4:2	98–3110	1	Decal–Caution, Ce
4:3	105–0709	2	Decal–Warning
6	923786	2	Rivet–Pop
7	105–0713	1	Shield–Fan, Front
7:1	105–0709	1	Decal–Warning
8	LDB14600	2	Pin–Spiral
9	LDB11300–01	1	Impeller
10	LDB12000	1	Shaft–Impeller
11	105–0621	2	Bearing–Block, Pillow
12	3296–23	4	Nut–Lock, NI
13	3256–6	8	Washer–Flat
14	325–9	4	Screw–HH
15	LDB12300	1	Pulley–Taper, Lock
16	CSP10600	1	Bushing–Taper, Lock
17	105–0712	1	Frame ASM
17:1	105–0709	2	Decal–Warning
18	LDB11400–01	1	Shield–Fan, Lower
19	322–6	4	Screw–HH
20	322–5	13	Screw–HH

Ref. No.	Part No.	Qty.	Description

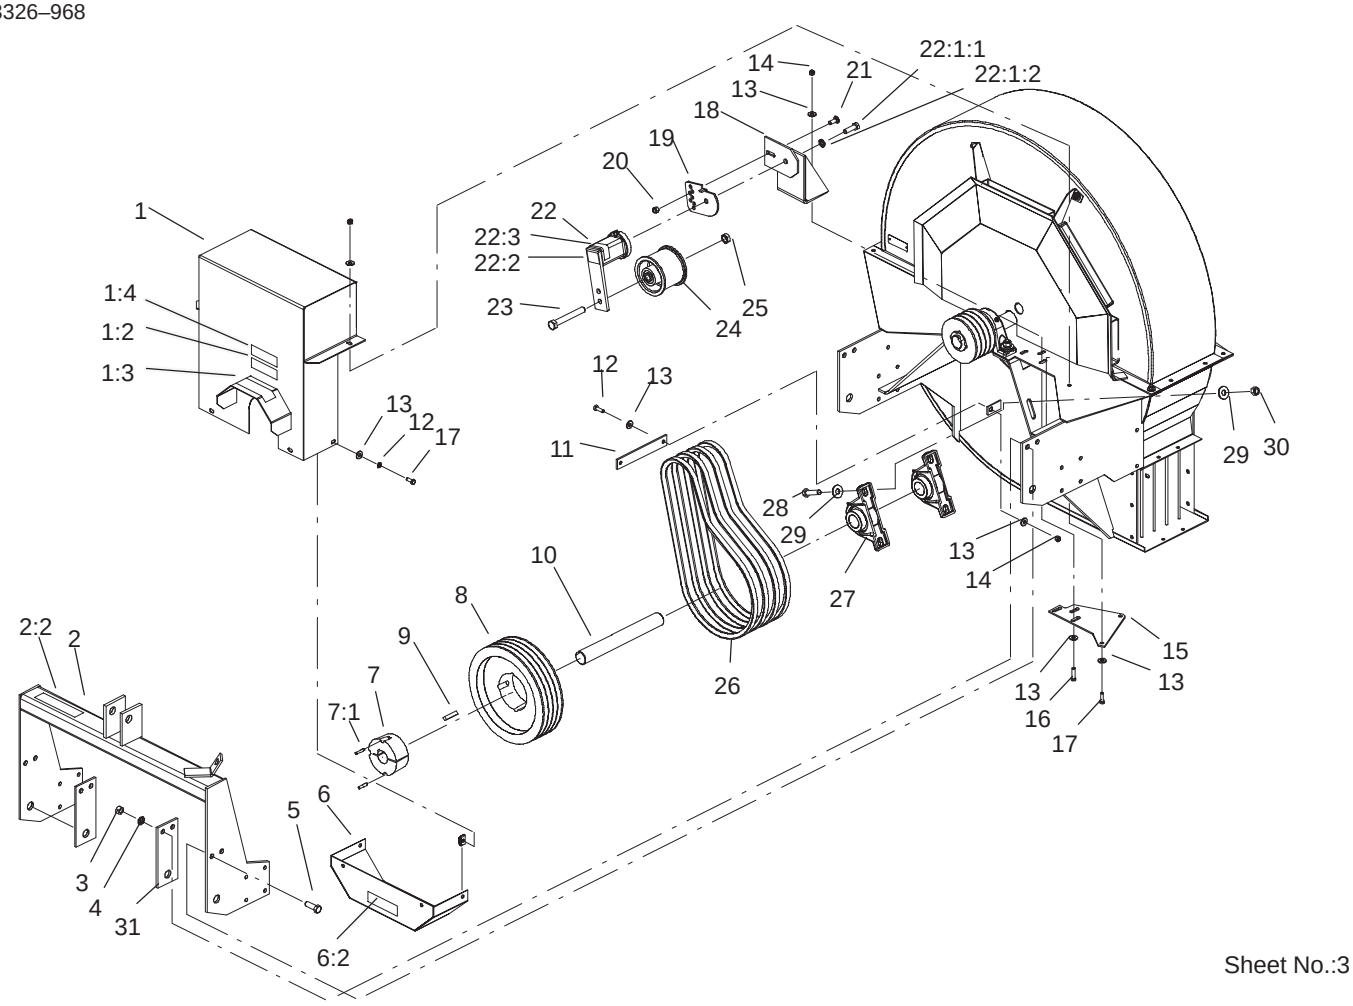


Sheet No.:3

Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	105–0685	1	Shield–Belt
1:2	93–7814	1	Decal–Danger
1:3	105–0628	1	Decal–Caution, U–Joint
1:4	105–0627	1	Decal–Caution
2	105–0714	1	Hitch ASM
2:2	105–0707	1	Decal–Ansi
3	3296–23	4	Nut–Lock, NI
4	3256–6	4	Washer–Flat
5	325–6	4	Screw–HH
6	105–0686	1	Shield–Lower
6:2	93–7814	1	Decal–Danger
7	LDB13400	1	Bushing–Taper, Lock
8	LDB12400	1	Pulley–Taper, Lock
9	41–004–5241	1	Key
10	LDB12100	1	Shaft–Input
11	LDB15700–01	1	Stabilizer–Shield
12	3253–4	4	Washer–Lock
13	3256–23	10	Washer–Flat
14	3296–29	6	Nut–Lock, NI
15	LDB14200–01	1	Support–Deck
16	322–6	3	Screw–HH
17	322–5	6	Screw–HH
18	LDB13200–01	1	Mount–Idler
19	105–4787–01	1	Stabilizer–Tensioner
20	3296–39	1	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description
21	3231–2	1	Screw–CARR
22	105–0667	1	Tensioner–Idler
22:1		1	Tensioner–Idler
22:1:1	33116–040	1	Screw–HH
22:1:2	3253–7	1	Washer–Lock
22:2	105–0668	1	Decal–Align
22:3	105–0669	1	Decal–Angle
23	3214–15	1	Screw–HH
24	105–4821	1	Idler–Pulley
25	3220–6	1	Nut–Jam
26	LDB13000	4	V–Belt
27	105–0621	2	Bearing–Block, Pillow
28	325–9	4	Screw–HH
29	3256–6	8	Washer–Flat
30	3296–23	4	Nut–Lock, NI
31	LDB10300–01	1	Stiffener–Hitch

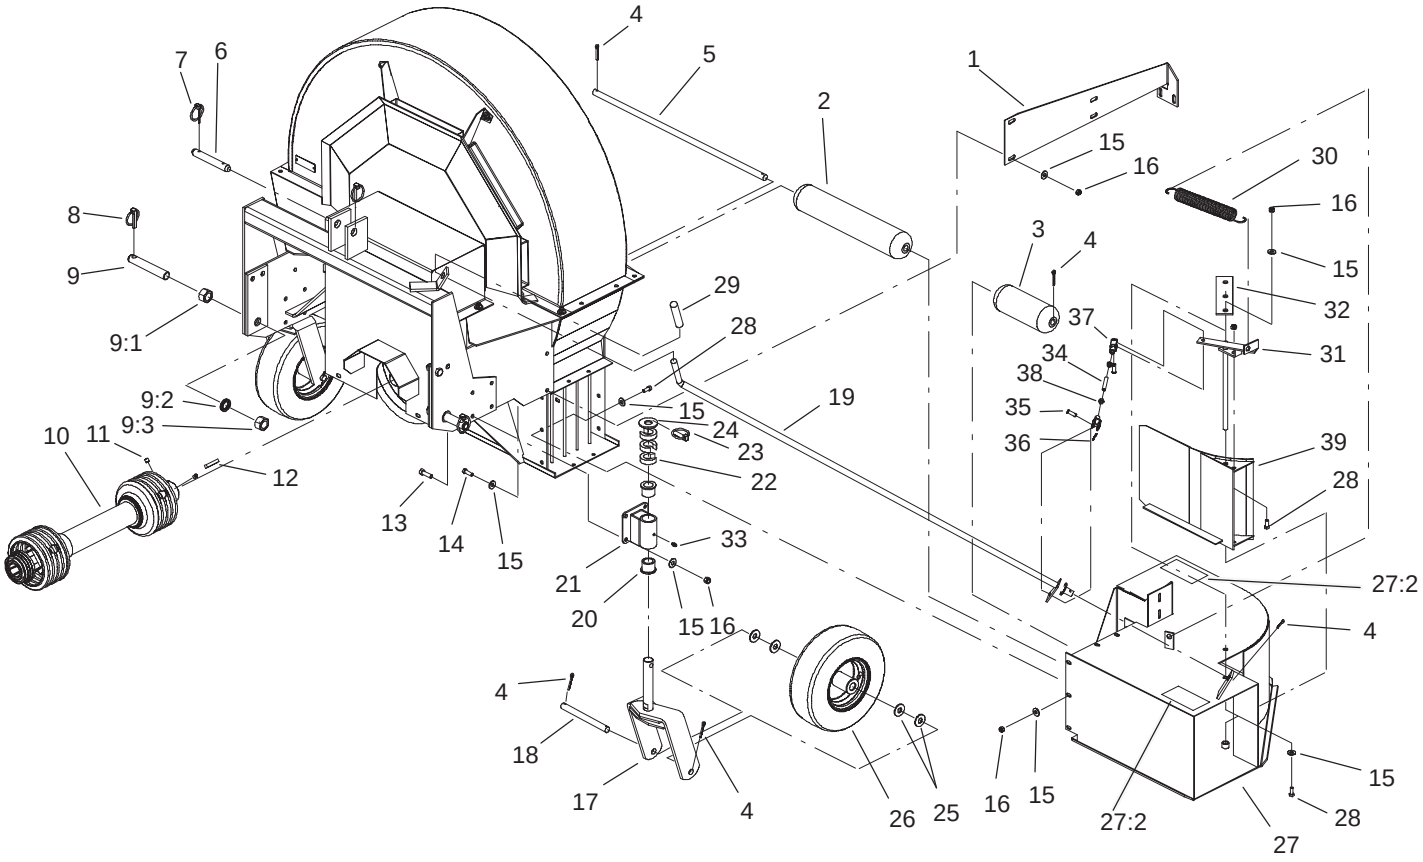

Sheet No.:4

Chute and Roller Assembly

Ref. No.	Part No.	Qty.	Description
1	LDB11600–01	1	Braqce–Discharge, Back
2	105–4823	1	Roller–Turf
3	LDB13300	1	Roller–Turf, Short
4	3272–22	7	Pin–Cotter
5	LDB13500	1	Axle–Roller
6	92–1233	1	Pin–Clevis
7	92–1298	2	Pin–Lynch
8	283–71	2	Pin–Lynch
9	01–252–0010	2	Lift Arm Pin Adjustment ASM
9:1	3219–18	1	Nut–Hex
9:2	3253–28	1	Washer–Lock/Sp
9:3	3219–8	1	Nut–Hex
10	LDB22900	1	PTO Shaft
11	3247–2	2	Screw–Set,HS
12	41–004–5241	1	Key
13	322–6	8	Screw–HH
14	322–5	6	Screw–HH
15	3256–23	44	Washer–Flat
16	3296–29	26	Nut–Lock, NI
17	LDB10900–01	2	Caster–Fork
18	LDB11000	2	Axle–Wheel, Caster
19	LDB10700–01	1	Handle–Diverter
20	LDB11103	4	Bushing–Flange
21	LDB11100–01	2	Mount–Caster

Ref. No.	Part No.	Qty.	Description
22	LDB12600	6	Spacer–Sloted
23	283–71	2	Pin–Lynch
24	3256–62	2	Washer–Flat
25	3256–7	8	Washer–Flat
26	LDB12500	2	Castor Wheel ASM
27	105–0688	1	Discharge–Chute
27:2	105–0708	2	Decal–Danger
28	322–3	12	Screw–HH
29	PT503–00	1	Cover–Handle
30	105–4825	1	Spring–Ext
31	LDB10600–01	1	Pivot–Diverter
32	LDB10800–01	1	Plate–Top, Pin
33	302–58	2	Fitting–Grease
34	LDB14400	1	Rod–Threaded
35	283–1	2	Pin–Yoke
36	3272–10	2	Pin–Cotter
37	282–2	2	Yoke
38	3220–2	2	Nut
39	LDB11800–01	1	Gate ASM

Maintenance Record

Date								

Maintenance Record

Date								


TORO®