Form No. 3326-987

Remote Hydraulic Control Kit

Workman® 3000 and 4000

Model No. 07415

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved


Contents

Description	Page
Hydraulic Plumbing Assembly	3
Valve Assembly 43–1710–01	4
Control Lever and Linkage Assembly	5

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

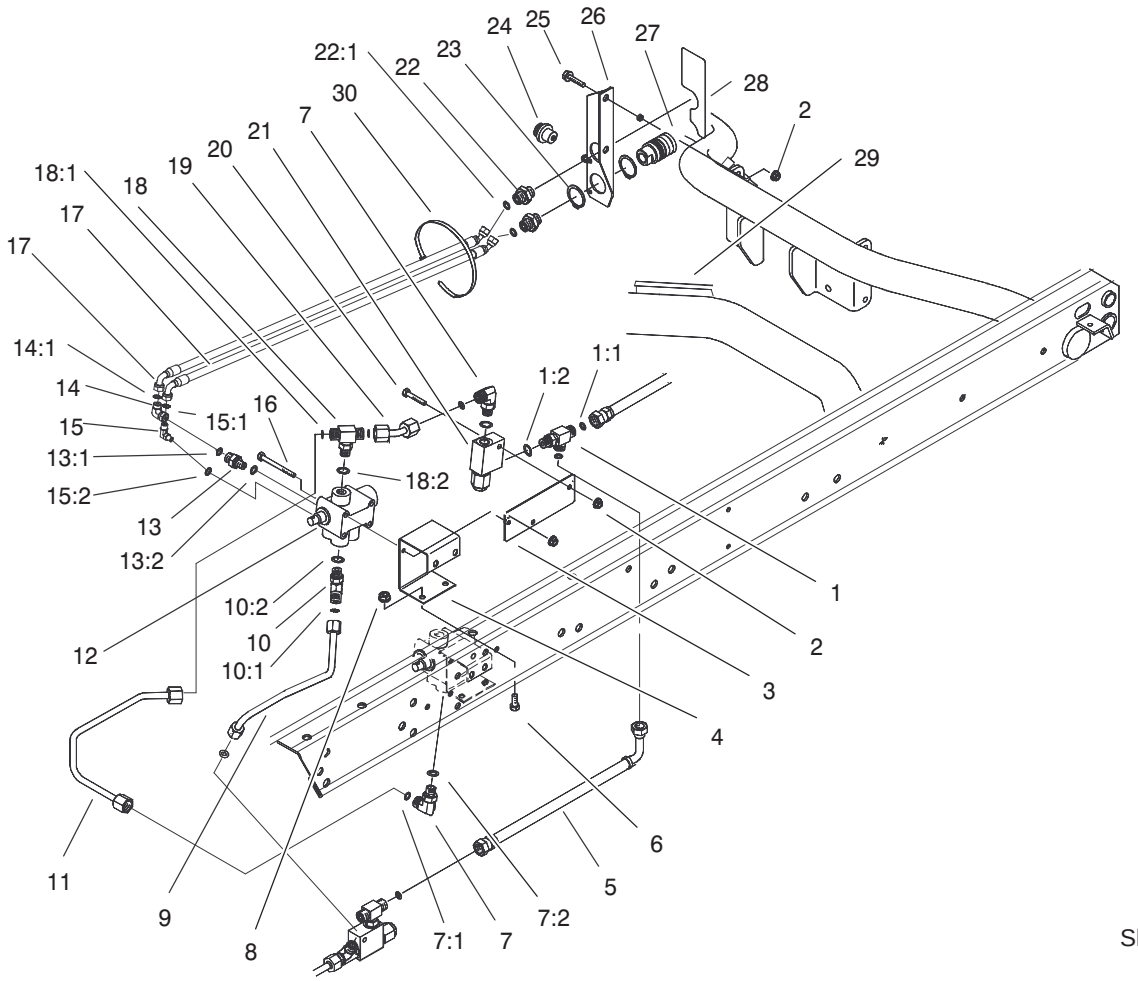


Sheet No.:2

Hydraulic Plumbing Assembly

Ref. No.	Part No.	Qty.	Description
1	340–86	1	Fitting–Tee, HYD
1:1	237–22	2	O–Ring
1:2	237–42	1	O–Ring
2	32128–33	5	Nut–HF
3	92–2623–03	1	Plate–Valve, Relief
4	87–4620–03	1	Bracket–Valve, Aux
5	92–2624	1	Hose ASM
6	322–3	4	Screw–HH
7	340–77	2	Fitting–HYD, 90°
7:1	237–22	1	O–Ring
7:2	237–42	1	O–Ring
8	32128–20	4	Nut–HF
9	92–2622	1	Hardline–Rel/Remote
10	340–87	1	Fitting–HYD, 45°
10:1	237–22	1	O–Ring
10:2	237–42	1	O–Ring
11	92–2621	1	Hardline–Dp Vl/Remt
12	43–1710–01	1	Valve ASM
13	340–88	1	Adapter
13:1	237–22	1	O–Ring
13:2	237–78	1	O–Ring
14	340–159	1	Fitting–HYD, 90°
14:1	237–22	2	O–Ring
15	340–97	1	Fitting–HYD, 90°
15:1	237–22	1	O–Ring
15:2	237–78	1	O–Ring

Ref. No.	Part No.	Qty.	Description
16	321–14	2	Screw–HH
17	92–2606	2	Hose ASM
18	340–94	1	Adapter
18:1	237–22	2	O–Ring
18:2	237–42	1	O–Ring
19	92–2620	1	Hardline–Rel / Remote
20	321–9	1	Screw–HH
21	92–2625	1	Valve–Relief
22	340–12	2	Fitting–Straight
22:1	237–30	1	O–Ring
23	92–2601	4	Ring–Retaining
24	92–2603	2	Plug–Dust
25	3234–21	2	Screw–Cap
26	92–2604–03	1	Bracket–Coupler
27	92–2602	2	Coupling–HYD, Female
28	92–2610	1	Decal–Couplers, Quick
29	92–2611	1	Decal–Caution

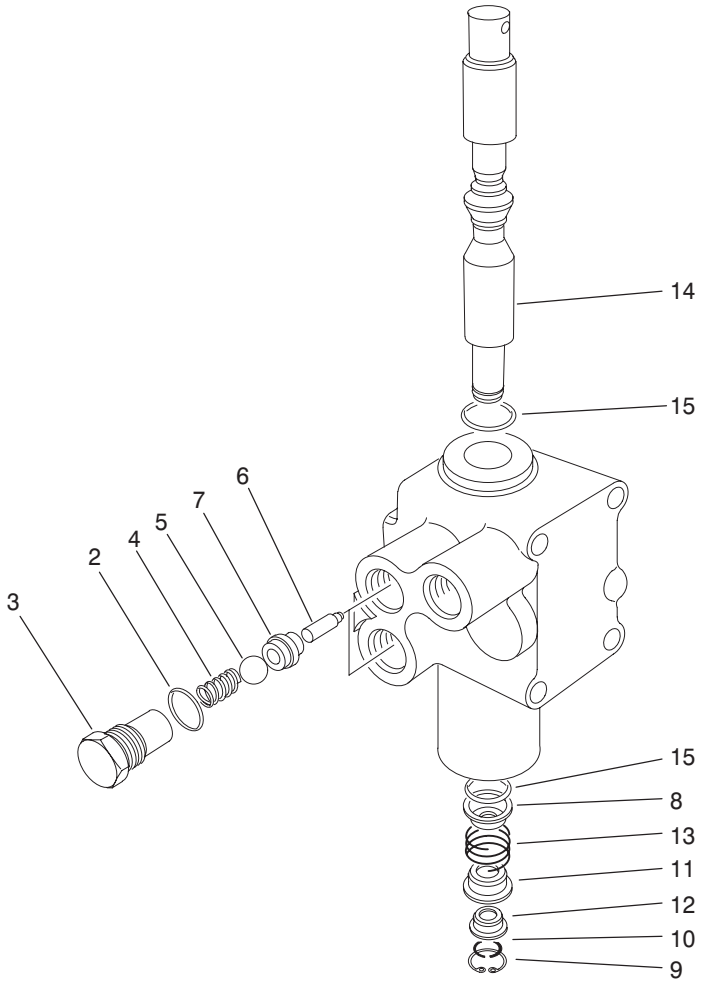


Sheet No.:A1
T–0428

Valve Assembly 43–1710–01

Ref. No.	Part No.	Qty.	Description
2	237–42	2	O–Ring
3	22–8330	2	Plug
4	22–8340	2	Spring
5	22–8350	2	Ball
6	22–8360	2	Pin
7	22–8370	2	Seat–Valve
8	22–8380	1	Retainer
9	22–8490	1	Ring–Snap
10	22–8480	1	Ring–Snap
11	22–8390	1	Retainer
12	22–8400	1	Spacer
13	22–8410	1	Spring
14	22–8420	1	Spool
15	22–8500	2	O–Ring

Ref. No.	Part No.	Qty.	Description

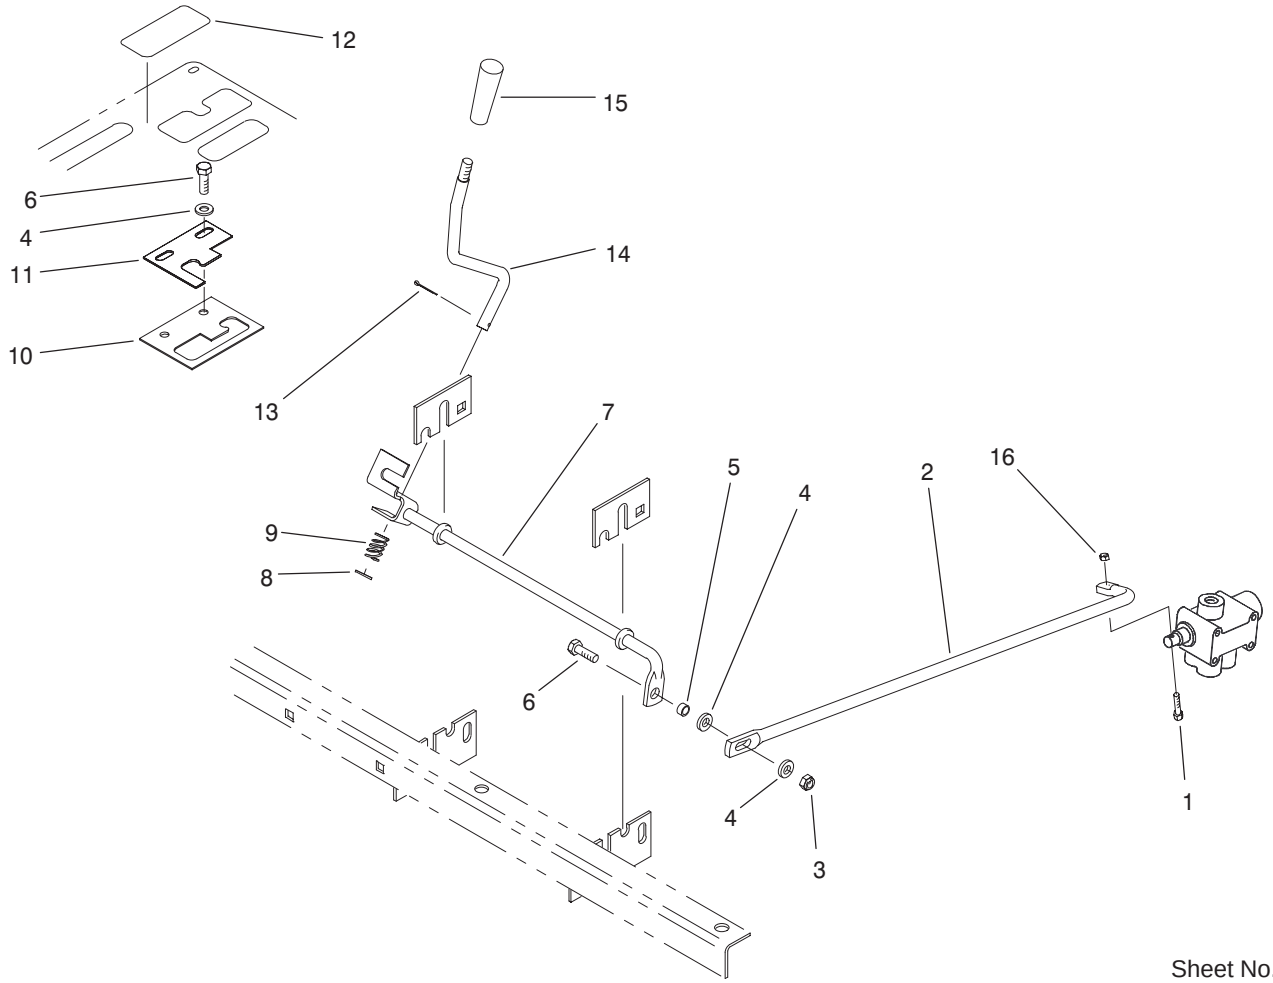

Sheet No.:3

Control Lever and Linkage Assembly

Ref. No.	Part No.	Qty.	Description
1	87–5150	1	Bolt
2	87–4650	1	Rod–Connecting, Auxiliary
3	3296–29	1	Nut–Lock, NI
4	3256–23	4	Washer–Flat
5	87–5080	1	Spacer–Rod, Connecting
6	322–5	3	Screw–HH
7	87–4610	1	Rod–Auxiliary
8	3256–25	1	Washer–Flat
9	66–4850	1	Spring–Compression
10	87–4670–03	1	Plate–Detent
11	87–4680–03	1	Plate–Detent, Upper
12	92–2609	1	Decal–Hydraulics, Remote
13	3272–7	1	Pin–Cotter
14	87–4580	1	Rod–Lever, Auxiliary
15	233–39	1	Knob–Control
16	87–5140	1	Nut–Lock

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

Maintenance Record

Date								


TORO®