Form No. 3327–164

Super Recycler®

Walk Power Lawn Mower

Model No. 20036—220000001 and Up
Model No. 20037—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved


Contents

Description	Page
Housing and Wheel Assembly	3
Gear Case Assembly No. 104–7674	4
Gear Case and Wheel Assembly	5
Engine Assembly	6
Handle and Control Assembly	7
Rear Bag Discharge Chute Assembly (Model 20037 only)	8
Rear Bagger Assembly (Model 20037 only)	9
Cylinder Assembly Engine Briggs and Stratton Model 124K02–0110–B1	10
Crankshaft Assembly Engine Briggs and Stratton Model 124K02–0110–B1	11
Crankcase Assembly Engine Briggs and Stratton Model 124K02–0110–B1	12
Carburetor Assembly Engine Briggs and Stratton Model 124K02–0110–B1	13
Air Cleaner Assembly Engine Briggs and Stratton Model 124K02–0110–B1	14
Governor Assembly Engine Briggs and Stratton Model 124K02–0110–B1	15
Muffler and Fuel Tank Assembly Engine Briggs and Stratton Model 124K02–0110–B1	16
Blower Housing Assembly Engine Briggs and Stratton Model 124K02–0110–B1	17
Starter Assembly Engine Briggs and Stratton Model 124K02–0110–B1	18
Gasket Assembly Engine Briggs and Stratton Model 124K02–0110–B1	19
Carburetor Overhaul Kit Assembly Engine Briggs and Stratton Model 124K02–0110–B1	20
Cylinder Assembly Engine Briggs and Stratton Model 123K02–0114–E1	21
Crankshaft Assembly Engine Briggs and Stratton Model 123K02–0114–E1	22
Crankcase Assembly Engine Briggs and Stratton Model 123K02–0114–E1	23
Carburetor Assembly Engine Briggs and Stratton Model 123K02–0114–E1	24
Air Cleaner Assembly Engine Briggs and Stratton Model 123K02–0114–E1	25
Governor Assembly Engine Briggs and Stratton Model 123K02–0114–E1	26
Muffler and Fuel Tank Assembly Engine Briggs and Stratton Model 123K02–0114–E1	27
Blower Housing Assembly Engine Briggs and Stratton Model 123K02–0114–E1	28
Starter Assembly Engine Briggs and Stratton Model 123K02–0114–E1	29
Gasket Assembly Engine Briggs and Stratton Model 123K02–0114–E1	30
Carburetor Overhaul Kit Assembly Engine Briggs and Stratton Model 123K02–0114–E1	31

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

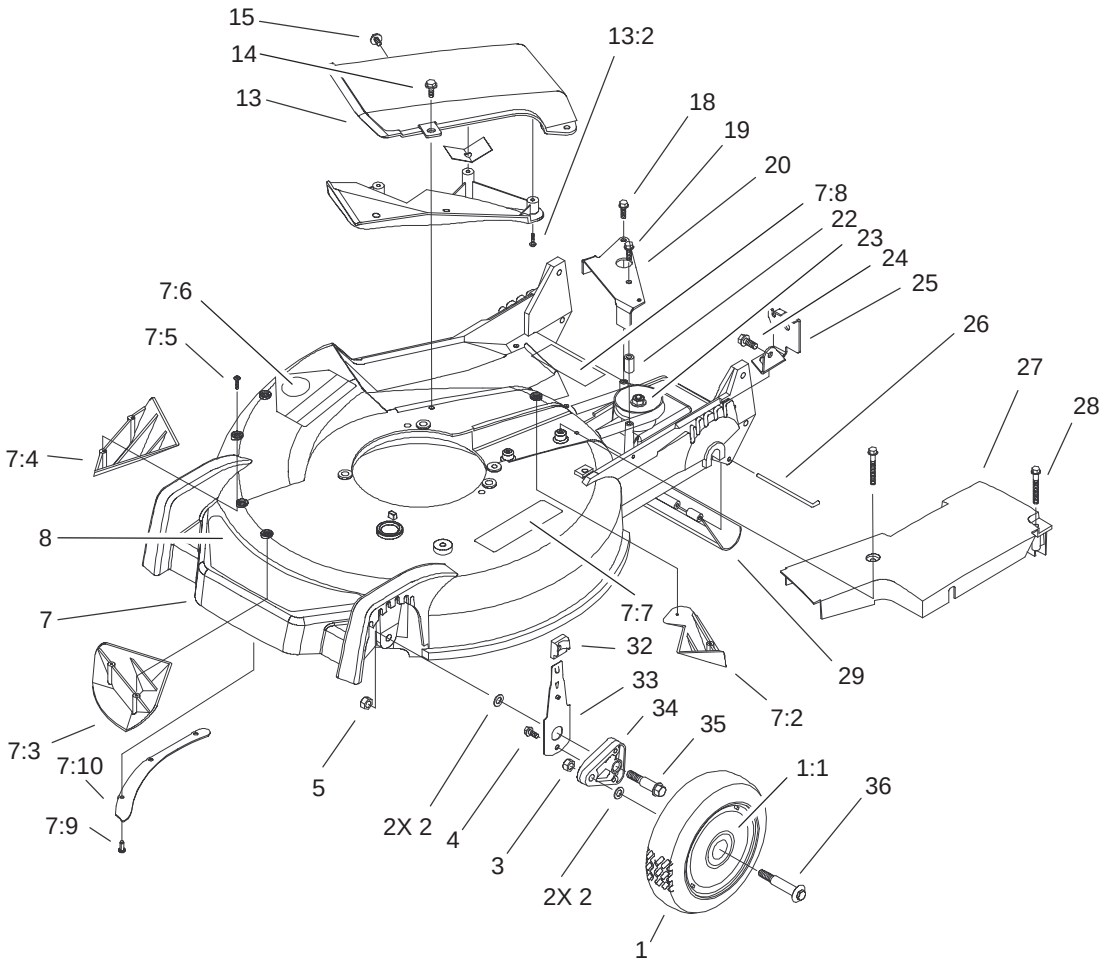


Sheet No.:2

Housing and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	98–7130	2	Wheel ASM
1:1	27–6250	2	Bushing
2	40–1940	4	Washer
3	603773	2	Nut
4	32144–85	2	Screw–HH
5	3296–6	2	Nut–Lock, NI
7	105–1307	1	Housing–Service
7:2	92–1750	1	Kicker–Rear
7:3	92–1720	1	Kicker–Front
7:4	92–1730	1	Kicker–RH
7:5	32144–111	6	Screw–PPH
7:6	43–8480	1	Decal–Danger
7:7	93–0248	1	Decal – Warning
7:8	99–6018	1	Decal – Warning
7:9	63–8590	3	Screw
7:10	105–1316–03	1	Sheet–Lip,Sr
8	99–6010	1	Decal – Deck
13	100–8775	1	Recycler Cover ASM (only on: 20036)
13:2	32144–111	5	Screw–PPH (only on: 20036)
14	46–6811	3	Screw–HWH (only on: 20036)
15	46–6810	1	Screw & Washer ASM (only on: 20036)
18	49–2040	1	Screw–Tapping


Ref. No.	Part No.	Qty.	Description
19	92–1616	1	Screw–HWHTF
20	99–1513–03	1	Bracket–Transmission Actuator
22	614673	1	Bushing–Plate, Actuator
23	104–7674	1	Gear Case ASM
24	32144–70	1	Screw–HH
25	99–1512–03	1	Bracket–Cable, Traction
26	33–3208	1	Rod–Shield
27	104–7906	1	Cover–Belt
28	37–7260	2	Screw–HH
29	44–0580	1	Shield–Trailing
32	25–7740	2	Knob–Arm
33	66–0541	2	Front Spring Arm ASM
34	66–0580	2	Arm–Pivot, Front
35	66–0560	2	Bolt–Shoulder
36	92–1057	2	Bolt–Shoulder

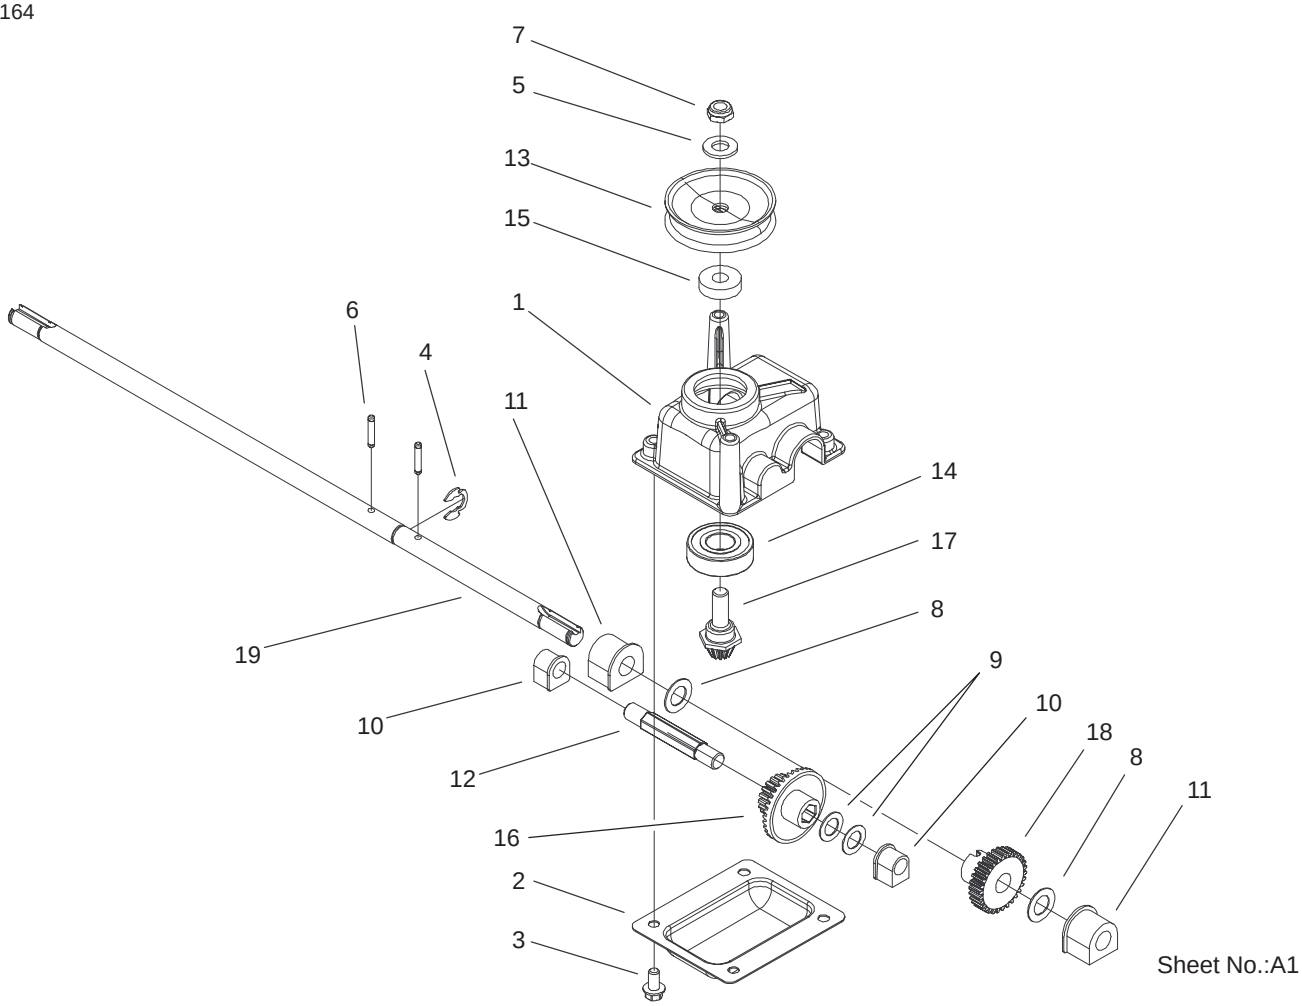

Gear Case Assembly No. 104–7674

Ref. No.	Part No.	Qty.	Description
1	104–7619	1	Case–Gear
2	614668–03	1	Cover–Case, Gear
3	32144–4	4	Screw–HWH
4	32151–68	1	Ring–Retaining
5	3256–24	1	Washer–Flat
6	3285–19	2	Pin–Groove
7	3296–5	1	Nut–Lock, NI
8	36–4780	2	Washer
9	36–4791	2	Washer–Thrust
10	60–8750	2	Bushing
11	60–8850	2	Bushing–Output
12	614696	1	Shaft–Intermediate
13	100–1176	2	Pulley–Half
14	100–1048	1	Bearing–Ball
15	62–6660	1	Spacer
16	104–1005	1	Gear–19t Spur, 37t Bevel
17	104–7667	1	Gear–Pinion, Bevel
18	104–1004	1	Gear–30t
19	104–7673	1	Shaft–Output

Ref. No.	Part No.	Qty.	Description

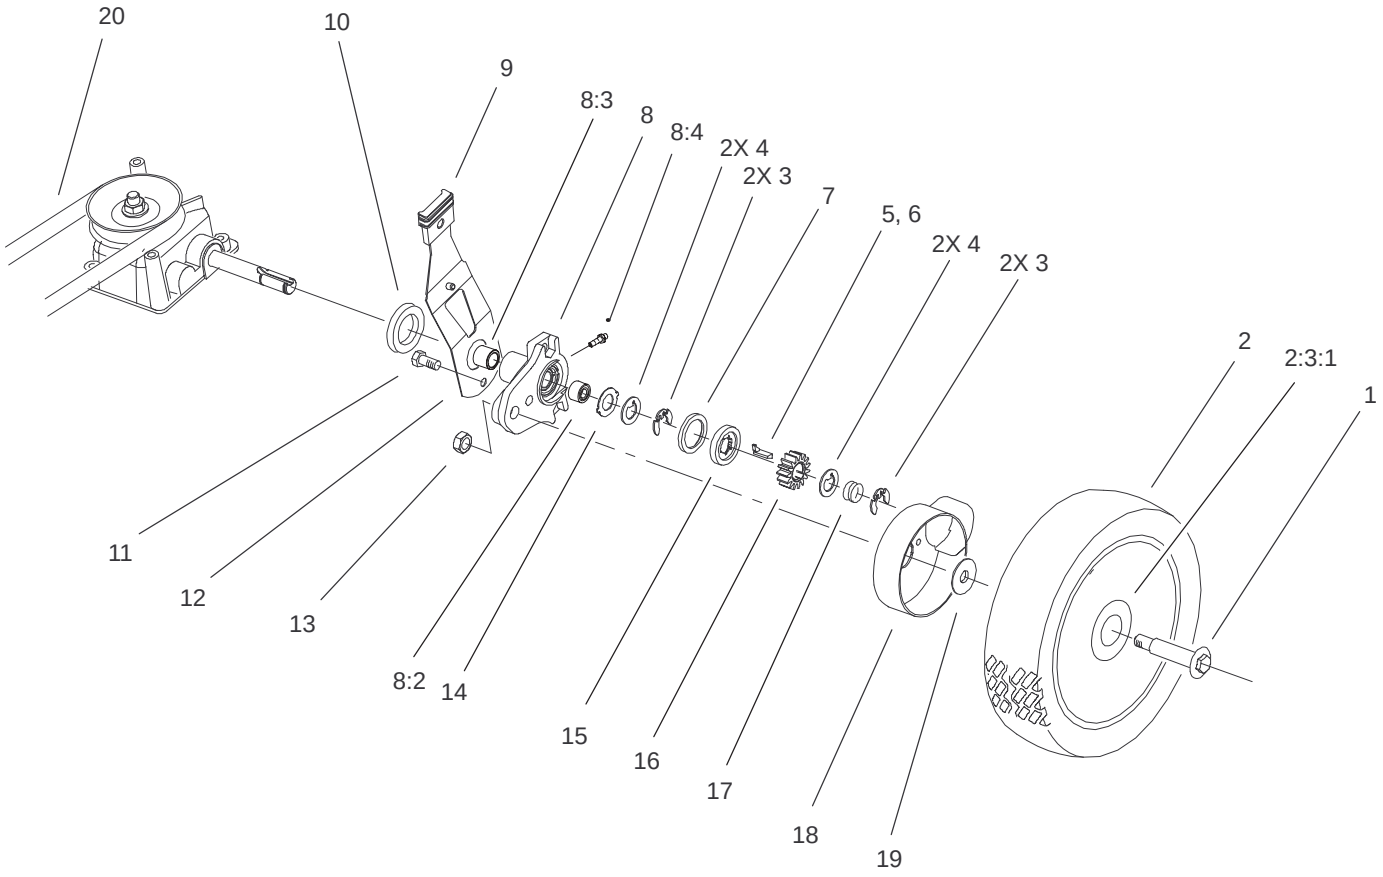


Sheet No.:3

Gear Case and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	92–1057	2	Bolt–Shoulder
2	98–7135	2	Wheel ASM
2:3:1	27–6250	2	Bushing
3	65–2720	4	Ring–Klip
4	65–4740	4	Washer–Thrust, Keyed
5	66–6040	1	Key–Rocking, RH
6	66–6050	1	Key–Rocking, LH
7	65–4710	2	Ring–Friction
8	100–8774	2	Pivot Arm ASM
8:2	47–2900	1	Bushing
8:3	70–9760	1	Bushing
8:4	302–56	1	Fitting–Zerk
9	25–7740	2	Knob–Arm
10	42–3520	2	Cap–End
11	32144–85	2	Screw–HH
12	63–8721	2	Spring Arm ASM
13	603773	2	Nut
14	65–4730	2	Washer–Arm, Pivot
15	65–4760	2	Washer–Clutch
16	65–4750	2	Gear–Pinion
17	65–4720	2	Spring–Compression
18	74–1660	2	Cover–Wheel
19	74–1671	2	Spacer–Cover, Wheel
20	91–2258	1	V–Belt

Ref. No.	Part No.	Qty.	Description

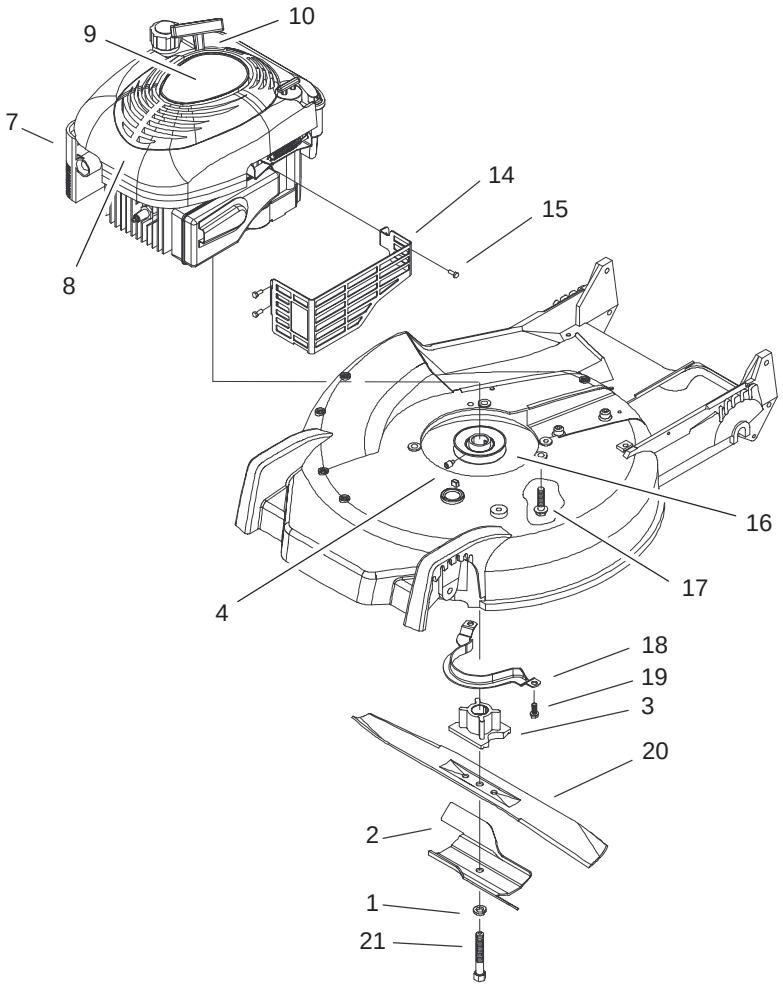


Sheet No.:4

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	3253–22	1	Washer–Lock
2	94–1608–03	1	Accelerator–Blade
3	104–1007	1	Retainer–Blade
4	104–0214	1	Screw–Set
☆7		1	Engine–Quantum 6.5 Briggs & Stratton Model 124k02–0110–B1 Or
☆7		1	Engine–Quantum 6.5 Briggs & Stratton Model 123k02–0114–E1
8	98–3206	1	Decal–Toro Logo
9	105–8570	1	Decal–Recoil
10	2210–316	1	Stop–Rope
14	104–7577–03	1	Shield–Muffler
15	32144–1	3	Screw–Taptite
16	95–1878	1	Pulley
17	32144–102	3	Screw–HWH
18	66–0570–03	1	Bracket–Guide, Belt
19	32144–70	2	Screw–HH
20	93–4106–03	1	Blade–Recycler
21	95–1748	1	Screw–Blade

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

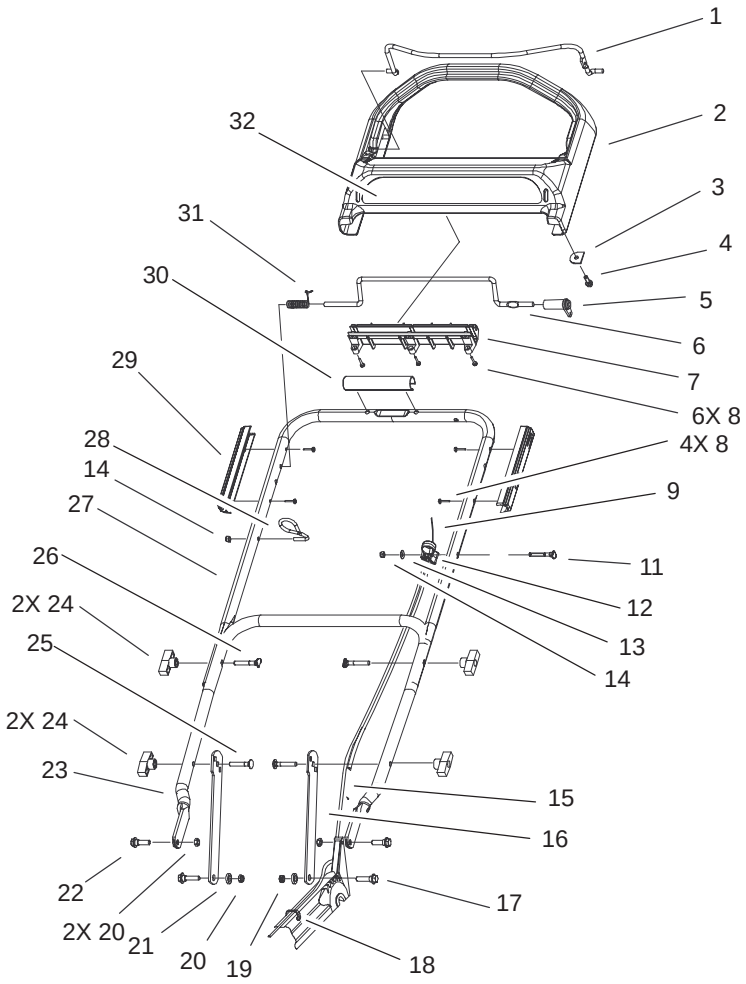


Sheet No.:5

Handle and Control Assembly

Ref. No.	Part No.	Qty.	Description
1	99–1593–03	1	Bail–Brake
2	99–1582	1	Handle–Control
3	99–1595	1	Retainer–Cable, Brake
4	98–2682	1	Screw–High–Low,1/4–15
5	99–1589	1	Lever–Traction
6	99–1588	1	Bar–Control, Traction
7	99–6008	1	Retainer–Control Rod, Traction
8	94–4496	10	Screw–PPH
9	100–1186	1	Cable–Brake
11	95–4453	1	Screw–Handle
12	99–5239	1	Anchor–Cable
13	3256–1	1	Washer–Flat
14	3296–73	2	Nut–Lock, NI
15	99–1584	1	Cable–Traction
16	99–5248–03	2	Latch–Handle
17	27–7210	2	Screw–Shoulder
18	100–2894	1	Tie–Cable
19	3296–47	1	Nut–Lock, NI
20	3296–72	3	Nut–Lock, NI
21	3–3287	2	Spacer–Latch, Handle
22	27–7211	2	Screw–Shoulder
23	99–5249–05	1	Handle–Lower
24	98–7134	4	Knob–Handle
25	99–6019	2	Screw–CARR

Ref. No.	Part No.	Qty.	Description
26	92–2260	2	Screw–Handle
27	99–1596–05	1	Handle–Upper
28	86–9671	1	Guide–Rope
29	99–1590	2	Guide–Handle, Control
30	99–6339	1	Cover–Handle
31	99–1592	1	Spring–Torsion, RH
32	99–6009	1	Decal – Console

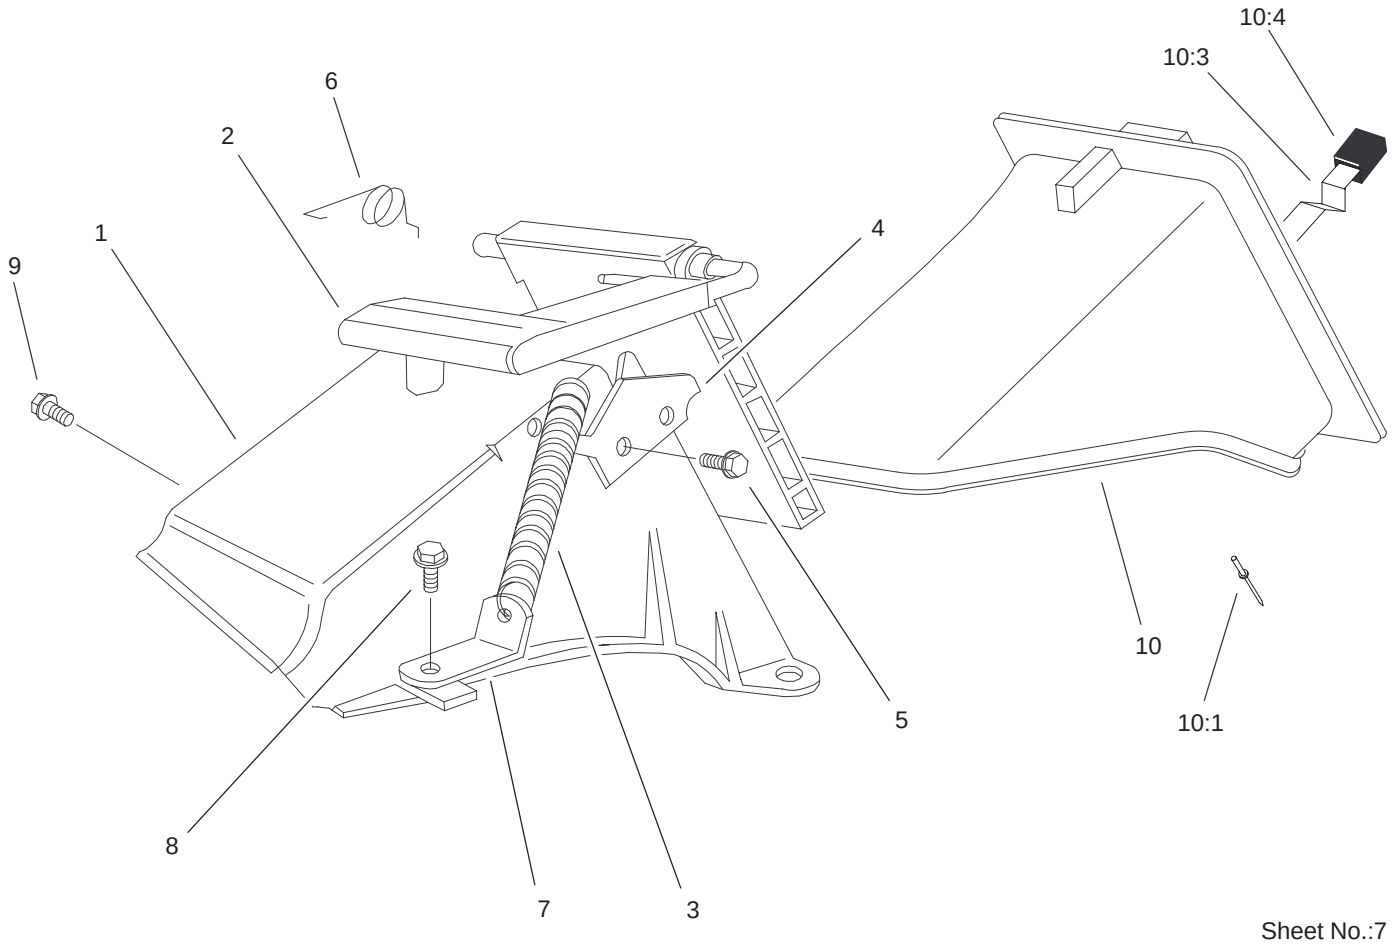


Sheet No.:7

Rear Bag Discharge Chute Assembly (Model 20037 only)

Ref. No.	Part No.	Qty.	Description
1	82–9153	1	Tunnel–Discharge
2	93–7351	1	Discharge Door ASM
3	76–4660	1	Spring–Door
4	93–3154	1	Latch–Plate
5	46–8090	2	Screw–Plastite
6	80–3770	1	Retainer–Door
7	71–9350	1	Bracket–Spring
8	46–6811	3	Screw–HWH
9	46–6810	1	Screw & Washer ASM
10	77–0500	1	Discharge Plug ASM
10:1	3295–35	1	Rivet–Head, Flat
10:3	76–4640	1	Latch–Plug, Discharge
10:4	76–4650	1	Grip–Latch

Ref. No.	Part No.	Qty.	Description

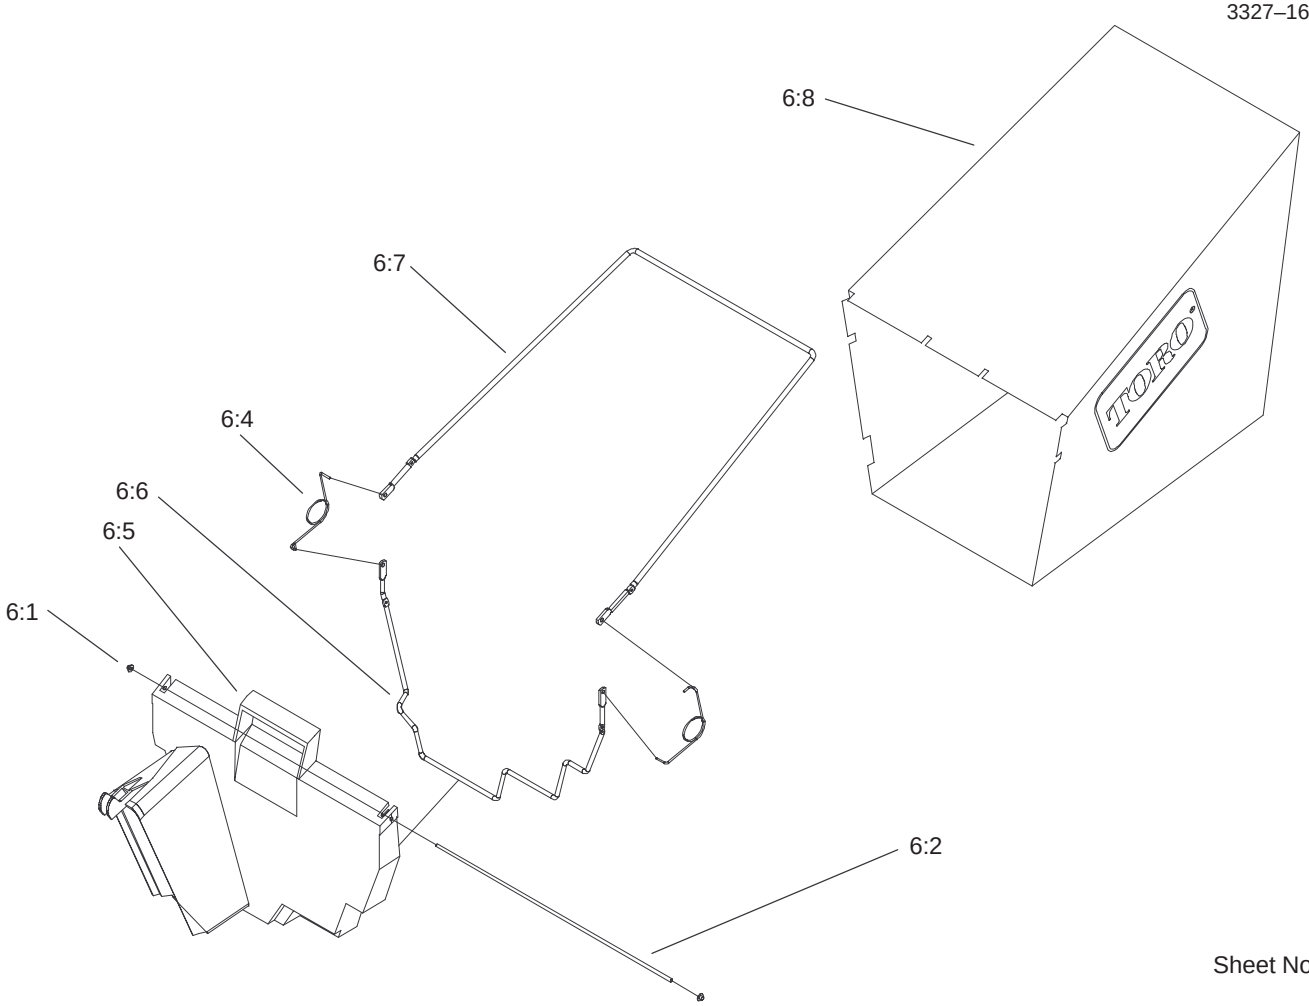


Sheet No.:8

Rear Bagger Assembly (Model 20037 only)

Ref. No.	Part No.	Qty.	Description
*6	11–0189	1	Grass Bag ASM
6:1	3290–422	2	Nut–Push
6:2	33–4820	1	Hinge–Door, Bag
6:4	36–6910	2	Spring
6:5	37–1393	1	Door–Bag
6:6	42–4020	1	Frame–Bag
6:7	42–4030	1	Frame–Bag, Upper
6:8	44–0522	1	Bag–Grass

Ref. No.	Part No.	Qty.	Description

* Not illustrated

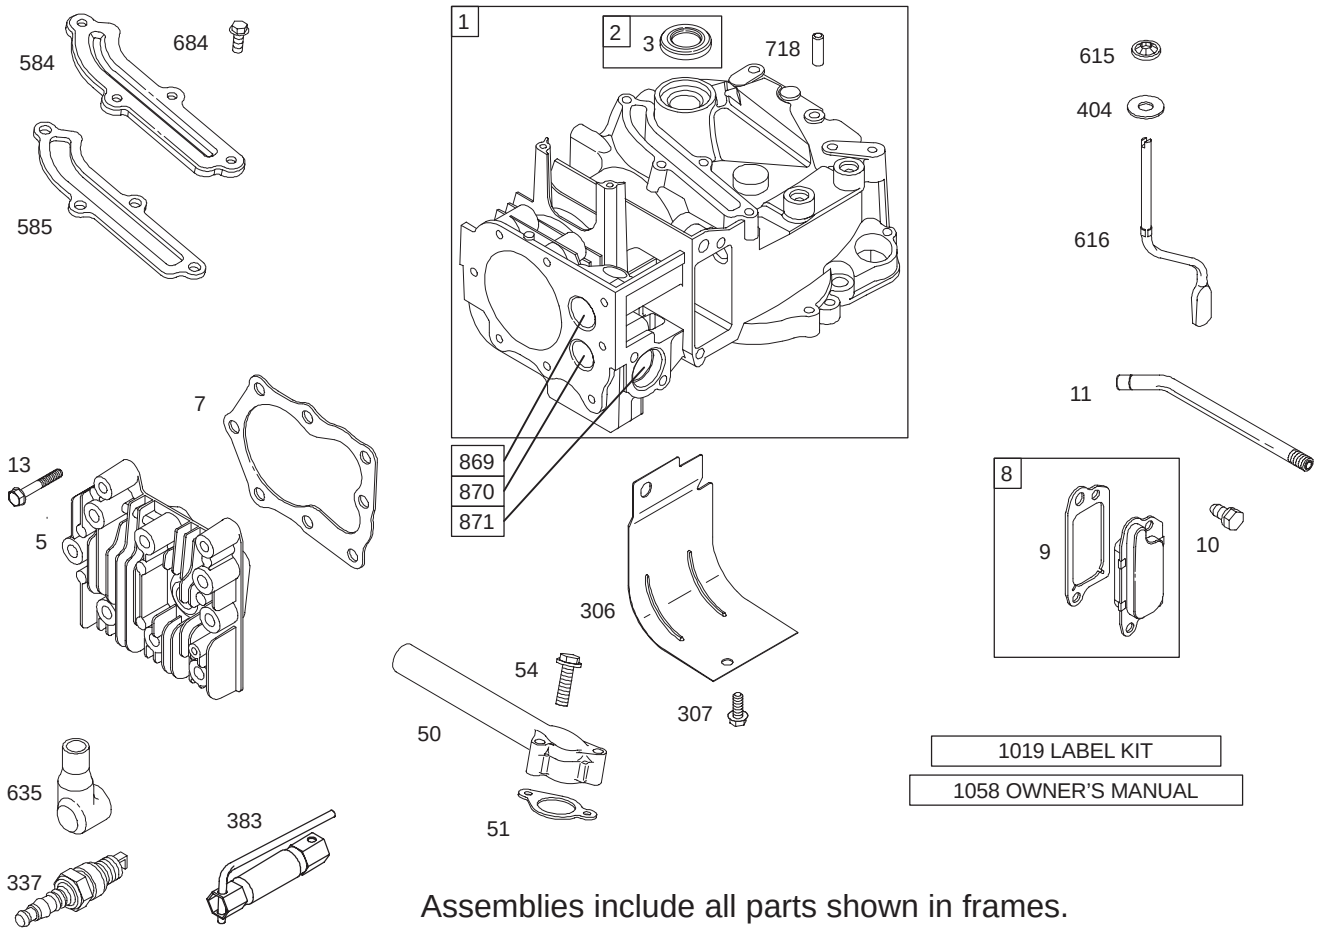


Assemblies include all parts shown in frames.


Cylinder Assembly
Engine Briggs and Stratton Model 124K02–0110–B1


Ref. No.	Part No.	Qty.	Description
1	697322	1	Cylinder Assembly
2	399269	1	Kit–Bushing/Seal
★3	299819	1	Seal–Oil (Magneto Side)
5	691160	1	Head–Cylinder
★7	692249	1	Gasket–Cylinder Head
8	695250	1	Breather Assembly
9	696125	1	Gasket–Breather
10	691125	1	Screw (Breather Assembly)
11	691781	1	Tube–Breather
13	690912	1	Screw (Cylinder Head)
50	497465	1	Manifold–Intake
★51	272199	1	Gasket–Intake
54	691650	1	Screw (Intake Manifold)
306	690450	1	Cylinder Shield
307	690345	1	Screw (Cylinder Shield)
337	802592	1	Plug–Spark
383	89838	1	Wrench–Sparkplug
404	690272	1	Washer (Governor Crank)

Ref. No.	Part No.	Qty.	Description
584	692342	1	Cover–Breather Passage
★585	691879	1	Gasket–Breather Passage
615	690340	1	Retainer–Governor Shaft
616	691308	1	Crank–Governor
635	66538	1	Boot–Spark Plug
684	690345	1	Screw (Breather Passage Cover)
718	690959	1	Pin–Locating
869	691155	1	Seat–Valve (Intake)
870	690380	1	Seat–Valve (Exhaust)
871	262001	1	Bushing–Guide (Exhaust)
	63709	1	Bushing–Guide (Intake)
1019	494256	1	Kit–Label
1058	274978	1	Owner's Manual

★ Included in Engine Gasket Set–Ref. 358.

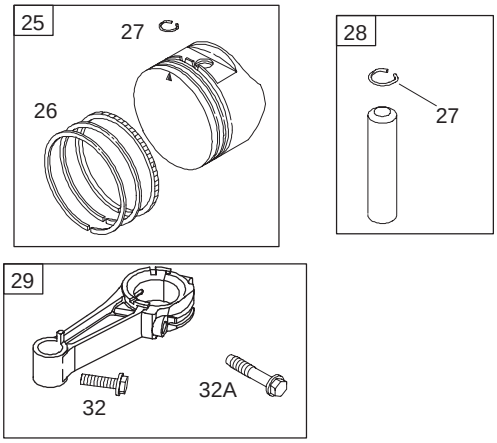

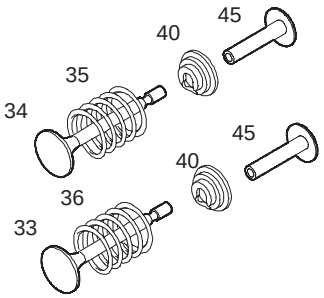

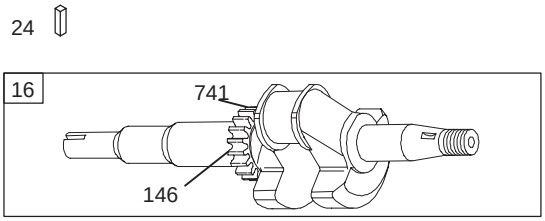


Assemblies include all parts shown in frames.

Crankshaft Assembly
Engine Briggs and Stratton Model 124K02–0110–B1

Ref. No.	Part No.	Qty.	Description
16	696009	1	Crankshaft
24	222698	1	Flywheel Key
25	697339	1	Piston Assembly (Standard)
	697340	1	Piston Assembly (.010” Oversize)
	697341	1	Piston Assembly (.020” Oversize)
	697342	1	Piston Assembly (.030” Oversize)
26	499425	1	Ring Set (Standard)
	499426	1	Ring Set (.010” Oversize)
	499427	1	Ring Set (.020” Oversize)
	499428	1	Ring Set (.030” Oversize)
27	691866	1	Piston Pin Lock
28	499423	1	Piston Pin (Standard)
	298908	1	Piston Pin (.005” Undersize)
29	499424	1	Connecting Rod (Standard)

Ref. No.	Part No.	Qty.	Description
32	691664	1	Screw (Connecting Rod)
32A	695759	1	Screw (Connecting Rod)
33	262651	1	Exhaust Valve
34	262652	1	Intake Valve
35	691270	1	Valve Spring (Intake)
36	691270	1	Valve Spring (Exhaust)
40	692194	1	Valve Retainer
45	690548	1	Tappet–Valve
146	690979	1	Key–Timing
741	691830	1	Gear–Timing

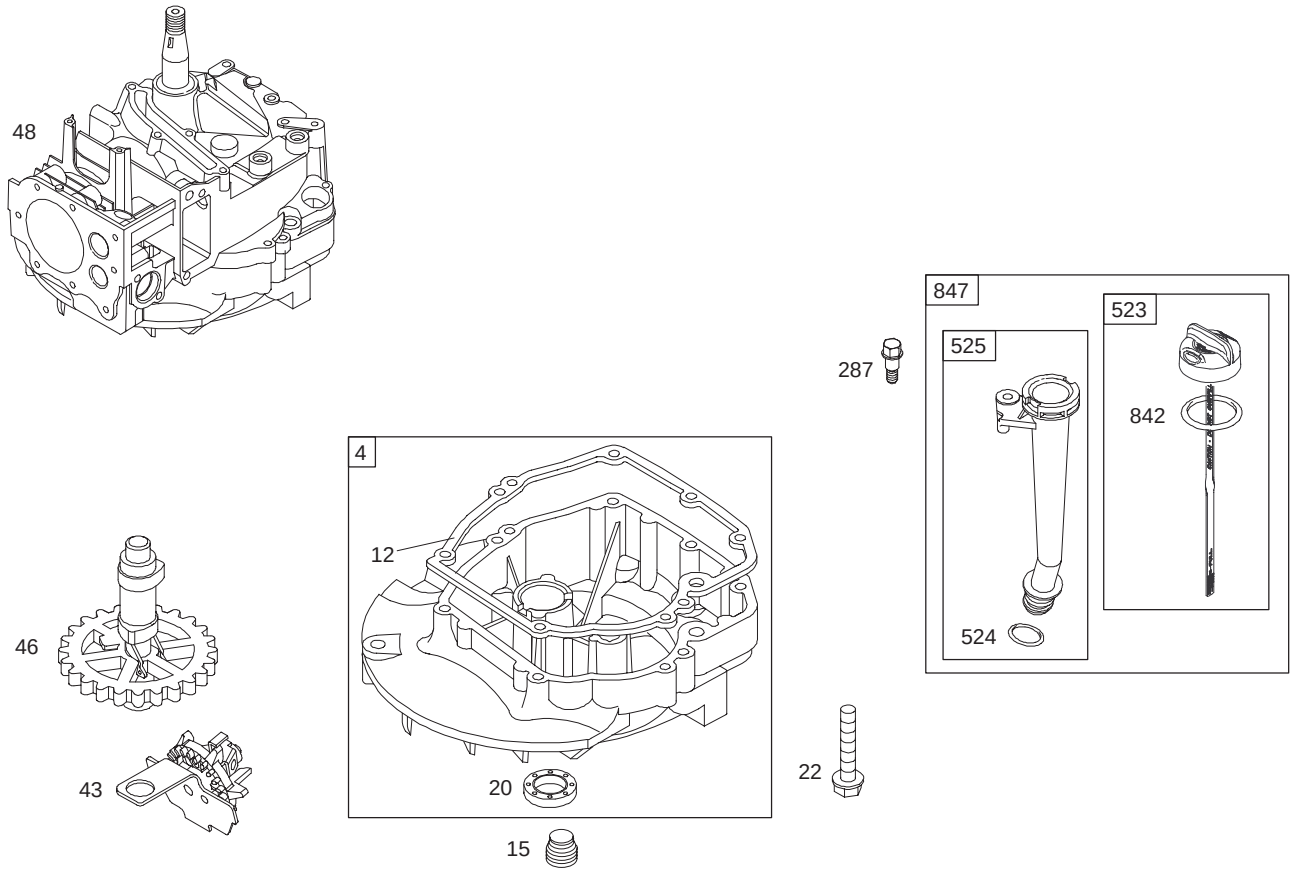


Assemblies include all parts shown in frames.

Crankcase Assembly
Engine Briggs and Stratton Model 124K02–0110–B1

Ref. No.	Part No.	Qty.	Description
4	493279	1	Sump–Engine
★12	692232	1	Gasket–Crankcase (.015 Thick, Std.)
15	691680	1	Plug–Oil Drain
★20	399781	1	Seal–Oil
22	691092	1	Screw (Engine Sump)
43	691997	1	Slinger–Governor/Oil
46	691449	1	Camshaft
48	696276	1	Short Block
287	690940	1	Screw (Dipstick Tube)
523	499621	1	Dipstick
★524	692296	1	Dipstick Tube Seal
525	495265	1	Dipstick Tube
★842	691031	1	O–Ring Seal (Dipstick Tube)
847	692047	1	Dipstick/ Tube Assembly

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set–Ref. 358.

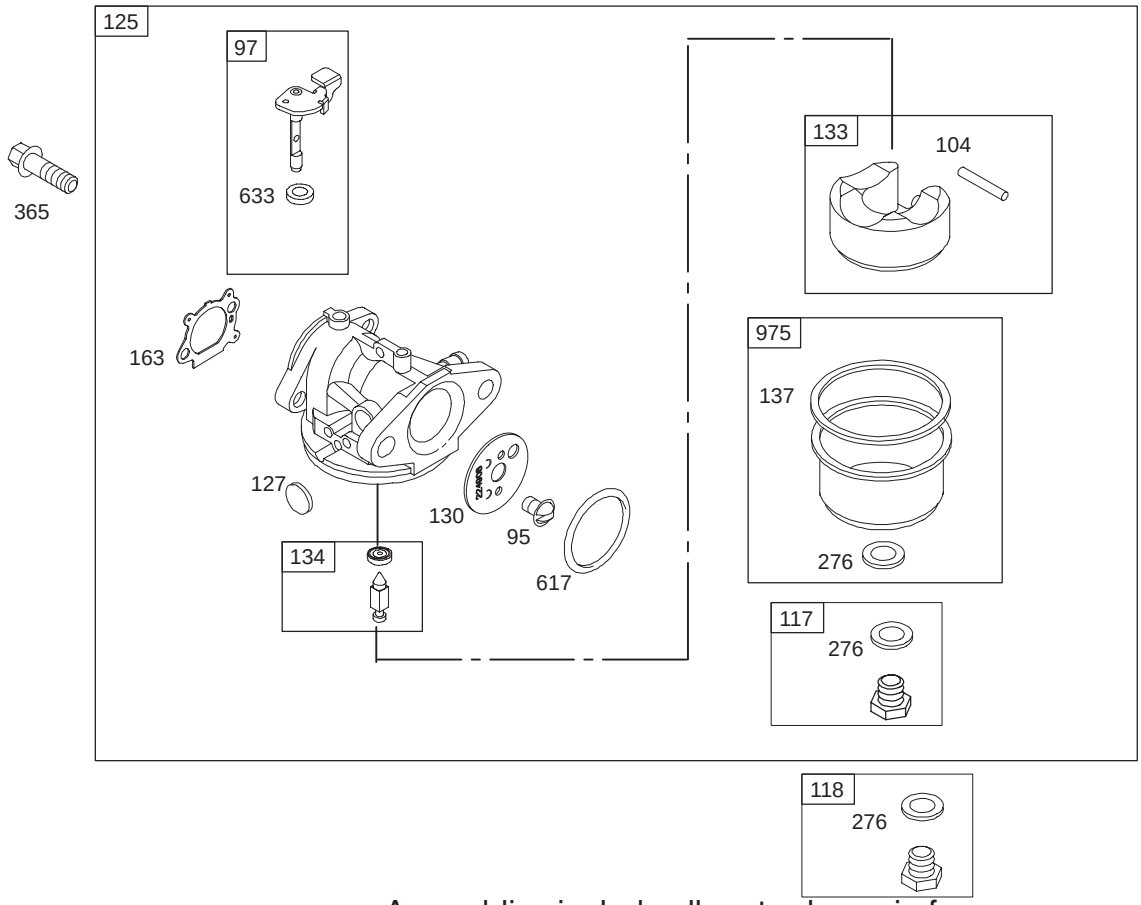

Assemblies include all parts shown in frames.

Carburetor Assembly
Engine Briggs and Stratton Model 124K02–0110–B1


Ref. No.	Part No.	Qty.	Description
95	691636	1	Screw (Throttle Valve)
97	696565	1	Shaft–Throttle
●104	691242	1	Pin–Float Hinge
117	498978	1	Jet–Main (Standard)
118	497466	1	Jet–Main (High Altitude)
125	498170	1	Carburetor
●127	694468	1	Plug–Welch
130	696564	1	Valve–Throttle
133	398187	1	Float–Carburetor
●134	398188	1	Kit–Needle/Seat
●◆137	693981	1	Gasket–Float Bowl
★●◆163	272653	1	Gasket–Air Cleaner
●◆276	271716	1	Washer–Sealing
365	692524	1	Screw (Carburetor)
●◆617	270344	1	Seal–O Ring (Intake Manifold)
●◆633	691321	1	Seal–Choke/Throttle Shaft
975	493640	1	Bowl–Float

Ref. No.	Part No.	Qty.	Description

● Included in Carburetor Overhaul Kit–Ref. 121.

★ Included in Engine Gasket Set–Ref. 358.

◆ Included in Carburetor Gasket Set–Ref. 977.

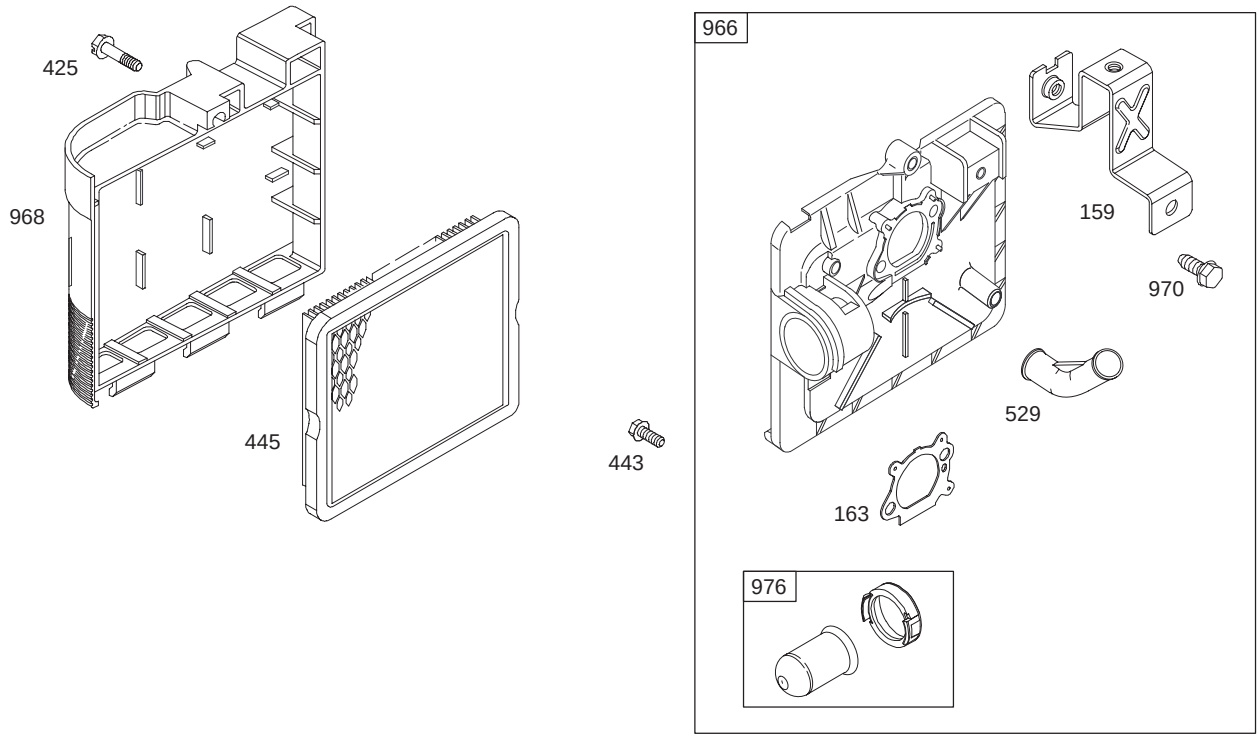


Assemblies include all parts shown in frames.

Air Cleaner Assembly
Engine Briggs and Stratton Model 124K02–0110–B1

Ref. No.	Part No.	Qty.	Description
159	691753	1	Bracket–Air Cleaner Primer
★●◆163	272653	1	Gasket–Air Cleaner
425	690670	1	Screw (Air Cleaner Cover)
443	692523	1	Screw (Air Cleaner Primer Base)
445	491588	1	Filter–Air Cleaner Cartridge
529	691923	1	Grommet
966	496116	1	Base–Air Cleaner Primer
968	692298	1	Cover–Air Cleaner
970	691669	1	Screw (Air Cleaner Primer Bracket)
976	694395	1	Primer–Carburetor

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set–Ref. 358. ● Included in Carburetor Overhaul Kit–Ref. 121.
◆ Included in Carburetor Gasket Set–Ref. 977.

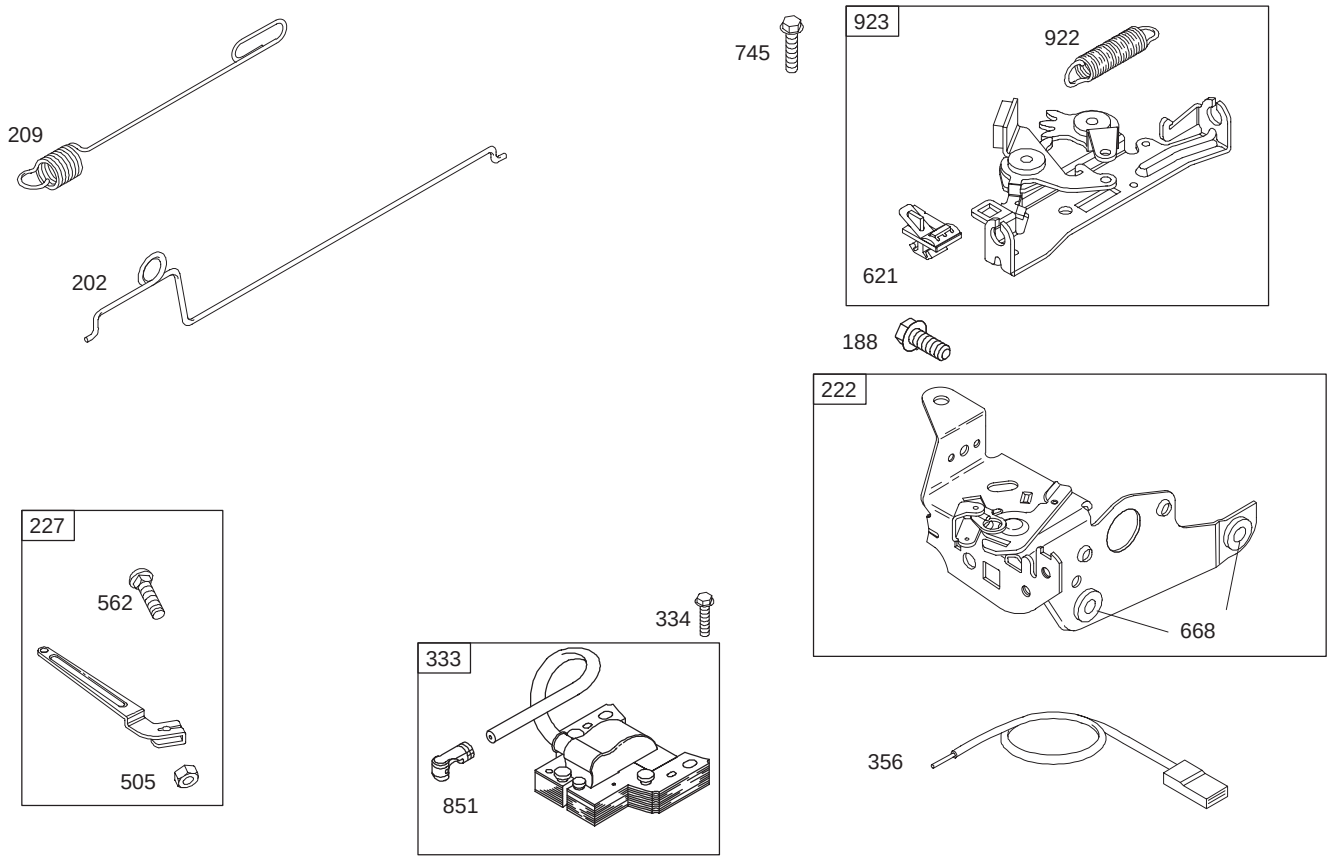


Assemblies include all parts shown in frames.

Governor Assembly
Engine Briggs and Stratton Model 124K02–0110–B1

Ref. No.	Part No.	Qty.	Description
188	693399	1	Screw (Control Bracket)
202	691829	1	Link–Mechanical Governor
209	691292	1	Spring–Governor
222	692467	1	Bracket–Control
227	690783	1	Lever–Governor Control
333	802574	1	Armature–Magneto
334	691061	1	Screw (Magneto Armature)
356	692390	1	Wire–Stop
505	231082	1	Nut (Governor Control Lever)
562	92613	1	Bolt (Governor Control Lever)
621	692310	1	Switch–Stop
★668	493823	1	Spacer
745	691648	1	Screw (Brake)
851	493880	1	Terminal–Spark Plug
922	691831	1	Spring–Brake
923	691994	1	Brake

Ref. No.	Part No.	Qty.	Description

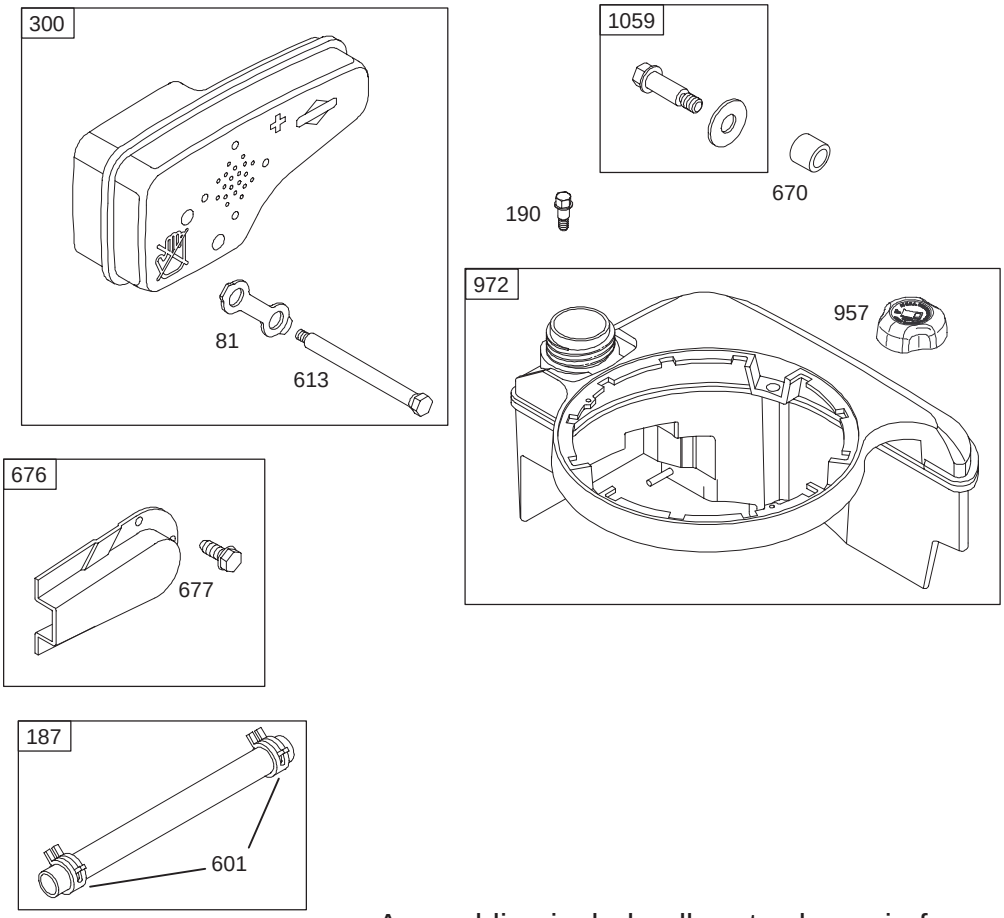


Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly
Engine Briggs and Stratton Model 124K02–0110–B1

Ref. No.	Part No.	Qty.	Description
81	691740	1	Lock–Muffler Screw
187	691050	1	Line–Fuel (Cut to Required Length)
190	690940	1	Screw (Fuel Tank)
300	692038	1	Muffler
601	95162	1	Clamp–Hose
613	691340	1	Screw (Muffler)
670	692294	1	Spacer–Fuel Tank
676	493871	1	Deflector–Muffler
677	690661	1	Screw (Muffler Deflector)
957	692046	1	Cap–Fuel Tank
972	499618	1	Tank–Fuel
1059	692311	1	Kit–Screw/Washer

Ref. No.	Part No.	Qty.	Description

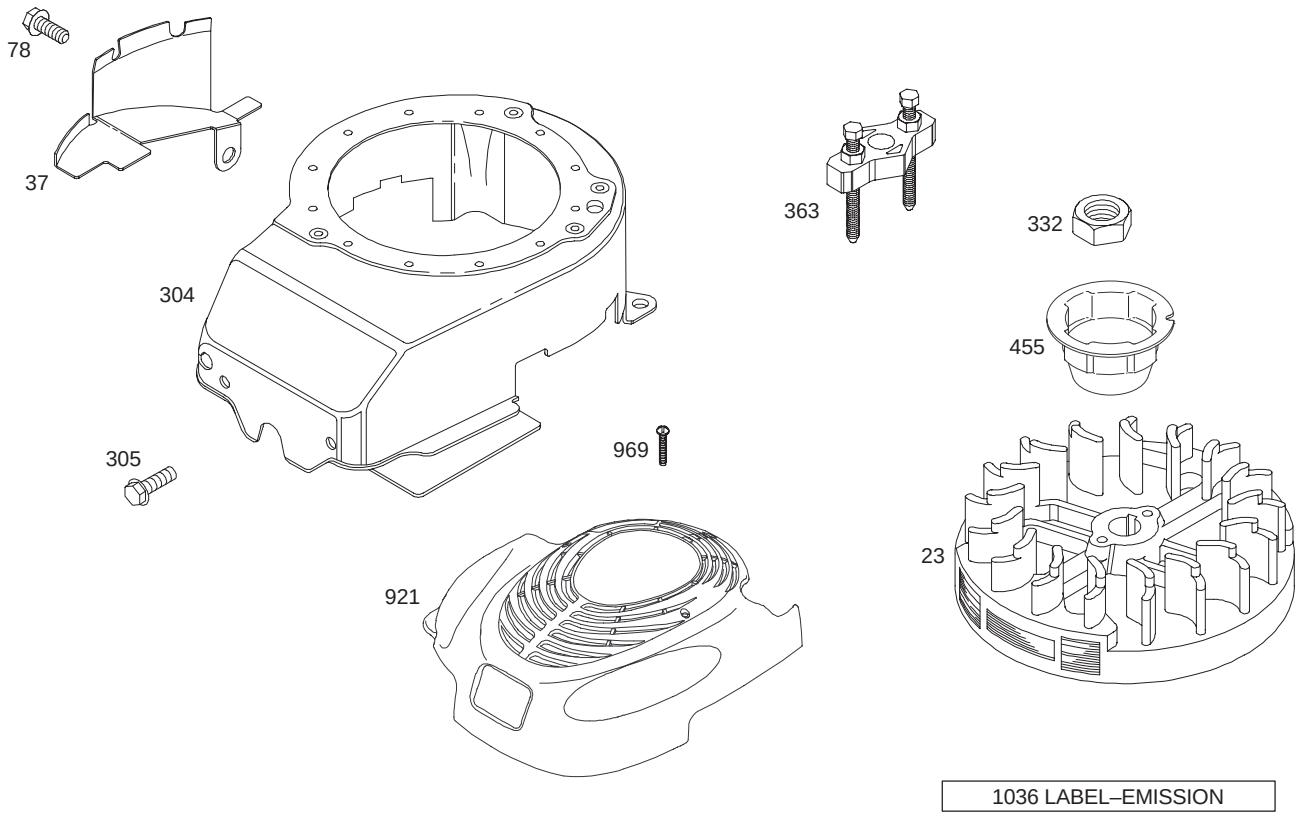


Assemblies include all parts shown in frames.

Blower Housing Assembly
Engine Briggs and Stratton Model 124K02–0110–B1

Ref. No.	Part No.	Qty.	Description
23	692315	1	Flywheel
37	694086	1	Guard–Flywheel
78	691108	1	Screw (Flywheel Guard)
304	493293	1	Housing–Blower
305	691108	1	Screw (Blower Housing)
332	690662	1	Nut (Flywheel)
363	19069	1	Puller–Flywheel
455	695161	1	Cup–Flywheel
921	697343	1	Cover–Blower Housing
969	690700	1	Screw (Blower Housing Cover)
1036	695111	1	Label–Emission

Ref. No.	Part No.	Qty.	Description

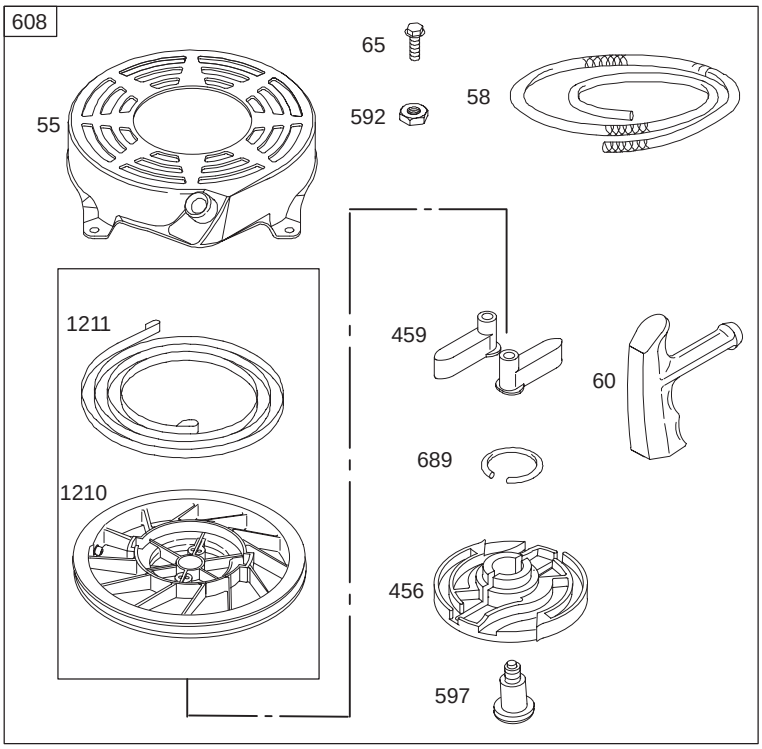


Starter Assembly
Engine Briggs and Stratton Model 124K02–0110–B1

Ref. No.	Part No.	Qty.	Description
55	691421	1	Housing–Rewind Starter
58	697316	1	Rope–Starter (Cut to Required Length)
60	281434	1	Grip–Starter Rope
65	690837	1	Screw (Rewind Starter)
456	692299	1	Plate–Pawl Friction
459	281505	1	Ratchet–Pawl
592	690800	1	Nut (Rewind Starter)
597	691696	1	Screw (Pawl Friction Plate)
608	497680	1	Starter–Rewind
689	691855	1	Spring–Friction
1210	498144	1	Pulley/Spring Assembly (Pulley)
1211	498144	1	Pulley/Spring Assembly (Spring)

Ref. No.	Part No.	Qty.	Description

358 ENGINE GASKET KIT

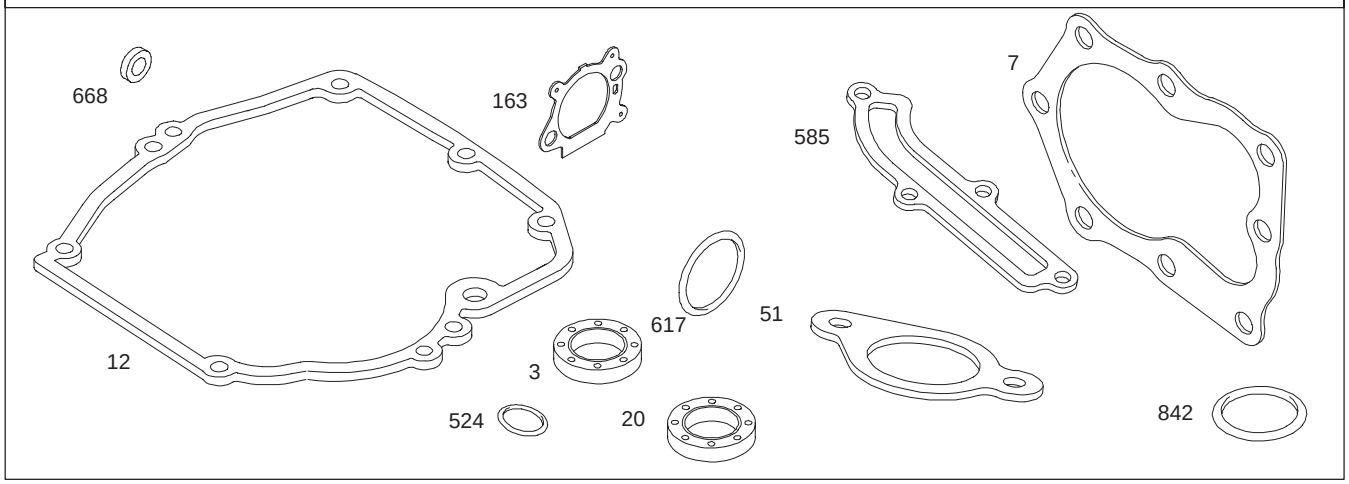


Assemblies include all parts shown in frames.


Gasket Assembly
Engine Briggs and Stratton Model 124K02–0110–B1

Ref. No.	Part No.	Qty.	Description
★3	299819	1	Seal–Oil (Magneto Side)
★7	692249	1	Gasket–Cylinder Head
★12	692232	1	Crankcase Gasket (.015 Thick, Standard)
★20	399781	1	Seal–Oil (PTO Side)
★51	272199	1	Gasket–Intake
★●◆163	272653	1	Gasket–Air Cleaner
358	497316	1	Gasket Set–Engine
★524	692296	1	Seal–O Ring (Dipstick Tube)
★585	691879	1	Gasket–Breather Passage
★●◆617	270344	1	Seal–O Ring (Intake Manifold)
★668	493823	1	Spacer
★842	691031	1	Seal–O Ring (Dipstick)

Ref. No.	Part No.	Qty.	Description

● Included in Carburetor Overhaul Kit–Ref. 121.
★ Included in Engine Gasket Set–Ref. 358.
◆ Included in Carburetor Gasket Set–Ref. 977.

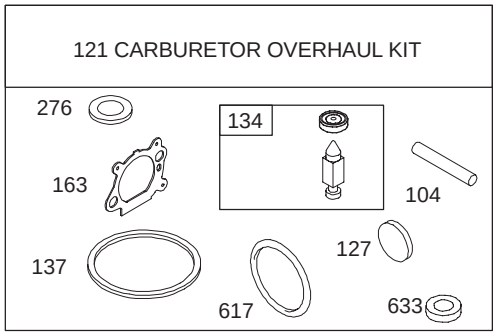

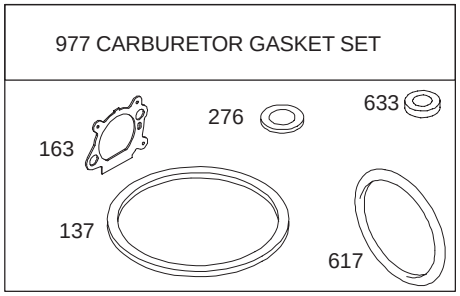

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Engine Briggs and Stratton Model 124K02–0110–B1


Ref. No.	Part No.	Qty.	Description
●104	691242	1	Pin–Float Hinge
121	498260	1	Kit–Carburetor Overhaul
●127	694468	1	Plug–Welch
●134	398188	1	Kit–Needle/Seat
●◆137	693981	1	Gasket–Float Bowl
★●◆163	272653	1	Gasket–Air Cleaner
●◆276	271716	1	Washer–Sealing
★●◆617	270344	1	Seal–O Ring (Intake Manifold)
●◆633	691321	1	Seal–Choke/Throttle Shaft
977	498261	1	Gasket Set–Carburetor

Ref. No.	Part No.	Qty.	Description

● Included in Carburetor Overhaul Kit–Ref. 121.

★ Included in Engine Gasket Set–Ref. 358.

◆ Included in Carburetor Gasket Set–Ref. 977.

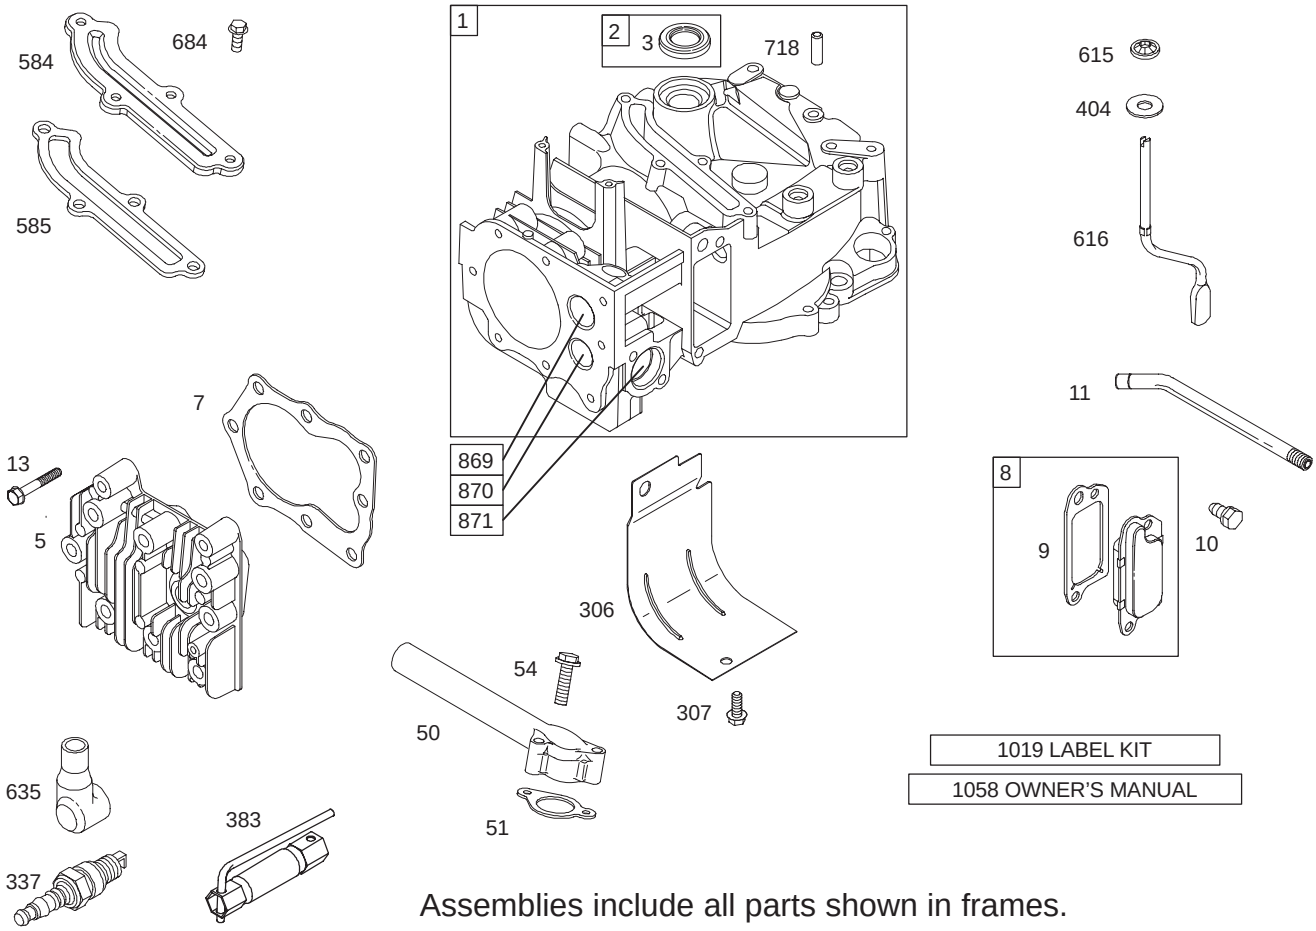


Assemblies include all parts shown in frames.


Cylinder Assembly
Engine Briggs and Stratton Model 123K02–0114–E1


Ref. No.	Part No.	Qty.	Description
1	697322	1	Cylinder Assembly
2	399269	1	Kit–Bushing/Seal
★3	299819	1	Seal–Oil (Magneto Side)
5	691160	1	Head–Cylinder
★7	692249	1	Gasket–Cylinder Head
8	695250	1	Breather Assembly
9	696125	1	Gasket–Breather
10	691125	1	Screw (Breather Assembly)
11	691781	1	Tube–Breather
13	690912	1	Screw (Cylinder Head)
50	497465	1	Manifold–Intake
★51	272199	1	Gasket–Intake
54	691650	1	Screw (Intake Manifold)
306	690450	1	Cylinder Shield
307	690345	1	Screw (Cylinder Shield)
337	802592	1	Plug–Spark
383	89838	1	Wrench–Sparkplug
404	690272	1	Washer (Governor Crank)

Ref. No.	Part No.	Qty.	Description
584	692342	1	Cover–Breather Passage
★585	691879	1	Gasket–Breather Passage
615	690340	1	Retainer–Governor Shaft
616	691308	1	Crank–Governor
635	66538	1	Boot–Spark Plug
684	690345	1	Screw (Breather Passage Cover)
718	690959	1	Pin–Locating
869	691155	1	Seat–Valve (Intake)
870	690380	1	Seat–Valve (Exhaust)
871	262001	1	Bushing–Guide (Exhaust)
	63709	1	Bushing–Guide (Intake)
1019	494256	1	Kit–Label
1058	275177	1	Owner's Manual

★ Included in Engine Gasket Set–Ref. 358.

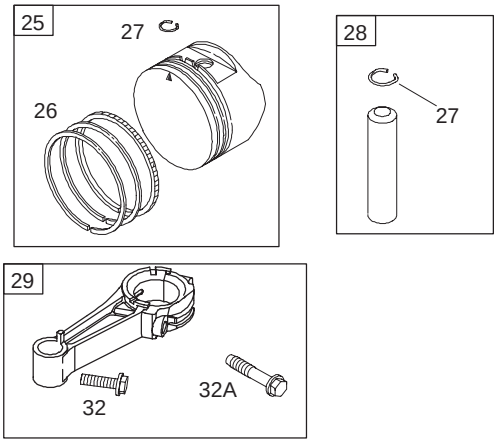

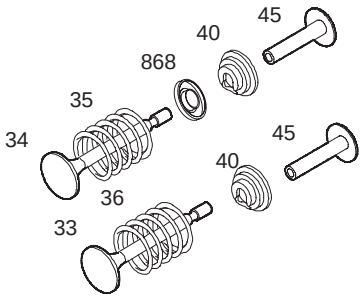

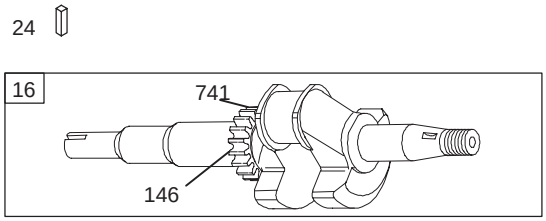


Assemblies include all parts shown in frames.

Crankshaft Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
16	696009	1	Crankshaft
24	222698	1	Key–Flywheel
25	697339	1	Piston Assembly (Standard)
	697340	1	Piston Assembly (.010” Oversize)
	697341	1	Piston Assembly (.020” Oversize)
	697342	1	Piston Assembly (.030” Oversize)
26	499425	1	Ring Set (Standard)
	499426	1	Ring Set (.010” Oversize)
	499427	1	Ring Set (.020” Oversize)
	499428	1	Ring Set (.030” Oversize)
27	691866	1	Lock–Piston Pin
28	499423	1	Piston Pin (Standard)
	298908	1	Piston Pin (.005” Undersize)
29	499424	1	Connecting Rod (Standard)

Ref. No.	Part No.	Qty.	Description
32	691664	1	Screw (Connecting Rod)
32A	695759	1	Screw (Connecting Rod)
33	262651	1	Valve–Exhaust
34	262652	1	Valve–Intake
35	691270	1	Spring–Valve (Intake)
36	691270	1	Spring–Valve (Exhaust)
40	692194	1	Retainer–Valve
45	690548	1	Tappet–Valve
146	690979	1	Key–Timing
741	691830	1	Gear–Timing
868	697338	1	Seal–Valve

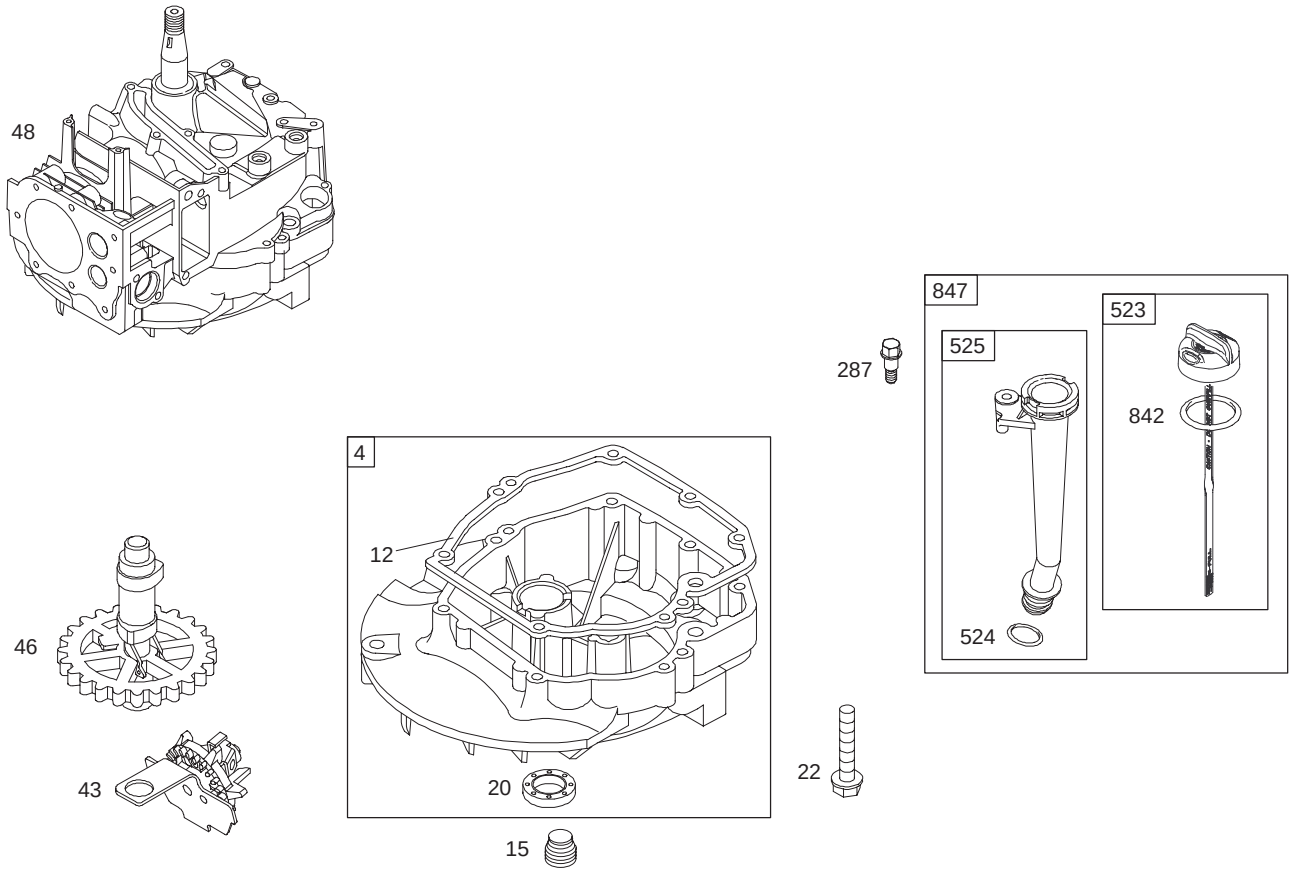


Assemblies include all parts shown in frames.

Crankcase Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
4	493279	1	Sump–Engine
★12	692232	1	Gasket–Crankcase (.015 Thick, Std.)
15	691680	1	Plug–Oil Drain
★20	399781	1	Seal–Oil
22	691092	1	Screw (Engine Sump)
43	691997	1	Slinger–Governor/Oil
46	691449	1	Camshaft
48	696276	1	Short Block
287	690940	1	Screw (Dipstick Tube)
523	499621	1	Dipstick
★524	692296	1	Dipstick Tube Seal
525	495265	1	Dipstick Tube
★842	691031	1	O–Ring Seal (Dipstick Tube)
847	692047	1	Dipstick/ Tube Assembly

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set–Ref. 358.

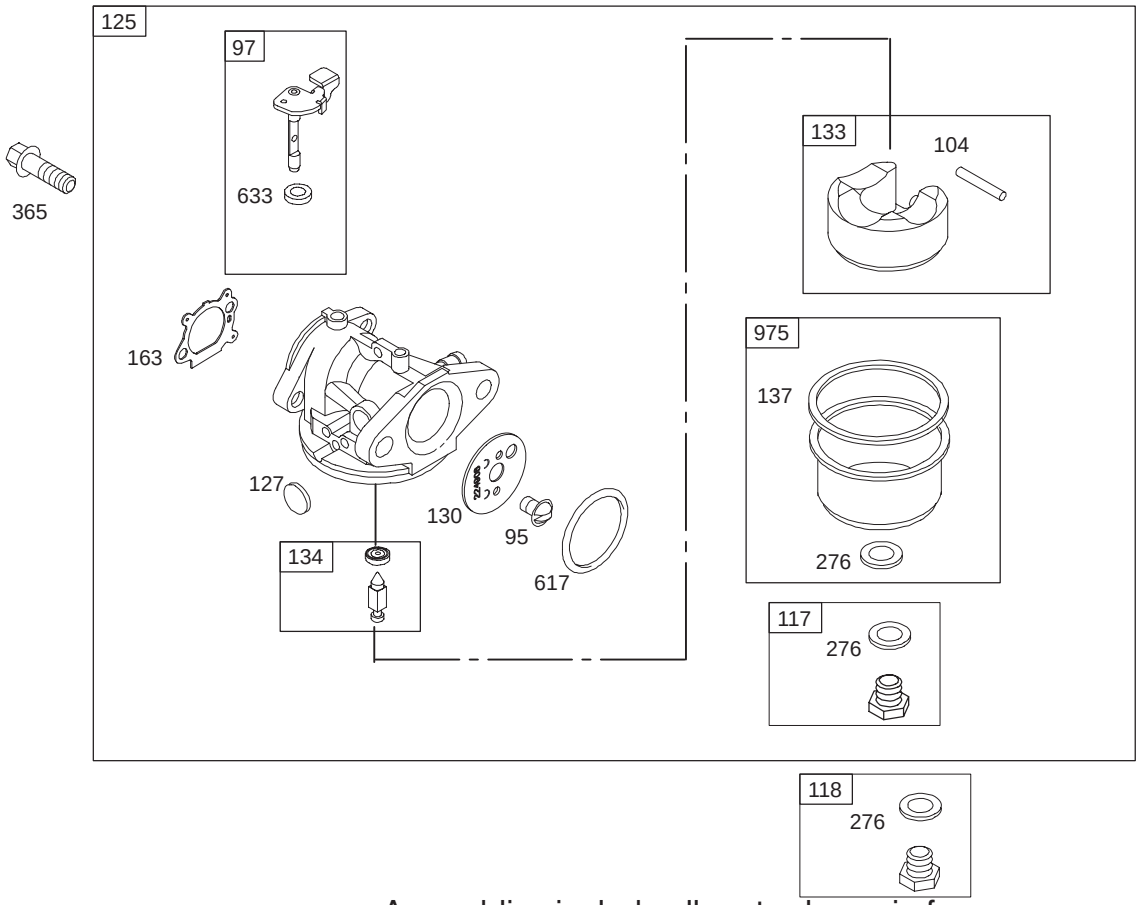

Assemblies include all parts shown in frames.

Carburetor Assembly
Engine Briggs and Stratton Model 123K02–0114–E1


Ref. No.	Part No.	Qty.	Description
95	691636	1	Screw (Throttle Valve)
97	696565	1	Shaft–Throttle
●104	691242	1	Pin–Float Hinge
117	498978	1	Jet–Main (Standard)
118	497466	1	Jet–Main (High Altitude)
125	498170	1	Carburetor
●127	694468	1	Plug–Welch
130	696564	1	Valve–Throttle
133	398187	1	Float–Carburetor
●134	398188	1	Kit–Needle/Seat
●◆137	693981	1	Gasket–Float Bowl
★●◆163	272653	1	Gasket–Air Cleaner
●◆276	271716	1	Washer–Sealing
365	692524	1	Screw (Carburetor)
●◆617	270344	1	Seal–O Ring (Intake Manifold)
●◆633	691321	1	Seal–Choke/Throttle Shaft
975	493640	1	Bowl–Float

Ref. No.	Part No.	Qty.	Description

● Included in Carburetor Overhaul Kit–Ref. 121.

★ Included in Engine Gasket Set–Ref. 358.

◆ Included in Carburetor Gasket Set–Ref. 977.

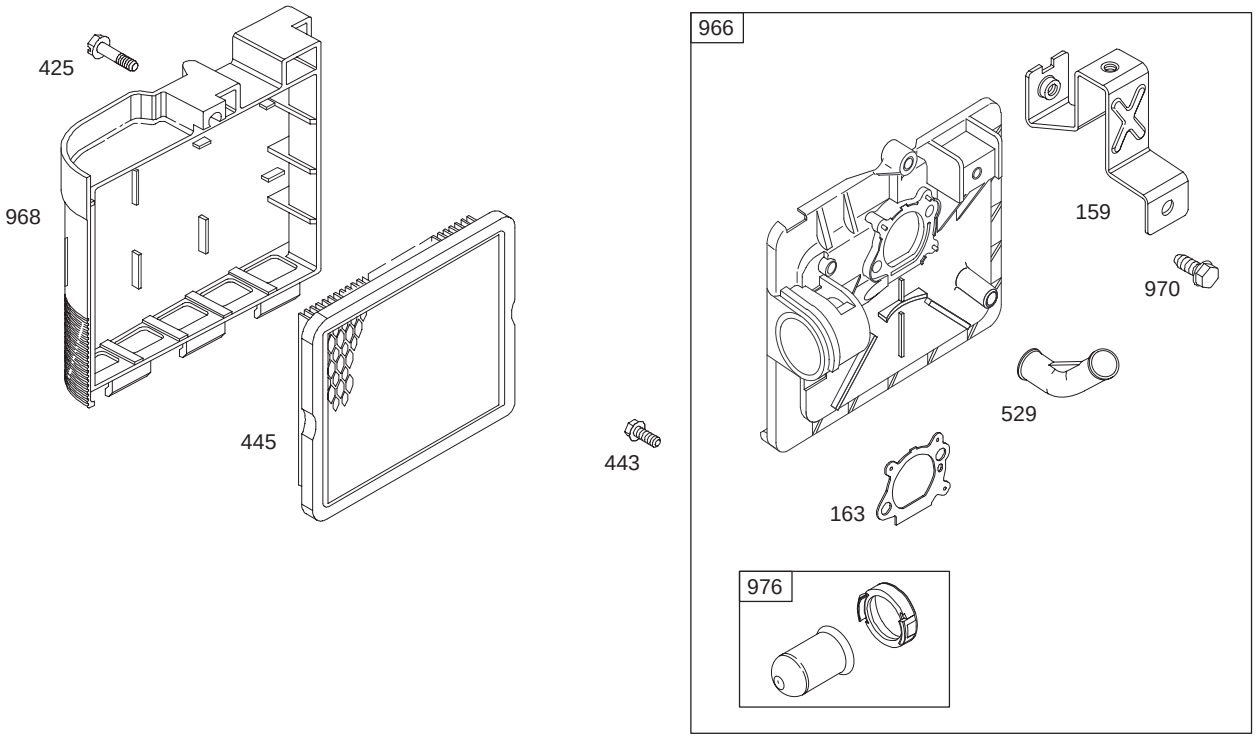


Assemblies include all parts shown in frames.

Air Cleaner Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
159	691753	1	Bracket–Air Cleaner Primer
★●◆163	272653	1	Gasket–Air Cleaner
425	690670	1	Screw (Air Cleaner Cover)
443	692523	1	Screw (Air Cleaner Primer Base)
445	491588	1	Filter–Air Cleaner Cartridge
529	691923	1	Grommet
966	496116	1	Base–Air Cleaner Primer
968	692298	1	Cover–Air Cleaner
970	691669	1	Screw (Air Cleaner Primer Bracket)
976	694395	1	Primer–Carburetor

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set–Ref. 358. ● Included in Carburetor Overhaul Kit–Ref. 121.
◆ Included in Carburetor Gasket Set–Ref. 977.

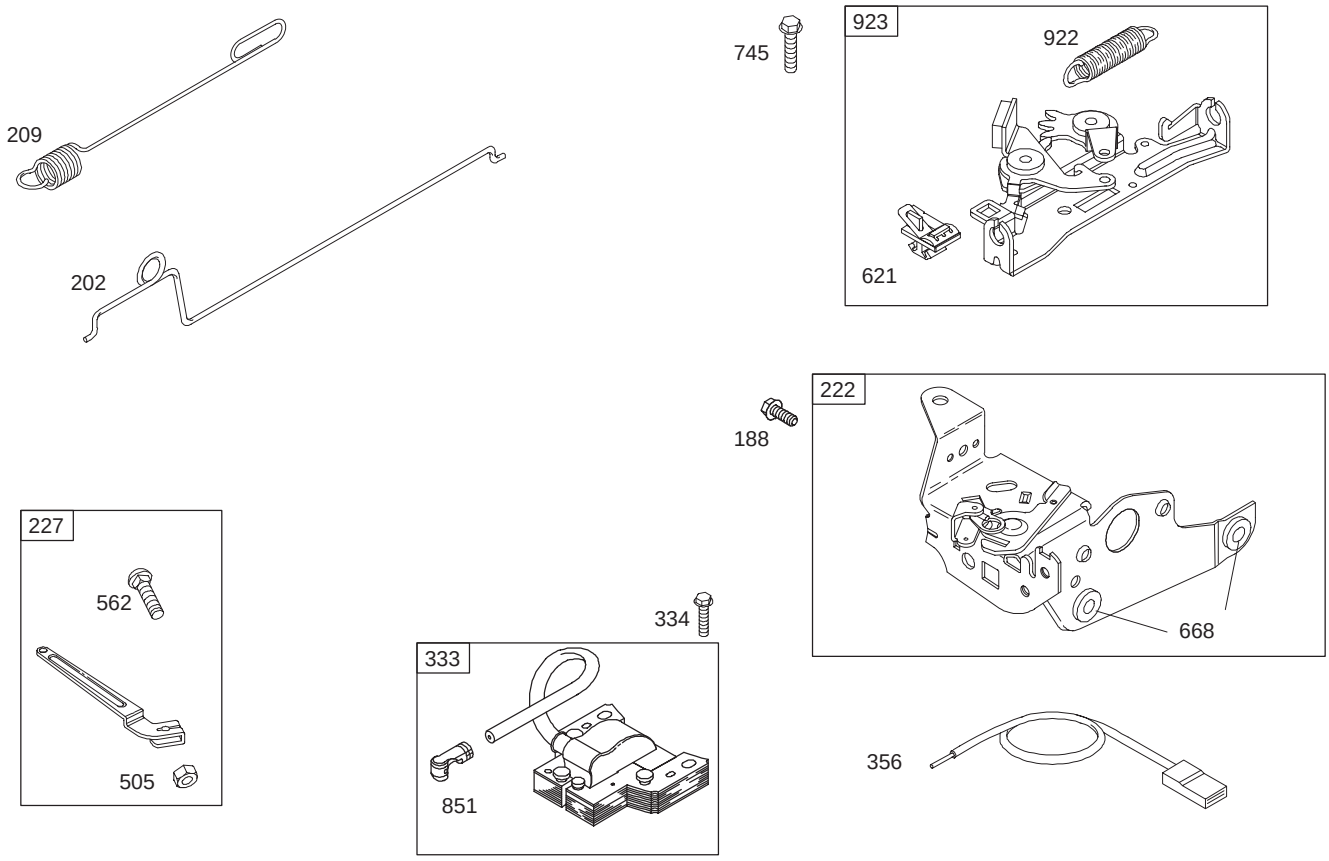


Assemblies include all parts shown in frames.

Governor Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
188	693399	1	Screw (Control Bracket)
202	691829	1	Link–Mechanical Governor
209	691292	1	Spring–Governor
222	692467	1	Bracket–Control
227	690783	1	Lever–Governor Control
333	802574	1	Armature–Magneto
334	691061	1	Screw (Magneto Armature)
356	692390	1	Wire–Stop
505	231082	1	Nut (Governor Control Lever)
562	92613	1	Bolt (Governor Control Lever)
621	692310	1	Switch–Stop
★668	493823	1	Spacer
745	691648	1	Screw (Brake)
851	493880	1	Terminal–Spark Plug
922	691831	1	Spring–Brake
923	691994	1	Brake

Ref. No.	Part No.	Qty.	Description

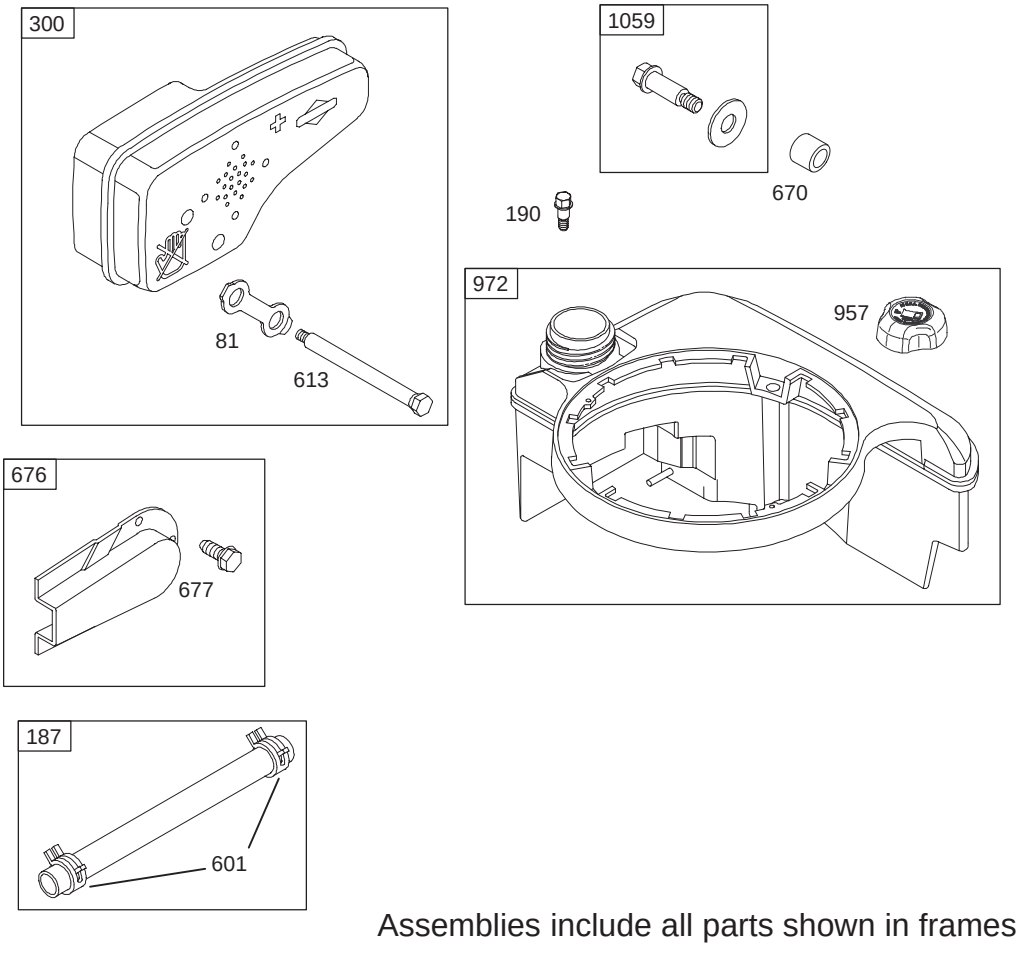


Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
81	691740	1	Lock–Muffler Screw
187	691050	1	Line–Fuel (Cut to Required Length)
190	690940	1	Screw (Fuel Tank)
300	692038	1	Muffler
601	95162	1	Clamp–Hose
613	691340	1	Screw (Muffler)
670	692294	1	Spacer–Fuel Tank
676	493871	1	Deflector–Muffler
677	690661	1	Screw (Muffler Deflector)
957	692046	1	Cap–Fuel Tank
972	499618	1	Tank–Fuel
1059	692311	1	Kit–Screw/Washer

Ref. No.	Part No.	Qty.	Description

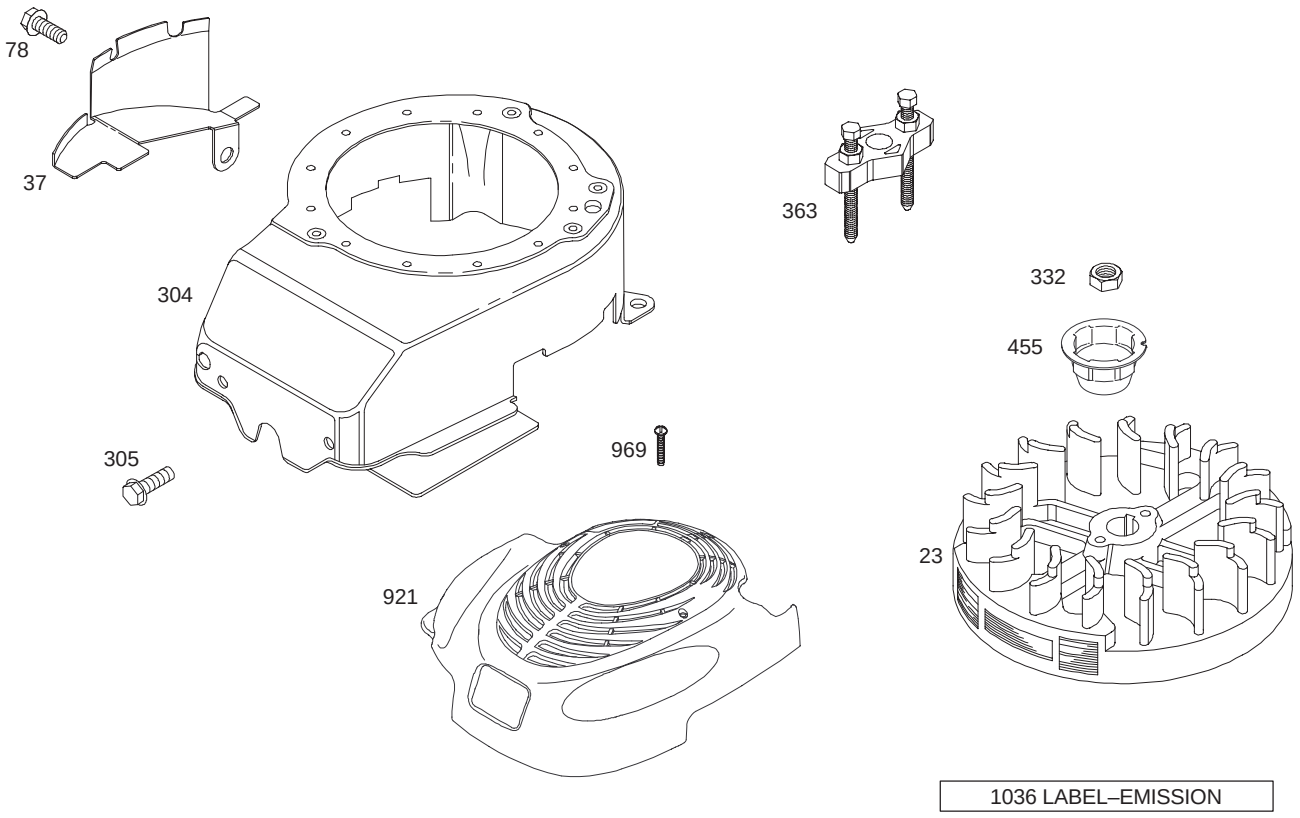


Assemblies include all parts shown in frames.

Blower Housing Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
23	692315	1	Flywheel
37	694086	1	Guard–Flywheel
78	691108	1	Screw (Flywheel Guard)
304	493293	1	Housing–Blower
305	691108	1	Screw (Blower Housing)
332	690662	1	Nut (Flywheel)
363	19069	1	Puller–Flywheel
455	695161	1	Cup–Flywheel
921	697343	1	Cover–Blower Housing
969	690700	1	Screw (Blower Housing Cover)
1036	697456	1	Label–Emission

Ref. No.	Part No.	Qty.	Description

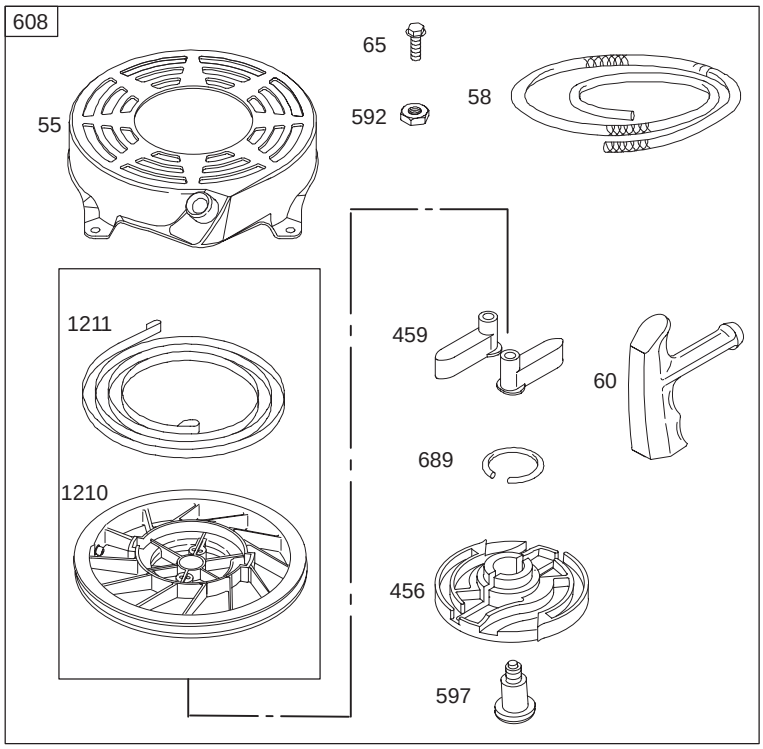


Starter Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
55	691421	1	Housing–Rewind Starter
58	697316	1	Rope–Starter (Cut to Required Length)
60	281434	1	Grip–Starter Rope
65	690837	1	Screw (Rewind Starter)
456	692299	1	Plate–Pawl Friction
459	281505	1	Ratchet–Pawl
592	690800	1	Nut (Rewind Starter)
597	691696	1	Screw (Pawl Friction Plate)
608	497680	1	Starter–Rewind
689	691855	1	Spring–Friction
1210	498144	1	Pulley/Spring Assembly (Pulley)
1211	498144	1	Pulley/Spring Assembly (Spring)

Ref. No.	Part No.	Qty.	Description

358 ENGINE GASKET KIT

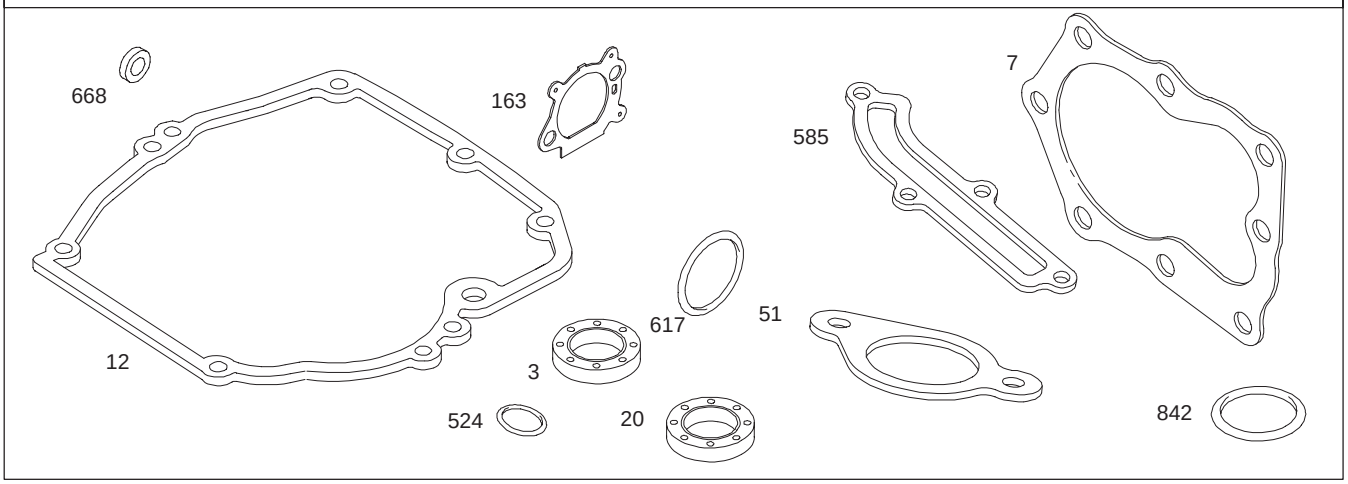


Assemblies include all parts shown in frames.


Gasket Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
★3	299819	1	Seal–Oil (Magneto Side)
★7	692249	1	Gasket–Cylinder Head
★12	692232	1	Crankcase Gasket (.015 Thick, Standard)
★20	399781	1	Seal–Oil (PTO Side)
★51	272199	1	Gasket–Intake
★●◆163	272653	1	Gasket–Air Cleaner
358	497316	1	Gasket Set–Engine
★524	692296	1	Seal–O Ring (Dipstick Tube)
★585	691879	1	Gasket–Breather Passage
★●◆617	270344	1	Seal–O Ring (Intake Manifold)
★668	493823	1	Spacer
★842	691031	1	Seal–O Ring (Dipstick)

Ref. No.	Part No.	Qty.	Description

● Included in Carburetor Overhaul Kit–Ref. 121.
★ Included in Engine Gasket Set–Ref. 358.
◆ Included in Carburetor Gasket Set–Ref. 977.

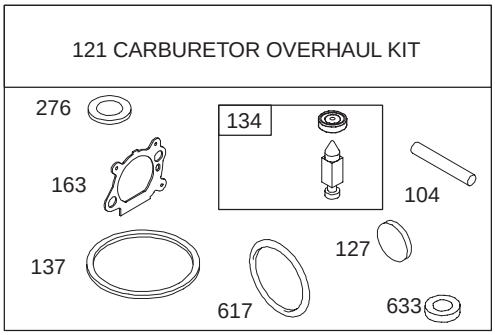

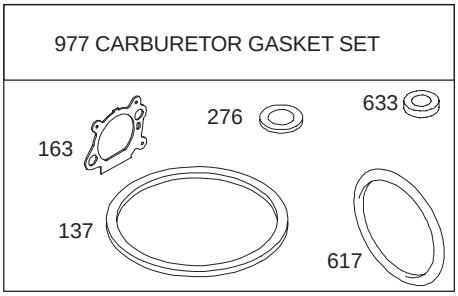

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Engine Briggs and Stratton Model 123K02–0114–E1

Ref. No.	Part No.	Qty.	Description
●104	691242	1	Pin–Float Hinge
121	498260	1	Kit–Carburetor Overhaul
●127	694468	1	Plug–Welch
●134	398188	1	Kit–Needle/Seat
●◆137	693981	1	Gasket–Float Bowl
⋆●◆163	272653	1	Gasket–Air Cleaner
●◆276	271716	1	Washer–Sealing
⋆●◆617	270344	1	Seal–O Ring (Intake Manifold)
●◆633	691321	1	Seal–Choke/Throttle Shaft
977	498261	1	Gasket Set–Carburetor

Ref. No.	Part No.	Qty.	Description

● Included in Carburetor Overhaul Kit–Ref. 121.

⋆ Included in Engine Gasket Set–Ref. 358.

◆ Included in Carburetor Gasket Set–Ref. 977.


TORO®