Form No. 3327-217

44in Side Discharge Mower

Wheel Horse® Lawn Tractor Attachment

Model No. 79109—220010001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved


Contents

Description	Page
Deck Assembly	3
Baffle and Cover Assembly	4
Brake and Idler Assembly	5
Decal and Belt Assembly	6

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

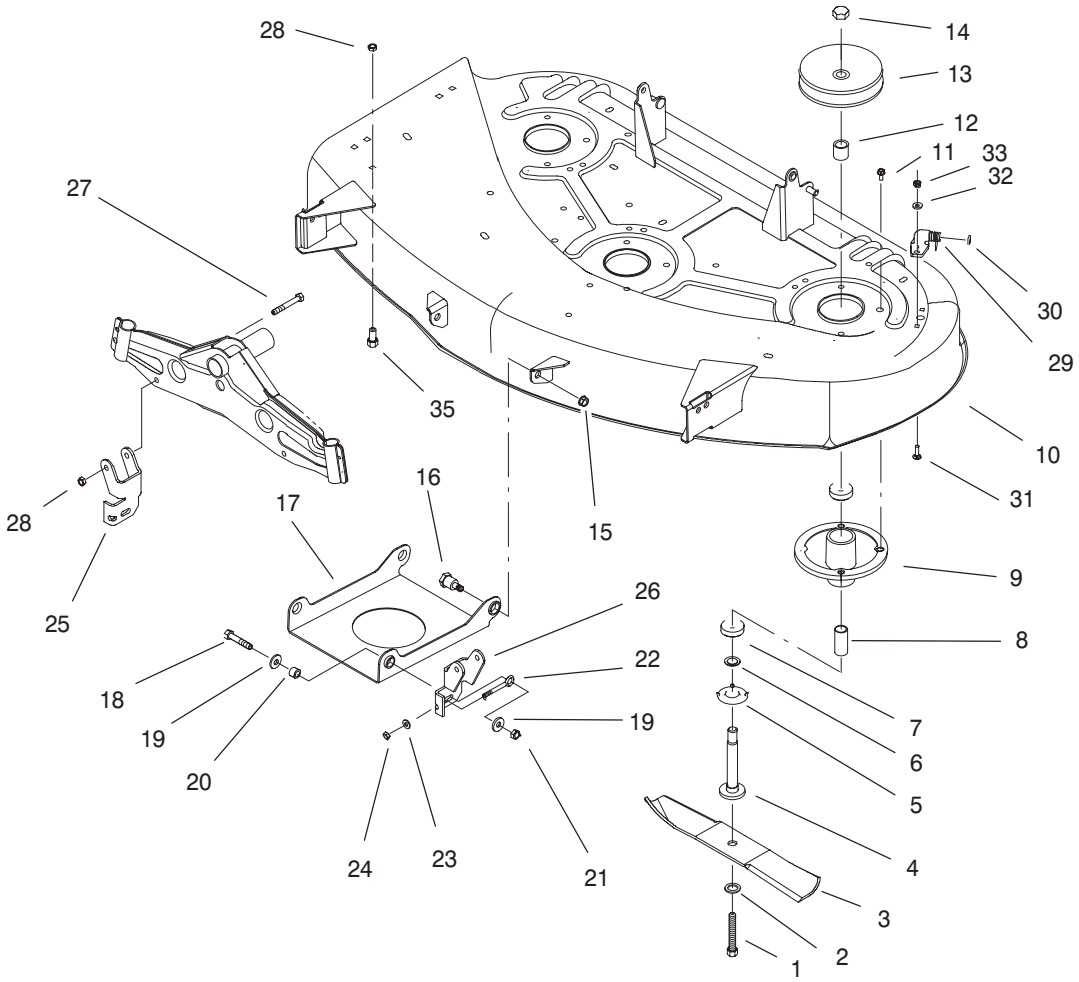


Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	26–0671	3	Screw–Blade
2	3290–465	3	Washer–Belleville
3	54–0010	3	Blade
4	80–4342	3	Shaft–Spindle
5	80–4360	3	Shield–Bearing
6	80–4380	3	Spacer
7	100–1048	6	Bearing–Ball
8	62–3661	3	Spacer–Bearing
9	88–4510	3	Spindle
10	95–7851	1	Deck ASM
11	32144–41	12	Screw–Taptite
12	88–5360	3	Spacer
13	88–5330	3	Pully–Deck
14	3219–6	3	Nut–Hex
15	3296–23	2	Nut–Lock, NI
16	94–5823	2	Bolt–Shoulder
17	93–3881–03	1	Pan–Front Deck, Suspension
18	323–9	2	Screw–HH
19	80–6990	4	Washer–Hardened
20	93–9847	2	Spacer
21	3296–39	2	Nut–Lock, NI
22	61–9980	2	Screw–Adjusting
23	3256–22	2	Washer–Flat
24	3296–42	2	Nut–Lock, NI
25	93–9849–03	1	Bracket–RH

Ref. No.	Part No.	Qty.	Description
26	93–9848–03	1	Bracket–LH
27	322–12	2	Screw–HH
28	3296–29	3	Nut–Lock, NI
29	95–2747	1	Fitting–Washout
30	46–6290	1	O–Ring
31	3229–1	2	Screw–CARR
32	3256–1	2	Washer–Flat
33	3296–16	2	Nut–Lock, NI
35	322–1	1	Screw–HH

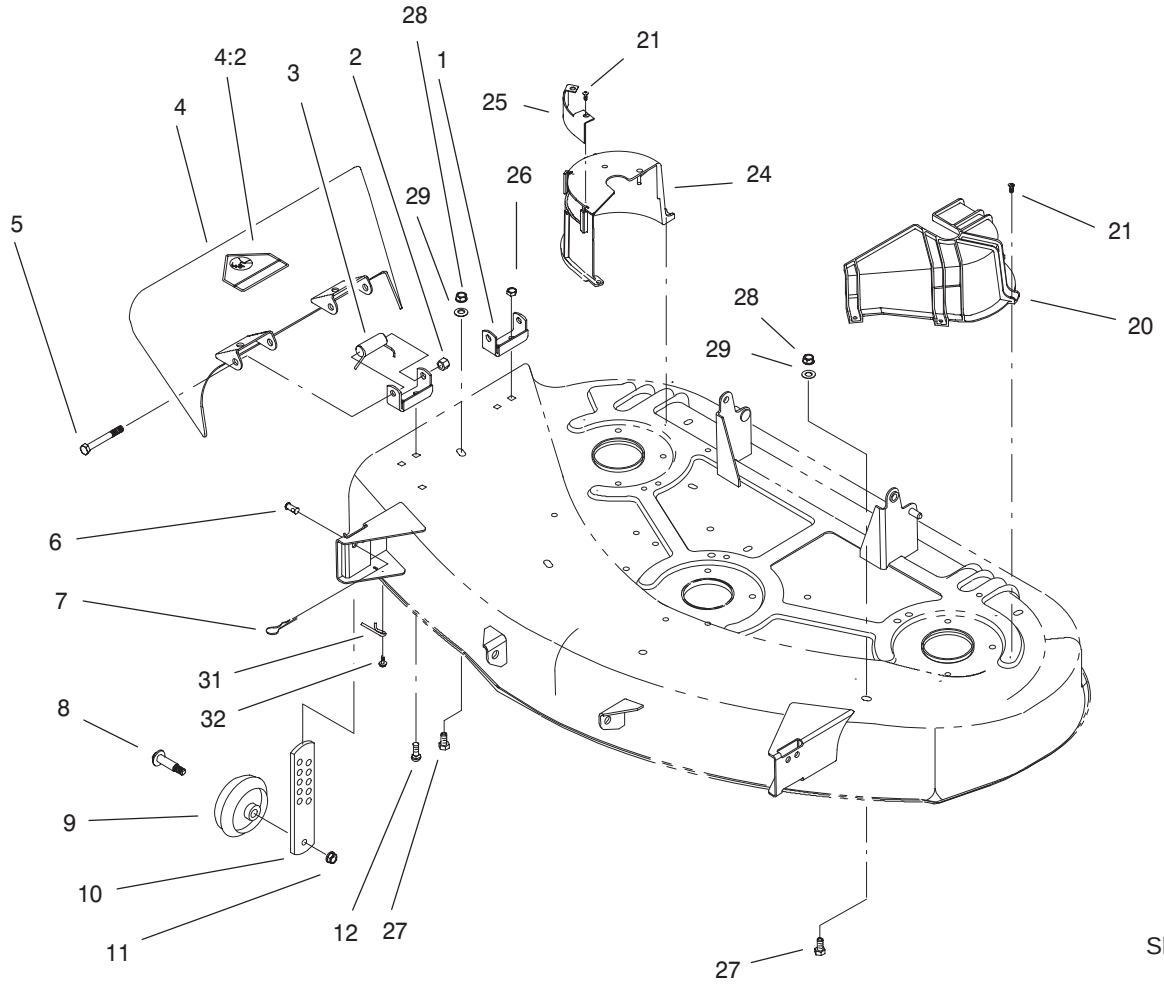


Sheet No.:3

Baffle and Cover Assembly

Ref. No.	Part No.	Qty.	Description
1	29–5590–03	2	Bracket–Pivot
2	3296–5	2	Nut–Lock, NI
3	40–6230	2	Spring
4	93–9745	1	Deflector ASM
5	3211–15	2	Screw–HH
6	283–2	2	Pin–Clevis
7	3290–307	2	Pin–Hair
8	56–6591	2	Bolt–Wheel
9	701756	2	Wheel–Gage
10	93–8010	2	Plate–Gage Wheel
11	3296–59	2	Nut–Lock, NI
12	3230–23	4	Screw–CARR
20	93–3866	1	Cover–Belt, LH
21	32104–76	9	Screw
24	93–3865	1	Cover–Belt, RH
25	93–3876–03	1	Insert–Belt Cover
26	3296–29	4	Nut–Lock, NI
27	3231–21	2	Screw–CARR
28	3296–39	2	Nut–Lock, NI
29	3256–5	2	Washer–Flat
31	94–1981	2	Spring–Gage Wheel
32	32104–76	2	Screw

Ref. No.	Part No.	Qty.	Description

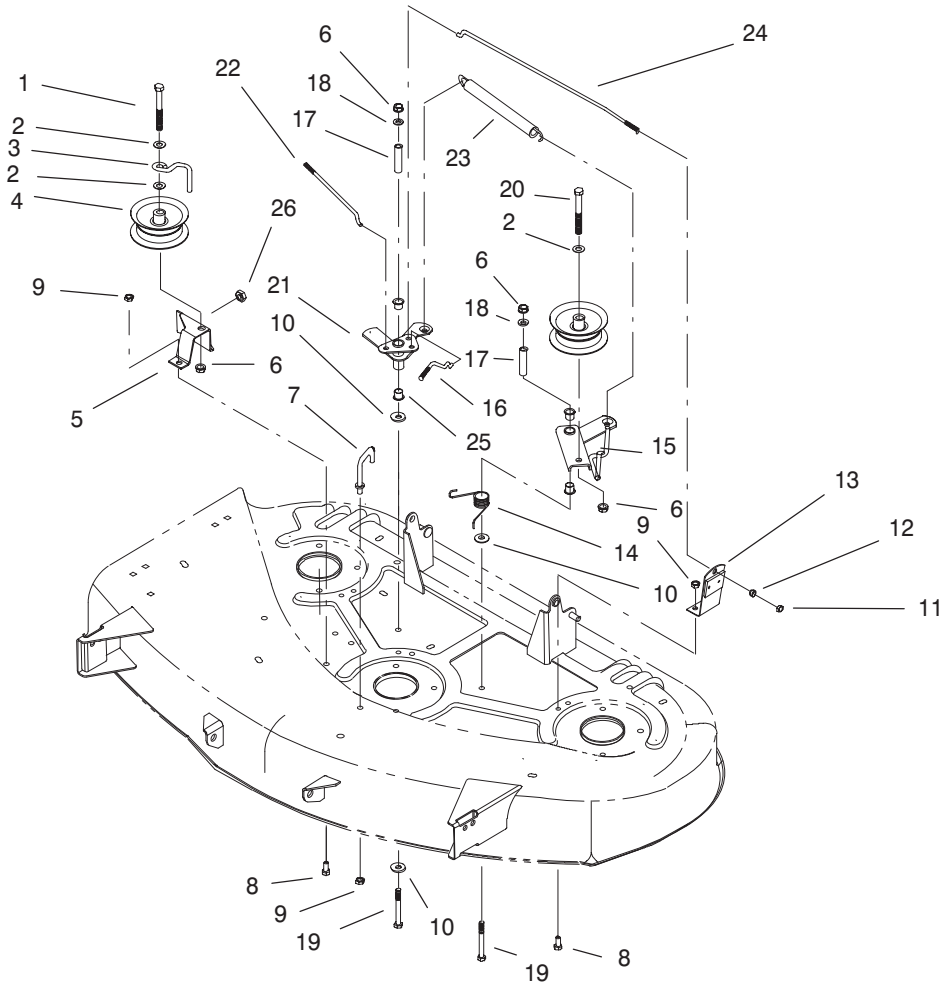


Sheet No.:4

Brake and Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	323–12	1	Screw–HH
2	3256–24	3	Washer–Flat
3	88–5070	1	Guide–Idler, Belt
4	88–5630	2	Pulley–Idler, Flat
5	93–3860–03	1	Bracket–Idler
6	3296–39	4	Nut–Lock, NI
7	88–5960	1	Guide–Trans Belt, LH
8	322–3	9	Screw–HH
9	3296–29	10	Nut–Lock, NI
10	80–6990	3	Washer–Hardened
11	3296–42	3	Nut–Lock, NI
12	67–0710	3	Ball–Swivel, Stop
13	93–3841	3	Brake ASM
14	93–9342	1	Spring–Torsion
15	94–1986–03	1	Bellcrank
16	93–3852	1	Rod–Center Brake
17	94–1988	2	Spacer–Pivot
18	3256–24	2	Washer–Flat
19	323–14	2	Screw–HH
20	323–10	1	Screw–HH
21	94–1989–03	1	Bellcrank
22	93–3853	1	Rod–Brake, RH
23	93–3850	1	Spring–Deck Engage
24	93–3851	1	Rod–Brake, LH
25	256–257	4	Flange–Nyliner

Ref. No.	Part No.	Qty.	Description

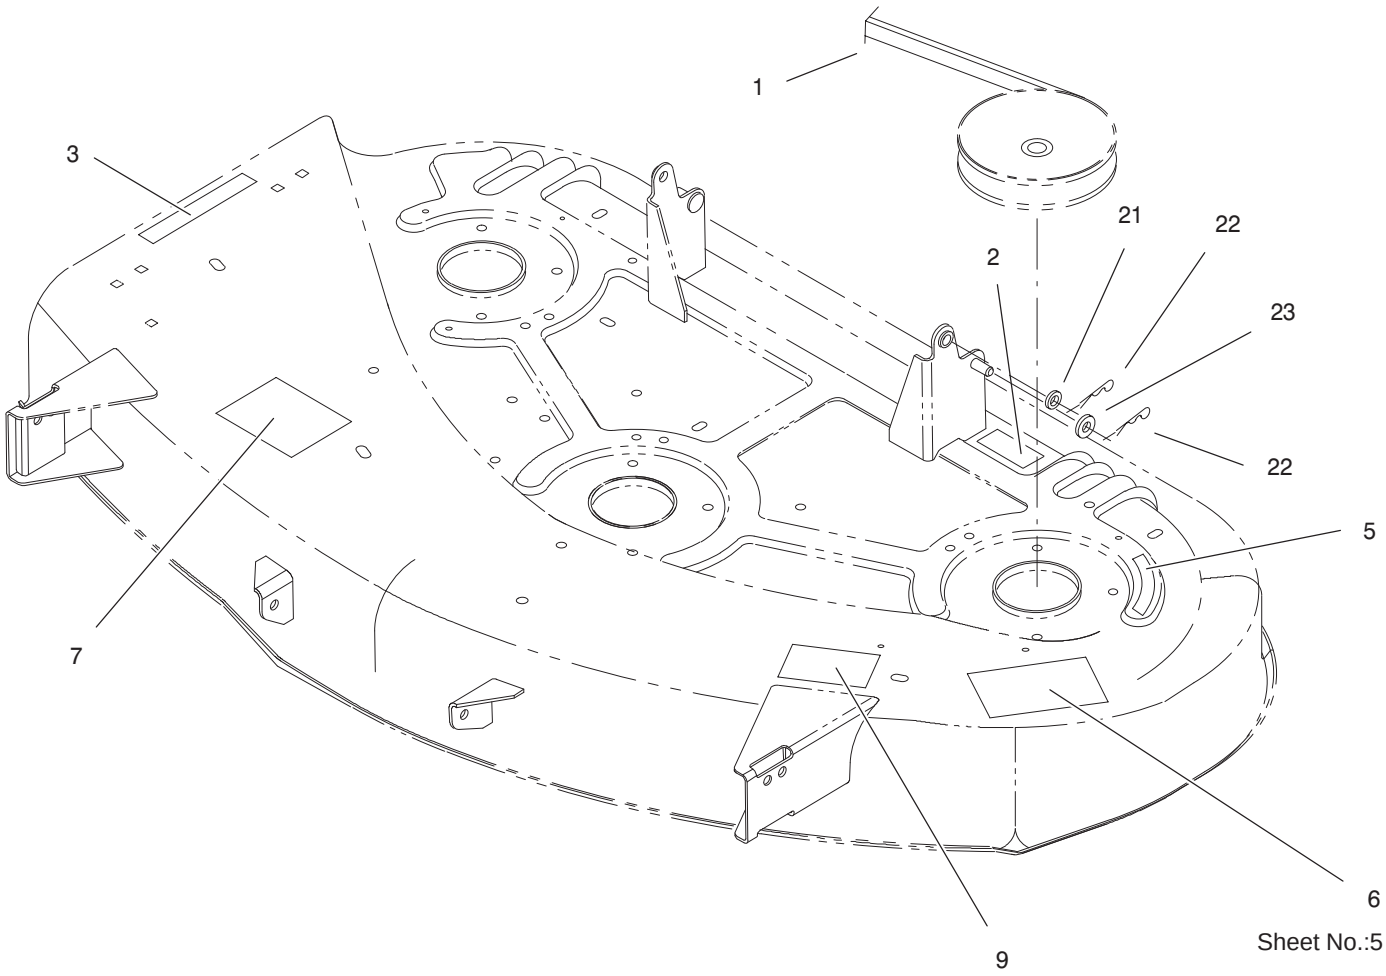

Sheet No.:5

Decal and Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	105–2473	1	V–Belt, 44” Deck
2	93–6674	2	Decal–Warning
3	93–7009	1	Decal–Danger
5	93–6677	2	Decal–Shield, Danger
6	93–7010	2	Decal–Danger
7	93–3777	1	Decal, Belt Install
9	93–7282	1	Decal–Wheel Adjustment
21	3256–24	2	Washer–Flat
22	3290–307	4	Pin–Hair
23	80–6990	2	Washer–Hardened

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								


TORO®