Form No. 3327–383

Mid–Size Mower

ProLine T–Bar Gear 17hp with 44in SD Mower

Model No. 30321—2300000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2003
All Rights Reserved


Contents

Description	Page
Engine Installation Assembly	3
Fuel Tank Assembly	4
Lower Control Assembly	5
Transmission Drive Assembly	6
Wheel Drive and Brake Assembly	7
Upper Handle Assembly	8
Control Panel Assembly	9
Carrier Frame Assembly	10
Spindle, Pulley and Belt Assembly	11
Spindle Assembly No. 106–0786	12
Spindle Assembly No. 106–0784	13
Deck Assembly	14
Drive Belt and Tensioner Assembly	15
Electrical Schematic	16
Decal Assembly Kawasaki FH500V–AS29	17
Cylinder / Crankcase Assembly Kawasaki FH500V–AS29	18
Valve / Camshaft Assembly Kawasaki FH500V–AS29	20
Piston / Crankshaft Assembly Kawasaki FH500V–AS29	22
Lubrication Equipment Assembly Kawasaki FH500V–AS29	23
Cooling Equipment Assembly Kawasaki FH500V–AS29	24
Electrical Equipment Assembly Kawasaki FH500V–AS29	26
Control Equipment Assembly Kawasaki FH500V–AS29	28
Carburetor Assembly Kawasaki FH500V–AS29	30
Air Filter / Muffler Assembly Kawasaki FH500V–AS29	32
Fuel Tank / Fuel Valve Assembly Kawasaki FH500V–AS29	33
Starter Assembly Kawasaki FH500V–AS29	34

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

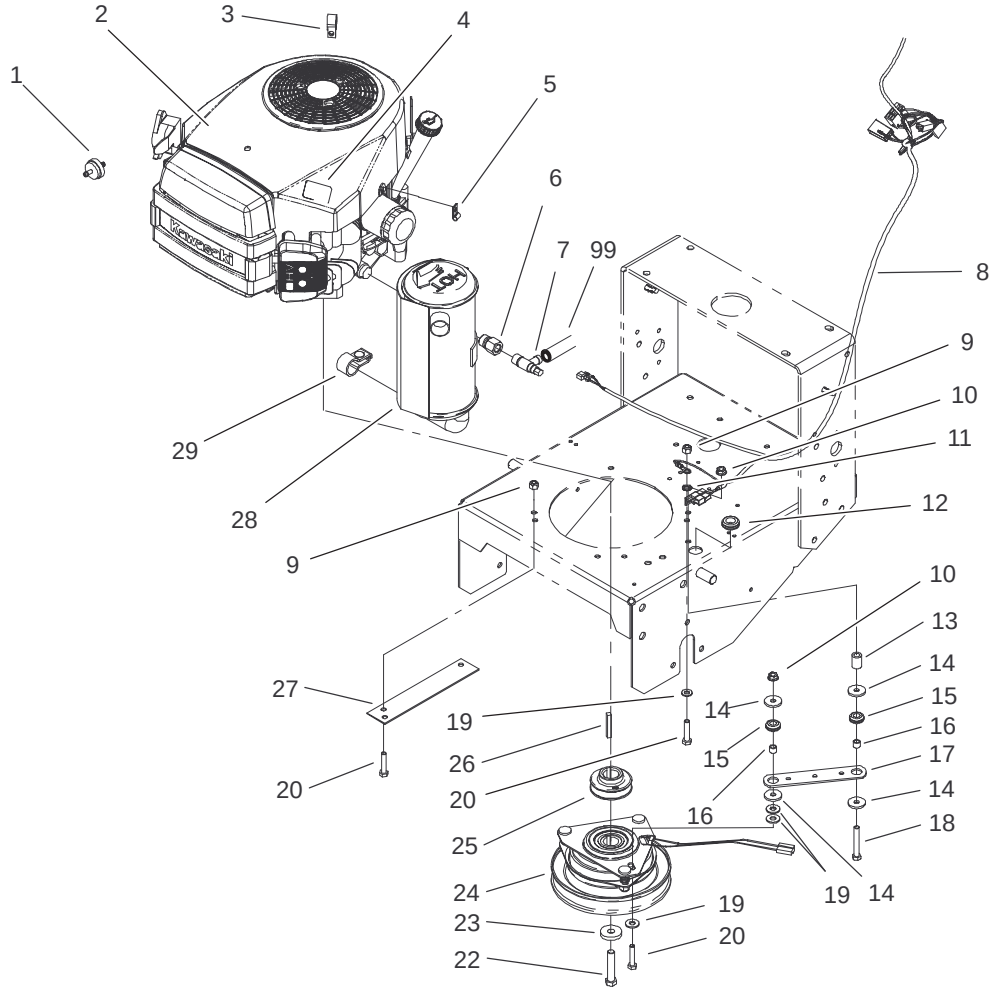


Sheet No.:4

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	56–6360	1	Filter–Fuel
☆2		1	Engine–Kawasaki, Fh500v–As29
3	2412–87	1	Clamp–Cable
4	106–0699	1	Decal–Warning, Hot Surfaces
5	2412–72	1	Clip–Closed, Insulated
6	103–1966	1	Adapter
7	103–1965	1	Valve–Drain, Oil
8	104–8137	1	Harness–Wire
9	3296–29	4	Nut–Lock, NI
10	32128–20	2	Nut–HF
11	3255–8	1	Washer–Lock
12	237–124	1	Grommet
13	104–6373	1	Tube–Retainer
14	1–613235	4	Washer
15	1–633630	2	Grommet–Brake
16	1–633545	2	Spacer–Grommet
17	1–633543	1	Strap–Clutch/Brake
18	322–11	1	Screw–HH
19	3256–23	5	Washer–Flat
20	322–7	5	Screw–HH
22	3212–9	1	Screw–HH
23	112843	1	Washer
24	105–2635	1	Clutch/Brake
25	105–0827	1	Pulley–Drive

Ref. No.	Part No.	Qty.	Description
26	608006	1	Key–Square
27	94–5847–01	1	Cover–Pulley
28	100–6467	1	Muffler
29	100–6468	1	Clamp–Muffler
99	103–1964	1	Hose–Drain, Oil

☆ Not serviced separately

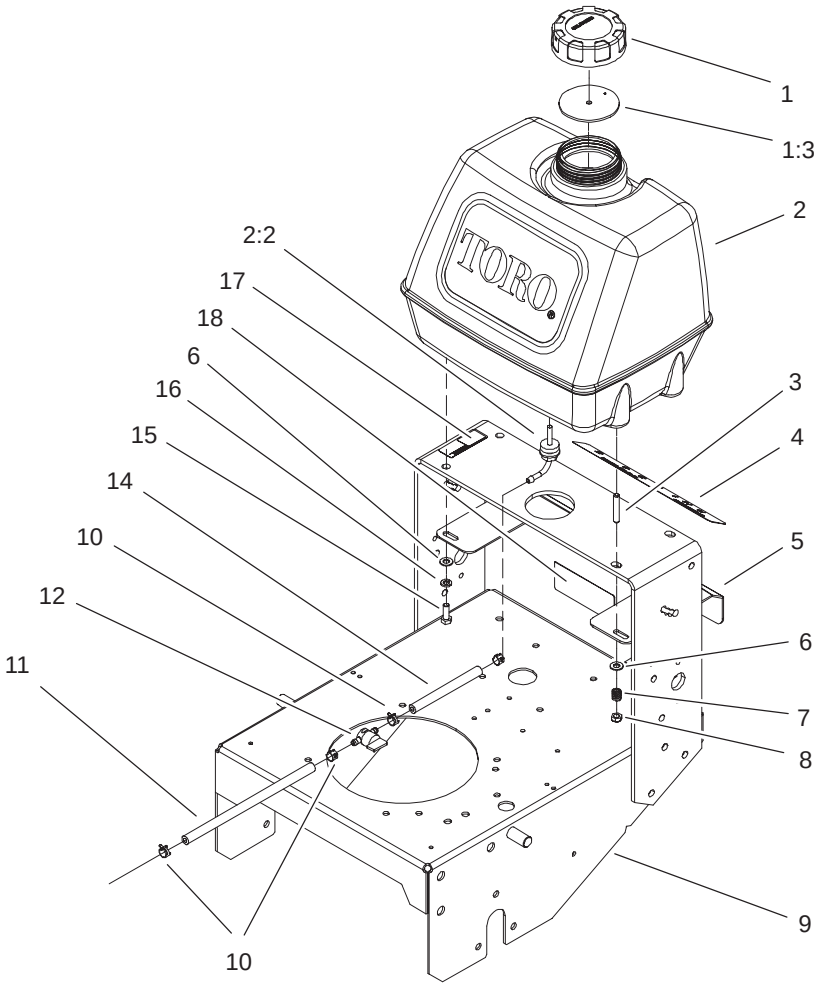


Sheet No.:5

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	88–3980	1	Gas Cap ASM
1:3	88–4010	1	Gasket–Cap, Gas
2	106–0730	1	Fuel Tank ASM
2:2	103–2605	1	Fitting–Fuel, Bulkhead
3	104–8121	2	Stud–Threaded
4	106–5494	1	Decal–Ground Speed
5	104–8102–01	1	Plate–Gate, Shift
6	3256–23	4	Washer–Flat
7	1–633349	2	Spring–Tank, Fuel
8	3296–47	2	Nut–Lock, NI
9	106–0546–01	1	Gear Frame ASM
10	2412–98	4	Clamp
11	47–2982	1	Hose–Fuel
12	1–603770	1	Valve–Fuel
14	47–2980	1	Hose–Fuel
15	322–4	2	Screw–HH
16	3253–4	2	Washer–Lock
17	95–2814	1	Decal–Shut Off, Fuel
18	98–0776	1	Decal–Caution

Ref. No.	Part No.	Qty.	Description

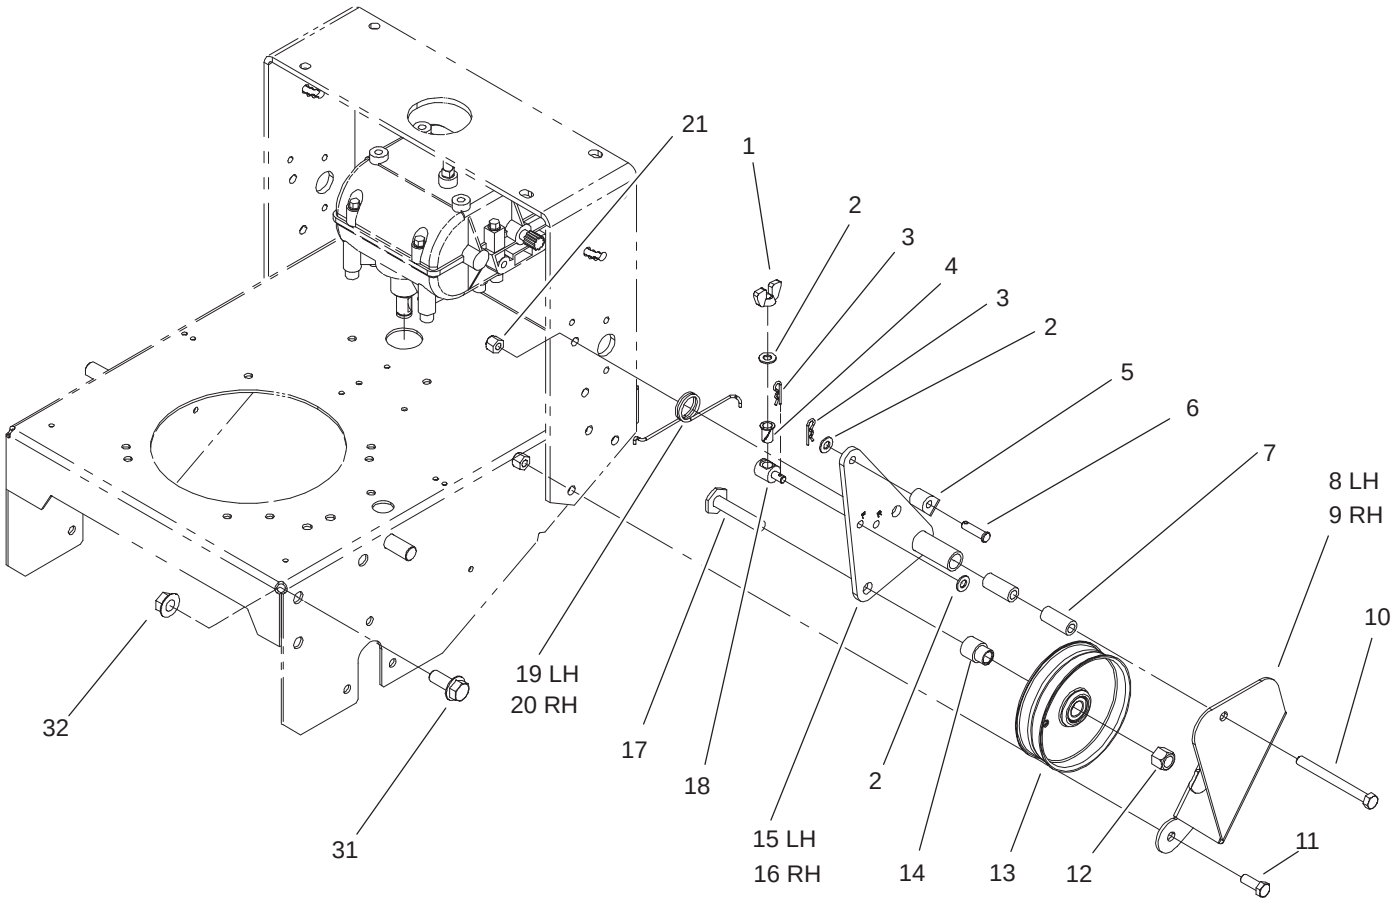


Sheet No.:6

Lower Control Assembly

Ref. No.	Part No.	Qty.	Description
1	32103–25	2	Nut–Wing
2	3256–23	6	Washer–Flat
3	3290–307	4	Pin–Hair
4	52–2890	2	Bushing–Nylon
5	74–0521	2	Fitting–Rod
6	283–6	2	Pin–Clevis
7	74–0040	4	Spacer–Pivot, Idler
8	67–6380–01	1	Bracket–Support, LH
9	67–6370–01	1	Bracket–Support, RH
10	323–16	2	Screw–HH
11	323–6	4	Screw–HH
12	3296–23	2	Nut–Lock, NI
13	95–2800	2	Pulley–Idler
14	95–2801	2	Spacer–Pulley
15	74–0220–01	1	Bracket–Idler, LH
16	74–0230–01	1	Bracket–Idler, RH
17	51–4450	2	Screw–Leveler
18	68–9690	2	Fitting–Rod
19	51–4380	1	Spring–Torsion, LH
20	51–4370	1	Spring–Torsion, RH
21	3296–39	6	Nut–Lock, NI
31	3234–32	6	Screw–HHF
32	32128–23	6	Nut–HF

Ref. No.	Part No.	Qty.	Description

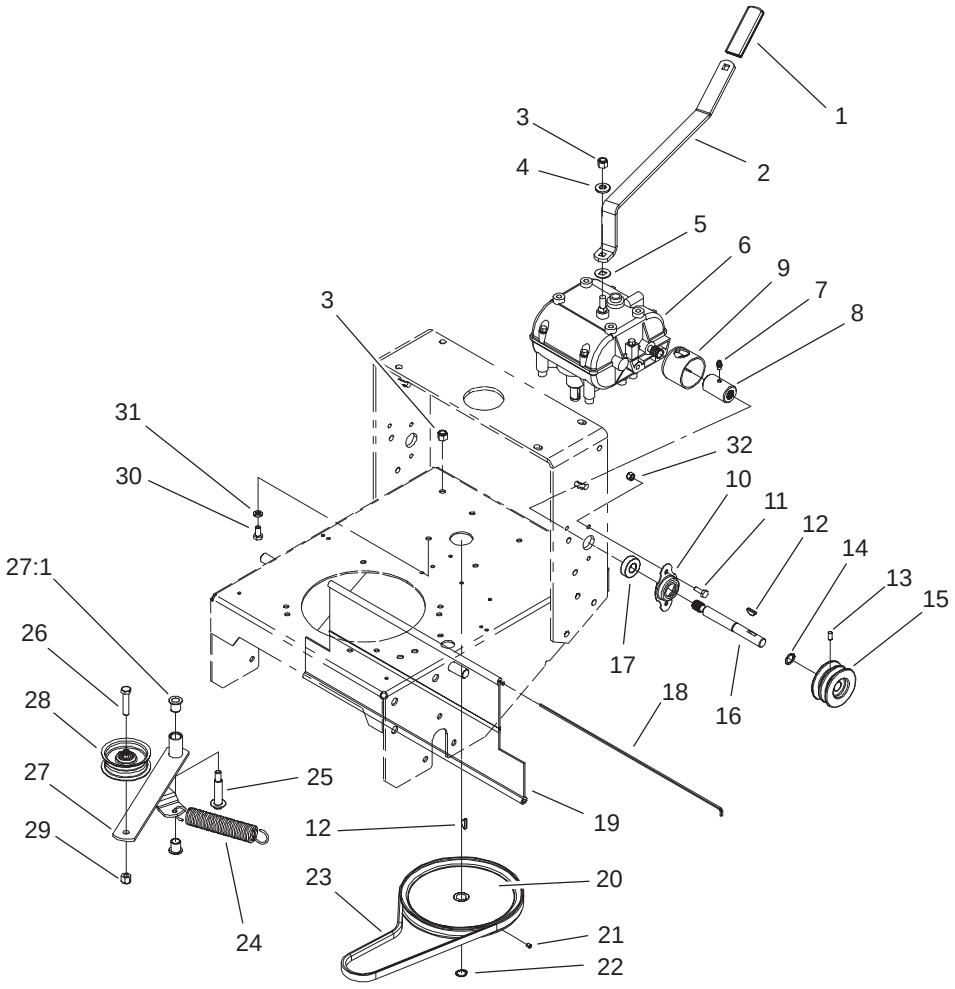


Sheet No.:7

Transmission Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	47–1970	1	Grip
2	98–3274–03	1	Lever–Shift
3	3296–6	2	Nut–Lock, NI
4	98–5975	1	Washer–Belleville
5	1–323379	1	Washer
6	1–323500	1	Transmission
7	302–5	2	Fitting–Grease
8	1–323680	2	Coupler
9	51–4220	2	Guard–Coupler
10	1–323254	2	Flange–Output
11	321–4	4	Screw–HH
12	3257–5	3	Key–Woodruff
13	3245–9	2	Screw–Set
14	32151–62	2	Ring–Retaining
15	105–2698	2	Pulley–Transmission
16	104–1102	2	Shaft–Output
17	1–323252	2	Bearing–Shaft
18	95–1529	1	Rod–Shield
19	95–1526	1	Shield–Trailing
20	105–5646	1	Pulley–Driven
21	3245–1	1	Screw–Set, HSH
22	32120–64	1	Ring–Snap, External
23	105–5668	1	V–Belt
24	68–2190	1	Spring
25	27–6230	1	Bolt–Wheel
26	323–9	1	Screw–HH

Ref. No.	Part No.	Qty.	Description
27	16–7509	1	Lever–Idler
27:1	256–155	2	Bushing–Flange
28	62–4540	1	Pulley
29	3296–39	1	Nut–Lock, NI
30	322–2	4	Screw–HH
31	3253–4	4	Washer–Lock
32	3296–42	4	Nut–Lock, NI

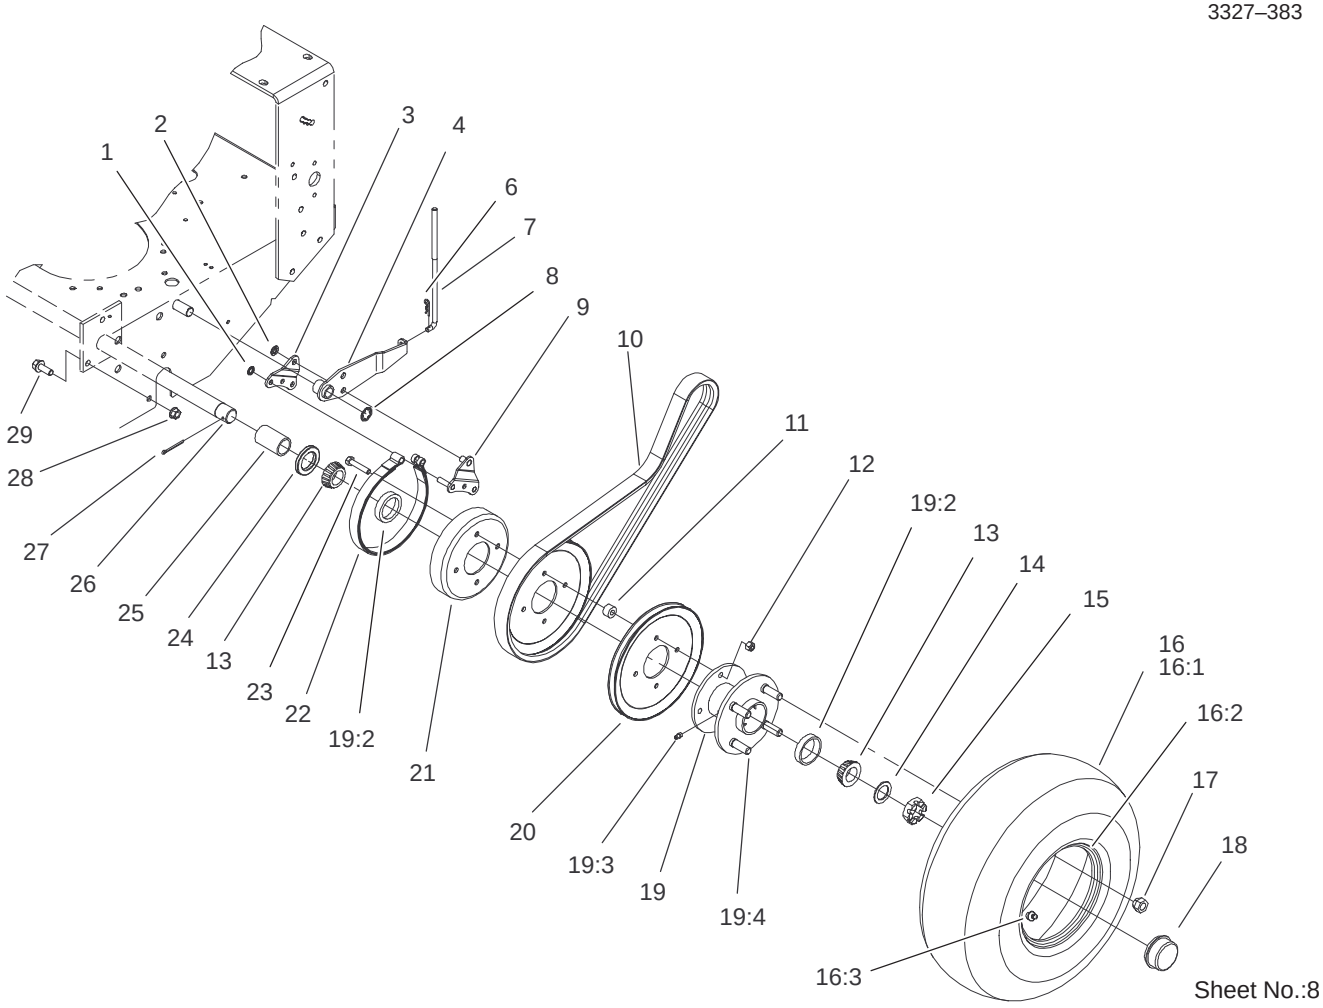


Sheet No.:8

Wheel Drive and Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32151–72	4	Ring–Retaining
2	32151–56	2	Ring–Retaining, External
3	105–4651–01	2	Plate–Link, Brake
4	106–5537–01	2	Brake Arm ASM
6	3290–307	2	Pin–Hair
7	51–4580	2	Rod–Brake
8	32151–40	2	Ring–Retaining
9	105–4652–01	2	Brake Link ASM
10	51–4290	2	V–Belt
11	51–4170	8	Spacer–Pulley
12	3296–29	8	Nut–Lock, NI
13	254–94	4	Bearing–Cone, Taper
14	1–523157	2	Washer–Spacer
15	1–809082	2	Nut–SHH
16	104–6321	2	Wheel And Tire ASM
16:1	104–6322	1	Tire
16:2	104–6323	1	Wheel
16:3	232–27	1	Stem–Valve
17	242–50	8	Nut–Lug
18	241–119	2	Cap–Dust
19	1–413333	2	Hub–Wheel ASM
☆19:1		1	Hub–Wheel
19:2	254–72	2	Bearing–Cup, Tapered
19:3	302–19	1	Fitting–Grease
19:4	1–633926	4	Stud–Wheel

Ref. No.	Part No.	Qty.	Description
20	51–4160–03	4	Pulley–Wheel
21	1–323261	2	Drum–Brake
22	1–323262	2	Band–Brake
23	322–8	8	Screw–HH
24	1–543511	2	Seal–Grease
25	104–1197	2	Spacer–Wheel
26	104–1196–01	1	Axle ASM
27	1–806800	2	Pin–Cotter
28	32128–21	6	Nut–HF
29	3234–11	6	Screw–HHF

☆ Not serviced separately

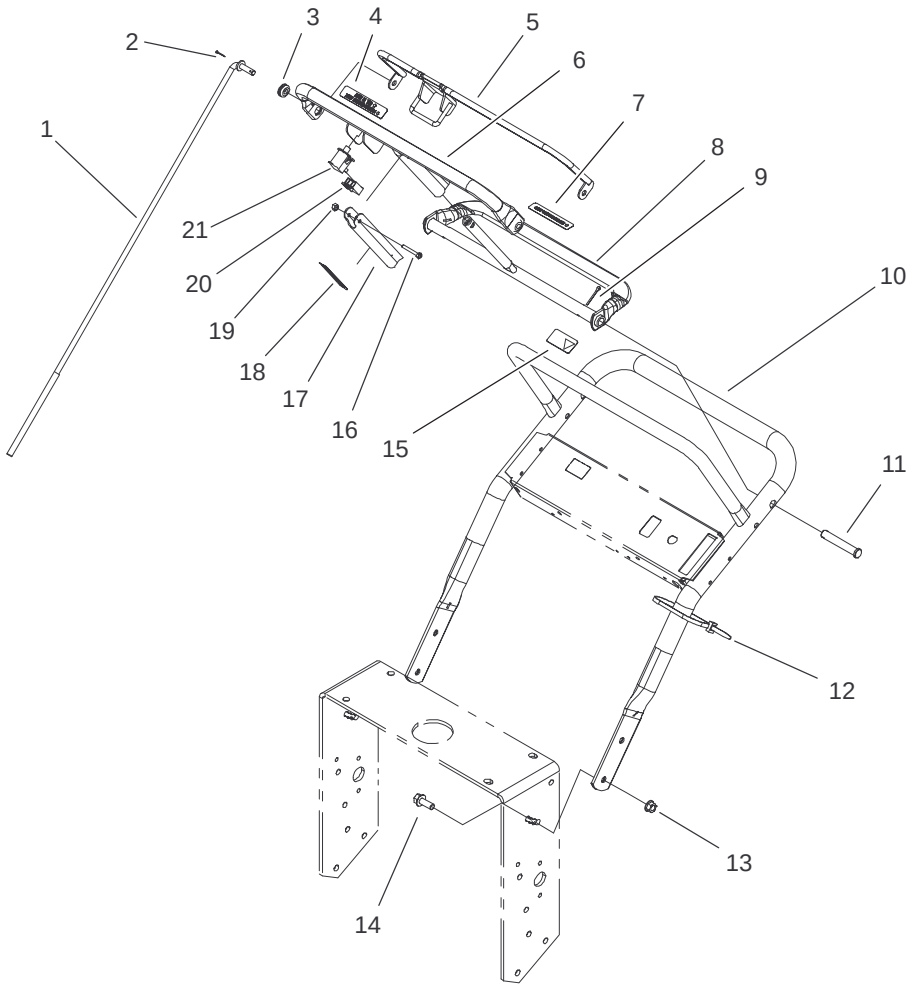


Sheet No.:9

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	105–4677	2	Rod–Control
2	3272–4	2	Pin–Cotter
3	237–141	2	Grommet–Rubber
4	82–2290	1	Decal–Bar, Control
5	82–7680–03	1	Bail
6	82–7690–03	1	Bar–Control
7	82–2280	1	Decal–Handle, Reverse
8	106–5477–03	1	Control Pivot ASM
9	3272–11	2	Pin–Cotter
10	105–3158–03	1	Upper Handle ASM
11	283–55	2	Pin–Clevis
12	3290–378	1	Tie–Cable
13	32128–21	4	Nut–HF
14	3234–11	4	Screw–HHF
15	98–4387	1	Decal–Protection, Ear
16	32105–1	1	Screw–SHH
17	51–4850–03	1	Lever–Brake, Parking
18	52–2010	1	Decal–Lever, Parking
19	3296–2	1	Nut–Lock
20	218–595	1	Connector–Body
21	82–2190	1	Switch–Bail

Ref. No.	Part No.	Qty.	Description

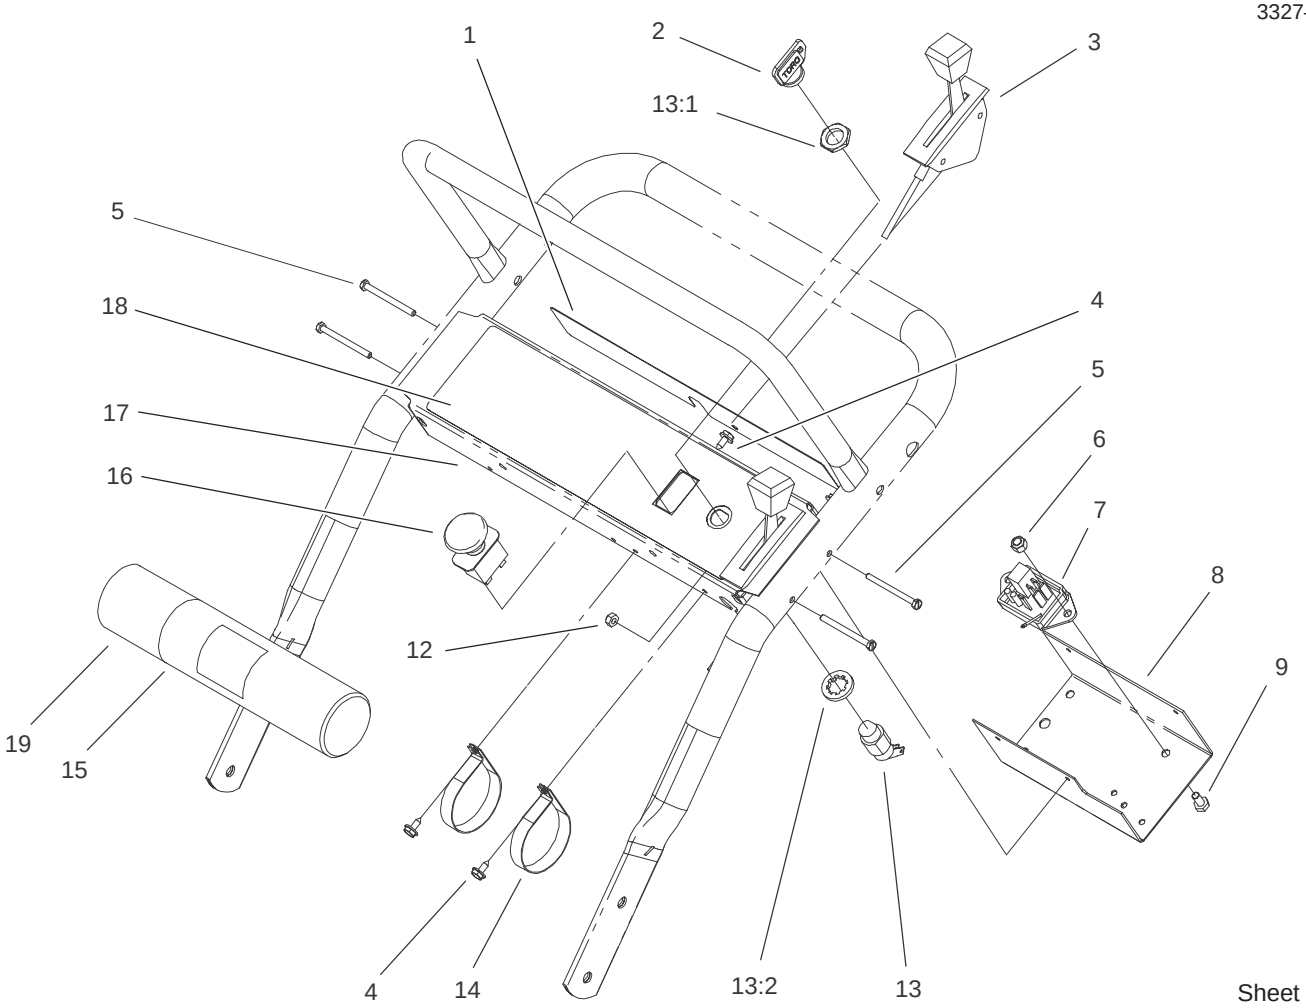


Sheet No.:10

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	105–0884	1	Decal–Danger
2	63–8360	2	Key–Ignition
3	100–6450	1	Control–Throttle
4	32104–76	4	Screw
5	32105–14	4	Screw
6	3296–42	1	Nut–Lock, NI
7	104–8141	1	Module–Delay
8	93–1187–03	1	Panel–Bottom
9	321–2	1	Screw–HH
12	3296–2	4	Nut–Lock
13	29–5560	1	Switch–On/Off
13:1	218–461	1	Nut–HH
13:2	3254–5	1	Washer–Tooth
14	2412–120	2	R–Clamp
15	104–7050	1	Housing–Manual
16	104–8140	1	Switch–PTO
17	104–8177–03	1	Panel–Control
18	106–5499	1	Decal–Control Panel
19	104–7048	1	Cap–Housing

Ref. No.	Part No.	Qty.	Description

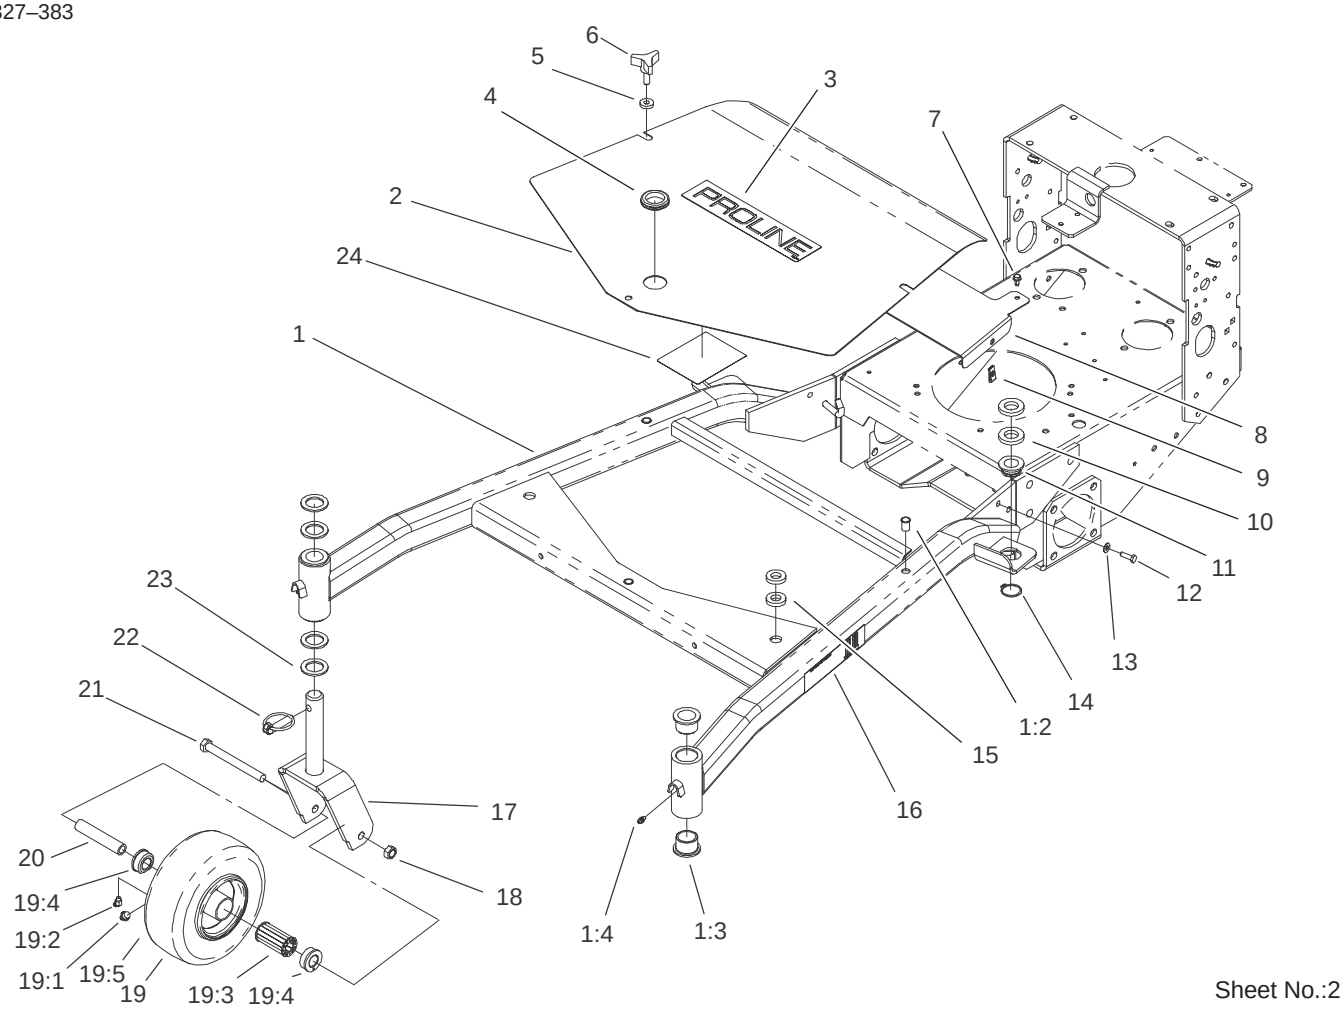


Sheet No.:2

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	106–0707	1	Carrier Frame ASM
1:2	32148–9	3	Insert–Nut
1:3	94–1291	4	Bushing–Special
1:4	302–5	2	Fitting–Grease
2	106–0537–01	1	Cover
3	106–0719	1	Decal–Proline
4	240–3	1	Grommet–Rubber
5	106–0565	3	Washer–Rubber
6	104–8587	3	Knob
7	12–3270	2	Screw
8	105–9389–01	1	Shield–Heat
9	3290–199	2	Nut–Speed
10	104–1105	4	Spacer–Support, Deck
11	1–513336	2	Bushing–Deck
12	321–5	2	Screw–HH
13	3256–22	2	Washer–Flat
14	32120–33	2	Ring–Retaining
15	105–0842	4	Spacer
16	106–0635	2	Decal–HOC
17	105–3159–01	2	Castor Fork ASM
18	32153–5	2	Nut–Lock
19	100–6451	2	Castor Wheel ASM
19:1	232–27	1	Stem–Valve
19:2	302–11	1	Fitting–Lube, 45°
19:3	83–4740	1	Bearing
19:4	62–5580	2	Bearing–Outside

Ref. No.	Part No.	Qty.	Description
19:5	100–6452	1	Tire–Tubeless
20	100–6453	2	Bushing–Spanner
21	325–19	2	Screw–HH
22	283–71	2	Pin–Lynch
23	3–6781	8	Washer–Thrust
24	106–5505	1	Decal–Service

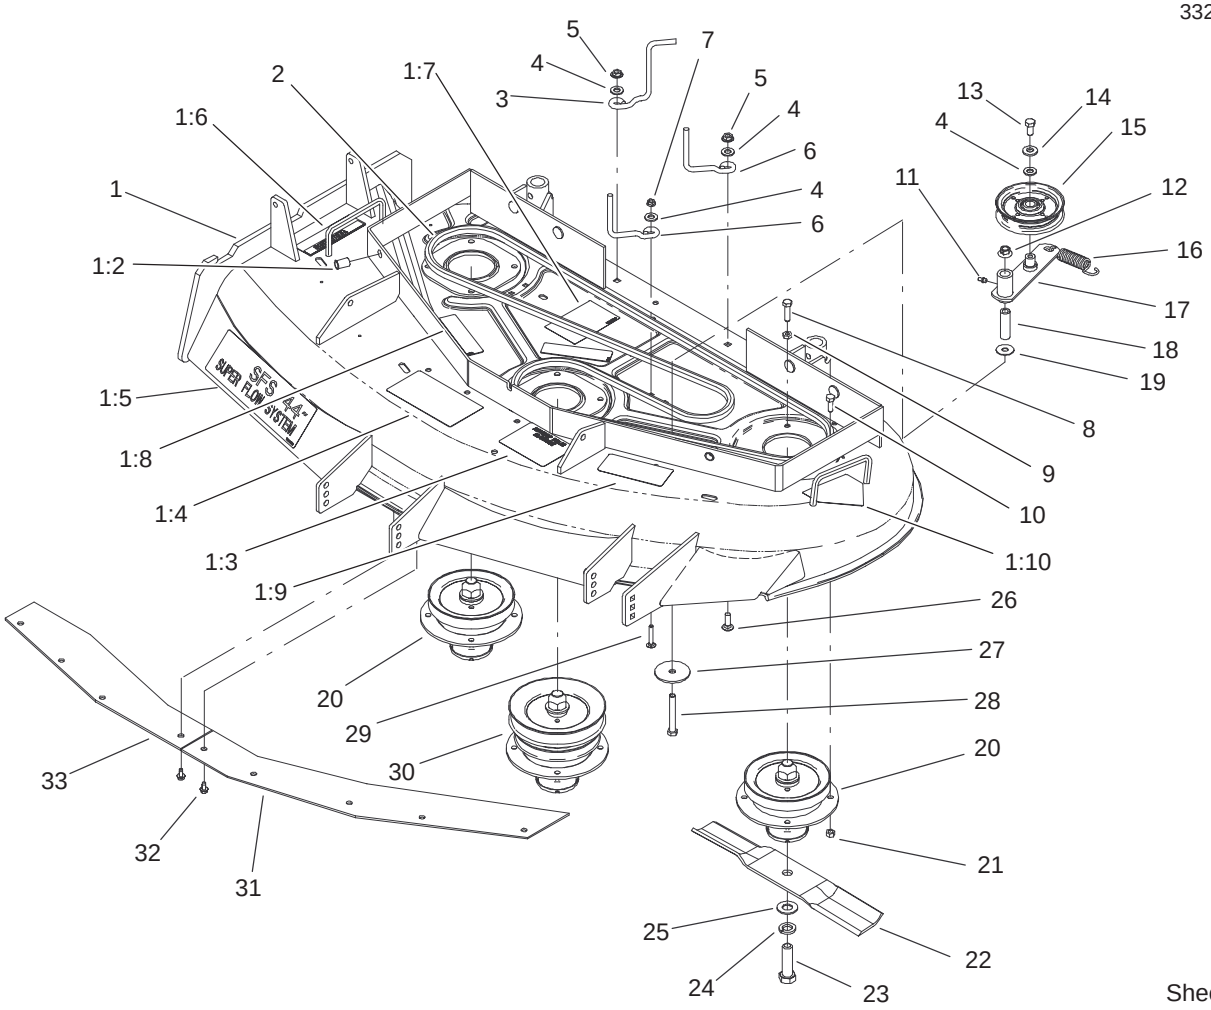


Sheet No.:3

Spindle, Pulley and Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	106–0617	1	Deck ASM
1:2	32148–10	2	Insert–Threaded
1:3	106–5532	1	Decal–Antiscalp
1:4	66–1340	1	Decal–Danger
1:5	106–0704	1	Decal–Sfs, 44”
1:6	104–8569	1	Decal–Warning
1:7	104–8186	1	Decal–Routing, Belt
1:8	67–5360	3	Decal–Danger
1:9	68–8340	1	Decal–Torque
1:10	43–8480	1	Decal–Danger
2	27–1160	1	V–Belt
3	106–5488	1	Guide–Belt
4	3256–24	4	Washer–Flat
5	32128–13	2	Nut–HF
6	52–4780	2	Rod–Belt
7	32128–10	1	Locknut–Flange
8	322–6	1	Screw–HH
9	3218–2	1	Nut–Jam
10	322–4	11	Screw–HH
11	302–19	1	Fitting–Grease
12	32128–19	1	Nut–HF
13	323–4	1	Screw–HH
14	98–5975	1	Washer–Belleville
15	65–5940	1	Pulley–Idler
16	54–2730	1	Spring–Extension
17	104–8110	1	Idler Arm ASM

Ref. No.	Part No.	Qty.	Description
18	104–8113	1	Tube–Idler
19	52–2860	1	Washer
20	106–0786	2	Spindle Housing ASM
21	32152–1	12	Nut–Lock, NI
22	54–0010	3	Blade
23	51–4060	3	Screw–Blade
24	3253–8	3	Washer–Lock
25	3256–27	3	Washer–Flat
26	3230–2	2	Bolt–CARR
27	20–9530	1	Washer–End
28	323–13	1	Screw–HH
29	3229–4	1	Screw–CARR
30	106–0784	1	Spindle Housing ASM
31	100–3258–03	1	Plate–Blowout, LH
32	12–3270	9	Screw
33	100–3257–03	1	Plate–Blowout, RH

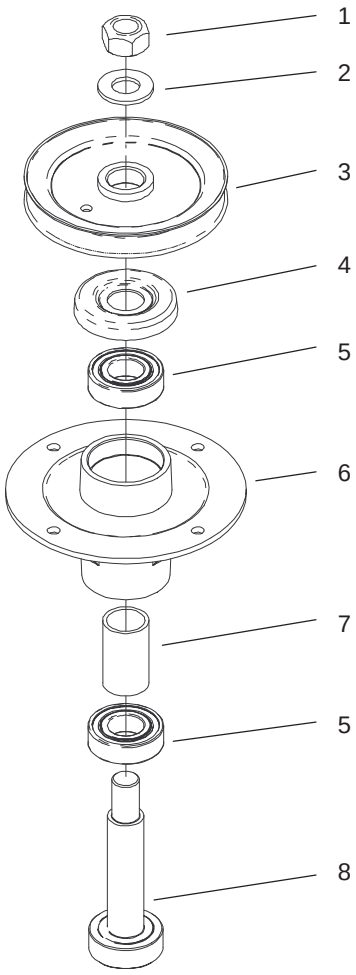


Sheet No.:A1

Spindle Assembly No. 106–0786

Ref. No.	Part No.	Qty.	Description
1	3219–7	1	Nut–Hex
2	7–4150	1	Washer
3	104–1181	1	Pulley ASM
4	106–0873	1	Shield–Bearing
5	104–6325	2	Bearing
6	106–0818	1	Housing–Spindle
7	106–0794	1	Spacer–Bearing
8	106–0780	1	Shaft–Spindle

Ref. No.	Part No.	Qty.	Description

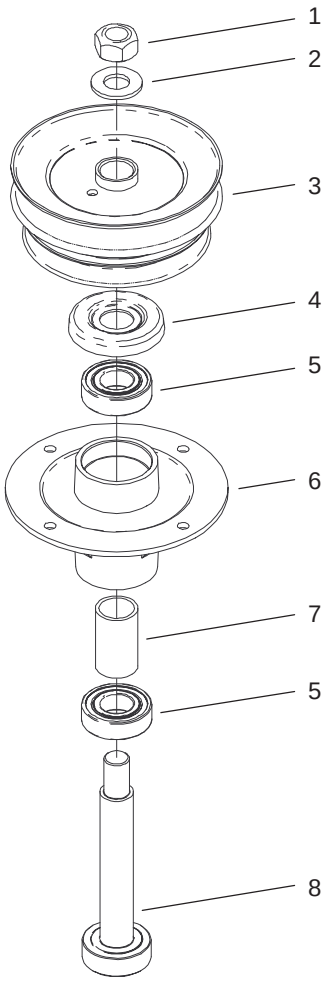


Sheet No.:A2

Spindle Assembly No. 106–0784

Ref. No.	Part No.	Qty.	Description
1	3219–7	1	Nut–Hex
2	7–4150	1	Washer
3	104–1116	1	Pulley And Hub ASM
4	106–0873	1	Shield–Bearing
5	104–6325	2	Bearing
6	106–0818	1	Housing–Spindle
7	106–0794	1	Spacer–Bearing
8	106–0779	1	Shaft–Spindle


Ref. No.	Part No.	Qty.	Description

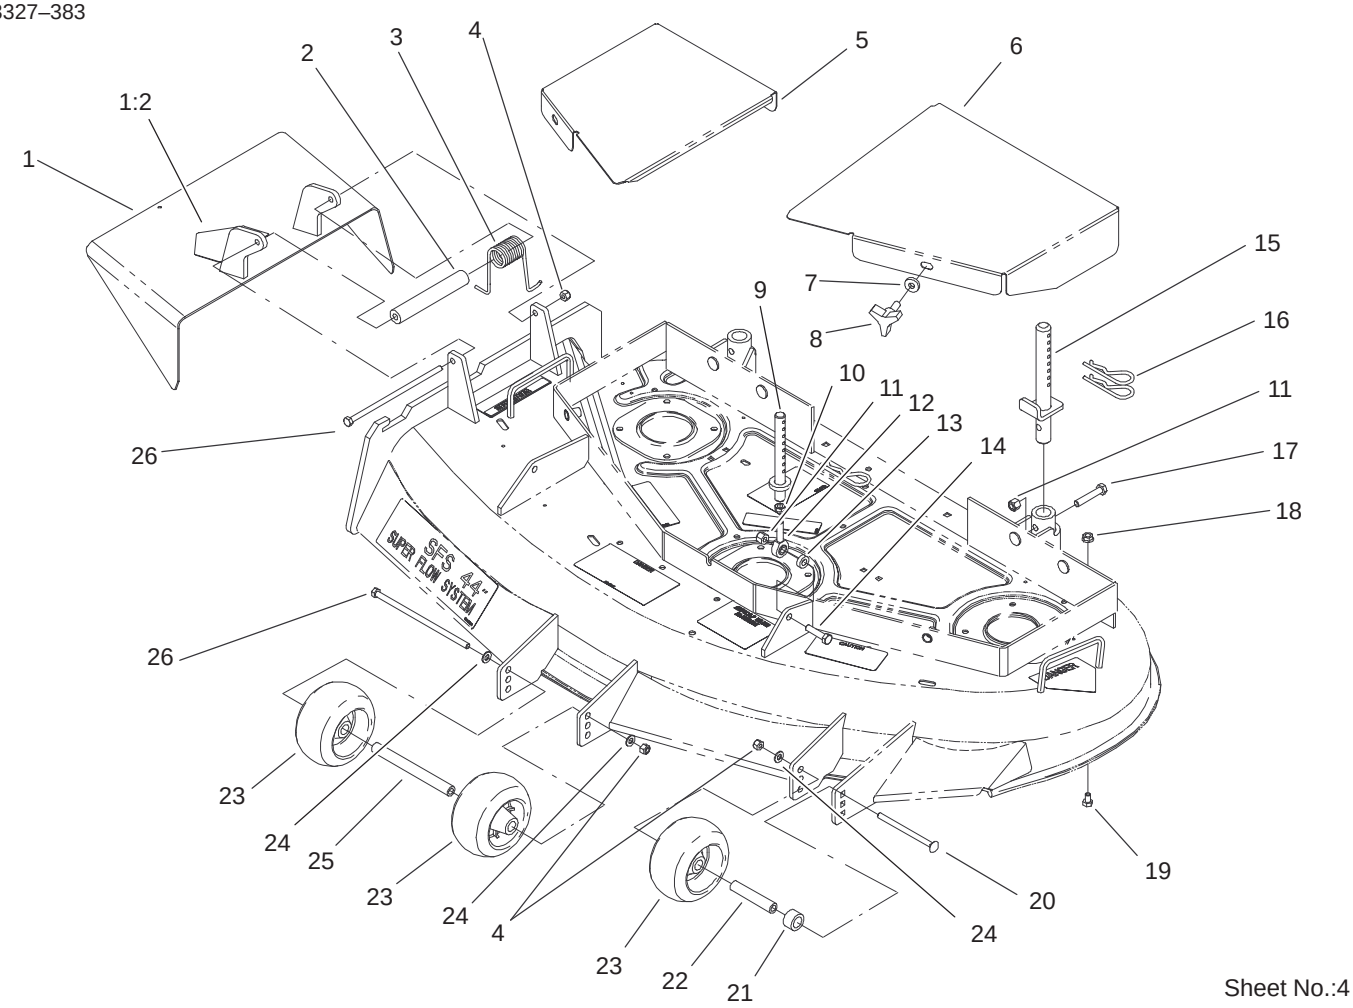

Sheet No.:4

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	105–4625	1	Deflector ASM
1:2	93–1122	1	Decal–Danger
2	105–4622	1	Spacer
3	104–8554	1	Spring–Torsion
4	3296–29	3	Nut–Lock, NI
5	106–3363–01	1	Cover–Belt, RH
6	106–3362–01	1	Cover–Belt, LH
7	106–0565	2	Washer–Rubber
8	104–8587	2	Knob
9	106–0684	2	Front Pin ASM
10	3220–3	2	Nut–Jam
11	3296–39	4	Nut–Lock, NI
12	1–613204	2	Balljoint
13	104–1156	2	Spacer
14	323–8	2	Screw–HH
15	106–3365	2	Rear Pin ASM
16	3290–256	6	Pin–Hair
17	323–10	2	Screw–HH
18	32128–20	4	Nut–HF
19	322–1	4	Screw–HH
20	3230–30	1	Screw–CARR
21	106–0563	1	Spacer–Wheel
22	106–0545	1	Bushing–Roller
23	68–2730	3	Wheel–Gage
24	3256–23	3	Washer–Flat
25	98–5967	1	Spacer
26	322–50	2	Screw–HH

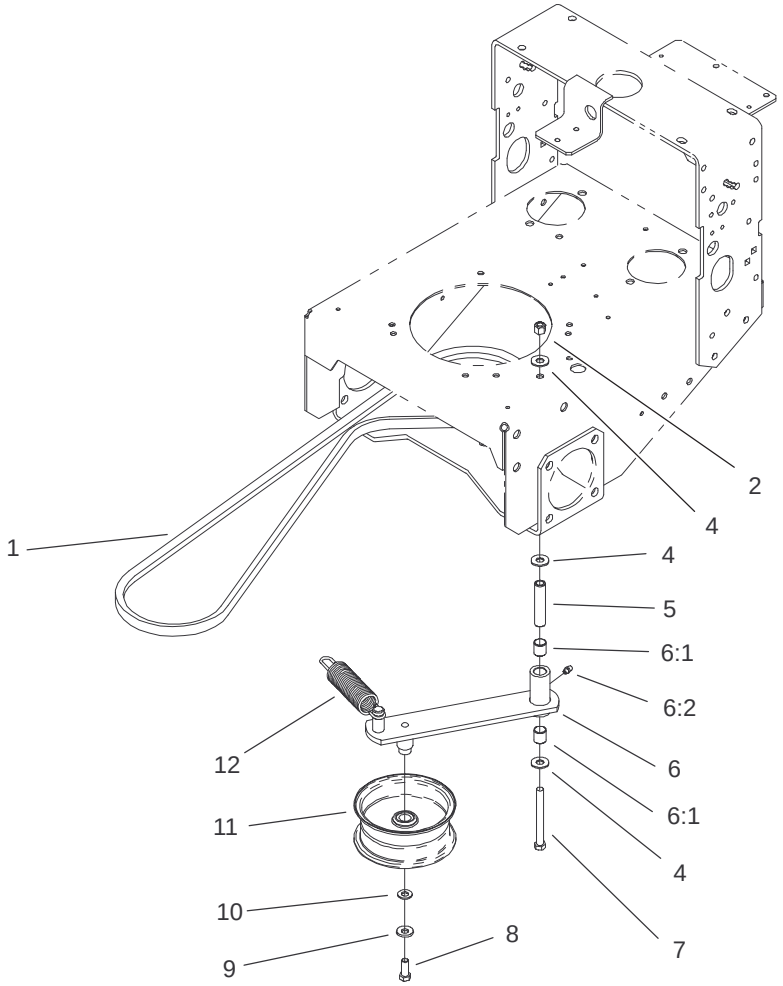


Sheet No.:5

Drive Belt and Tensioner Assembly


Ref. No.	Part No.	Qty.	Description
1	104–8120	1	V–Belt, PTO
2	3296–39	1	Nut–Lock, NI
4	1–809107	3	Washer–Hardened
5	104–6377	1	Tube–Idler
6	106–0734	1	Idler Arm ASM
6:1	1–513034	2	Sleeve–Bearing
6:2	302–5	1	Fitting–Grease
7	323–42	1	Screw–HH
8	323–6	1	Screw–HH
9	98–5975	1	Washer–Belleville
10	3256–24	1	Washer–Flat
11	1–413099	1	Pulley–Idler
12	105–8443	1	Spring–Extension


Ref. No.	Part No.	Qty.	Description

Electrical Schematic

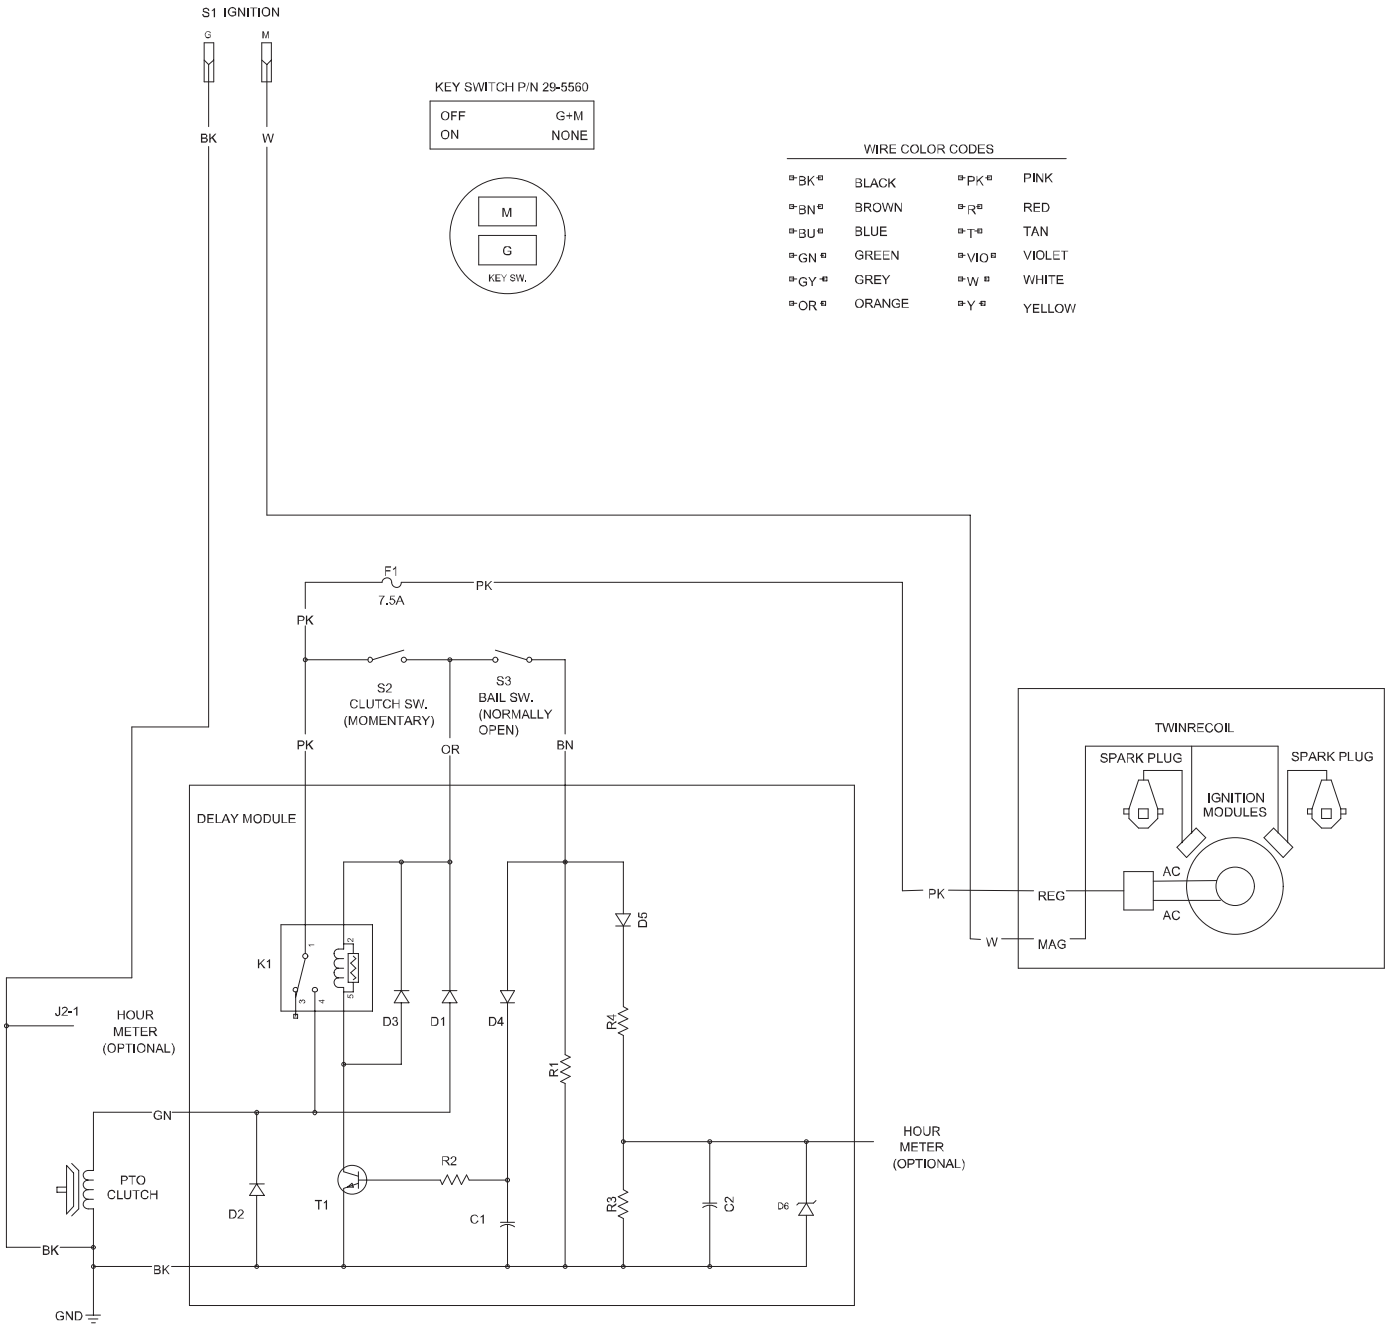

Sheet No.:11

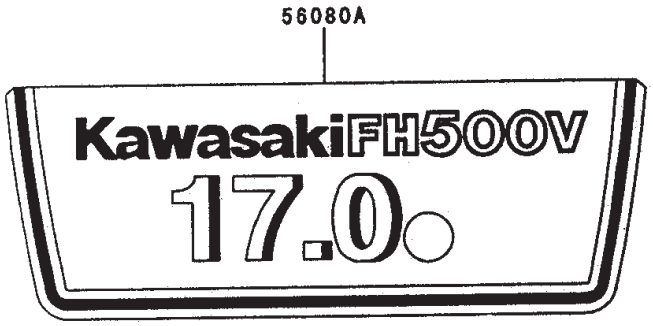

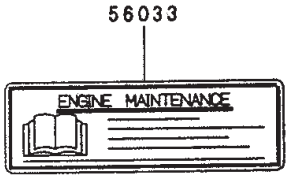




Decal Assembly
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
56033	56033–7001	1	Label–Manual
56080	56080–2077	1	Label–Brand
56080A	56080–7001	1	Label–Brand

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

Cylinder / Crankcase Assembly
Kawasaki FH500V–AS29

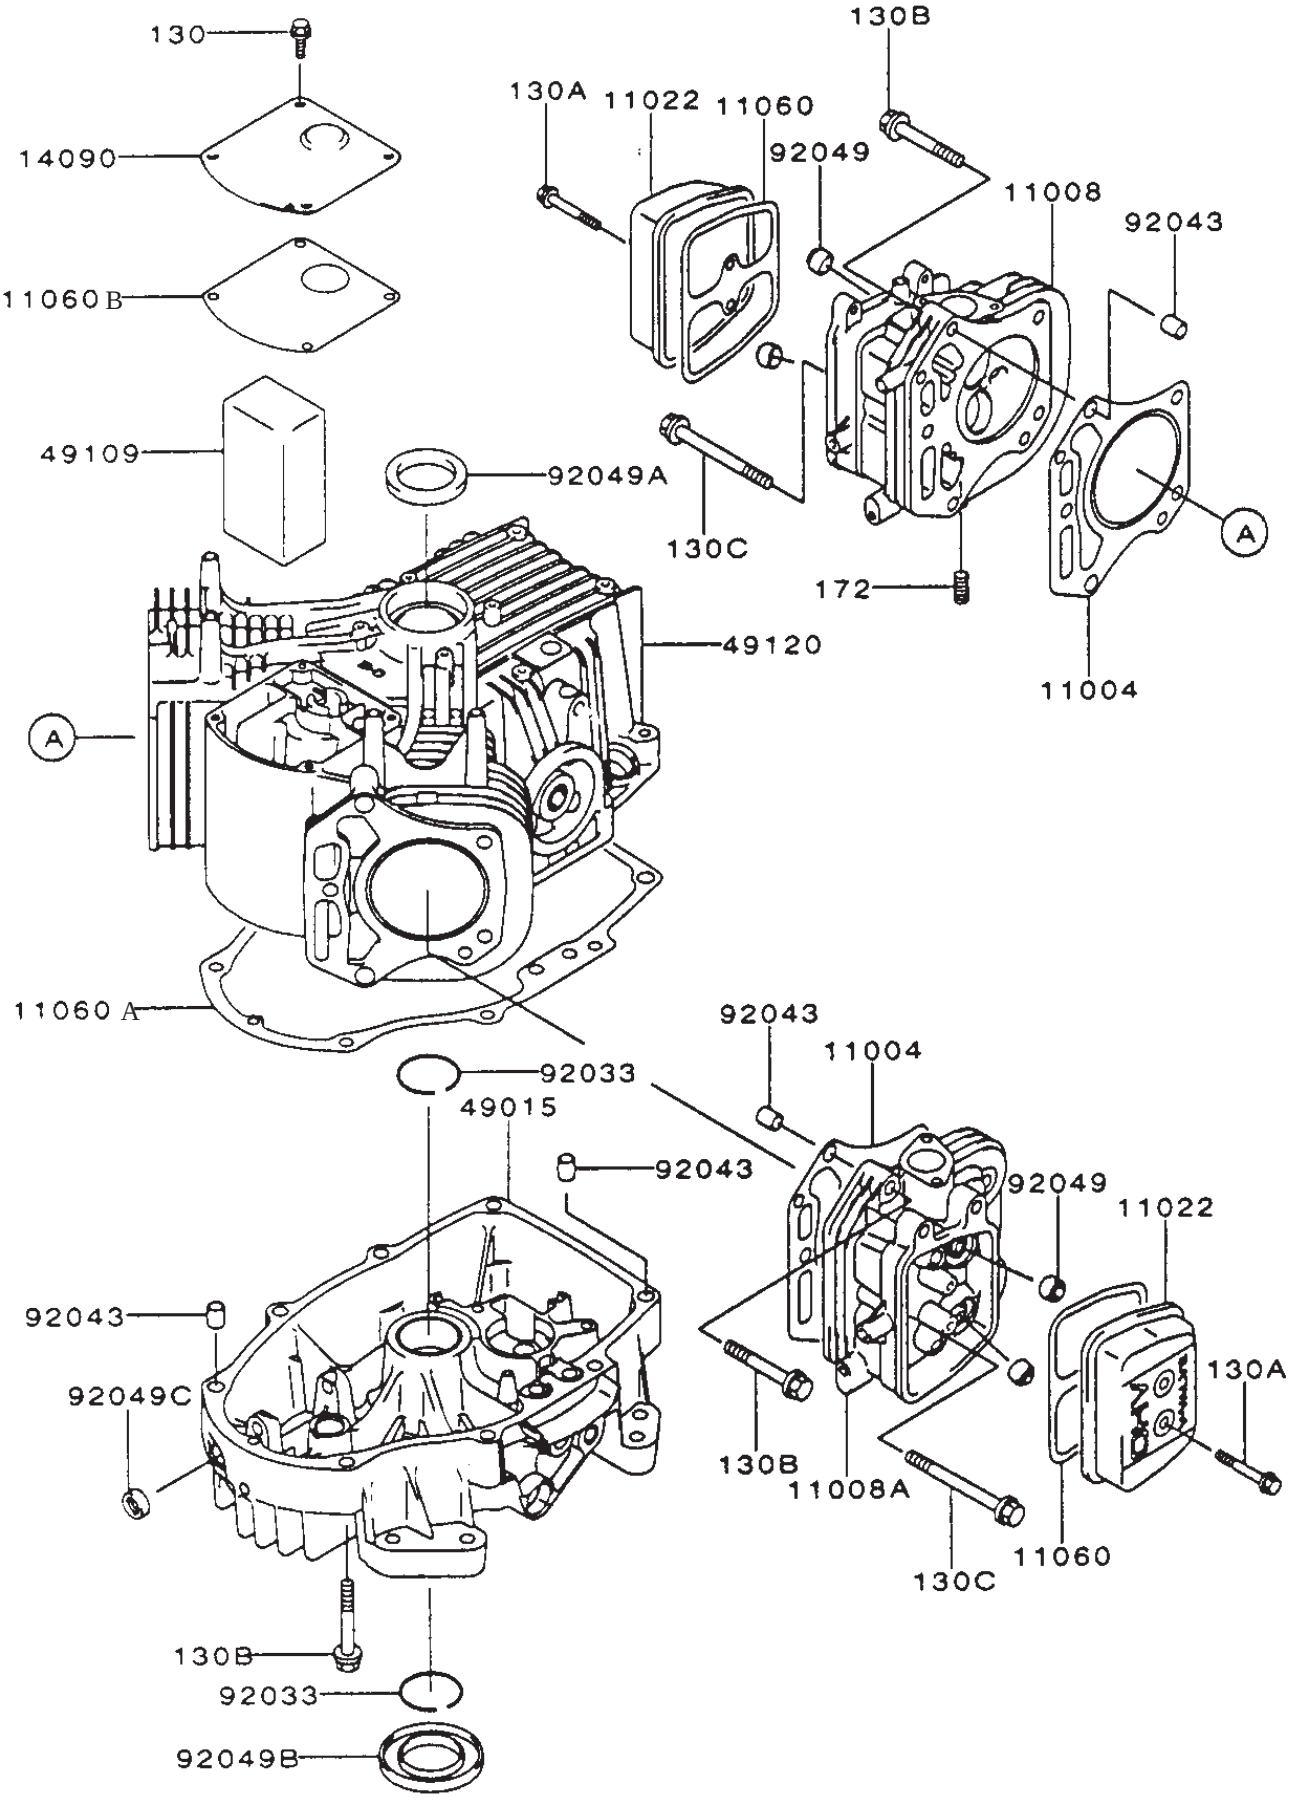


Cylinder / Crankcase Assembly (Continued)
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
11004	11004–7001	2	Gasket–Head
11008	11008–7001	1	Head–Comp–Cylinder No. 1
11008A	11008–7002	1	Head–Comp–Cylinder No. 2
11022	11022–7001	2	Case–Rocker
11060	11060–7001	2	Gasket, Rocker Case
11060A	11060–7008	1	Gasket, Crankcase Cover
11060B	11060–7015	1	Gasket, Breather
14090	14090–7001	1	Cover, Breather
49015	49015–6215	1	Cover–Crankcase
49109	49109–7002	1	Element–Breather
49120	49120–6119	1	Crankcase–Comp
92033	92033–7003	2	Ring–Snap
92043	92043–7001	6	Pin
92049	92049–7001	4	Seal–Oil
92049A	92049–7002	1	Seal–Oil
92049B	92049–7004	1	Seal–Oil
92049C	92049–7005	1	Seal–Oil
130	130B0612	4	Bolt–Flanged
130A	130B0640	4	Bolt–Flanged
130B	130T0850	17	Bolt–Flanged
130C	130T0875	2	Bolt–Flanged
172	172G0818	4	Bolt–Stud

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

Valve / Camshaft Assembly
Kawasaki FH500V–AS29

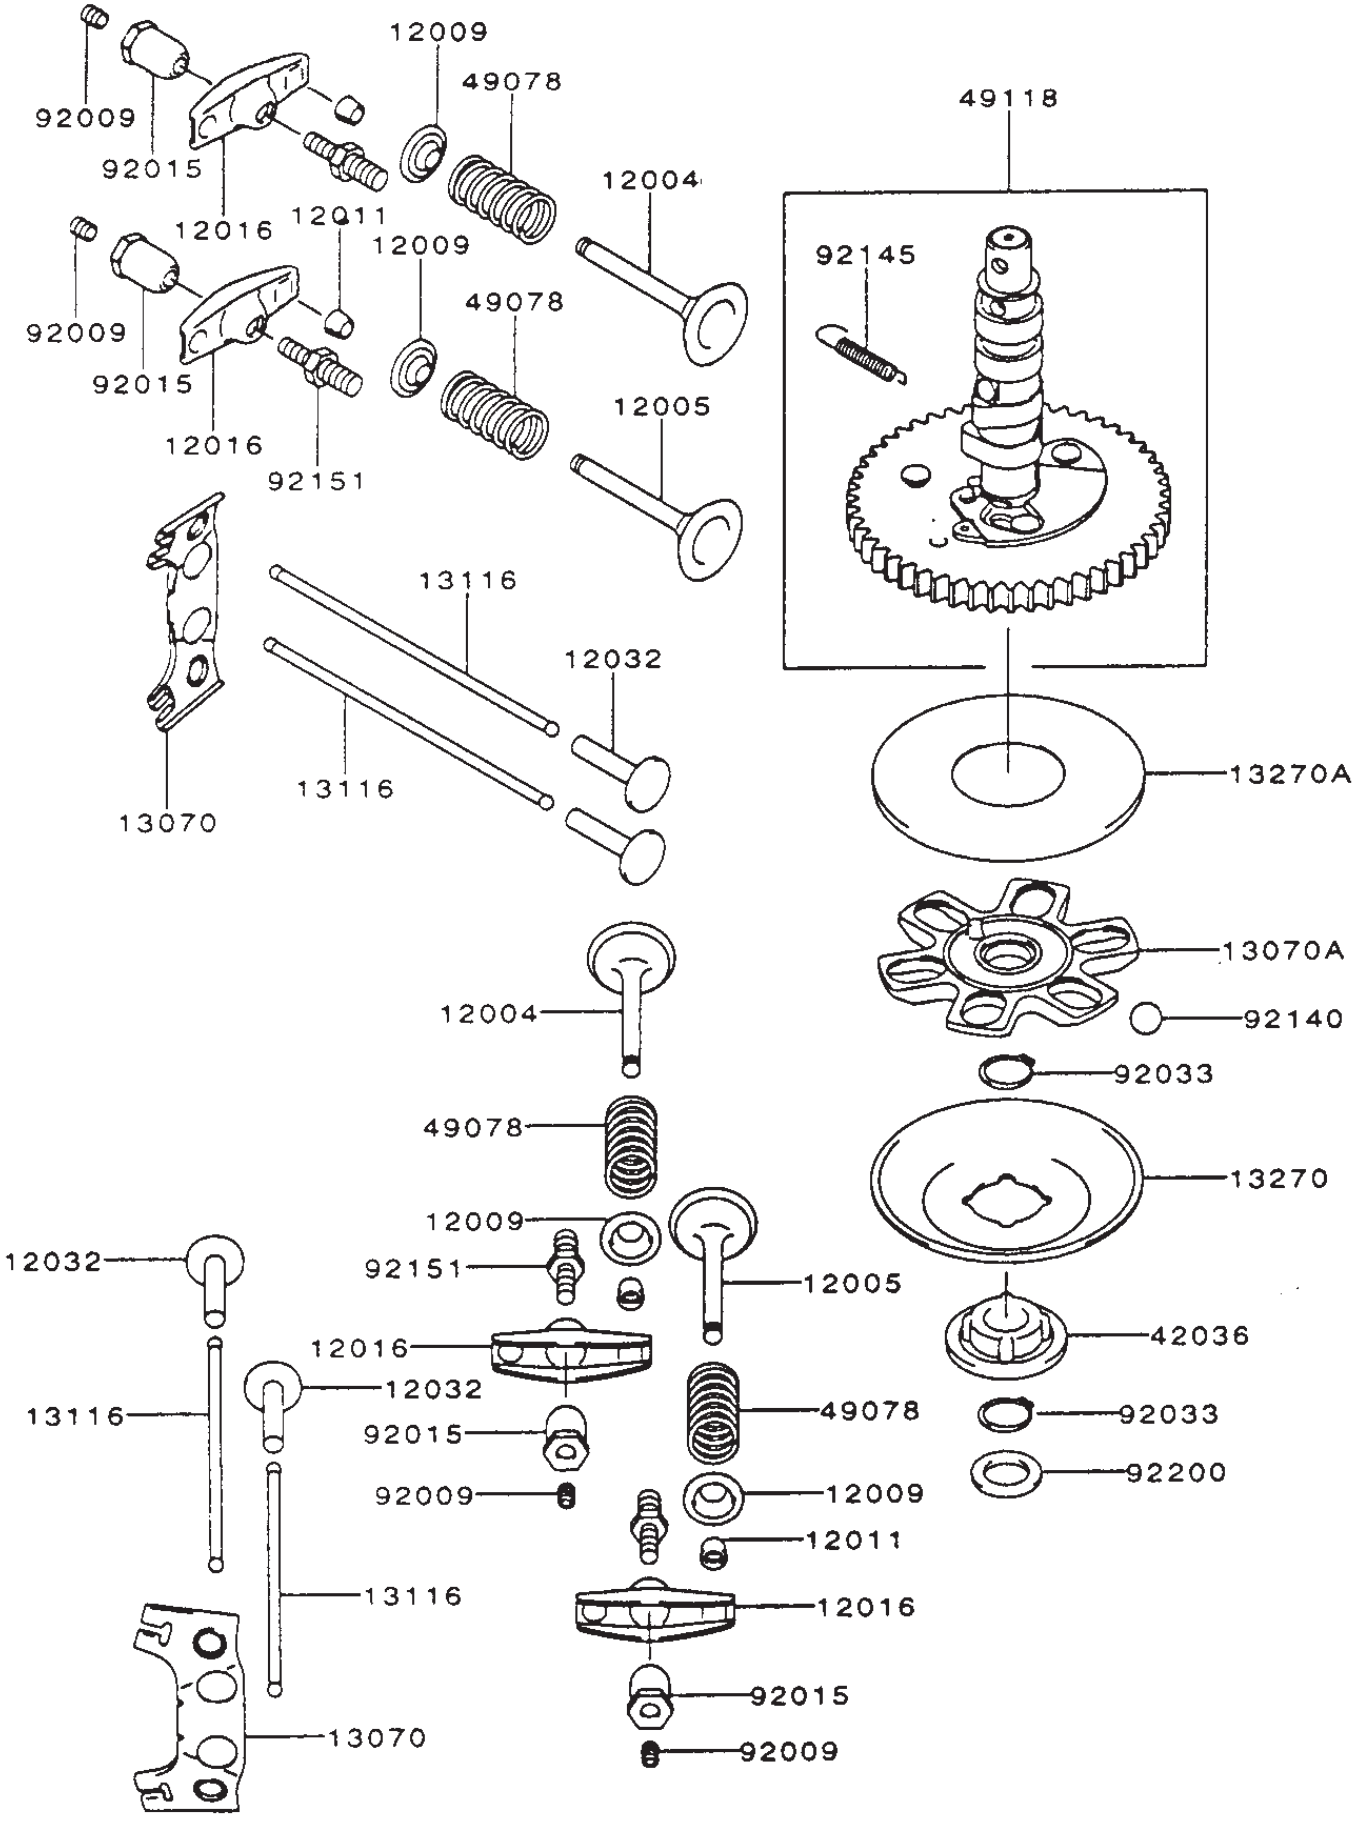


Valve / Camshaft Assembly (Continued)
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
12004	12004–7001	2	Valve–Intake
12005	12005–7001	2	Valve–Exhaust
12009	12009–7001	4	Retainer–Valve Spring
12011	12011–2056	8	Collet
12016	12016–7001	4	Arm–Rocker
12032	12032–7001	4	Tappet
13070	13070–7001	2	Guide
13070A	13070–7002	1	Guide
13116	13116–2057	4	Rod–Push
13270	13270–7002	1	Plate
13270A	13270–7003	1	Plate
42036	42036–7001	1	Sleeve
49078	49078–7001	4	Spring–Engine Valve
49118	49118–7002	1	Camshaft–Comp
92009	92009–2341	4	Screw
92015	92015–2253	4	Nut
92033	92033–7001	2	Ring–Snap
92140	92140–7002	6	Ball
92145	92145–7001	1	Spring
92151	92151–7001	4	Bolt
92200	92200–7001	1	Washer

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

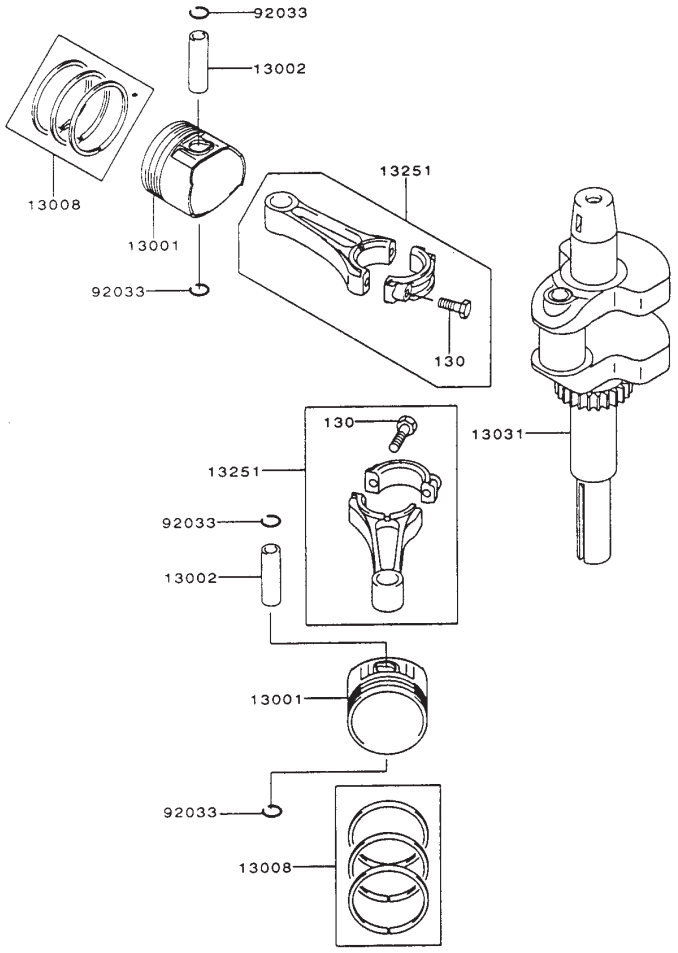


Piston / Crankshaft Assembly
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
13001	13001–7001	2	Piston–Engine
13002	13002–7001	2	Pin–Piston
13008	13008–6055	2	Ring–Set–Piston
13031	13031–7001	1	Crankshaft–Comp
13251	13251–7001	2	Rod–Assy–Connecting
92033	92033–7002	4	Ring–Snap
130	130G0630	4	Bolt–Flanged

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

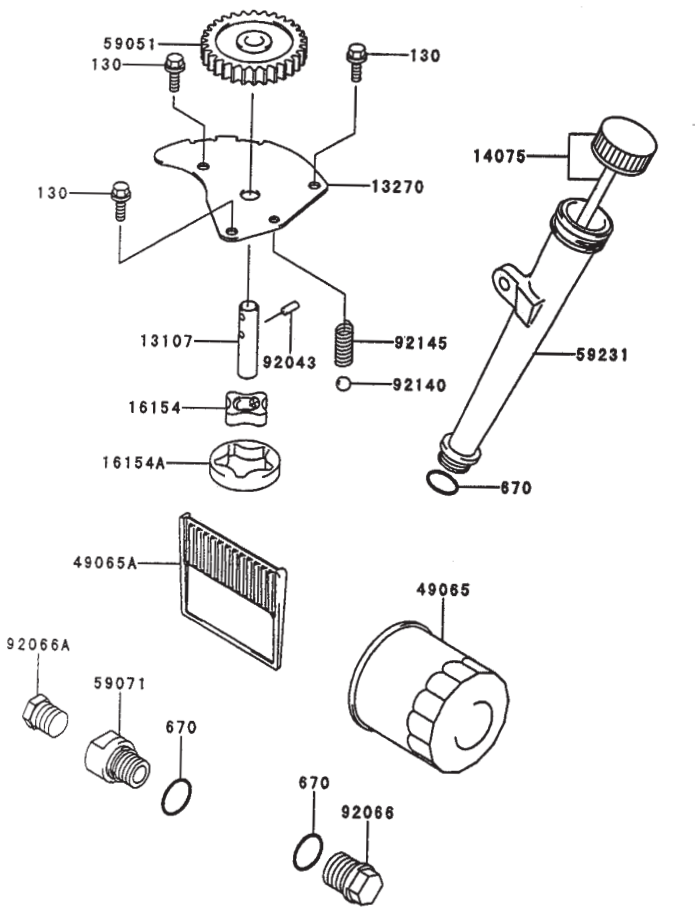


Lubrication Equipment Assembly
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
13107	13107–2099	1	Shaft, Oil Pump
13270	13270–7004	1	Plate
14075	14075–7001	1	Cap–Assy
16154	16154–2053	1	Rotor–Pump, Out
16154A	16154–2054	1	Rotor–Pump, Out
49065	49065–2078	1	Filter–Oil
49065A	49065–7001	1	Filter–Oil
59051	59051–7004	1	Gear–Spur
59071	59071–7004	1	Joint
59231	59231–7001	1	Filler
92043	92043–7003	1	Pin
92066	92066–7003	1	Plug
92066A	92066–7006	1	Plug
92140	92140–7003	1	Ball
92145	92145–7002	1	Spring
130	130B0612	3	Bolt–Flanged
670	670D2016	3	O–Ring

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

Cooling Equipment Assembly
Kawasaki FH500V–AS29

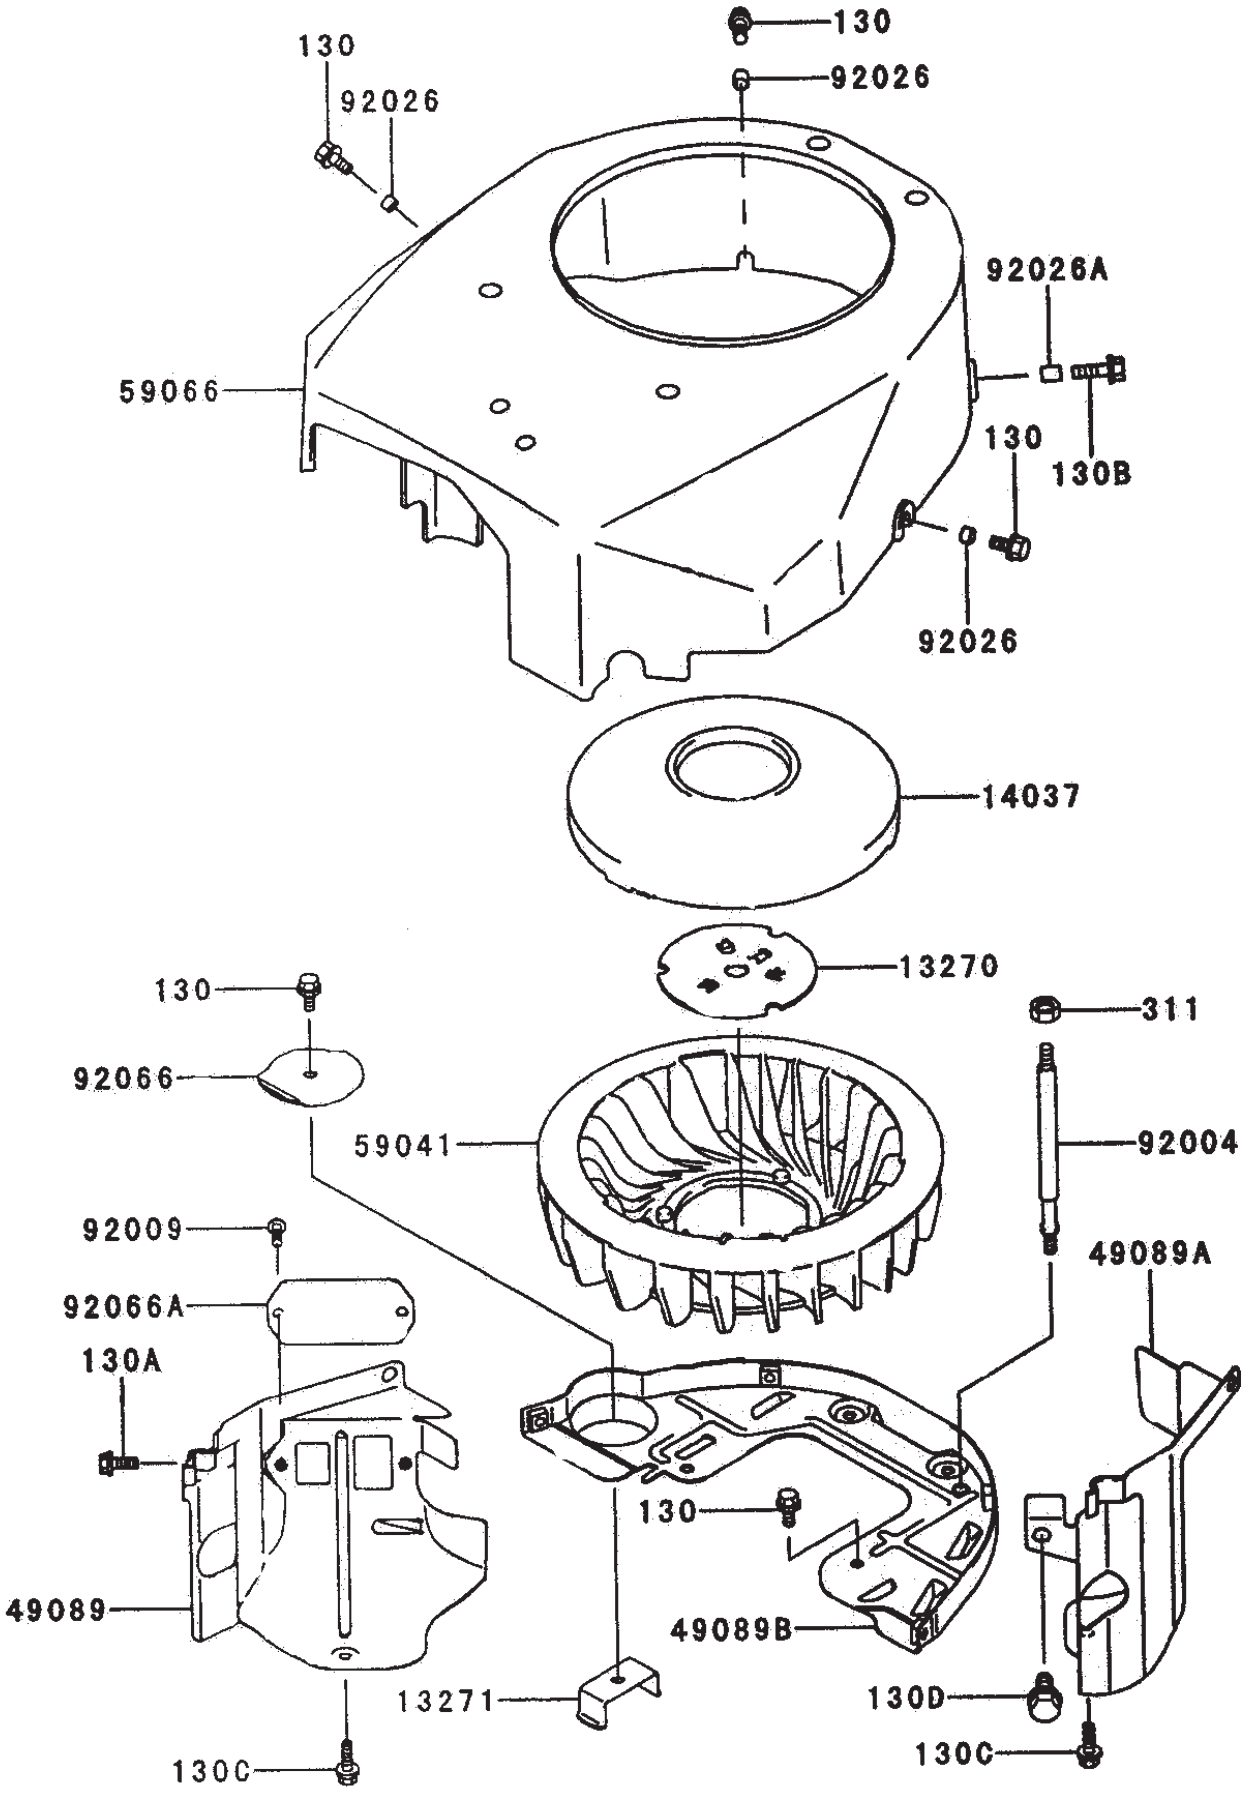


Cooling Equipment Assembly (Continued)
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
130	130B0612	6	Bolt–Flanged
130A	130B0616	2	Bolt–Flanged
130B	130B0620	1	Bolt–Flanged
130C	130B0625	2	Bolt–Flanged
130D	130B0816	1	Bolt–Flanged
13270	13270–7007	1	Plate
13271	13271–7002	1	Plate
14037	14037–7002	1	Screen
311	311B0600	2	Nut–Hex
49089	49089–7001	1	Shroud–Engine
49089A	49089–7002	1	Shroud–Engine
49089B	49089–7003	1	Shroud–Engine
59041	59041–7001	1	Fan
59066	59066–7002	1	Housing–Fan
92004	92004–7006	2	Stud
92009	92009–2308	2	Screw
92026	92026–7001	3	Spacer, 6.2x7.9x5
92026A	92026–7003	1	Spacer, 6.5x7.9x10.5
92066	92066–7004	1	Plug
92066A	92066–7004	1	Plug

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

Electrical Equipment Assembly
Kawasaki FH500V–AS29

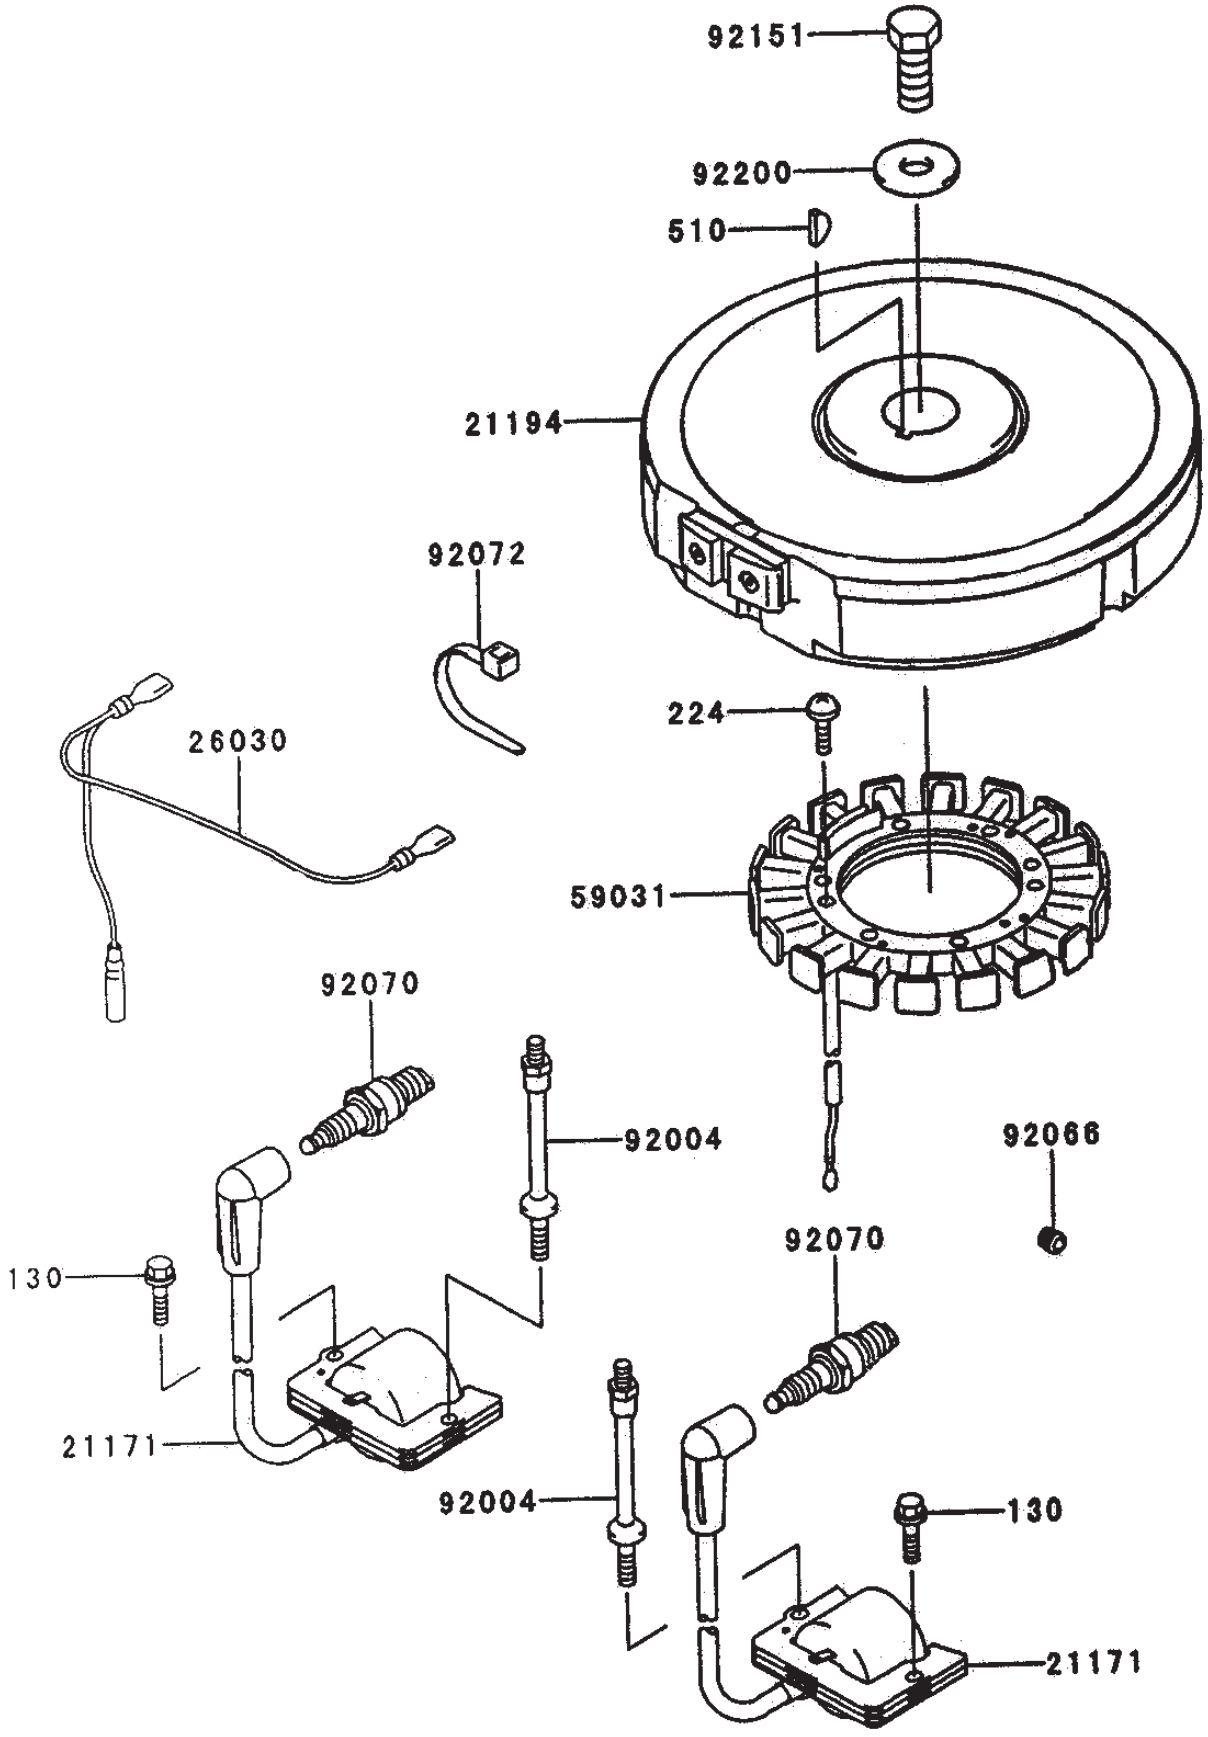


Electrical Equipment Assembly (Continued)
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
21171	21171–7001	2	Coil–Assy–Ignition
21194	21193–7001	1	Flywheel–Assy
26030	26030–7001	1	Harness
59031	59031–7002	1	Coil–Charging
92004	92004–2147	2	Stud
92066	92066–7002	1	Plug
92070	92070–7001	2	Plug–Spark (RCJ8Y)
92072	92072–7001	2	Band
92151	92151–2097	1	Bolt, 12x30
92220	92220–7002	1	Washer
130	130B0620	2	Bolt–Flanged
224	224B0520	4	Screw–Pan–WP–Cros
510	510A5100	1	Key–Woodruff

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

Control Equipment Assembly
Kawasaki FH500V–AS29

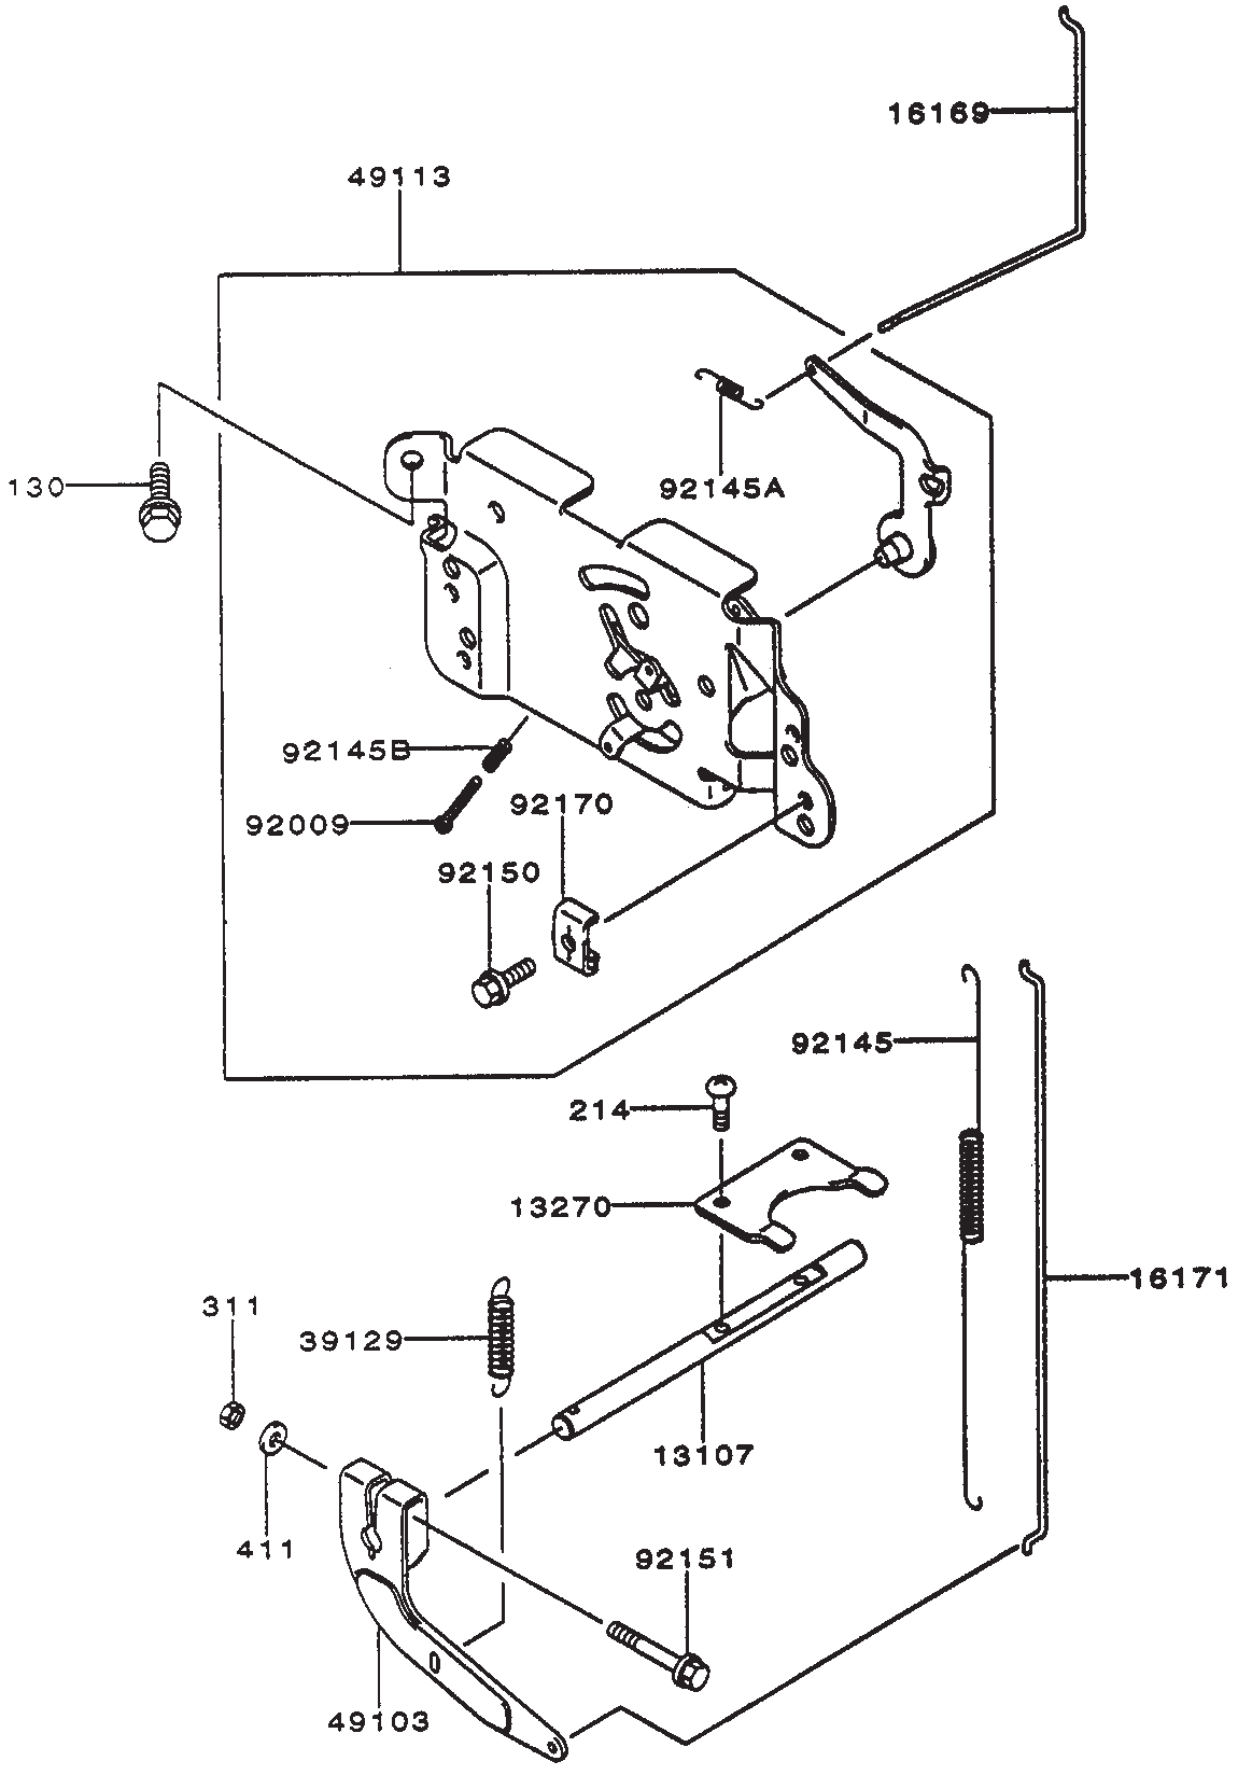


Control Equipment Assembly (Continued)
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
13107	13107–7002	1	Shaft
13270	13270–7006	1	Plate
16169	16169–7001	1	Link–Choke
16171	16171–7001	1	Link
39129	39129–7003	1	Spring–Governor
49103	49103–7001	1	Arm–Governor
49113	49113–7001	1	Panel–Comp–Control
92009	92009–7002	1	Screw, 4x30
92145	92145–7003	1	Spring
92145A	92145–7004	1	Spring
92145B	92145–7005	1	Spring
92150	92150–2182	1	Bolt, 5x18
92151	92151–7006	1	Bolt, 6x30
92170	92170–7001	1	Clamp
130	130B0612	2	Bolt–Flanged
214	214B0408	2	Screw–Pan
311	311B0600	1	Nut–Hex
411	411B0600	1	Washer–Plain

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

Carburetor Assembly
Kawasaki FH500V–AS29

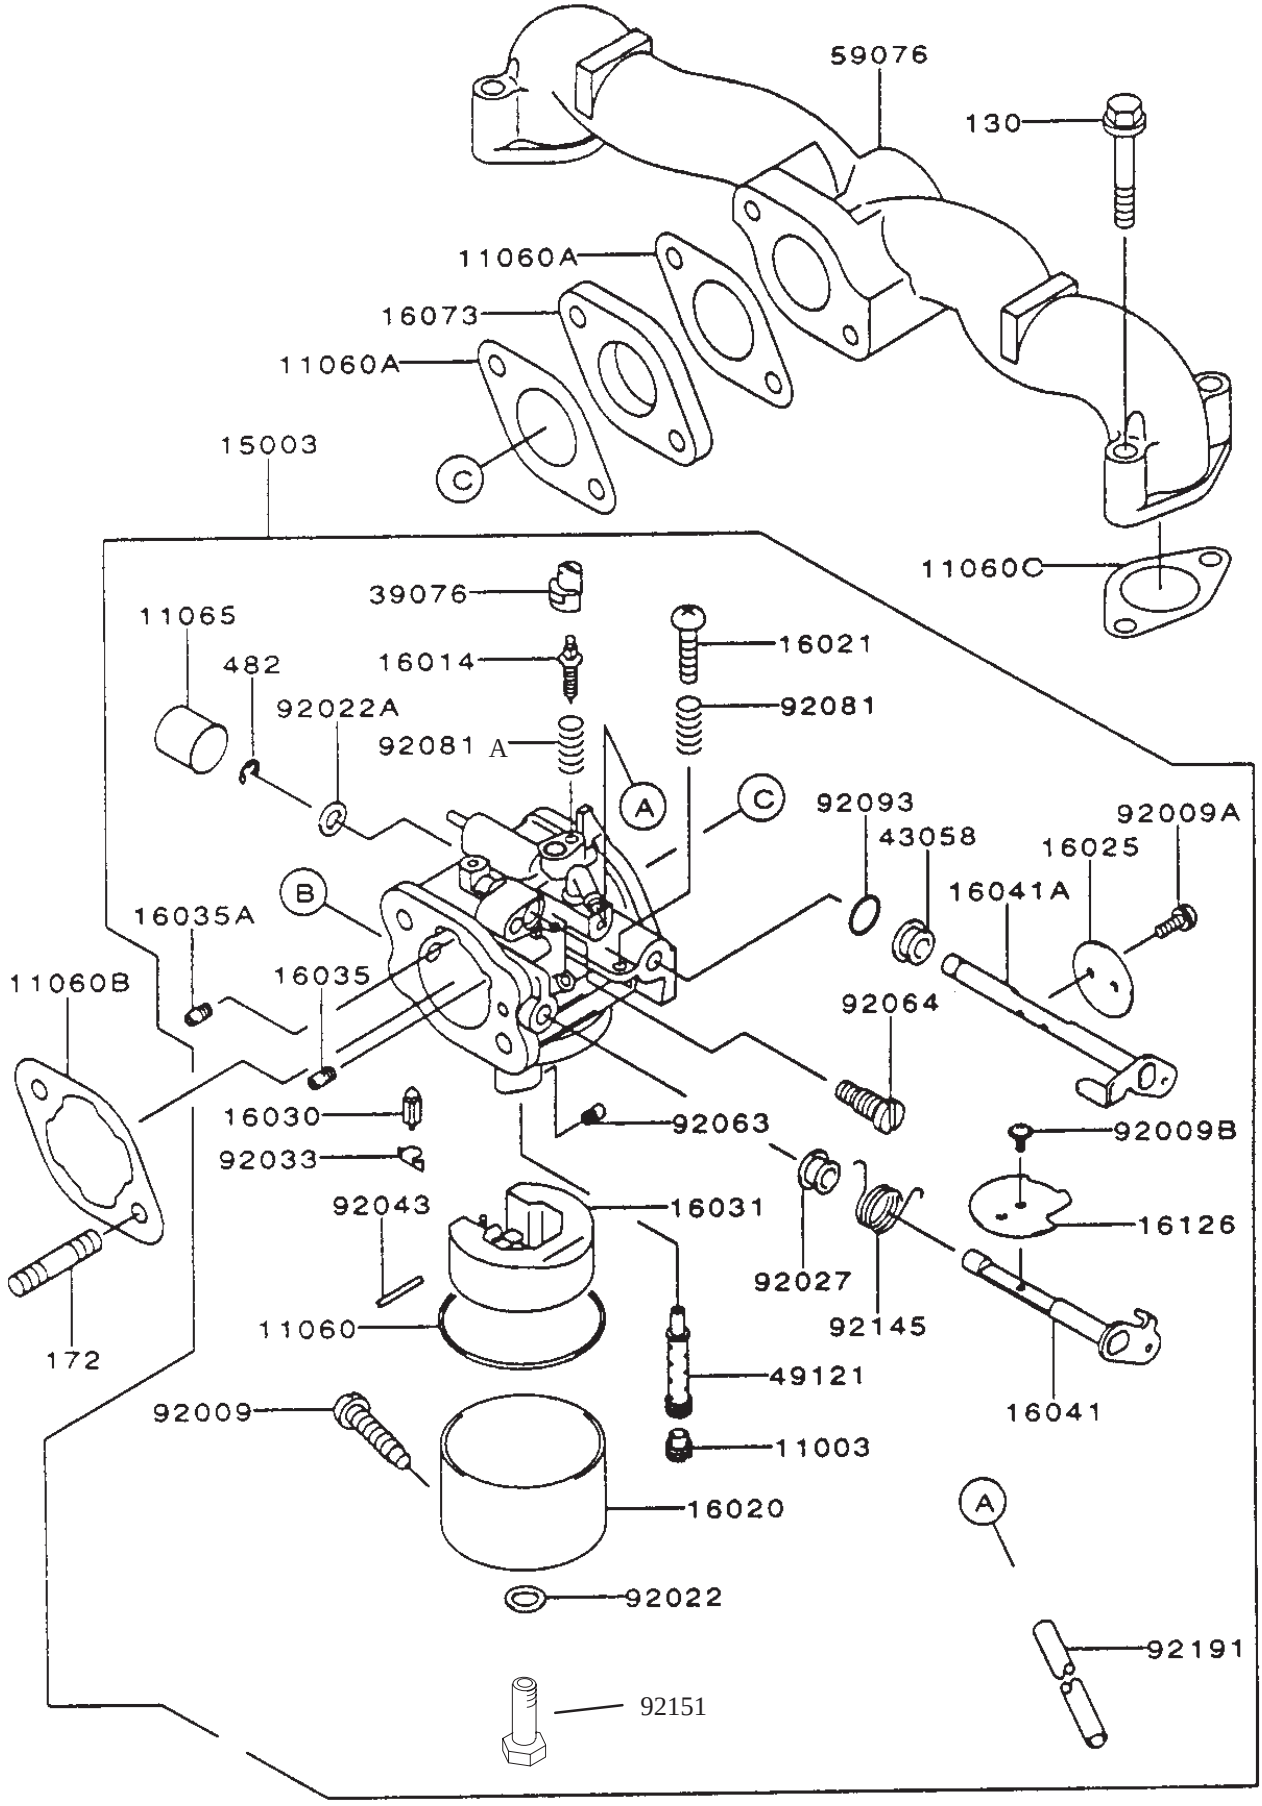


Carburetor Assembly (Continued)
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
11003	11003–2105	1	Seat–Valve
11060	11060–2406	1	Gasket
11060A	11060–7003	2	Gasket, Insurator
11060B	11060–7004	1	Gasket, Air Filter
11060C	11060–7005	2	Gasket
11065	11065–2061	1	Cap
15003	15003–2698	1	Carburetor–Assy
16014	16014–2080	1	Screw–Pilot Air
16020	16020–2141	1	Chamber–Float
16021	16021–2060	1	Screw–Throttlestop
16025	16025–2193	1	Valve–Throttle, #130
16030	16030–2067	1	Valve–Float
16031	16031–2066	1	Float
16035	16035–2060	1	Jet–Air, #1.7
16035A	16035–2061	1	Jet–Air, #1.2
16041	16041–2252	1	Shaft–Carburetor, Choke
16041A	16041–2253	1	Shaft–Carburetor Throttle
16073	16073–7001	1	Insulator
16126	16126–2219	1	Valve
39076	39076–2053	1	Limiter
43058	43058–3716	1	Ring
49121	49121–2222	1	Nozzle–Main
59076	59076–7001	1	Manifold–Intake
92009	92009–2015	1	Screw
92009A	92009–2024	2	Screw
92009B	92009–2081	1	Screw
92022	92022–2231	1	Washer
92022A	92022–2239	1	Washer
92027	92027–2025	1	Collar
92033	92033–2067	1	Ring–Snap
92043	92043–2226	1	Pin
92063	92063–2358	1	Jet–Main
92064	92064–2125	1	Jet–Pilot
92081	92081–2009	2	Spring
92081A	92081–2256	1	Spring
92093	92093–2002	1	Seal
92145	92145–2061	1	Spring
92151	92151–2092	1	Bolt
92191	92191–7008	1	Tube
130	130B0635	4	Bolt–Flanged
172	172G0685	2	Bolt–Stud
482	482L4000	1	Circlip–Type–E

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

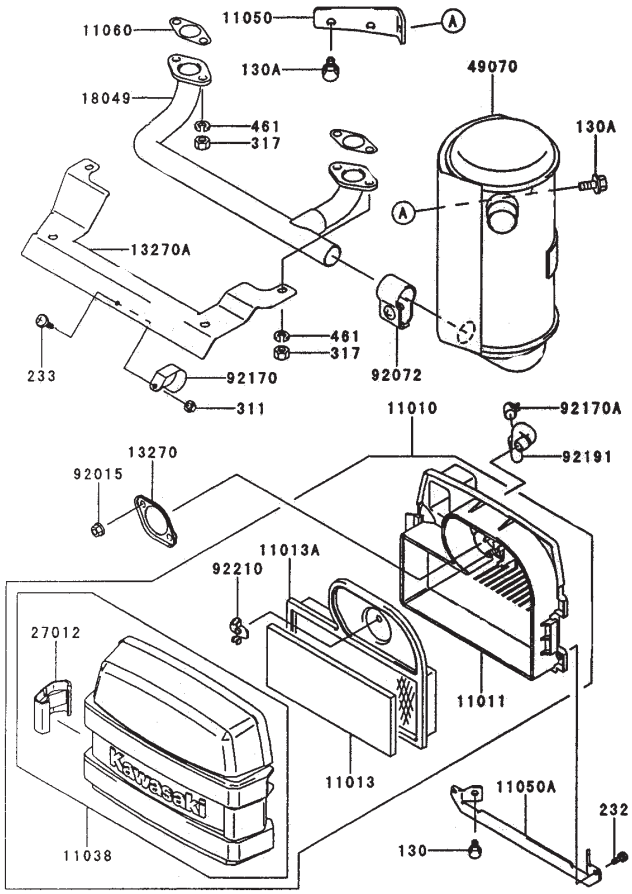


Air Filter / Muffler Assembly
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
11010	11010–7001	1	Filter–Assy–Air
11011	11011–7001	1	Case–Air Filter
11013	11013–7001	1	Element–Air Filter
11013A	11013–7002	1	Element–Air Filter
11038	11038–7001	1	Case–Assy–Air Filter
11050	11050–7004	1	Bracket
11050A	11050–7006	1	Bracket
11060	11060–7006	2	Gasket, Muffler
13270	13270–7001	1	Plate
13270A	13270–7008	1	Plate
18049	18049–7001	1	Pipe–Exhaust
27012	27012–7001	2	Hook, Air Filter
49070	49070–7002	1	Muffler–Comp
92072	92072–7002	1	Band
92015	92015–1193	2	Nut
92170	92170–7002	1	Clamp
92170A	92170–7003	1	Clamp
92191	92191–7001	1	Tube
92210	92210–7004	1	Nut
130	130B0612	2	Bolt–Flanged
130A	130B0816	2	Bolt–Flanged
232	232B0514	2	Screw–Pan–WS
233	233B0416	1	Screw–Pan WP
311	311B0400	1	Nut–Hex

Ref. No.	Part No.	Qty.	Description
317	317R0800	4	Nut–Hex–Small
461	461F0800	4	Washer–Spring

Obtain parts from your local Kawasaki dealer.

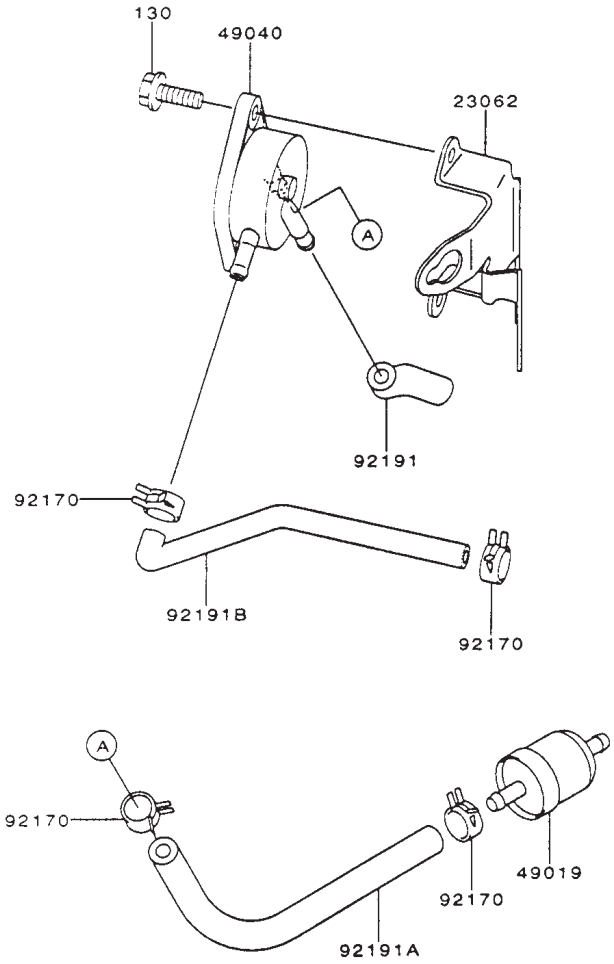


Fuel Tank / Fuel Valve Assembly
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
23062	23062–7001–9H	1	Bracket–Comp
49019	49019–7001	1	Filter–Fuel
49040	49040–2075	1	Pump–Fuel
92170	92170–2088	4	Clamp
92191	92191–7002	1	Tube
92191A	92191–7003	1	Tube,6.35x12.7x160
92191B	92191–7004	1	Tube
130	130B0620	2	Bolt–Flanged

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

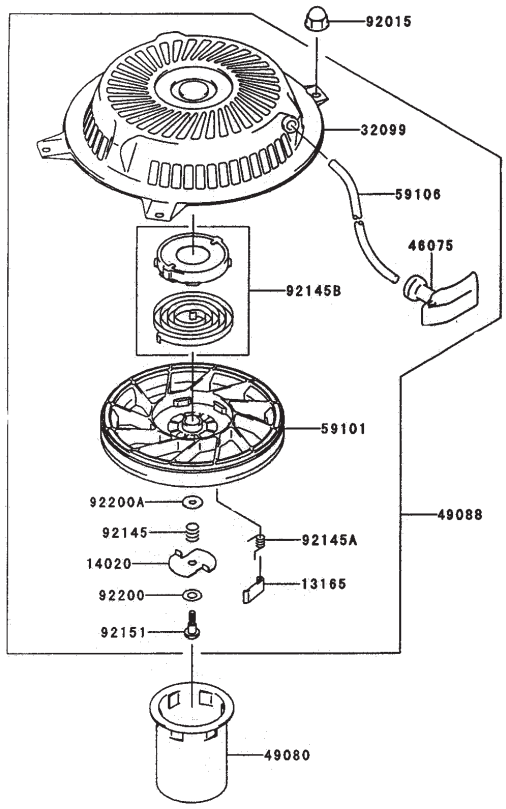

Starter Assembly
Kawasaki FH500V–AS29

Ref. No.	Part No.	Qty.	Description
13165	13165–700	2	Pawl, Recoil Starter
14020	14020–7001	1	Retainer
32099	32099–7001	1	Case, Recoil Starter
46075	46075–7001	1	Grip–Recoil Starter
49080	49080–7001	1	Pulley–Starting
49088	49088–7001	1	Starter–Recoil
59101	59101–7001	1	Reel, Recoil Starter
59106	59106–7001	1	Rope
92015	92015–1170	4	Nut
92145	92145–7006	1	Spring
92145A	92145–7007	2	Spring
92145B	92145–7008	1	Spring
92151	92151–7008	1	Bolt
92200	92200–7004	1	Washer
92200A	92200–7005	1	Washer

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

Maintenance Record

Date								


TORO®