Form No. 3455-196 Rev A

TORO®

Count on it.

Parts Catalog

# MB TX 2500 Tracked Mud Buggy

**Model No. 68138—Serial No. 412337958 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3455-196* A

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Frame Assembly . . . . . 4
Hydraulic Pump Assembly . . . . . 6
LH Hydro Transaxle Assembly No. 132-8802 . . . . . 8
RH Hydro Transaxle Assembly No. 132-8803 . . . . . 10
Hydraulic Manifold Assembly No. 132-8989 . . . . . 12
Engine Assembly . . . . . 14
Hydraulic Gear Pump Assembly No. 132-8954 . . . . . 16
Fuel Tank and Tower Assembly . . . . . 18
Track Assembly . . . . . 20
Hopper Assembly . . . . . 22
Electrical Harness Assembly . . . . . 24
Control Assembly . . . . . 26
Platform Assembly . . . . . 28
Hood Assembly . . . . . 30
Attachments and Accessories . . . . . 32

**© 2022—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

# Frame Assembly

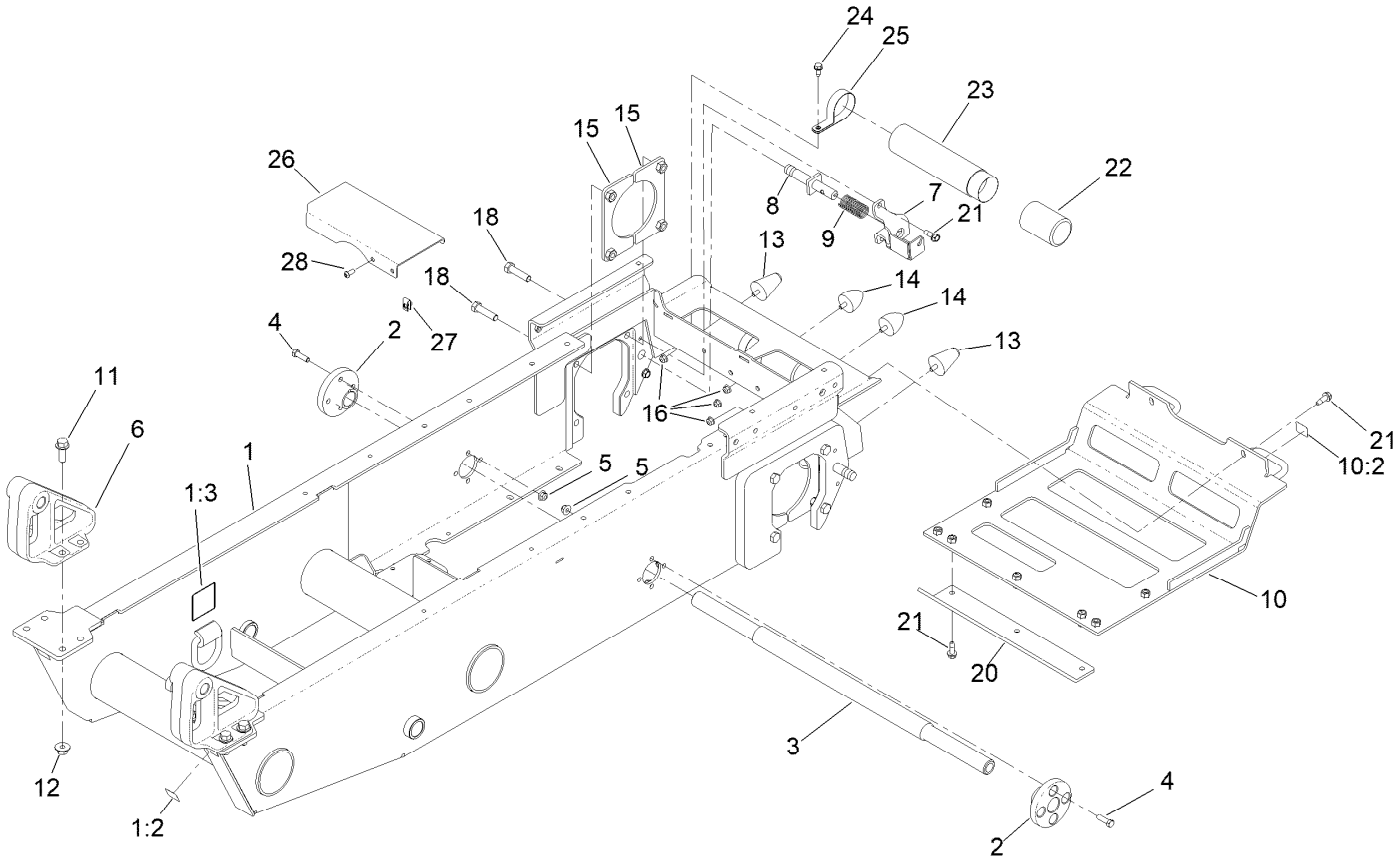

# Frame Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 139-7198 | 1 | Frame ASM- Straight |
| 1:2 | 125-4967 | 2 | Decal-Lift Here |
| 1:3 | 132-9051 | 2 | Decal-Tiedown |
| 2 | 132-9075 | 2 | Hub-Mount, Track |
| 3 | 125-0425 | 1 | Shaft-Track |
| 4 | 323-7 | 8 | Screw-HH |
| 5 | 104-8301 | 8 | Nut-HF, NI |
| 6 | 132-9025-03 | 2 | Pivot-Dump |
| 7 | 130-5284-03 | 2 | Bracket-Brake |
| 8 | 132-8866 | 2 | Shaft-Brake |
| 9 | 125-0344 | 2 | Spring-Compression |
| 10 | 136-4651 | 1 | Plate-Side |
| 10:2 | 132-9051 | 2 | Decal-Tiedown |
| 11 | 130-6482 | 8 | Screw-HHF |
| 12 | 32128-52 | 8 | Nut-Lock, Flange |
| 13 | 114-1925 | 2 | Bumper-Rubber |
| 14 | 114-1926 | 2 | Bumper-Rubber |
| 15 | 132-8936-0P | 4 | Hydro Mounting Plate ASM |
| 16 | 104-8300 | 4 | Nut-HF, NI |
| 18 | 325-8 | 8 | Screw-HH |
| 20 | 136-4611-03 | 1 | Plate-Skid |
| 21 | 105-6245 | 13 | Screw-Tapping |
| 22 | 104-7048 | 1 | Cap-Housing |
| 23 | 104-7050 | 1 | Tube-Manual |
| 24 | 32144-70 | 2 | Screw-HWHTF |
| 25 | 2412-133 | 2 | Clamp-R |
| 26 | 144-7389-03 | 1 | Bracket, Manifold Shield |
| 27 | 115-7721 | 2 | Nut-Clip, U |
| 28 | 3274-55 | 2 | Screw-HSBH |

# Hydraulic Pump Assembly

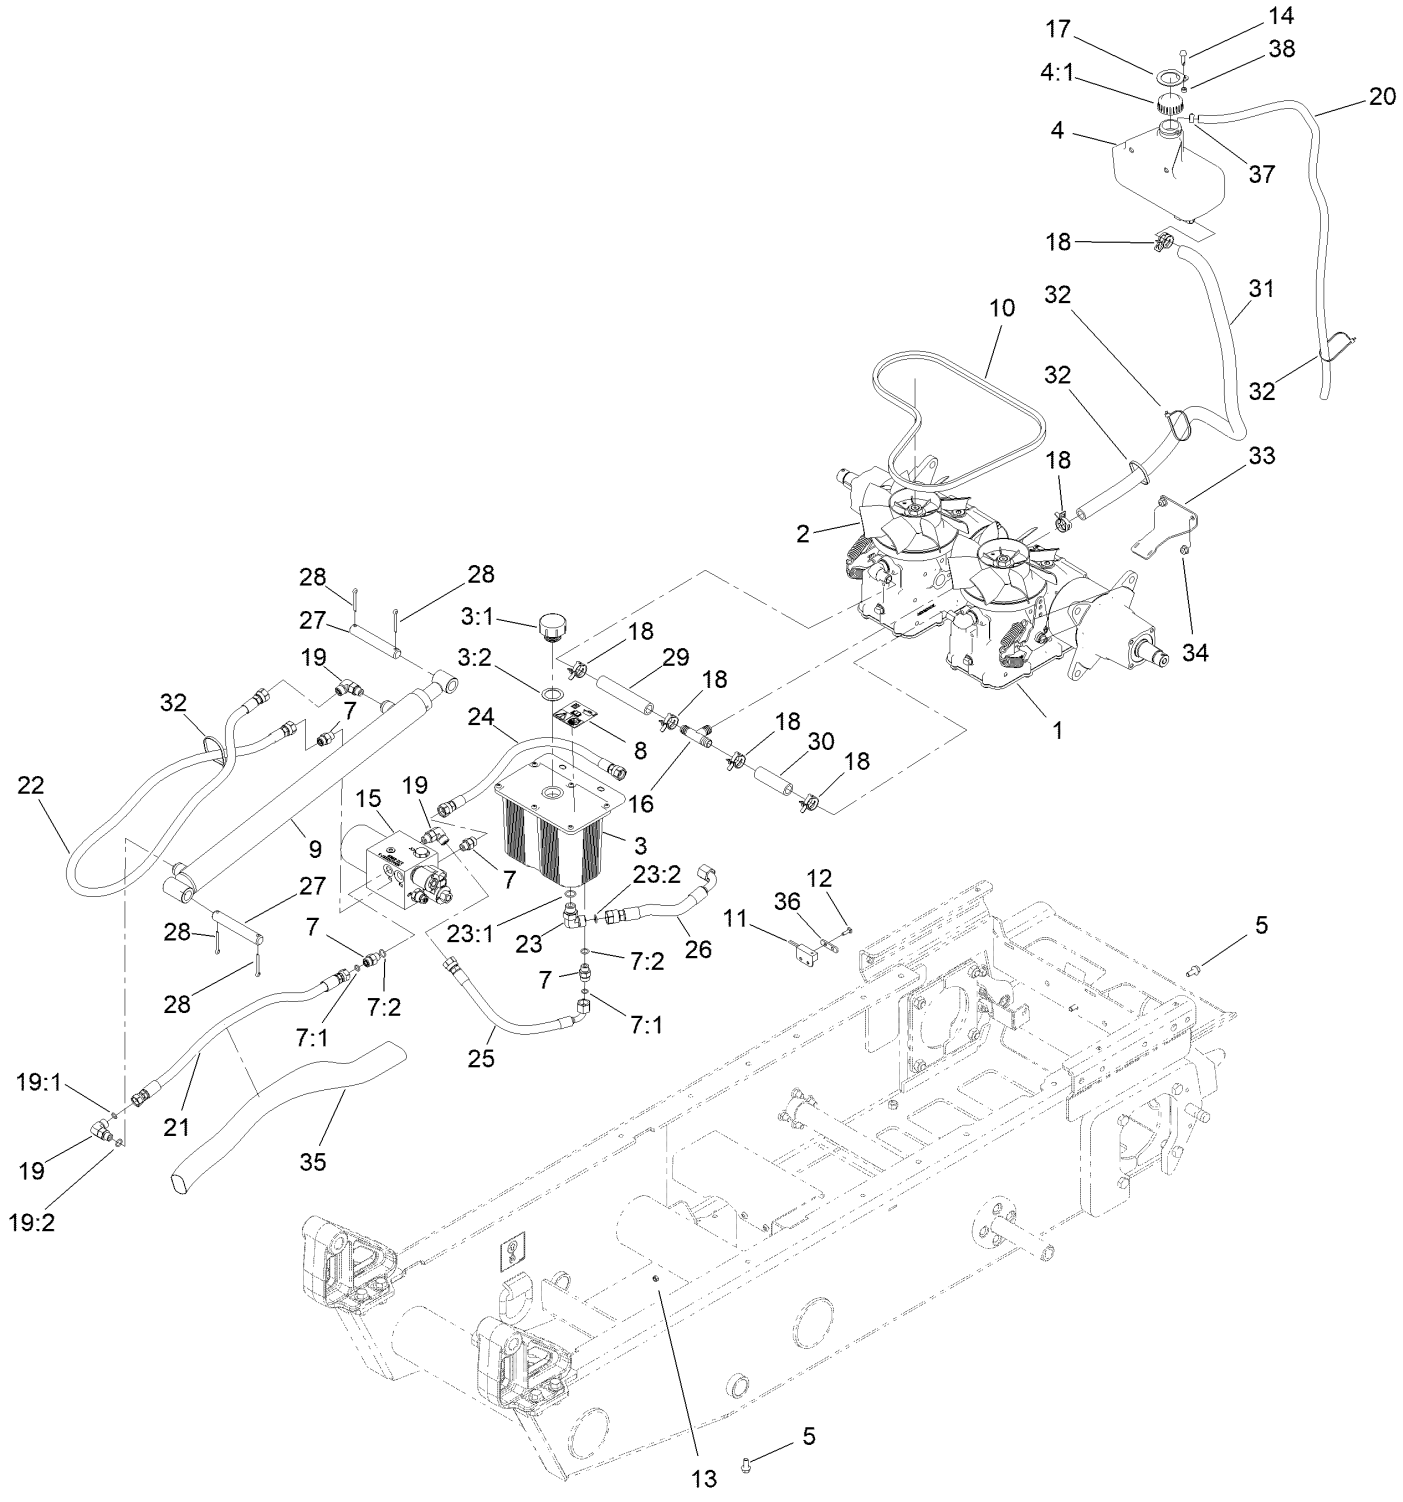

# Hydraulic Pump Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-8802 | 1 | LH Hydro Transaxle ASM |
| 2 | 132-8803 | 1 | RH Hydro Transaxle ASM |
| 3 | 109-0448 | 1 | Tank-Hydraulic |
| 3:1 | 103-1948 | 1 | Cap-Reservoir, HYD |
| 3:2 | 103-1949 | 1 | Gasket-Cap |
| 4 | 138-3164 | 1 | Tank-Hydraulic |
| 4:1 | 133-8677 | 1 | Cap-Vented |
| 5 | 3234-47 | 5 | Screw-HHF |
| 7 | 340-2 | 4 | Fitting-Straight |
| 7:1 | 237-22 | 1 | O-Ring |
| 7:2 | 237-42 | 1 | O-Ring |
| 8 | 115-4212 | 1 | Decal-Warning |
| 9 | 132-8835 | 1 | Cylinder-Hydraulic |
| 9:1 | 132-9084 | 1 | Seal Kit ● |
| 10 | 138-7157 | 1 | Belt And Spring Kit |
| 11 | 100-1270 | 1 | Switch-Proximity |
| 12 | 3229-20 | 2 | Screw-CARR |
| 13 | 3296-2 | 2 | Nut-Lock, NI |
| 14 | 137-3711 | 1 | Screw |
| 15 | 132-8989 | 1 | Hydraulic Manifold ASM |
| 16 | 132-5127 | 1 | Tee |
| 17 | 136-0549-01 | 1 | Lock-Tank |
| 18 | 144-2248 | 6 | Clamp-Sc Band |
| 19 | 340-77 | 3 | Fitting-Elbow, 90 DEG |
| 19:1 | 237-22 | 1 | O-Ring |
| 19:2 | 237-42 | 1 | O-Ring |
| 20 | 132-7563 | 1 | Hose-Breather, Transmission |
| 21 | 132-8941 | 1 | Hose-Hydraulic |
| 22 | 144-7464 | 1 | Hose ASM-HYD |
| 23 | 340-98 | 1 | Fitting-Elbow, 90 DEG |
| 23:1 | 237-79 | 1 | O-Ring |
| 23:2 | 237-30 | 1 | O-Ring |
| 24 | 144-7465 | 1 | Hose ASM-HYD |
| 25 | 144-7466 | 1 | Hose ASM-HYD |
| 26 | 144-7468 | 1 | Hose ASM-HYD |
| 27 | 105-7456 | 2 | Pin-Pivot |
| 28 | 3272-23 | 4 | Pin-Cotter |
| 29 | 132-8933 | 1 | Hose-HYD, Hydro |
| 30 | 132-8934 | 1 | Hose-HYD, Hydro |
| 31 | 132-8935 | 1 | Hose-HYD, Hydro |
| 32 | 3290-378 | 4 | Tie-Cable |
| 33 | 132-9032-03 | 1 | Bracket-Hose Retainer |
| 34 | 104-8300 | 2 | Nut-HF, NI |
| 35 | 100-6127 | 1 | Sleeve-Protective |
| 36 | 132-9092 | 1 | Plate-Switch, Proximity |
| 37 | 92-2379 | 1 | Clamp-Hose |
| 38 | 126-0416 | 1 | Spacer |

● Not illustrated

# LH Hydro Transaxle Assembly No. 132-8802

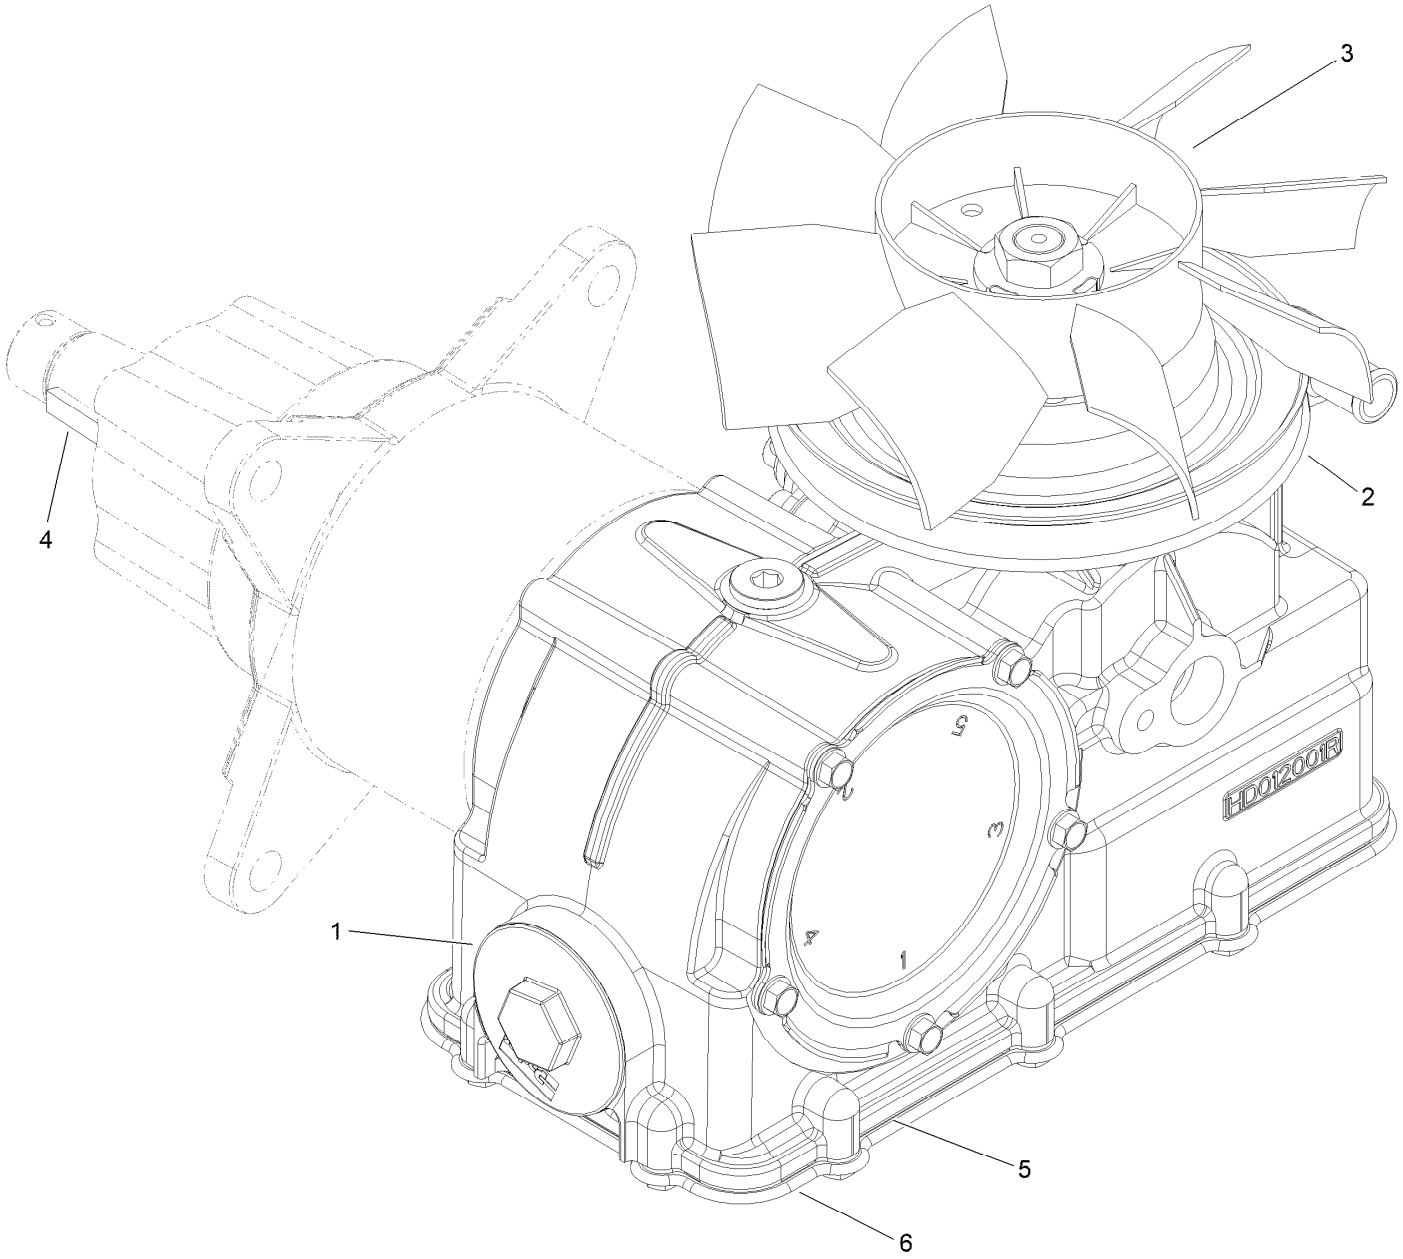

# LH Hydro Transaxle Assembly No. 132-8802 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 137-3772 | 1 | Filter |
| 2 | 137-3773 | 1 | Pulley |
| 3 | 137-3774 | 1 | Fan (8.3 Inch) |
| 4 | 3257-42 | 1 | Key-Woodruff |
| 5 | 140-1148 | 1 | Gasket-Cover, Bottom |
| 6 | 139-7233 | 1 | Cover-Service |
| 7 | 145-1155 | 1 | Kit-Seal, Motor ● |
| 8 | 145-1156 | 1 | Seal-Shaft ● |
| 9 | 145-1166 | 1 | Rtn ASM (LH) ● |

● Not illustrated

# RH Hydro Transaxle Assembly No. 132-8803

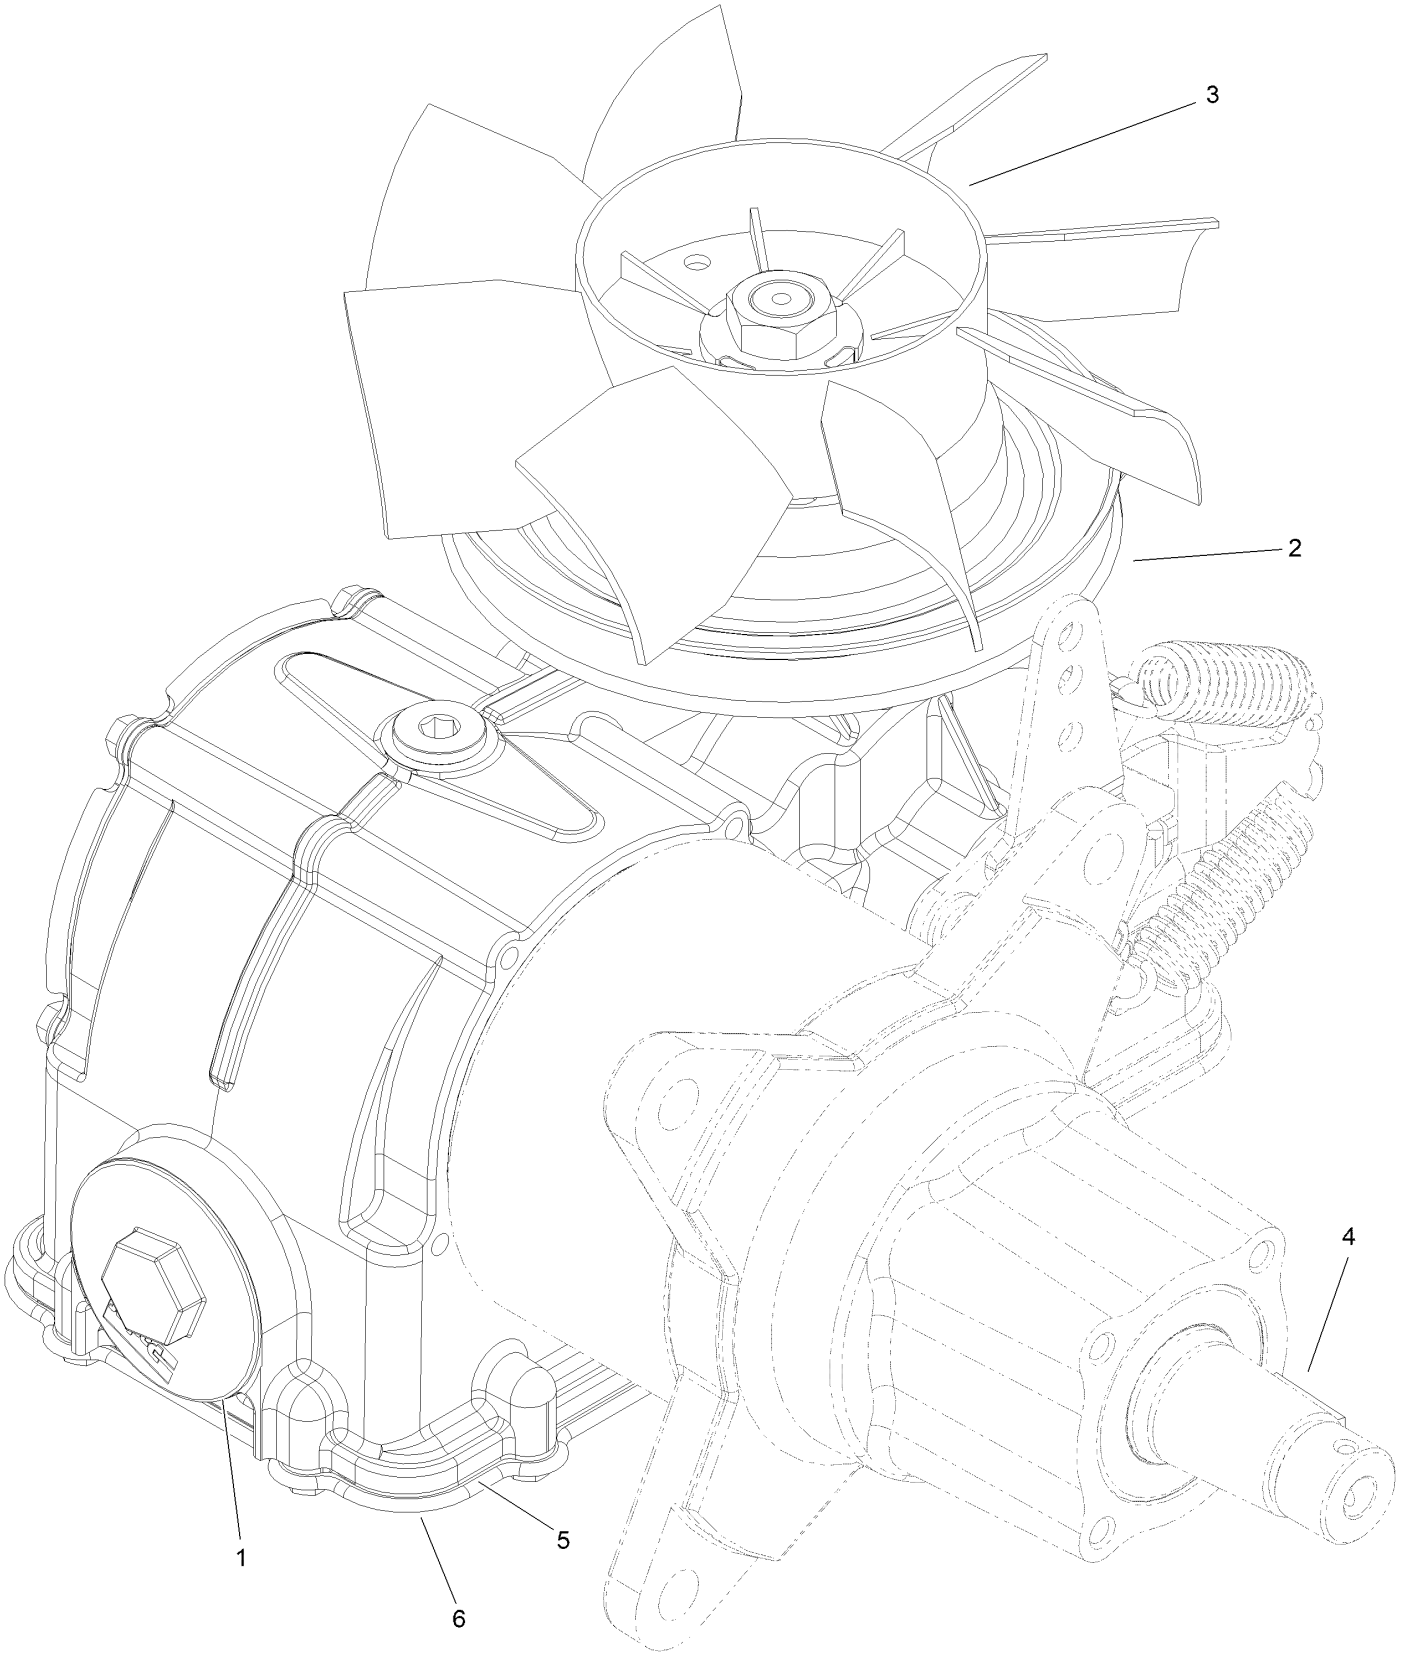

# RH Hydro Transaxle Assembly No. 132-8803 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 137-3772 | 1 | Filter |
| 2 | 137-3773 | 1 | Pulley |
| 3 | 137-3774 | 1 | Fan (8.3 Inch) |
| 4 | 3257-42 | 1 | Key-Woodruff |
| 5 | 140-1148 | 1 | Gasket-Cover, Bottom |
| 6 | 139-7233 | 1 | Cover-Service |
| 7 | 145-1155 | 1 | Kit-Seal, Motor ● |
| 8 | 145-1156 | 1 | Seal-Shaft ● |
| 9 | 145-1167 | 1 | Rtn ASM (RH) ● |

● Not illustrated

# Hydraulic Manifold Assembly No. 132-8989

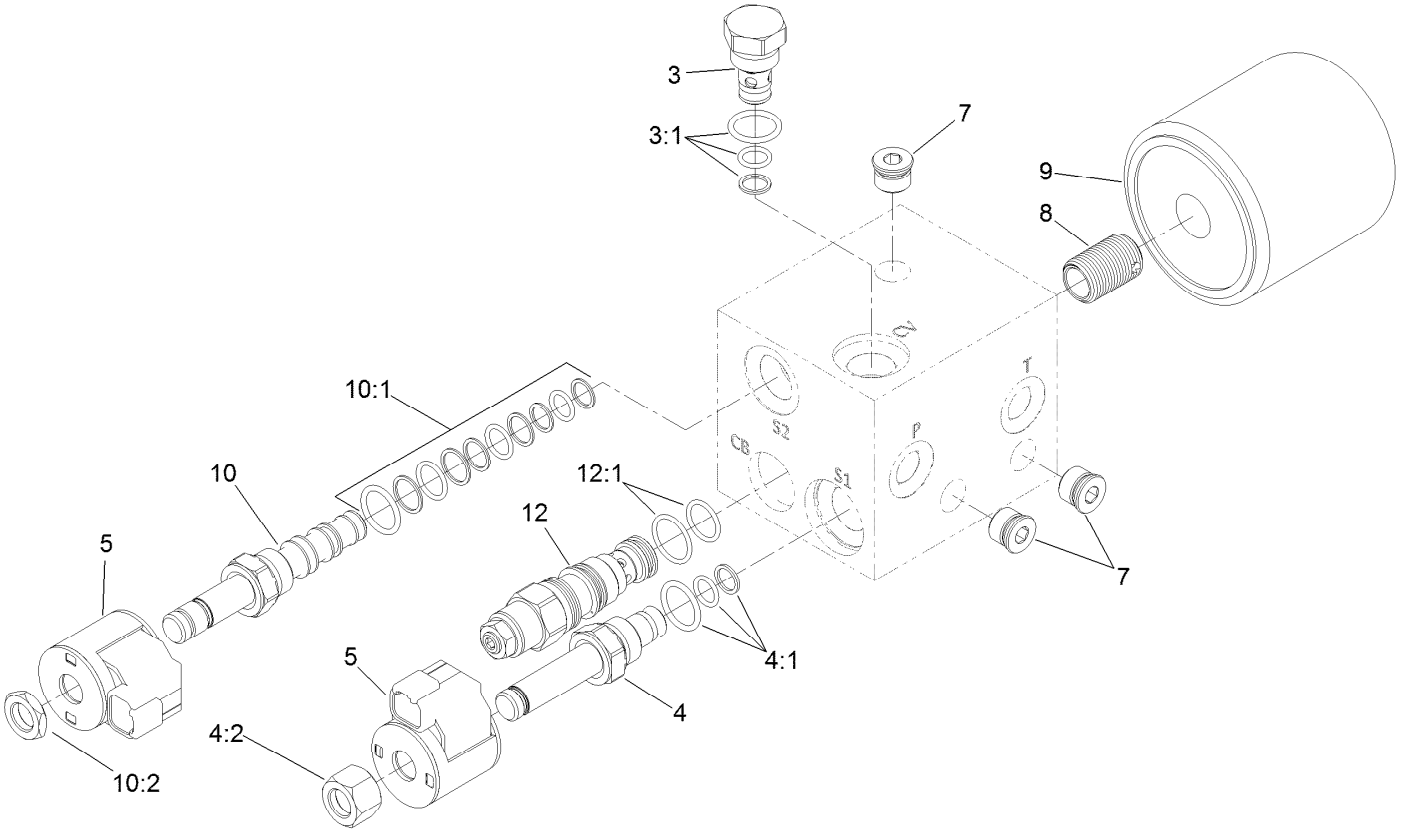

# Hydraulic Manifold Assembly No. 132-8989 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 3 | 105-9321 | 1 | Check Valve ASM |
| 3:1 | 105-9156 | 1 | Seal Kit |
| 4 | 107-7517 | 1 | Valve-Solenoid |
| 4:1 | 105-9156 | 1 | Seal Kit |
| 4:2 | 107-7812 | 1 | Nut-Solenoid |
| 5 | 119-8036 | 2 | Coil |
| 7 | 112-9213 | 3 | Plug |
| 8 | 127-3885 | 1 | Nipple-Filter |
| 9 | 1-633750 | 1 | Filter-Oil, HYD |
| 10 | 120-1665 | 1 | Valve-Solenoid |
| 10:1 | 112-6520 | 1 | Seal Kit |
| 10:2 | 110-2634 | 1 | Nut-Coil |
| 12 | 114-5082 | 1 | Valve-Balance, Counter |
| 12:1 | 114-5083 | 1 | Seal Kit |

# Engine Assembly

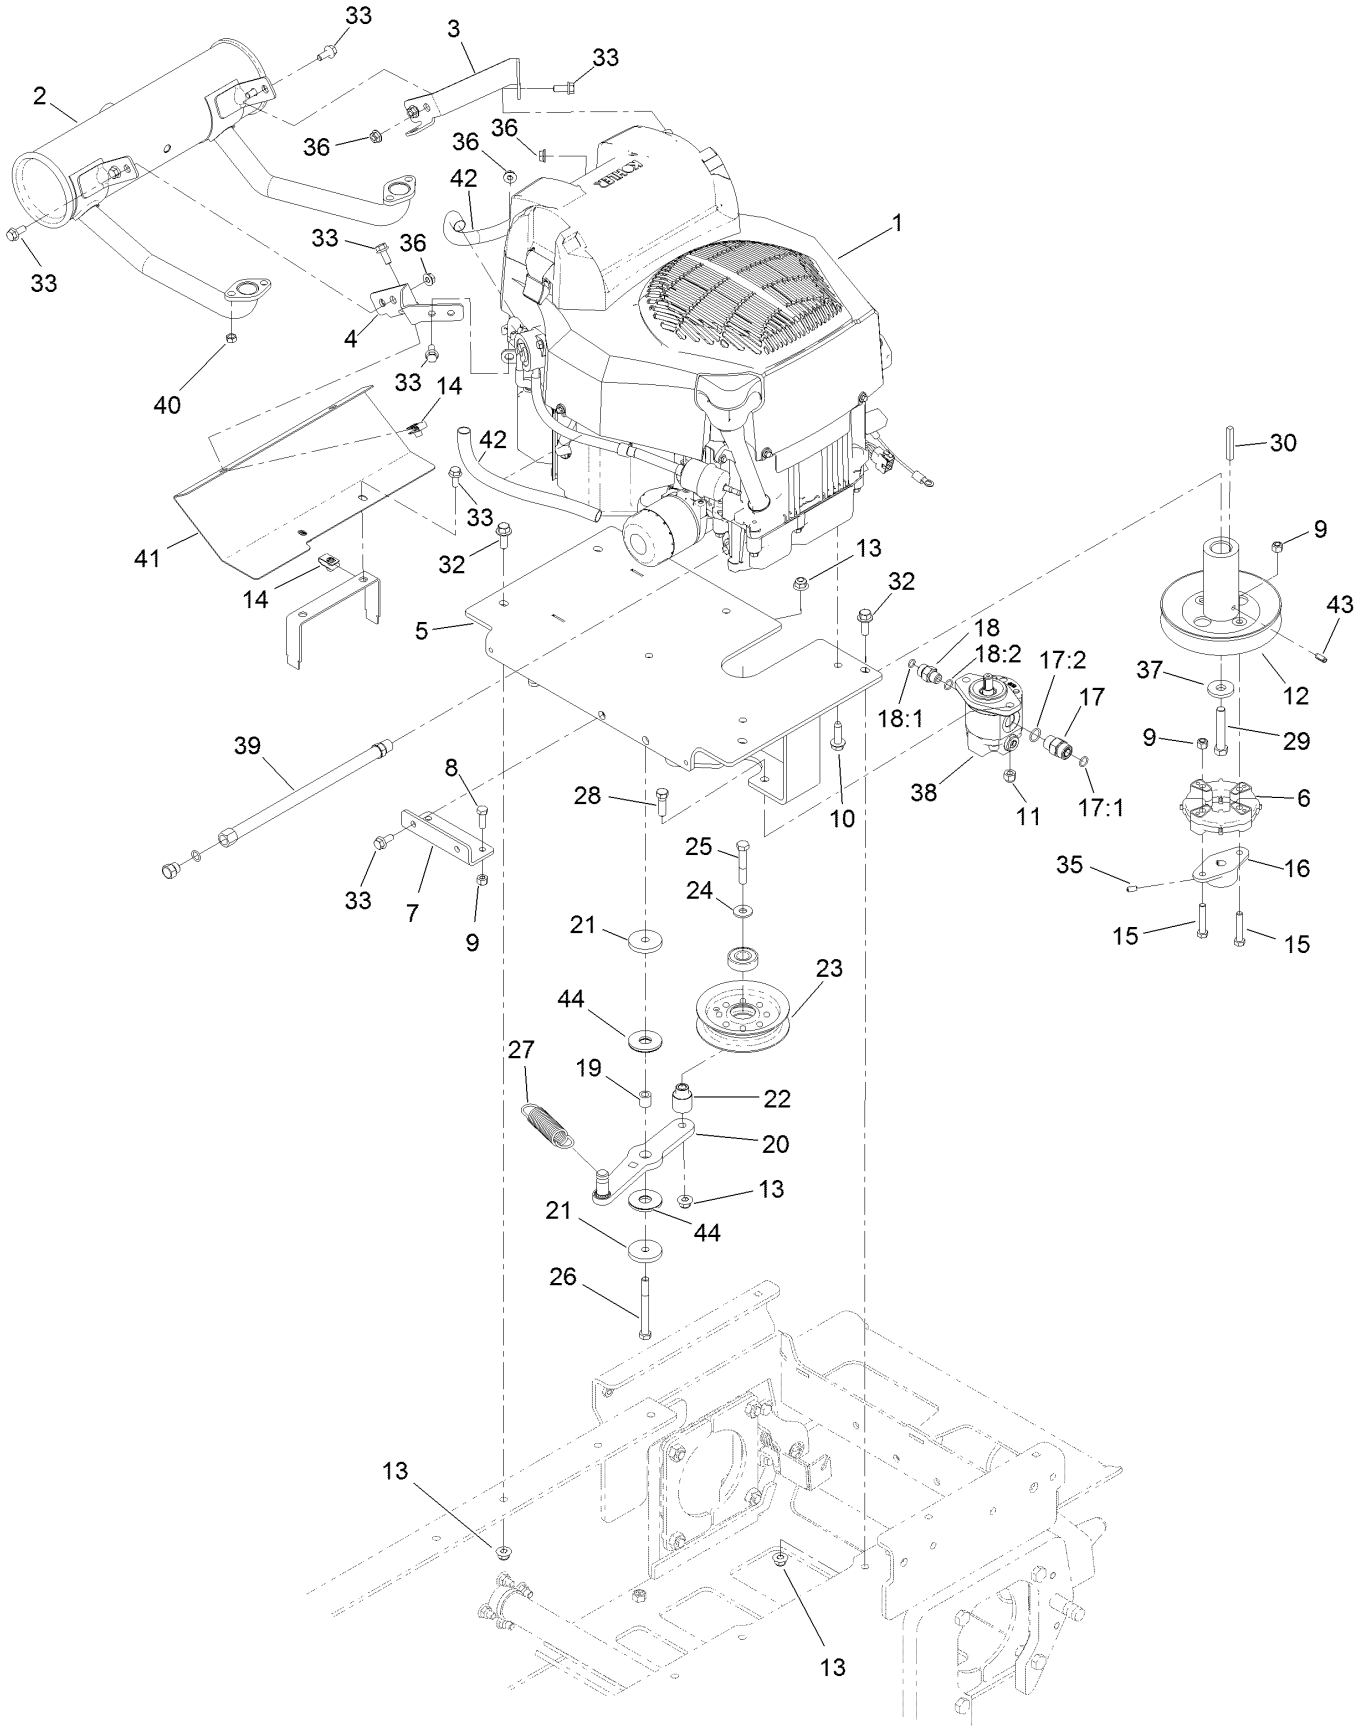

# Engine Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 139-7245 | 1 | Engine-Kohler, Zt740 [service] |
| 2 | 132-8995 | 1 | Muffler-Kohler |
| 3 | 132-8916-03 | 1 | Bracket-Muffler |
| 4 | 132-8917-03 | 1 | Bracket-Muffler |
| 5 | 132-8907-0P | 1 | Engine Plate ASM (Welded) |
| 6 | 119-0652 | 1 | Coupler-Rubber |
| 7 | 132-8940-03 | 1 | Bracket-Tank, Hydro |
| 8 | 322-5 | 2 | Screw-HH |
| 9 | 3296-29 | 6 | Nut-Lock, NI |
| 10 | 32144-109 | 4 | Screw-Thd |
| 11 | 125-5069 | 2 | Nut-Hex |
| 12 | 132-8938 | 1 | Pulley-Engine |
| 13 | 104-8301 | 6 | Nut-HF, NI |
| 14 | 115-7721 | 4 | Nut-Clip, U |
| 15 | 322-9 | 4 | Screw-HH |
| 16 | 132-9033 | 1 | Hub-Pump |
| 17 | 340-4 | 1 | Fitting-Straight |
| 17:1 | 237-30 | 1 | O-Ring |
| 17:2 | 237-79 | 1 | O-Ring |
| 18 | 340-2 | 1 | Fitting-Straight |
| 18:1 | 237-22 | 1 | O-Ring |
| 18:2 | 237-42 | 1 | O-Ring |
| 19 | 75-5270 | 1 | Spacer-Knob, Seat |
| 20 | 132-9086-03 | 1 | Arm-Idler |
| 21 | 110-9981 | 2 | Washer-Plain |
| 22 | 132-9080 | 1 | Bushing-Idler |
| 23 | 116-3626 | 1 | Pulley-Idler |
| 24 | 80-6990 | 1 | Washer-Hardened |
| 25 | 323-12 | 1 | Screw-HH |
| 26 | 323-15 | 1 | Screw-HH |
| 27 | 138-7110 | 1 | Spring-Extension |
| 28 | 323-6 | 2 | Screw-HH |
| 29 | 3212-10 | 1 | Screw-HH |
| 30 | 103-4177 | 1 | Key |
| 32 | 3234-42 | 4 | Screw-HHF |
| 33 | 3234-47 | 14 | Screw-HHF |
| 35 | 3245-9 | 2 | Screw-Set, HSH |
| 36 | 32128-26 | 8 | Nut-HF |
| 37 | 110-6147 | 1 | Washer-Flat |
| 38 | 132-8954 | 1 | Pump-Gear |
| 39 | 117-1261 | 1 | Hose-Drain, Oil |
| 40 | 114-3549 | 4 | Nut |
| 41 | 139-7232-03 | 1 | Shield-Muffler |
| 42 | 136-4617 | 2 | Sleeve-Thermal |
| 43 | 32121-134 | 1 | Pin-Roll |
| 44 | 114-0463 | 2 | Washer-Friction, Composite |

# Hydraulic Gear Pump Assembly No. 132-8954

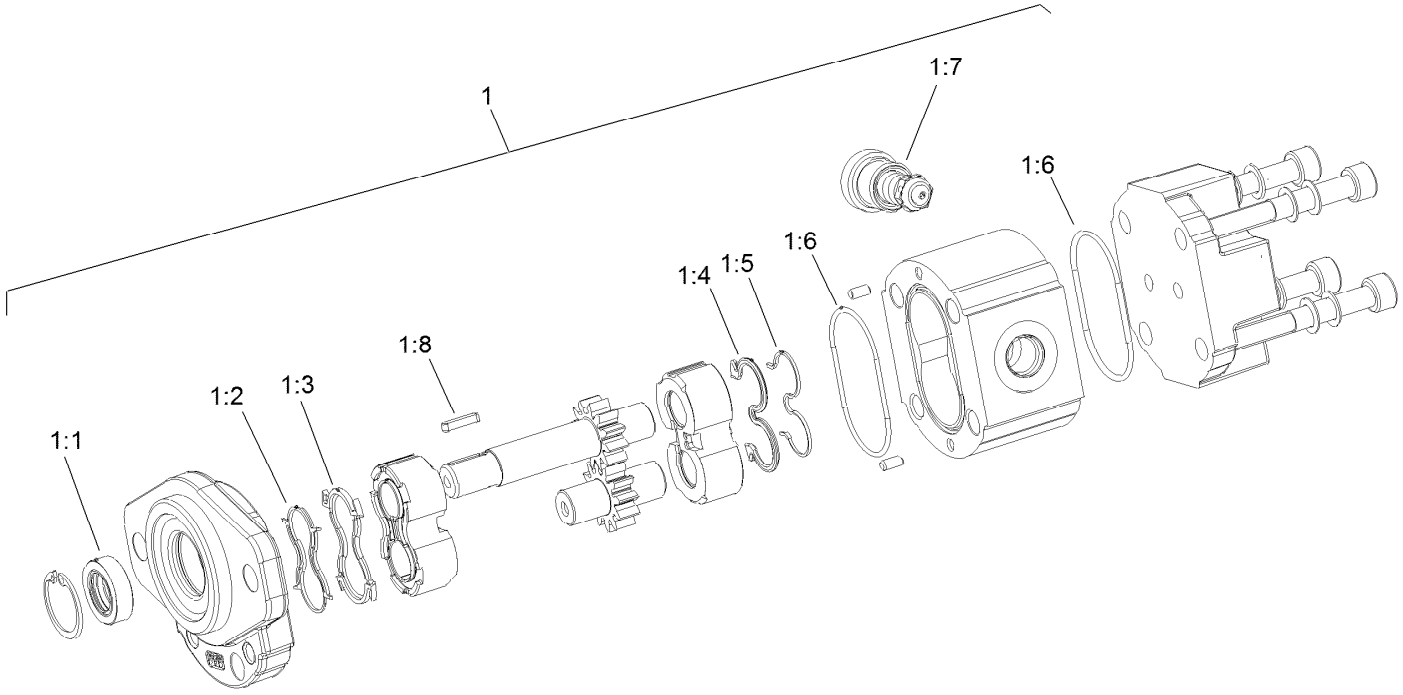

# Hydraulic Gear Pump Assembly No. 132-8954 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-8969 | 1 | Seal-Kit |
| 1:1 | | 1 | Shaft Seal ● |
| 1:2 | | 1 | Anti Extrusion ● |
| 1:3 | | 1 | Upper Seal ● |
| 1:4 | | 1 | Seal ● |
| 1:5 | | 1 | Anti Extrusion ● |
| 1:6 | | 2 | O-Ring Seal ● |
| 1:7 | | 1 | O-Ring Seal ● |
| 1:8 | | 1 | Key ● |

● Not serviced separately

# Fuel Tank and Tower Assembly

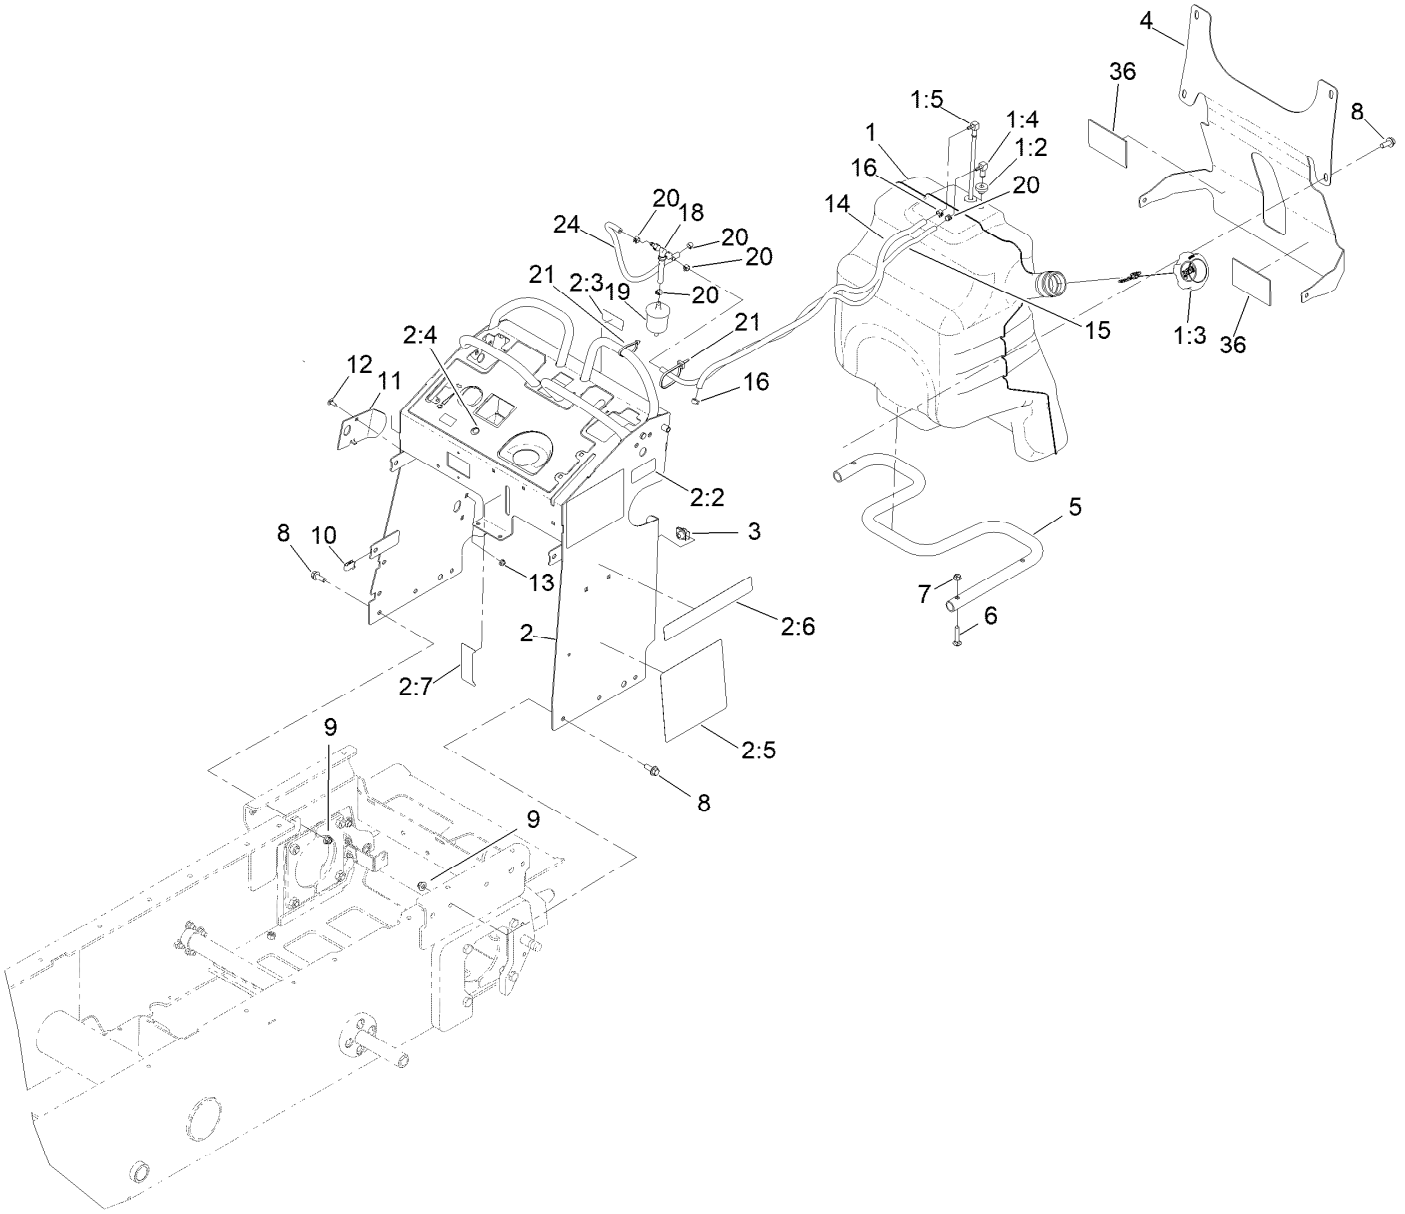

# Fuel Tank and Tower Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-7560 | 1 | Fuel Tank ASM |
| 1:2 | 46-6560 | 2 | Bushing |
| 1:3 | 137-4127 | 1 | Cap-Fuel |
| 1:4 | 104-5228 | 1 | Fitting-Elbow, 90 DEG |
| 1:5 | 145-6195 | 1 | ASM, Tube-Fuel |
| 2 | 139-7221 | 1 | Tower ASM |
| 2:2 | 116-8775 | 1 | Decal-Fill, Fuel |
| 2:3 | 132-9052 | 1 | Decal-Fuse |
| 2:4 | 139-7219 | 1 | Decal-Control Panel |
| 2:5 | 138-7146 | 1 | Decal-Service |
| 2:6 | 132-9057 | 2 | Decal |
| 2:7 | 137-0575 | 1 | Decal-Level, Oil |
| 3 | 105-4886 | 4 | Nut-Tinnerman |
| 4 | 147-3226-03 | 1 | Bracket-Cross |
| 5 | 132-5161-01 | 1 | Tube-Mount, Fuel Tank |
| 6 | 3230-5 | 3 | Bolt-CARR |
| 7 | 104-8300 | 3 | Nut-HF, NI |
| 8 | 3234-42 | 10 | Screw-HHF |
| 9 | 104-8301 | 6 | Nut-HF, NI |
| 10 | 115-7721 | 5 | Nut-Clip, U |
| 11 | 131-7455 | 1 | Plate-Striker |
| 12 | 3229-11 | 1 | Screw-CARR |
| 13 | 104-7201 | 1 | Nut-HF, NI |
| 14 | 132-8929 | 1 | Hose-Fuel [32"] |
| 15 | 110-3958 | 1 | Hose-Fuel |
| 16 | 2412-98 | 2 | Clamp-Hose |
| 18 | 116-5464 | 1 | Tee And Check |
| 19 | 120-2235 | 1 | Filter-Fuel |
| 20 | 2412-146 | 5 | Clamp-Hose |
| 21 | 3290-378 | 1 | Tie-Cable |
| 24 | 132-9046 | 1 | Hose-Vent |
| 36 | 98-1386 | 2 | Pad-Foam |

# Track Assembly

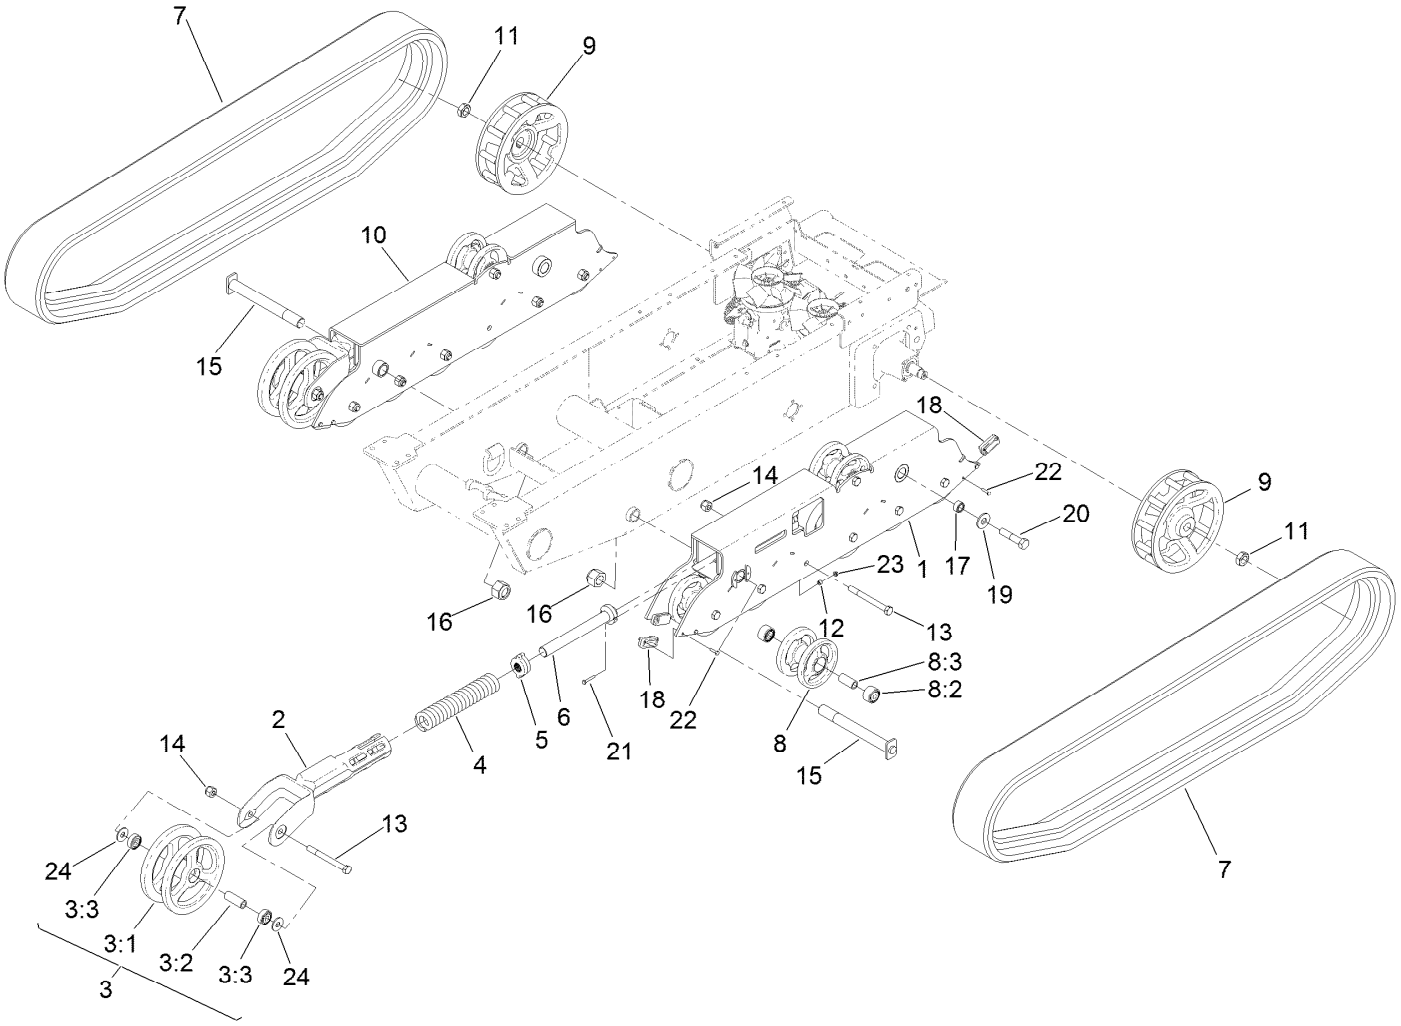

# Track Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-8813-03 | 1 | Mount-Wheel, LH |
| 2 | 108-4691-03 | 2 | Arm-Tensioner |
| 3 | 104-5745 | 2 | Tensioner Wheel ASM |
| 3:1 | 104-5747-03 | 1 | Wheel-Tensioner |
| 3:2 | 98-9835 | 1 | Spacer-Wheel, Tensioner |
| 3:3 | 120-5378 | 2 | Bearing-Ball |
| 4 | 95-3624 | 2 | Spring-Compression |
| 5 | 108-4664 | 2 | Block-Tensioner |
| 6 | 127-9563 | 2 | Bolt-Tensioner |
| 7 | 137-8712 | 2 | Track |
| 8 | 138-5231 | 14 | Wheel ASM |
| 8:2 | 138-0547 | 2 | Bearing-Ball |
| 8:3 | 130-7564 | 1 | Spacer-Wheel |
| 9 | 132-8893-03 | 2 | Wheel-Drive |
| 10 | 132-8814-03 | 1 | Mount-Wheel, RH |
| 11 | 26-3790 | 2 | Nut-Lock |
| 12 | 98-4799 | 2 | Spacer |
| 13 | 327-17 | 16 | Screw-HH |
| 14 | 3296-24 | 16 | Nut-Hex |
| 15 | 130-1050 | 2 | Pin-Track |
| 16 | 125-0399 | 2 | Nut-HH |
| 17 | 132-8944 | 2 | Spacer-Track, Outside Mount |
| 18 | 132-6053 | 8 | Block-Track |
| 19 | 99-2659 | 2 | Washer |
| 20 | 328-5 | 2 | Screw-HH |
| 21 | 321-37 | 2 | Screw-HH |
| 22 | 321-6 | 16 | Screw-HH |
| 23 | 32128-32 | 2 | Nut-HHF |
| 24 | 3256-7 | 4 | Washer-Flat |

# Hopper Assembly

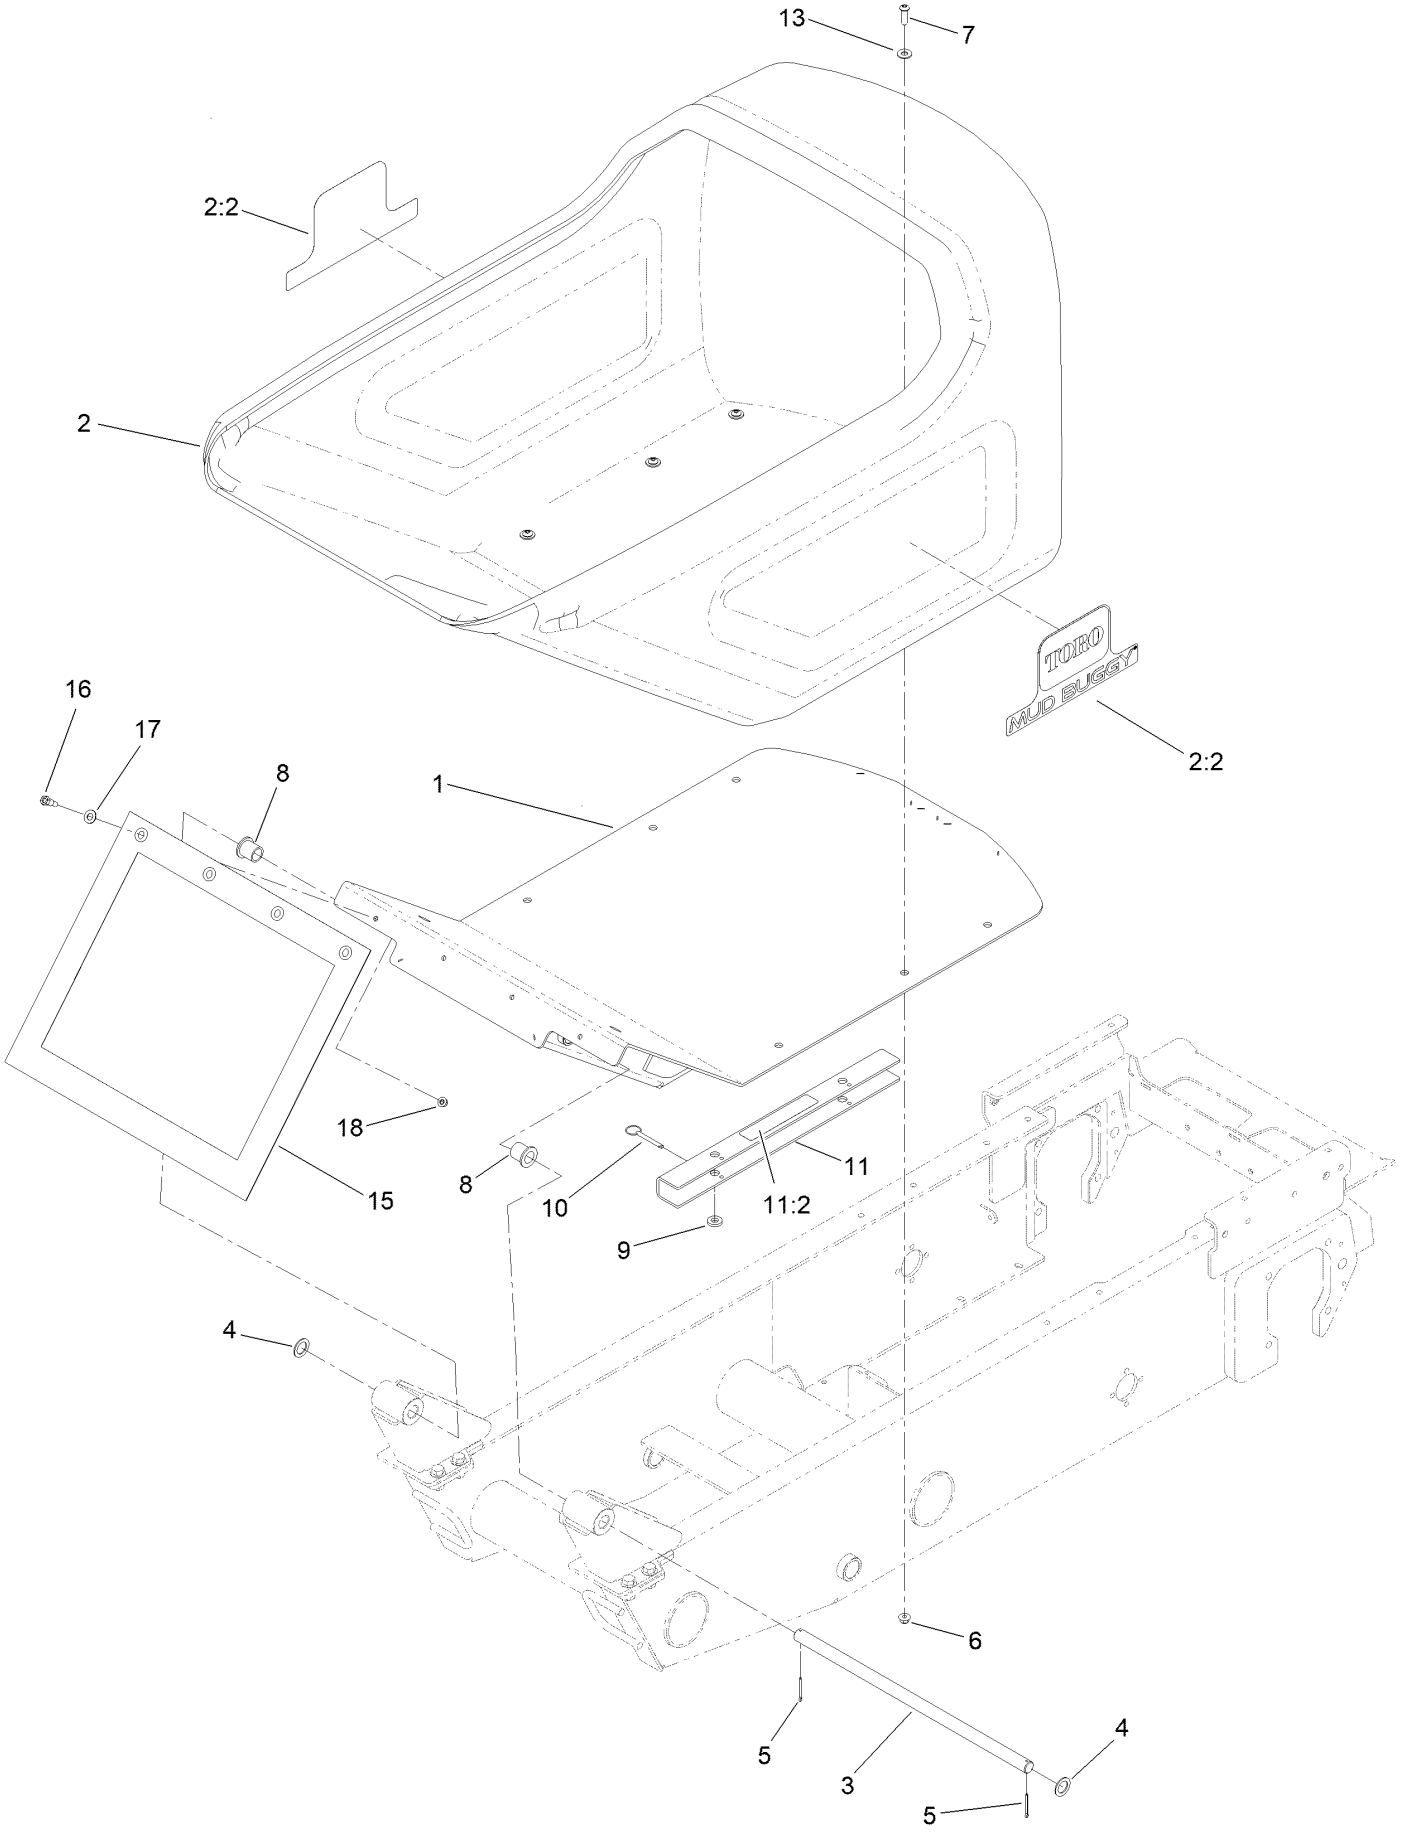

# Hopper Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 139-7207 | 1 | Frame-Hopper ASM |
| 2 | 139-7240 | 1 | Hopper-Mortar, ASM |
| 2:2 | 139-7234 | 2 | Decal-Mud Buggy |
| 3 | 132-8854 | 1 | Shaft-Pivot,Tub |
| 4 | 99-4958 | 2 | Spacer |
| 5 | 3272-13 | 2 | Pin-Cotter |
| 6 | 104-8301 | 6 | Nut-HF, NI |
| 7 | 3274-63 | 6 | Screw-HSBH |
| 8 | 1-303514 | 2 | Bearing-Flanged |
| 9 | 83-1470 | 2 | Washer-Neoprene |
| 10 | 108-0094 | 2 | Pin-Cotterless |
| 11 | 130-5315 | 1 | Arm-Locking |
| 11:2 | 115-4858 | 1 | Decal-Danger |
| 13 | 3256-4 | 6 | Washer-Flat |
| 15 | 132-9044 | 1 | Shield-Splatter |
| 16 | 28-0540 | 4 | Bolt-Shoulder |
| 17 | 3256-25 | 4 | Washer-Flat |
| 18 | 104-8300 | 4 | Nut-HF, NI |

# Electrical Harness Assembly

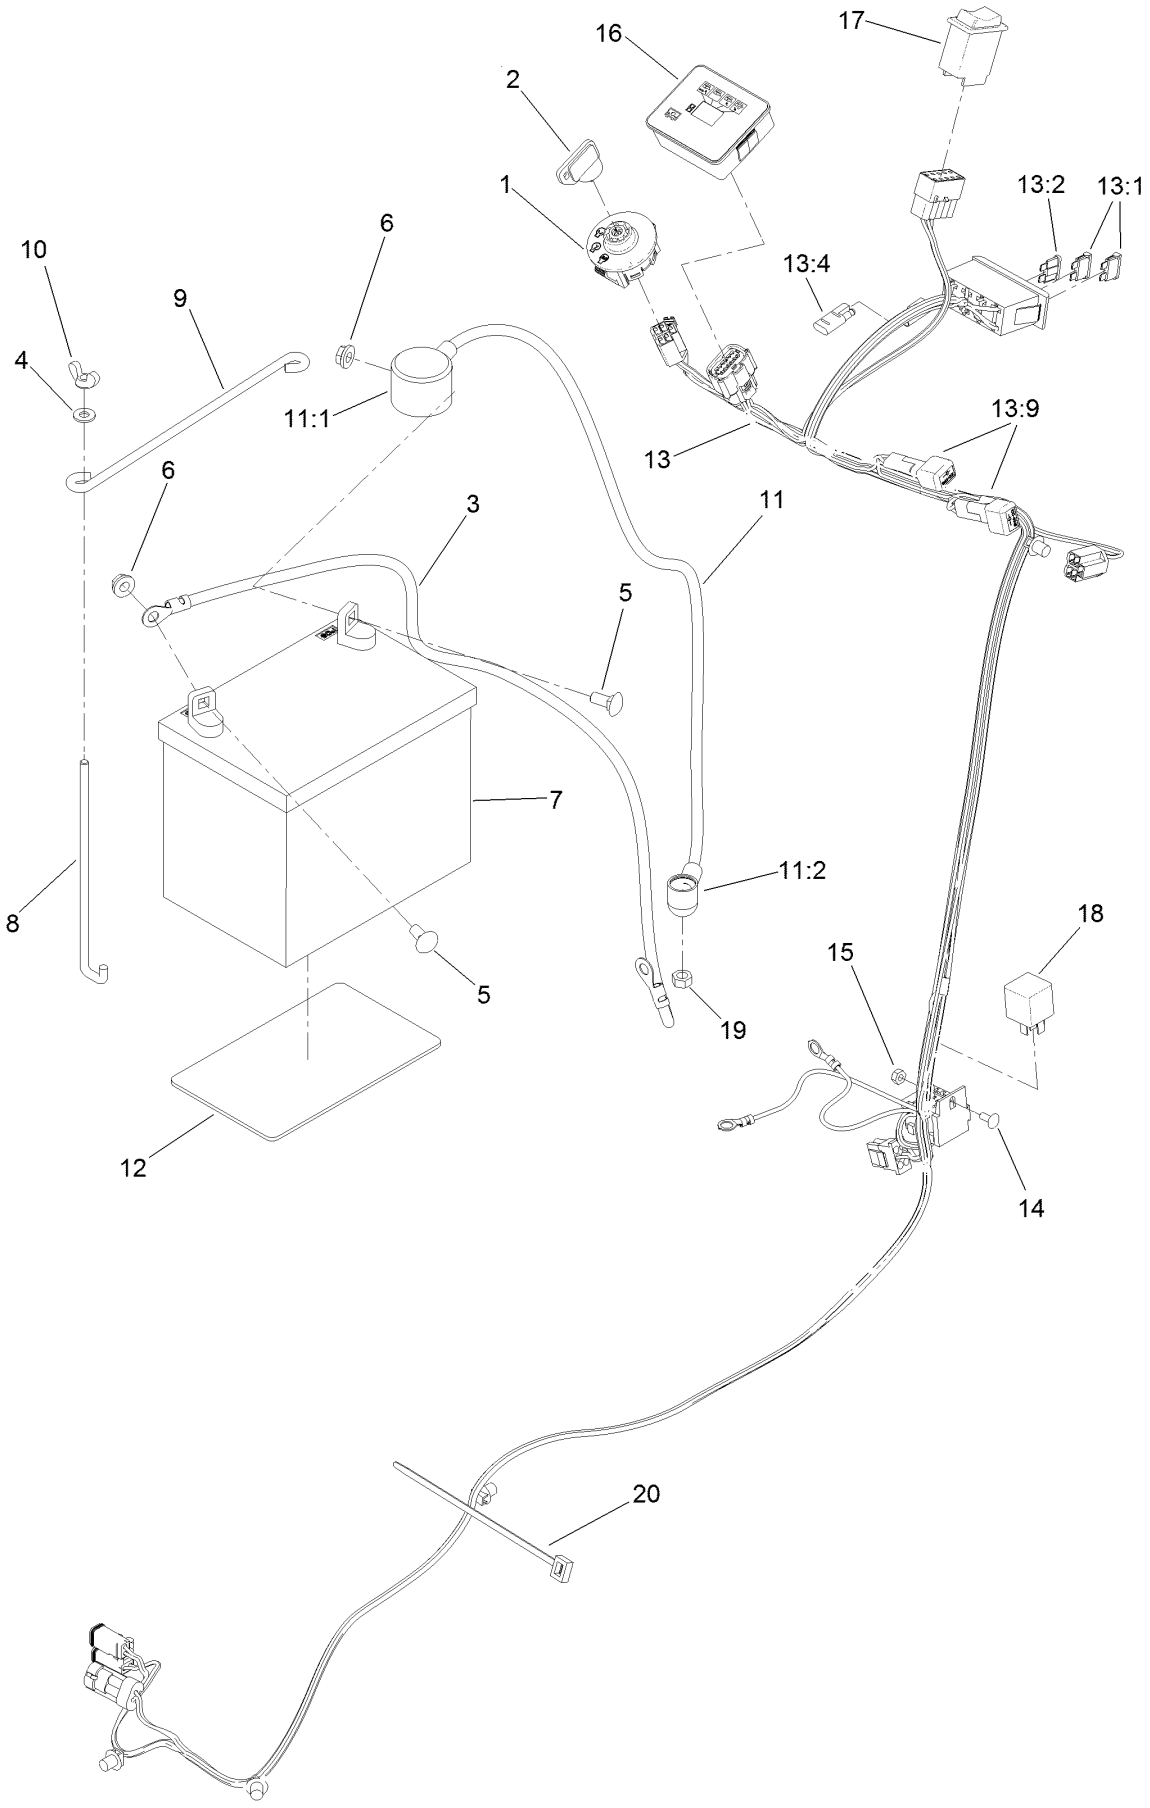

# Electrical Harness Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 137-4101 | 1 | Switch-Ignition |
| 2 | 63-8360 | 1 | Key-Ignition |
| 3 | 117-7240 | 1 | Cable-Battery, Negative |
| 4 | 3256-22 | 2 | Washer-Flat |
| 5 | 3230-1 | 2 | Bolt-CARR |
| 6 | 32128-20 | 2 | Nut-HF |
| 7 | 104-4657 | 1 | Battery (340 CCA, Wet) |
| 8 | 100-6435 | 2 | Post-Battery |
| 9 | 100-6434 | 1 | Rod-Hold Down, Battery |
| 10 | 32103-22 | 2 | Nut-Wing |
| 11 | 109-7630 | 1 | Positive Battery Cable ASM |
| 11:1 | 109-2407 | 1 | Insulator-Battery |
| 11:2 | 1-543393 | 1 | Insulator-Solenoid |
| 12 | 62-4300 | 1 | Pad-Skid, Anti |
| 13 | 138-3138 | 1 | Harness-Wire |
| 13:1 | 109355 | 2 | Fuse-Blade, 15 Amp |
| 13:2 | 114241 | 1 | Fuse-Blade, 7.5 Amp |
| 13:4 | 116-0053 | 1 | Cap-Plug |
| 13:9 | 100-4918 | 2 | Diode |
| 14 | 1-807513 | 1 | Bolt-CARR |
| 15 | 3296-2 | 1 | Nut-Lock, NI |
| 16 | 132-8959 | 1 | Module, Hour Meter |
| 17 | AU113664 | 1 | Switch-Rocker, 2 Pole |
| 18 | 1-643275 | 1 | Relay |
| 19 | 33014-00 | 1 | Nut-Hex |
| 20 | 3290-378 | 1 | Tie-Cable |

# Control Assembly

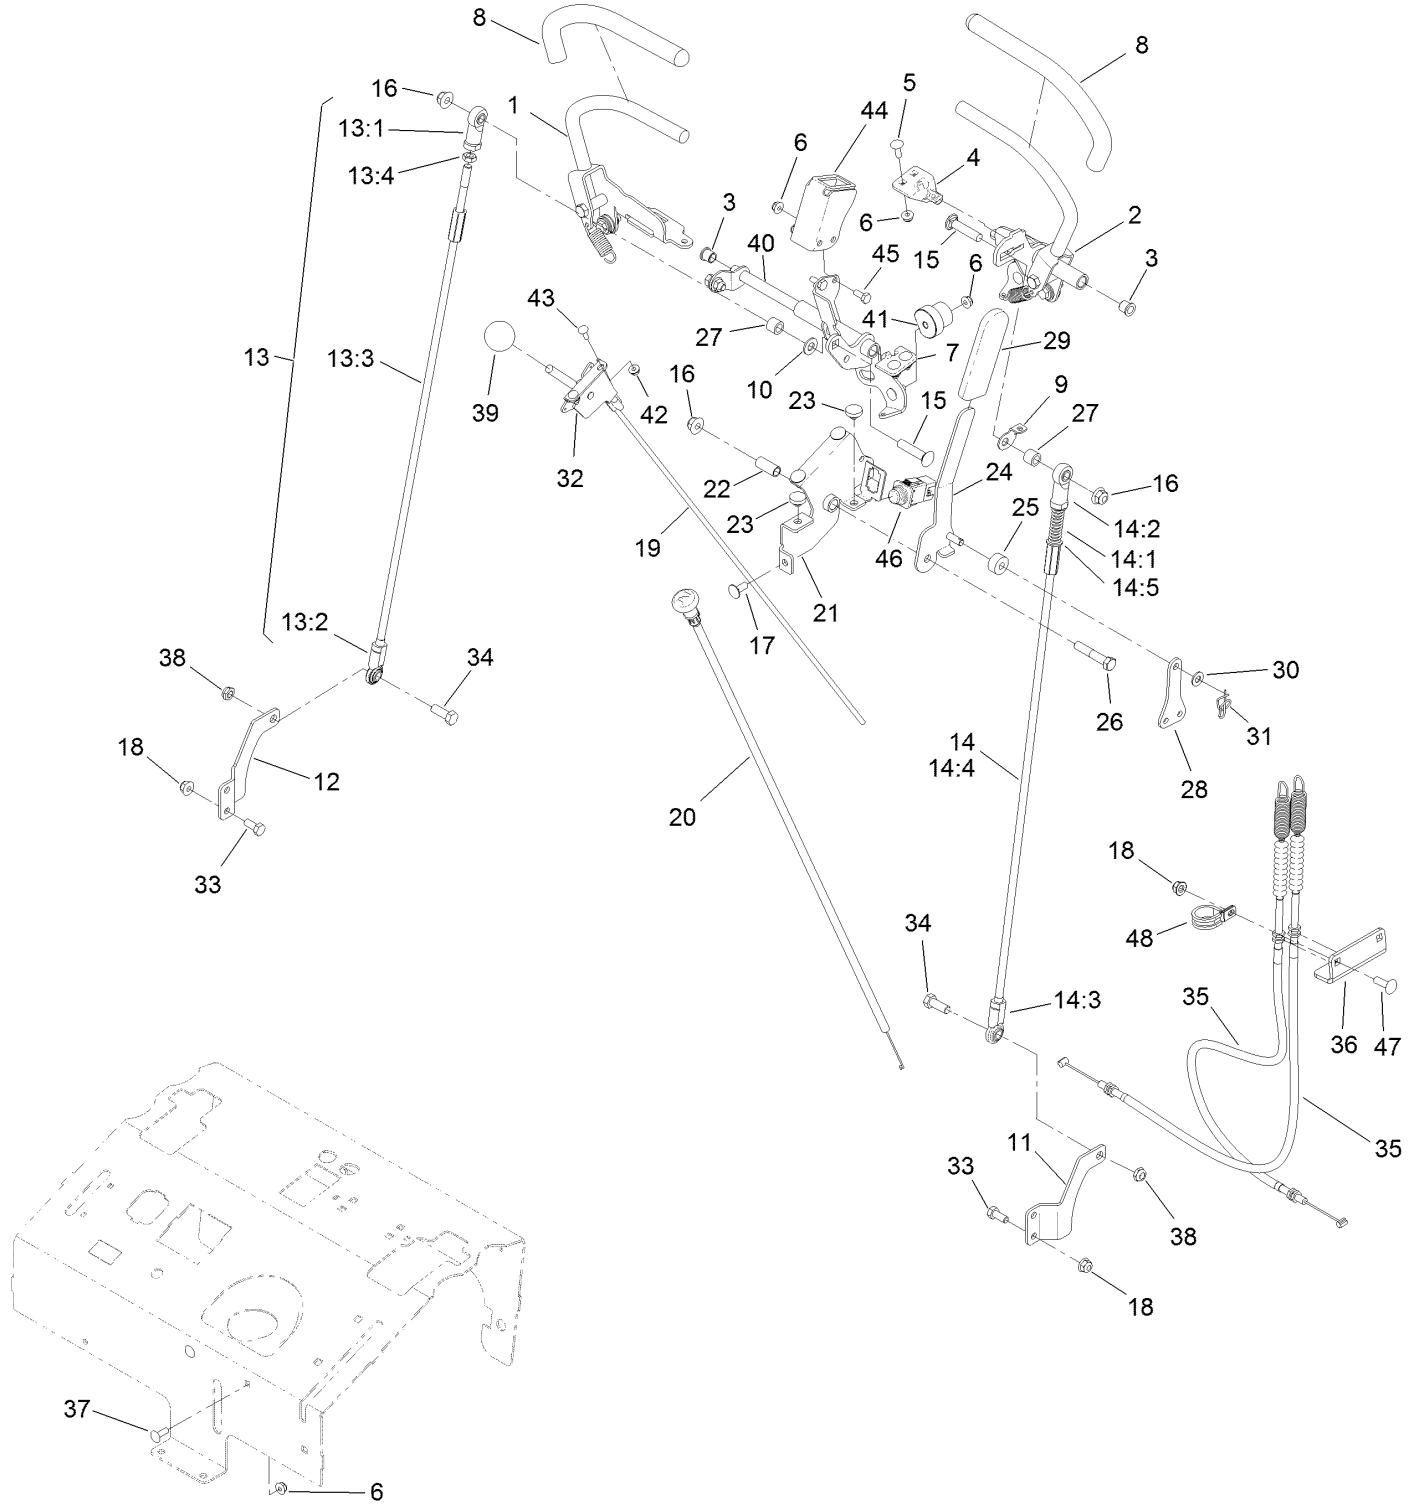

# Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-9048 | 1 | RH Control Handle ASM |
| 2 | 132-9047 | 1 | LH Control Handle ASM |
| 3 | 103-9928 | 2 | Bearing |
| 4 | 120-3288 | 1 | Tab-Pivot, LH |
| 5 | 3229-1 | 4 | Screw-CARR |
| 6 | 104-7201 | 10 | Nut-HF, NI |
| 7 | 120-3287 | 1 | Tab-Pivot, RH |
| 8 | 119-0222 | 2 | Grip |
| 9 | 132-7538 | 1 | Bracket-Adjustment, Speed |
| 10 | 3256-24 | 1 | Washer-Flat |
| 11 | 131-5748-0P | 1 | Bracket-Hydro, LH (Primer) |
| 12 | 131-5747-0P | 1 | Bracket-Hydro, RH (Black) |
| 13 | 138-8642 | 1 | RH Control Rod ASM |
| 13:1 | 92-7008 | 1 | End-Rod, Female |
| 13:2 | 103-1167 | 1 | Joint-Ball End, LH |
| 13:3 | 138-8641 | 1 | Rod-Control |
| 13:4 | 3220-3 | 1 | Nut-HJ |
| 14 | 138-8643 | 1 | LH Control Rod ASM |
| 14:1 | 1-603807 | 1 | Spring-Return, Neutral |
| 14:2 | 92-7008 | 1 | End-Rod, Female |
| 14:3 | 103-1167 | 1 | Joint-Ball End, LH |
| 14:4 | 138-8641 | 1 | Rod-Control |
| 14:5 | 3256-45 | 2 | Washer-Flat |
| 15 | 3231-29 | 2 | Screw-CARR |
| 16 | 104-8301 | 3 | Nut-HF, NI |
| 17 | 3230-23 | 3 | Bolt-CARR |
| 18 | 104-8300 | 10 | Nut-HF, NI |
| 19 | 115-1211 | 1 | Cable-Control |
| 20 | 132-9035 | 1 | Cable-Choke |
| 21 | 132-8919-03 | 1 | Bracket-Brake, Pivot |
| 22 | 131-3562 | 1 | Bearing-Sleeve |
| 23 | 1-513658 | 2 | Bumper |
| 24 | 132-8920-03 | 1 | Handle-Arm, Brake |
| 25 | 132-9064 | 1 | Bushing-Brake |
| 26 | 323-10 | 1 | Screw-HH |
| 27 | 93-9847 | 2 | Spacer |
| 28 | 132-1188 | 1 | Yoke-Cable |
| 29 | 1-633268 | 1 | Grip-Lever |
| 30 | 93-6079 | 1 | Spacer-Nylon |
| 31 | 112-1491 | 1 | Pin-Cotter |
| 32 | 110-5547 | 1 | Lever-Control |
| 33 | 322-3 | 5 | Screw-HH |
| 34 | 323-6 | 2 | Screw-HH |
| 35 | 132-8921 | 2 | Cable-Brake |
| 36 | 132-8923-03 | 1 | Bracket-Cable, Brake |
| 37 | 3229-25 | 2 | Screw-CARR |
| 38 | 3296-59 | 2 | Nut-Lock, NI |
| 39 | 1-603175 | 1 | Knob-Ball |
| 40 | 132-9029-03 | 1 | Pivot/Plate Switch ASM |
| 41 | 126-1499 | 2 | Cam |
| 42 | 32128-17 | 2 | Nut-Lock, Flange |
| 43 | 1-807533 | 2 | Bolt-CARR |
| 44 | 132-9027-03 | 1 | Bracket-Switch |
| 45 | 321-3 | 2 | Screw-HH |
| 46 | 100-1268 | 1 | Switch-Plunger |
| 47 | 3230-22 | 2 | Screw-CARR |
| 48 | 2412-104 | 1 | Clamp-R |

# Platform Assembly

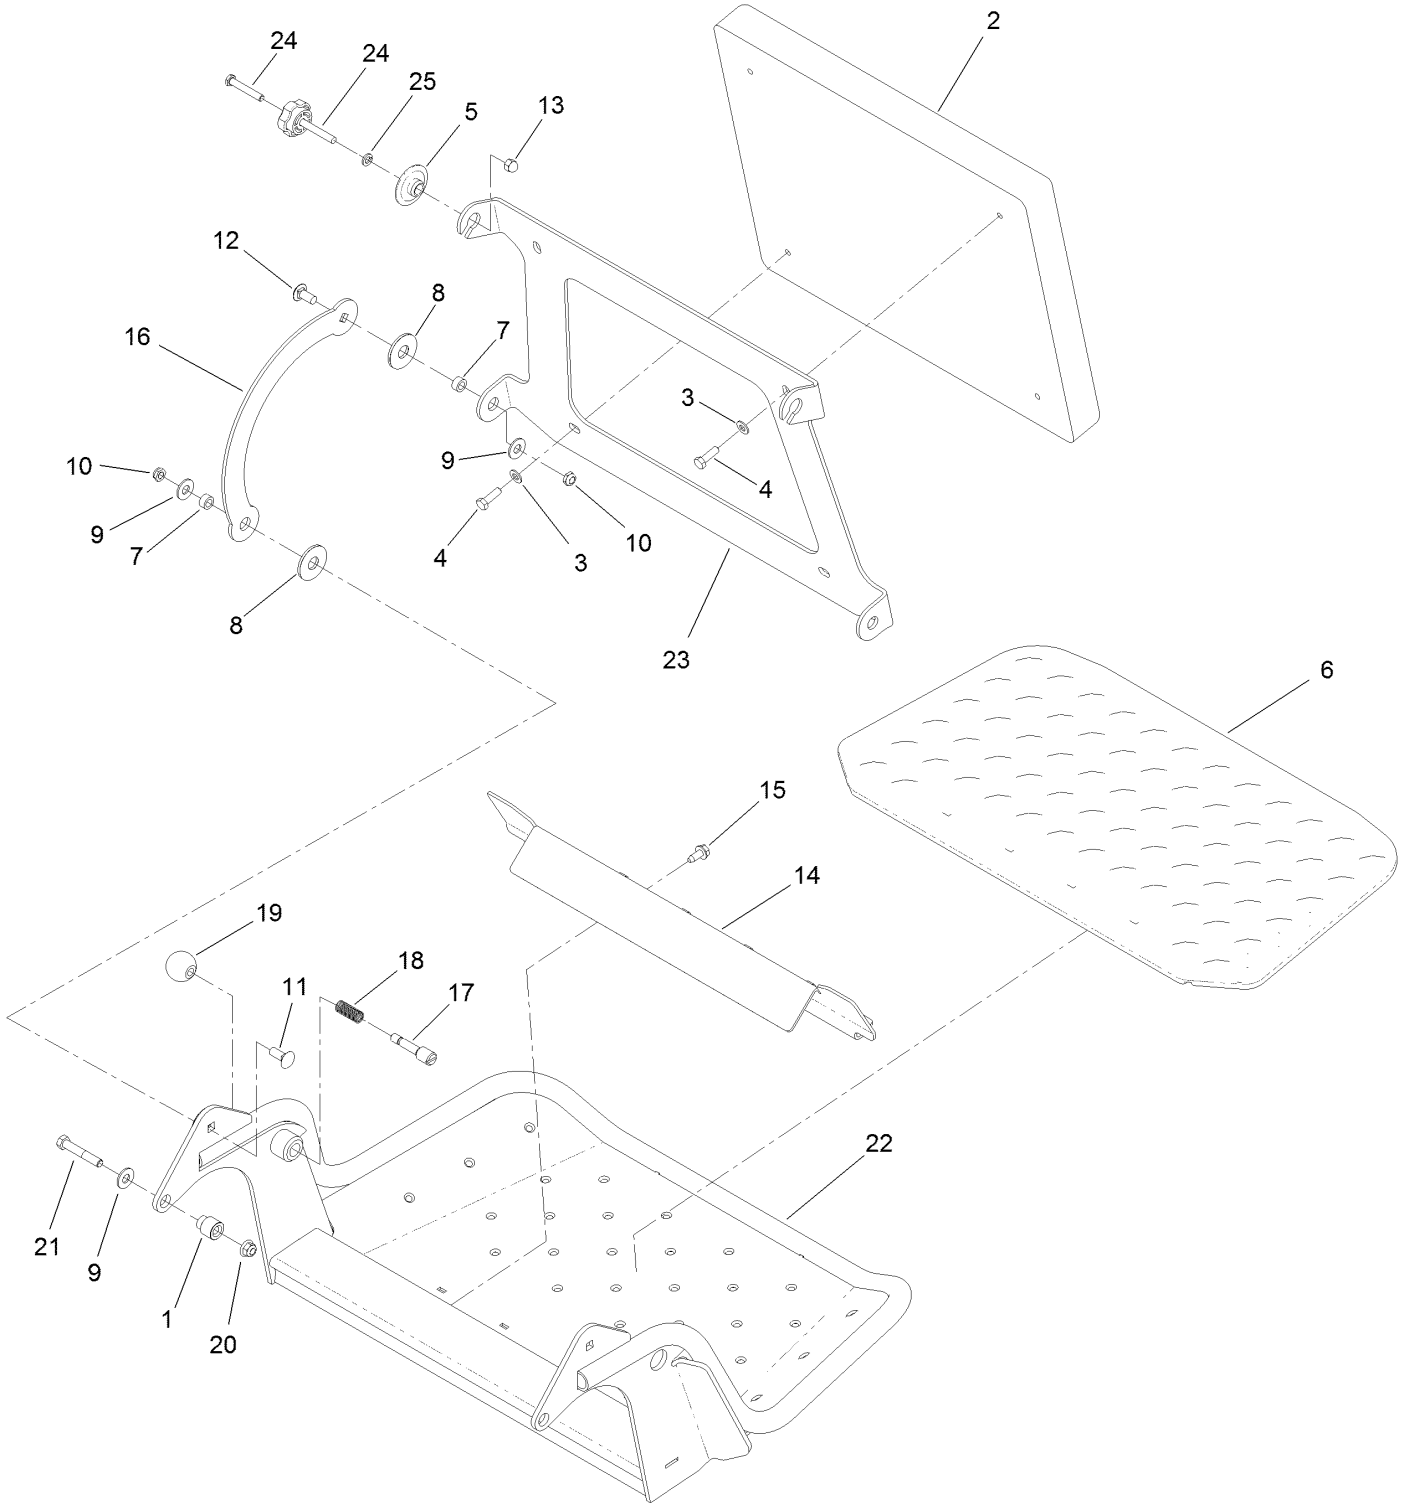

# Platform Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-7583 | 2 | Bushing-Flanged |
| 2 | 117-9739 | 1 | Pad-Cushion |
| 3 | 3256-23 | 4 | Washer-Plain |
| 4 | 121-7999 | 4 | Screw-HH |
| 5 | 116-2886 | 2 | Slide-Bushing |
| 6 | 126-7157 | 1 | Mat-Platform |
| 7 | 111044 | 4 | Spacer |
| 8 | 114-0463 | 4 | Washer-Friction, Composite |
| 9 | 3256-4 | 6 | Washer-Flat |
| 10 | 3296-59 | 4 | Nut-Lock, NI |
| 11 | 3231-2 | 2 | Bolt-CARR |
| 12 | 3231-27 | 2 | Screw-CARR |
| 13 | 137-4808 | 2 | Nut-Acorn |
| 14 | 136-5669-03 | 1 | Clamp-Shield |
| 15 | 32144-70 | 2 | Screw-HWHTF |
| 16 | 114-1915-03 | 2 | Link-Pad |
| 17 | 119-8650 | 1 | Pin-Latch |
| 18 | 114-5348 | 1 | Spring |
| 19 | 1-603175 | 1 | Knob-Ball |
| 20 | 104-8301 | 2 | Nut-HF, NI |
| 21 | 323-11 | 2 | Screw-HH |
| 22 | 120-8475-03 | 1 | Platform |
| 23 | 120-8499-03 | 1 | Hinge-Pad |
| 24 | 133-1426 | 2 | Knob |
| 25 | 3253-4 | 2 | Washer-Lock |

# Hood Assembly

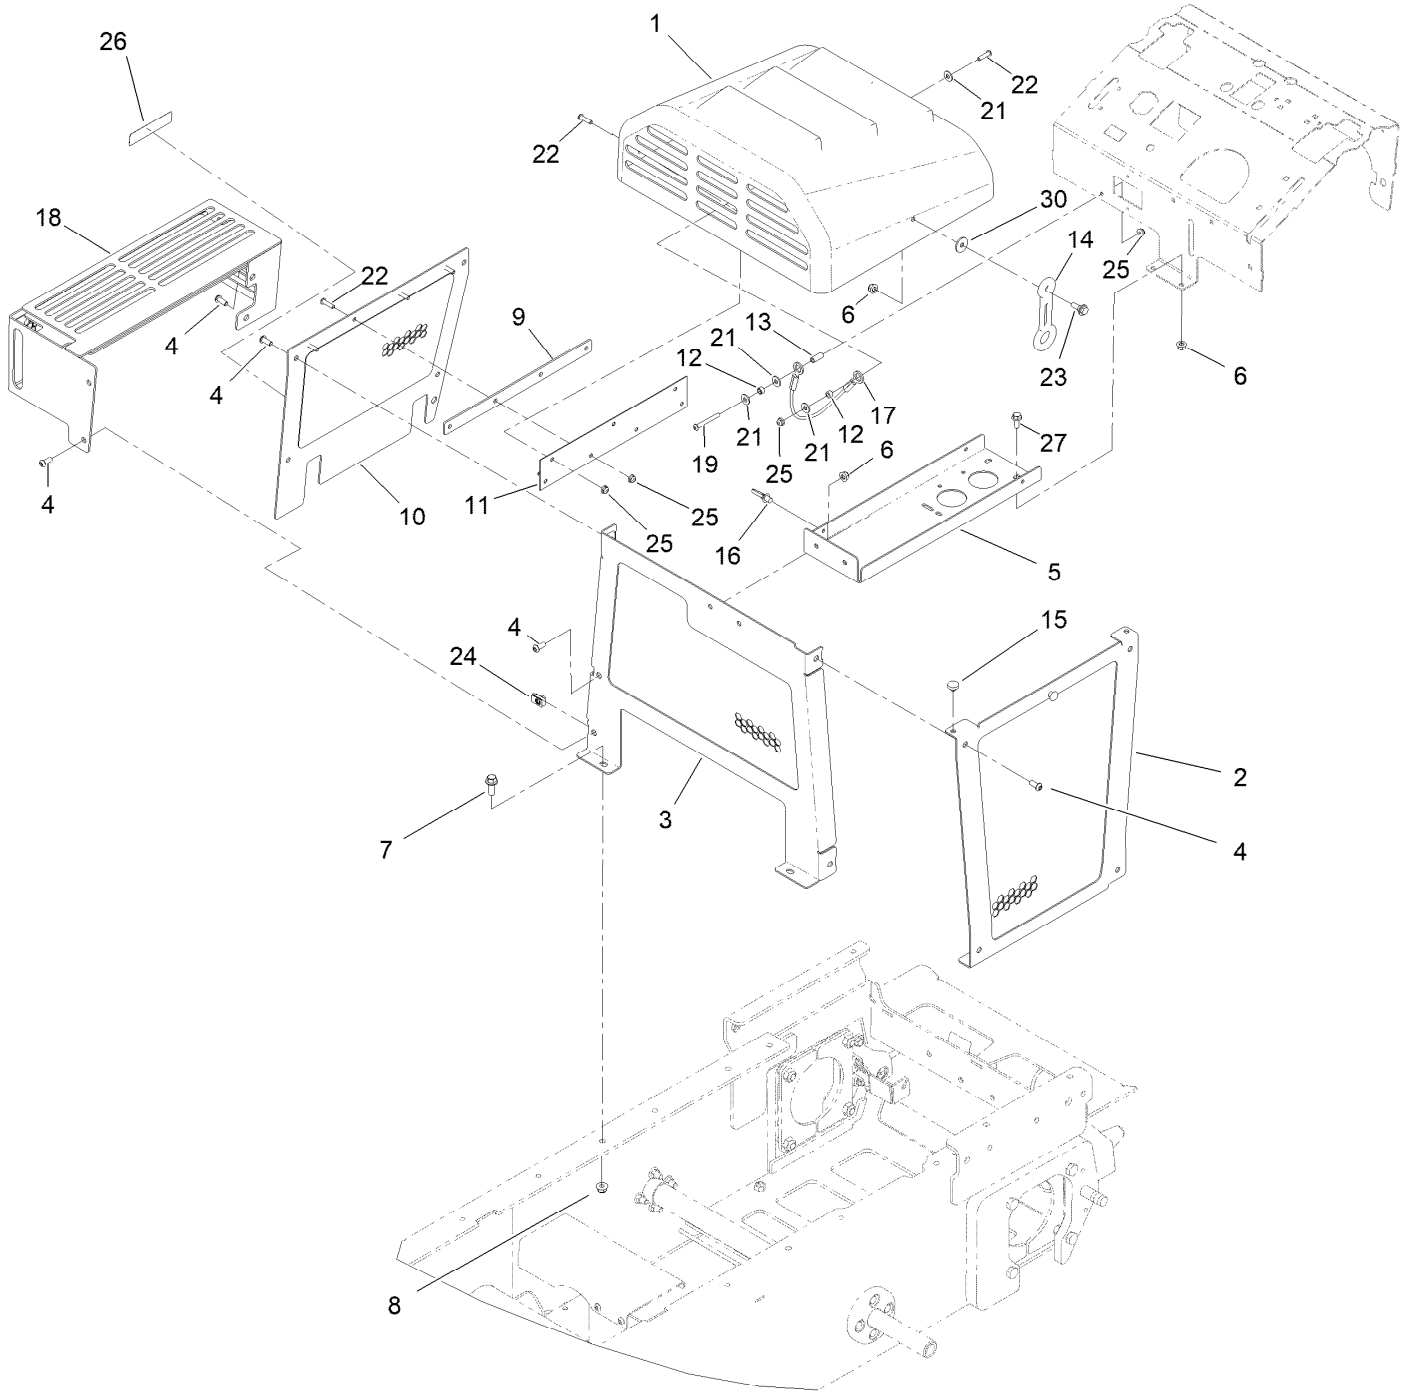

# Hood Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-8990 | 1 | Hood |
| 2 | 132-8886-01 | 1 | Panel-Side, LH |
| 3 | 132-8887-01 | 1 | Panel-Front |
| 4 | 3274-55 | 14 | Screw-HSBH |
| 5 | 132-8876-03 | 1 | Platform-Battery |
| 6 | 104-8300 | 5 | Nut-HF, NI |
| 7 | 3234-42 | 2 | Screw-HHF |
| 8 | 104-8301 | 2 | Nut-HF, NI |
| 9 | 132-9050-03 | 1 | Plate-Spacer, Hood |
| 10 | 132-3905-01 | 1 | Panel-Side, Upper |
| 11 | 132-9021 | 1 | Hinge-Hood |
| 12 | 55-9370 | 2 | Spacer-Blade, Rotor |
| 13 | 87-4710 | 1 | Spacer-Brake, Parking |
| 14 | ST47182 | 1 | Latch-Rubber |
| 15 | 1-513658 | 2 | Bumper |
| 16 | 32180-118 | 2 | Clip-Tie |
| 17 | 130-5726 | 1 | Lanyard |
| 18 | 136-4592-01 | 1 | Guard-Muffler |
| 19 | 120-2011 | 1 | Screw-HSBH |
| 21 | 3256-2 | 4 | Washer-Flat |
| 22 | 3274-65 | 8 | Screw-HSBH |
| 23 | 116-2670 | 1 | Screw-Shoulder |
| 24 | 115-7721 | 6 | Nut-Clip, U |
| 25 | 104-7201 | 9 | Nut-HF, NI |
| 26 | 133-8062 | 1 | Decal-Arrestor, Spark |
| 27 | 3234-47 | 2 | Screw-HHF |
| 30 | 115-7109 | 1 | Washer-Flat |

# Attachments and Accessories

## For 68138 MB TX 2500 Tracked Mud Buggy

| Product Name | Model/Part |
|---|---|
| Light Kit | 137-0558 |
| Decal - HERC | 145-6934 |
| Toro Red 12oz Aerosol Can | 361-10 |
| New Red Paint - Gallon | 361-11 |
| Semi-Gloss Black Spray Paint | 361-9 |
| Spark Arrestor | 98-9099 |

## Notes:

## Notes:

## Notes:

**Count on it.**