Form No. 3327–422

Mid–Size Mower

ProLine Gear 12.5hp with 36” Side Discharge Mower

Model No. 30193—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001
All Rights Reserved

Contents

Description	Page
Engine and Fuel System Assembly	3
Transmission and Drive Pulley Assembly	4
Wheel Drive Assembly	6
Upper Handle Assembly	7
Deck Assembly	8
Front Caster and Blade Brake Assembly	9
Caster and Wheel Assembly No. 1–322154	10
Spindle Assembly	11
Crankcase (Kawasaki FB460V–MS14)	12
Piston/Crankshaft Crankcase (Kawasaki FB460V–MS14)	13
Valve / Camshaft (Kawasaki FB460V–MS14)	14
Lubrication Equipment (Kawasaki FB460V–MS14)	15
Cooling Equipment (Kawasaki FB460V–MS14)	16
Electric Equipment (Kawasaki FB460V–MS14)	17
Control Equipment (Kawasaki FB460V–MS14)	18
Carburetor (Kawasaki FB460V–MS14)	19
Air Filter (Kawasaki FB460V–MS14)	20
Starter (Kawasaki FB460V–MS14)	21
Starter (Kawasaki FB460V–MS14)	22
Muffler (Kawasaki FB460V–MS14)	23


Accessories

Description	Model / Part No.
Recycler Kit	30142
Soft Bagger	30198

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

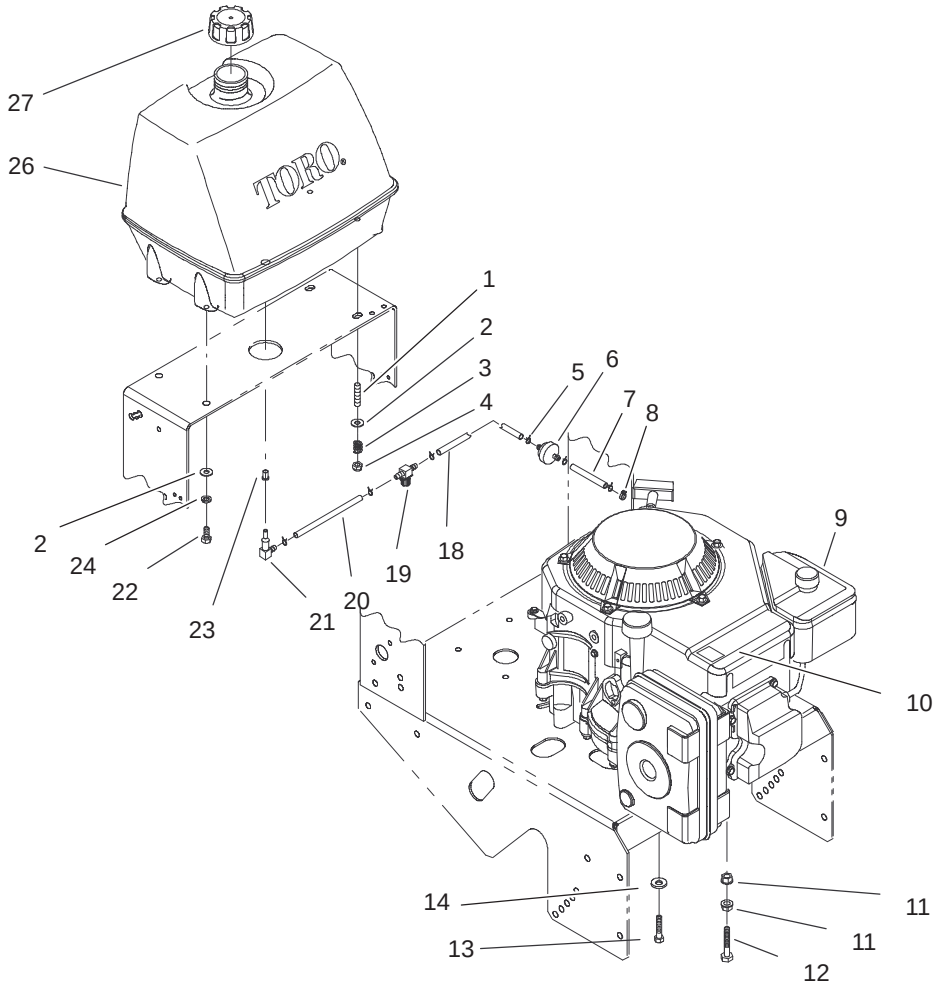


Sheet No.: 2

Engine and Fuel System Assembly

Ref. No.	Part No.	Qty.	Description
1	1–633023	2	Stud
2	3256–23	4	Washer–Flat
3	1–633349	2	Spring–Tank, Fuel
4	3296–47	2	Nut–Lock, NI
5	1–303077	5	Clamp–Line, Fuel
6	1–303197	1	Filter,Fuel
7	1–303022	1	Hose–Line, Fuel
8	1–303308	1	Clamp–Hose
☆9		1	Engine–Kawasaki, (Fb460v–Ms14)
10	63–8440	1	Decal–Surface, Hot
11	3290–357	2	Nut–HHF
12	323–13	1	Screw–HH
13	33114–025	4	Screw–HH
14	1–303334	4	Washer–Spring
18	1–603776	1	Hose–Line, Fuel
19	1–603770	1	Valve–Fuel
20	1–603955	1	Hose–Line, Fuel
21	1–543277	1	Elbow–Tank, Fuel
22	322–3	2	Screw–HH
23	1–513645	1	Bushing–Valve, Fuel
24	1–805005	2	Washer–Lock
26	1–323551	1	Tank–Fuel
27	1–513508	1	Cap–Fuel
*99	1–303287	1	Tie–Plastic
*99	1–303335	1	Tie–Plastic

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately
* Not illustrated

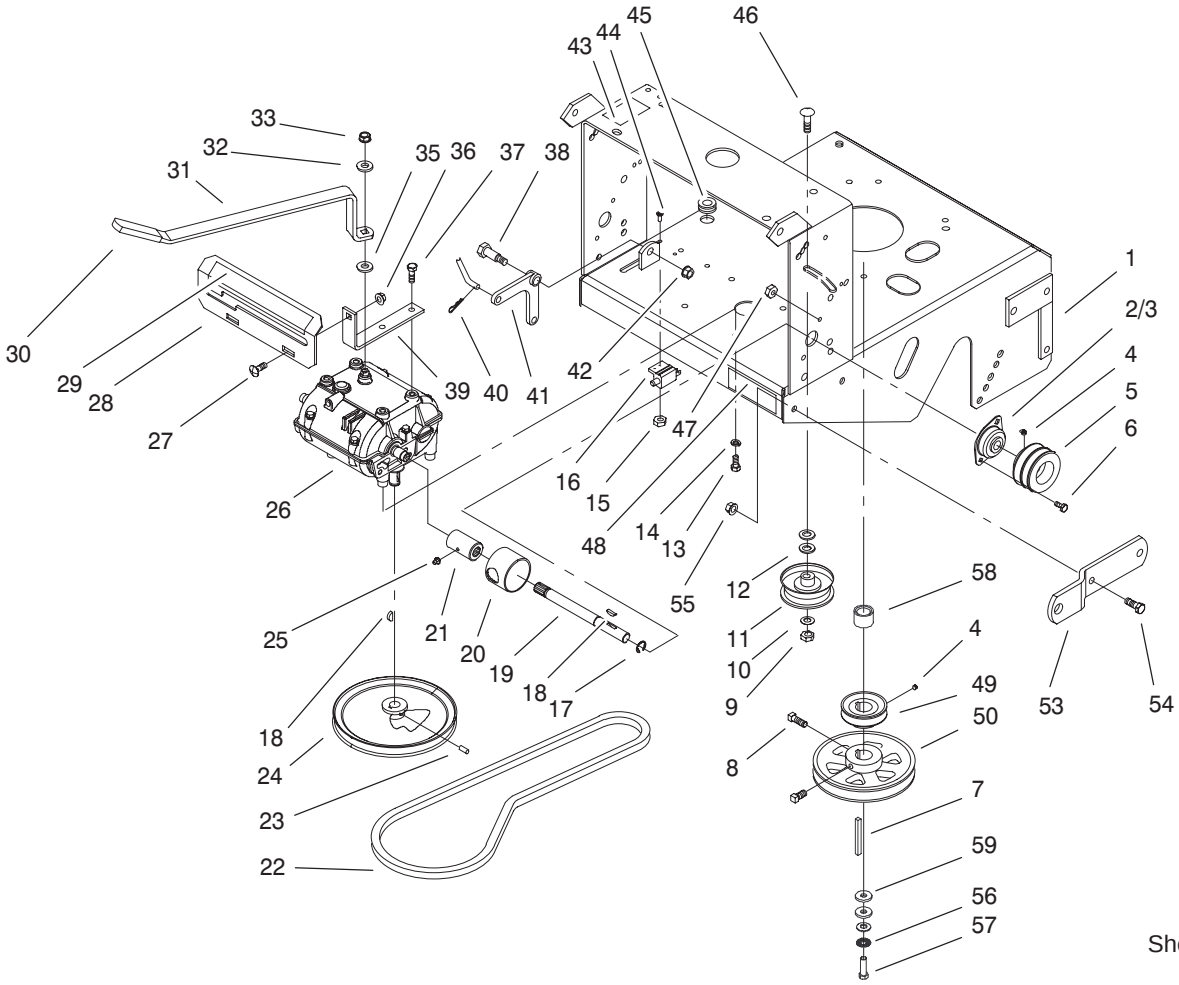


Sheet No.: 3

Transmission and Drive Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	1–402112–01	1	Deck–Rear
2	1–323252	2	Bearing–Shaft
3	1–323254	2	Flange–Output
4	1–803310	3	Screw–Set
5	1–323257–03	2	Sheave–Transmission
6	321–3	4	Screw–HH
7	5–1336	1	Key
8	3242–4	2	Screw–Set, SQH
9	3296–39	1	Nut–Lock, NI
10	3256–24	1	Washer–Flat
11	1–323285	1	Idler–Drive, Transmission
12	3256–5	2	Washer–Flat
13	322–3	4	Screw–HH
14	1–805005	4	Washer–Lock
15	3296–2	2	Nut–Lock
16	1–513152	1	Switch–Closed, Normally
17	32151–62	2	Ring–Retaining
18	3257–5	3	Key–Woodruff
19	1–323502	2	Shaft–Transmission
20	51–4220	2	Guard–Coupler
21	1–323680	2	Coupler
22	1–323630	1	V–Belt
23	3245–41	2	Screw–HSH
24	1–323278	1	Sheave–Transmission

Ref. No.	Part No.	Qty.	Description
25	302–19	2	Fitting–Grease
26	1–323500	1	Transmission
27	3230–1	2	Screw–CARR
28	1–323387–03	1	Plate–Shift
29	98–3256	1	Decal–Speed, Ground
30	1–303020	1	Grip–Lever
31	98–3274–03	1	Lever–Shift
32	98–5975	1	Washer–Belleville
33	3296–6	1	Nut–Lock, NI
35	1–323379	1	Washer–Lever, Shifter
36	32128–20	2	Nut–HF
37	32104–32	4	Screw–HH
38	1–603403	1	Bolt–Shoulder
39	1–323389–03	2	Bracket–Plate, Shift
40	1–806003	1	Pin–Hair
41	1–303186	1	Bellcrank
42	3290–357	1	Nut–HHF
43	95–2814	1	Decal–Shut Off, Fuel
44	3290–500	2	Screw–PPH
45	1–543296	1	Grommet–Line, Fuel
46	3231–6	1	Screw–CARR
47	3296–42	4	Nut–Lock, NI
48	98–0776	1	Decal–Caution
49	1–323256	1	Sheave–Transmission
50	1–643292	1	Sheave,Split Steel
53	1–323318–01	2	Hitch–Sulky

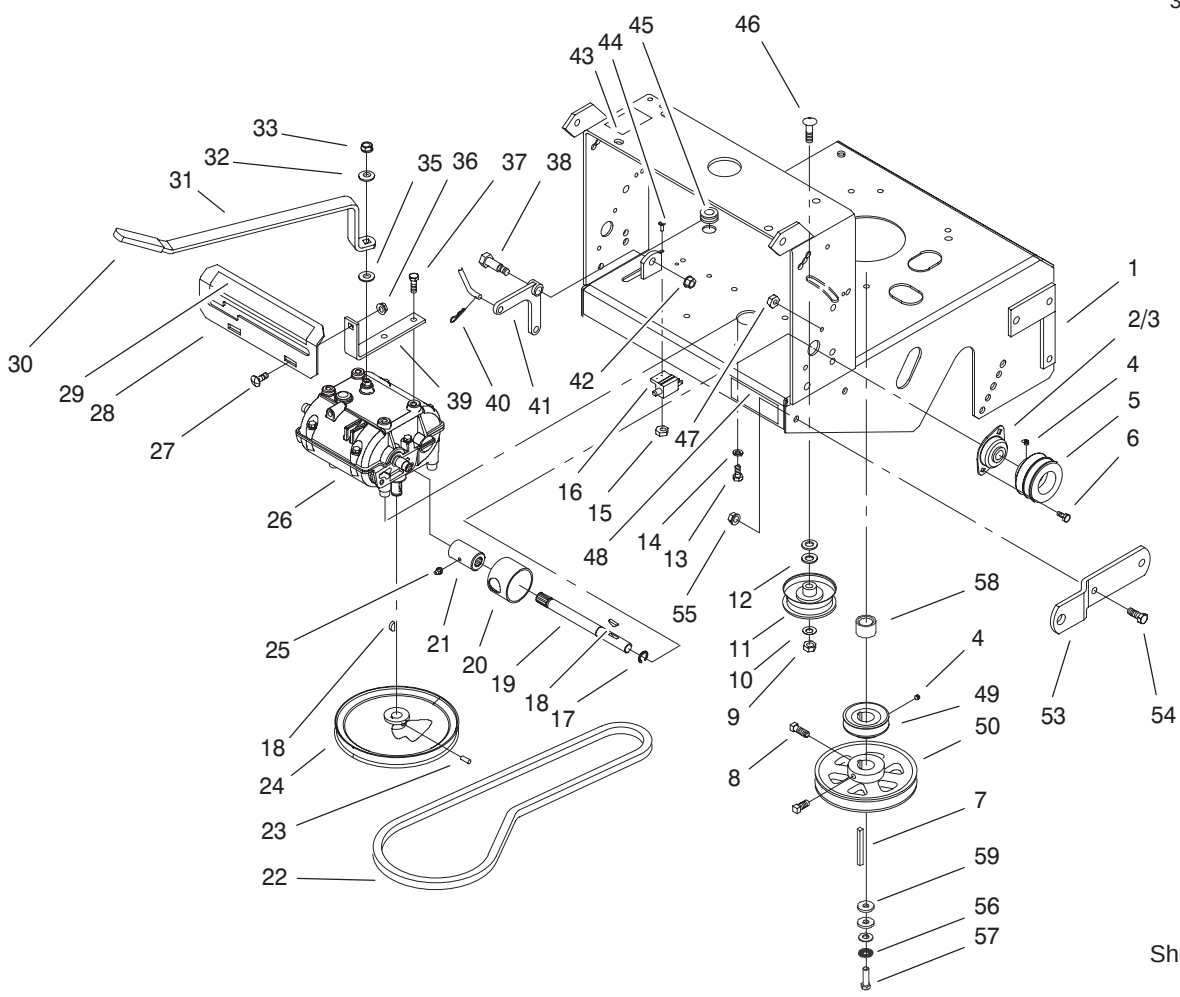


Sheet No.: 3

Transmission and Drive Pulley Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
54	323–6	4	Screw–HH
55	3290–357	4	Nut–HHF
56	98–5975	1	Washer–Belleville
57	33115–035	1	Screw–HH
58	1–633453	1	Spacer–Clutch
59	1–373034	2	Washer–Swivel

Ref. No.	Part No.	Qty.	Description

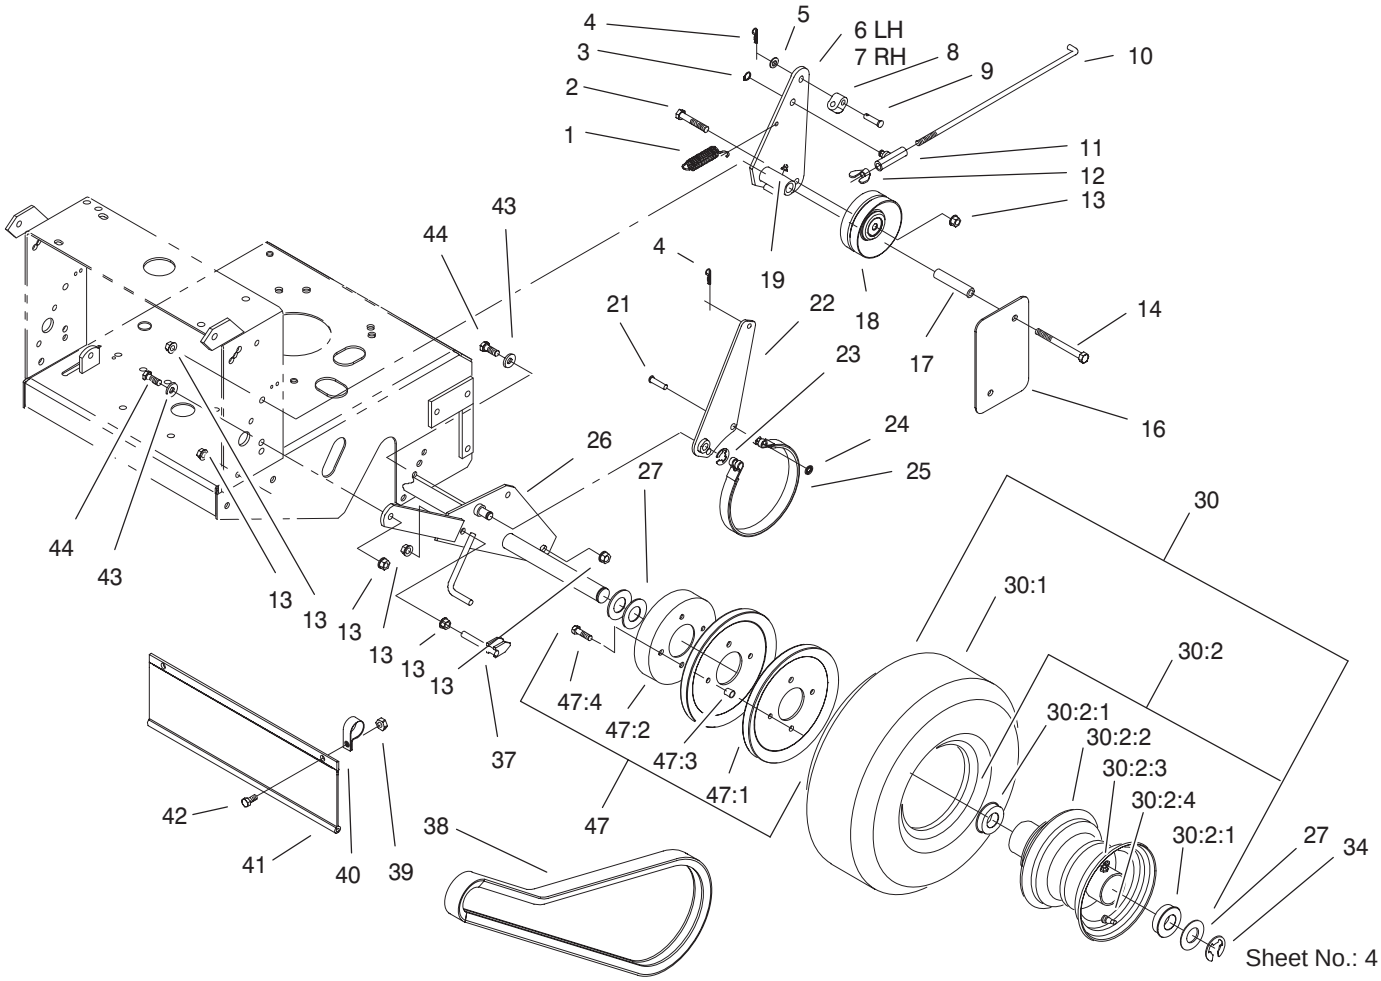


Wheel Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	98–3273	2	Spring–Extension
2	323–10	2	Screw–HH
3	32151–47	2	Ring–Retaining
4	1–806003	4	Pin–Hair
5	3256–23	2	Washer–Flat
6	104–1321–03	1	RH Idler Arm ASM
7	104–1322–03	1	LH Idler Arm ASM
8	74–0521	2	Fitting–Rod
9	283–6	2	Pin–Clevis
10	1–323296	2	Rod–Brake
11	1–322125	2	Swivel–Brake
12	1–513959	2	Wingnut–Nylock
13	3290–357	14	Nut–HHF
14	323–16	4	Screw–HH
16	98–5131–01	2	Shield–Wheel, Drive
17	1–323694	4	Spacer–Shield
18	1–323634	2	Idler–Drive, Wheel
19	302–19	2	Fitting–Grease
21	1–323307	4	Pin–Clevis
22	1–322209–03	2	Arm–Brake
23	32120–47	2	Ring–Retaining, Ext
24	1–803051	4	Nut–Push
25	1–323595	2	Band–Brake
26	1–322212–03	1	Axle ASM
27	1–523157	6	Washer–Spacer
27	1–543436	8	Washer–Spacer

Ref. No.	Part No.	Qty.	Description
☆30		2	Wheel & Tire ASM
30:1	1–323720	1	Tire–Turfmaster
30:2	1–323328	1	Wheel & Hub ASM W/ Bearings
30:2:1	1–323329	2	Bearing–Flanged
☆30:2:2		1	Rim ASM
☆30:2:3		1	Fitting–Grease
☆30:2:4		1	Valve Stem & Cap
34	1–808519	2	Ring–Snap
37	1–412358	2	Scraper
38	1–323631	2	V–Belt, Wheel Drive
39	3296–29	2	Nut–Lock, NI
40	2412–104	2	R–Clamp
41	98–3259	1	Shield–Trailing
42	322–3	2	Screw–HH
43	98–5975	4	Washer–Belleville
44	323–6	4	Screw–HH
☆47		2	Drum & Sheave ASM
47:1	1–323253	2	Sheave–Wheel, Drive
47:2	1–323261	1	Drum–Brake
47:3	1–323260	4	Spacer–Sheave, Wheel
47:4	322–6	4	Screw–HH

☆ Not serviced separately

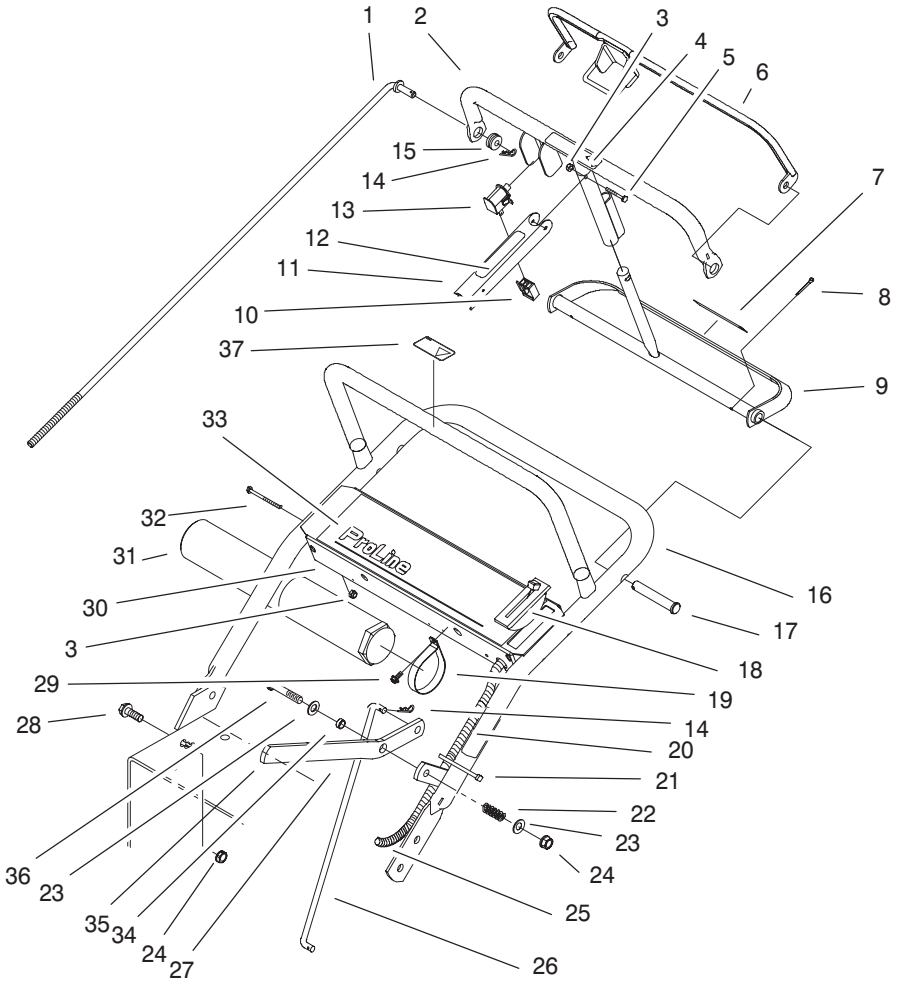


Sheet No.: 5

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98–3282	2	Rod–Control
2	95–5522–03	1	Control Bar ASM
3	3296–2	5	Nut–Lock
4	82–2290	1	Decal–Bar, Control
5	32105–1	1	Screw–SHH
6	98–3289–03	1	Bail ASM
7	82–2280	1	Decal–Handle, Reverse
8	3272–11	2	Pin–Cotter
9	99–8501–03	1	Control–Pivot
10	218–595	1	Connector–Body
11	98–3261–03	1	Lever–Brake, Parking
12	98–3266	1	Decal–Brake, Parking
13	740275	1	Switch–Seat
14	1–806003	3	Pin–Hair
15	237–141	2	Grommet–Rubber
16	98–3267–01	1	Upper Handle ASM
17	283–55	2	Pin–Clevis
18	1–323637	1	Cable–Throttle
19	2412–120	2	R–Clamp
20	95–5537	1	Decal–Engage, Deck
21	1–303335	1	Tie–Plastic
22	1–303160	1	Spring–Compression
23	3256–24	2	Washer–Flat
24	3296–39	5	Nut–Lock, NI
25	98–3257	1	Harness–Wire

Ref. No.	Part No.	Qty.	Description
26	98–3279	1	Linkage–Drive, Blade
27	98–3287–03	1	Lever–Engagement, Blade
28	323–6	4	Screw–HH
29	32104–76	2	Screw
30	1–304259	1	Panel–Control
31	74–0720	1	Tube–Manual
32	32105–14	4	Screw
33	95–5437	1	Decal–Panel, Control
34	99–8509	1	Spacer
35	1–303020	1	Grip–Lever
36	323–10	1	Screw–HH
37	98–4387	1	Decal–Protection, Ear

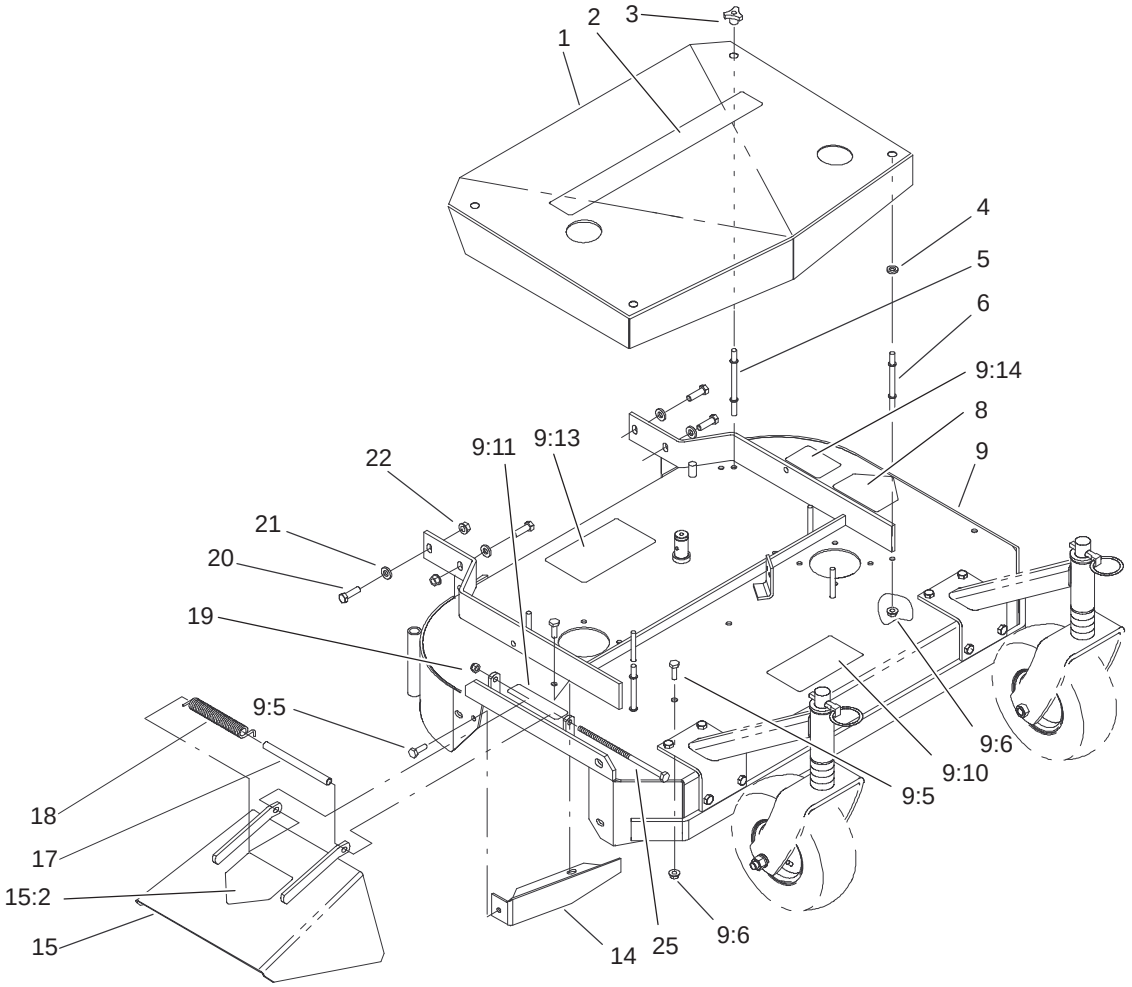


Sheet No.: 6

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	1–304258	1	Shield–Belt
2	95–5436	1	Decal–Proline
3	1–323385	4	Knob–3 Prong
4	1–323417	4	Washer
5	1–303536	2	Stud–Shield, Belt (Long)
6	1–303537	2	Stud–Shield, Belt (Short)
8	1–403005	1	Decal–Danger
9	105–4680	1	Deck ASM
9:5	322–2	8	Screw–HH
9:6	32128–20	8	Nut–HF
9:10	66–1340	1	Decal–Danger
9:11	67–5360	1	Decal–Danger
*9:12	94–2579	2	Decal–Toro
9:13	98–3296	1	Decal–Routing, Belt
9:14	98–5130	1	Decal–Torque
10	32128–20	12	Nut–HF
14	1–302189–01	1	Baffle
15	1–304256	1	Chute–Discharge
15:2	54–9220	1	Decal–Danger
17	98–3281	1	Spacer–Spring
18	98–3280	1	Spring–Deflector
19	3296–29	1	Nut–Lock, NI
20	323–8	6	Screw–HH
21	98–5975	6	Washer–Belleville

Ref. No.	Part No.	Qty.	Description
22	3290–357	6	Nut–HHF
25	322–50	1	Screw–Cap

* Not illustrated

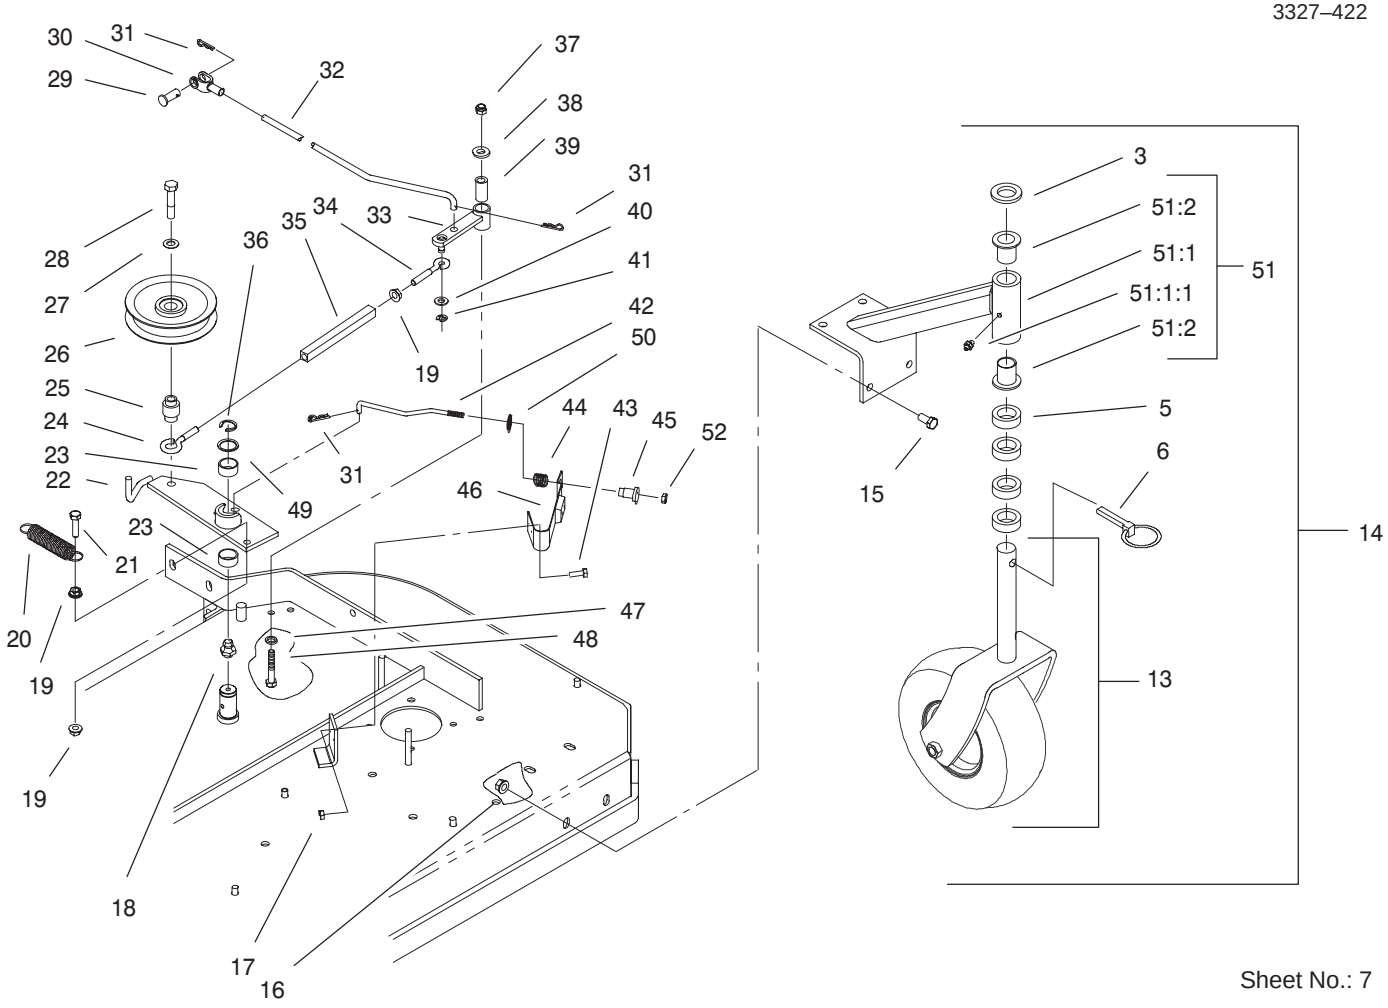


Sheet No.: 7

Front Caster and Blade Brake Assembly

Ref. No.	Part No.	Qty.	Description
3	1–513338	2	Washer–Flat
5	1–303314	8	Spacer–Caster
6	1–809020	2	Pin
13	1–322154	2	Caster/Wheel ASM
14	1–322153	2	Caster/Mount ASM
15	323–4	8	Screw–HH
16	3290–357	8	Nut–HHF
17	3296–42	2	Nut–Lock, NI
18	302–19	1	Fitting–Grease
19	32128–20	3	Nut–HF
20	1–323071	1	Spring–Extension
21	322–6	1	Screw–HH
22	1–324408	1	Idler Arm/Bushings ASM
23	1–323729	2	Sleeve–Bearing
24	1–303348	1	Eyebolt–LH Thread
25	1–303434	1	Bushing–Engagement
26	1–603843	1	Pulley–Idler
27	98–5975	1	Washer–Belleville
28	323–10	1	Screw–HH
29	1–808280	1	Pin–Clevis
30	1–303105	1	Yoke–Adjustable
31	1–806003	3	Pin–Hair
32	1–323303	1	Linkage–Arm
33	1–322235	1	Arm
34	1–303238	1	Eyebolt–RH Thread

Ref. No.	Part No.	Qty.	Description
35	1–303236	1	Body–Turnbuckle
36	32151–103	1	Ring–Snap
37	3296–29	1	Nut–Lock, NI
38	3256–3	1	Washer–Flat
39	1–403179	1	Tube–Pivot
40	3256–23	1	Washer–Flat
41	32120–35	1	E–Ring
42	1–323715	1	Rod–Brake
43	321–4	2	Screw–HH
44	1–323747	1	Spring–Compression
45	1–323746	1	Spacer–Flanged
46	1–324372	1	Pad/Spring ASM
47	1–303334	1	Washer–Spring
48	322–10	1	Screw–HH
49	1–303352	1	Washer–Spindle
50	1–323748	1	Ring–Push On
51	1–302203	2	Support ASM W/Bushings
51:1	1–302194–01	1	Support–Caster
51:1:1	302–52	1	Fitting–Grease
51:2	1–303514	2	Bearing–Flanged
52	3296–56	1	Nut–Lock, NI

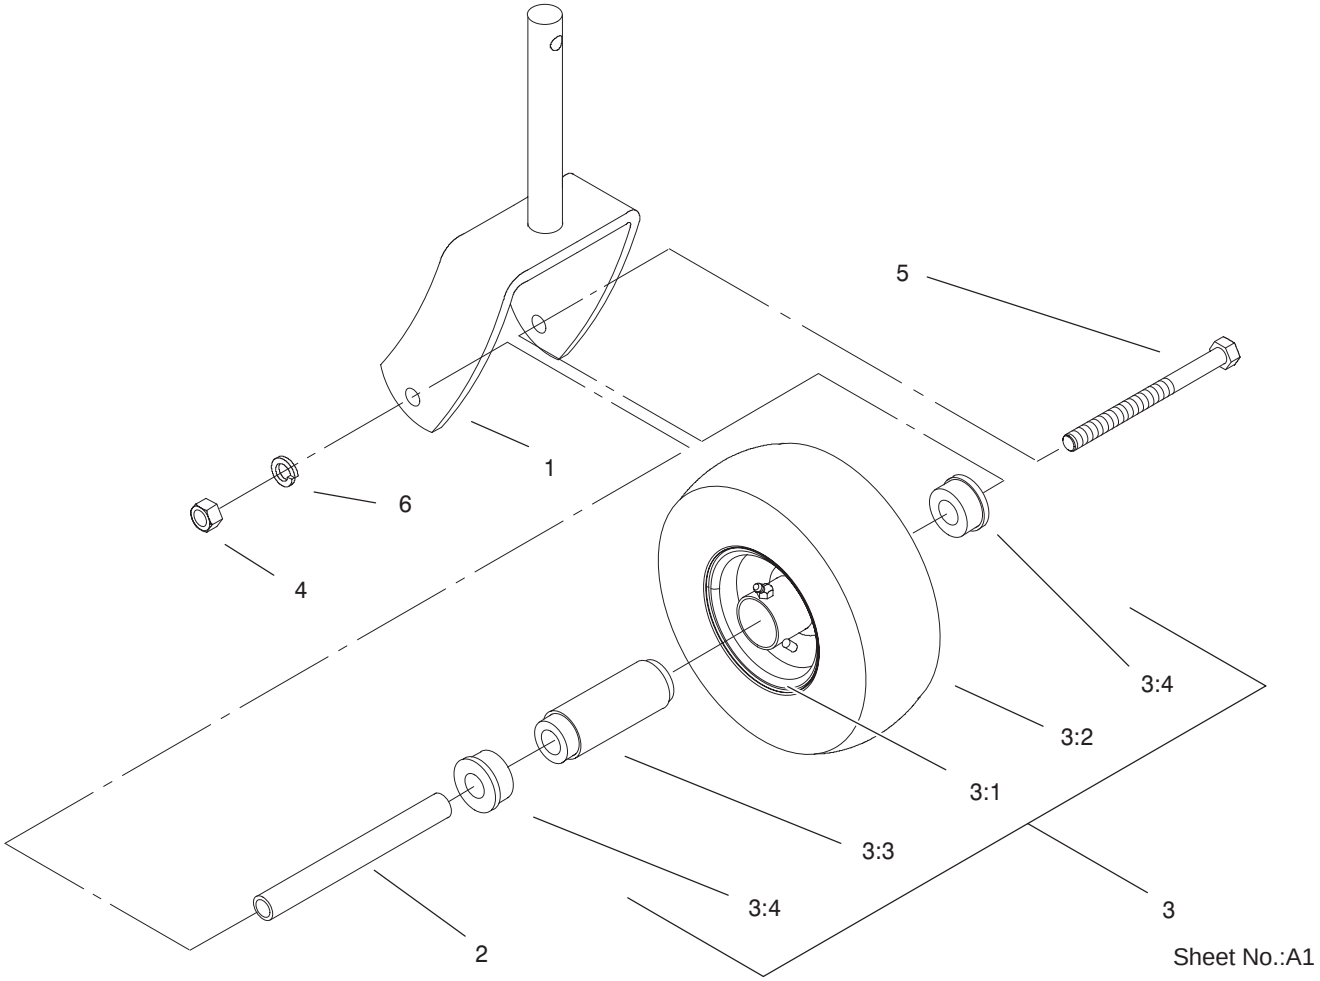


Caster and Wheel Assembly No. 1–322154

Ref. No.	Part No.	Qty.	Description
1	1–322145–01	1	Fork
2	1–513547	1	Spacer
3	1–513648	1	Wheel & Tire ASM
☆3:1		1	Rim
☆3:2		1	Tire
3:3	1–513809	1	Bearing
3:4	1–513810	2	Bushing
4	3217–9	1	Nut–HH
5	325–20	1	Screw–HH
6	3253–7	1	Washer–Lock

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

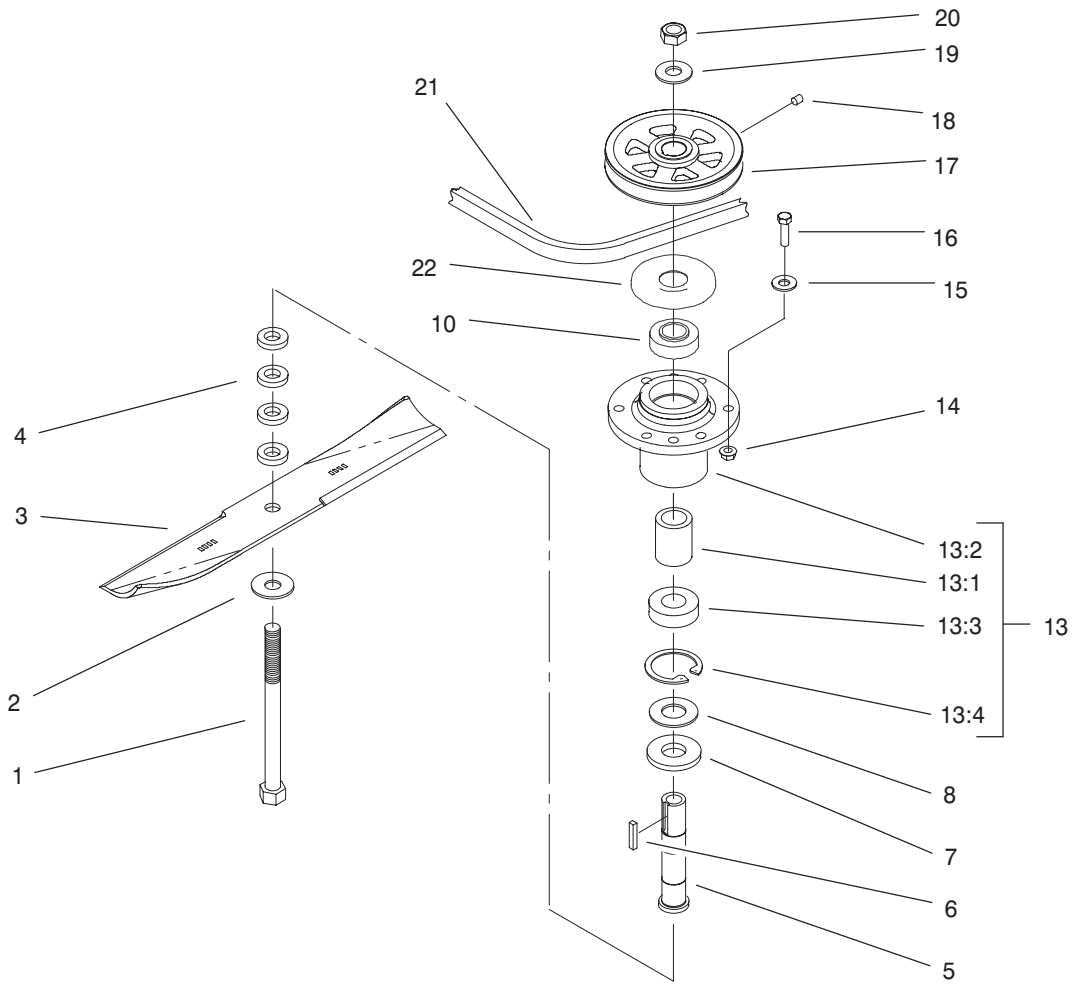


Sheet No.: 8

Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	1–800861	2	Screw–Cap, HH
2	1–513208	2	Washer–Spring
3	1–633482	2	Blade
3	1–633485	2	Blade–Lo Lift
4	1–323539	8	Spacer–Drive, Blade
5	1–323529	2	Tube–Spindle, Short
6	1–807267	2	Key
7	1–633573	2	Guard–Bearing, Bottom
8	1–323533	2	Spacer–Pulley/Bearing
10	1–513016	4	Bearing
13	1–634619	2	Cutter Housing ASM
13:1	1–323528	1	Spacer–Bearing
13:2	1–323532	1	Housing–Spindle
13:3	1–513016	2	Bearing
13:4	32120–8	1	Ring–Snap
14	32128–20	8	Nut–HF
15	1–303334	8	Washer–Spring
16	322–6	8	Screw–HH
17	1–403183	2	Sheave
18	1–803310	2	Screw–Set
19	1–323339	2	Washer–Retainer, Sheave
20	3219–6	2	Nut–Hex
21	1–323737	1	Belt–Blade, Drive
22	103–1330	2	Guard–Bearing, Top

Ref. No.	Part No.	Qty.	Description

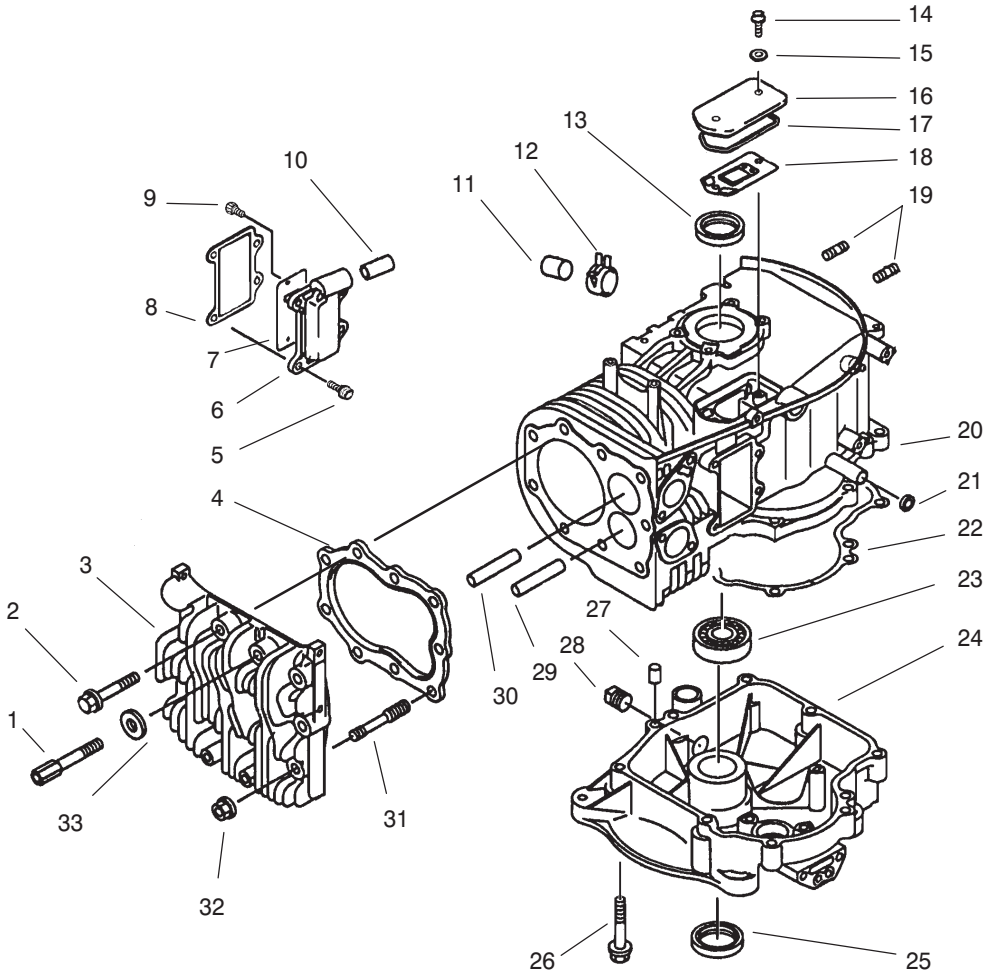


Sheet No.: 201

Crankcase (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	92002–2258	2	Bolt
2	130g1055	4	Bolt–Flange
3	11001–2151	1	Head–Cylinder
4	11004–2091	1	Gasket–Head
5	130g0616	4	Bolt–Flange
6	49108–2011	1	Cover–Valve Chamber
7	14025–2143	1	Cover
8	11060–2375	1	Gasket
9	92009–2307	2	Screw
10	92059–2142	1	Tube
11	92066–2096	1	Plug
12	92170–2088	1	Clamp
13	92049–2096	1	Seal–Oil
14	92002–2087	2	Bolt
15	11060–2323	2	Gasket
16	14025–2040	1	Cover–Breather
17	11009–2339	1	Gasket–Cover
18	14069–2062	1	Breather
19	92004–2083	4	Stud–6 X 14
20	49120–6108	1	Crankcase–Complete
21	92049–2097	1	Seal–Oil
22	11060–2015	1	Gasket–Crankcase
23	601a6207	1	Bearing–Ball
24	49015–6176	1	Cover–Crankcase
25	92049–2227	1	Seal–Oil
26	130g0845	8	Bolt–Flange

Ref. No.	Part No.	Qty.	Description
27	92043–1263	2	Pin
28	92066–2097	1	Plug
29	49002–2071	1	Guide–Valve Exhaust
30	49002–2070	1	Guide–Valve Intake
31	92004–2082	3	Stud
32	92015–2115	3	Nut
33	410b1000	2	Washer–Plain

Obtain Parts from Kawasaki

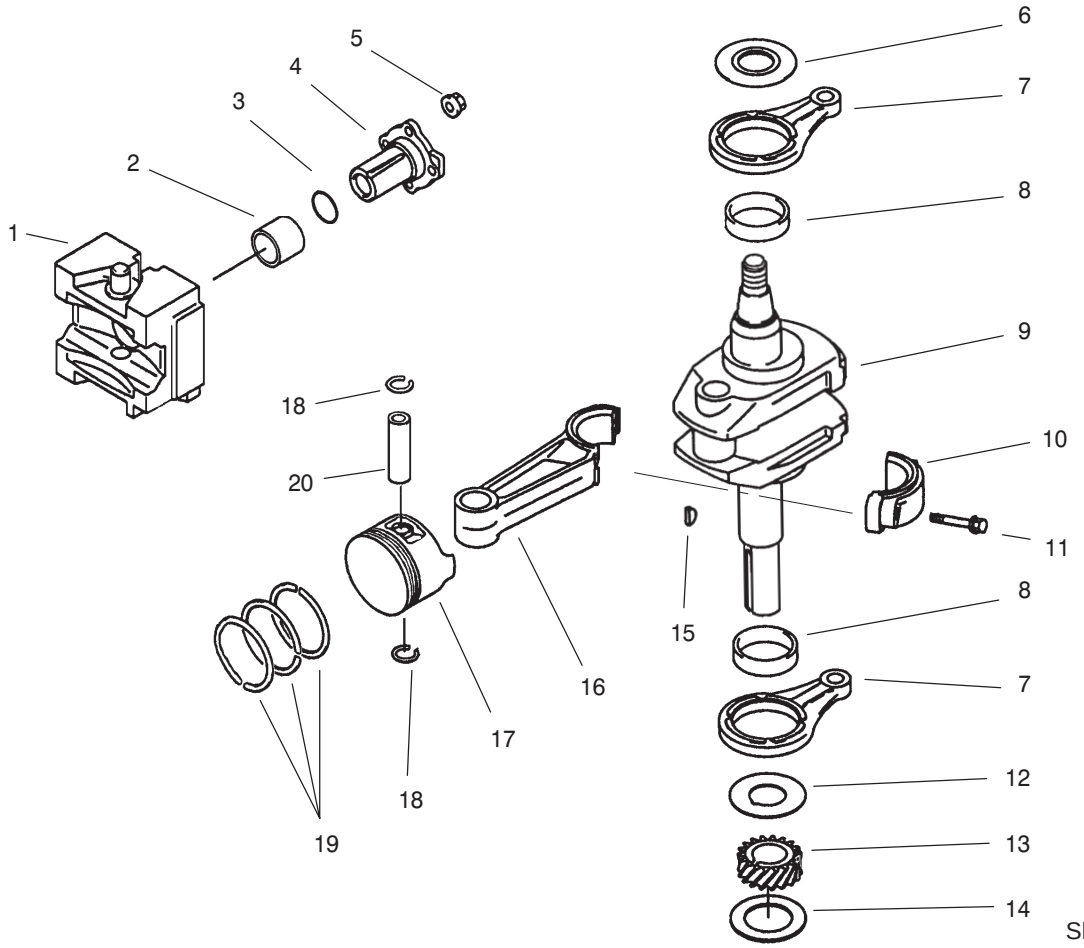


Sheet No.: 202

Piston/Crankshaft Crankcase (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	13042–6006	1	Weight Incl #2
2	92141–2097	1	Bearing–Plane
3	92055–2072	1	O–Ring
4	13107–2253	1	Shaft
5	92015–1193	4	Nut
6	92026–2164	1	Spacer
7	46102–6007	2	Rod Incl #8
8	92141–2108	2	Bearing–Plane
9	49119–2177	1	Crankshaft ASM
11	92150–2193	2	Bolt
12	92026–2156	1	Spacer
13	59056–2105	1	Gear–Helical
14	92025–2145	A/R	Shim T=1.18
14	92025–2146	A/R	Shim T=1.25
14	92025–2147	A/R	Shim T=1.32
14	92025–2148	A/R	Shim T=1.39
14	92025–2149	A/R	Shim T=1.46
14	92025–2150	A/R	Shim T=1.53
14	92025–2151	A/R	Shim T=1.60
14	92025–2152	A/R	Shim T–1.67
14	92025–2153	A/R	Shim T=1.74
14	92180–2015	A/R	Shim T=1.11
14	92180–2016	A/R	Shim T=1.81
15	92038–2094	1	Key
16	13251–6005	1	Rod ASM Incl #10 11

Ref. No.	Part No.	Qty.	Description
16	13251–6007	A/R	Rod ASM Incl #10 11 0.50
17	13001–2096	1	Piston
17	13029–2084	A/R	Piston 0.25
17	13029–2085	A/R	Piston 0.50
18	92033–2176	2	Ring–Snap
19	13008–6009	1	Set–Ring Piston
19	13008–6010	A/R	Set–Ring Piston 0.25
19	13008–6011	A/R	Set–Ring Piston 0.50
20	13002–2066	1	Pin–Piston

Obtain Parts from Kawasaki

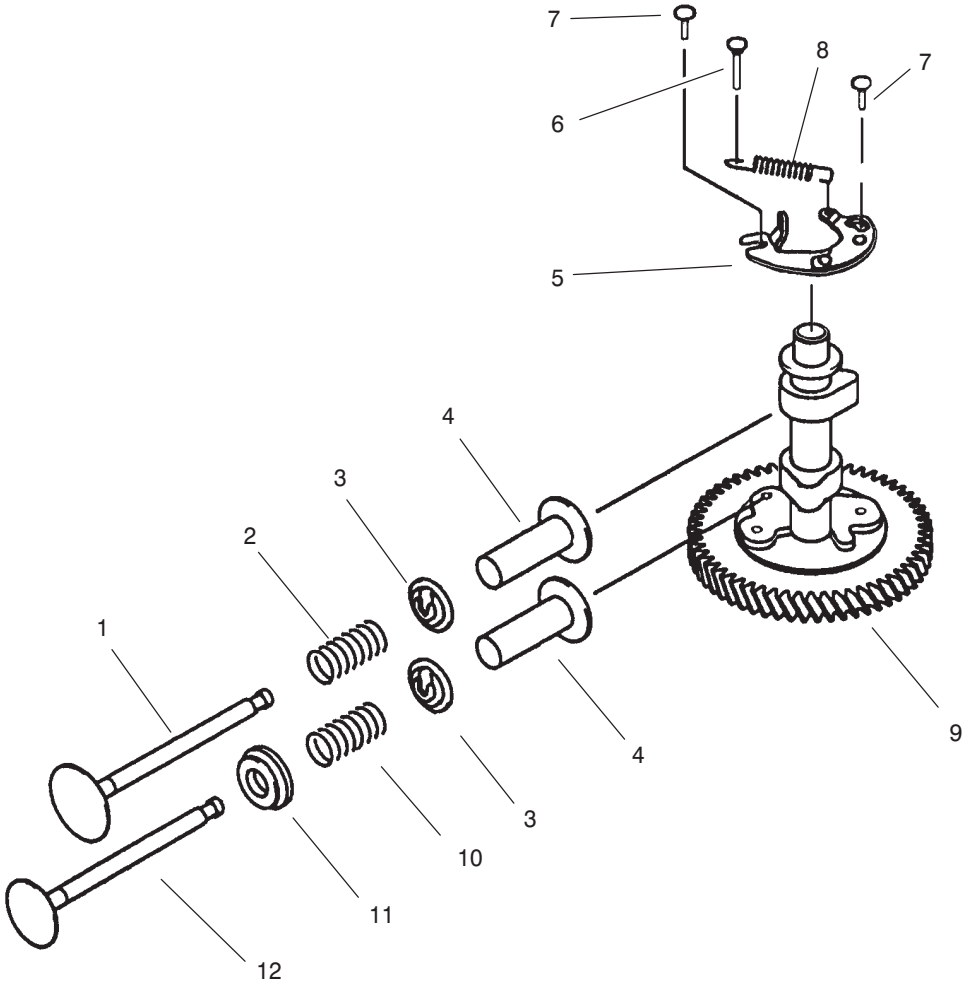


Sheet No.: 203

Valve / Camshaft (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	12004–2076	1	Valve–Intake
2	49078–2075	1	Spring–Valve
3	39108–2054	2	Retainer–Spring
4	12032–2058	2	Tappet
5	21118–2068	1	Decompressor
6	92043–2167	1	Pin
7	92043–2113	2	Pin
8	92144–2171	1	Spring
9	49118–2134	1	Camshaft Incl # 5–8
10	49078–2074	1	Spring–Valve
11	12039–2052	1	Rotator
12	12005–2066	1	Valve–Exhaust

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

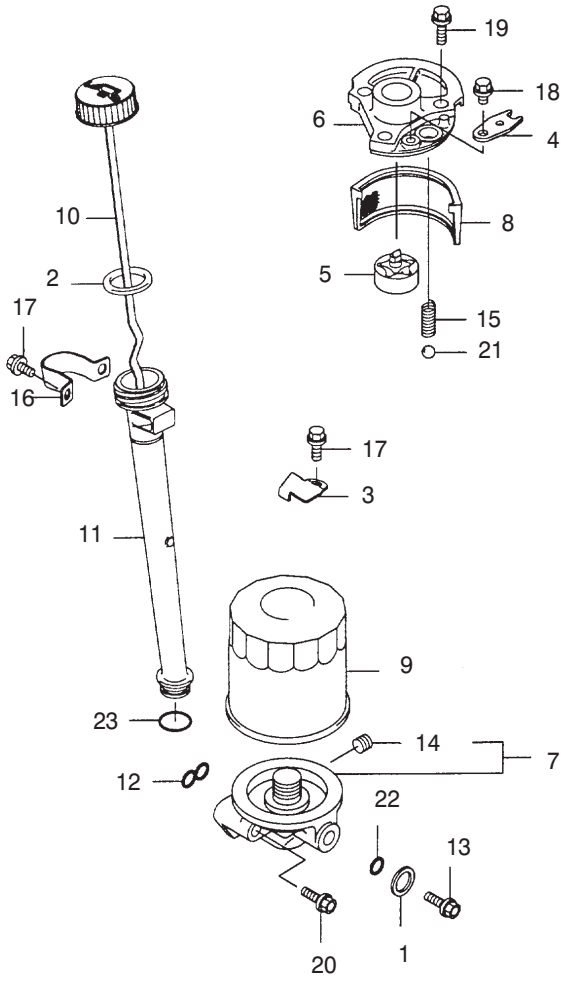


Sheet No.: 204

Lubrication Equipment (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	11009–2175	1	Gasket
2	11009–2346	1	Gasket–Oil Gauge
3	13169–2359	1	Plate
4	13270–2054	1	Plate
5	16082–2057	1	Pump Assy–Oil
6	16142–6001	1	Cover–Pump
7	23062–6001	1	Bracket–Comp
8	49065–2056	1	Filter–Oil
9	49065–2071	1	Filter–Oil
10	52005–2058	1	Gauge–Oil
11	59231–2059	1	Filler
12	92055–2063	1	Ring–O
13	92066–2093	1	Plug
14	92066–2211	1	Plug
15	92081–2216	1	Spring
16	92170–2014–9H	1	Clamp
17	130B0508	3	Bolt–Flanged
18	130B610	1	Bolt–Flanged
19	130G0825	3	Bolt–Flanged
20	130G0845	2	Bolt–Flanged
21	600A1000	1	Ball–Steel
22	670D1507	1	O Ring
23	670D2016	1	O Ring

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

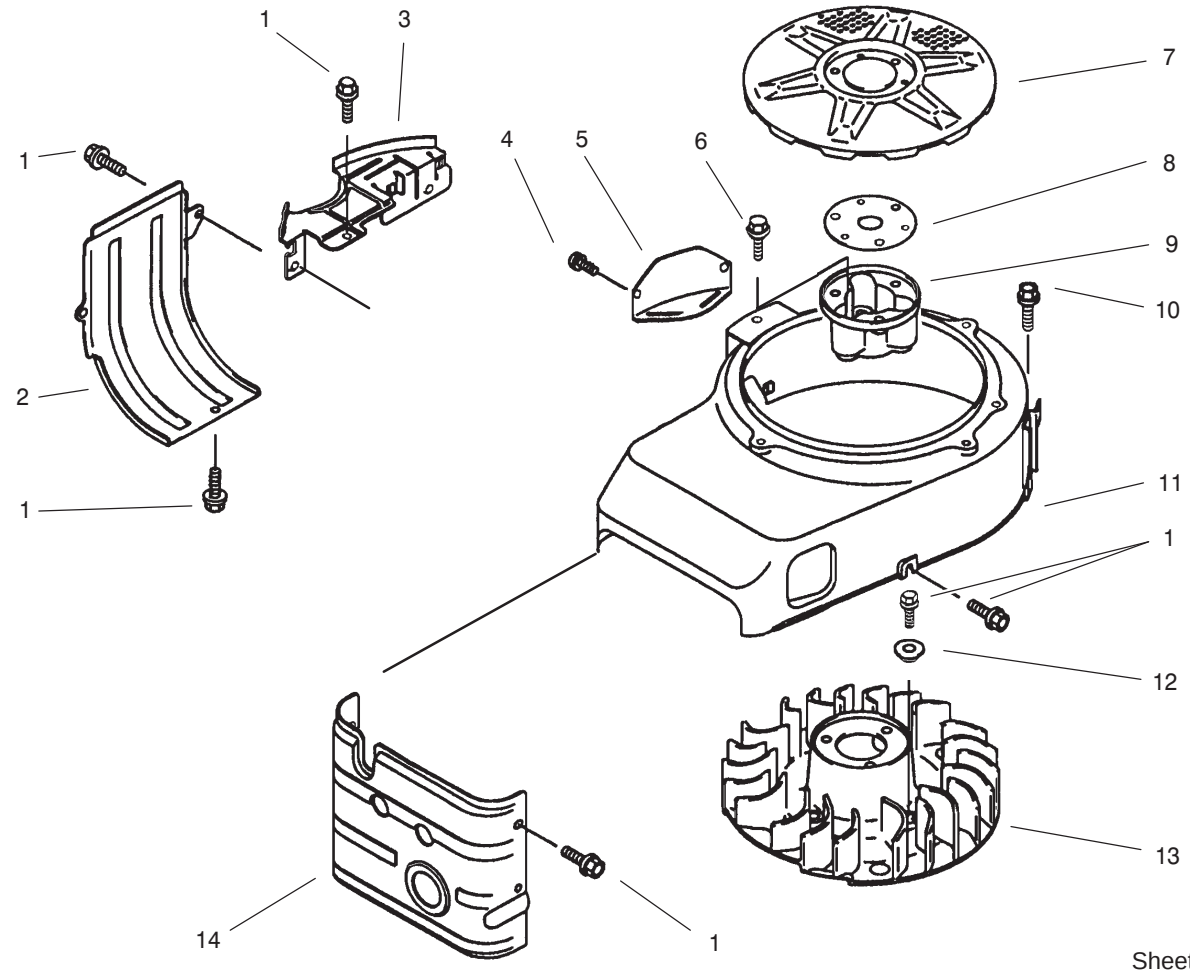


Sheet No.: 205

Cooling Equipment (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	130g0610	9	Bolt–Flange
2	49089–2199–9H	1	Shroud–Engine
3	59066–2295–9H	1	Housing–Fan
4	234b0408	2	Screw
5	14024–2038–9H	1	Cover
6	130b0820	3	Bolt–Flange
7	14037–2104–9H	1	Screen
8	92025–2003	A/R	Shim T–1.20
9	11044–2084	1	Bracket
10	130go614	6	Bolt–Flange
11	59066–2677–9H	1	Housing–Fan
12	92143–2179	4	Collar
13	59041–2081	1	Fan
14	49089–2181–9H	1	Shroud–Engine

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

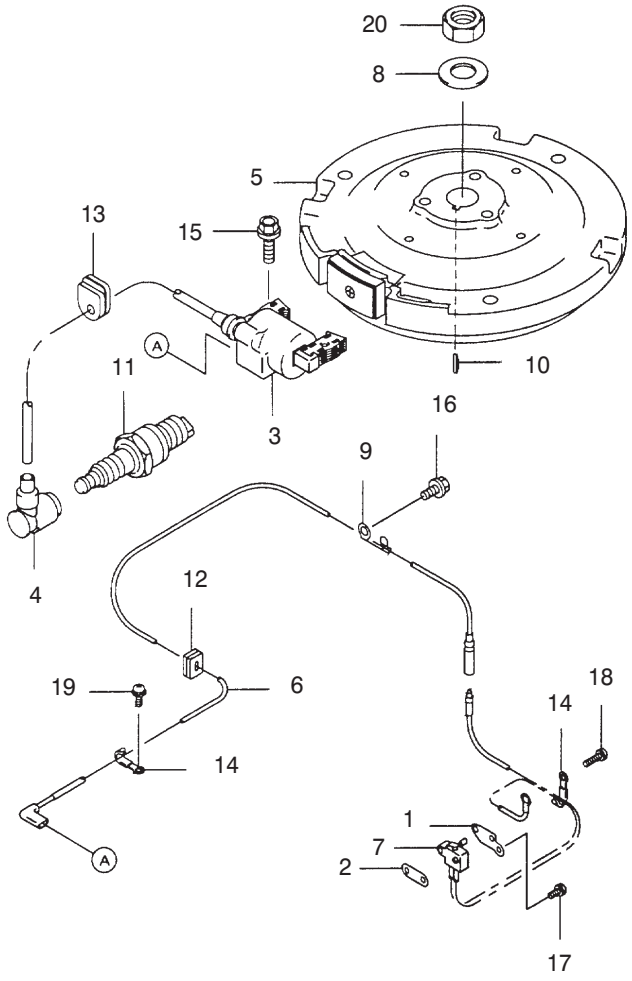


Sheet No.: 206

Electric Equipment (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	13183–2373	1	Plate
2	13183–2374	1	Plate
3	21121–2086	1	Coil–Ignition
4	21130–2060	1	Cap–Spark Plug
5	21194–2324	1	Flywheel–Comp
6	26011–2326	1	Wire–Lead L530
7	27010–2167	1	Switch
8	92022–2178	1	Washer
9	92037–2011	1	Clamp
10	92038–2094	1	Key
11	92070–2105	1	Plug–Spark BMR4A (NGK)
12	92071–2099	1	Grommet
13	92071–2100	1	Grommet
14	92170–2029	2	Clamp
15	130B0520	2	Bolt–Flanged
16	130B0610	1	Bolt–Flanged
17	223B0410	1	Screw–Pan Ws Cros
18	233B0416	1	Screw–Pan Ws Cros
19	234B0408	1	Screw–Pan Wsp
20	314G1800	1	Nut–Hex Fine

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

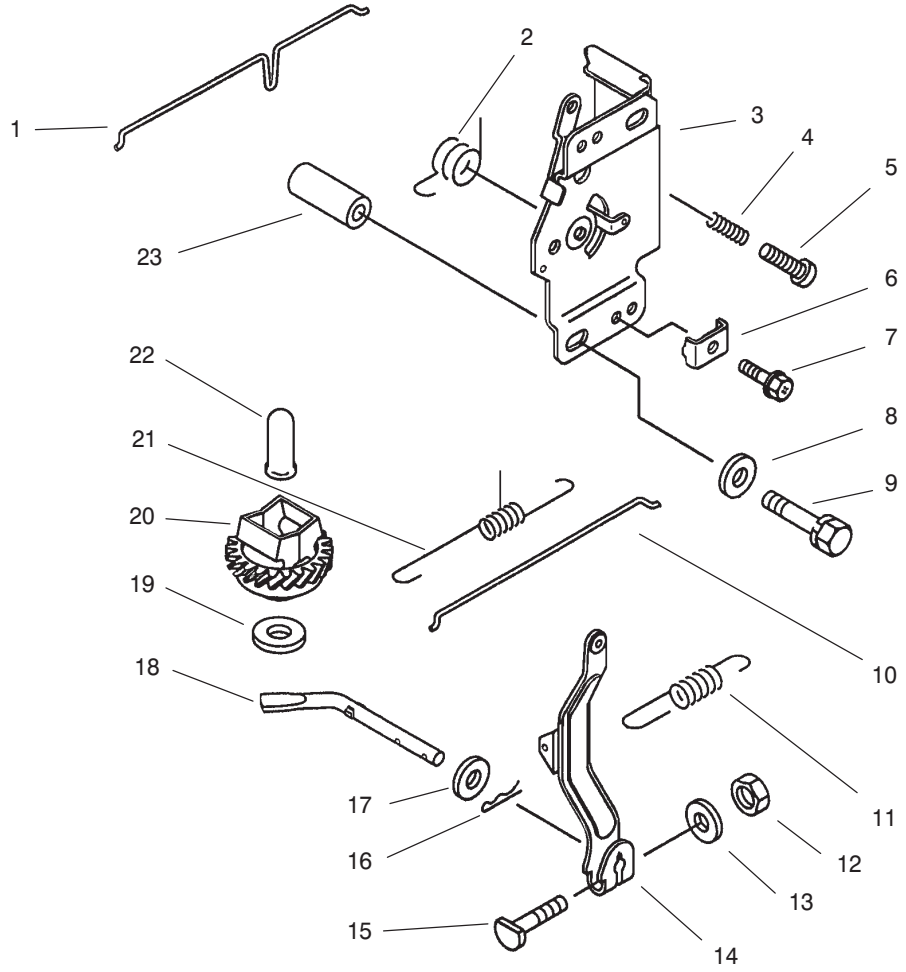


Sheet No.: 207

Control Equipment (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	16169–2126	1	Link–Choke
2	92081–2316	1	Spring
3	49113–2090	1	Panel Incl #2 4–7
4	92144–2266	1	Spring
5	214b0416	1	Screw
6	92037–2020	1	Clamp
7	92002–2188	1	Bolt
8	92200–2070	2	Washer
9	180b0650	2	Bolt
10	16171–2083	1	Link
11	92144–2008	1	Spring–Governor
12	311b0600	1	Nut–HH
13	411b0600	1	Washer
14	21187–2052	1	Arm ASM
15	92002–2269	1	Bolt
16	554a0600	1	Pin–Snap
17	92200–2029	1	Washer
18	39003–2072	1	Arm–Pivot
19	92200–2036	1	Washer
20	49110–2084	1	Governor ASM
21	92081–2213	1	Spring
22	42036–2060	1	Sleeve
23	92027–2071	2	Collar

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

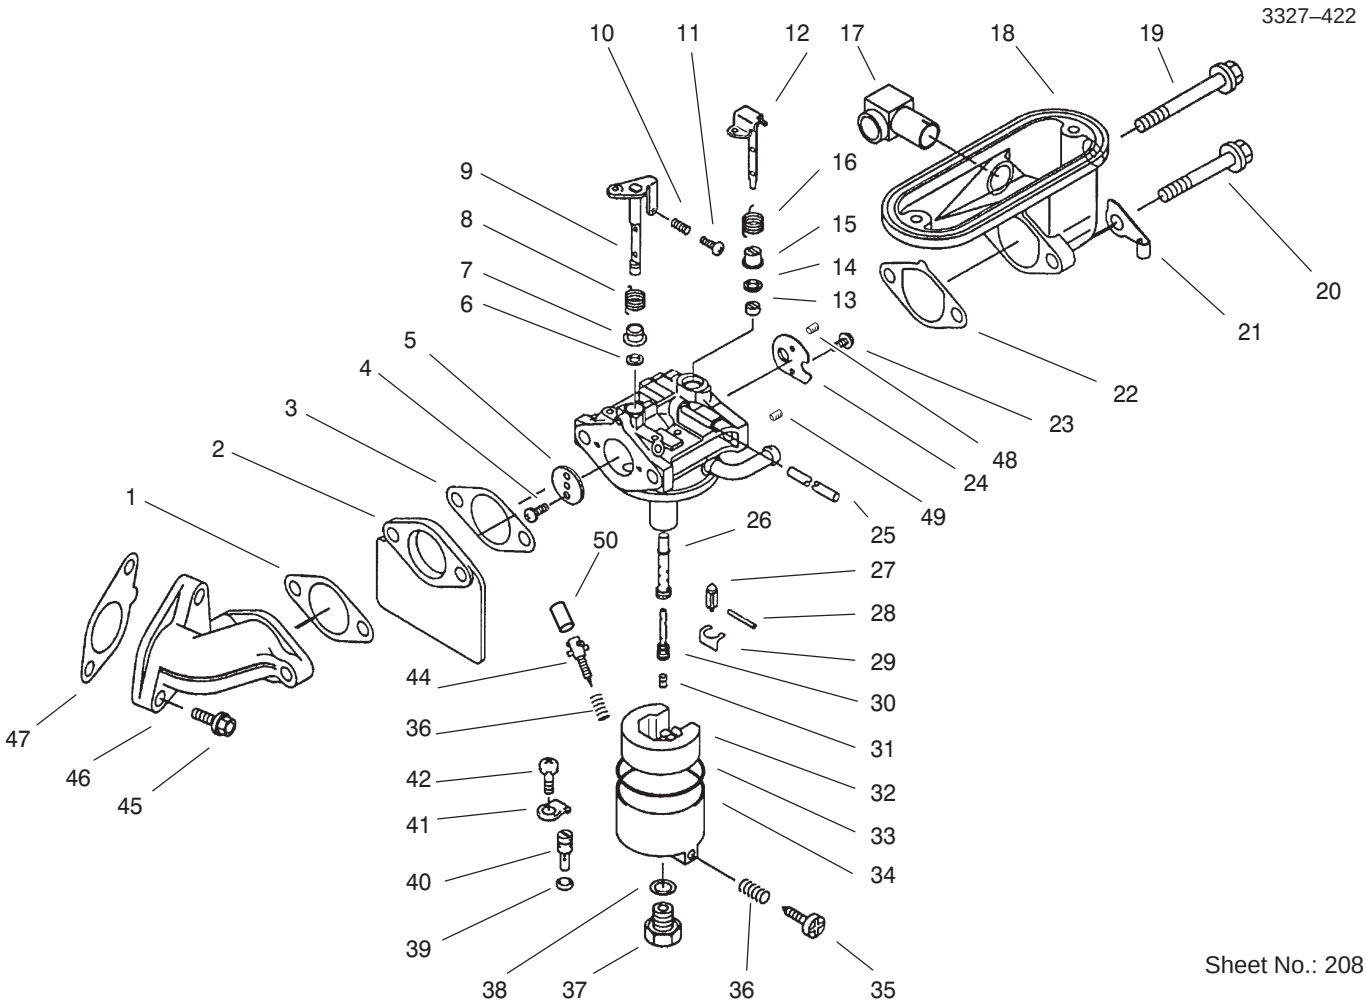


Sheet No.: 208

Carburetor (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
0	15003–2467	1	Carburetor ASM
1	11060–2338	1	Gasket–Intake Pipe
2	16073–2091	1	Insulator
3	11060–2339	2	Gasket–Carburetor
4	92009–2080	2	Screw
5	16025–2141	1	Valve–Throttle #110
6	92093–2082	1	Seal
7	92027–2025	1	Collar
8	92081–2077	1	Spring
9	16041–2009	1	Shaft–Throttle
10	92081–2046	1	Spring
11	92009–2079	1	Screw
12	16041–2010	1	Shaft–Choke
13	92027–2003	1	Collar
14	92093–2069	1	Seal
15	92143–2142	1	Collar
16	92144–2160	1	Spring
17	59071–2062	1	Joint
18	16060–2108	1	Pipe–Intake
19	92002–2254	1	Bolt
20	92002–2253	1	Bolt
21	92170–2019	1	Clamp
22	11060–2338	1	Gasket
23	92009–2081	2	Screw
24	16126–2206	1	Valve–Choke
25	92059–2266	1	Tube

Ref. No.	Part No.	Qty.	Description
26	49121–2207	1	Nozzle–Main #98A
27	16030–2073	1	Valve–Float
28	92043–2006	1	Pin
29	92033–2067	1	Ring–Snap
30	49123–2078	1	Holder–Main Jet
31	92063–2294	1	Jet–Main
32	16031–2066	1	Float
33	11009–2024	1	Gasket
34	16020–2109	1	Chamber–Float Incl 35 36
35	92009–2015	1	Screw
36	92081–2009	2	Spring
37	92150–2146	1	Bolt
38	11009–2025	1	Gasket
39	16038–024	1	Gasket
40	92064–2108	1	Jet–Pilot
41	13183–2252	1	Plate
42	92009–2244	1	Screw
44	16014–2076	1	Screw–Pilot Air
45	130g0825	2	Bolt–Flange
46	16060–2109	1	Pipe–Intake
47	11060–2337	1	Gasket–Intake Pipe
48	16035–2063	1	Jet–Air #0.9
49	16035–2051	1	Jet–Air #1.4
50	39076–2053	1	Limiter

Obtain Parts from Kawasaki

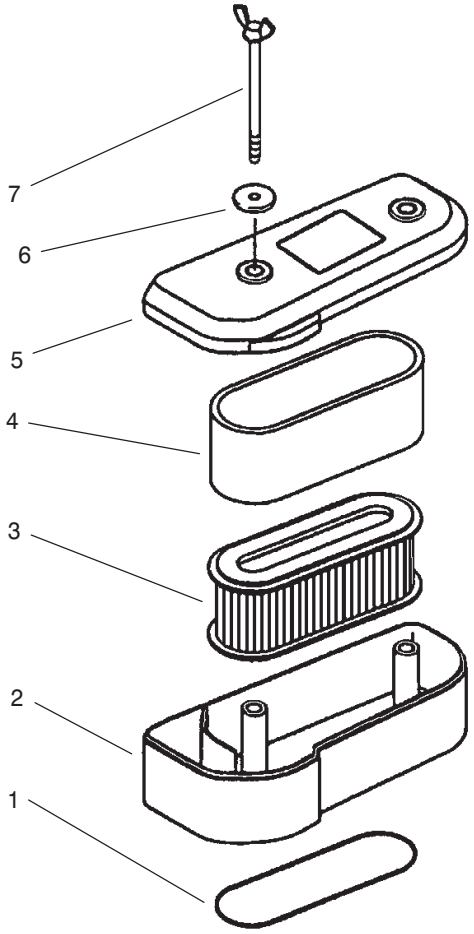


Sheet No.: 210

Air Filter (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	11009–2443	1	Gasket–Air Filter
2	11011–2174	1	Case–Air Filter
3	11013–2021	1	Element–Air Filter
4	11013–2020	1	Element–Air Filter
5	11012–2192	1	Cap–Air Filter
6	92022–2220	2	Washer
7	92002–2230	2	Bolt
	11010–2291	1	Filter ASM

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

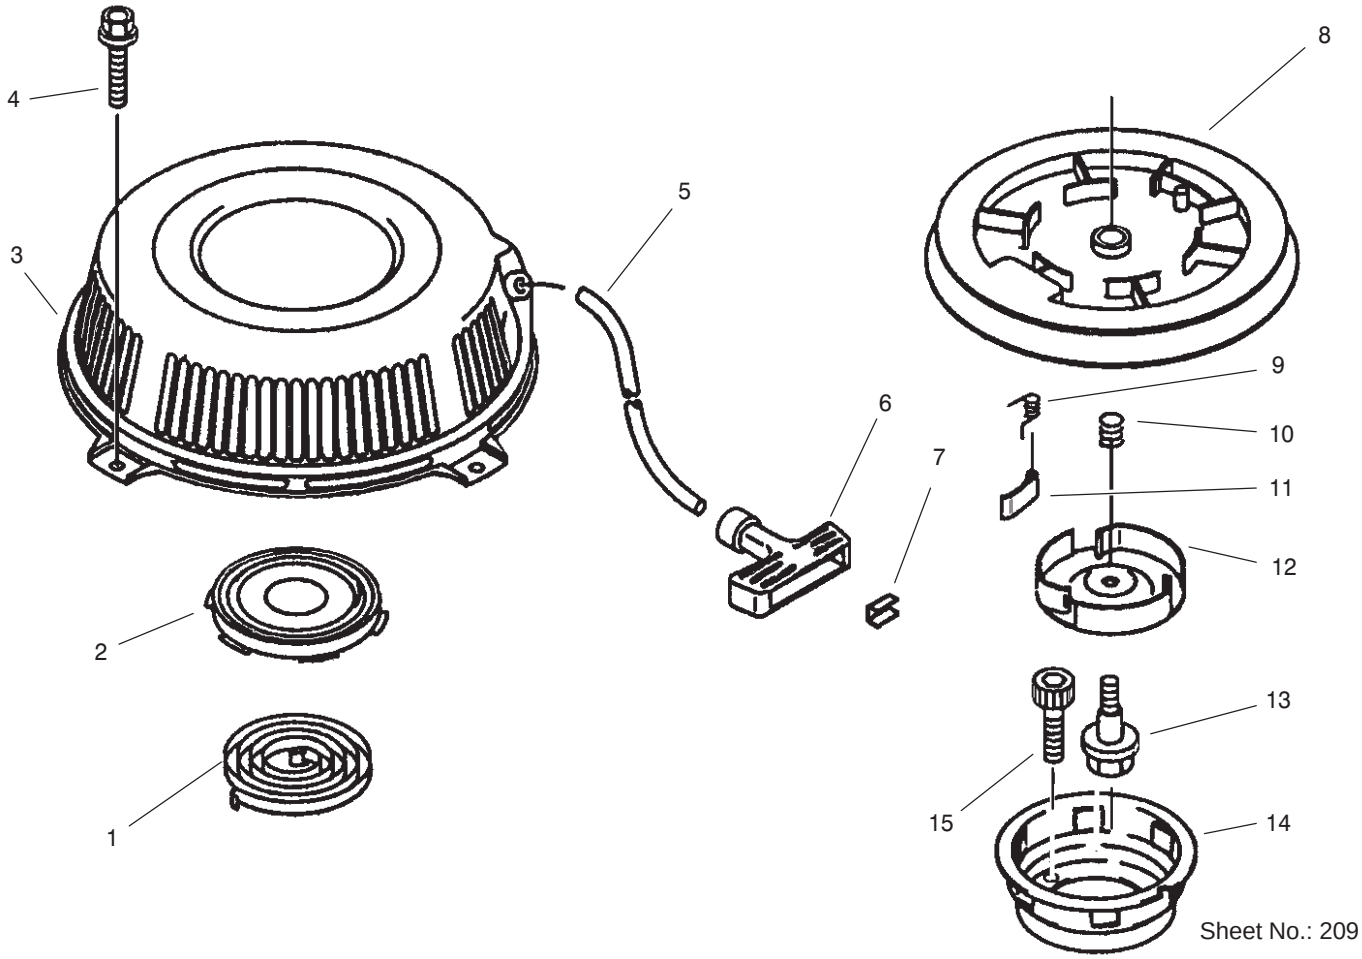

Sheet No.: 209


Starter (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	90281–2267	1	Spring–Recoil
2	32099–2060	1	Case–Spring
3	32099–2239–yk	1	Case–Recoil Starter
4	130b0610	4	Bolt–Flange
5	59106–2060	1	Rope–Starter
6	46075–2059	1	Grip–Starter Rope
7	92022–2248	1	Washer
8	59101–2054	1	Reel–Recoil Starter
9	92081–2021	3	Spring
10	92081–2268	1	Spring–Return
11	13165–2073	3	Pawl–Recoil Starter
12	14020–2054	1	Retainer–Recoil
13	92001–2027	1	Bolt
14	49080–2144	1	Pulley–Starting
15	120p0620	3	Bolt–Socket
16	49088–2412–yk	1	Starter Incl #1–5 8–14

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

3327–422

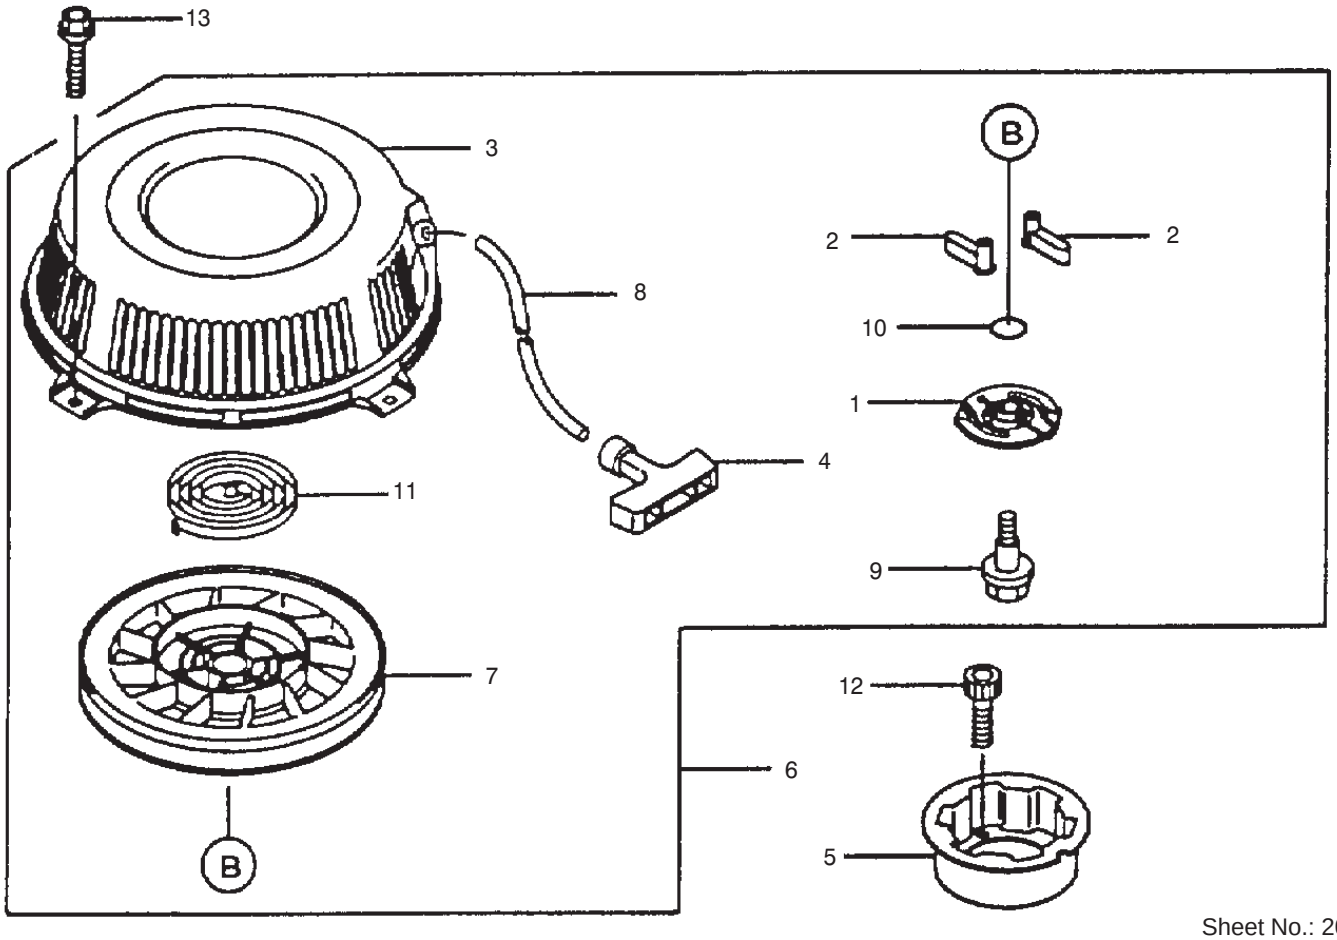


Sheet No.: 209

Starter (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	10370–2102	1	Guide
2	13165–2092	2	Pawl–Recoil Starter
3	32099–2308–9H	1	Case–Spring
4	46075–2106	1	Grip–Recoil Starter
5	49080–2176	1	Pulley–Starting
6	49088–2473–9H	1	Starter–Recoil
7	59101–2103	1	Reel–Recoil Starter
8	59106–2082	1	Rope
9	92009–2382	1	Screw
10	92033–2175	1	Ring–Snap
11	92144–2399	1	Spring
12	120P0620	3	Bolt–Socket
13	130B0610	4	Bolt–Flanged

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

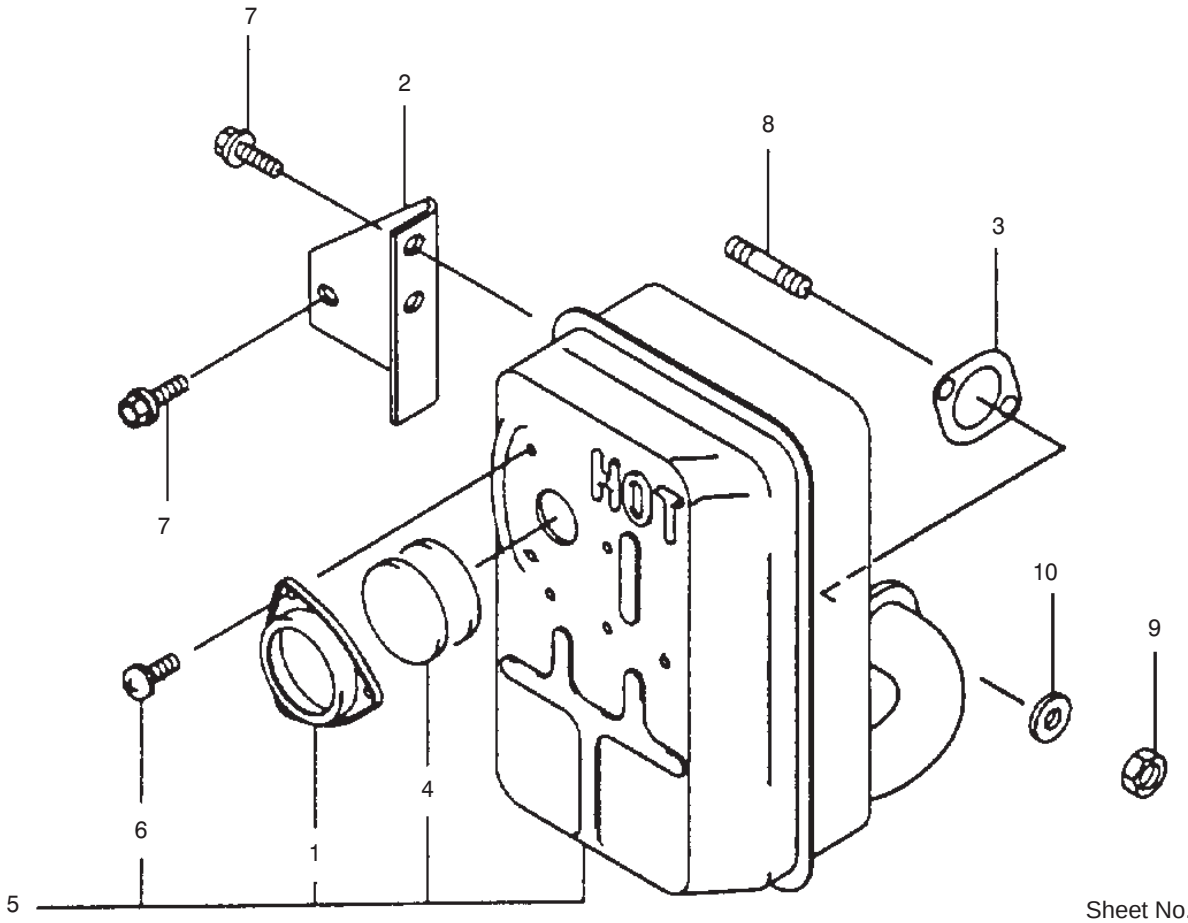

Sheet No.: 211

Muffler (Kawasaki FB460V–MS14)

Ref. No.	Part No.	Qty.	Description
1	11012–2251–9Y	1	Cap–Spark Arrester
2	11046–2163–9Y	1	Bracket
3	11060–2379	1	Gasket
4	18077–2052	2	Arrester–Spark
5	49069–2210–9Y	1	Muffler Assembly
6	92009–2166	3	Screw
7	130G0812	4	Bolt–Flanged
8	171G0818	2	Bolt–Stud
9	317R0800	2	Nut–Hex Small
10	461F0800	2	Washer–Spring

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki


TORO®