Form No. 3327-546

High Ramp Conversion Kit

Trans Pro 100

Model No. 04241

Parts Catalog

PROTOTYPE

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved

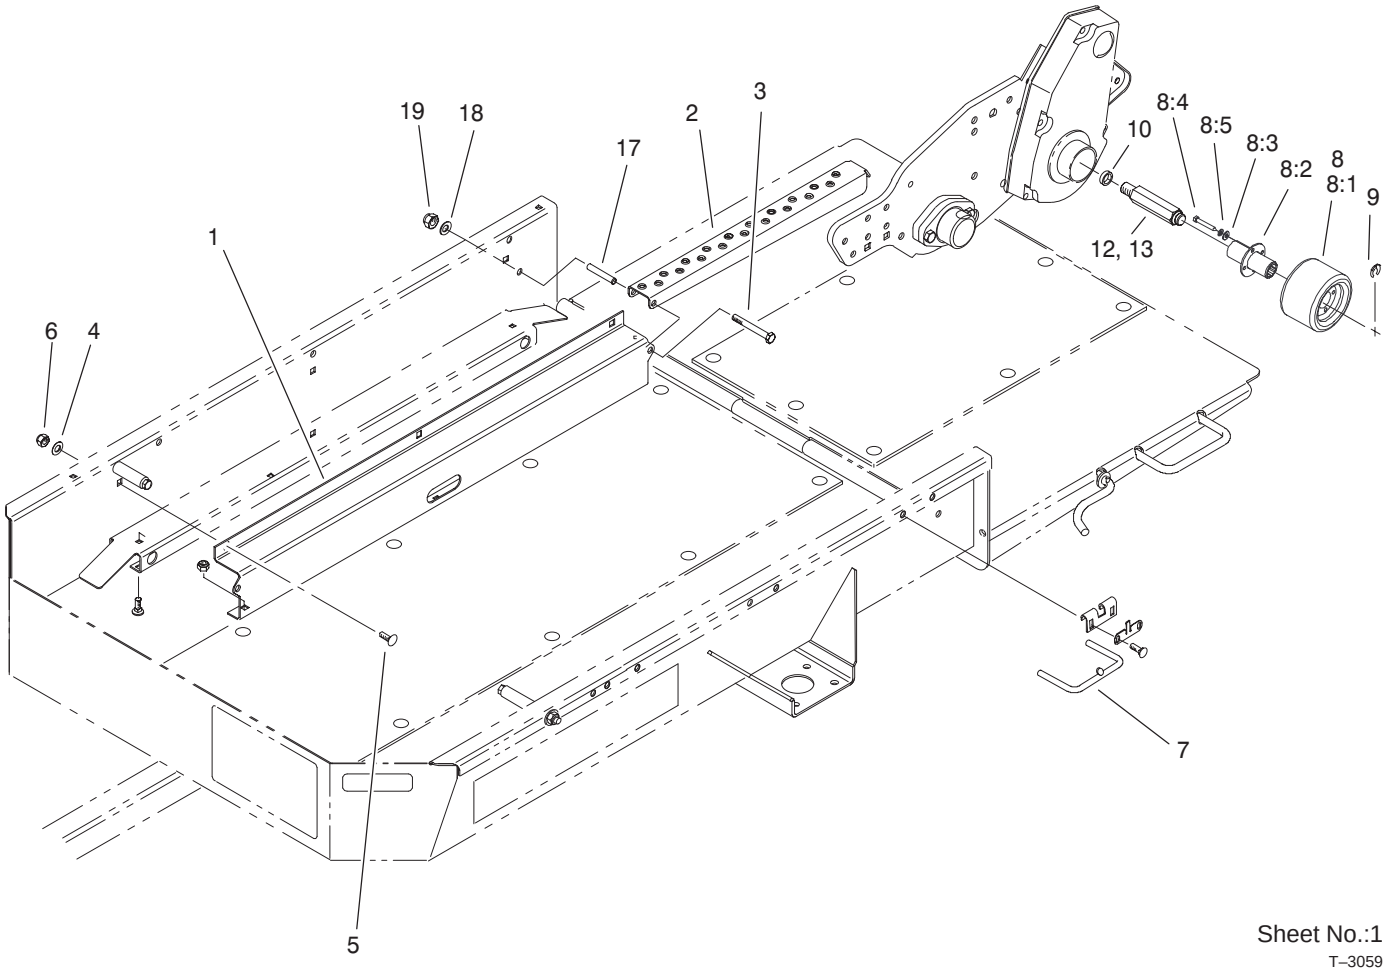

Sheet No.:1
T–3059

High Ramp Conversion Kit Assembly

Ref. No.	Part No.	Qty.	Description
1	98–8792–01	2	Ramp–High
2	98–7289–01	2	Ramp–Load
3	321–23	2	Screw–HH
4	3256–24	12	Washer–Flat
5	3231–1	12	Screw–CARR
6	3296–39	12	Nut–Lock, NI
7	105–5393	4	Rod–Trailer, Small
8	98–8685	4	Wheel ASM
8:1	98–8698	1	Wheel–Rubber
8:2	99–4527	1	Tube ASM
8:3	3256–22	4	Washer–Flat
8:4	3293–21	4	Screw–HH
8:5	3253–3	4	Washer–Lock
9	99–6204	4	Clip–Retaining
10	98–8683	4	Spacer–Wheel
12	88–7580	2	Shaft–Wheel, Transport LH
13	88–7590	2	Shaft–Wheel, Transport RH
17	99–4542	2	Spacer
18	3256–22	2	Washer–Flat
19	3296–42	2	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

PROTOTYPE