Form No. 3327–716

52in Mower Service Kit

Z Master® 200 Series

Part No. 105–6175—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved


Contents

Description	Page
Deck, Deflector and Roller Assembly	3
Spindle and Pulley Assembly	4
Belt and Idler Arm Assembly	5

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

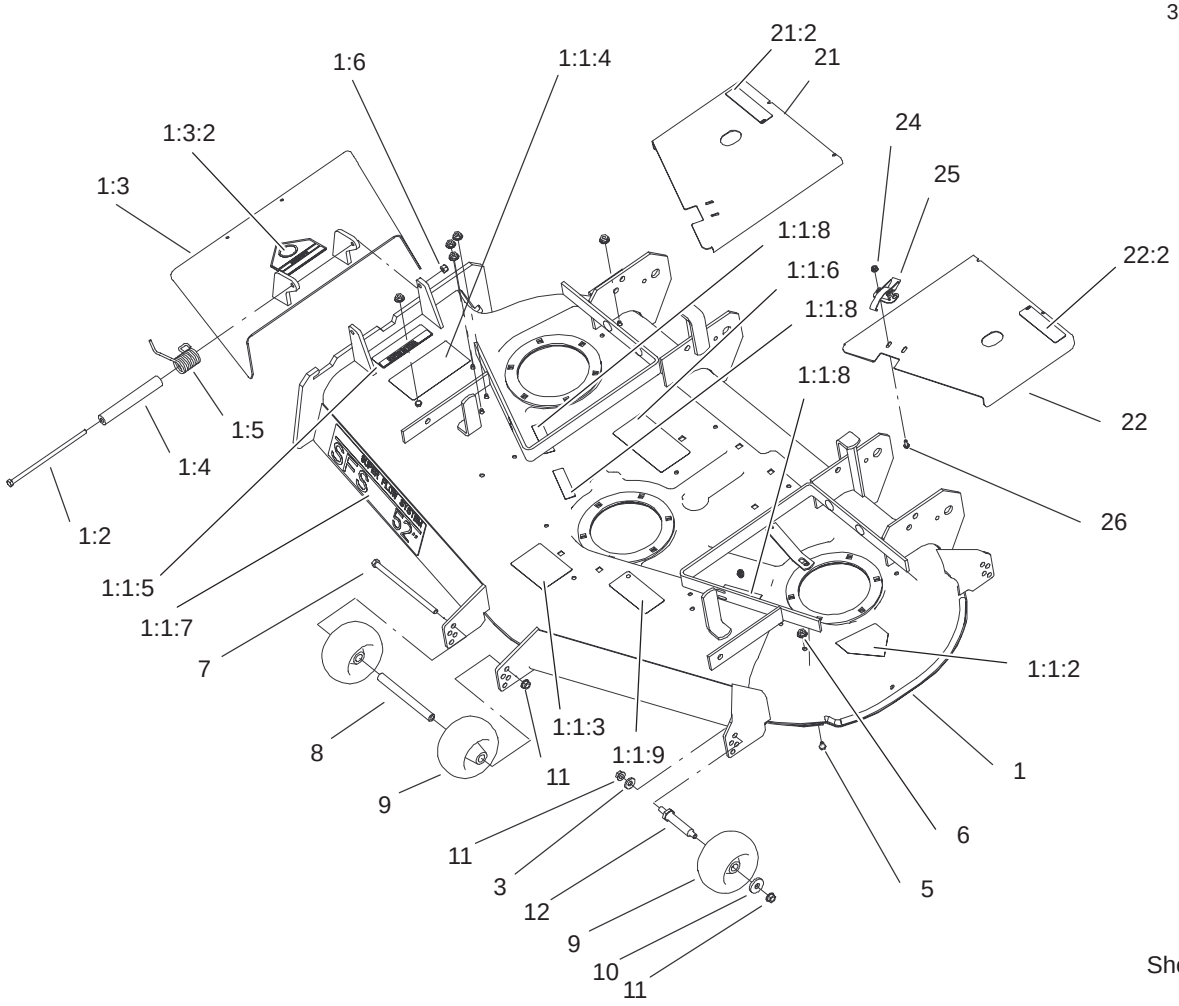


Sheet No.: 0

Deck, Deflector and Roller Assembly

Ref. No.	Part No.	Qty.	Description
1	105–1696	1	Deck ASM
☆1:1		1	Deck ASM
1:1:2	43–8480	1	Decal–Danger
1:1:3	98–3798	1	Decal–Wheel, Gage
1:1:4	66–1340	1	Decal–Danger
1:1:5	104–8569	1	Decal–Warning, Deflector
1:1:6	98–3799	1	Decal–Belt Routing
1:1:7	98–5953	1	Decal–Sfs
1:1:8	98–5954	3	Decal–Missing, Cover
1:1:9	93–7818	1	Decal–Torque, Blade Bolt
1:2	322–50	1	Screw–HH
1:3	105–4623	1	Deflector ASM
1:3:2	54–9220	1	Decal–Danger
1:4	105–4622	1	Spacer
1:5	104–8554	1	Spring–Torsion
1:6	3296–29	1	Nut–Lock, NI
3	98–5975	3	Washer–Belleville
5	321–1	6	Screw–HH
6	32128–33	6	Nut–HF
7	323–28	1	Screw–HH
8	98–5967	1	Spacer
9	68–2730	5	Wheel–Gage
10	1–373034	3	Washer
11	3290–357	7	Nut–HHF

Ref. No.	Part No.	Qty.	Description
12	99–2842	3	Spacer
21	98–5963	1	RH Cover ASM
21:2	67–5360	1	Decal–Danger
22	98–5965	1	LH Cover ASM
22:2	67–5360	1	Decal–Danger
24	32128–17	4	Nut–Lock, Flange
25	249–21	2	Clamp–Slotted
26	3290–321	4	Screw–HWH

☆ Not serviced separately

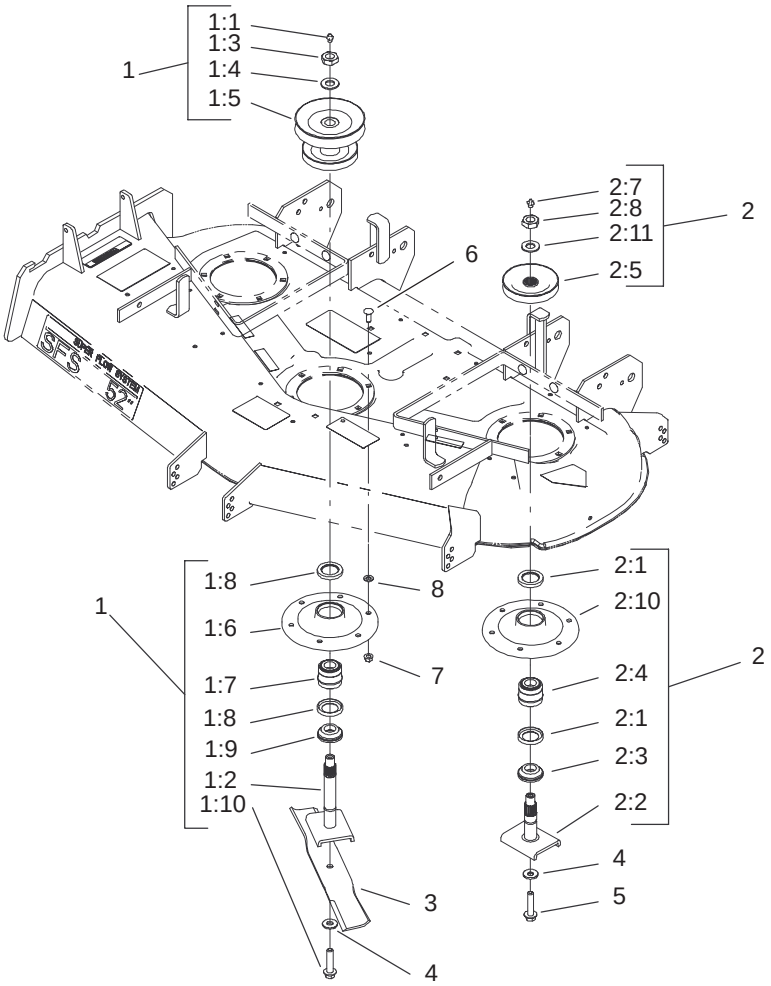


Sheet No.: 2

Spindle and Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	105–1687	1	Spindle Housing ASM
1:1	302–2	1	Fitting–Grease
1:2	105–1686	1	Spindle Shaft ASM
1:3	32146–20	1	Nut–Jam
1:4	92–5836	1	Washer
1:5	100–2312	1	Pulley/Hub ASM
1:6	61–4160	1	Housing
1:7	46–8530	1	Bearing ASM
1:8	253–139	2	Seal–Oil
1:9	27–0950	1	Spacer
1:10	92–5816	1	Bolt–Blade
2	99–4639	2	Outer Spindle ASM
2:1	253–139	2	Seal–Oil
2:2	27–0920	1	Shaft
2:3	27–0950	1	Spacer
2:4	46–8530	1	Bearing ASM
2:5	99–4613	1	Pulley ASM
2:7	302–2	1	Fitting–Grease
2:8	32146–20	1	Nut–Jam
2:10	61–4160	1	Housing
2:11	7–4150	1	Washer
3	27–0990	3	Blade
4	1–513435	3	Washer–Spring
5	92–5816	2	Bolt–Blade
6	3231–22	16	Screw–CARR

Ref. No.	Part No.	Qty.	Description
7	32128–21	16	Nut–HF
8	3256–24	1	Washer–Flat

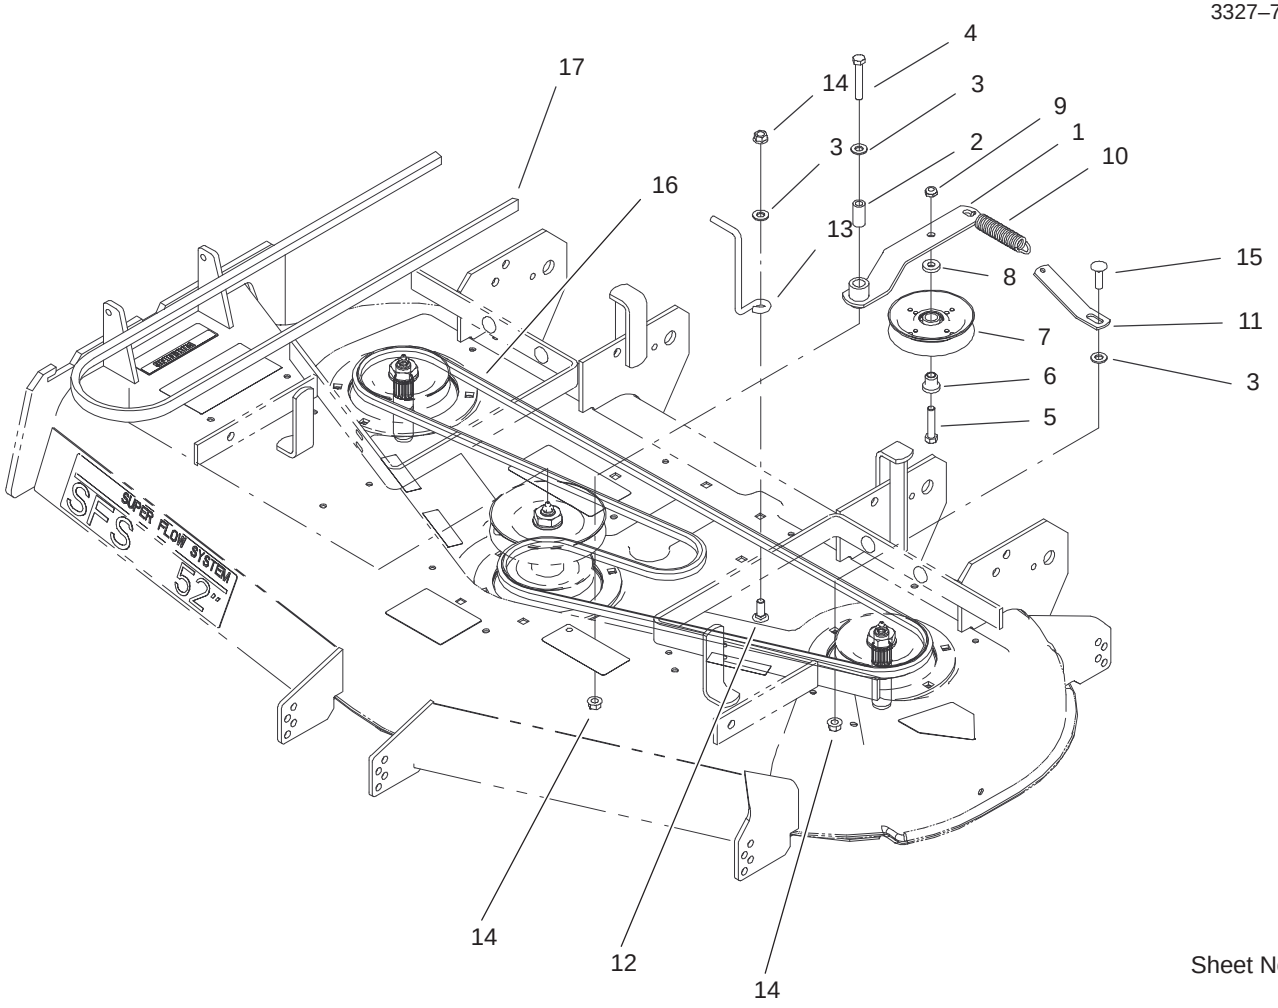

Sheet No.: 3

Belt and Idler Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	55–7640–03	1	Idler Arm ASM
2	51–3640	1	Sleeve
3	3256–24	3	Washer–Flat
4	323–11	1	Screw–HH
5	3211–8	1	Screw–HH
6	65–5950	1	Bushing–Pulley
7	65–5940	1	Pulley–Idler
8	7–0081	1	Washer–Flat
9	3296–5	1	Nut–Lock, NI
10	51–3650	1	Spring–Extension
11	55–7650	1	Plate–Spring
12	3231–22	1	Screw–CARR
13	98–5980	1	Guide–Belt
14	32128–21	3	Nut–HF
15	3231–28	1	Screw–CARR
16	27–1160	1	V–Belt
17	100–2314	1	Belt

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

Maintenance Record

Date								


TORO®