Form No. 3327-820

44in Finishing Kit

Z100 Twin Bagger

Model No. 78496

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved

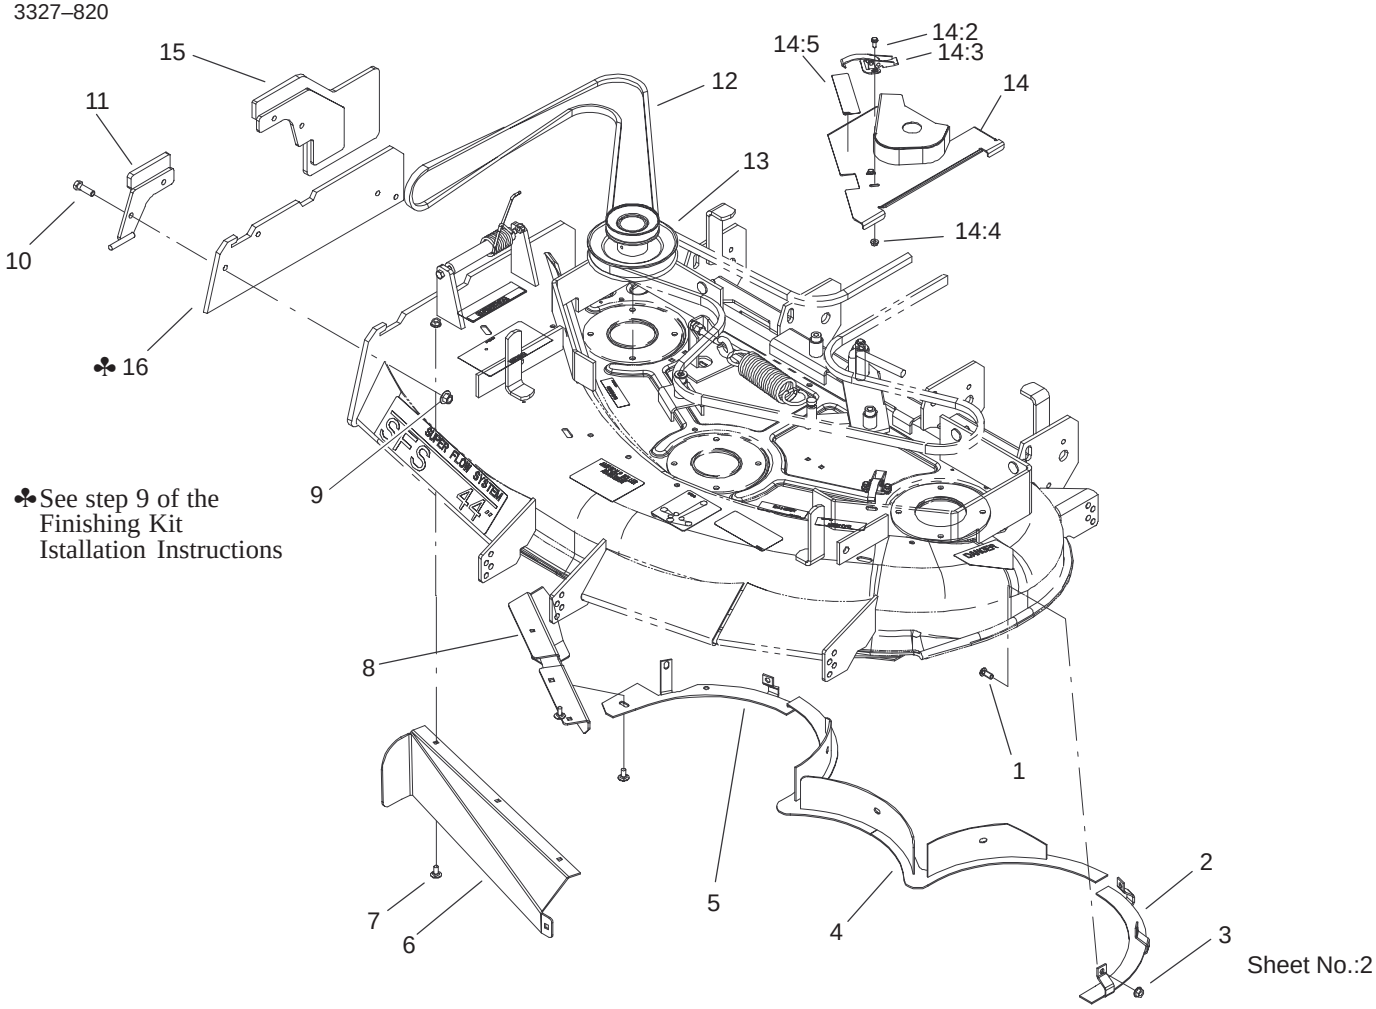

✣See step 9 of the Finishing Kit Istallation Instructions

Sheet No.:2

44in Finishing Assembly

Ref. No.	Part No.	Qty.	Description
1	3274–55	8	Screw–HSBH
2	106–3021–01	1	Baffle–Rear, LH
3	32128–25	16	Nut–Flange
4	106–3015–01	1	Center Baffle ASM
5	106–3022–01	1	Baffle–Rear, RH
6	106–3023–01	1	Baffle–Discharge, Front
7	3230–18	8	Screw–CARR
8	106–3020–01	1	Baffle–Discharge, Rear
9	32128–43	4	Nut–Flange
10	323–7	4	Screw–HH
11	106–2098–03	1	Front Mounting Plate ASM
12	106–3038	1	Belt–V
13	105–5897	1	Double Pulley ASM
14	106–3078	1	Cover ASM
14:2	3290–321	2	Screw–HWH
14:3	249–21	1	Clamp–Slotted
14:4	32128–17	2	Nut–Lock, Flange
14:5	67–5360	1	Decal–Danger
15	106–2099–03	1	Rear Mounting Plate ASM
16	106–2095–03	1	Plate–Template
*99	55–4940–03	3	Blade

Ref. No.	Part No.	Qty.	Description

* Not illustrated