Form No. 3328–181

Trencher Head

Dingo® Attachment

Model No. 22459—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved

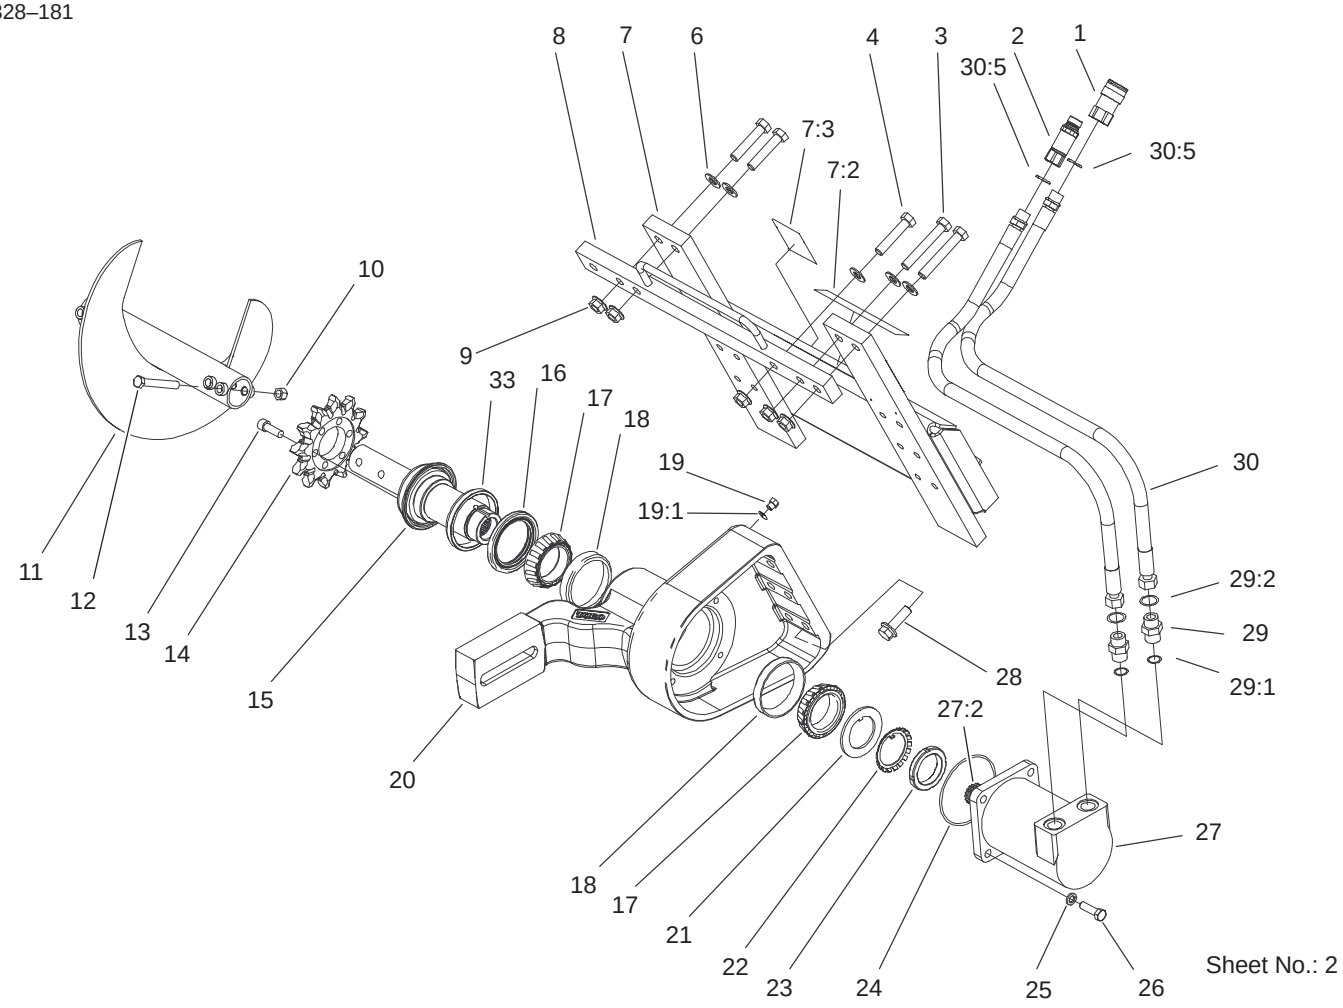


Trencher Head Assembly

Ref. No.	Part No.	Qty.	Description
1	104–6134	1	Coupler–Face, Flush
*1:1	105–8396	1	Seal Kit
2	100–4701	1	Nipple–Connect, Pressure
*2:1	100–6120	1	Seal Kit
3	104–5877	2	Screw–HH
4	104–5895	3	Screw–HH
6	3256–27	5	Washer–Flat
7	104–1938	1	Mount Assembly
7:2	99–9952	1	Decal–Danger
7:3	99–9953	1	Decal–Danger
8	104–5894–03	1	Crossbar ASM
9	32128–50	5	Nut–Flange
10	3296–23	1	Nut–Lock, NI
11	104–5912–03	1	Auger ASM
12	325–35	1	Screw–HH
13	3274–4	6	Screw–HSH
14	104–1964	1	Sprocket–Trencher
15	104–1969	1	Shaft–Trencher
16	104–1967	1	Seal–Shaft
17	104–1966	2	Cone–Bearing
18	104–1965	2	Cup–Bearing
19	353–990	1	Plug
19:1	237–78	1	O–Ring
20	104–1931–03	1	Mount–Boom
21	104–1972	1	Washer–Tongued

Ref. No.	Part No.	Qty.	Description
22	104–5915	1	Lockwasher–Bearing
23	104–1973	1	Locknut–Bearing
24	104–1920	1	O–Ring
25	3253–7	4	Washer–Lock
26	325–7	4	Screw–HH
27	104–1946	1	Motor–HYD
28	104–5870	6	Screw
29	340–8	2	Adapter
29:1	237–65	1	O–Ring
29:2	237–81	1	O–Ring
30	104–1932	2	Hose ASM
30:5	237–80	1	O–Ring
33	104–5935	1	Spacer

* Not illustrated

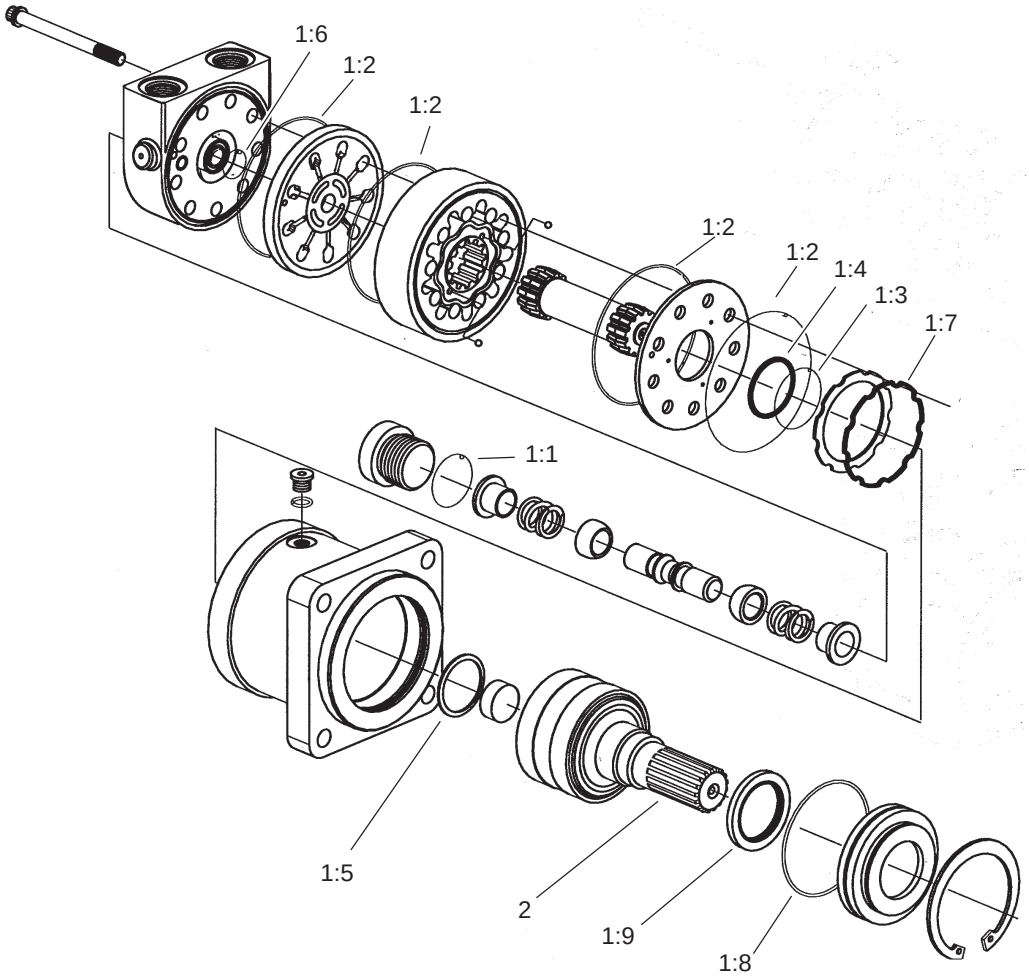

Sheet No.: A1
C–3010

Hydraulic Motor Assembly No. 104–1946

Ref. No.	Part No.	Qty.	Description
1	104–5899	1	Kit–Seal
☆1:1		1	O–Ring
☆1:2		4	Seal
☆1:3		1	O–Ring
☆1:4		1	Ring–Backup
☆1:5		1	Seal–Face
☆1:6		1	O–Ring
☆1:7		1	Ring–Backup
☆1:8		1	O–Ring
☆1:9		1	Seal–Shaft
2	104–5900	1	Shaft–Splined

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately


TORO®