Form No. 3328–192

# Tru Trak™ Sulky

## ProLine Mid Size Mower Attachment

**Model No. 30110—220000001 and Up**

# Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved

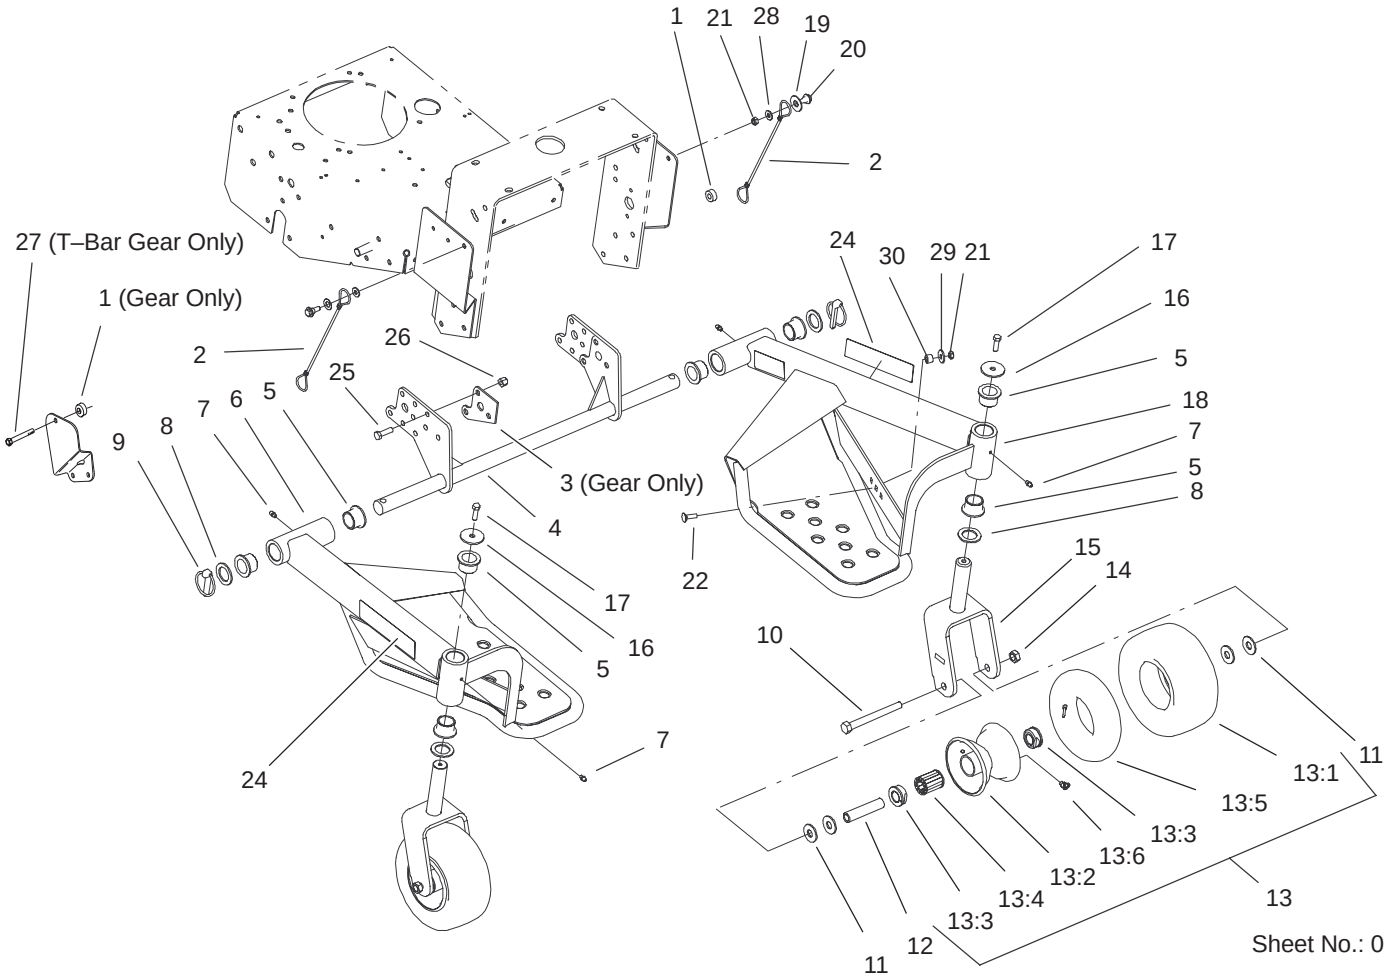


# Sulky Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104–8426 | 2 | Spacer |
| 2 | 93–9595 | 2 | Lanyard |
| 3 | 104–8425–01 | 2 | Plate–Spacer |
| 4 | 104–8405–01 | 1 | Axle ASM |
| 5 | 94–1291 | 8 | Bushing–Special |
| 6 | 104–8407–01 | 1 | LH Floor Plate ASM |
| 7 | 302–5 | 4 | Fitting–Grease |
| 8 | 3–6781 | 4 | Washer–Thrust |
| 9 | 283–71 | 2 | Pin–Lynch |
| 10 | 325–19 | 2 | Screw–HH |
| 11 | 3256–6 | 8 | Washer–Flat |
| 12 | 68–8980 | 2 | Spanner–Tire |
| 13 | 99–1268 | 2 | Castor Wheel ASM |
| 13:1 | 93–9939 | 1 | Tire |
| 13:2 | 100–2348 | 1 | Rim ASM |
| 13:3 | 62–5580 | 2 | Bearing–Outside |
| 13:4 | 62–5570 | 1 | Bearing–Roller |
| 13:5 | 100–5832 | 1 | Tube W/ Valve |
| 13:6 | 302–11 | 1 | Fitting–Lube, 45° |
| 14 | 32153–5 | 2 | Nut–Lock |
| 15 | 104–8402–01 | 2 | Castor ASM |
| 16 | 63–7400 | 2 | Washer–Rebound |
| 17 | 322–16 | 2 | Screw–HH |
| 18 | 104–2743–01 | 1 | RH Floor Plate ASM |
| 19 | 3256–5 | 2 | Washer–Flat |
| 20 | 94–7817 | 2 | Bolt–Shoulder |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 21 | 3296–47 | 4 | Nut–Lock, NI |
| 22 | 3230–2 | 2 | Screw–CARR |
| 24 | 104–8477 | 2 | Decal |
| 25 | 323–29 | 6 | Screw–HH |
| 26 | 3296–39 | 6 | Nut–Lock, NI |
| 27 | 323–23 | 2 | Screw–HH |
| 28 | 3256–3 | 2 | Washer–Flat |
| 29 | 1–603716 | 2 | Washer–Friction |
| 30 | 98–4695 | 2 | Spacer |