Form No. 3328–226

Z153

Z Master® with 52in SFS Side Discharge Mower

Model No. 74197—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved

Contents

Description	Page
Front Frame Assembly	4
Caster Wheel Assembly No. 1–634662	5
Front Spring Assembly No. 103–1987	6
Height of Cut Assembly	7
Main Frame Assembly	8
Seat Assembly No. 1–633705	9
Fuel System Assembly	10
Parking Brake System Assembly	11
Motion Control System Assembly	12
Hydraulic System Assembly	13
Pump, Idler and Belt Assembly	15
Engine and Clutch Assembly	16
Deck Assembly	17
Deck Spindle Assembly	18
Idler, Pulley/Lift Strut, Chain Assembly	19
Electrical System Assembly	20
Electrical Schematic	21
Crankshaft Assembly Kohler CV23S PS75560	22
Crankcase Assembly Kohler CV23S PS75560	23
Crankcase Assembly (Continued) Kohler CV23S PS75560	24
Oil Pan/Lubrication Assembly Kohler CV23S PS75560	25
Head/Valve/Breather Assembly Kohler CV23S PS75560	26
Head/Valve/Breather Assembly (Continued) Kohler CV23S PS75560	27
Ignition/Electrical Assembly Kohler CV23S PS75560	28
Blower Housing Assembly Kohler CV23S PS75560	29
Starter Assembly Kohler CV23S PS75560	30
Fuel System Assembly Kohler CV23S PS75560	31
Engine Control Assembly Kohler CV23S PS75560	32
Air Intake/Filtration Assembly Kohler CV23S PS75560	33
Exhaust Assembly Kohler CV23S PS75560	34


Accessories

Description	Model / Part No.
52” Deck Recycler Kit	59225
52” Mulching Kit	59227
52” Striping Kit	30121
Blade Assembly–Atomic 18 (3 required for improved mulching)	104–1301
Seat–Suspension, High	99–8522
High Sail Blades (3 required for improved bagging)	56–2390
Z–Stand Kit	105–1621
Steel Bagger	30107
Hitch Kit	99–8924

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

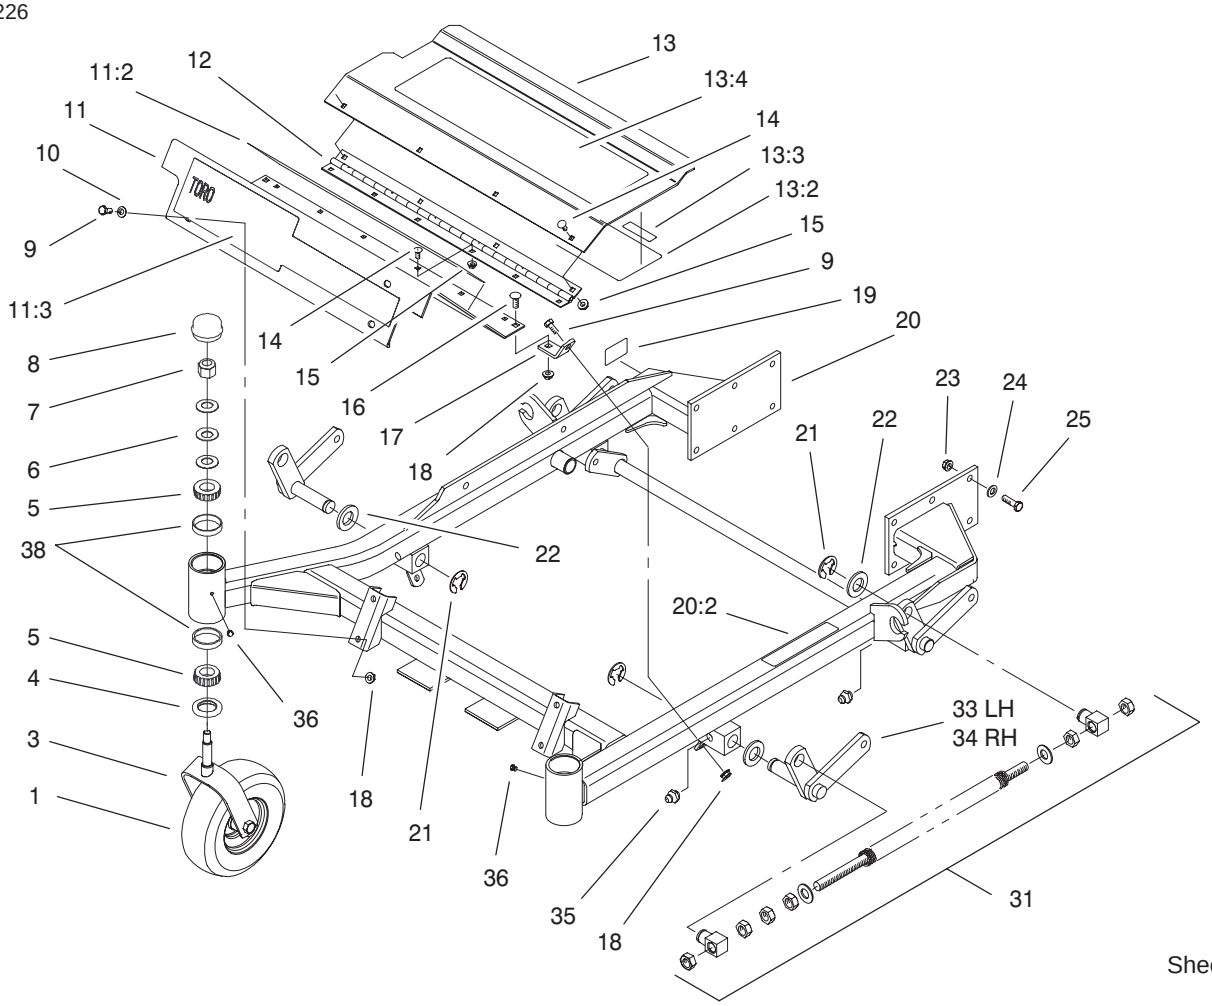


Sheet No.:2

Front Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	1–634662	2	Caster Wheel ASM
3	1–632511–01	2	Caster
4	1–543511	2	Seal–Grease
5	254–94	4	Bearing–Cone, Taper
6	1–633508	6	Washer–Bellville
7	3296–51	2	Nut–Lock, NI
8	1–543513	2	Cap–Grease
9	322–3	6	Screw–HH
10	3256–23	4	Washer–Flat
11	99–3940	1	Floorpan–Front
11:2	1–633553	1	Pad–Antiskid
11:3	1–633737	1	Decal–Z Master
12	1–653049	1	Hinge–Floorpan
13	99–3930	1	Footrest ASM
13:2	99–3924	1	Decal–Service
13:3	98–5954	1	Decal–Missing, Cover
13:4	1–633553	1	Pad–Antiskid
14	3229–10	10	Screw–CARR
15	32128–33	10	Nut–HF
16	3230–1	2	Screw–CARR
17	99–3870–01	2	Bracket–Floorpan
18	32128–20	8	Nut–HF
19	105–2625	1	Decal–Safety STD
20	99–3931	1	Front Frame ASM
20:2	1–633818	1	Decal–Warning
21	32151–103	6	Ring–Snap

Ref. No.	Part No.	Qty.	Description
22	3256–29	6	Washer–Flat
23	3290–357	12	Nut–HHF
24	98–5975	12	Washer–Belleville
25	323–7	12	Screw–HH
31	103–1987	2	Front Spring ASM
33	99–3871–01	1	LH Lift Arm ASM
34	99–3872–01	1	RH Lift Arm ASM
35	302–19	4	Fitting–Grease
36	1–811010	2	Plug
38	254–72	4	Bearing–Cup, Tapered

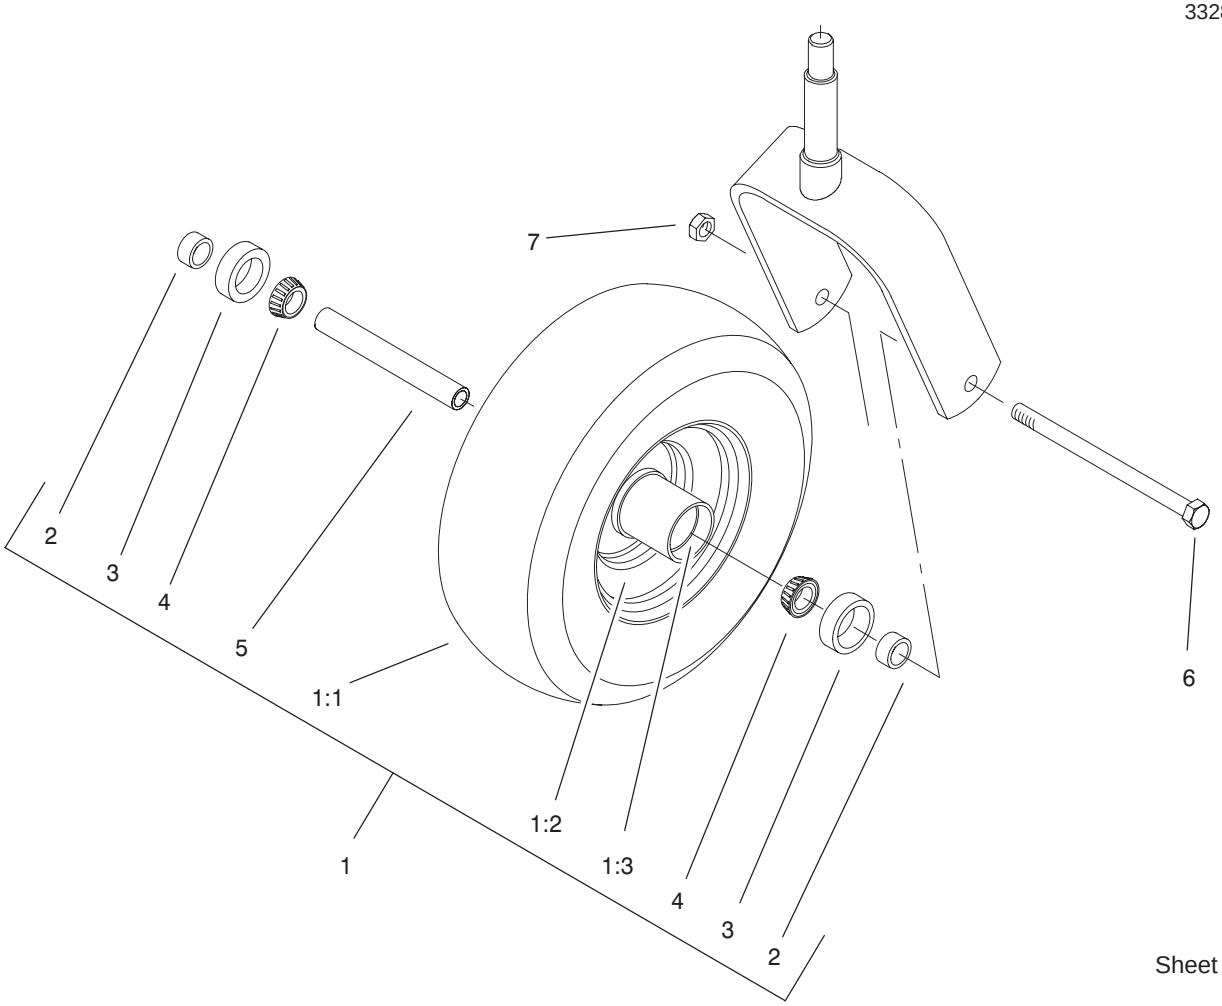


Sheet No.:A1
C–3038

Caster Wheel Assembly No. 1–634662

Ref. No.	Part No.	Qty.	Description
1	1–633582	1	Wheel & Tire ASM
1:1	1–633002	1	Tire
1:2	1–633583	1	Wheel
1:3	1–633584	2	Bearing–Cup
2	1–633581	2	Spacer–Bearing
3	1–633580	2	Seal–Bearing
4	1–633585	2	Bearing–Cone, Taper
5	1–633579	1	Spacer–Caster, Front
6	325–36	1	Screw–HH
7	3296–45	1	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

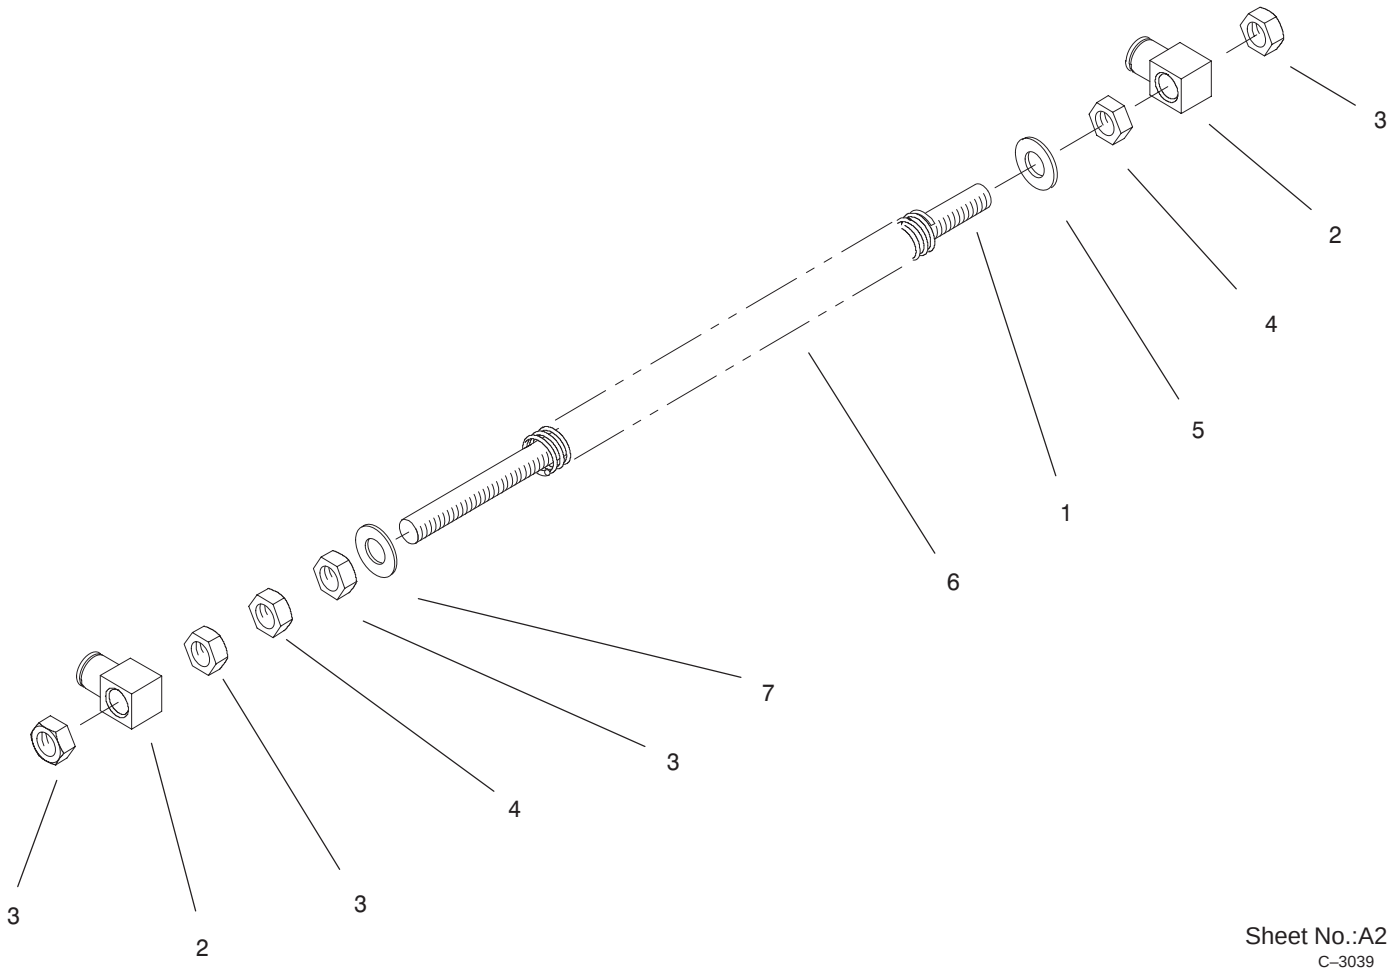


Sheet No.:A2
C–3039

Front Spring Assembly No. 103–1987

Ref. No.	Part No.	Qty.	Description
1	1–653011	1	Rod–Lift, Deck
2	1–633441	2	Swivel–Deck Mount, Rear
3	3217–11	4	Nut–Hex
4	3218–6	2	Nut–Jam
5	1–805517	1	Washer
6	1–653009	1	Spring–Compression
7	3256–27	1	Washer–Flat


Ref. No.	Part No.	Qty.	Description

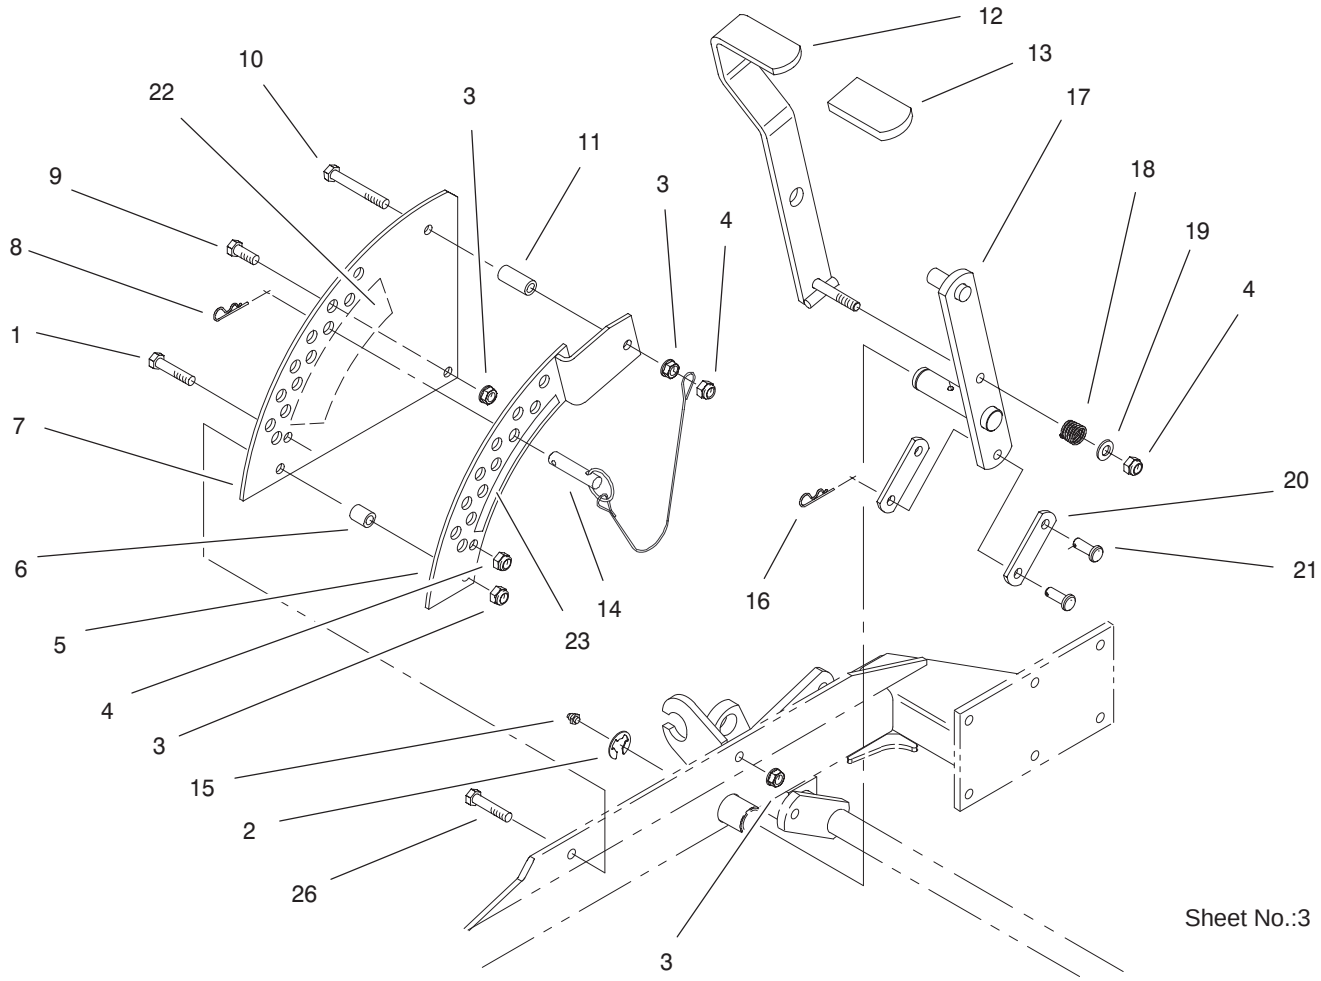

Height of Cut Assembly

Ref. No.	Part No.	Qty.	Description
1	323–9	1	Screw–HH
2	32151–103	1	Ring–Snap
3	3290–357	3	Nut–HHF
4	3296–39	3	Nut–Lock, NI
5	1–652235–01	1	Plate–Lift, Deck
6	1–633080	1	Bushing–Lever, Lift
7	1–653230–01	1	Plate–Lift, Deck
8	1–806005	1	Pin–Hair
9	323–6	1	Screw–HH
10	323–13	1	Screw–HH
11	1–633082	1	Bushing–Lever, Lift
12	103–2078–03	1	Handle–Lift
13	1–633295	1	Grip–Lever, Lift
14	1–633097	1	Pin–Hitch W/Lanyard
15	302–19	1	Fitting–Grease
16	1–806003	2	Pin–Hair
17	99–3922–03	1	Arm–Lift
18	1–633325	1	Spring–Compression
19	3256–24	1	Washer–Flat
20	1–633068	2	Arm–Lift, Deck
21	1–808284	2	Pin–Clevis
22	1–653140	1	Decal–Deck Height, Outer
23	1–653147	1	Decal–Deck Height, Inner
26	323–8	1	Screw–HH

Ref. No.	Part No.	Qty.	Description

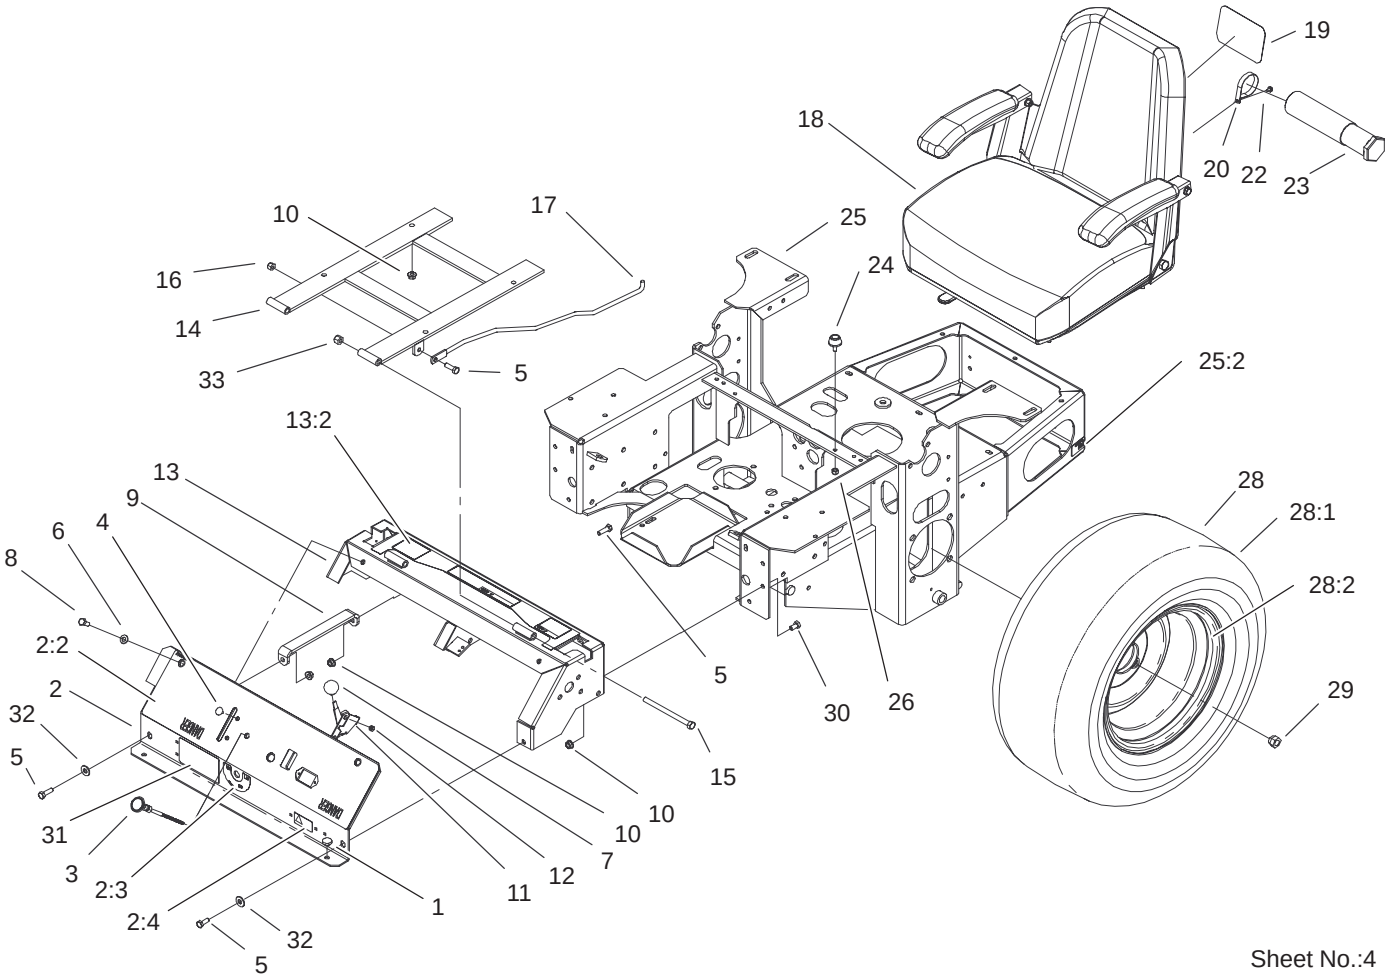


Sheet No.:4

Main Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	1–513658	2	Bumper–Catcher, Grass
2	99–3932	1	Control Panel ASM
2:2	99–3942	1	Decal–Panel, Control
2:3	103–0262	1	Decal–Valve, Fuel
2:4	98–4387	1	Decal–Protection, Ear
3	1–603336	1	Control–Choke
4	1–807513	2	Bolt–CARR
5	322–5	3	Screw–HH
6	3256–23	2	Washer–Flat
7	1–513592	1	Knob–Ball
8	322–3	3	Screw–HH
9	1–653089–03	1	Bracket
10	32128–20	12	Nut–HF
11	1–633696	1	Cable–Throttle
12	3296–2	2	Nut–Lock
13	105–6123	1	Console ASM
13:2	103–1997	1	Decal–Console, Top
14	1–632187–03	1	Frame–Seat
15	323–39	2	Screw–HH
16	3296–29	1	Nut–Lock, NI
17	103–1731	1	Rod–Retainer, Seat
18	1–633705	1	Seat ASM
19	99–4693	1	Decal–Toro
20	2412–120	2	R–Clamp
22	32104–76	2	Screw

Ref. No.	Part No.	Qty.	Description
23	74–0720	1	Tube–Manual
24	1–523420	2	Bumper
25	105–3649	1	Main Frame ASM
25:2	65–2690	2	Decal–Surface, Hot
26	3296–42	2	Nut–Lock, NI
28	1–653159	2	Wheel And Tire ASM
28:1	1–653160	1	Tire
28:2	1–653161	1	Wheel
29	242–50	8	Nut–Lug
30	322–2	6	Screw–HH
31	100–3969	1	Decal–Z153
32	3256–3	2	Washer–Flat
33	3296–39	2	Nut–Lock, NI

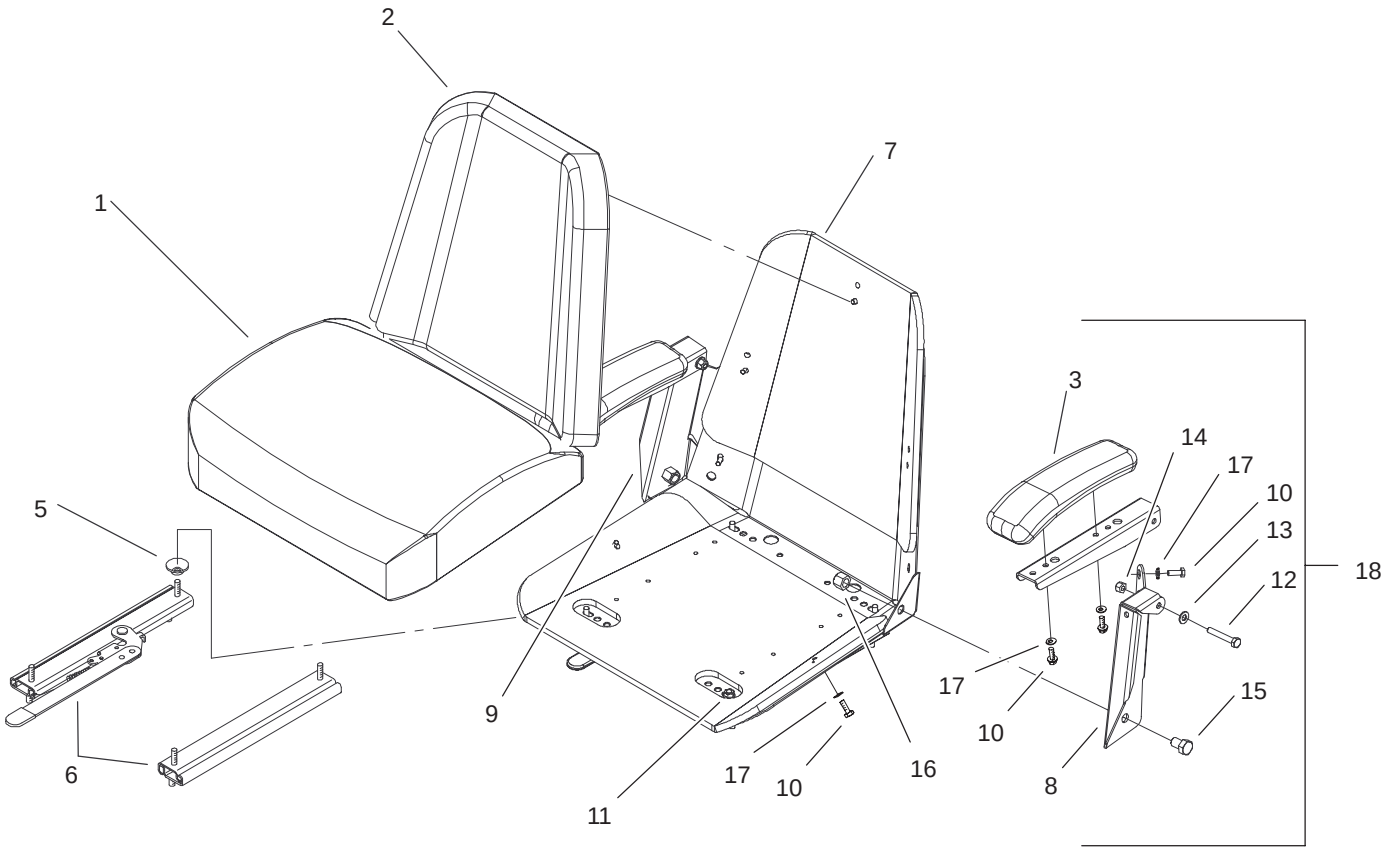


Sheet No.:A3
C–3037

Seat Assembly No. 1–633705

Ref. No.	Part No.	Qty.	Description
1	103–0290	1	Cushion–Seat, Bottom
2	104–7754	1	Cushion–Seat, Back
3	1–633710	2	Cushion–Armrest
5	1–543401	4	Spacer–Track
6	1–643255	1	Track–Seat
7	1–633859	1	Frame–Seat
8	105–3622	1	Bracket–Armrest, LH
9	105–3621	1	Bracket–Armrest, RH
10	321–4	11	Screw–HH
11	32128–20	4	Nut–HF
12	322–10	2	Screw–HH
13	3256–23	4	Washer–Flat
14	3296–29	2	Nut–Lock, NI
15	325–2	2	Screw–HH
16	3296–23	2	Nut–Lock, NI
17	3256–22	11	Washer–Flat
18	105–3620	1	Armrest Kit

Ref. No.	Part No.	Qty.	Description

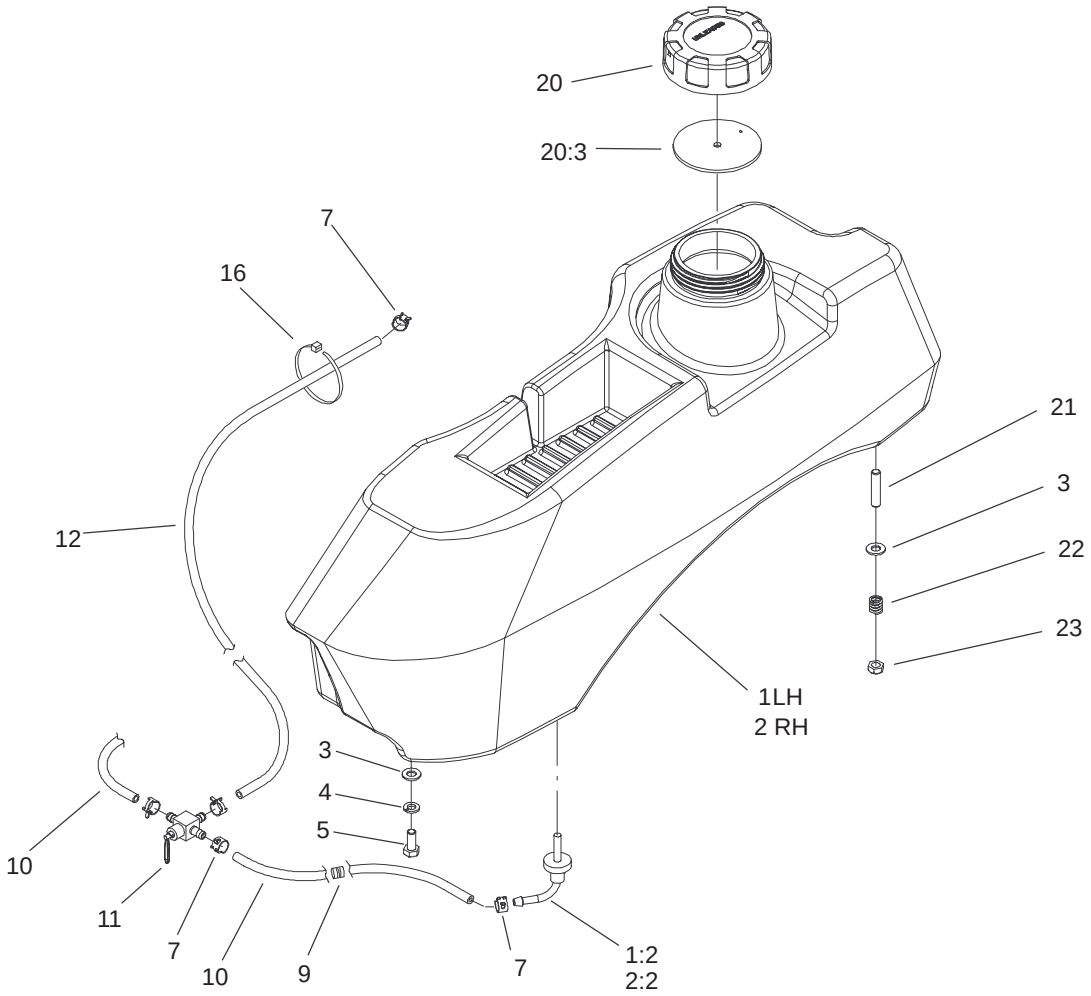


Sheet No.:5

Fuel System Assembly

Ref. No.	Part No.	Qty.	Description
1	105–3625	1	LH Fuel Tank ASM
1:2	103–2605	1	Fitting–Fuel, Bulkhead
2	105–3624	1	RH Fuel Tank ASM
2:2	103–2605	1	Fitting–Fuel, Bulkhead
3	3256–23	8	Washer–Flat
4	1–805005	4	Washer–Lock
5	322–3	4	Screw–HH
7	1–303077	6	Clamp–Line, Fuel
9	1–543296	2	Grommet–Line, Fuel
10	1–543526	2	Hose–Fuel
11	1–633347	1	Valve–Fuel
12	103–0216	1	Hose–Fuel
16	1–303335	1	Tie–Plastic
20	88–3980	2	Gas Cap ASM
20:3	88–4010	1	Gasket–Cap, Gas
21	1–633023	4	Stud
22	1–633349	4	Spring–Tank, Fuel
23	3296–47	4	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

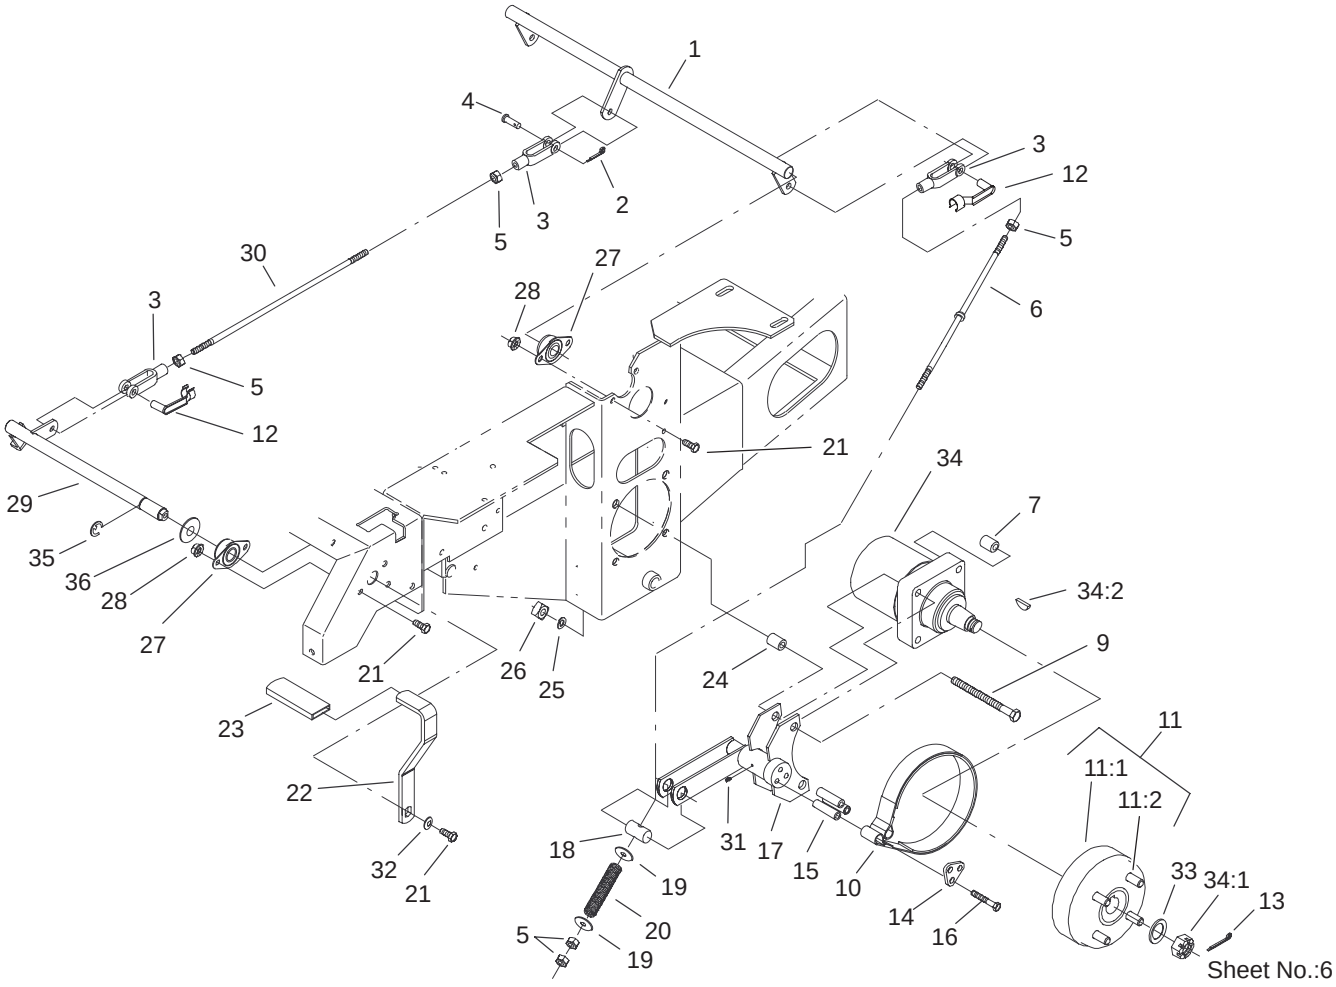


Parking Brake System Assembly

Ref. No.	Part No.	Qty.	Description
1	1–652073–03	1	Crank–Brake, Park
2	3272–10	1	Pin–Cotter
3	1–633131	4	Yoke–Linkage, Brake
4	1–808285	1	Pin–Clevis
5	3219–3	8	Nut–HH
6	103–0356	2	Rod–Brake
7	1–653068	4	Spacer–Wheel
9	325–13	8	Screw–HH
10	103–0355	2	Band–Brake
11	103–0590	2	Hub–Wheel
11:1	103–0589	1	Hub–Wheel
11:2	1–633926	4	Stud–Wheel
12	103–2399	3	Pin–Spring, Clevis
13	1–806800	2	Pin–Cotter
14	103–0374	2	Retainer–Band, Brake
15	103–0384	6	Spacer
16	322–9	6	Screw–HH
17	103–0352–03	2	Bracket–Brake
18	1–633144	2	Pin–Trunion
19	3256–4	4	Washer–Flat
20	1–633454	2	Spring–Brake
21	323–4	9	Screw–HH
22	1–653074–03	1	Handle–Brake, Park
23	1–633268	1	Grip–Lever, Brake
24	1–653069	4	Spacer–Wheel
25	3253–7	8	Washer–Lock

Ref. No.	Part No.	Qty.	Description
26	103–0131	8	Nut–Square
27	1–633102	4	Bearing–Flange, Side
28	3290–357	8	Nut–HHF
29	103–3116	1	Shaft–Brake, Parking
30	1–653061	1	Linkage–Handle, Brake
31	1481	2	Fitting–Grease
32	98–5975	1	Washer–Belleville
33	1–523157	2	Washer–Spacer
34	1–523328	2	Motor–Wheel
34:1	1–809036	1	Nut–HH
34:2	3257–42	1	Key–Woodruff
*34:99	103–2748	1	Drive Link Kit
*34:99	1–000139	1	Bearing Kit
*34:99	1–000099	1	Seal Kit
35	32151–48	1	E–Ring
36	3256–28	1	Washer–Flat


* Not illustrated

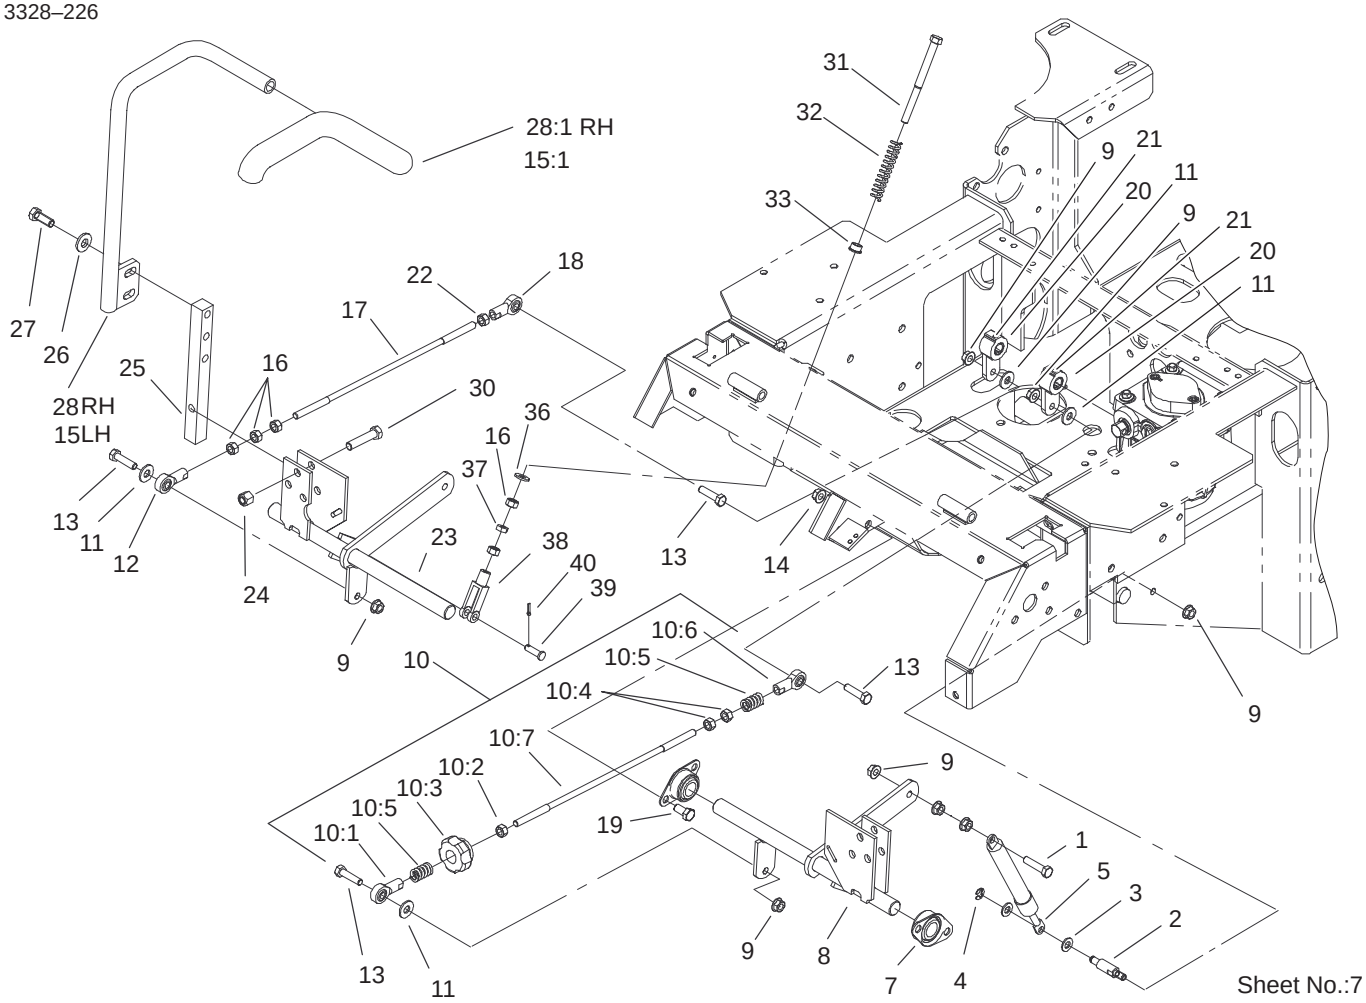

Motion Control System Assembly

Ref. No.	Part No.	Qty.	Description
1	1–403180	2	Screw–HH
2	1–653316	2	Pin–Damper
3	3256–23	4	Washer–Flat
4	32120–35	2	E–Ring
5	103–2913	2	Damper–Control, Motion
7	1–633102	4	Bearing–Flange, Side
8	103–2199	1	LH Motion Control ASM
9	32128–20	12	Nut–HF
10	103–3063	1	ASM,Tracking Rod Lhp
10:1	1–543017	1	Balljoint–RH
10:2	3219–2	1	Nut–Hex
10:3	103–3060	1	Knob–Tracking
10:4	1–804524	2	Nut
10:5	1–323245	2	Spring–Compression
10:6	1–633152	1	Balljoint–Thread, LH
10:7	103–3066	1	Link–Rod, Tracking
11	3256–3	4	Washer–Flat
12	1–543017	1	Balljoint–RH
13	322–6	4	Screw–HH
14	3290–357	8	Nut–HHF
15	103–0631	1	LH Lever ASM
15:1	1–633257	1	Grip–Control, Motion
16	3219–2	7	Nut–Hex

Ref. No.	Part No.	Qty.	Description
17	1–653046	1	Linkage–Pump/Lever
18	1–633152	1	Balljoint–Thread, LH
19	323–4	8	Screw–HH
20	1–653092	2	Arm–Control, Pump
21	1–803022	2	Screw–Set
22	1–804524	1	Nut
23	103–2200	1	RH Motion Control ASM
24	3296–39	6	Nut–Lock, NI
25	103–0407	2	Arm–Shaft, Control
26	98–5975	4	Washer–Belleville
27	323–6	4	Screw–HH
28	103–0632	1	RH Lever ASM
28:1	1–633257	1	Grip–Control, Motion
30	323–9	6	Screw–HH
31	1–603737	2	Bolt–Return, Neutral
32	1–603807	2	Spring–Return, Neutral
33	1–603735	2	Bushing–Flanged
36	3256–2	2	Washer–Flat
37	3220–2	2	Nut
38	1–303105	2	Yoke–Adjustable
39	1–808280	2	Pin–Clevis
40	3272–5	2	Pin–Cotter

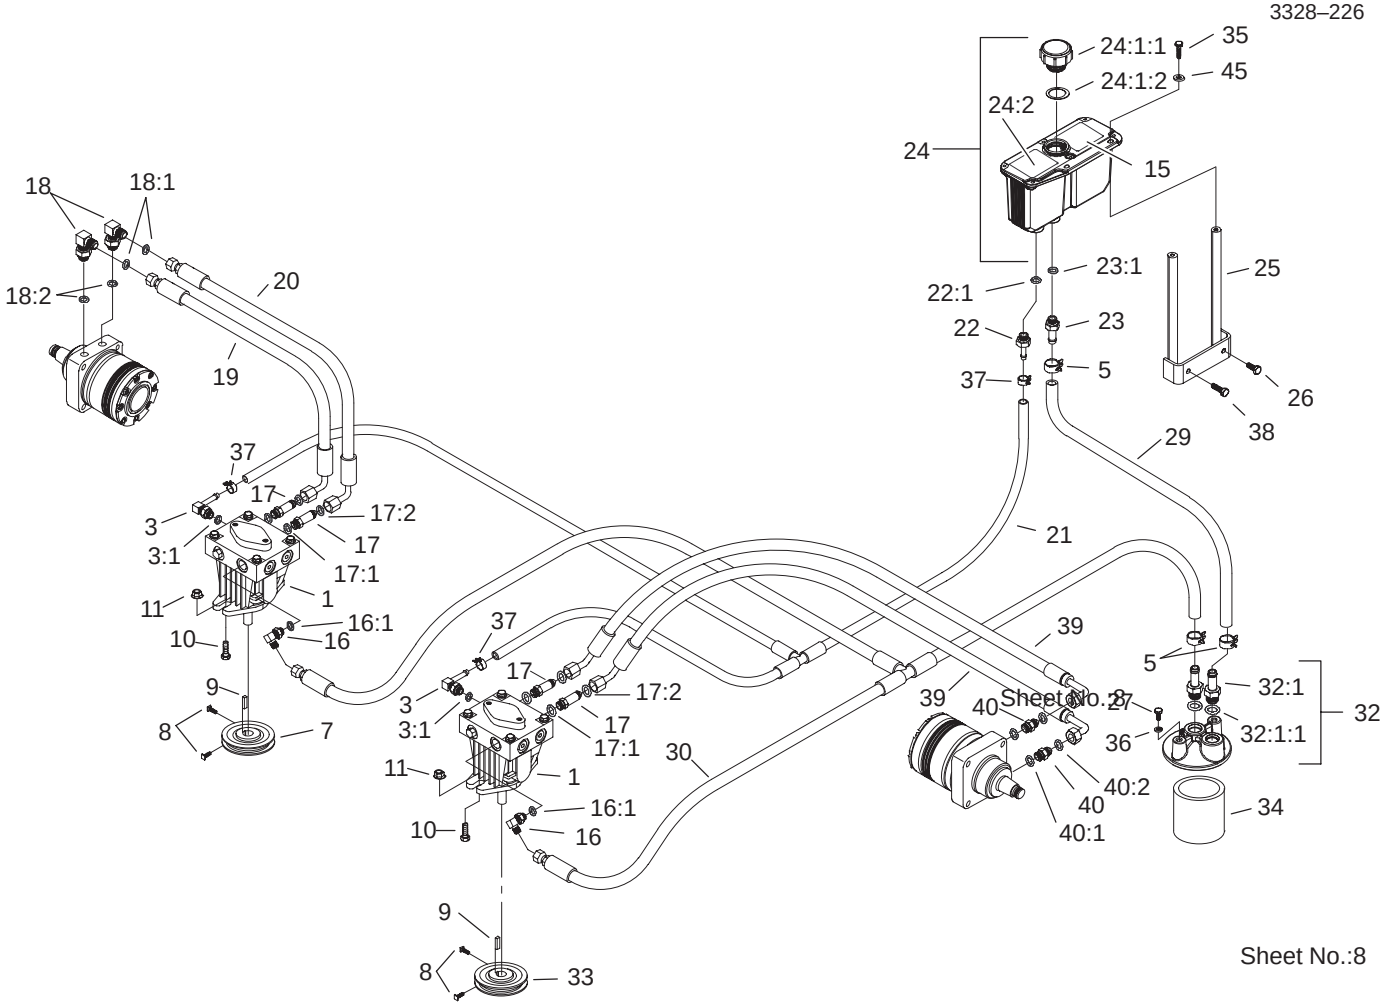


Hydraulic System Assembly

Ref. No.	Part No.	Qty.	Description
1	103–1942	2	Pump–Hydraulic
*1:1	105–6184	1	Seal Overhaul Kit
*1:2	105–6185	1	Plate–Valve
*1:8	103–2664	1	Input Shaft Kit
*1:9	103–2665	1	Thrust Bearing Kit
*1:10	103–2666	1	Cylinder Block Kit
*1:14	106–2053	1	Shock Valve Kit
3	103–1799	2	Elbow–90°
3:1	237–42	1	O–Ring
5	103–1988	3	Clamp–Hose
7	1–413010	2	Sheave W/Hub
8	1–803050	4	Screw–Set
9	1–807272	2	Key
10	323–7	4	Screw–HH
11	3290–357	4	Nut–HHF
15	103–2644	1	Decal–Exhaust
16	103–1802	2	Elbow–HYD, 90°
16:1	237–42	1	O–Ring
17	103–1940	4	Adapter–HYD, Straight
17:1	237–79	1	O–Ring
17:2	1–603992	1	O–Ring
18	1–633605	2	Fitting–HYD, 90°
18:1	1–603992	1	O–Ring
18:2	237–80	1	O–Ring
19	1–653186	1	Hose–Front
20	1–653187	1	Hose–RH, Rear

Ref. No.	Part No.	Qty.	Description
21	103–2357	1	Hydraulic Hose ASM
22	103–1801	1	Adapter–Straight
22:1	237–42	1	O–Ring
23	103–1912	1	Adapter–Straight
23:1	237–42	1	O–Ring
24	103–1947	1	HYD Reservoir ASM
☆24:1		1	Reservoir–HYD
24:1:1	103–1948	1	Cap–Reservoir, HYD
24:1:2	103–1949	1	Gasket–Cap
24:2	1–523552	1	Decal–Tank, HYD
25	103–3071–03	1	Stand–Reservoir
26	322–3	1	Screw–HH
27	321–3	2	Screw–HH
29	103–3077	1	Hydraulic Hose ASM
30	103–2930	1	Hydraulic Hose ASM
32	103–2889	1	Filter Head ASM
32:1	103–1912	2	Adapter–Straight
32:1:1	237–42	1	O–Ring
33	32128–20	2	Nut–HF
34	1–633750	1	Filter–HYD
34	1–633752	1	Filter–HYD, Winter
35	321–6	2	Screw–HH
36	1–805004	2	Washer–Lock
37	103–1716	3	Clamp–Hose
38	322–5	1	Screw–HH
39	103–1680	2	Hose–LH

* Not illustrated
☆ Not serviced separately

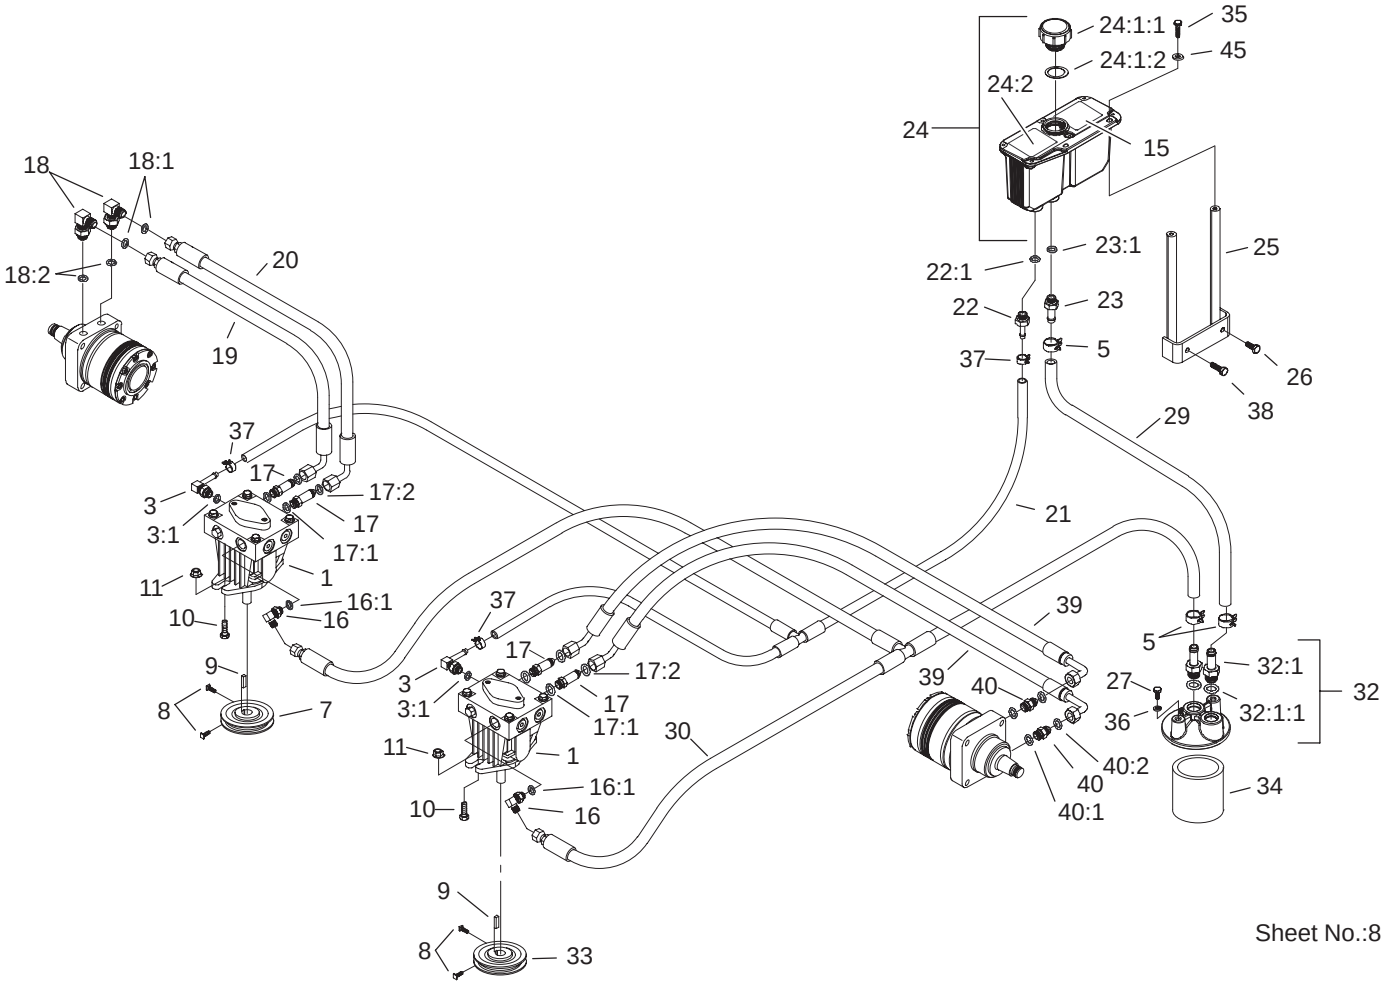


Sheet No.:8

Hydraulic System Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
40	1–603991	2	Fitting–Straight
40:1	237–80	1	O–Ring
40:2	1–603992	1	O–Ring
45	3256–22	2	Washer–Flat

Ref. No.	Part No.	Qty.	Description

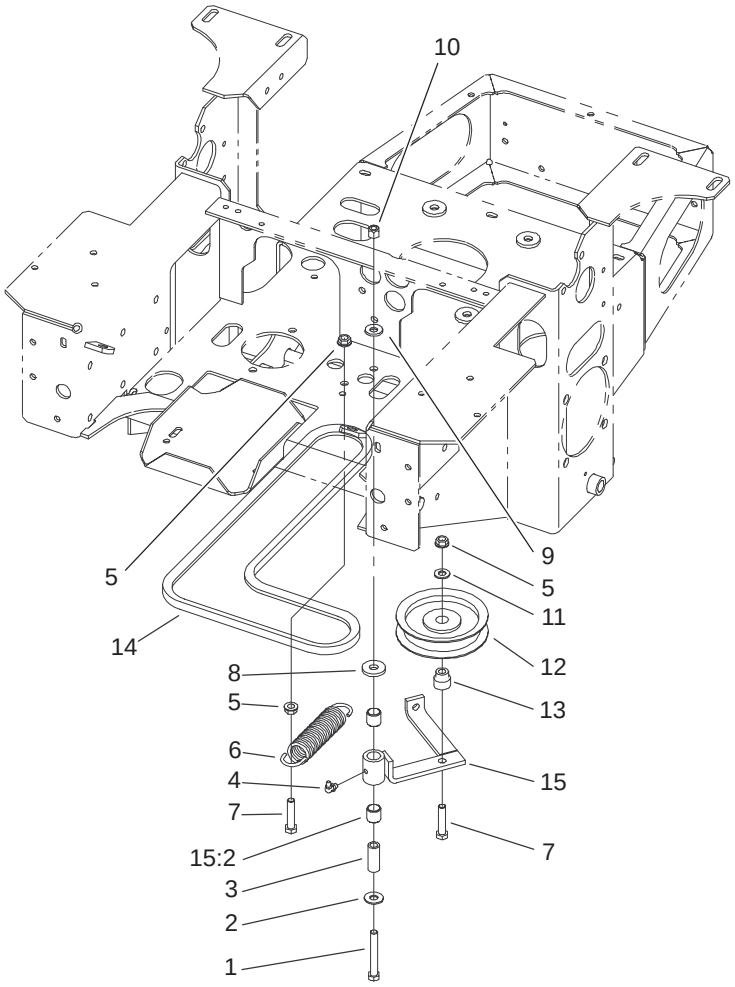


Sheet No.:9

Pump, Idler and Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	323–13	1	Screw–HH
2	3256–4	1	Washer–Flat
3	1–603044	1	Bushing
4	302–40	1	Fitting–Grease
5	3290–357	3	Nut–HHF
6	103–1767	1	Spring–Extension
7	323–9	2	Screw–HH
8	1–373034	1	Washer
9	98–5975	1	Washer–Belleville
10	3296–39	1	Nut–Lock, NI
11	3256–24	1	Washer–Flat
12	1–603843	1	Pulley–Idler
13	1–603496	1	Bushing–Idler
14	1–653580	1	Belt–Pump
15	1–654143	1	Idler Arm
15:2	1–513034	2	Sleeve–Bearing

Ref. No.	Part No.	Qty.	Description

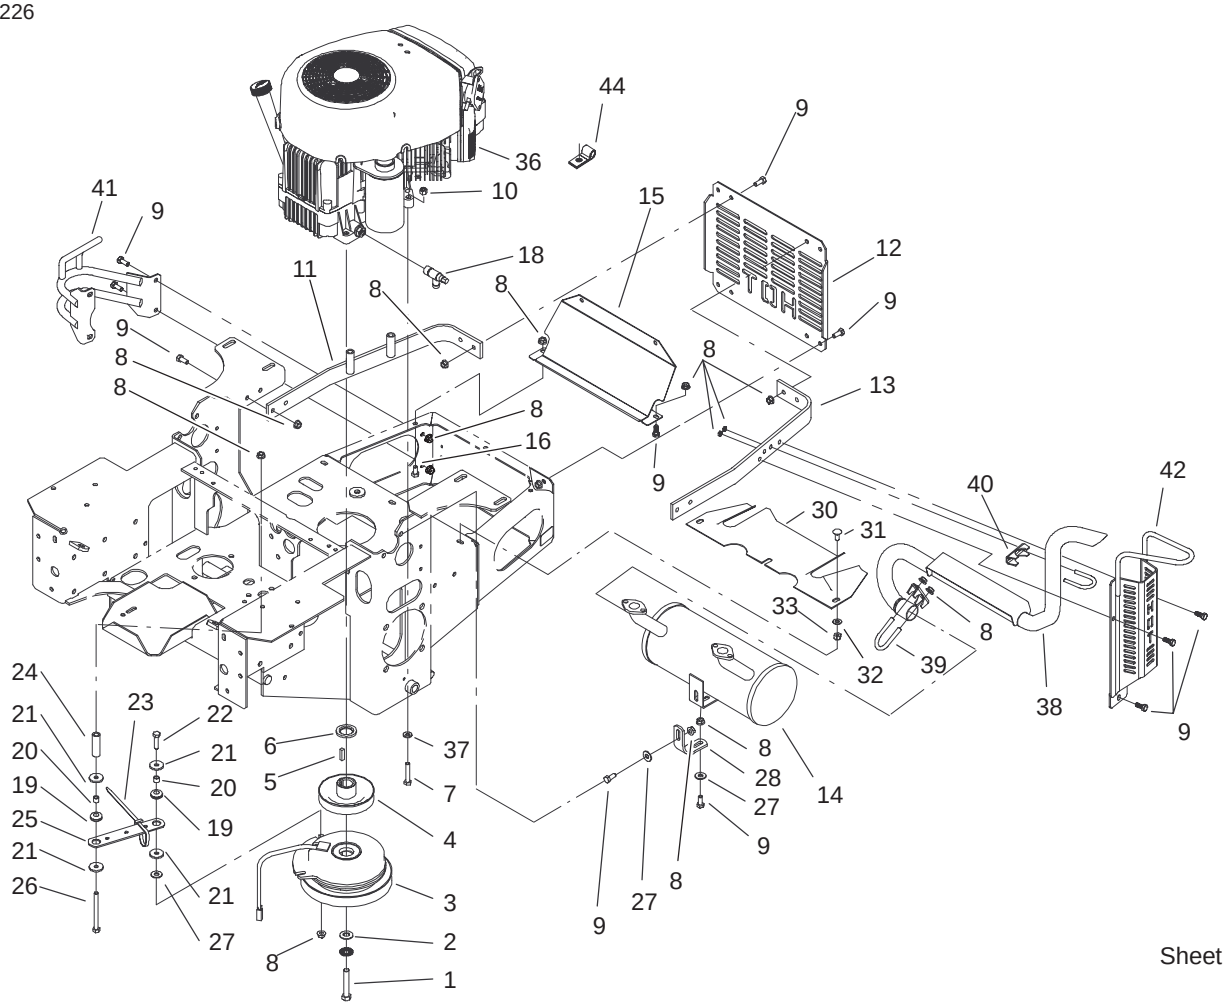


Sheet No.:10

Engine and Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	3212–10	1	Screw–HH
2	1–603610	2	Washer–Spring
3	103–0690	1	Clutch
4	1–653035	1	Sheave W/Hub
5	1–807259	1	Key
6	103–2308	1	Spacer–Crankshaft
7	322–9	4	Screw–HH
8	32128–20	27	Nut–HF
9	322–3	21	Screw–HH
10	32128–20	4	Nut–HF
11	103–3078–03	1	Strap–Guard, Engine RH
12	1–653095–03	1	Shield–Engine
13	103–2751–03	1	Strap–Guard, Engine LH
14	103–1323	1	Muffler
15	103–2560–03	1	Shield–Heat
16	322–2	4	Screw–HH
18	103–1963	1	Valve–Drain, Oil
19	1–633630	2	Grommet–Brake
20	1–633545	2	Spacer–Grommet
21	1–613235	4	Washer
22	322–6	1	Screw–HH
23	1–303335	2	Tie–Plastic
24	103–2614	1	Spacer
25	1–633543–03	1	Strap–Clutch, Brake

Ref. No.	Part No.	Qty.	Description
26	322–22	1	Screw–HH
27	3256–3	3	Washer–Flat
28	1–653196	1	Bracket–Support, Muffler
30	1–653539–03	1	Shield–Heat
31	3230–1	3	Screw–CARR
32	3256–23	3	Washer–Flat
33	3296–29	3	Nut–Lock, NI
☆36		1	Grp,Engine Components 23kc
37	1–303334	2	Washer–Spring
38	103–2599	1	Tailpipe
39	103–2630	1	Clamp
40	103–2631	1	Clamp
41	103–2564–03	1	RH Exhaust Guard ASM
42	103–2566–03	1	LH Exhaust Guard ASM
44	1–643312	1	Clip–Loom

☆ Not serviced separately

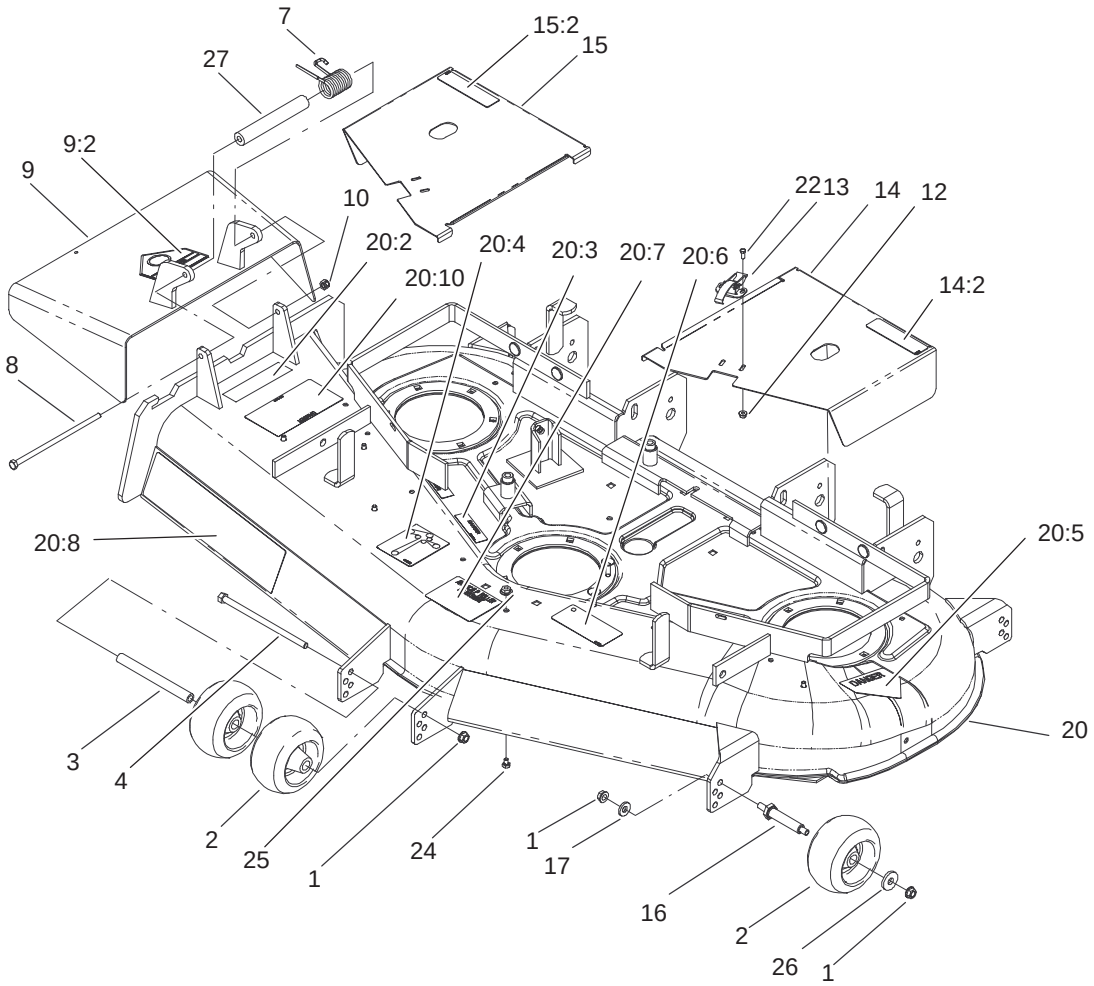


Sheet No.:14

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	3290–357	9	Nut–HHF
2	68–2730	6	Wheel–Gage
3	98–5967	1	Spacer
4	323–28	1	Screw–HH
7	104–8554	1	Spring–Torsion
8	322–50	1	Screw–HH
9	105–4623	1	Deflector ASM
9:2	93–1122	1	Decal–Danger
10	3296–29	1	Nut–Lock, NI
12	32128–17	4	Nut–Lock, Flange
13	249–21	2	Clamp–Slotted
14	99–3896	1	LH Cover ASM
14:2	67–5360	1	Decal–Danger
15	99–3895	1	RH Cover ASM
15:2	67–5360	1	Decal–Danger
16	99–2842	4	Spacer
17	98–5975	4	Washer–Belleville
20	105–1695	1	Deck ASM
☆20	106–5875	1	Z100/52” Deck ASM W/Decals
20:2	104–8569	1	Decal–Warning
20:3	98–5954	3	Decal–Missing, Cover
20:4	99–3943	1	Decal–Routing, Belt
20:5	43–8480	1	Decal–Danger
20:6	93–7818	1	Decal–Torque, Blade Bolt

Ref. No.	Part No.	Qty.	Description
20:7	98–3798	1	Decal–Wheel, Gage
20:8	98–5953	1	Decal–Sfs
20:10	66–1340	1	Decal–Danger
22	3290–321	4	Screw–HWH
24	321–1	6	Screw–HH
25	32128–33	6	Nut–HF
26	1–373034	4	Washer
27	105–4622	1	Spacer

☆ Not serviced separately

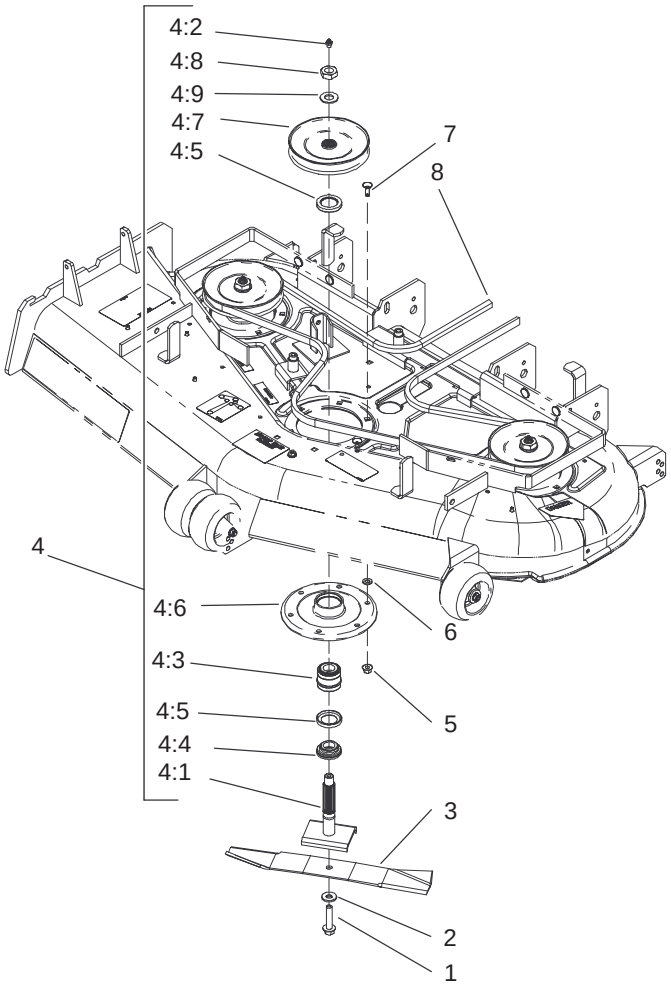


Sheet No.:15

Deck Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	92–5816	3	Bolt–Blade
2	1–513435	3	Washer–Spring
3	56–2390	3	Blade
4	100–3976	3	Spindle Housing ASM
4:1	100–3972	1	Spindle Shaft ASM
4:2	302–2	1	Fitting–Grease
4:3	46–8530	1	Bearing ASM
4:4	27–0950	1	Spacer
4:5	253–139	2	Seal–Oil
4:6	61–4160	1	Housing
4:7	100–3970	1	Pulley And Hub ASM
4:8	32146–20	1	Nut–Jam
4:9	7–4150	1	Washer
5	32128–21	18	Nut–HF
6	3256–24	6	Washer–Flat
7	3231–22	18	Screw–CARR
8	99–3904	1	Belt–Deck

Ref. No.	Part No.	Qty.	Description

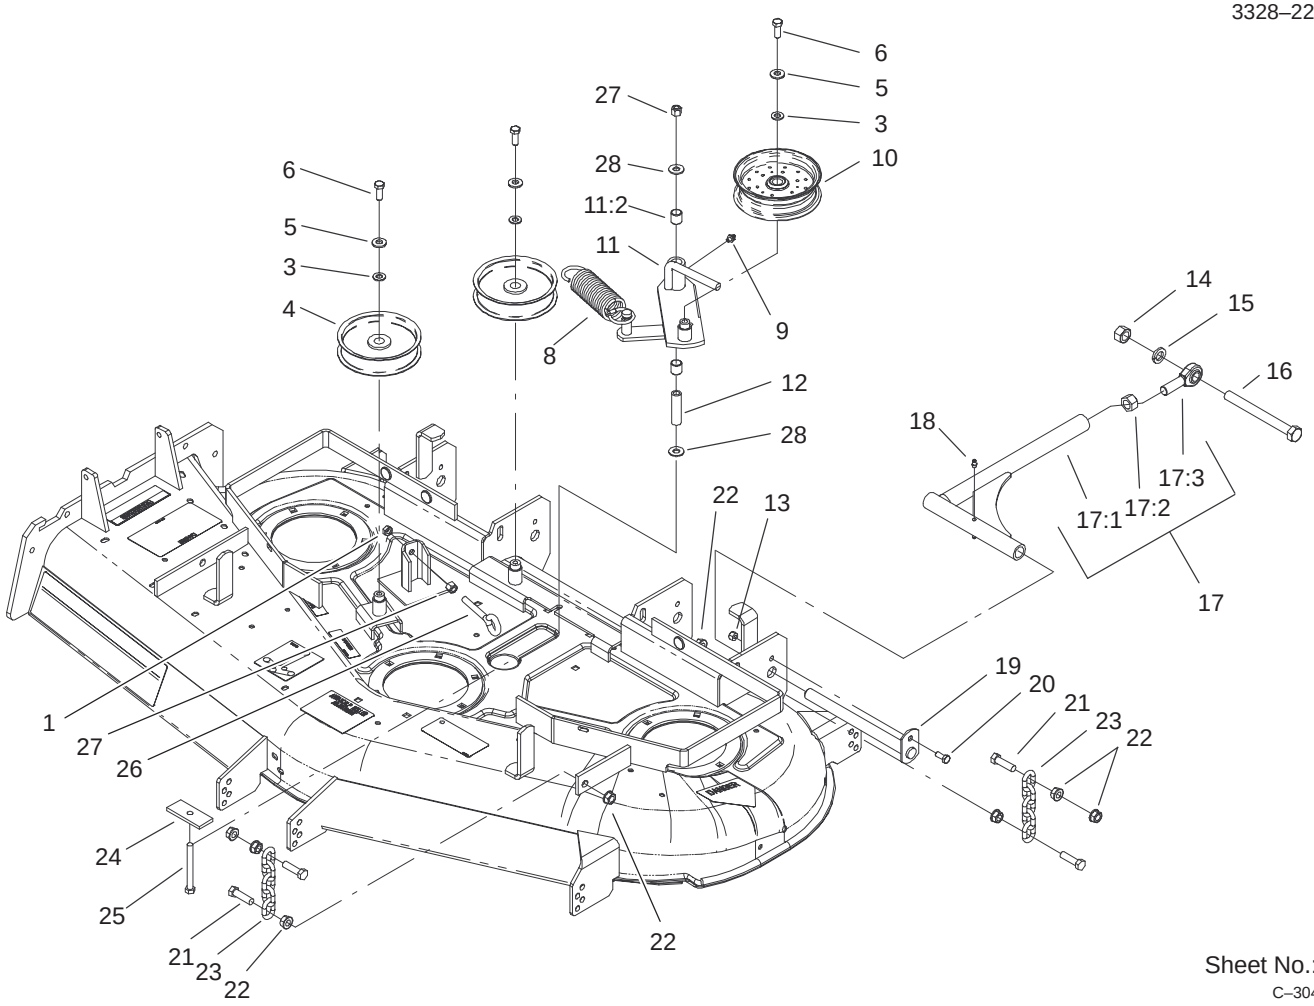


Sheet No.:16
C–3040

Idler, Pulley/Lift Strut, Chain Assembly

Ref. No.	Part No.	Qty.	Description
1	3217–7	1	Nut–Hex
3	3256–24	3	Washer–Flat
4	1–613098	2	Pulley–Idler
5	98–5975	3	Washer–Belleville
6	323–6	3	Screw–HH
8	1–633151	1	Spring–Extension
9	302–40	1	Fitting–Grease
10	1–413099	1	Pulley–Idler
11	99–3879	1	Idler Arm ASM
11:2	1–513034	2	Sleeve–Bearing
12	1–603384	1	Bushing–Pivot, Idler
13	3296–29	2	Nut–Lock, NI
14	3217–11	2	Nut–Hex
15	3253–8	2	Washer–Lock
16	1–800344	2	Screw
17	103–1081	2	Strut ASM
17:1	103–1072–01	1	Strut–Deck
17:2	3219–6	1	Nut–Hex
17:3	1–633029	1	Balljoint–Spherical
18	302–19	4	Fitting–Grease
19	1–632199–01	2	Pin–Strut, Deck
20	322–3	2	Screw–HH
21	1–800811	8	Screw–Cap, HH
22	32128–37	16	Nut–HF
23	1–633447	4	Chain–Lift, Deck
24	99–3946–01	1	Plate–Retainer, Bolt

Ref. No.	Part No.	Qty.	Description
25	1–800805	1	Screw–HH
26	94–2547	1	Bolt–Eye
27	3296–39	2	Nut–Lock, NI
28	1–809107	2	Washer–Hardened

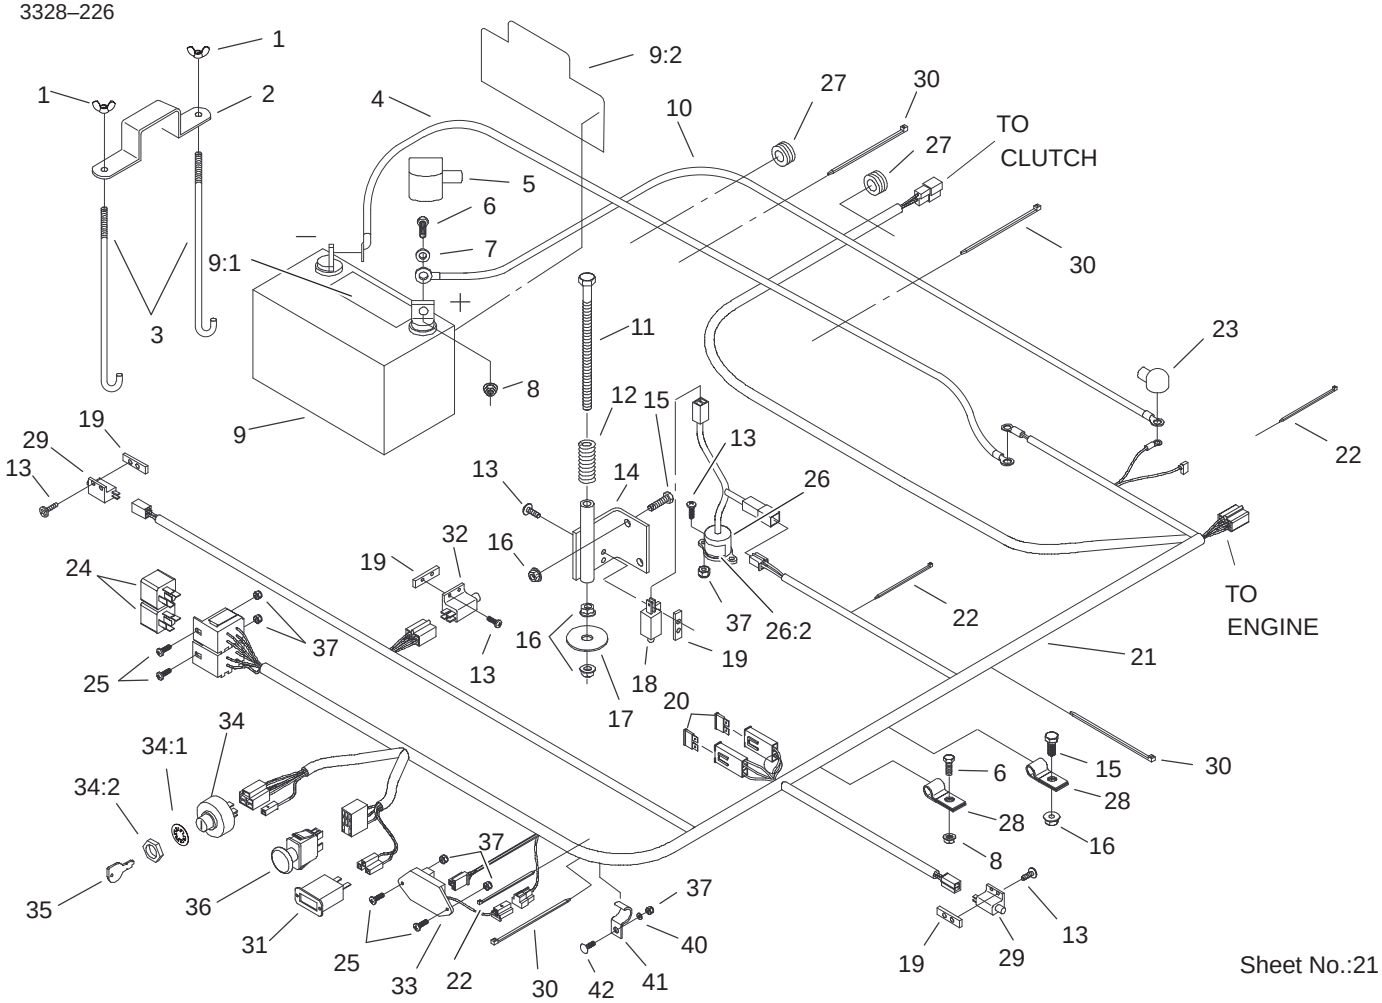



Electrical System Assembly

Ref. No.	Part No.	Qty.	Description
1	1–543792	2	Wingnut
2	1–633652–03	1	Strap–Holddown
3	1–633651	2	Bolt–Holddown
4	103–0705	1	Cable–Ground, Negative
5	1–543391	1	Insulator–Battery
6	321–4	3	Screw–HH
7	3256–2	2	Washer–Flat
8	32128–33	3	Nut–HF
9	105–1692	1	Battery
9:1	104–4163	1	Decal–Battery
9:2	104–4164	1	Decal–Battery
10	1–523281	1	Wire–Starter
11	1–800282	1	Screw–HH
12	1–523415	1	Spring–Switch, Seat
13	3290–500	10	Screw–PPH
14	1–652072–03	1	Bracket–Switch, Seat
15	322–3	3	Screw–HH
16	32128–20	5	Nut–HF
17	1–653036	1	Washer
18	1–513152	1	Switch–Closed, Normally
19	1–633181	4	Plate–Tapped
20	1–816001	2	Fuse–Type, Blade
21	103–0595	1	Harness–Wire
22	1–303287	2	Tie–Plastic

Ref. No.	Part No.	Qty.	Description
23	1–543393	1	Insulator–Solenoid
24	1–643275	2	Relay
25	1–807513	4	Bolt–CARR
26	1–644427	1	Tilt Switch ASM
26:2	1–643401	1	Decal–Switch, Mercury
27	1–543286	2	Grommet
28	1–633396	2	Clip–Loom
29	1–513051	2	Switch–Open, Normally
30	1–303335	4	Tie–Plastic
31	1–513374	1	Meter–Hour
32	1–633111	1	Switch
33	100–6186	1	Module–Delay, Seat
34	88–9830	1	Key Switch ASM
34:1	3254–5	1	Washer–Lock, Internal
34:2	218–461	1	Nut–HH
35	63–8360	2	Key–Ignition
36	1–633673	1	Switch–Delta
37	3296–2	7	Nut–Lock
40	3256–14	1	Washer–Flat
41	103–1193	1	Clip–Half, Loom
42	1–807533	1	Bolt–CARR

Electrical Schematic

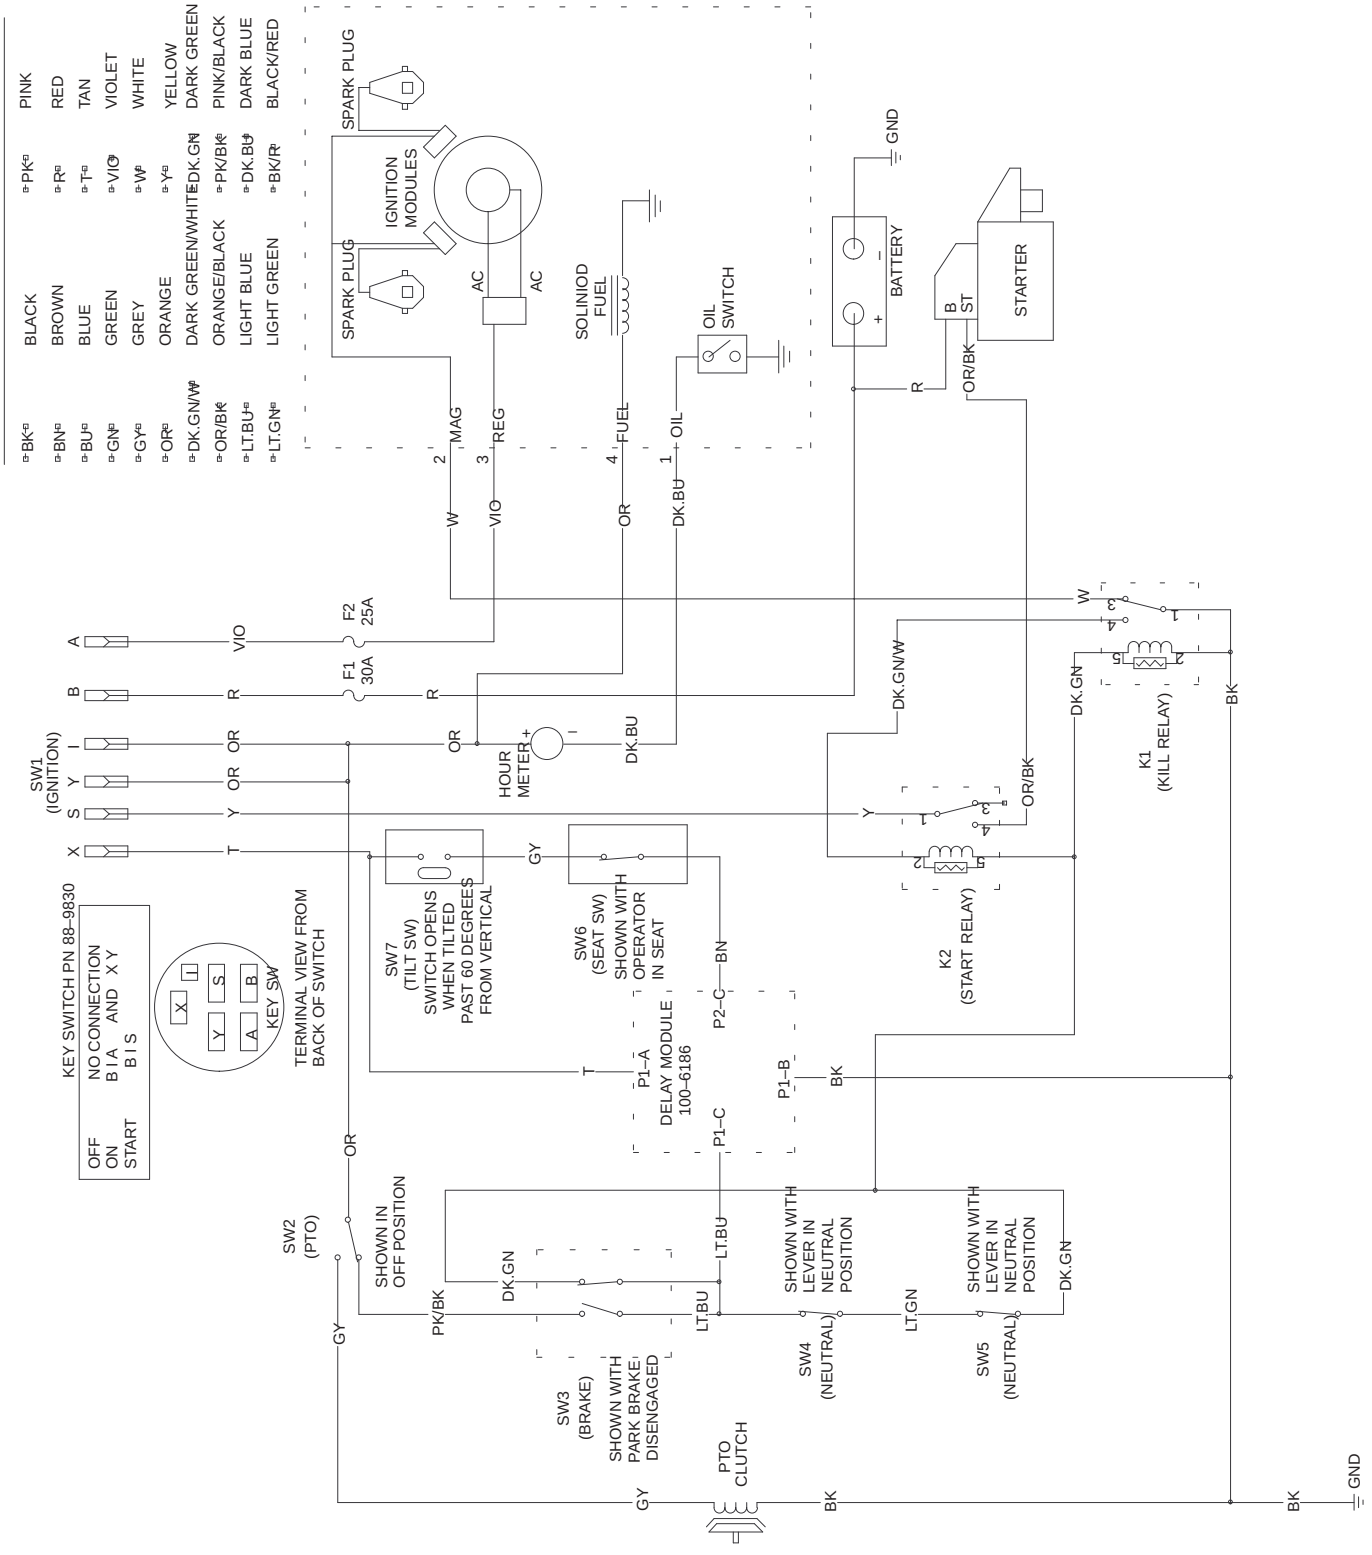

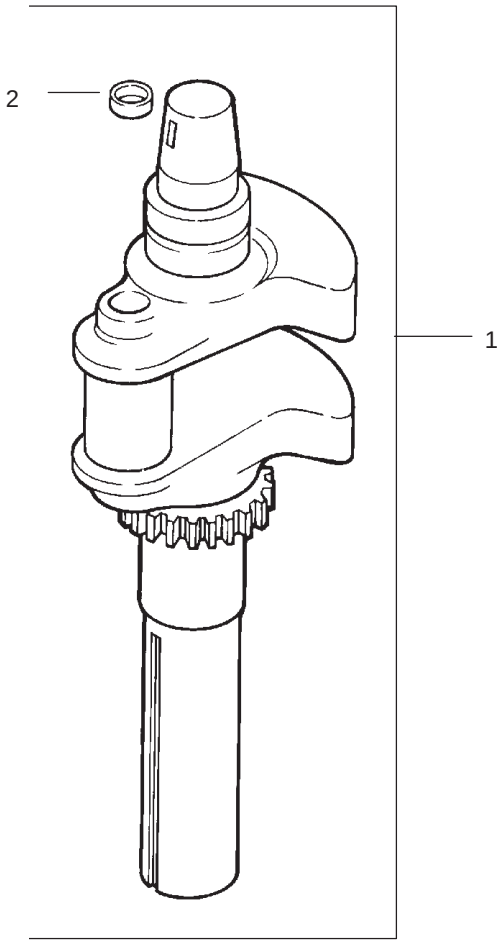


Crankshaft Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 014 32–S	1	Crankshaft (Includes 2)
2	52 139 09–S	1	Plug, cup

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kohler

2

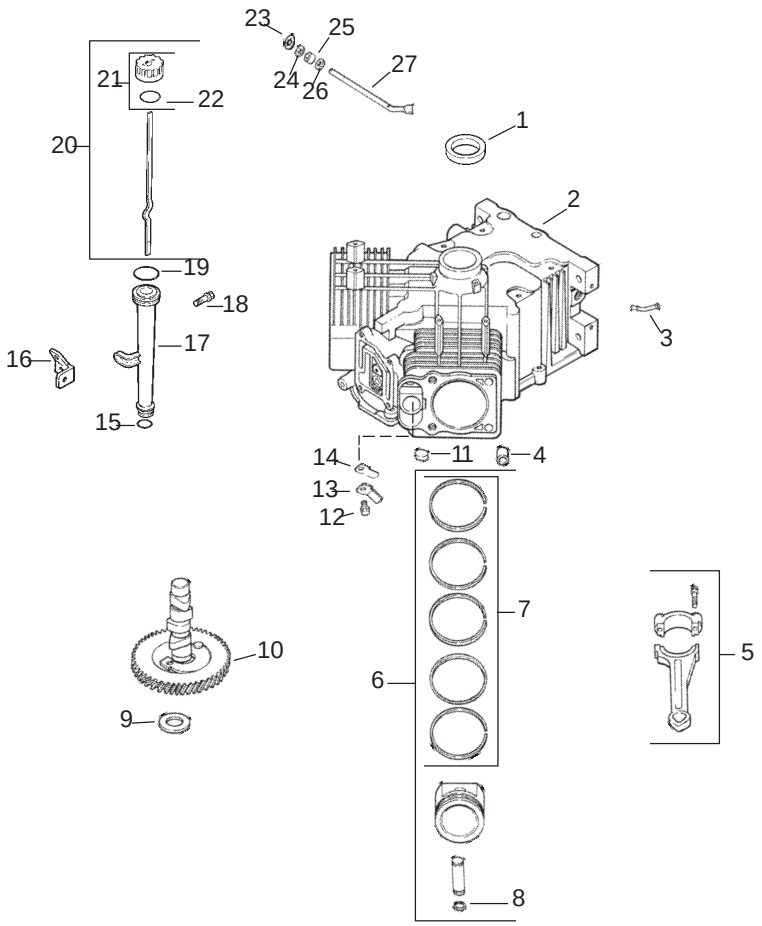


Crankcase Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 032 01–S	1	Seal, oil front
2		1	Crankcase (Service with Miniblock 24 782 14)
3	24 294 13–S	1	Fitting
4	24 380 13–S	6	Pin, locating
5	24 067 13–S	2	Connecting Rod (Std.)
	24 067 14–S	2	Connecting Rod (.25)
6	24 874 09–S	2	Piston w/Ring Set (Std.) (Includes 7,8)
	24 874 10–S	2	Piston w/Ring Set (.25)
	24 874 11–S	2	Piston w/Ring Set (.50)
	24 874 15–S	2	Piston w/Ring Set (.08)
7	24 108 08–S	2	Ring Set (Std. & .08)
	24 108 09–S	2	Ring Set (.25)
	24 108 10–S	2	Ring Set (.50)
8	24 018 01–S	4	Retainer, piston pin
9	12 422 09–S	AR	Shim, camshaft – red
	12 422 13–S	AR	Shim, camshaft – black
	12 422 07–S	AR	Shim, camshaft – white
	12 422 08–S	AR	Shim, camshaft – blue
	12 422 10–S	1	Shim, camshaft – yellow
	12 422 11–S	AR	Shim, camshaft – green
	12 422 12–S	AR	Shim, camshaft – gray
10	24 012 10–S	1	Camshaft
11	52 139 09–S	1	Plug, cup
12	M–545010–S	2	Screw, hex. flange M5x0.8x10
13	24 018 04–S	2	Retainer, reed
14	24 402 05–S	2	Reed, breather
15	12 153 01–S	1	O–Ring, lower oil fill tube
16	24 126 19–S	1	Bracket, oil fill tube
17	12 123 04–S	1	Tube, oil fill
18	M–545016–S	1	Screw, hex. flange M5x0.8x16
19	12 153 02–S	1	O–Ring, upper oil fill tube
20	24 038 04–S	1	Dipstick assembly (Includes 21,22)
21	25 755 13–S	1	Kit, oil fill cap (Includes 22)
22	12 153 03–S	1	O–Ring, dipstick
23	24 018 09–S	1	Retainer, ring
24	M–931010–S	1	Washer, plain 9 mm

Obtain Parts from Kohler

2

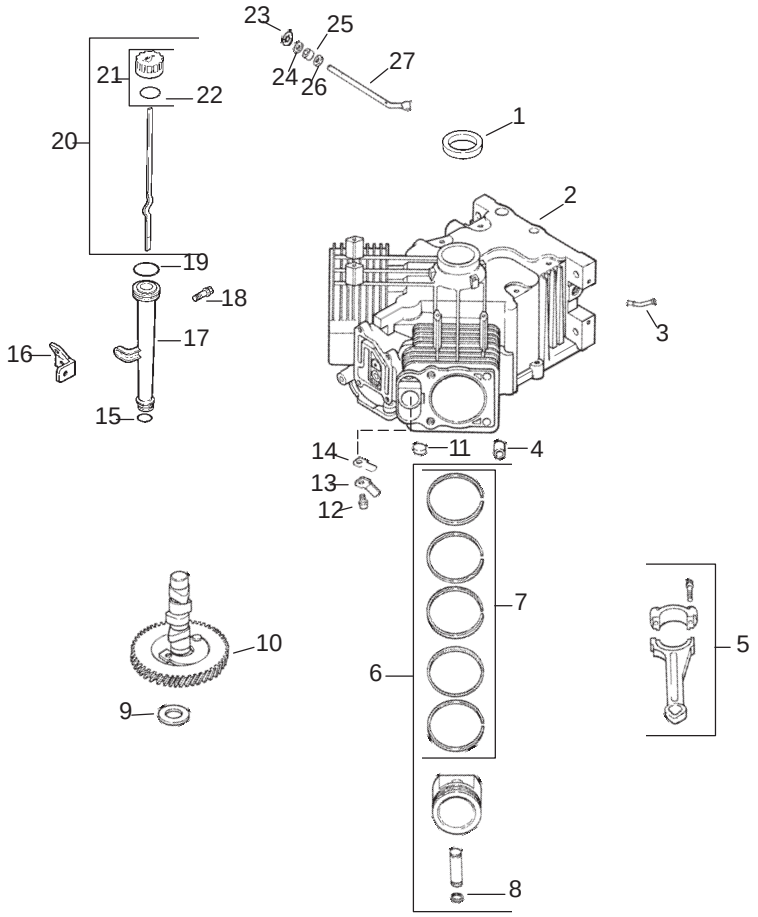


Crankcase Assembly (Continued)
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
25	28 032 09–S	1	Seal, governor cross shaft
26	24 468 15–S	1	Washer, plain 1/4”
27	24 144 33–S	1	Shaft, governor cross

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kohler

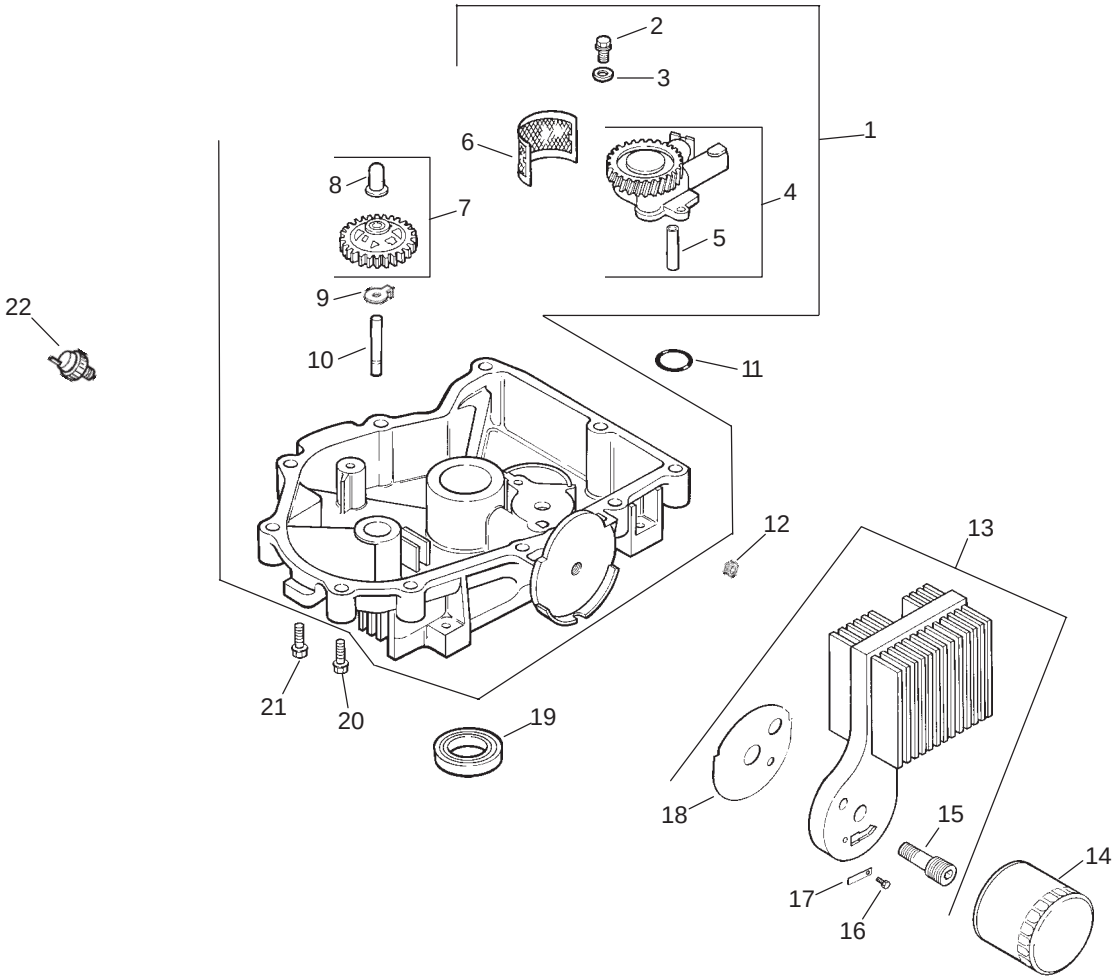


Oil Pan/Lubrication Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 199 07–S	1	Pan, oil assembly (Includes 2–10)
2	M–645025–S	2	Screw, hex. flange M6x1.0x25
3	M–631005–S	2	Washer, plain 6 mm
4	24 393 08–S	1	Oil pump assembly (Includes 5)
5	24 123 05–S	1	Tube, oil pickup
6	24 162 26–S	1	Screen, oil
7	24 043 12–S	1	Kit, governor gear w/pin (Includes 8)
8	12 380 01–S	1	Pin, governor regulating
9	52 448 02–S	1	Tab, locking
10	12 144 02–S	1	Shaft, governor gear
11	24 153 08–S	1	O–Ring
12	25 139 62–S	1	Plug, hex. ctsk. 3/8”
13	24 755 52–S	1	Kit, oil cooler (Includes 15–18)
14	52 050 02–S	1	Filter, oil
15	28 136 01–S	1	Nipple, oil filter
16	M–448010–S	1	Screw, hex. cap M4x0.7x10
17.	24 402 02–S	1	Reed, oil relief

Ref. No.	Part No.	Qty.	Description
18	24 041 29–S	1	Gasket, oil filter adapter
19	52 032 08–S	1	Seal, oil (PTO end)
20	24 086 17–S	1	Screw, hex. flange M8x1.25x45
21	24 086 16–S	9	Screw, hex. flange M8x1.25x45
22	24 099 03–S	1	Switch, pressure
*	25 113 05–S	1	Decal, oil sentry
*	12 454 03–S	1	Tie, wire

* Not Illustrated

Obtain Parts from Kohler

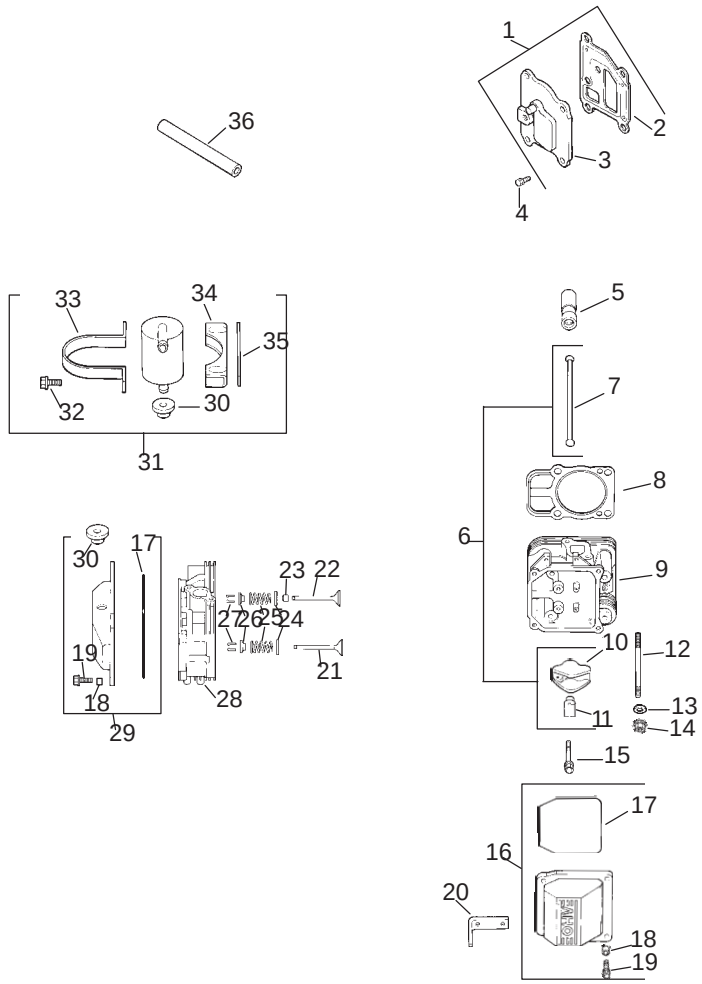


Head/Valve/Breather Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 033 03–S	1	Kit, breather cover w/gasket (Includes 2,3)
2	24 041 23–S	1	Gasket, breather
3	24 096 59–S	1	Cover, breather
4	M–645020–S	4	Screw, hex. flange M6x1.0x20
5	25 351 01–S	4	Lifter, valve
6	24 755 66–S	1	Kit, valve train (Includes 7,10,11)
7	24 411 05–S	4	Rod, push
8	24 041 40–S	2	Gasket, cylinder head
9	24 318 70–S	1	Head assembly, #2 cylinder
10	25 186 01–S	4	Arm, rocker
11	24 599 01–S	4	Pivot, rocker arm
12	24 072 09–S	8	Stud, cylinder head M8x1.25x20, M10x1.5x33, 105 mm long
13	24 468 16–S	8	Washer, flat 8 mm
14	24 100 10–S	8	Nut, hex. flange M8x1.25
15	M–640034–S	4	Screw, hex. flange M6x1.0x34

Ref. No.	Part No.	Qty.	Description
16	24 755 74–S	1	Kit, valve cover – plain (Includes 17–19)
17	24 153 16–S	1	O–Ring
18	24 112 08–S	4	Spacer
19	M–651030–S	4	Screw, hex. flange M6x1.0x30
20	24 445 01–S	1	Strap, lifting
21	24 016 01–S	2	Valve, exhaust (Std.)
	24 016 02–S	2	Valve, exhaust (.25) (2)
22	24 017 01–S	2	Valve, intake (Std.)
	24 017 02–S	2	Valve, intake (.25)
23	66 032 05–S	2	Seal, valve stem
24	235011–S	4	Retainer, spring
25	24 089 02–S	4	Spring, valve
26	12 173 01–S	4	Cap, valve spring
27	12 755 03–S	4	Kit, retainer
28	24 318 67–S	1	Head assembly, #1 cylinder
29	24 755 76–S	1	Kit, valve cover – breather (Includes 17–19,30)
30	25 313 02–S	1	Grommet, rubber
31	24 755 57–S	1	Kit, breather separator (Includes 30,32–35)

Obtain Parts from Kohler

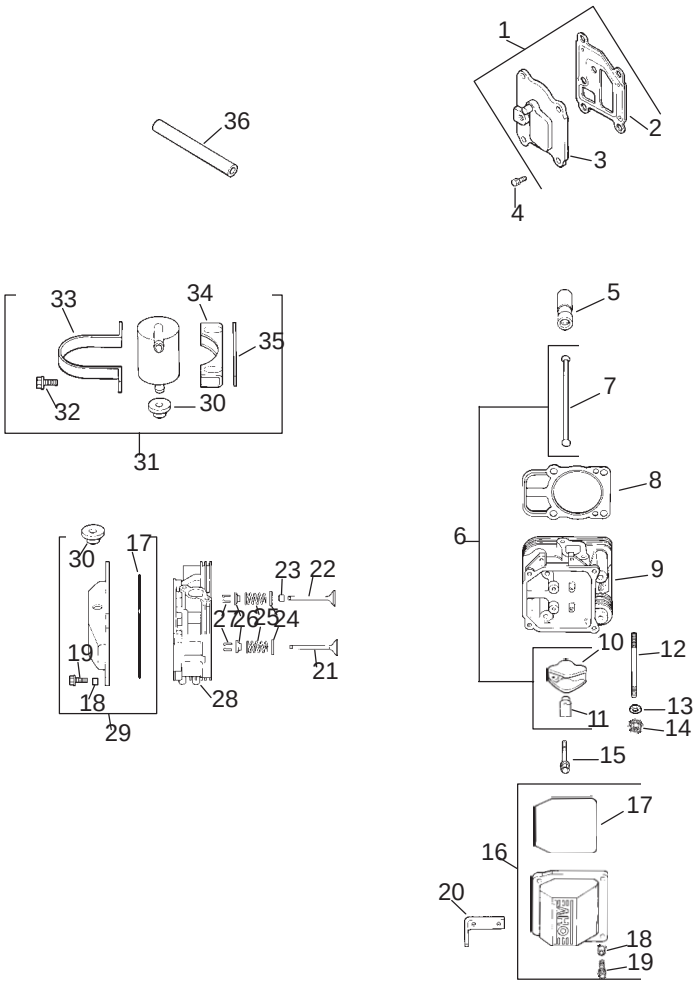


Head/Valve/Breather Assembly (Continued)
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
32	M–545016–S	2	Screw, hex. flange M5x0.8x16
33	24 445 02–S	1	Strap, breather
34	24 126 44–S	1	Bracket, breather separator
35	24 112 12–S	1	Spacer
36	24 326 49–S	1	Hose, breather

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kohler

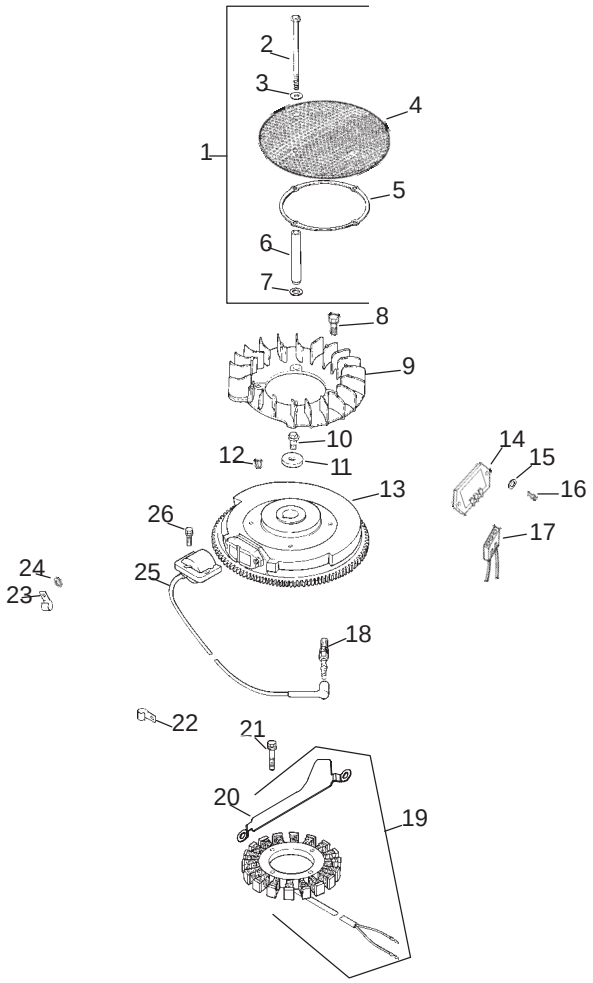


Ignition/Electrical Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 755 79–S	1	Kit, chopper screen (Includes 2–7, 41 03710–S)
2	M–603100–S	4	Screw, hex. hd. M6x1.0x100 (4)
3	X–25–53–S	1	Washer, plain
4	24 162 25–S	1	Screen, grass
5	24 141 06–S	1	Ring, support
6	24 112 14–S	4	Spacer
7	24 468 11–S	4	Washer, spring 10 mm
8	25 086 47–S	4	Bolt, shoulder M6x1.0x16
9	24 157 03–S	1	Fan
10	12 086 14–S	1	Screw, hex. flange M10x1.5x46
11	12 468 03–S	1	Washer, plain 3/8”
12	X–42–15–S	1	Key
13	24 025 04–S	1	Flywheel
14	25 403 03–S	1	Rectifier–regulator
15	X–25–92–S	2	Washer, plain 3/16”
16	24 086 18–S	2	Screw, phillips hd. 11–16x7/8
17	236602–S	1	Connector (3 contact)
18.	12 132 06–S	2	Spark Plug

Ref. No.	Part No.	Qty.	Description
19	54 755 09–S	1	Kit, 15 amp stator (Includes 20)
20	24 126 71–S	1	Bracket, stator wire
21	M–548025–S	2	Screw, hex. cap M5x0.8x25
22	235173–S	1	Clip, cable
23	48 154 02–S	1	Clip, cable
24	X–25–63–S	1	Washer, plain 1/4”
25	24 584 01–S	2	Module, ignition
26	M–561025–S	4	Screw, hex. flange M5x0.8x20
*	X–22–11–S	1	Washer, lock 1/4” (used to ground rectifier–regulator)
*	4 176 07–S	1	Harness, wiring
*	24 518 12–S	1	Lead, black (rectifier–regulator 5” – 12 gauge – insulated grip barrel eyelets)
*	41 037 10–S	1	Nameplate, service
*	25 454 03–S	3	Tie, wire

* Not Illustrated

Obtain Parts from Kohler

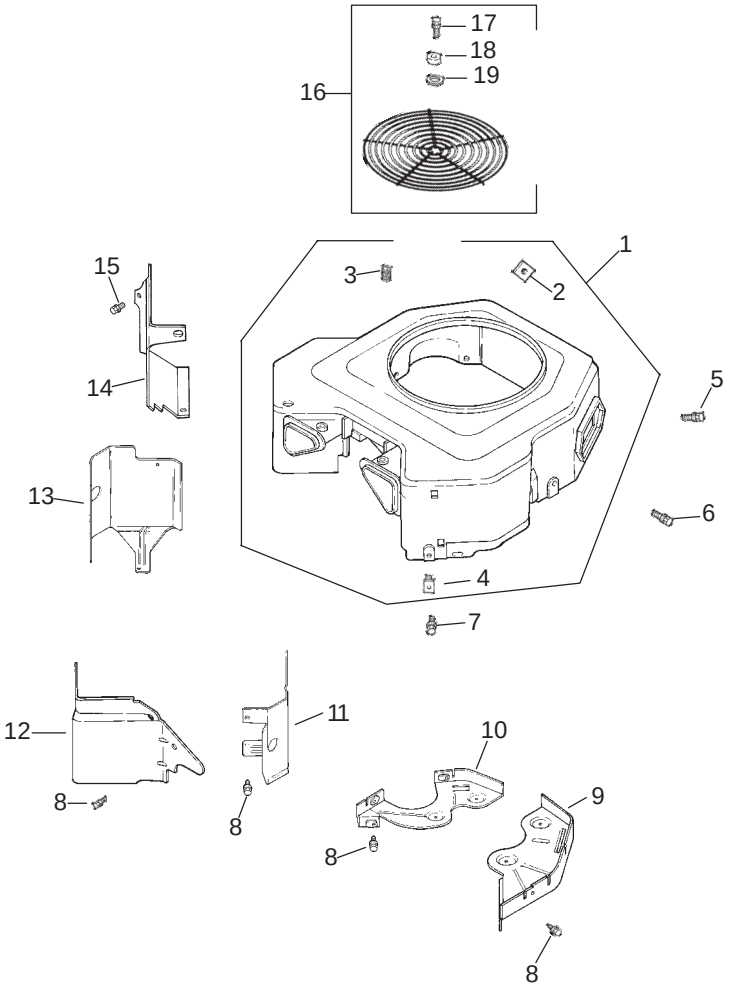


Blower Housing Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 027 119–S	1	Housing, blower (Includes 2–4 & 24 332 01–S)
2	24 100 01–S	2	Nut, plastic
3	25 086 43–S	1	Screw, set
4	24 100 02–S	2	Nut, plastic
5	M–545016–S	3	Screw, hex. flange M5x0.8x16
6	M–551016–S	1	Screw, hex. flange M5x0.8x16
7	M–545020–S	4	Screw, hex. flange M5x0.8x20
8	M–645016–S	6	Screw, hex. flange M6x1.0x16
9	24 146 18–S	1	Plate, backing – # 2 side
10	24 146 20–S	1	Plate, backing – # 1 side
11	24 063 20–S	1	Baffle, cylinder barrel – # 2 side
12	24 063 14–S	1	Baffle, valley – #2 side
13	24 063 58–S	1	Baffle, cylinder barrel– # 1 side
14.	24 063 23–S	1	Baffle, valley – #1 side

Ref. No.	Part No.	Qty.	Description
15	M–545010–S	2	Screw, hex. flange M5x0.8x10
*	24 332 01–S	3	Insert, threaded
*	24 096 85–S	1	Cover, blower housing (Used to guide breather hose through opening in blower housing)
*	24 113 90–S	1	Decal, 23 HP

* Not Illustrated

Obtain Parts from Kohler

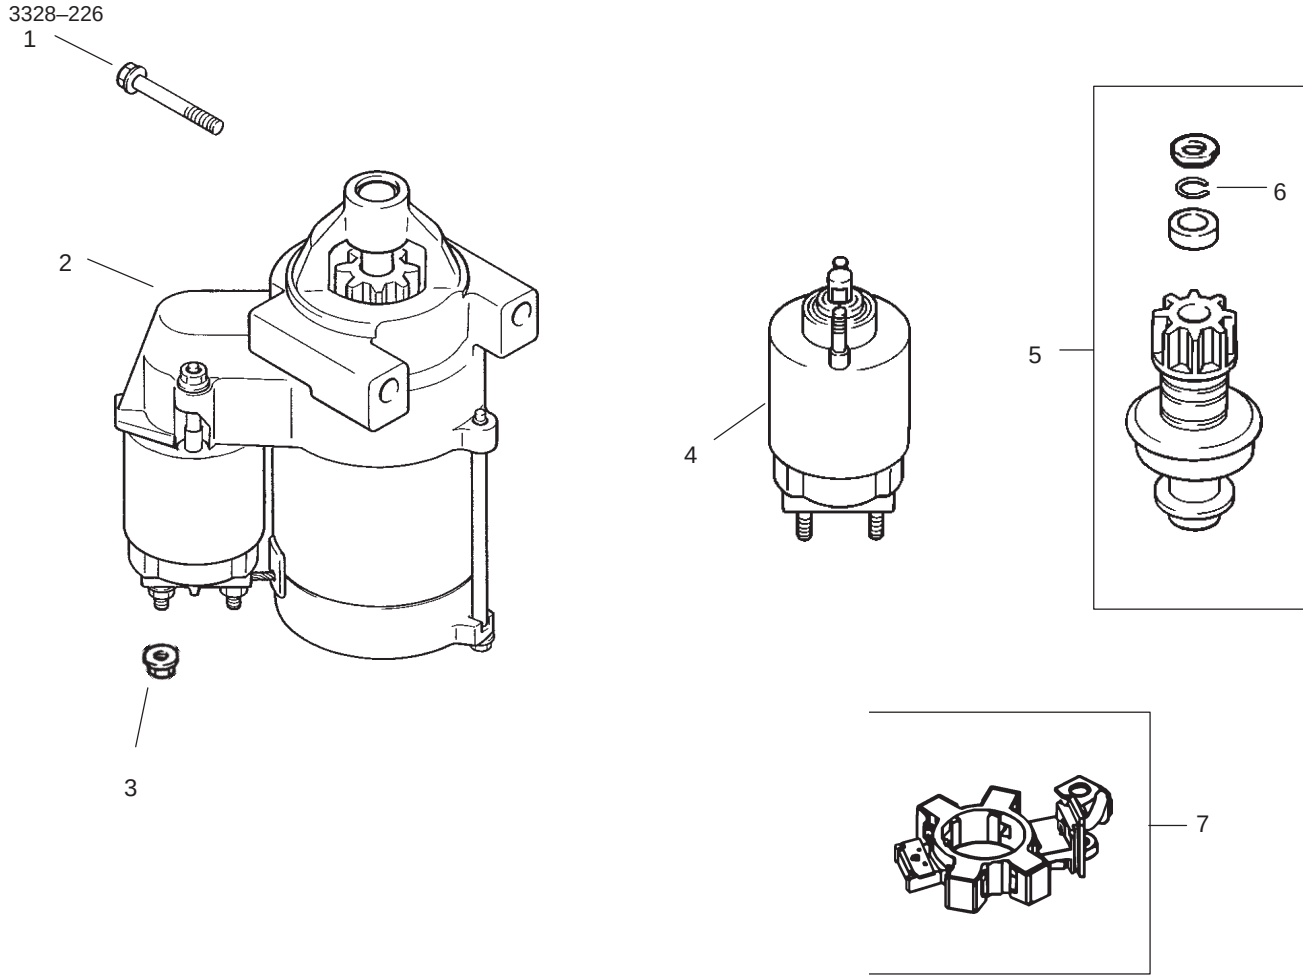


Starter Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	M–839080–S	2	Screw, hex. flange M8x1.25x80
2	25 098 08–S	1	Starter, solenoid (Includes 4–7)
3	M–841080–S	1	Nut, hex. flange M8x1.25
4	25 435 04–S	1	Solenoid
5	25 755 33–S	1	Kit, pinion drive (Includes 6)
6	25 141 05–S	1	Ring
7	25 221 01–S	1	Kit, brush

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kohler

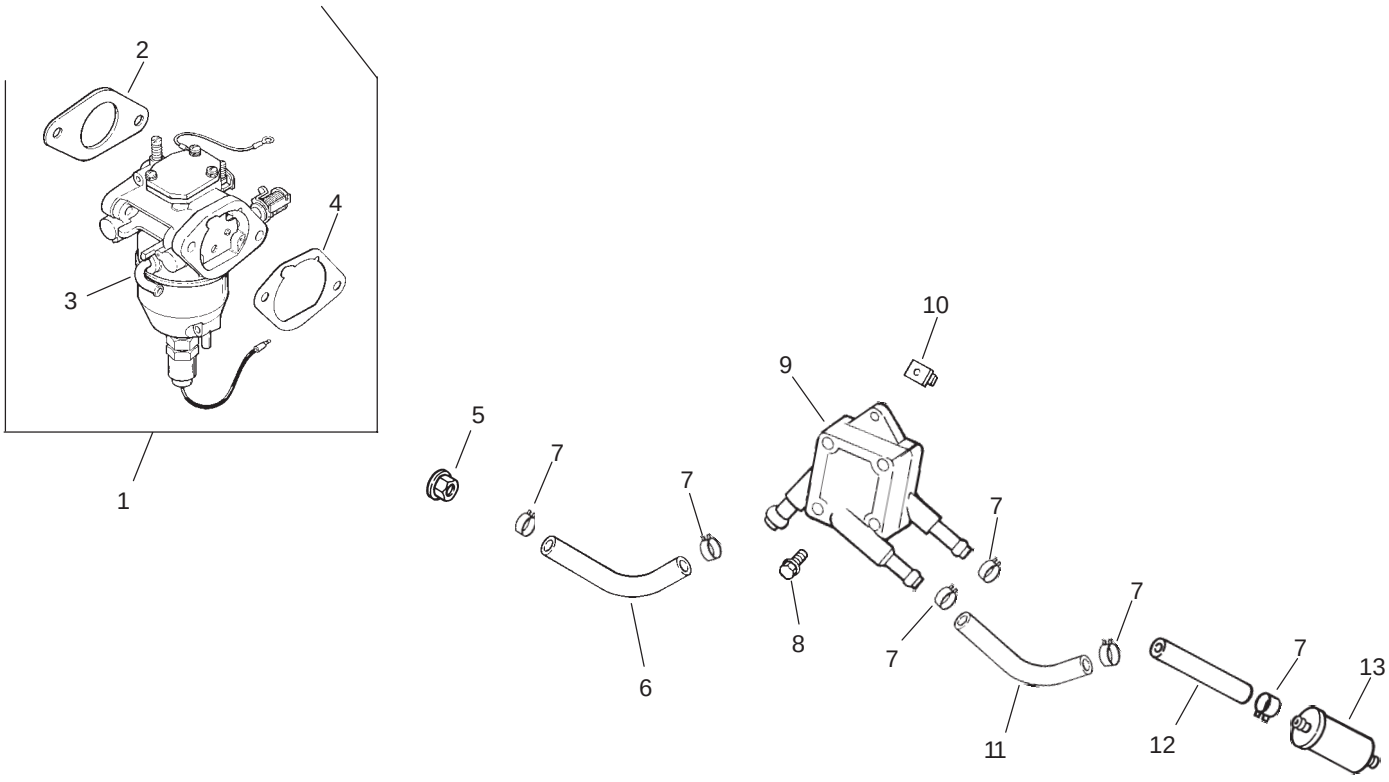


Fuel System Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 853 95–S	1	Kit, carburetor w/gaskets (Includes 2–4)
2	24 041 15–S	1	Gasket, carburetor
3	24 053 95	1	Carburetor assembly (For information only not available separately) (Service with kits 24 757 36–S & 24 757 38–S)
4	24 041 14–S	1	Gasket, air cleaner base
5	M–641060–S	2	Nut, hex. flange M6x1.0
6	52 353 22–S	1	Line, fuel 12”
7	25 237 14–S	6	Clamp, hose
8	24 086 12–S	2	Screw, hex. cap M6x1.7x18
9	24 393 16–S	1	Pump, fuel
10	24 100 01–S	2	Nut, plastic
11	24 353 03–S	1	Line, fuel 10–5/8”
12	25 353 32–S	1	Line, fuel 9–1/2”
13.	25 050 03–S	1	Filter, fuel

Ref. No.	Part No.	Qty.	Description
*	24 431 03–S	1	Sleeve, insulating (use to insulate 25 353 32–S fuel line)
*	24 757 36–S	1	Kit, service choke repair
*	24 757 38–S	1	Kit, service gasket repair

* Not Illustrated

Obtain Parts from Kohler

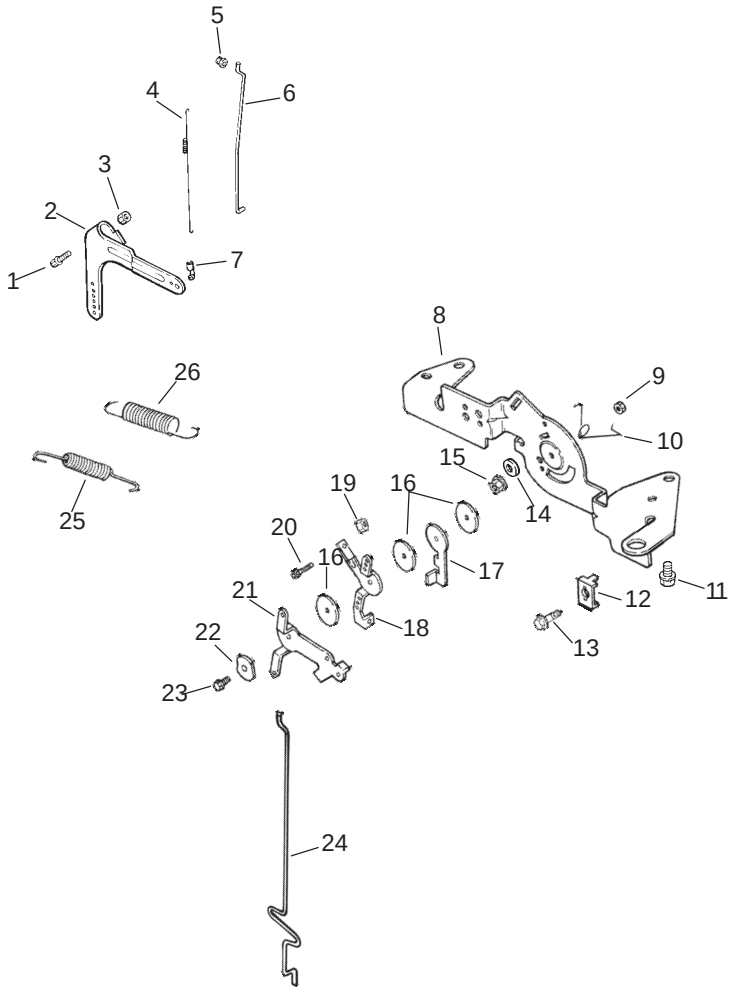


Engine Control Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 211 03–S	1	Bolt, rd. hd. sq. neck M6x1.0x25
2	24 090 33–S	1	Lever, governor
3	M–641060–S	1	Nut, hex. flange M6x1.0
4	24 089 01–S	1	Spring, linkage
5	25 158 08–S	1	Bushing, linkage retaining
6	24 079 04–S	1	Linkage, throttle
7	25 158 11–S	1	Bushing, throttle linkage
8	24 126 56–S	1	Bracket, control
9	M–547050–S	1	Nut, hex. flange
10	24 089 03–S	1	Spring, choke
11	M–645016–S	4	Screw, hex. flange M6x1.0x16
12	12 237 01–S	2	Clamp, cable
13	M–545016–S	3	Screw, hex. flange M5x0.8x16
14	X–20–1–S	1	Washer, lock
15	M–541050–S	1	Nut, hex. flange M5x0.8
16	24 468 01–S	3	Washer
17.	24 090 07–S	1	Lever, throttle actuator

Ref. No.	Part No.	Qty.	Description
18	24 090 03–S	1	Lever, throttle control
19	M–446030–S	1	Nut, hex. M4x0.7
20	M–403025–S	1	Screw, hex. flange M4x0.7x25
21	24 090 05–S	1	Lever, choke
22	41 468 03–S	1	Washer, wave
23	M–545020–S	1	Screw, hex. flange M5x0.8x20
24	24 079 05–S	1	Linkage, choke
25	24 089 51–S	1	Spring, throttle limiter
26	24 089 46–S	1	Spring, governor

Obtain Parts from Kohler

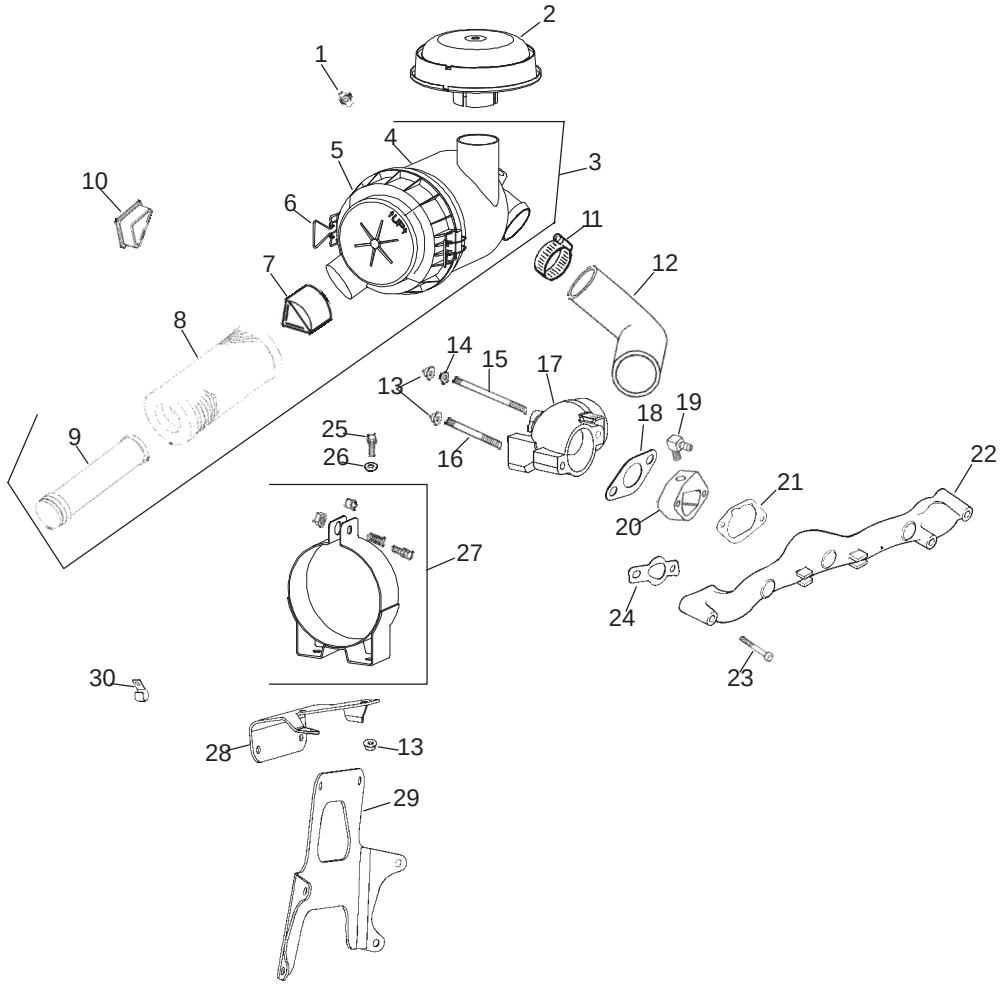


Air Intake/Filtration Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	25 139 20–S	1	Plug, pipe
2	25 324 02–S	1	Hood, air cleaner
3	25 048 07–S	1	Assembly, air cleaner (Includes 4–9)
4	25 081 01–S	1	Housing, heavy duty air cleaner
5	25 096 06–S	1	Cover assembly, plastic air cleaner
6	25 154 05–S	2	Clip
7	24 462 07–S	1	Valve, dust ejector
8	25 083 01–S	1	Element, air cleaner primary
9	25 083 04–S	1	Element, air cleaner safety
10	24 096 17–S	2	Cover, blower housing
11	25 237 07–S	2	Clamp, hose
12	24 326 53–S	1	Hose, air cleaner
13	M–647060–S	4	Nut, hex. lock M6x1.0x60
14	25 468 01–S	1	Washer, copper 1/4
15	24 072 10–S	1	Stud M6x1.0x180
16	M–629140–S	1	Stud, carburetor M6x1.0x40

Ref. No.	Part No.	Qty.	Description
17	24 029 43–S	1	Adapter, elbow
18	24 041 44–S	1	Gasket, air cleaner adapter
19	25 155 38–S	1	Connector, hose
20	24 029 44–S	1	Adapter, breather fitting
21	24 041 14–S	1	Gasket, air cleaner base
22	24 164 06–S	1	Manifold, intake
23	25 086 84–S	4	Screw, hex. flange M6x1.0x55
24	24 041 01–S	2	Gasket, intake manifold
25	M–639016–S	2	Screw, hex. flange M6x1.0x16
26	X–25–73–S	2	Washer, plain 1/4
27	25 126 02–S	1	Bracket, air cleaner
28	24 126 104–S	1	Bracket, air cleaner mounting
29	24 126 105–S	1	Bracket, main support
30	47 154 01–S	1	Clip, cable
*	25 113 27–S	1	Decal, air cleaner
*	25 454 04–S	1	Tie, wire

* Not Illustrated

Obtain Parts from Kohler

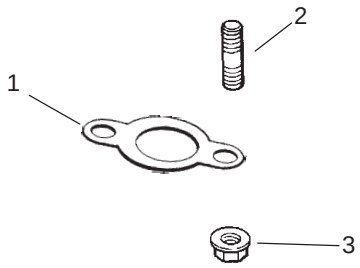

Exhaust Assembly
Kohler CV23S PS75560

Ref. No.	Part No.	Qty.	Description
1	24 041 02–S	2	Gasket, exhaust
2	25 072 04–S	4	Stud, M8x1.25x33
3	M–841080–S	4	Nut, hex. flange M8x1.25
	24 522 246	1	Short Block
	24 755 108–S	1	Gasket Set

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kohler

Maintenance Record

Date								


TORO®