Form No. 3449-187 Rev F

TORO®

Count on it.

Parts Catalog

48in Z Master® Professional 2000 Series

Riding Mower

Model No. 77248—Serial No. 410200000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3449-187 F

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
Roll-Over Protection System Assembly No. 144-1848 6
Hydraulic Assembly 8
LH Transaxle Assembly No. 126-2883 10
RH Transaxle Assembly No. 126-2884 12
Control Console and Guard Assembly 14
Fuel System and Vent Hose Assembly 16
Fuel Tank Assembly No. 126-4724 18
Seat Mount Assembly 20
Seat Assembly No. 144-3775 22
Motion Control Assembly 24
Left and Right Motion Control Arm Assembly 26
Caster Wheel and Fork Assembly 28
Fork and Caster Wheel Assembly 30
Rear Wheel Assembly 32
Electrical Assembly 34
Wire Harness Assembly No. 126-5803 36
Deck Lift Assembly 38
Deck Strut Assembly No. 126-8365 40
Engine, Clutch and Muffler Assembly 42
Deck Assembly 44
Deflector Assembly No. 120-2451 46
Deck Decal Assembly No. 126-8956 48
Attachments and Accessories 50

© 2023—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Assembly

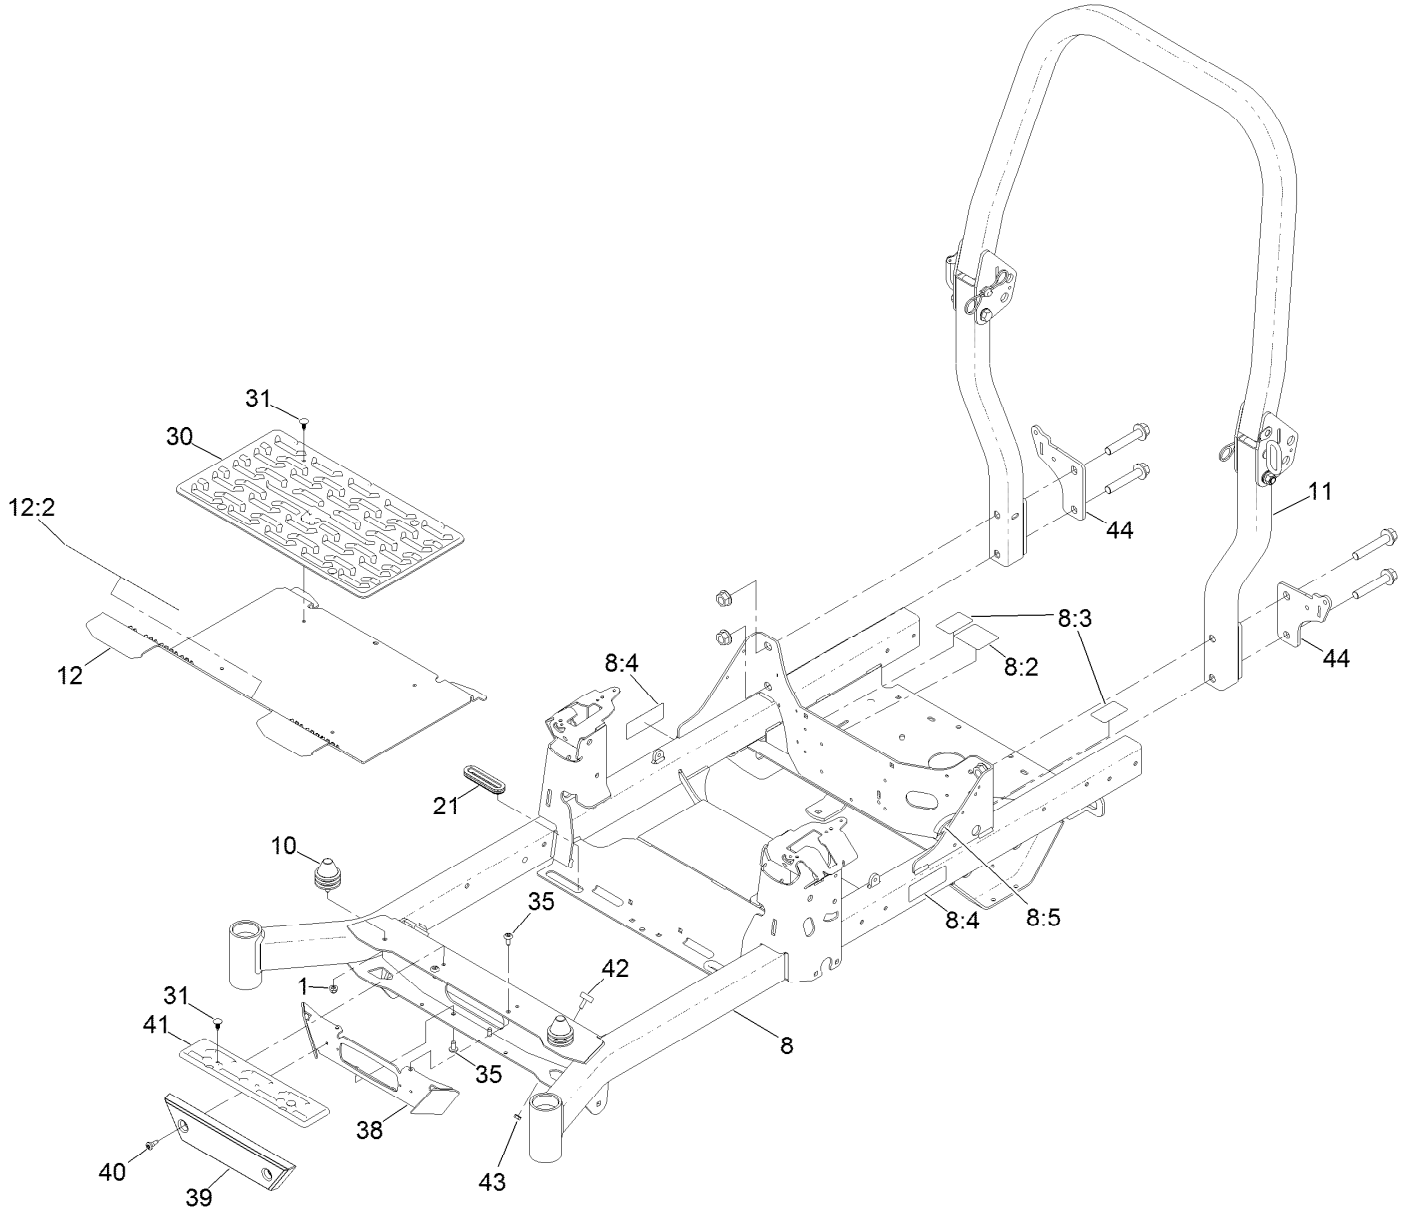

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	2	Nut-HF, NI
8	144-1842	1	Frame-48/52
8:2	109-6014	1	Decal-Routing, Belt
8:3	116-8588	2	Decal-Release, Drive
8:4	126-4363	2	Decal-Warning
8:5	127-6618	1	Strip-Seal
10	126-5491	2	Isolator
11	144-1848	1	ASM-ROPS
12	144-3767	1	Pan-Floor
12:2	126-8383	1	Decal-Danger
21	126-7065	2	Grommet-Rubber
30	144-2615	1	Floor Mat
31	117-2382	6	Plug-Plastic
35	138-9753	4	Screw
38	144-2628-01	1	Bracket-Light [red]
39	144-2604	1	Bumper-Front
40	135-2015	2	Screw-Shoulder
41	144-2614	1	Step
42	138-2662	2	Bumper-Rubber
43	32128-33	2	Nut-HF
44	126-9487-03	2	Bracket

Roll-Over Protection System Assembly
No. 144-1848

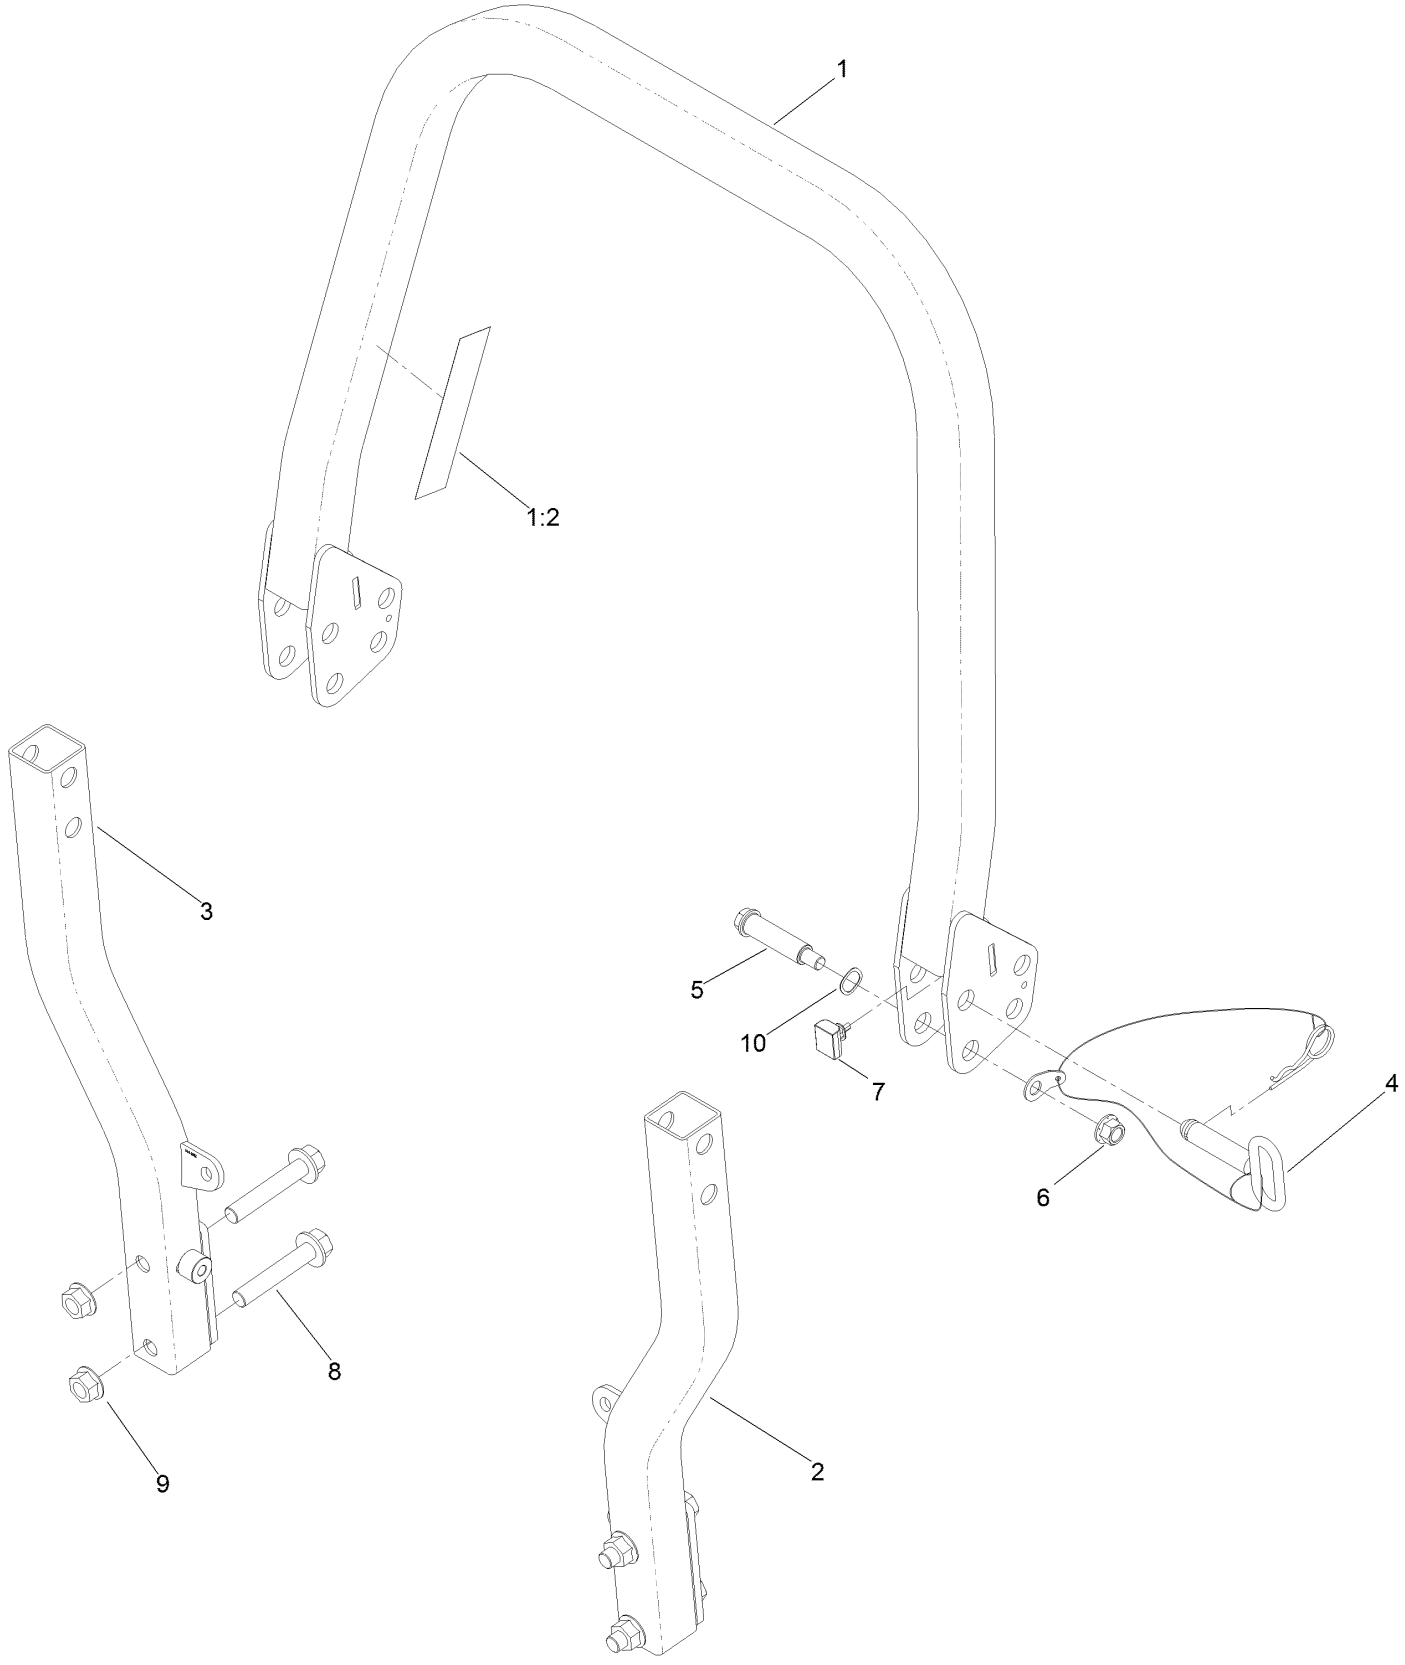


Roll-Over Protection System Assembly No. 144-1848 (continued)

Ref.	Part Number	Qty.	Description
1		1	Upper ROPS ASM ●
1:2	107-3069	1	Decal-Warning
2		1	LH Lower ROPS ASM ●
3		1	RH Lower ROPS ASM ●
4	103-4553	2	Pin-Fold, ROPS
5	126-9209	2	Bolt-Shoulder
6	99-5107	2	Nut-Lock
7	109-5337	2	Bumper-ROPS
8	126-9488	4	Screw-HHF
9	32128-50	4	Nut-Flange
10	119-4164	2	Washer-Wave

● Not serviced separately

Hydraulic Assembly

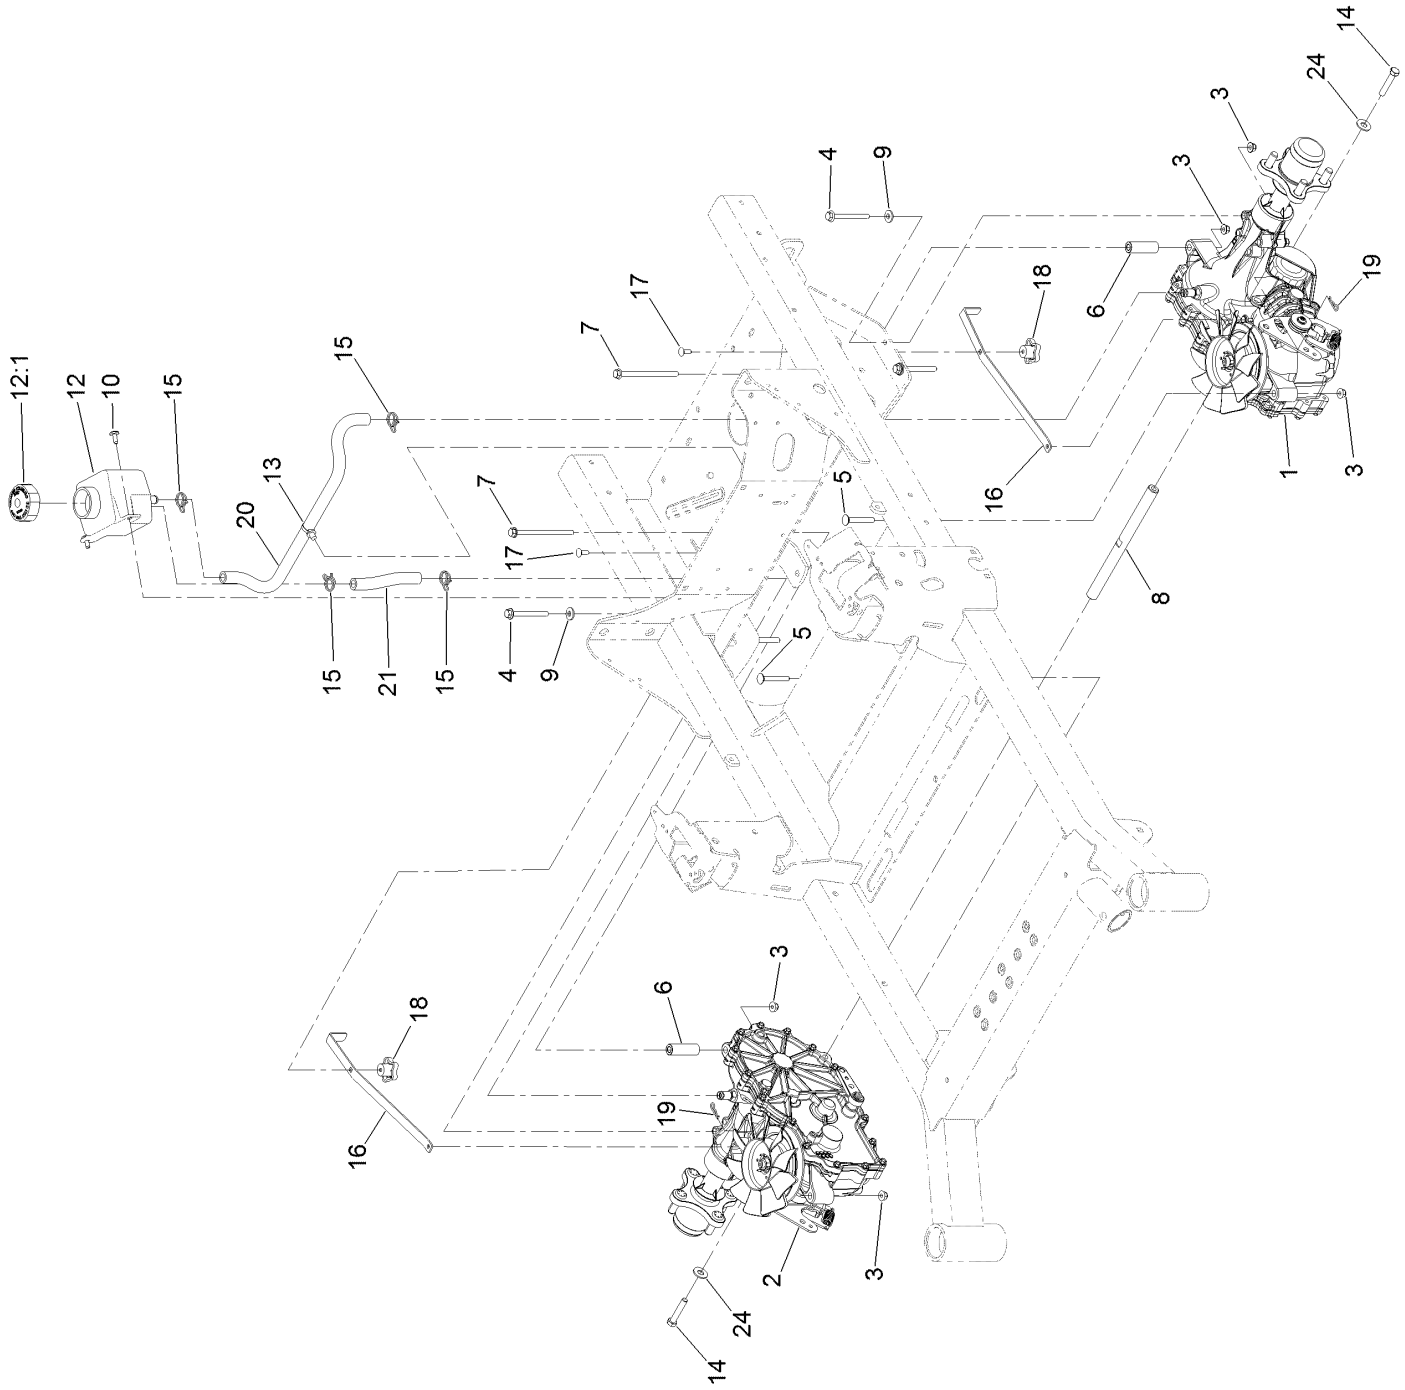


Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2883	1	LH Transaxle ASM
2	126-2884	1	RH Transaxle ASM
3	104-8300	8	Nut-HF, NI
4	126-4687	4	Screw-HHF
5	3230-7	2	Bolt-CARR
6	116-5809	2	Spacer-Hydro
7	126-5896	2	Screw HHF
8	116-6833	1	Shaft-Spacer
9	1-303334	4	Washer-Spring
10	126-6266	2	Screw-Tph
12	109-2250	1	Tank-HYD
12:1	109-3320	1	Cap-Reservoir, HYD
13	32180-118	1	Clip-Tie
14	94-7972	2	Screw-HH W/Loctite ●
15	126-0327	4	Clamp-Hose
16	109-5395	2	Arm-Bypass, Hydro
17	3229-1	2	Screw-CARR
18	108-6402	2	Knob-Handle
19	1-806003	2	Pin-Cotter
20	126-5668	1	Hose-Hydraulic
21	126-5669	1	Hose-Hydraulic
24	3256-4	2	Washer-Flat

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

LH Transaxle Assembly No. 126-2883

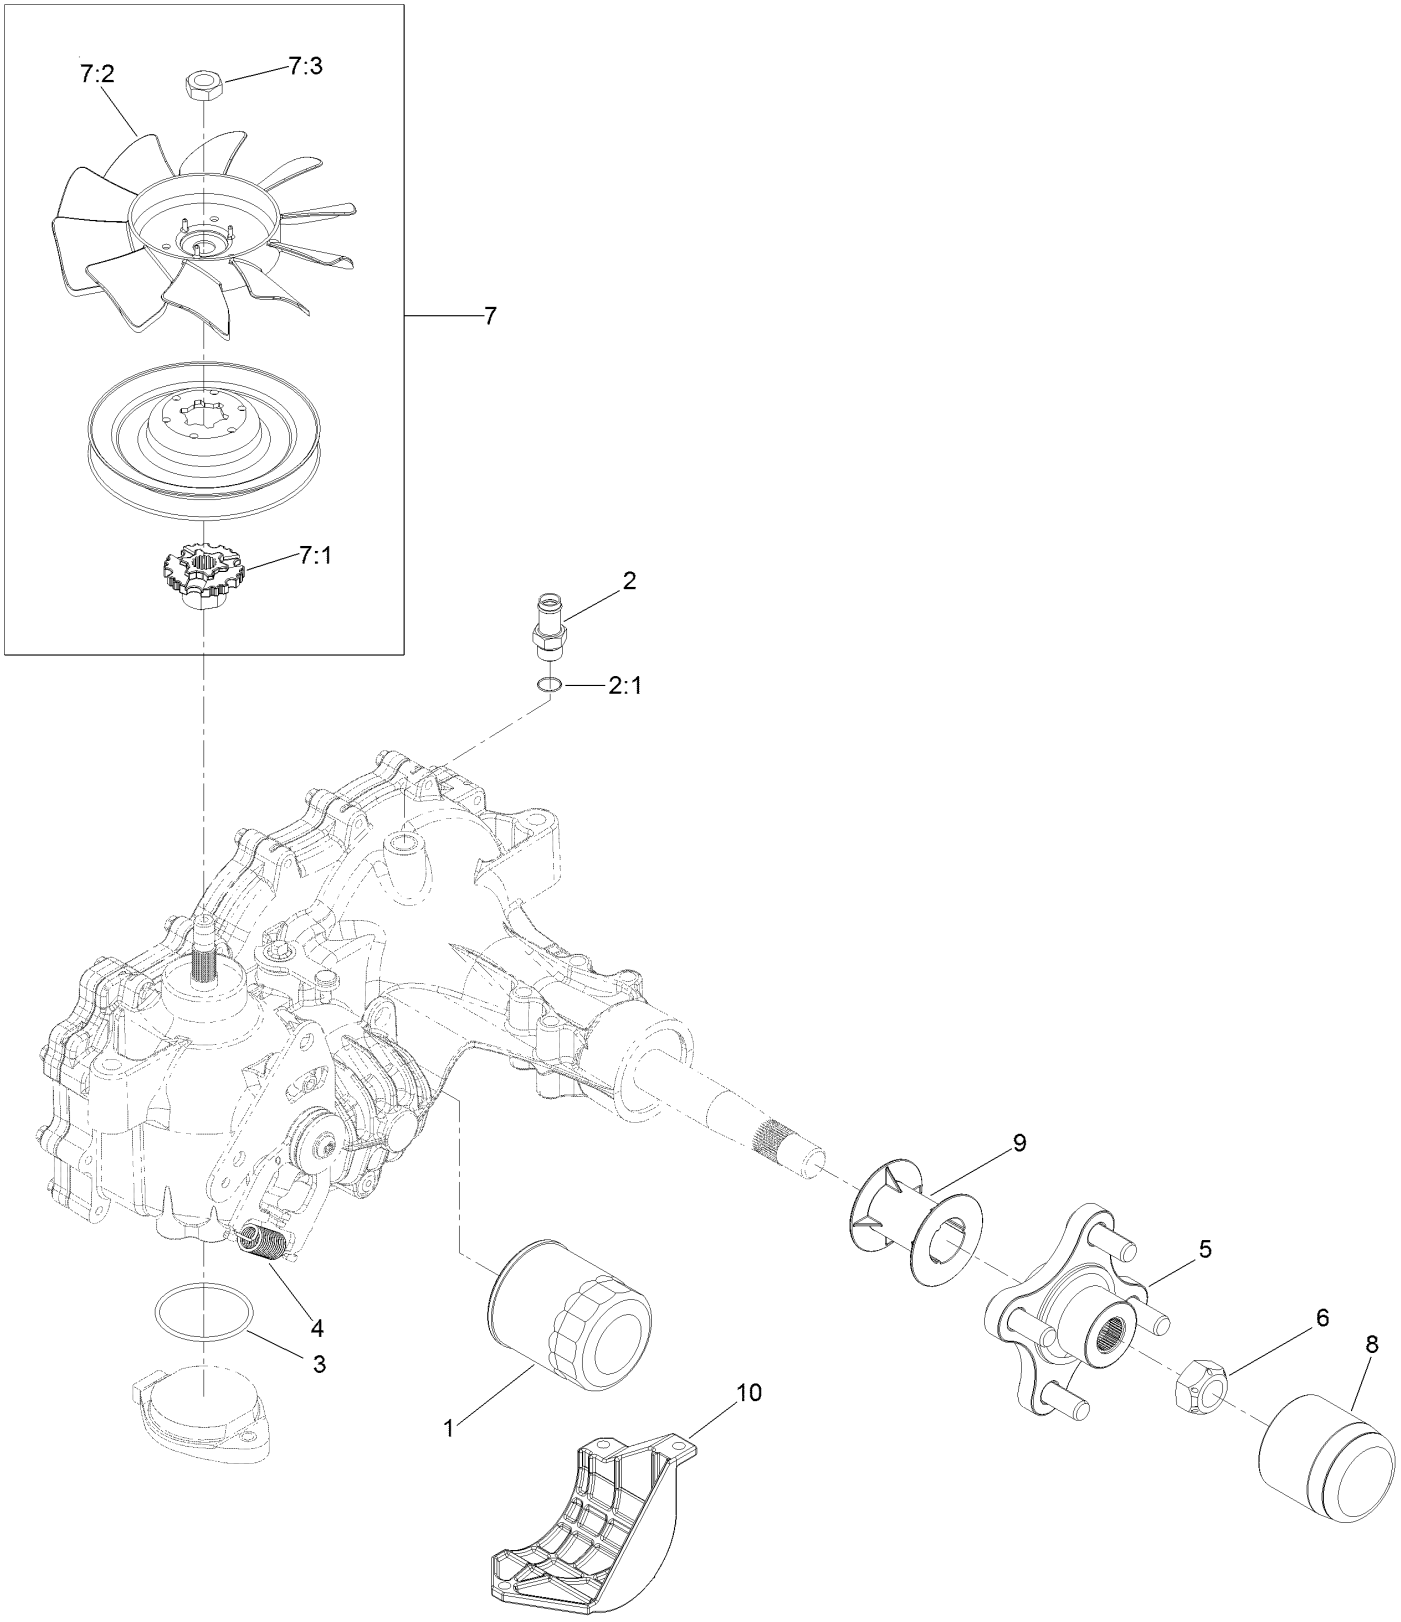


LH Transaxle Assembly No. 126-2883 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7979	1	Guard-Filter, LH
99	135-3604	1	Brake Shaft Seal Kit ●
99	121-3243	1	Seal Kit ●

● Not illustrated

RH Transaxle Assembly No. 126-2884

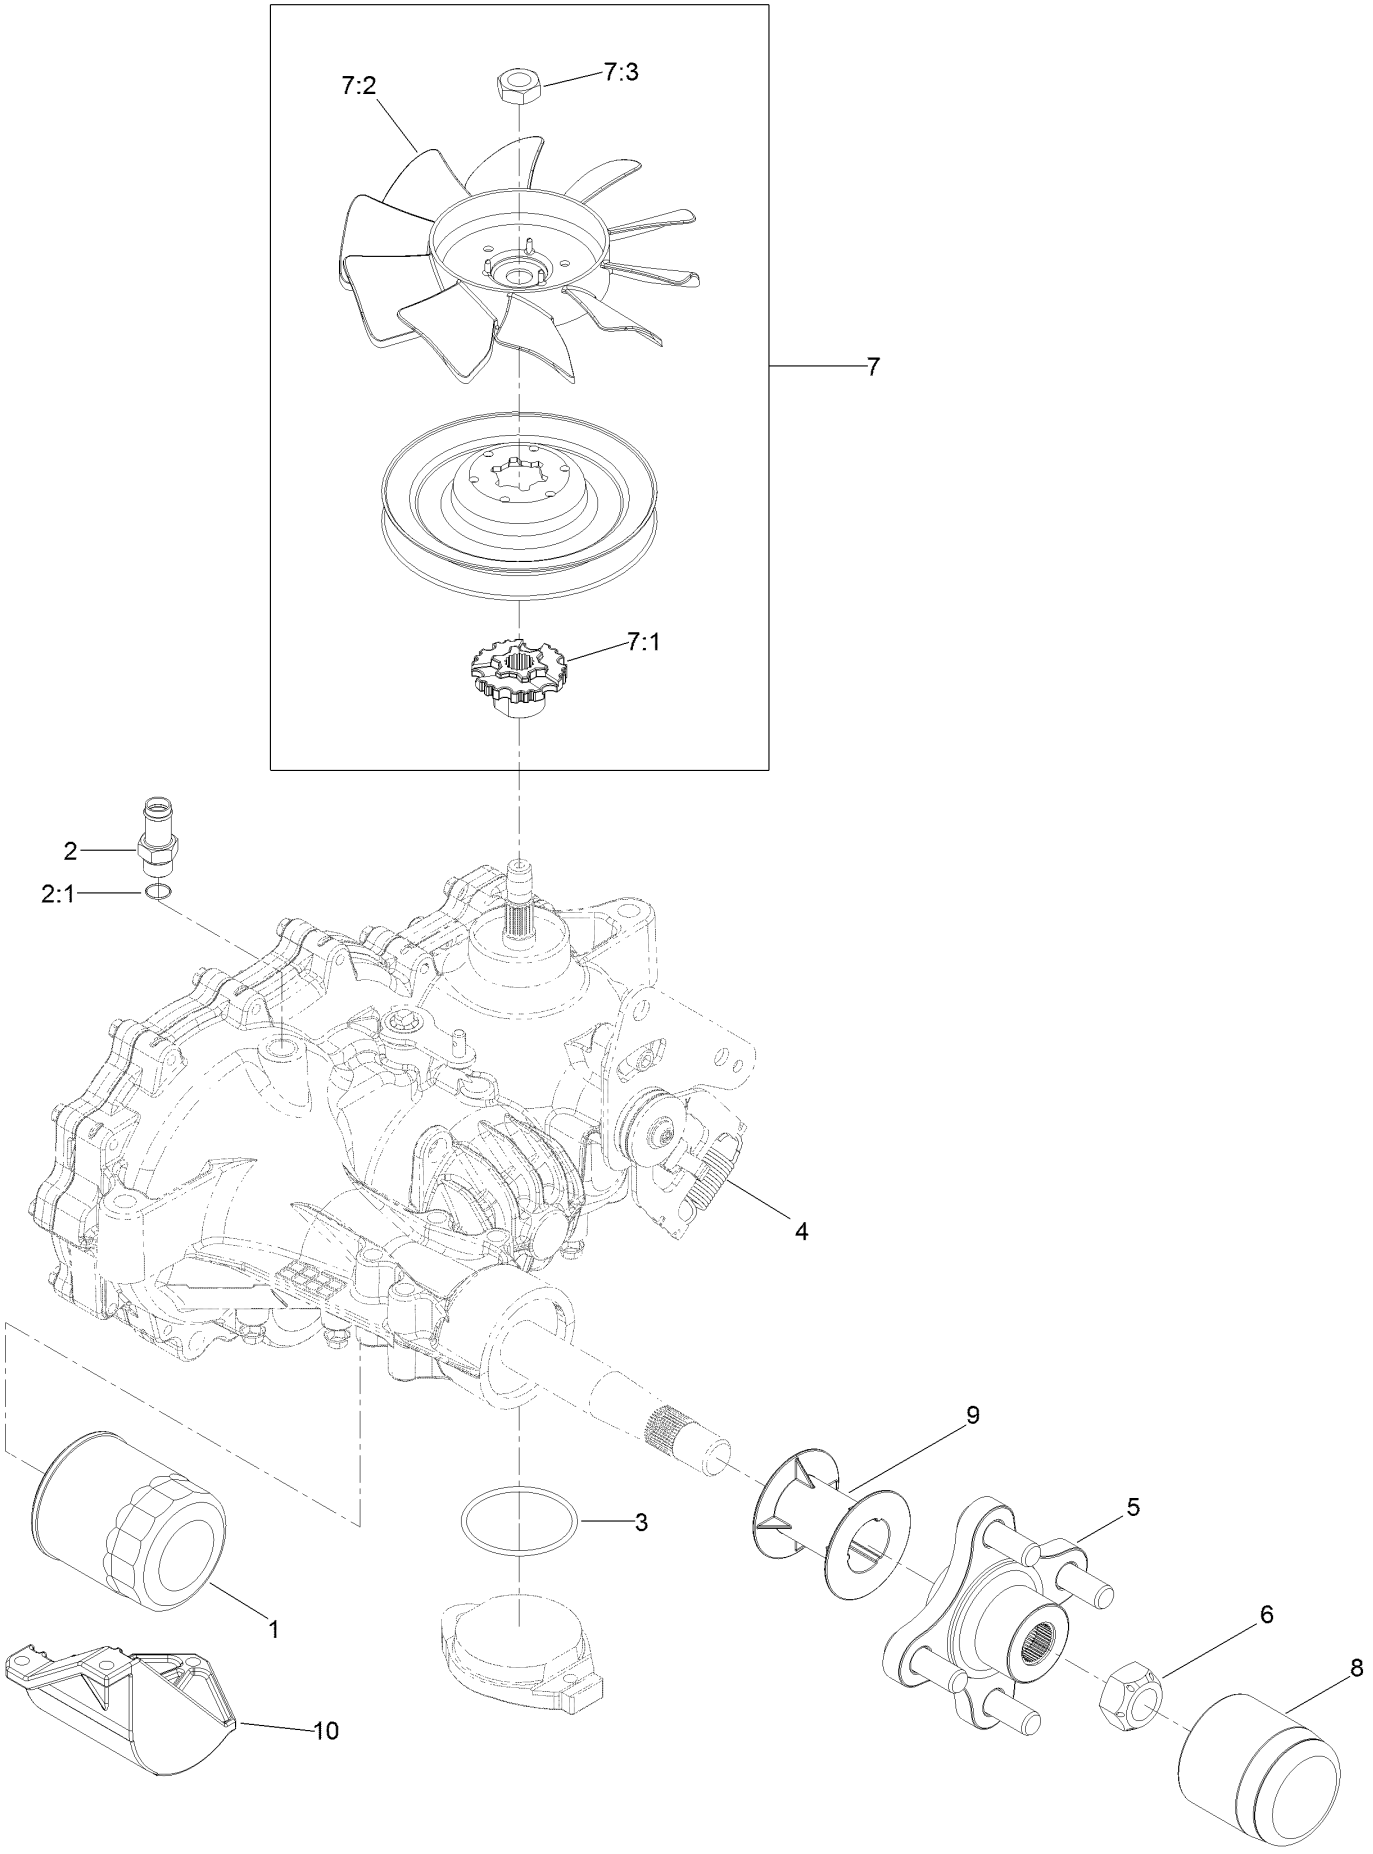


RH Transaxle Assembly No. 126-2884 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7981	1	Guard-Filter, RH
11	121-3243	1	Seal Kit ●
99	135-3604	1	Brake Shaft Seal Kit ●

● Not illustrated


Control Console and Guard Assembly

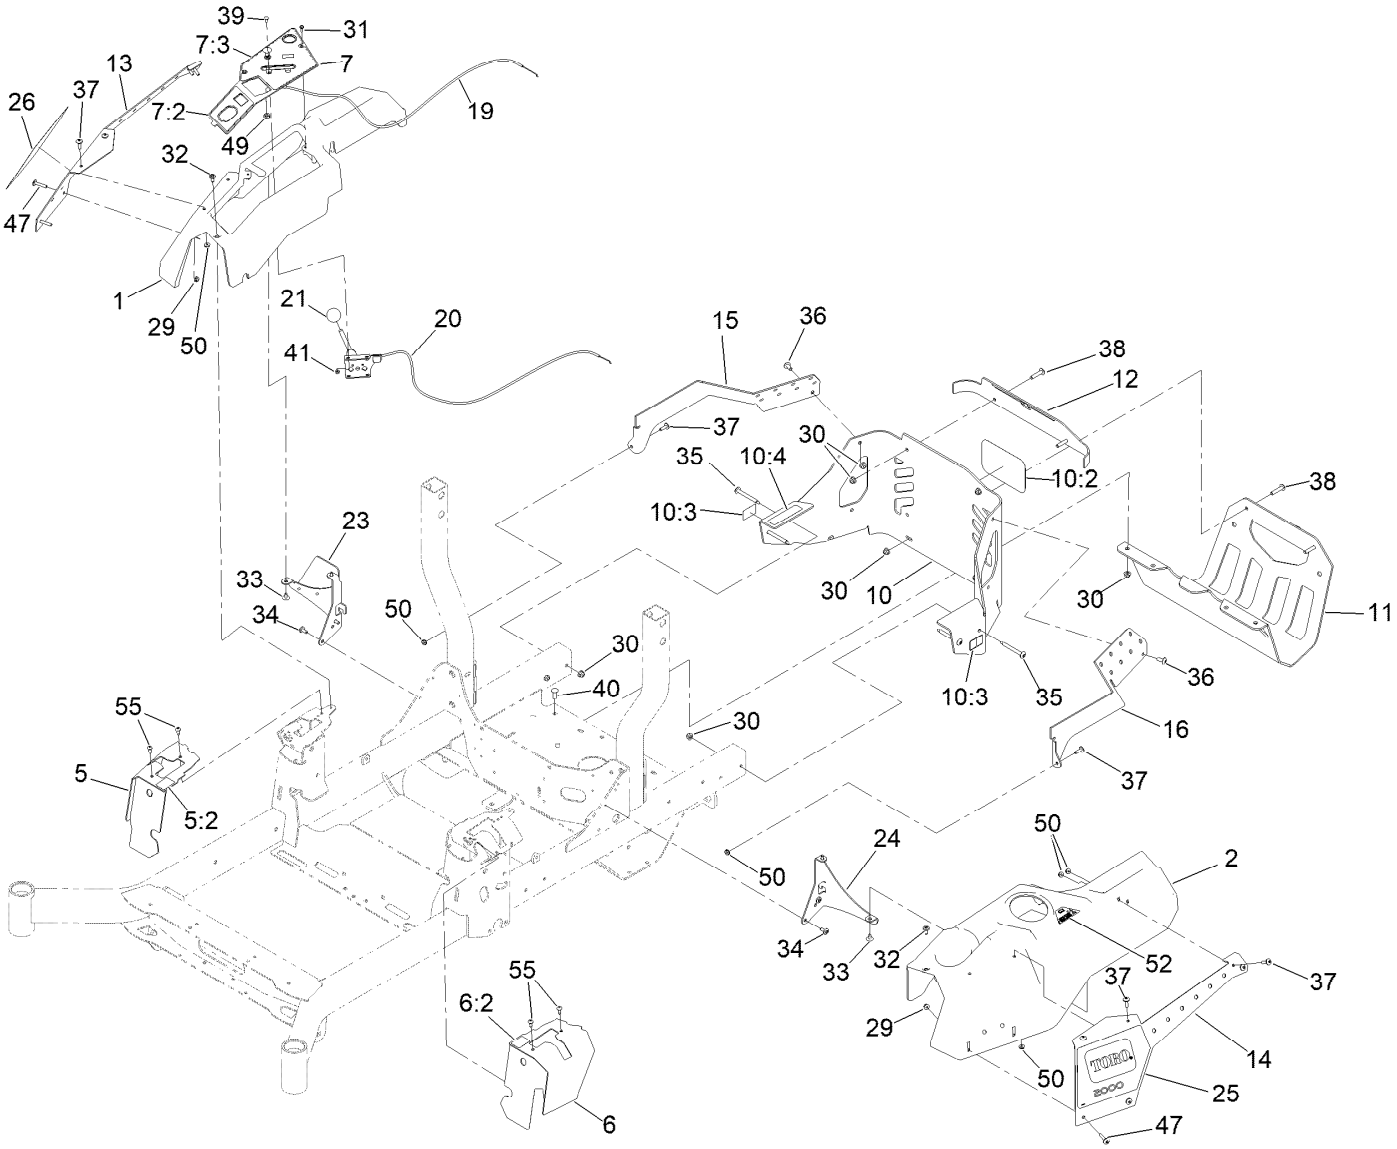

Control Console and Guard Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4983	1	Console-RH
2	126-4984	1	Console-LH
5	144-3768	1	Cover - Control, Motion
5:2	135-2310	1	Decal-Motion Control
6	144-3769	1	Cover - Control, Motion
6:2	135-2310	1	Decal-Motion Control
7	144-3780	1	Ctrl Panel ASM
7:2	126-9115	1	Decal-Panel, Control
7:3	144-3778	1	Decal-Panel Ctrl
10	139-3643	1	Rear Guard ASM
10:2	99-4693	1	Decal
10:3	106-5517	2	Decal-Warning
10:4	133-8062	1	Decal-Arrestor, Spark
11	135-5084-03	1	Guard-Muffler [black]
12	139-3644-01	1	Trim-Upper Rear
13	136-1745-03	1	Cover, Pod RH
14	136-1746-03	1	Cover-LH
15	126-9023-01	1	Bracket-Guard, RH
16	126-9022-01	1	Bracket-Guard, LH
19	126-7009	1	Cable-Control, Choke
20	126-7008	1	Cable-Control, Throttle
21	1-603175	1	Knob-Ball
23	126-9945	1	Support-Console, RH
24	126-5532-03	1	Bracket-Console, LH
25	140-4353	1	Decal-2000, LH
26	140-4351	1	Decal-2000, RH
29	104-7201	4	Nut-HF, NI
30	104-8300	12	Nut-HF, NI
31	117-5036	2	Screw-Plastic, HWH
32	120-7950	2	Screw-Torx
33	126-5544	4	Screw-Torx
34	126-6266	4	Screw-Tph
35	126-6267	4	Screw-TTH
36	126-6268	2	Screw-TTH
37	126-6269	10	Screw-Truss
38	126-7439	4	Screw-Torx
39	1-807513	2	Bolt-CARR
40	3230-22	2	Screw-CARR
41	3296-2	2	Nut-Lock, NI
47	126-8232	4	Screw-Truss Hex Skt
49	3220-3	1	Nut-HJ
50	32149-2	10	Nut-Keps
52	126-9939	1	Decal-Fill, Fuel
55	87-6620	4	Screw-Tph Thd Form


Fuel System and Vent Hose Assembly

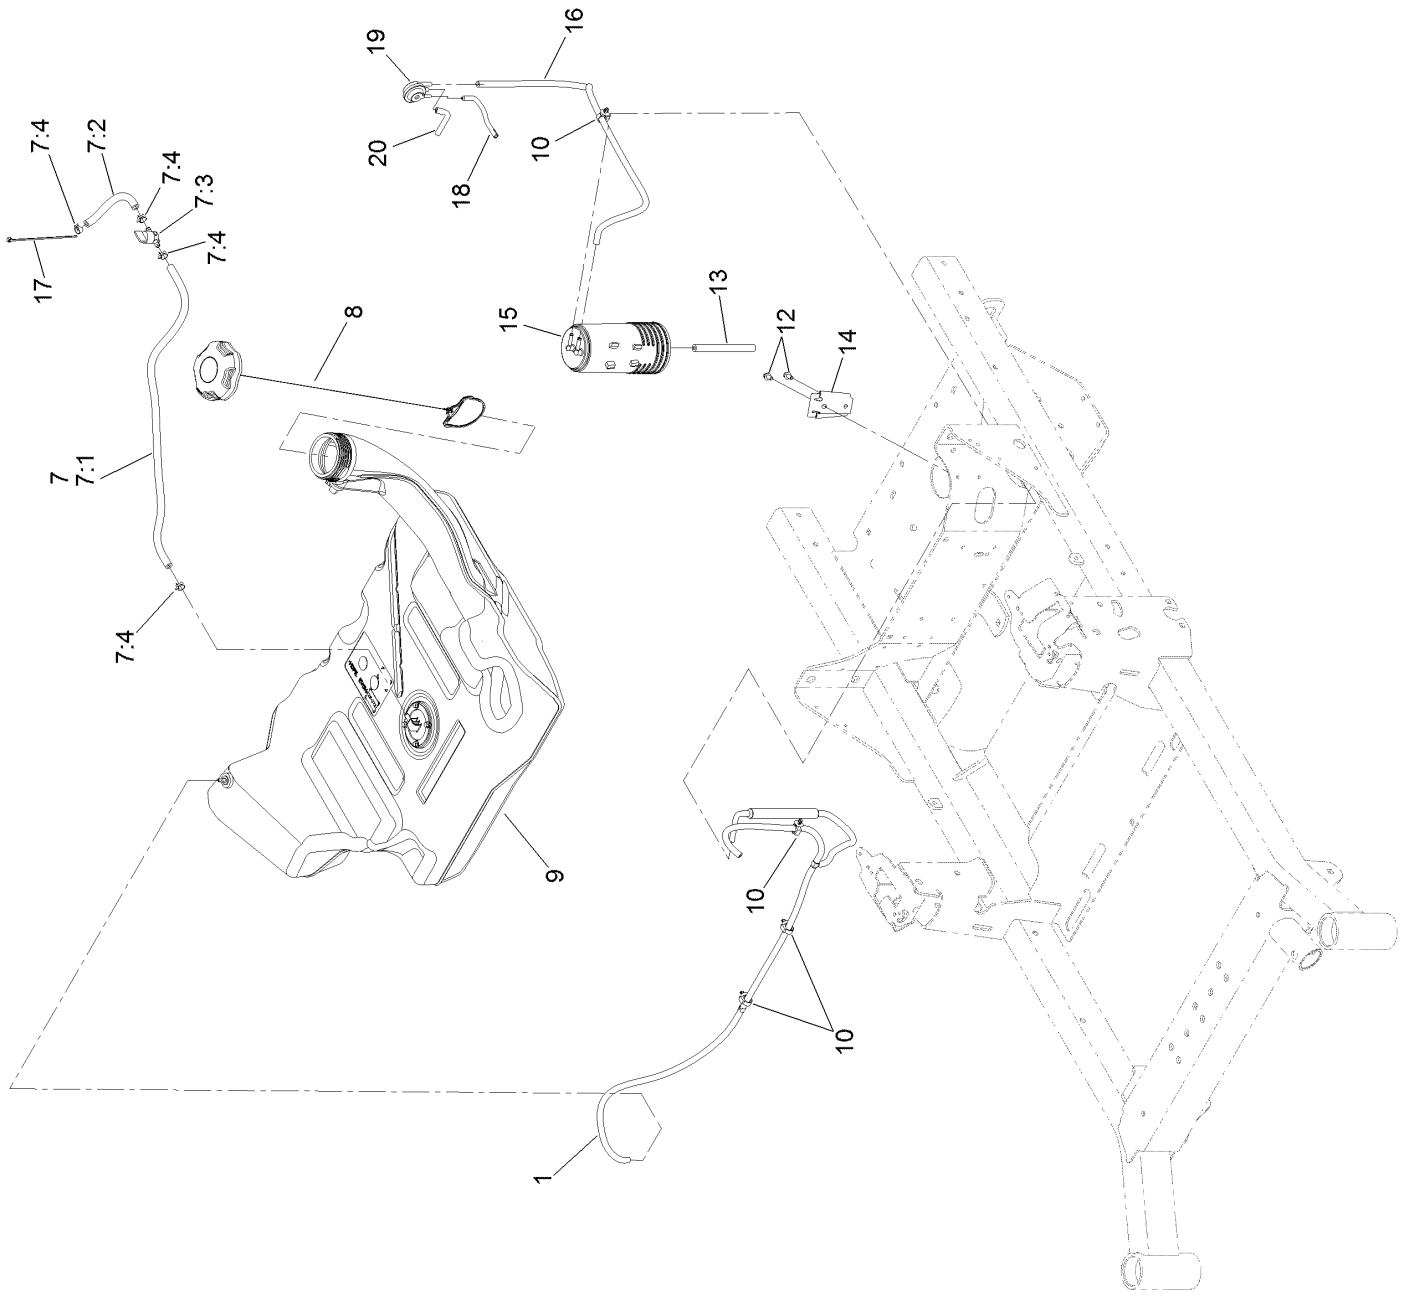

Fuel System and Vent Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-8734	1	Vent Hose ASM
7	126-8740	1	Fuel Hose ASM
7:1	109-0302	1	Hose-Fuel
7:2	109-0678	1	Hose-Fuel
7:3	1-603770	1	Valve-Fuel
7:4	2412-98	4	Clamp-Hose
8	135-4801	1	Cap-Fuel, Ratcheting
9	126-4724	1	Tank-Fuel
10	126-5523	4	Clip
12	93-6083	2	Screw-HWH
13	109-0678	1	Hose-Fuel
14	114-0292	1	Bracket-Canister, Carbon
15	117-1221	1	Canister-Carbon, 800Cc
16	109-1395	1	Hose-Fuel
17	1-303287	1	Tie-Cable
18	116-2394	1	Hose-Vent, Formed
19	116-2232	1	Valve-Control, Vacuum
20	116-2233	1	Hose-Vent, Formed


Fuel Tank Assembly No. 126-4724

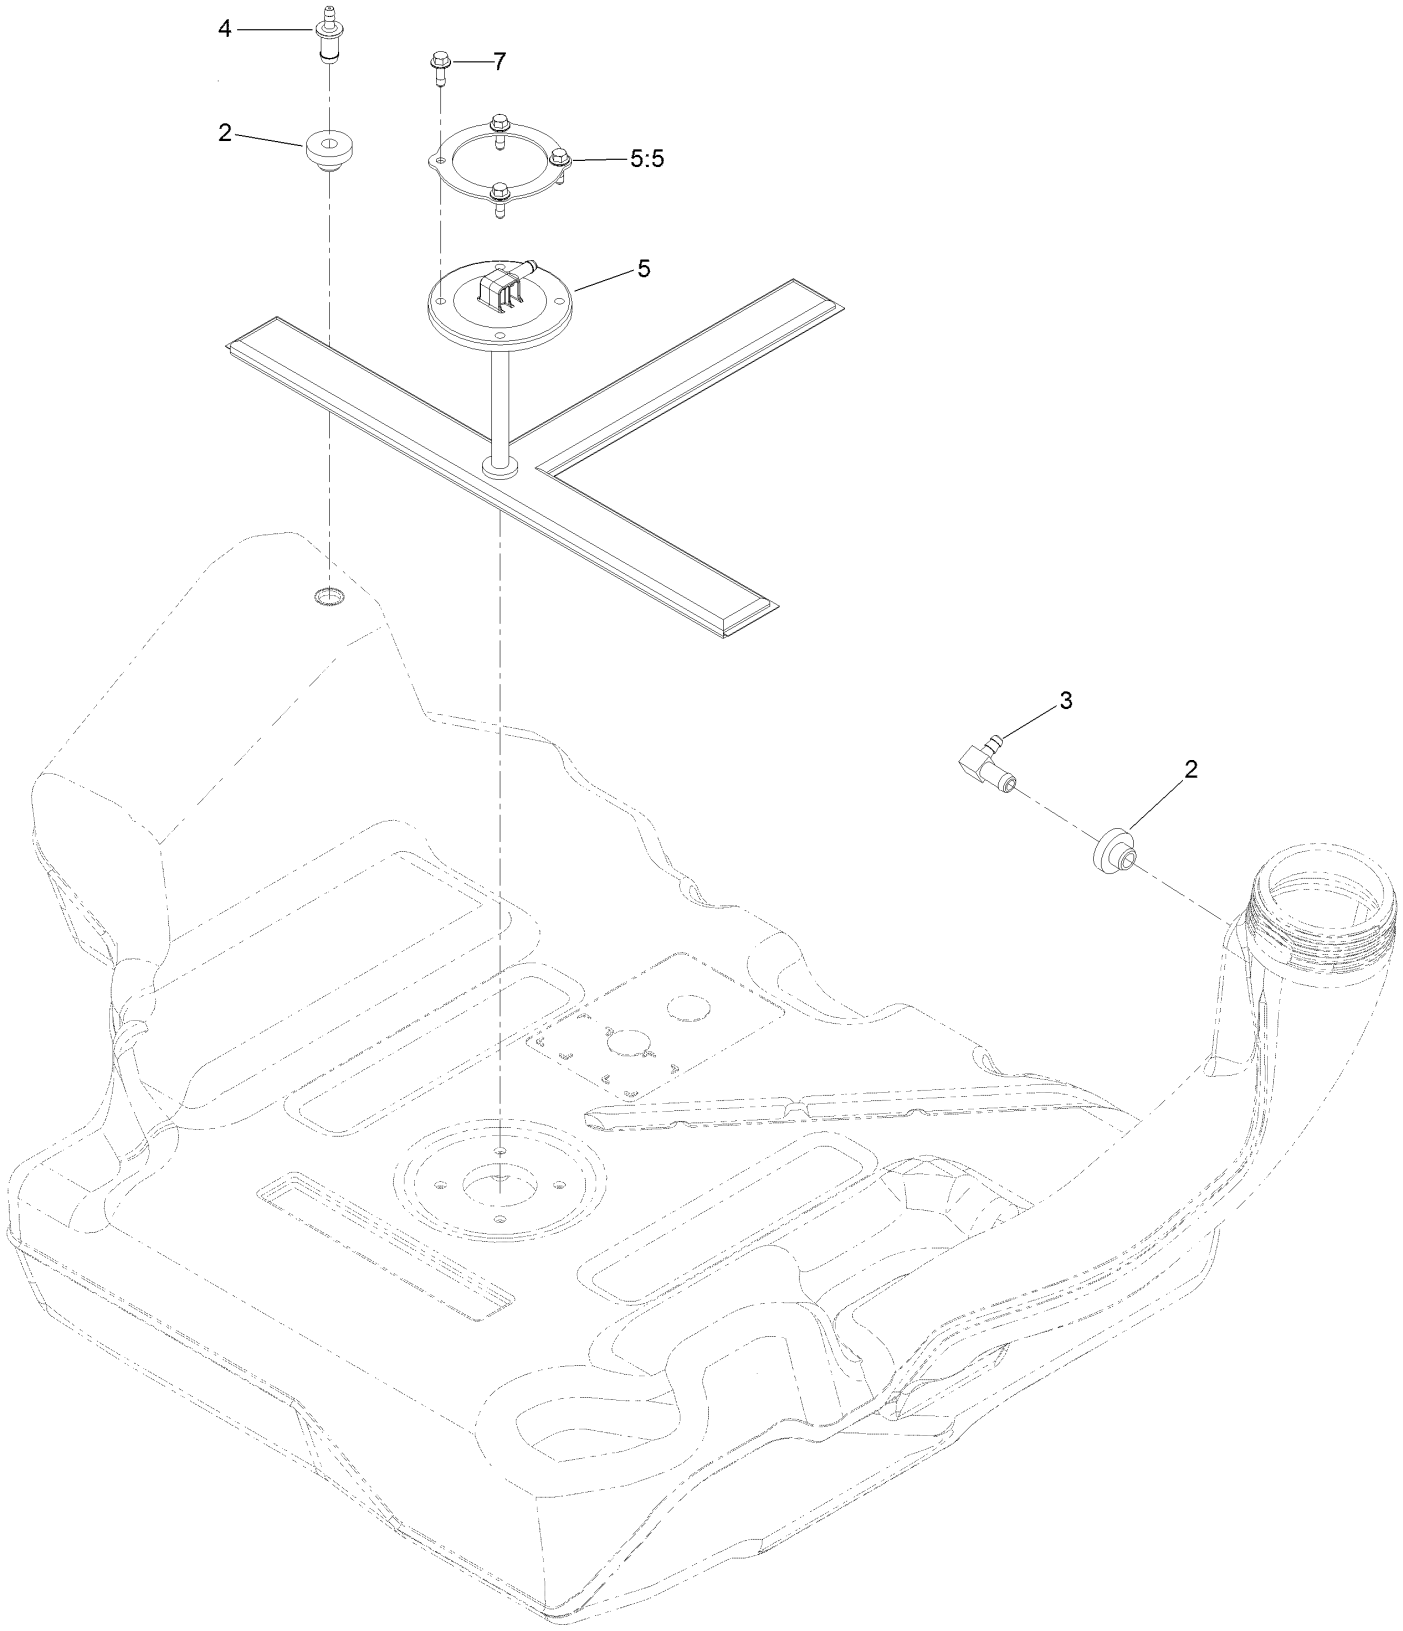

Fuel Tank Assembly No. 126-4724 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	2	Bushing
3	126-9057	1	Fitting-90 DEG
4	116-4630	1	Fitting-Orifice, Straight
5	126-5528	1	Pickup-Fuel
5:5	126-5527	1	Ring-Retainer
7	126-5525	4	Bolt


Seat Mount Assembly

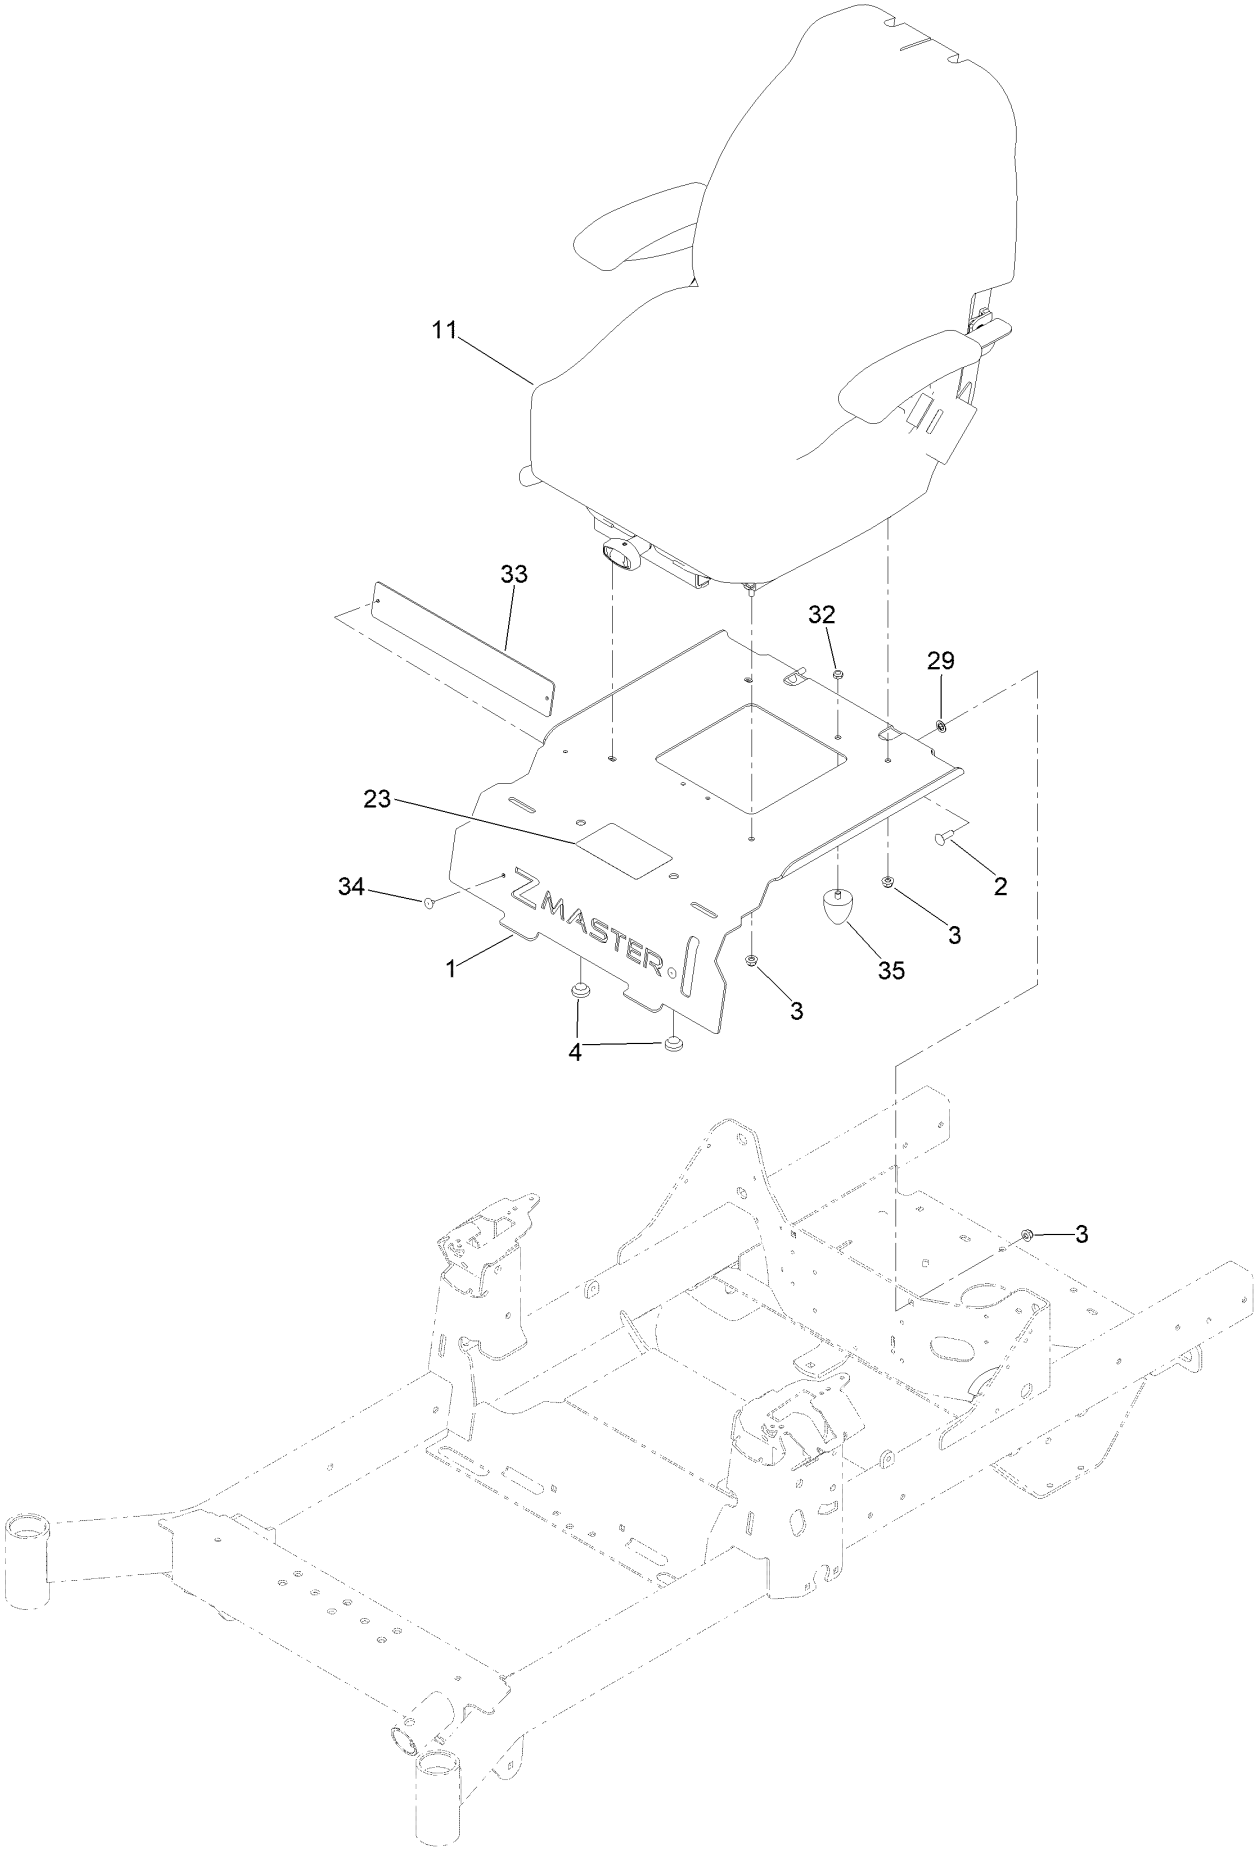

Seat Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-3690-03	1	Plate-Fixed Seat
2	3230-22	2	Screw-CARR
3	104-8300	6	Nut-HF, NI
4	135-0505	2	Bumper-Seat
11	144-3775	1	Seat-Suspension Toro
23	126-8151	1	Decal-Aid, Service
29	135-7125	2	Washer-Retaining
32	3296-47	1	Nut-Lock,NI
33	144-2612-01	1	Plate-Backer
34	132-5064	2	Rivet-Pop
35	135-7047	1	Bumper-Rubber


Seat Assembly No. 144-3775

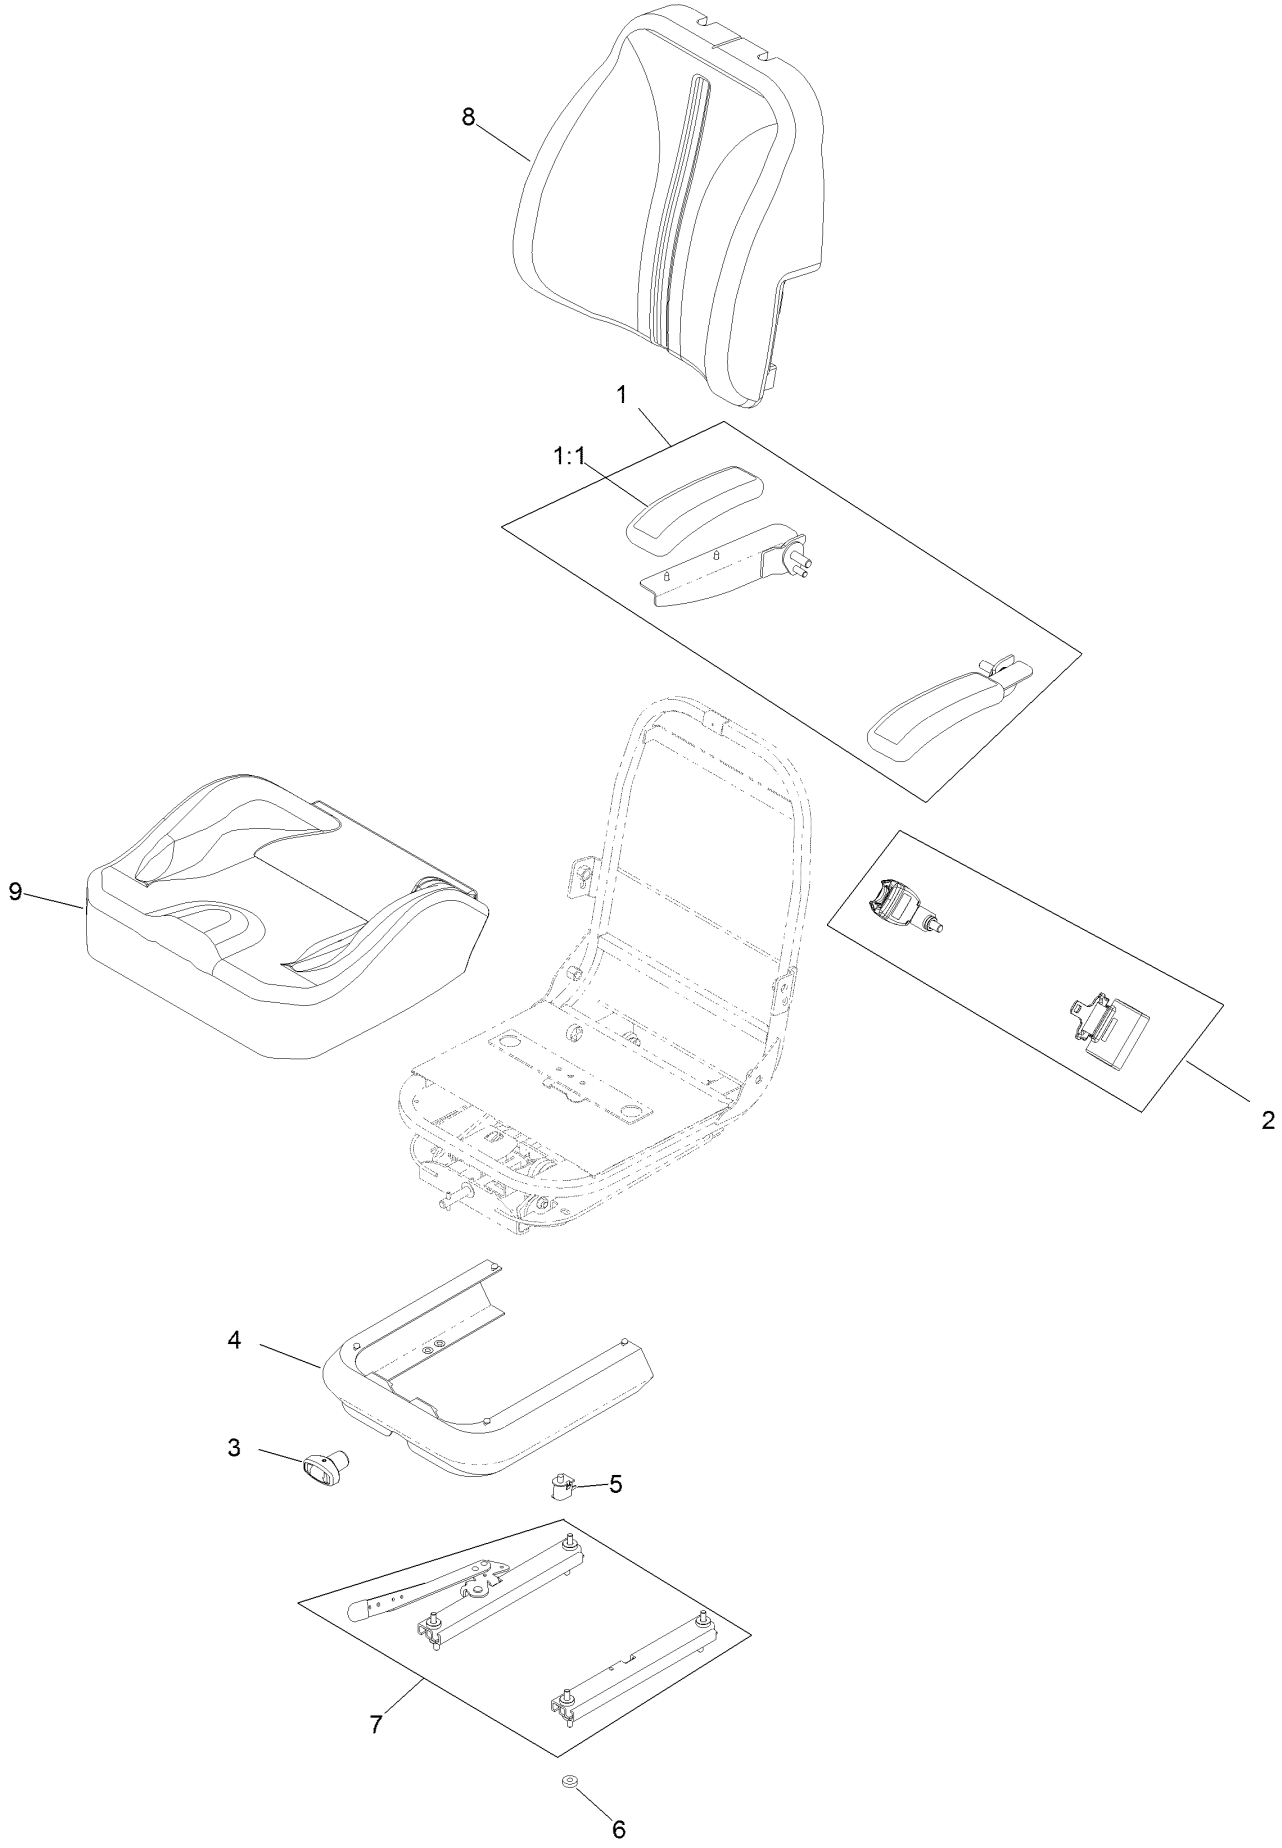

Seat Assembly No. 144-3775 (continued)

Ref.	Part Number	Qty.	Description
1	126-2058	1	Armrest Kit
1:1	110-4163	2	Cushion-Rest, Arm
2	139-3612	1	Seat Belt Kit
3	130-0846	1	Knob-Adjuster
4	139-3613	1	Cover-Skirt W/Fasteners
5	82-2190	1	Switch-Bail
6	26-4840	4	Spacer-Pin, Mounting
7	139-3614	1	Track ASM
8	144-3776	1	Cover-Back, Susp Seat
9	144-3777	1	Cover-Bottom, Susp Seat

Motion Control Assembly

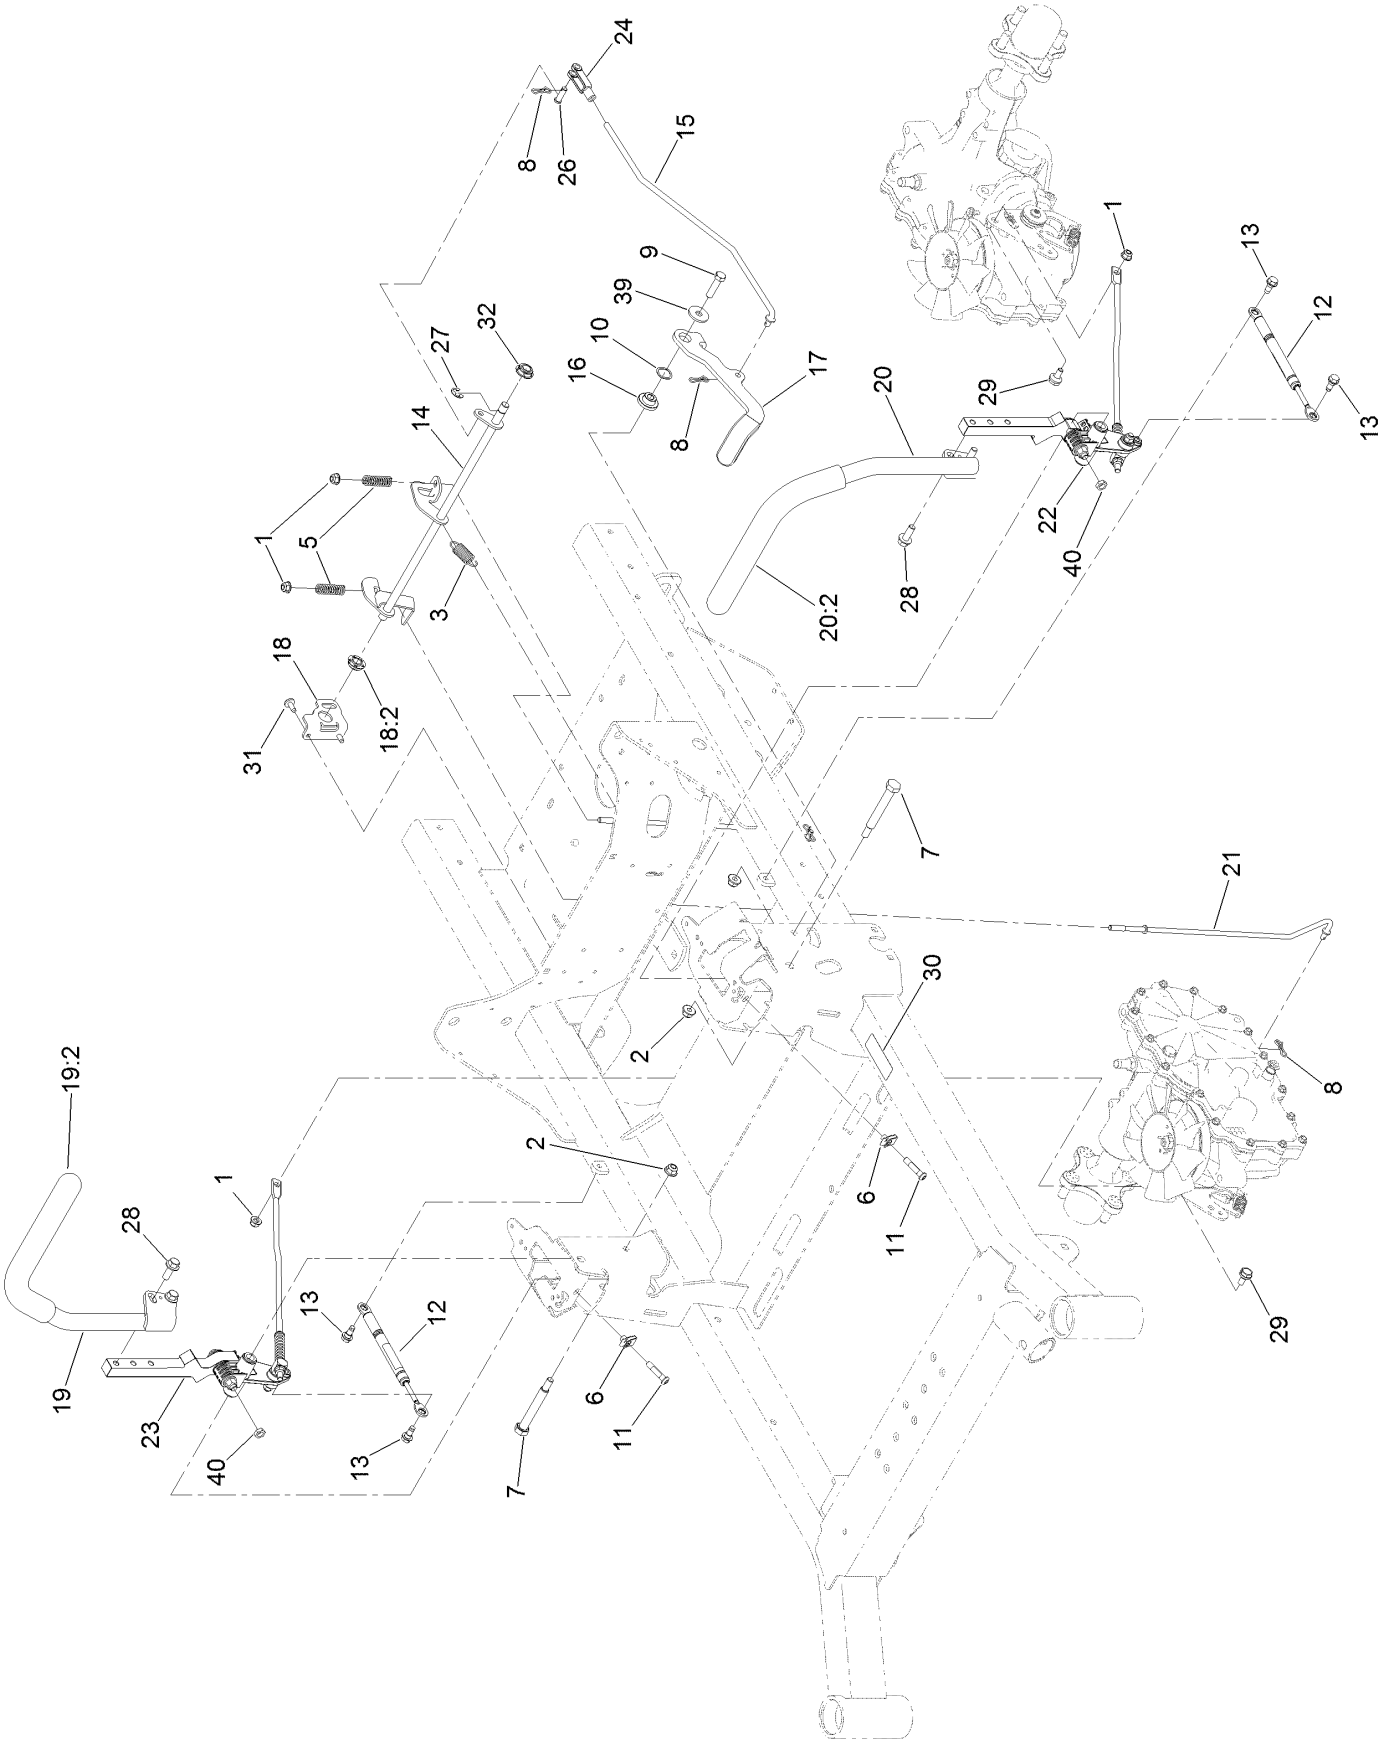


Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	4	Nut-HF, NI
2	104-8301	3	Nut-HF, NI
3	107-1045	1	Spring-Extension
5	109-7694	2	Spring-Compression
6	112-3306	2	Nut
7	115-5099	2	Bolt-Pivot
8	119-1415	4	Pin-Cotter, Locking
9	323-8	1	Screw-HH
10	119-4164	1	Washer-Wave
11	126-4299	2	Screw-HSBH
12	126-4322	2	Damper
13	126-4424	4	Screw-Shoulder
14	126-5813	1	Shaft-Brake
15	126-5819	1	Linkage-Brake, Upper
16	126-5989	1	Pivot-Flange
17	126-9490	1	Lever-Brake (With Grip)
18	126-6456	1	Bracket-Brake
18:2	126-5820	1	Bearing-Spherical
19	126-9191	1	RH Control Handle ASM
19:2	126-7359	1	Grip
20	126-9192	1	LH Control Handle ASM
20:2	126-7359	1	Grip
21	126-7217	2	Linkage-Brake, Lower
22		1	LH Motion Control ASM ●
23		1	RH Motion Control ASM ●
24	1-303105	1	Yoke-Adjustable
26	1-808280	1	Pin-Clevis
27	32120-47	1	Ring-Retaining, External
28	3234-42	4	Screw-HHF
29	37-8771	2	Bolt-Shoulder, HF
30	115-9625	1	Decal-Brake, Parking
31	126-6266	2	Screw-Tph
32	126-5820	1	Bearing-Spherical
39	2844	1	Washer
40	3218-3	2	Nut-Jam

● Not serviced separately


Left and Right Motion Control Arm Assembly

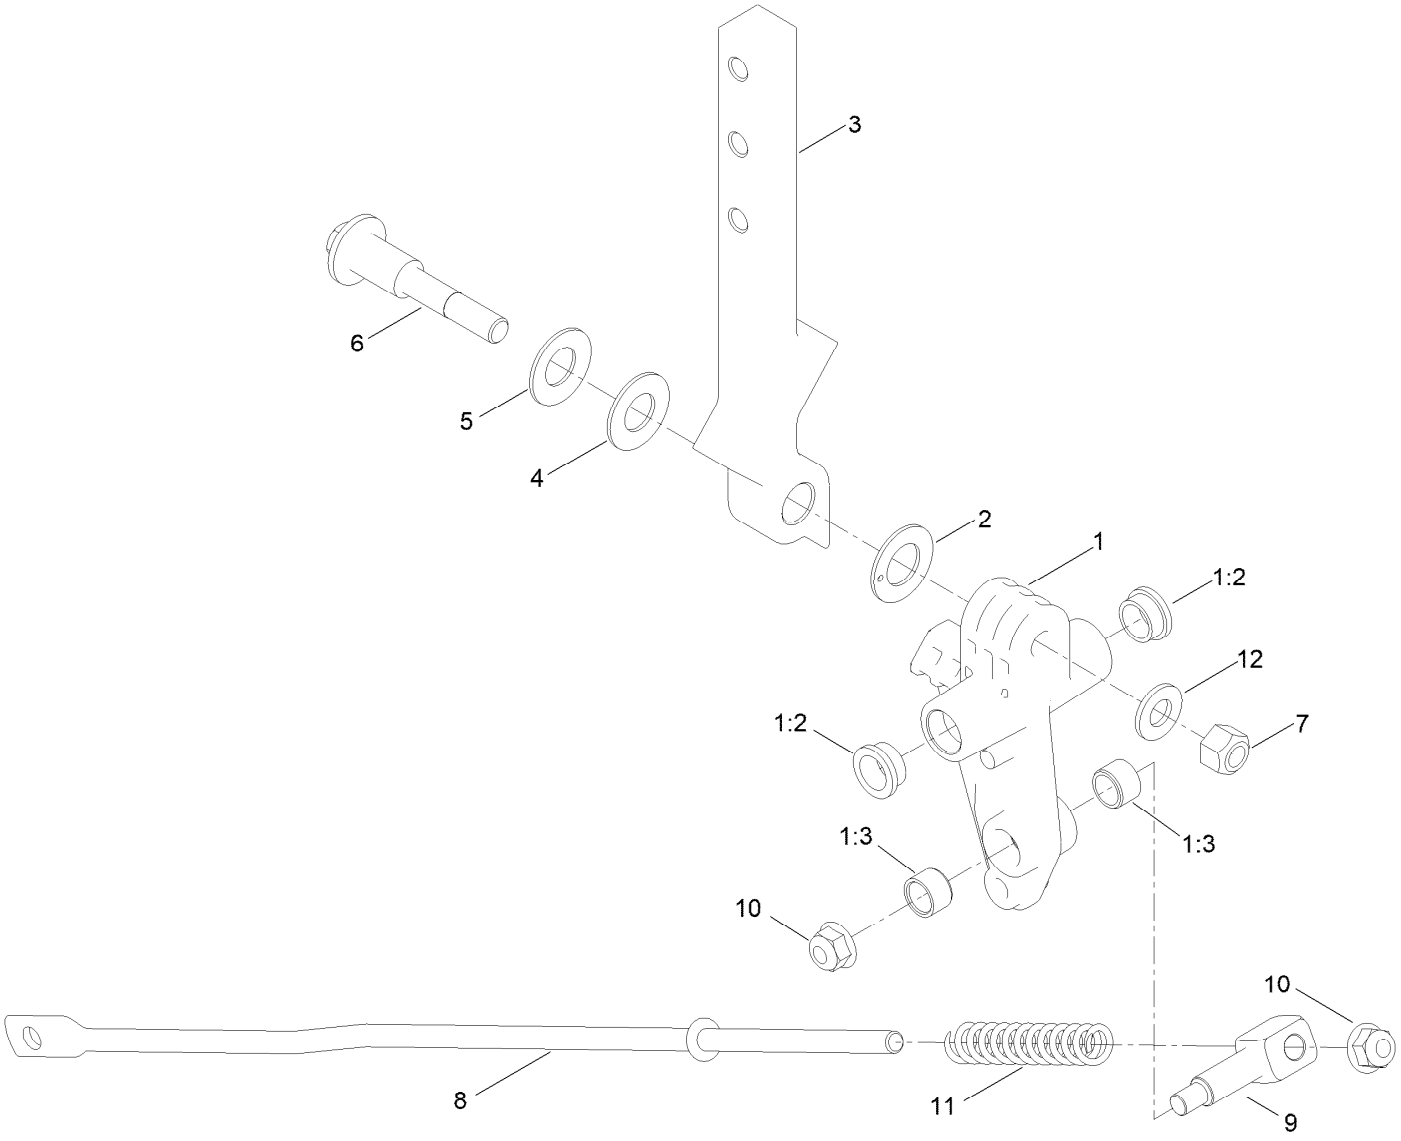

Left and Right Motion Control Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3773	1	Control Arm ASM
1:2	126-8909	2	Bushing
1:3	1-413152	2	Bushing-Sleeve
2	126-7296	1	Washer-Friction
3	126-8182	1	Arm-Control
4	117-1240	1	Washer
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	32152-2	1	Nut-Lock, Cone
8	126-5435	1	Link-Control
9	126-5434	1	Swivel
10	104-8300	2	Nut-HF, NI
11	126-8195	1	Spring-Return, Neutral
12	3256-24	1	Washer-Flat

Caster Wheel and Fork Assembly

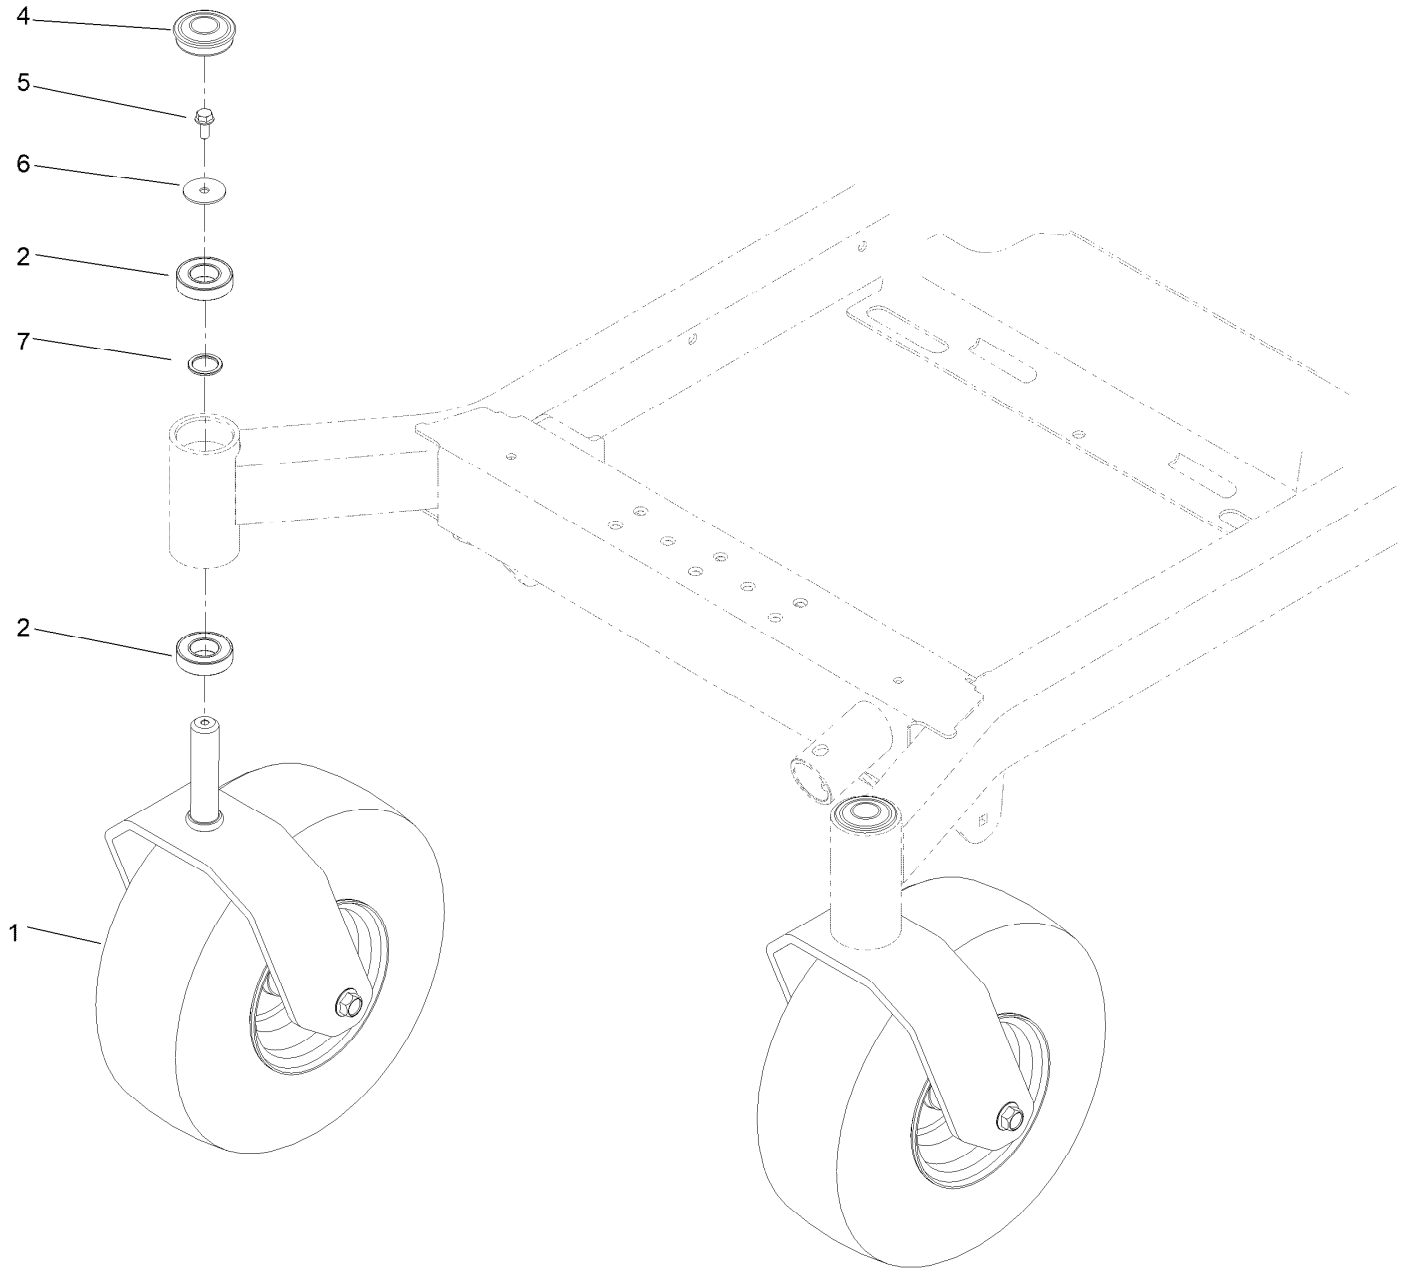


Caster Wheel and Fork Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	ASM-Front Caster W/Fork ●
2	109-3678	4	Bearing-Ball
4	144-0375	2	Cap, Grease
5	100-1668	2	Screw-HHF
6	3256-68	2	Washer-Flat
7	145-3660	2	Spacer-Bearing

● Not serviced separately

Fork and Caster Wheel Assembly

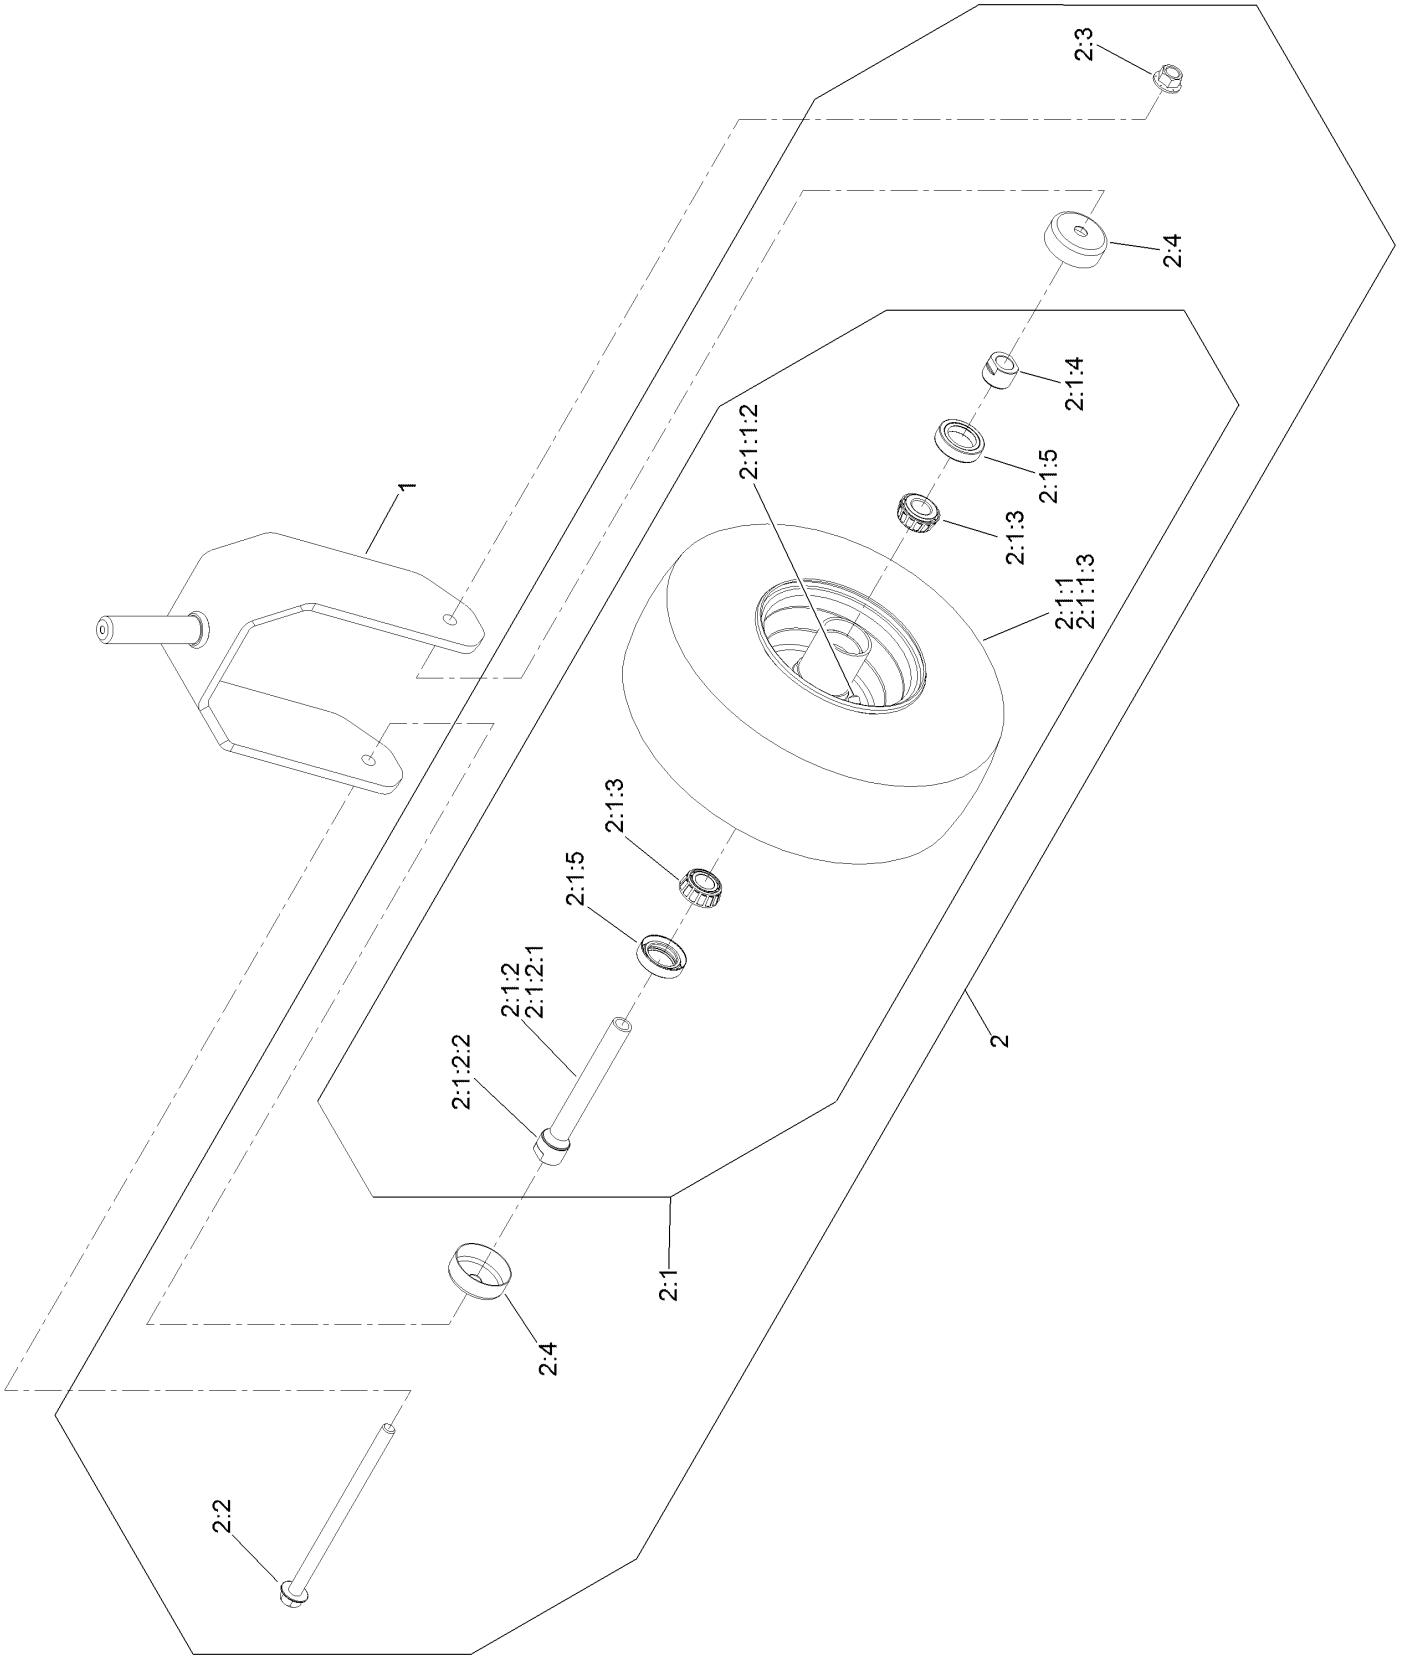


Fork and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4312-01	1	Fork-Caster
2	139-3639	1	ASM-Pneumatic 13X6.50-6
2:1		1	Wheel And Bearings ASM ●
2:1:1		1	Wheel And Tire ASM ●
2:1:1:2	5108	1	Valve
2:1:1:3	126-5959	1	Tire
2:1:2	126-7796	1	Caster Axle ASM
2:1:2:1	126-5220	1	Axle-Caster
2:1:2:2	103-3051	1	Spacer-Nut
2:1:3	1-633585	2	Bearing-Cone, Taper
2:1:4	103-3051	1	Spacer-Nut
2:1:5	103-0063	2	Seal-Caster
2:2	126-5389	1	Screw-HHF
2:3	99-5107	1	Nut-Lock
2:4	103-2768	2	Guard-Seal

● Not serviced separately


Rear Wheel Assembly

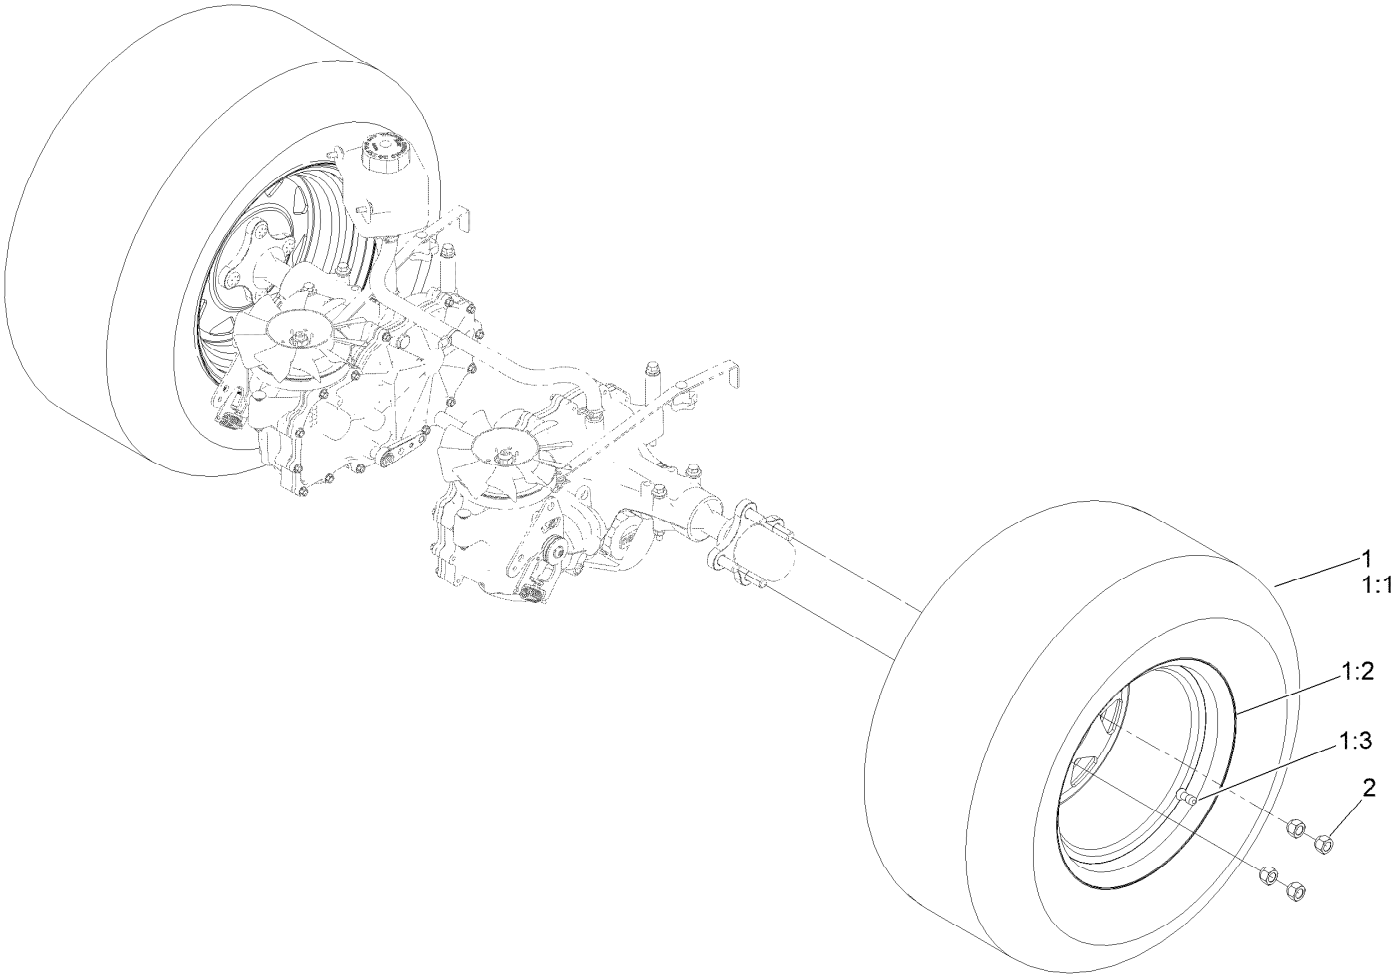

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	144-6990	2	ASM-Voodoo Trac 24X9.5-12 [os -0.75]
1:1	144-6965	1	Tire-Voodoo
1:2	140-7966	1	Wheel
1:3	232-27	1	Stem-Valve
2	242-50	8	Nut-Lug

Electrical Assembly

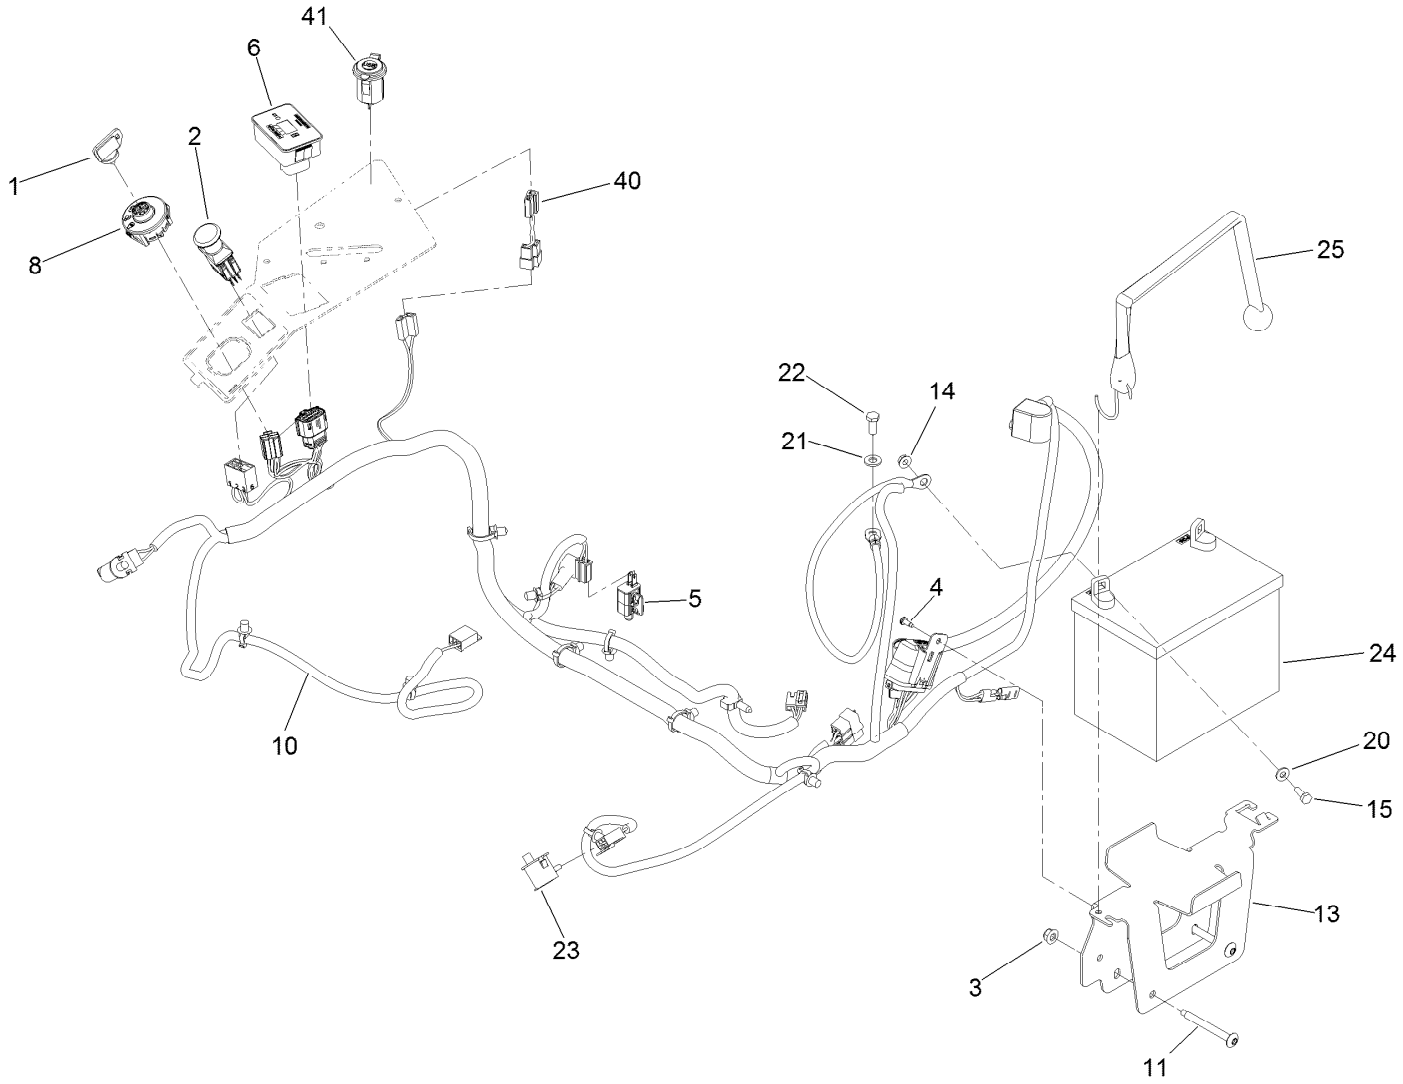


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	63-8360	1	Key-Ignition
2	103-5221	1	Switch-PTO
3	104-8300	2	Nut-HF, NI
4	105-6849	1	Screw-Forming, Thread
5	110-6765	1	Switch
6	116-5609	1	Module ASM
8	137-4100	1	Switch-Ignition
10	126-5803	1	Harness-Wire ▲
11	126-6267	2	Screw-TTH
13	126-6725-03	1	Tray-Battery
14	32128-33	2	Nut-HF
15	321-4	2	Screw-HH
20	3256-22	2	Washer-Flat
21	33094-00	1	Washer-Plain
22	33114-020	1	Screw-HH
23	82-2190	2	Switch-Bail
24		1	Battery ●■
25	142-8697	1	Strap, Bungee
40	139-6395	1	Harness-Wire, USB Kit
41	140-7955	1	Port-Power, USB

● Obtain locally. ■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


Wire Harness Assembly No. 126-5803

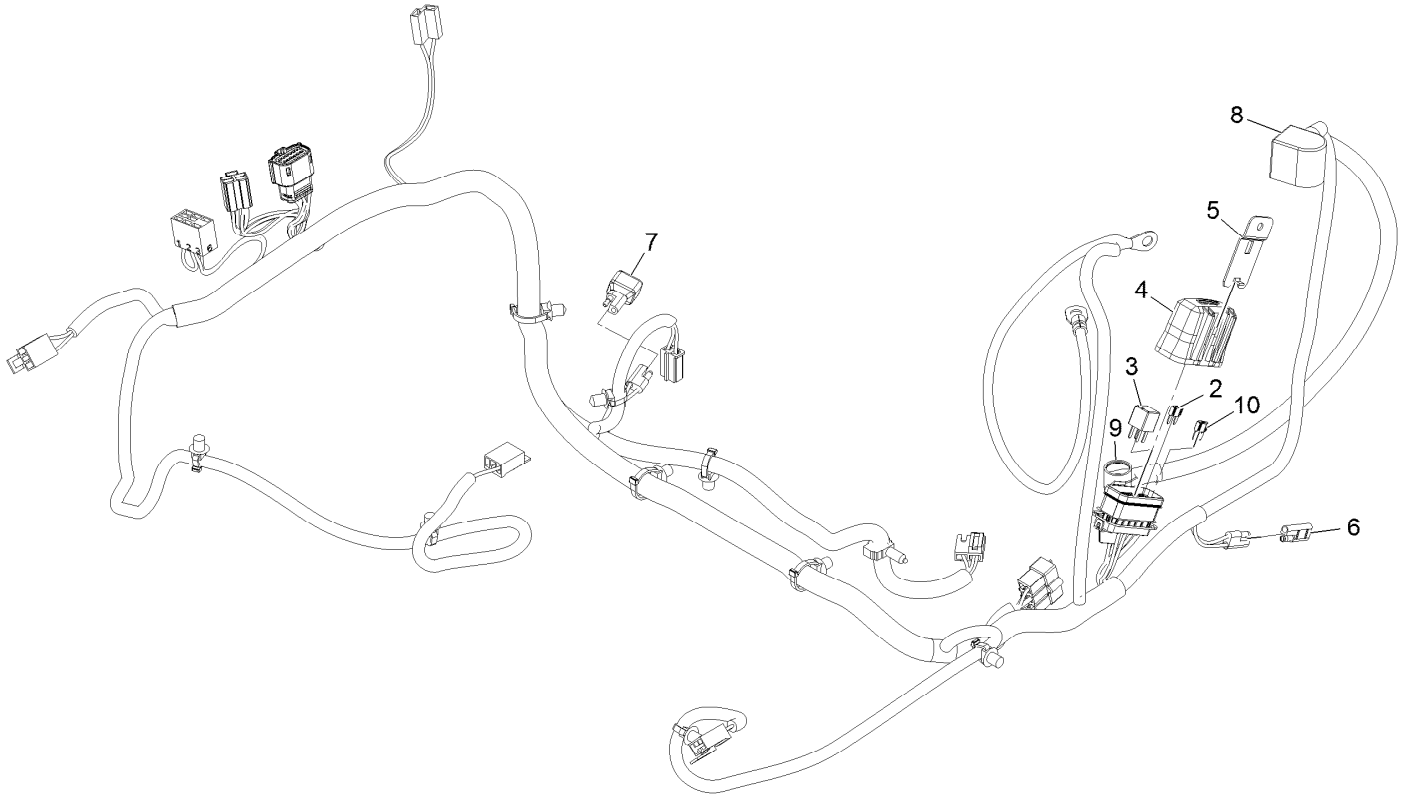

Wire Harness Assembly No. 126-5803 (continued)

Ref.	Part Number	Qty.	Description
2	121-8868	1	Fuse-Mini Blade, 20 Amp
3	126-3991	1	Relay-Micro
4	32180-176	1	Cover-Block, Fuse
5	32180-177	1	Clip-Mounting
6	116-0053	1	Cap-Plug
7	103-3895	1	Diode
8	126-8876	1	Insulator-Battery
9	1-543393	1	Insulator-Solenoid
10	121-8867	1	Fuse-Mini Blade, 15 Amp


Deck Lift Assembly

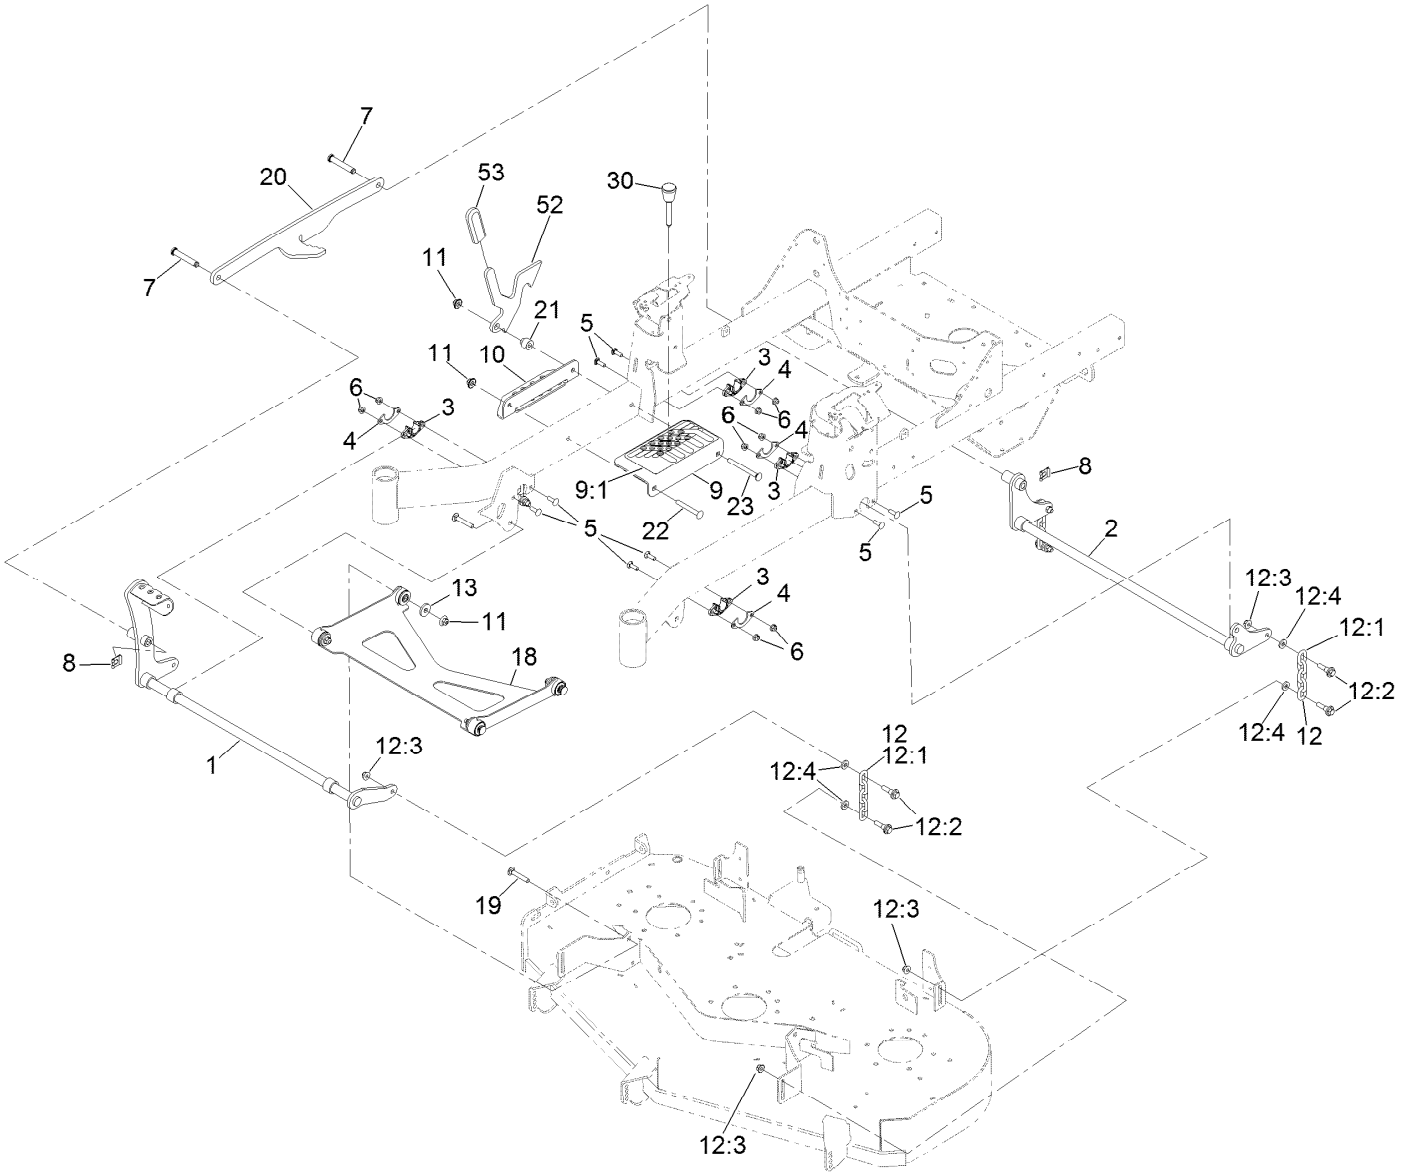

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3342-03	1	Shaft-Lift, Deck
2	126-3343-03	1	Shaft-Lift, Deck (Rear)
3	115-5065	4	Bushing-Flange
4	116-2887	4	Gusset-Lift, Deck
5	3230-22	8	Screw-CARR
6	104-8300	8	Nut-HF, NI
7	126-9181	2	Pin-Clevis
8	138-8491	2	Clip-Pin
9	126-4535	1	Bracket ASM
9:1	126-4784	1	Decal-HOC
10	126-4640-03	1	Angle-HOC, Lower
11	109-6658	4	Nut-Flange, NI
12	126-8877	4	Deck Chain ASM
12:1	1-633447	1	Chain-Lift, Deck
12:2	130-0742	2	Bolt-Shoulder
12:3	104-8301	2	Nut-HF, NI
12:4	43-0940	2	Spacer
13	1-373034	2	Washer
18	126-8365	1	Deck Strut ASM
19	3231-7	2	Screw-CARR
20	126-4639-03	1	Link-HOC
21	126-5221	1	Spacer-Stepped
22	3231-42	1	Screw-CARR
23	135-0313	1	Screw-CARR
30	126-5401	1	Pin-HOC
52	140-1249	1	Plate-Transport Lock
53	132-4749	1	Grip-Lever


Deck Strut Assembly No. 126-8365

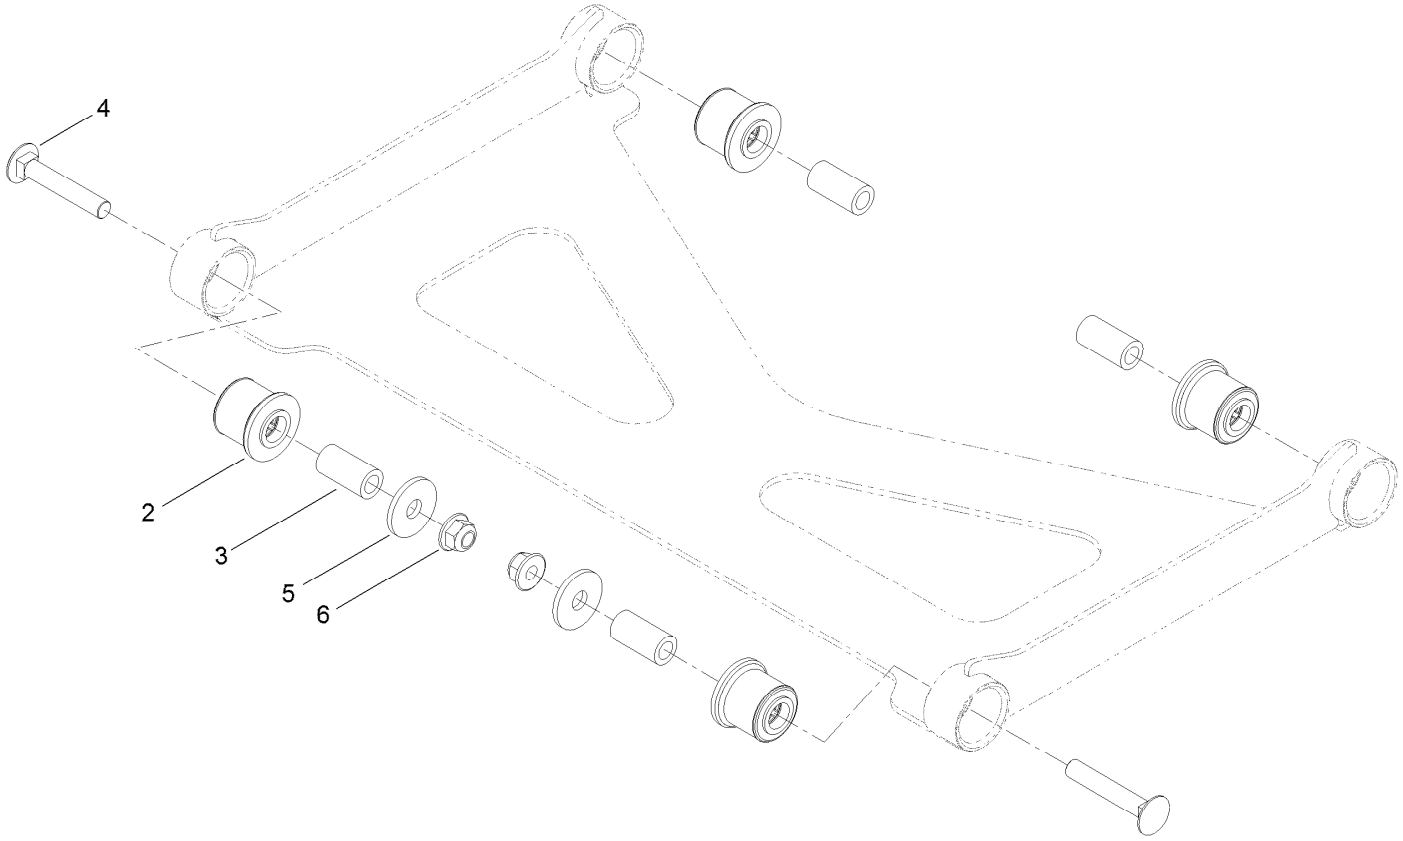

Deck Strut Assembly No. 126-8365 (continued)

Ref.	Part Number	Qty.	Description
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer
4	3231-7	2	Screw-CARR
5	2844	2	Washer
6	104-8301	2	Nut-HF, NI

Engine, Clutch and Muffler Assembly

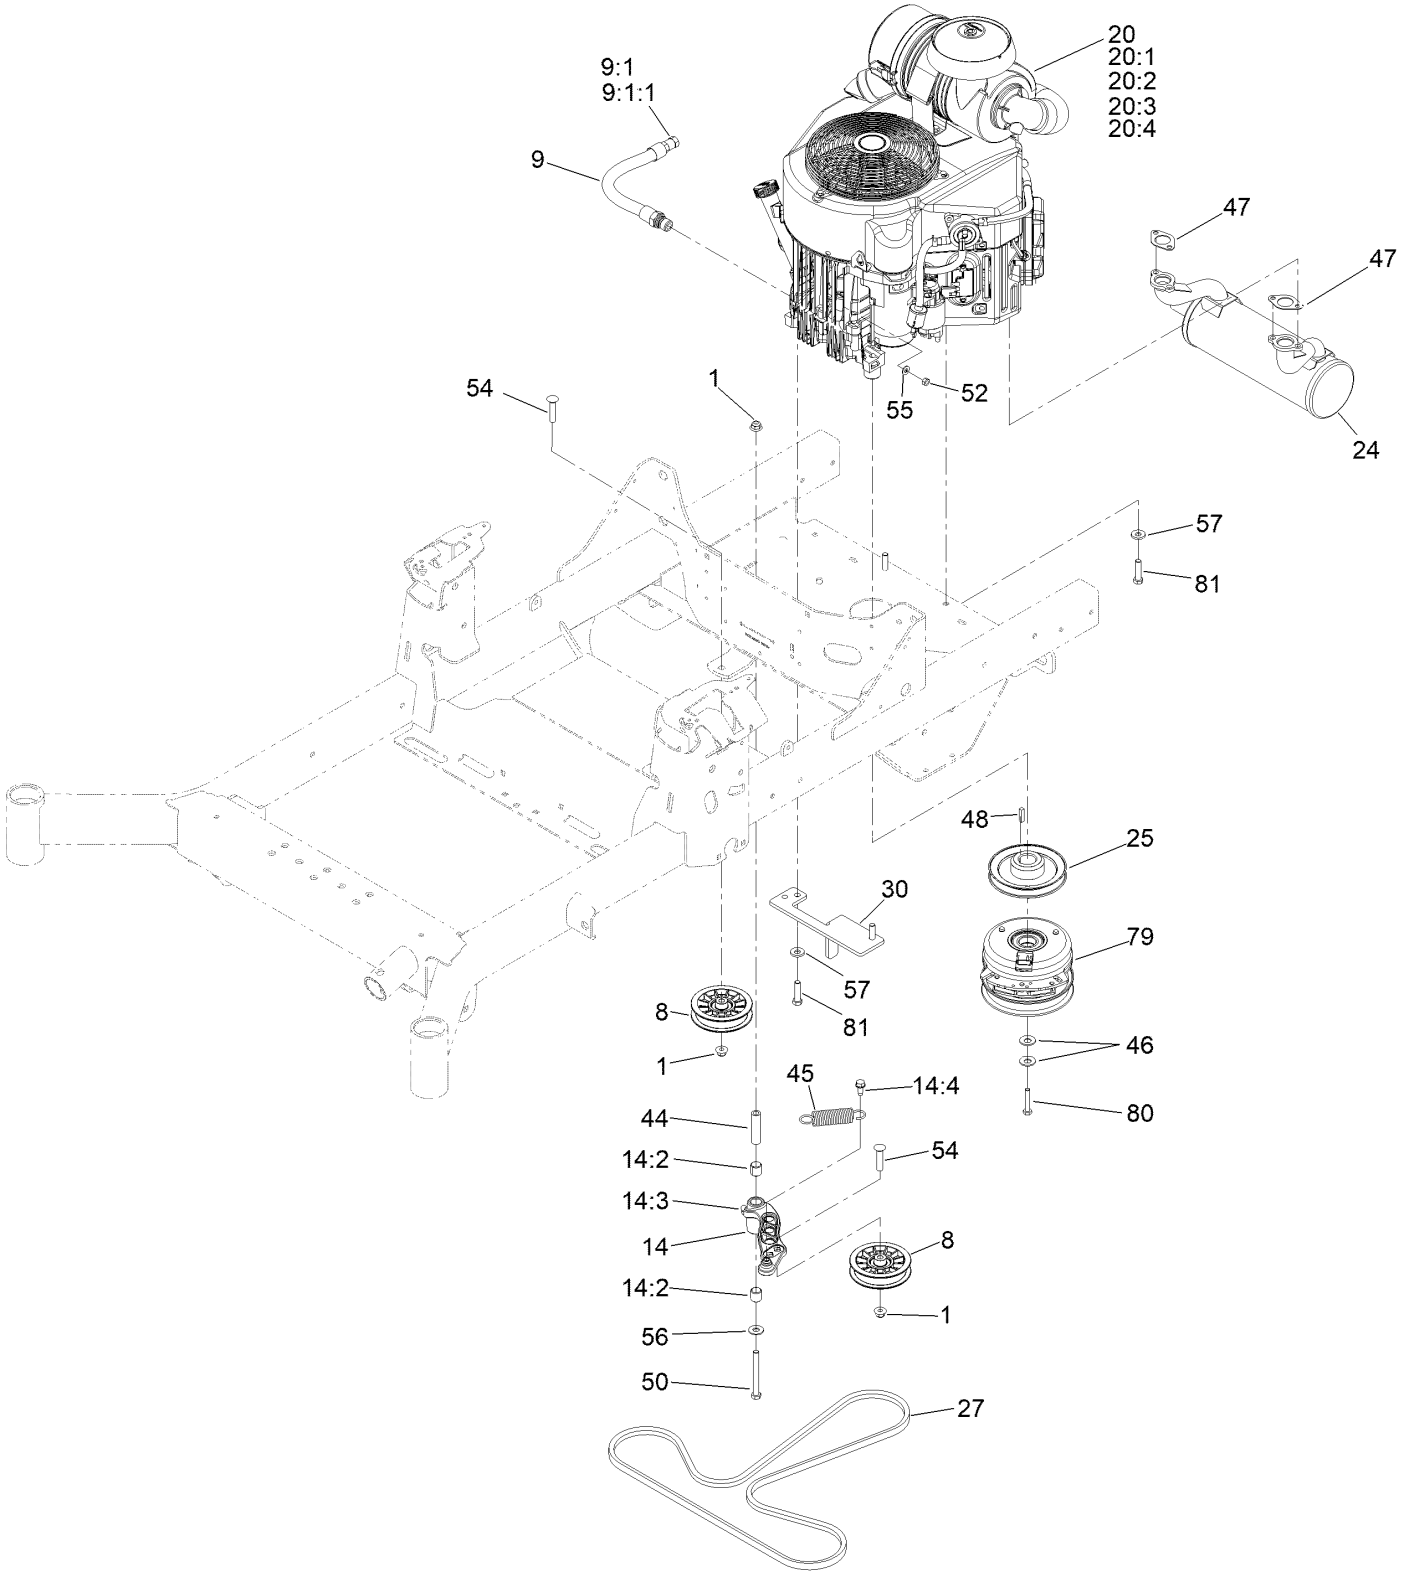


Engine, Clutch and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8301	3	Nut-HF, NI
8	116-2456	2	Pulley-Flat Idler
9	116-4924	1	Engine Oil Drain Hose ASM ■
9:1	353-508	1	Plug-HH ●
9:1:1	237-42	1	O-Ring
14	126-0973	1	Idler Arm ASM
14:2	1-513034	2	Sleeve-Bearing
14:3	302-40	1	Fitting-Grease, 90 DEG
14:4	32144-11	1	Screw-HWH
20		1	Engine-Kawasaki, Fx730V ▲◆
20:1		1	Kawasaki 49065-7007 Engine Oil Filter ▲◆
20:2		1	Kawasaki 49019-7005 Fuel Filter ▲◆
20:3		1	Kawasaki 11013-7045 Safety Filter ▲◆
20:4		1	Kawasaki 11013-7044 Engine Air Filter ▲◆
24	126-4360	1	Muffler
25	126-5358	1	Sheave (W/Hub)
27	126-5993	1	Belt-V
30	126-6687-03	1	Anchor-Clutch
44	1-603384	1	Bushing-Pivot, Idler
45	1-603402	1	Spring-Extension
46	1-603610	2	Washer-Spring
47	1-653313	2	Gasket-Exhaust
48	1-807259	1	Key
50	323-15	1	Screw-HH
52	3217-5	1	Nut-Hex
54	3231-29	2	Screw-CARR
55	3256-22	1	Washer-Flat
56	3256-4	1	Washer-Flat
57	98-5975	4	Washer-Belleville
79	140-5456	1	Clutch-PTO
80	3212-10	1	Screw-HH
81	323-7	4	Screw-HH

● Torque to 24-26 ft-lb
▲ Not serviced separately
■ Torque to 23-29 ft-lb
◆ Obtain parts from www.kawpower.com


Deck Assembly

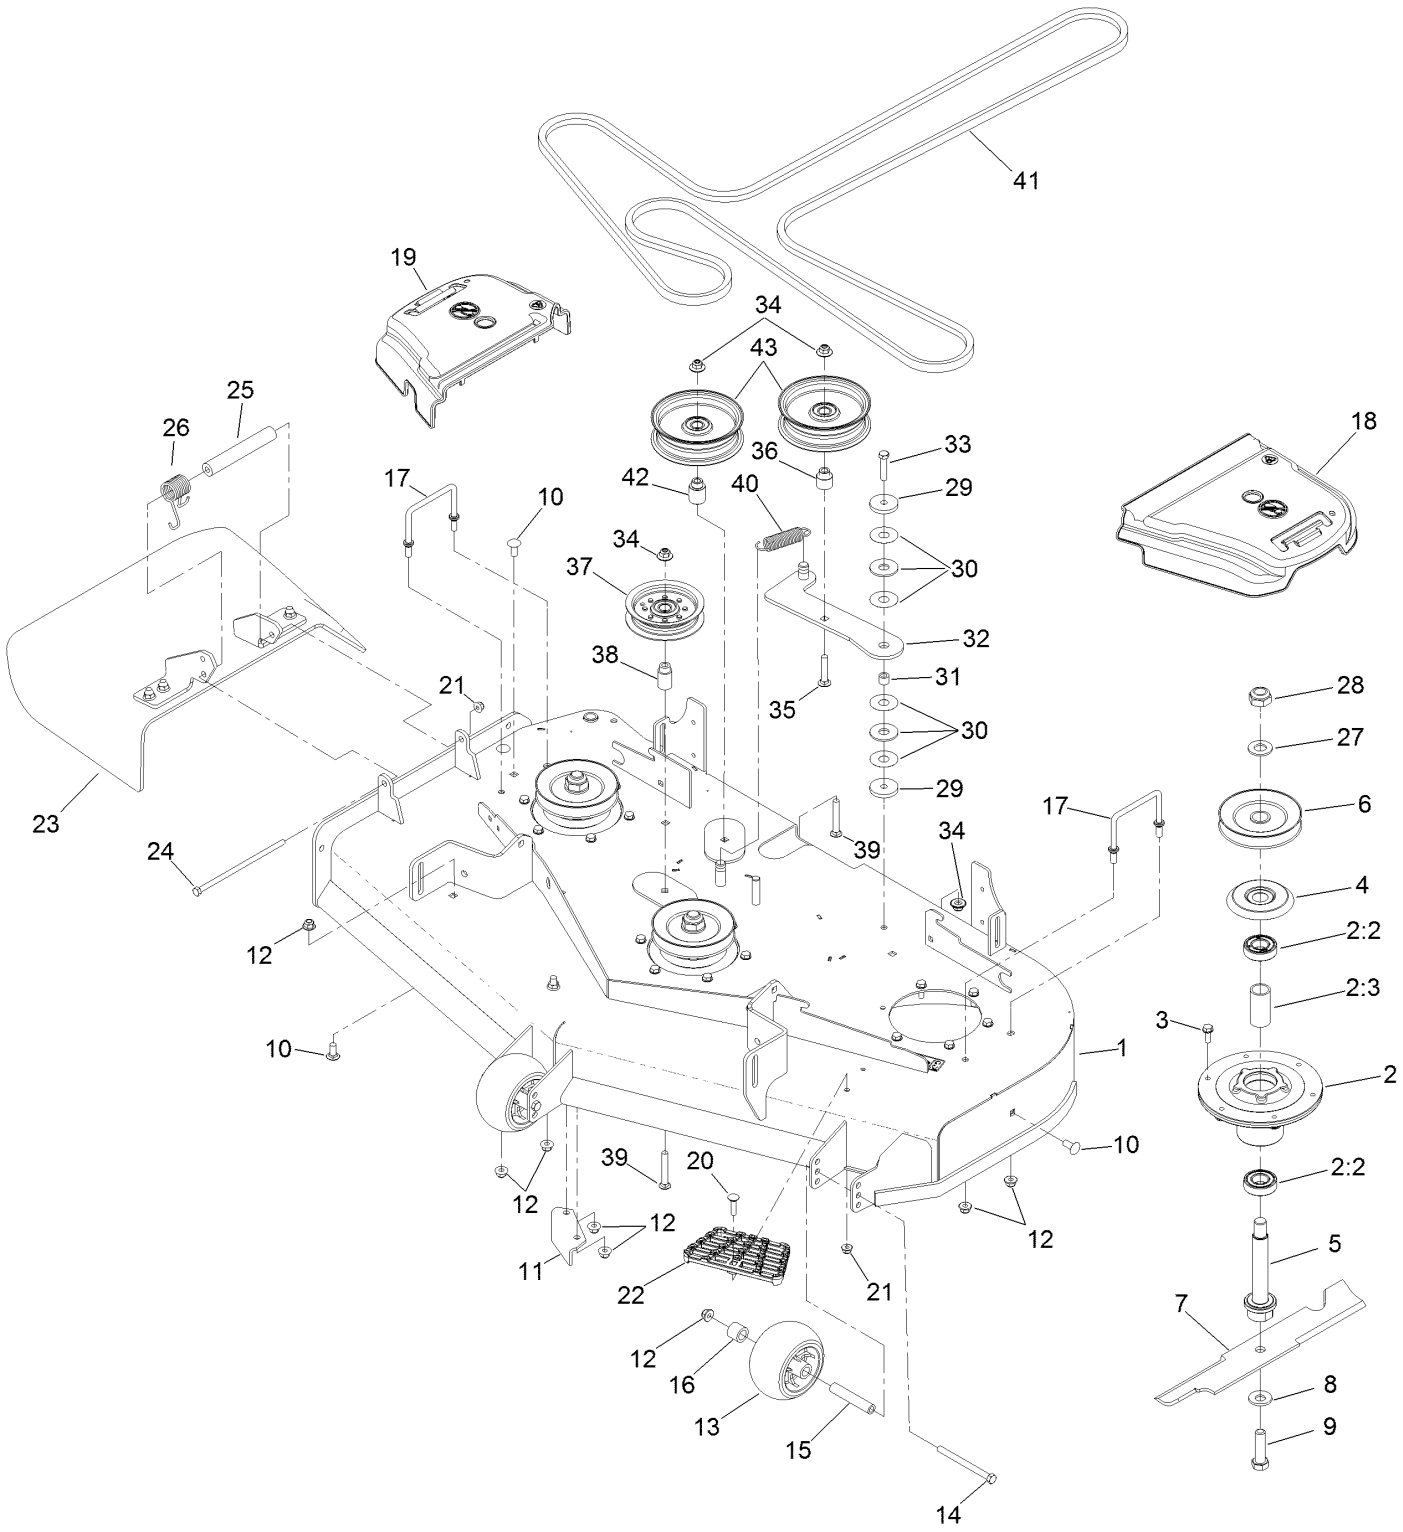

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-8956	1	Deck Decal ASM
2	120-5477	3	Spindle ASM
2:2	116-0720	2	Bearing-Ball
2:3	115-2641	1	Spacer-Bearing
3	32144-41	18	Screw-Taptite
4	117-7210	3	Shield-Bearing
5	126-7629	3	Shaft-Spindle
6	117-7326	3	Pulley
7	133-2137	3	Blade-Rotary, 16.5In (Hi Flow)
8	125-1736	3	Washer-Belleville
9	51-4060	3	Screw-Blade
10	3231-27	6	Screw-CARR
11	107-8541-01	1	Baffle-Discharge
12	104-8301	12	Nut-HF, NI
13	1-603299	2	Roller-Scalp, Anti
14	323-23	2	Screw-HH
15	98-7912	2	Tube-Spanner
16	98-7913	2	Tube-Spacer
17	109-6982	2	Wireform-Cover
18	109-6936	1	Cover-Belt, LH
19	109-6935	1	Cover-Belt, RH
20	3230-3	1	Screw-CARR
21	104-8300	2	Nut-HF, NI
22	126-4781-03	1	Step-Deck
23	120-2451	1	Deflector ASM
24	322-50	1	Screw-HH
25	105-4622	1	Spacer
26	108-4052	1	Spring-Torsion
27	92-5836	3	Washer
28	3296-67	3	Nut-Lock, NI
29	110-9981	2	Washer-Plain
30	114-0463	2	Washer-Friction, Composite
31	1-413088	1	Bushing-Lever, Lift
32	115-5054	1	Arm-Idler
33	323-9	1	Screw-HH
34	109-6658	4	Nut-Flange, NI
35	3231-6	1	Screw-CARR
36	126-7684	1	Bushing-Idler
37	116-3626	1	Pulley-Idler
38	1-413113	1	Bushing-Idler
39	3231-31	2	Screw-CARR
40	139-3616	1	Spring - Extension
41	126-7731	1	Belt, Deck Drive
42	126-7683	1	Bushing-Idler
43	116-4669	2	Idler-Pulley, Flat


Deflector Assembly No. 120-2451

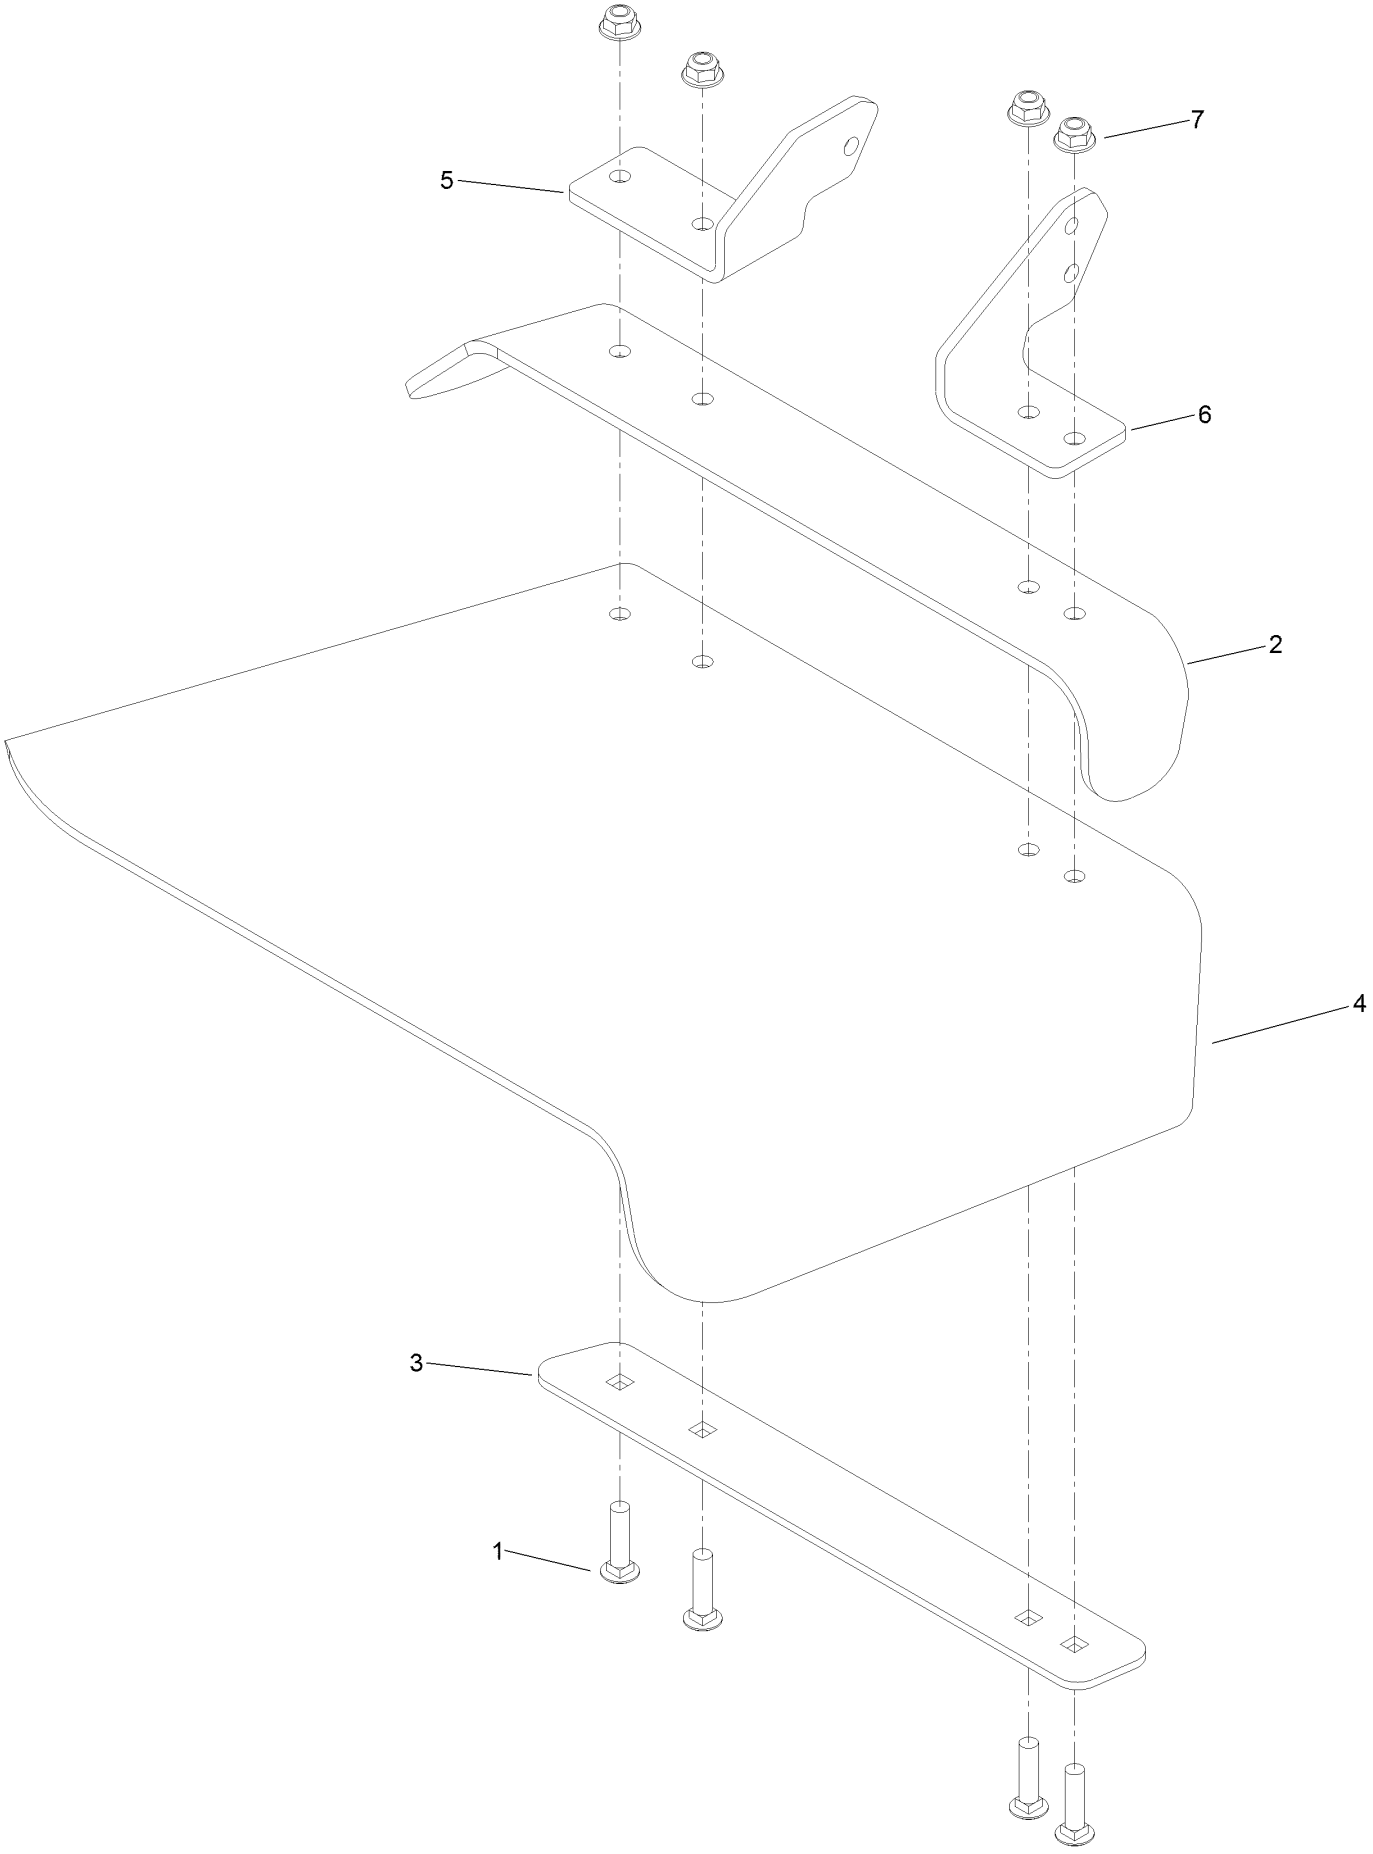

Deflector Assembly No. 120-2451 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

Deck Decal Assembly No. 126-8956

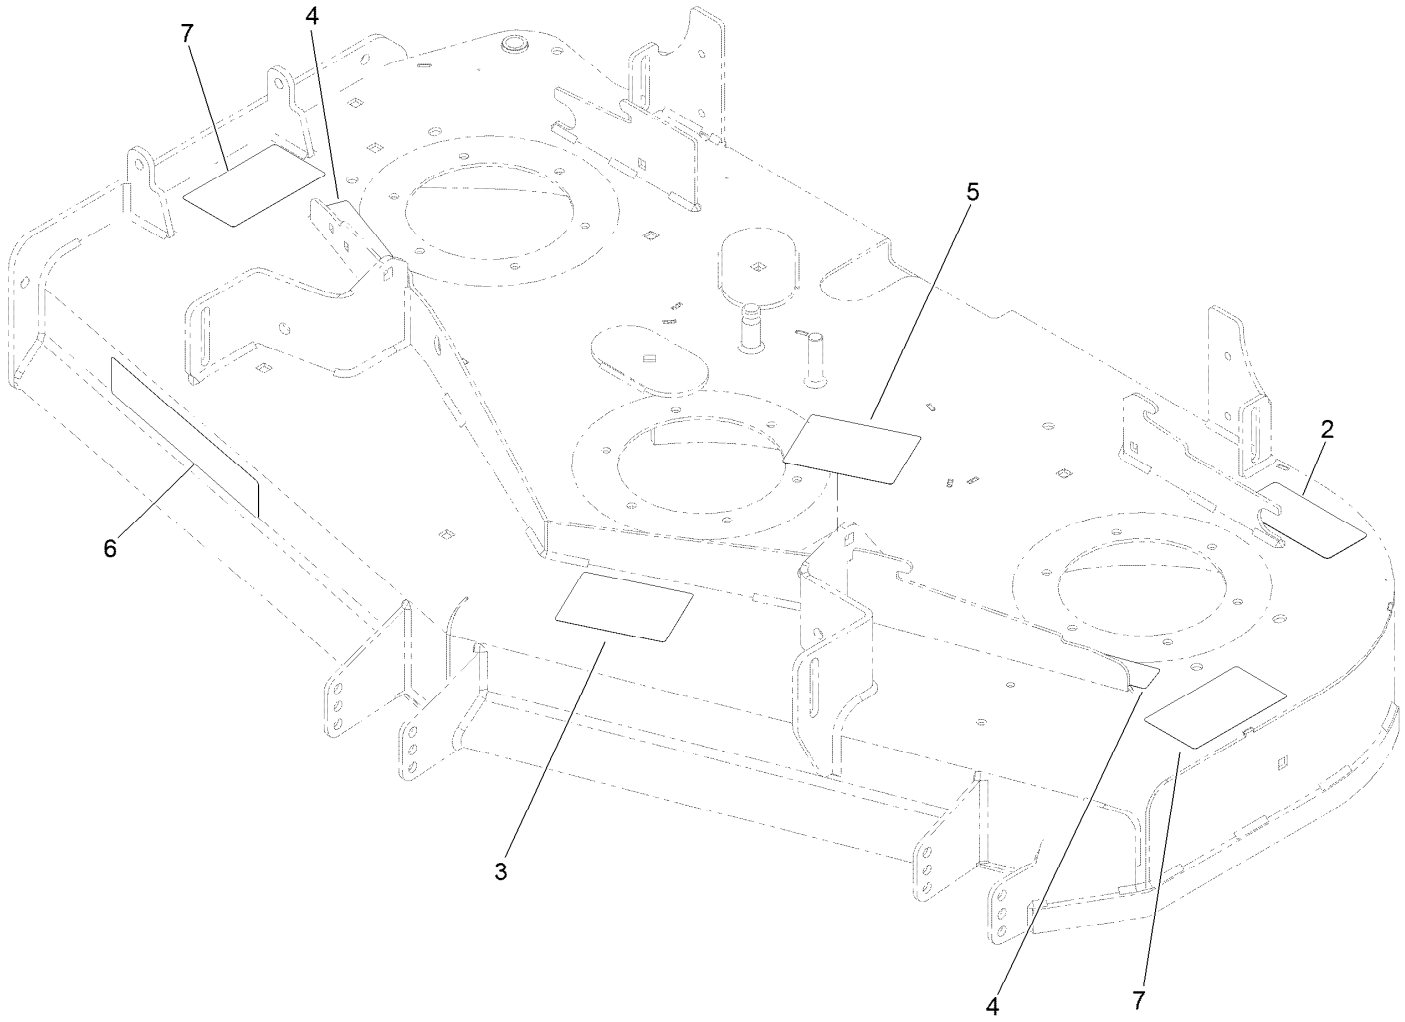

Deck Decal Assembly No. 126-8956 (continued)

Ref.	Part Number	Qty.	Description
2	93-7818	1	Decal-Torque, Blade Bolt
3	112-3858	1	Decal-Scalp, Anti
4	112-9028	2	Decal-Cover, Missing
5	117-1194	1	Decal-Routing, Belt
6	107-1690	1	Decal
7	117-3848	2	Decal-Danger

Attachments and Accessories

For 77248 48in Z Master Professional 2000 Series Riding Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Toro Hydro Kit	121-3783
Cover-Hitch	126-8299
Trash Container Kit	126-8379
Weight Caster Kit	126-8639
48in Recycler Kit	126-8701
Jack Kit	127-6666
MVP Belt and Blade Kit	127-6795
Engine Maintenance Kit-Kawasaki FX	133-1307
Hi-Back Seat Cover	133-1308
Blade-Rotary, 16.5in (Hi Flow)	133-2137
Blade-Rotary, Atomic 16.5	133-2160
Blade-Rotary, Recycling 16.5in	133-2163
Blade (6 Pack) 16.5in Hi Flow	133-2176
Blade (6 Pack) 16.5in Recycle	133-2179
Blade (6 Pack) 16.5in Atomic	133-2182
5 Gallon Bucket	133-2533
Spark Arrestor, 1.25 I.D.	137-8098
Extended Control Levers Kit, Dedicated-Bagging Riding Mower	138-6020
Asm-semi Pneumatic 13x6.50-6	140-4896
Tilt Sensor-Radius	142-2802
Kit-Light (mid-mount ZRT Mower)	144-1992
Kit-Jack Mount	144-1993
Hardtop Sun Canopy	144-3719
Handle Extension Kit	145-3615
Bucket Mount Kit	145-3687
Universal Mount Kit	145-3688
Trimmer Mount Kit	145-3689
Kit-Titan Hd Triple Threat Attachment	145-3691
Kit-USB	145-8458
Toro Deluxe Rider Cover	490-7319
E-Z Vac Std Blower Kit 48-in 5d	78401
Heavy Duty Bagger Kit	78431
48in Completion Kit (Heavy Duty Bagger)	78433
Standard EZ Vac Bagger	78481

Notes:



Count on it.