Form No. 3328–523

CE Conversion Kit

2002 and Later Dingo® 320–D

Model No. 22360

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved


Contents

Description	Page
Decal Assembly	3
Lever Lock Assembly	4
Auxiliary Valve Control Lever Assembly	5
Parking Brake Assembly	6

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

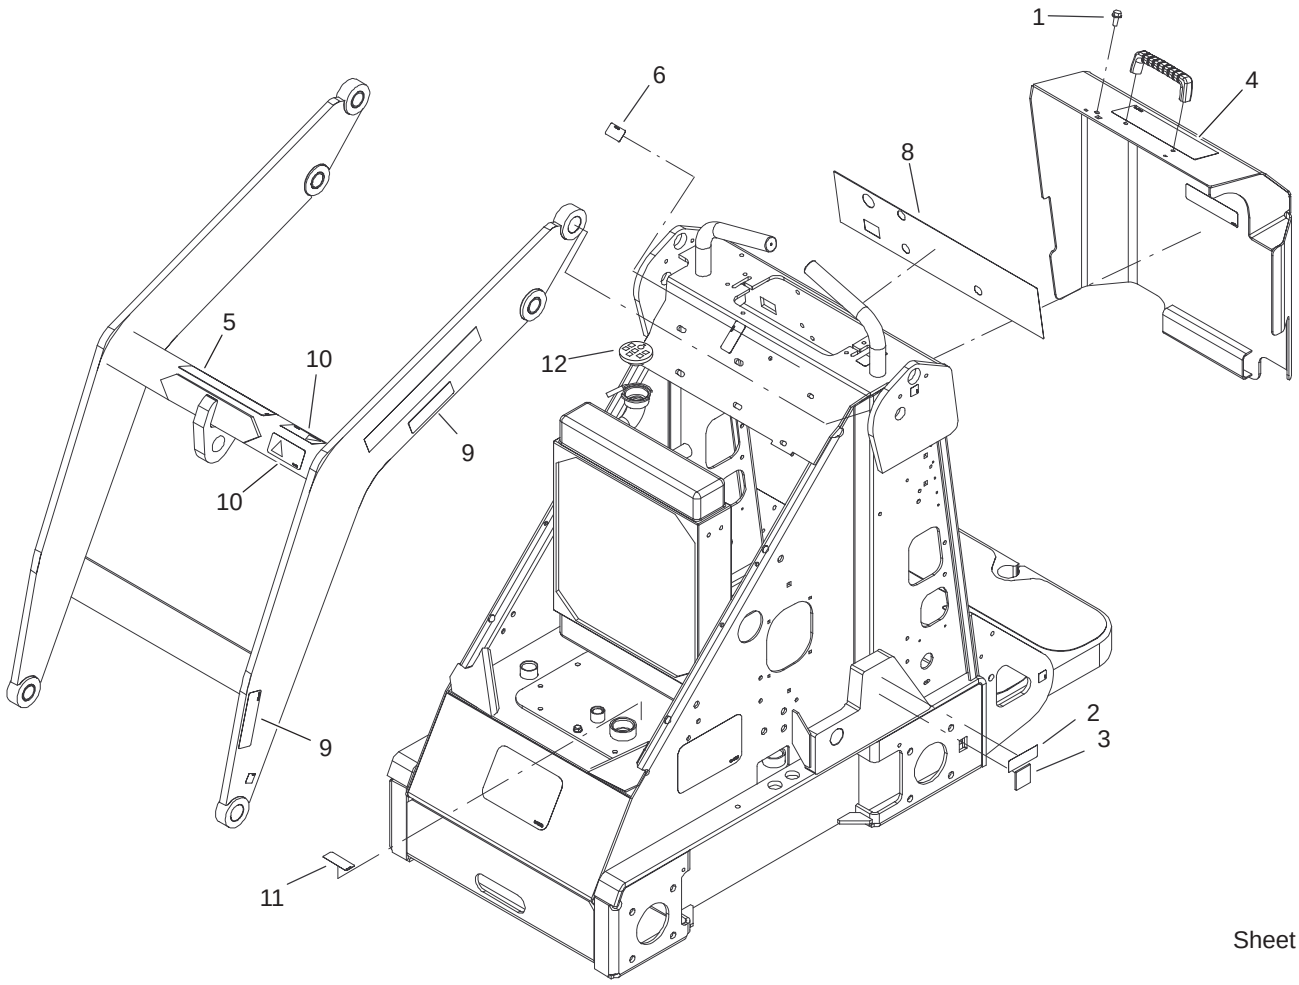


Sheet No.:2

Decal Assembly

Ref. No.	Part No.	Qty.	Description
1	32144–70	1	Screw–HH
2	105–8424	1	Decal–Ce
3	105–8405	1	Decal–Noise, Europe
4	100–1701	1	Decal–Danger
5	100–1702	1	Decal–Caution
6	100–1703	1	Decal–Limiter, Speed
8	100–1706	1	Decal–Panel, Control
9	100–8821	4	Decal–Pinch
10	100–8822	2	Decal–No Rider
11	93–6686	1	Decal–Oil, HYD
12	106–5976	1	Decal–Cap, Radiator

Ref. No.	Part No.	Qty.	Description

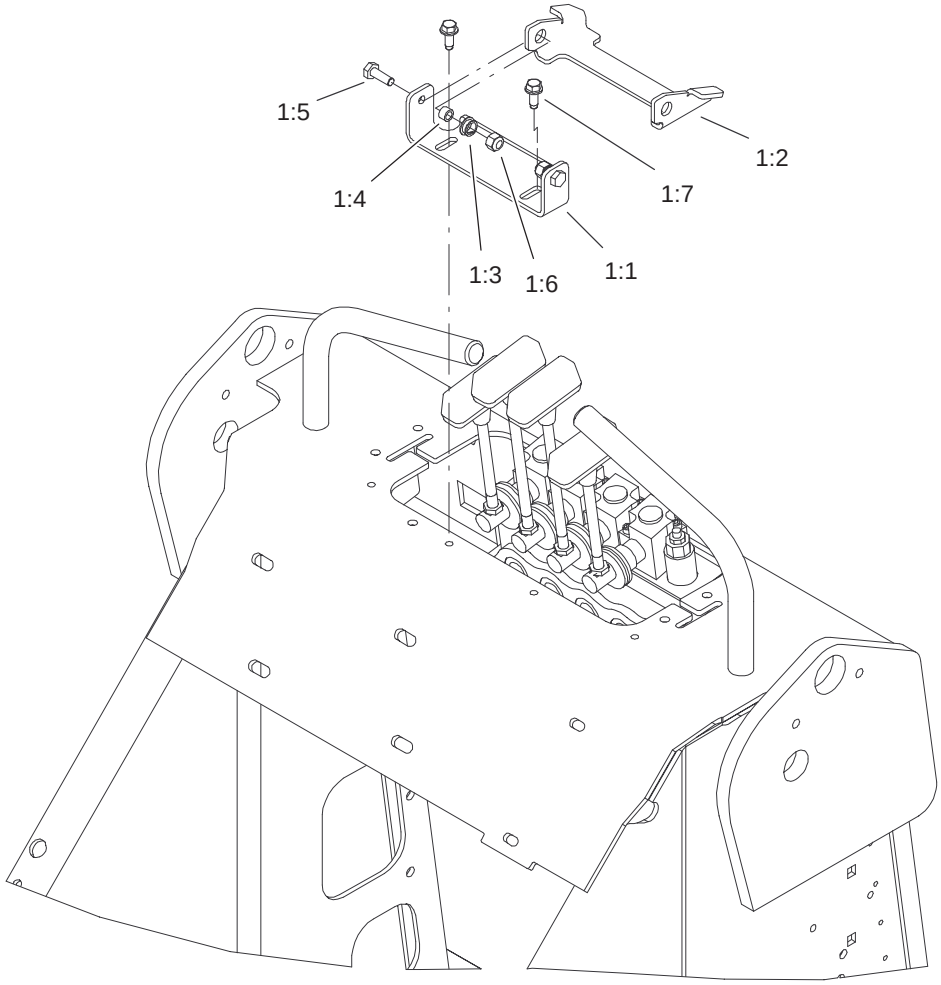


Sheet No.:3

Lever Lock Assembly

Ref. No.	Part No.	Qty.	Description
1	104–6073	1	Lever Lock ASM
1:1	104–6074–03	1	Bracket–Lock, Lever
1:2	104–6075–03	1	Arm–Lock, Lever
1:3	5979	2	Bushing–Nyliner
1:4	88–7860	2	Spacer–Clutch
1:5	321–4	2	Screw–HH
1:6	3296–42	2	Nut–Lock, NI
1:7	32144–10	2	Screw–HWH

Ref. No.	Part No.	Qty.	Description

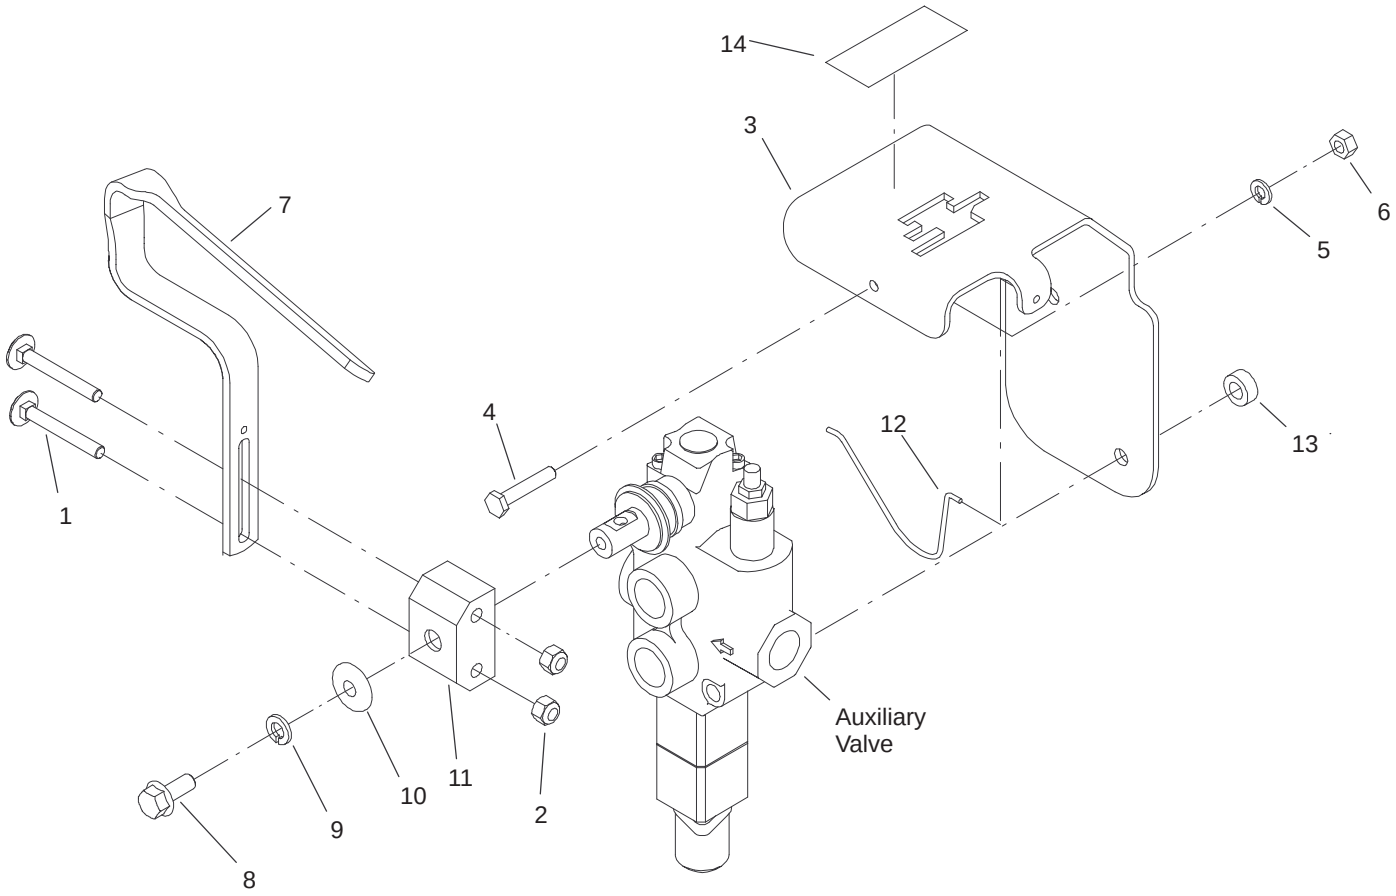


Sheet No.:4

Auxiliary Valve Control Lever Assembly

Ref. No.	Part No.	Qty.	Description
1	3230–33	2	Screw–CARR
2	3296–42	2	Nut–Lock, NI
3	98–0067–03	1	Bracket
4	32104–96	1	Screw–HH
5	3253–3	1	Washer–Lock
6	3217–5	1	Nut–Hex
7	100–2086	1	Grip–Control
8	33104–020	1	Screw–HHF
9	3253–4	1	Washer–Lock
10	100–2088	1	Cap–Mount
11	100–2087	1	Mount–Lever
12	100–2089	1	Spring–Torsion
13	100–2085	2	Tube–Spacer
14	100–1704	1	Decal–Power, Auxiliary

Ref. No.	Part No.	Qty.	Description

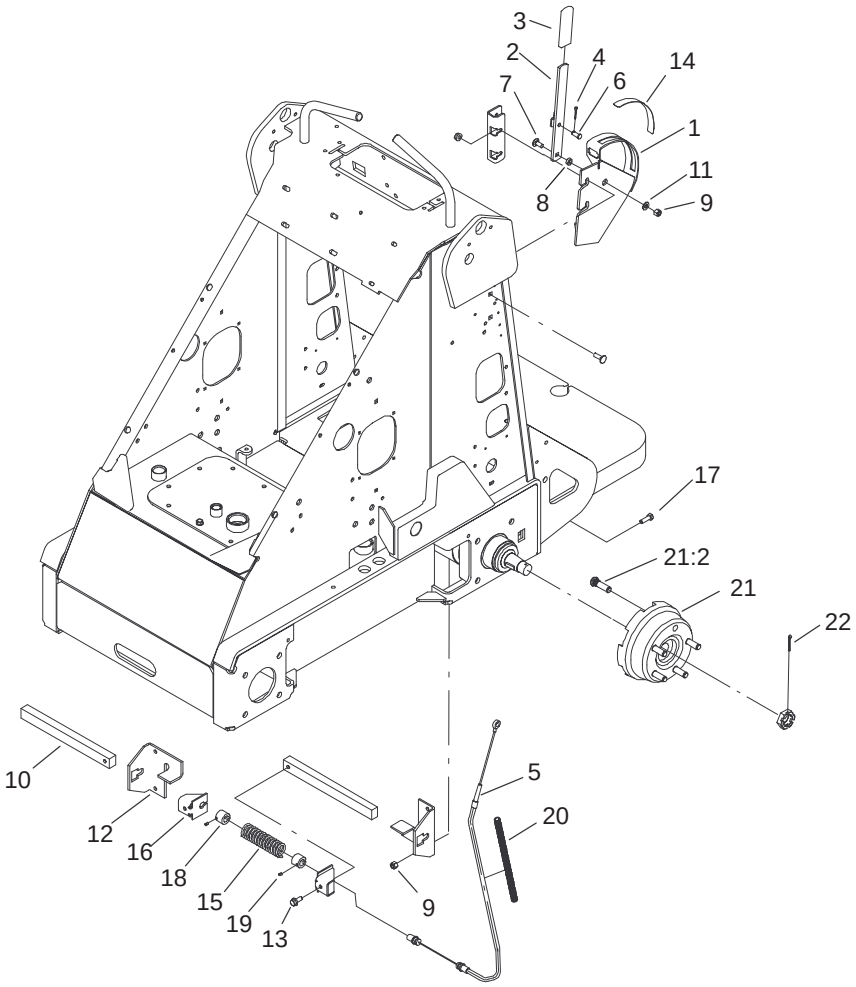

Sheet No.:5

Parking Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	105–8414–03	1	Plate
2	100–1684–03	1	Lever
3	62–9130	1	Grip–Handle
4	3272–6	1	Pin–Cotter
5	100–1679	1	Cable
6	283–62	1	Pin–Clevis
7	3230–23	1	Screw–CARR
8	100–1683	1	Hub–Lever
9	3296–29	5	Nut–Lock, NI
10	100–1674–03	2	Bar–Brake
11	3256–23	1	Washer–Flat
12	100–1676–03	2	Bracket–Brake
13	100–1668	2	Screw–Flange
14	100–1692	1	Decal–Brake
15	100–1678–03	1	Spring
16	100–1677–03	2	Bracket–Cable
17	322–5	4	Screw–HH
18	100–6274	2	Tube–Guide
19	3245–20	2	Screw–HSH
20	100–4697	1	Tube–Convoluted
21	105–4056	2	Wheel Hub ASM
21:2	10–6830	5	Stud–Type, Drive
22	99–3171	2	Pin–Cotter

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								


TORO®