Form No. 3464-617 Rev A

TORO®

Count on it.

Parts Catalog

Cab Kit

Workman® GTX Utility Vehicle

Model No. 07142—Serial No. 413000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3464-617 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Mount and Interior Seal Assembly 4
Roof, Console and Windshield Wiper Assembly 6
Front and Rear Window Assembly 8
Wire Harness Assembly 10

© 2023—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Mount and Interior Seal Assembly

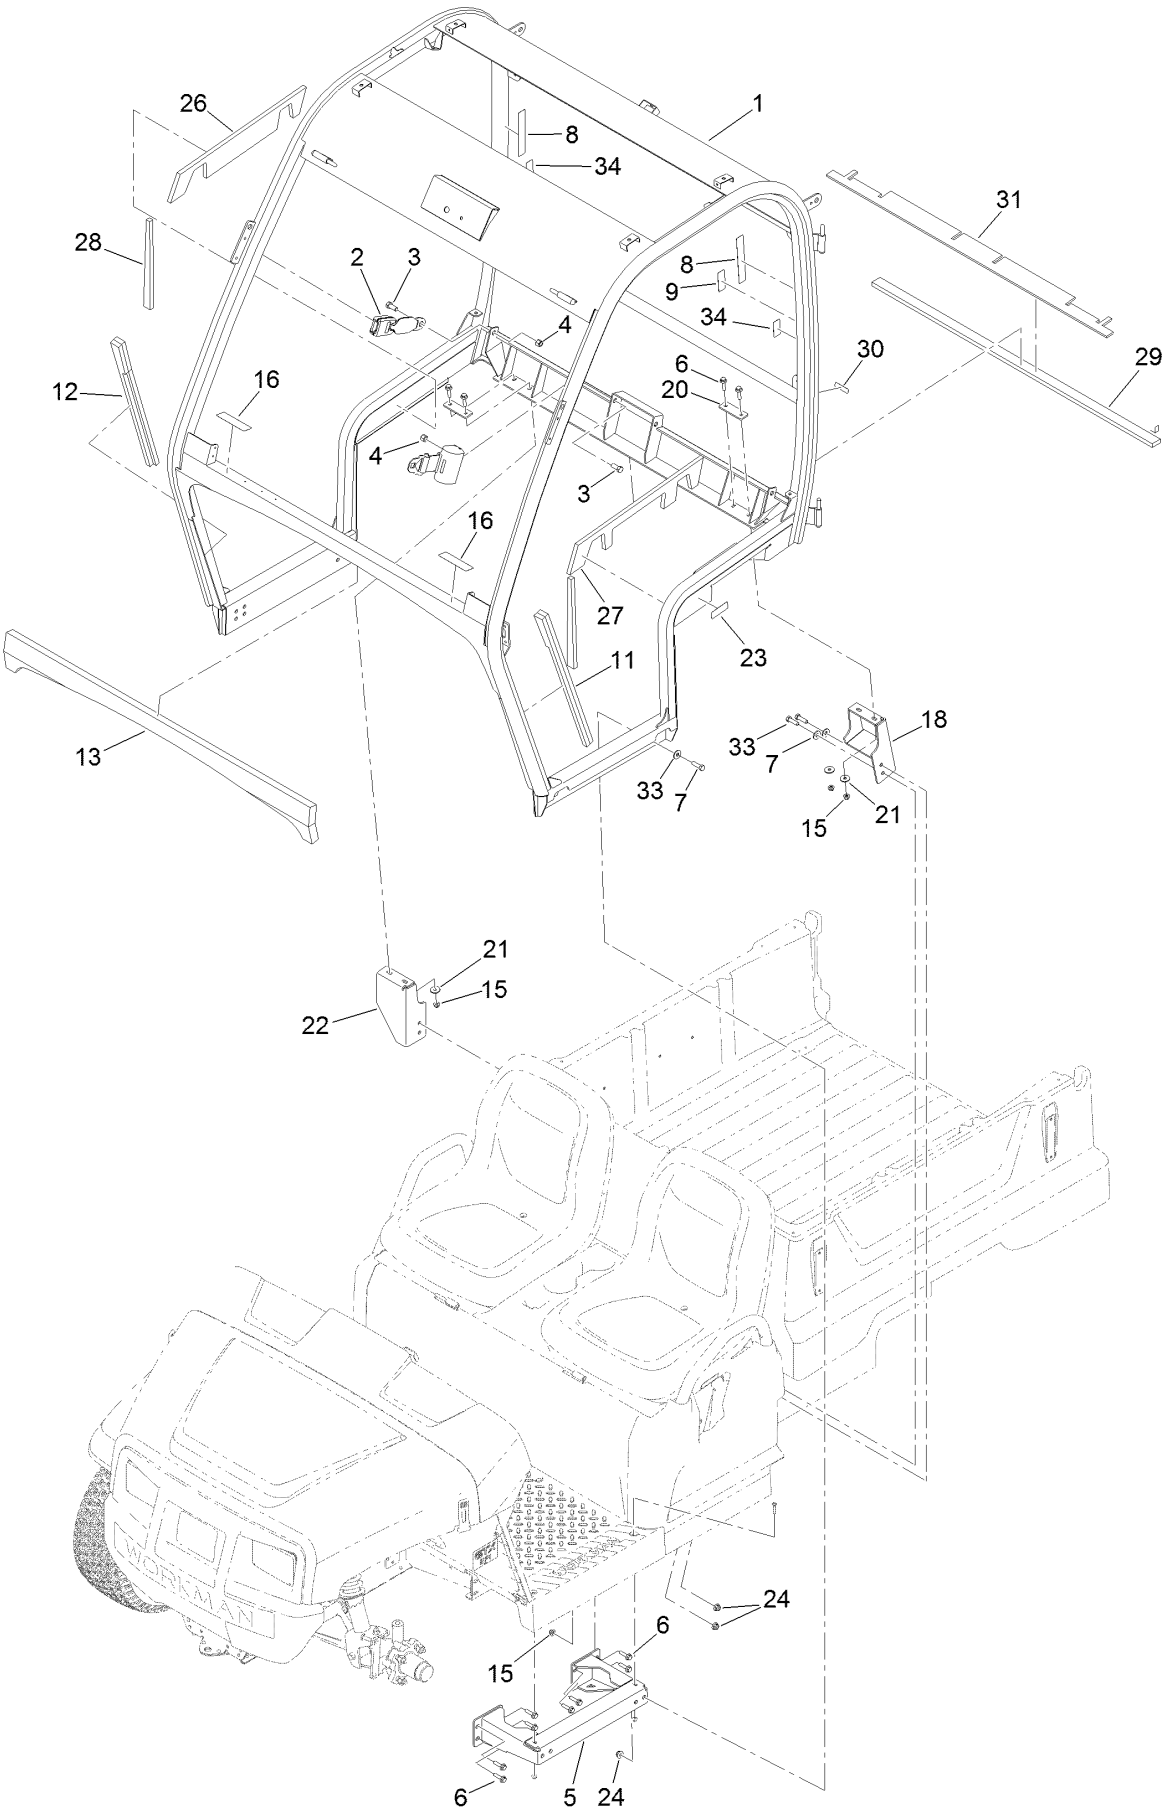

Frame Mount and Interior Seal Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-2055	1	Cab Frame ASM
2	133-1022	2	Belt-Safety
3	3212-4	4	Screw-HH
4	3296-7	4	Nut-Lock
5	136-1912-03	2	Plate-Support, Floor
6	132-3837	20	Screw-HHF
7	323-44	10	Screw-HH
8	133-1016	2	Decal-Danger
9	133-1017	1	Decal-ROPS
11	133-1055	1	Seal-Foam, RH
12	133-1054	1	Seal-Foam, LH
13	133-0773	1	Foam-Seal
15	104-8300	20	Nut-HF, NI
16	130-5964	2	Decal-Window, Pin
18	133-0756-03	1	Support-LH
20	132-3649	2	Plate-Support
21	115-7109	4	Washer-Flat
22	133-0757-03	1	Support-RH
23	131-8410	1	Decal-Danger, Fuel
24	104-8301	10	Nut-HF, NI
26	136-1914	1	Seal-Foam, Passenger
27	136-1915	1	Seal-Foam, Driver
28	136-1916	2	Seal-Foam
29	133-1036	1	Seal-Foam
30	120-9570	1	Decal-Warning
31	133-1132	1	Seal-Foam
33	80-6990	10	Washer-Hardened
34	136-2000	2	Decal-Safety, Pinch


Roof, Console and Windshield Wiper Assembly

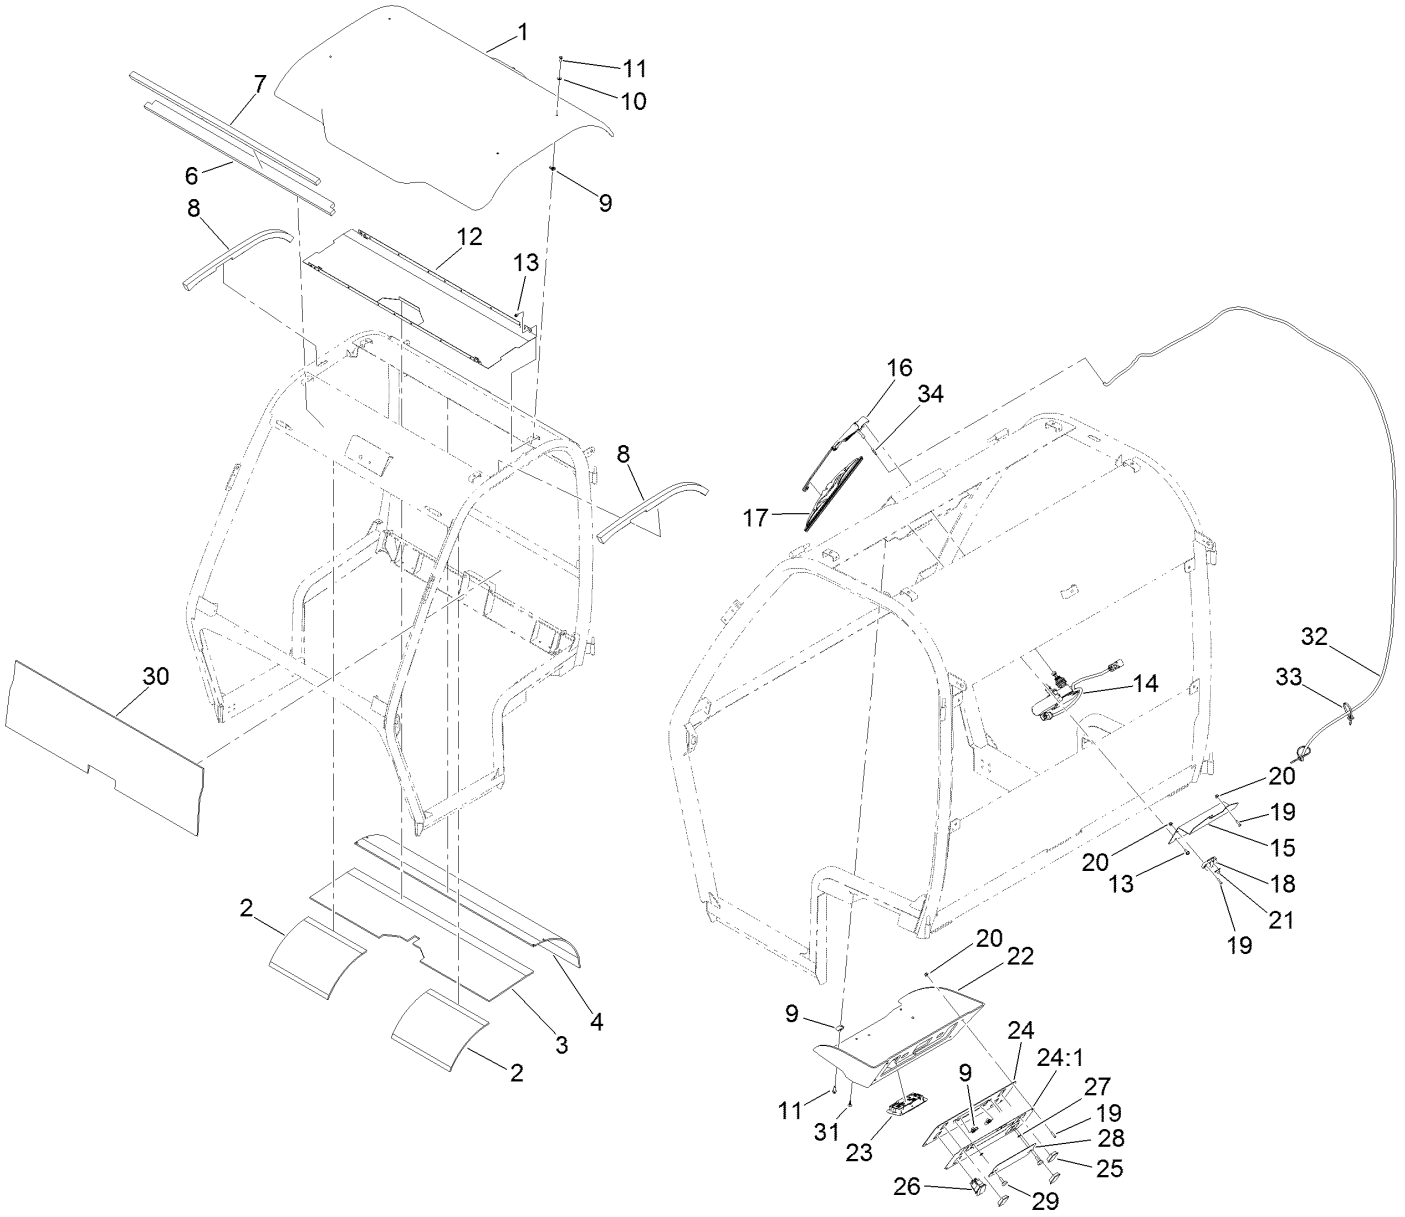

Roof, Console and Windshield Wiper Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-0669	1	Roof
2	133-1126	2	Foam-Headliner, Front
3	133-0784	1	Foam-Headliner, Center
4	133-0785	1	Foam-Headliner, Rear
6	133-0775	2	Seal-Foam, Roof
7	133-1094	1	Foam-Roof, Front
8	133-1088	2	Seal-Foam, Roof
9	107069	11	Clip
10	119-0872	5	Washer-Sealing, Bonded
11	32105-15	9	Screw-HWH
12	136-1942-03	1	Panel-Headliner
13	32104-17	6	Screw-HWH
14	130-6087	1	Wiper Motor ASM
15	132-3628-03	1	Mount-Fuse Block
16	127-9878	1	Arm-Wiper
17	133-1084	1	Blade-Wiper
18	42862	1	Block-Terminal, Ground
19	104-2408	8	Screw-HSBH
20	120-4578	8	Nut-HF
21	42863	1	Strip-Jumper
22	132-3627	1	Console-Roof, Top
23	125-7437	1	Light-Dome
24	145-7732	1	Panel ASM-Console
24:1	145-7728	1	Decal-Console
25	99-7420	3	Plug-Hole
26	119-8355	1	Switch-Rocker
27	32115-15	2	Nut-Push
28	125-9603	1	Plate-Cover-Fuse
29	125-7438	2	Knob-Screw, Thumb
30	133-1034	1	Foam-Interior
31	125-8067	2	Plug-Plastic
32	133-1078	1	Hose-Wiper Fluid
33	3290-378	2	Tie-Cable
34	127-9905	1	Fitting-Hose, Barb


Front and Rear Window Assembly

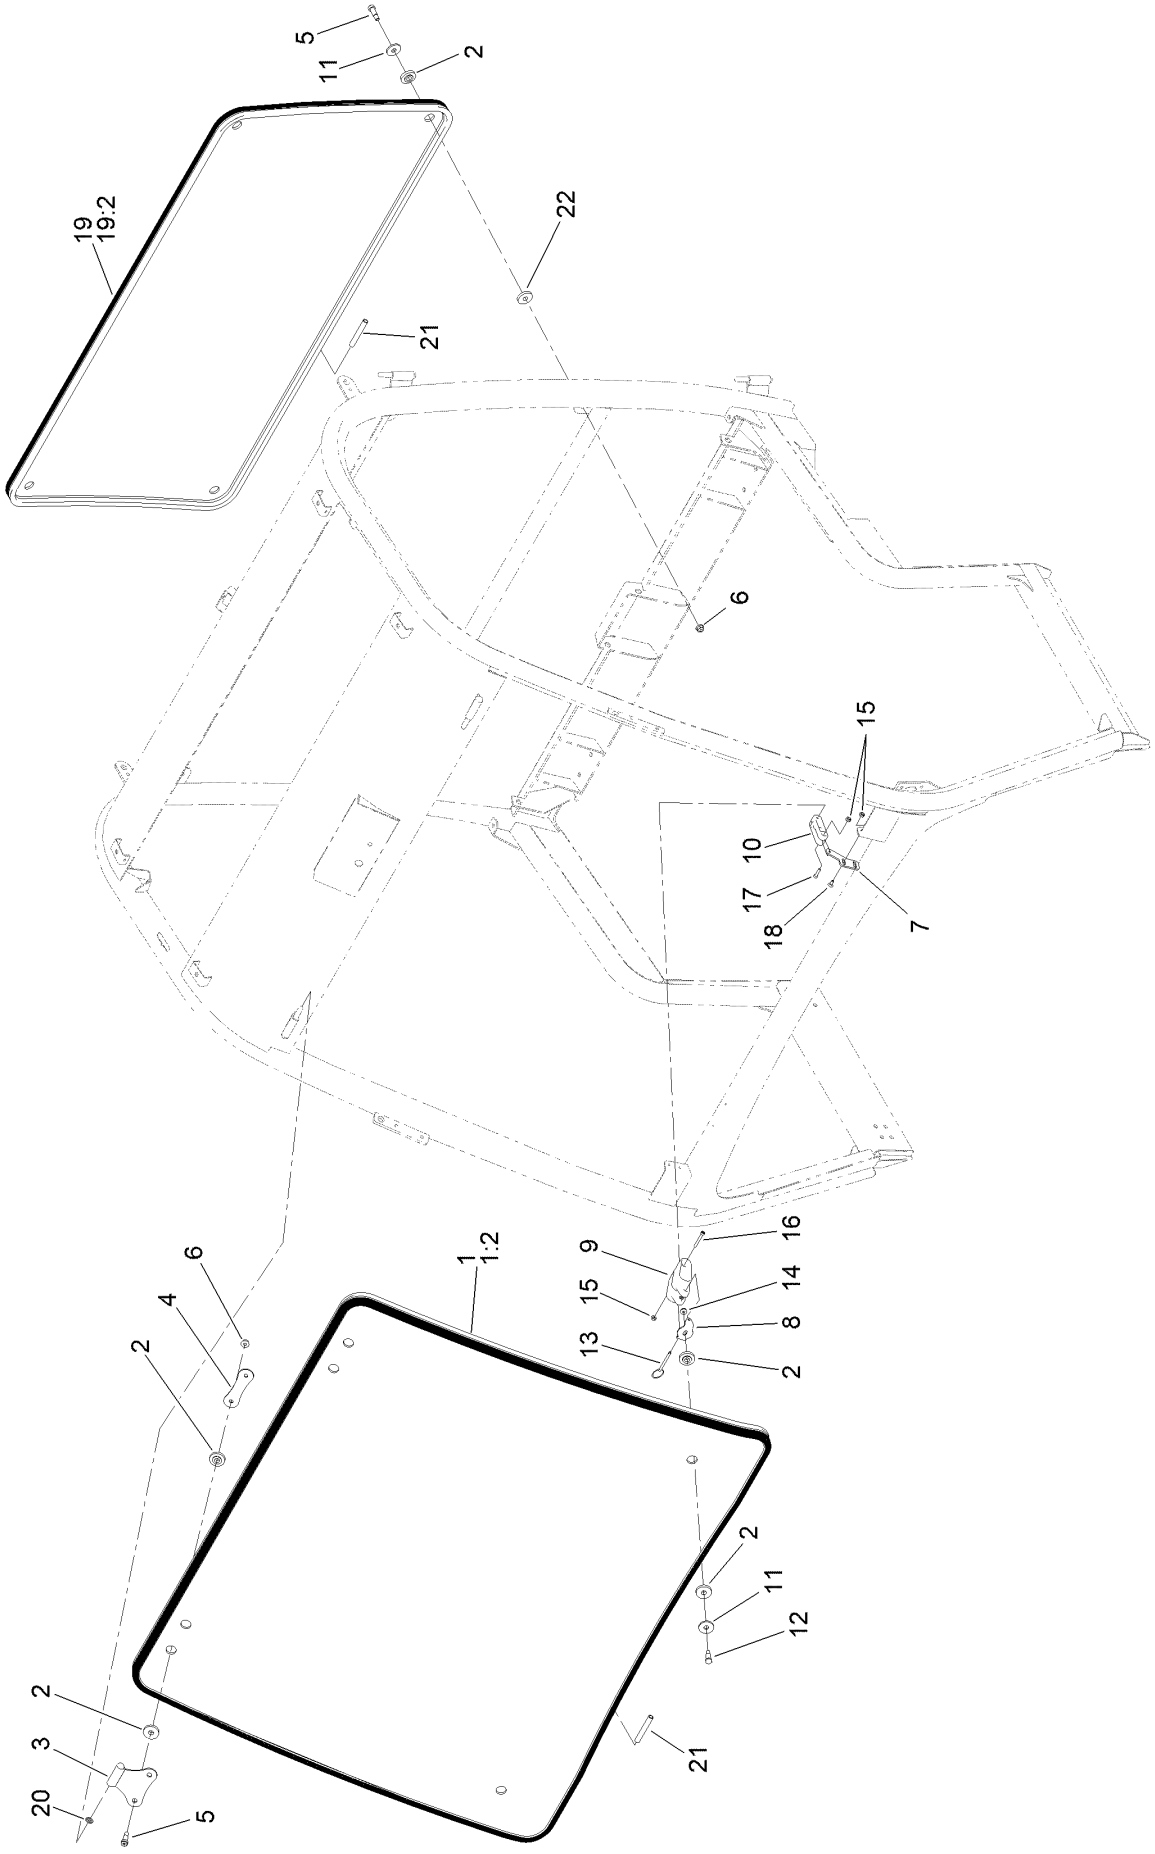

Front and Rear Window Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-1081	1	Front Hinged Window ASM
1:2	132-3646	1	Seal-Trim, Front Window
2	125-9982	16	Bushing-Flange
3	121-8535	2	Hinge-Window
4	144-3307	2	Plate-Backer, Windshield
5	125-9521	8	Screw-Shldr HSH
6	104-8300	8	Nut-HF, NI
7	130-0590	2	Mount-Tab
8	144-3308	2	Mount-Latch
9	125-9792	2	Handle-Window
10	125-9793	2	Link-Window
11	130-5815	6	Washer-Backup
12	119-9812	2	Bolt-Shoulder
13	127-9850	2	Pin-Release, Quick
14	104-7201	2	Nut-HF, NI
15	120-9681	8	Nut-Lock, NI
16	3274-59	2	Screw-HSH
17	3274-14	2	Screw-HSH
18	1-807513	4	Bolt-CARR
19	133-1082	1	Rear Window ASM
19:2	132-3626	1	Seal-Trim, Rear Window
20	121-8441	2	Washer-Spacer
21	130-5578	2	Tubing-Seal, Rubber
22	125-9537	4	Bushing-Flange

Wire Harness Assembly

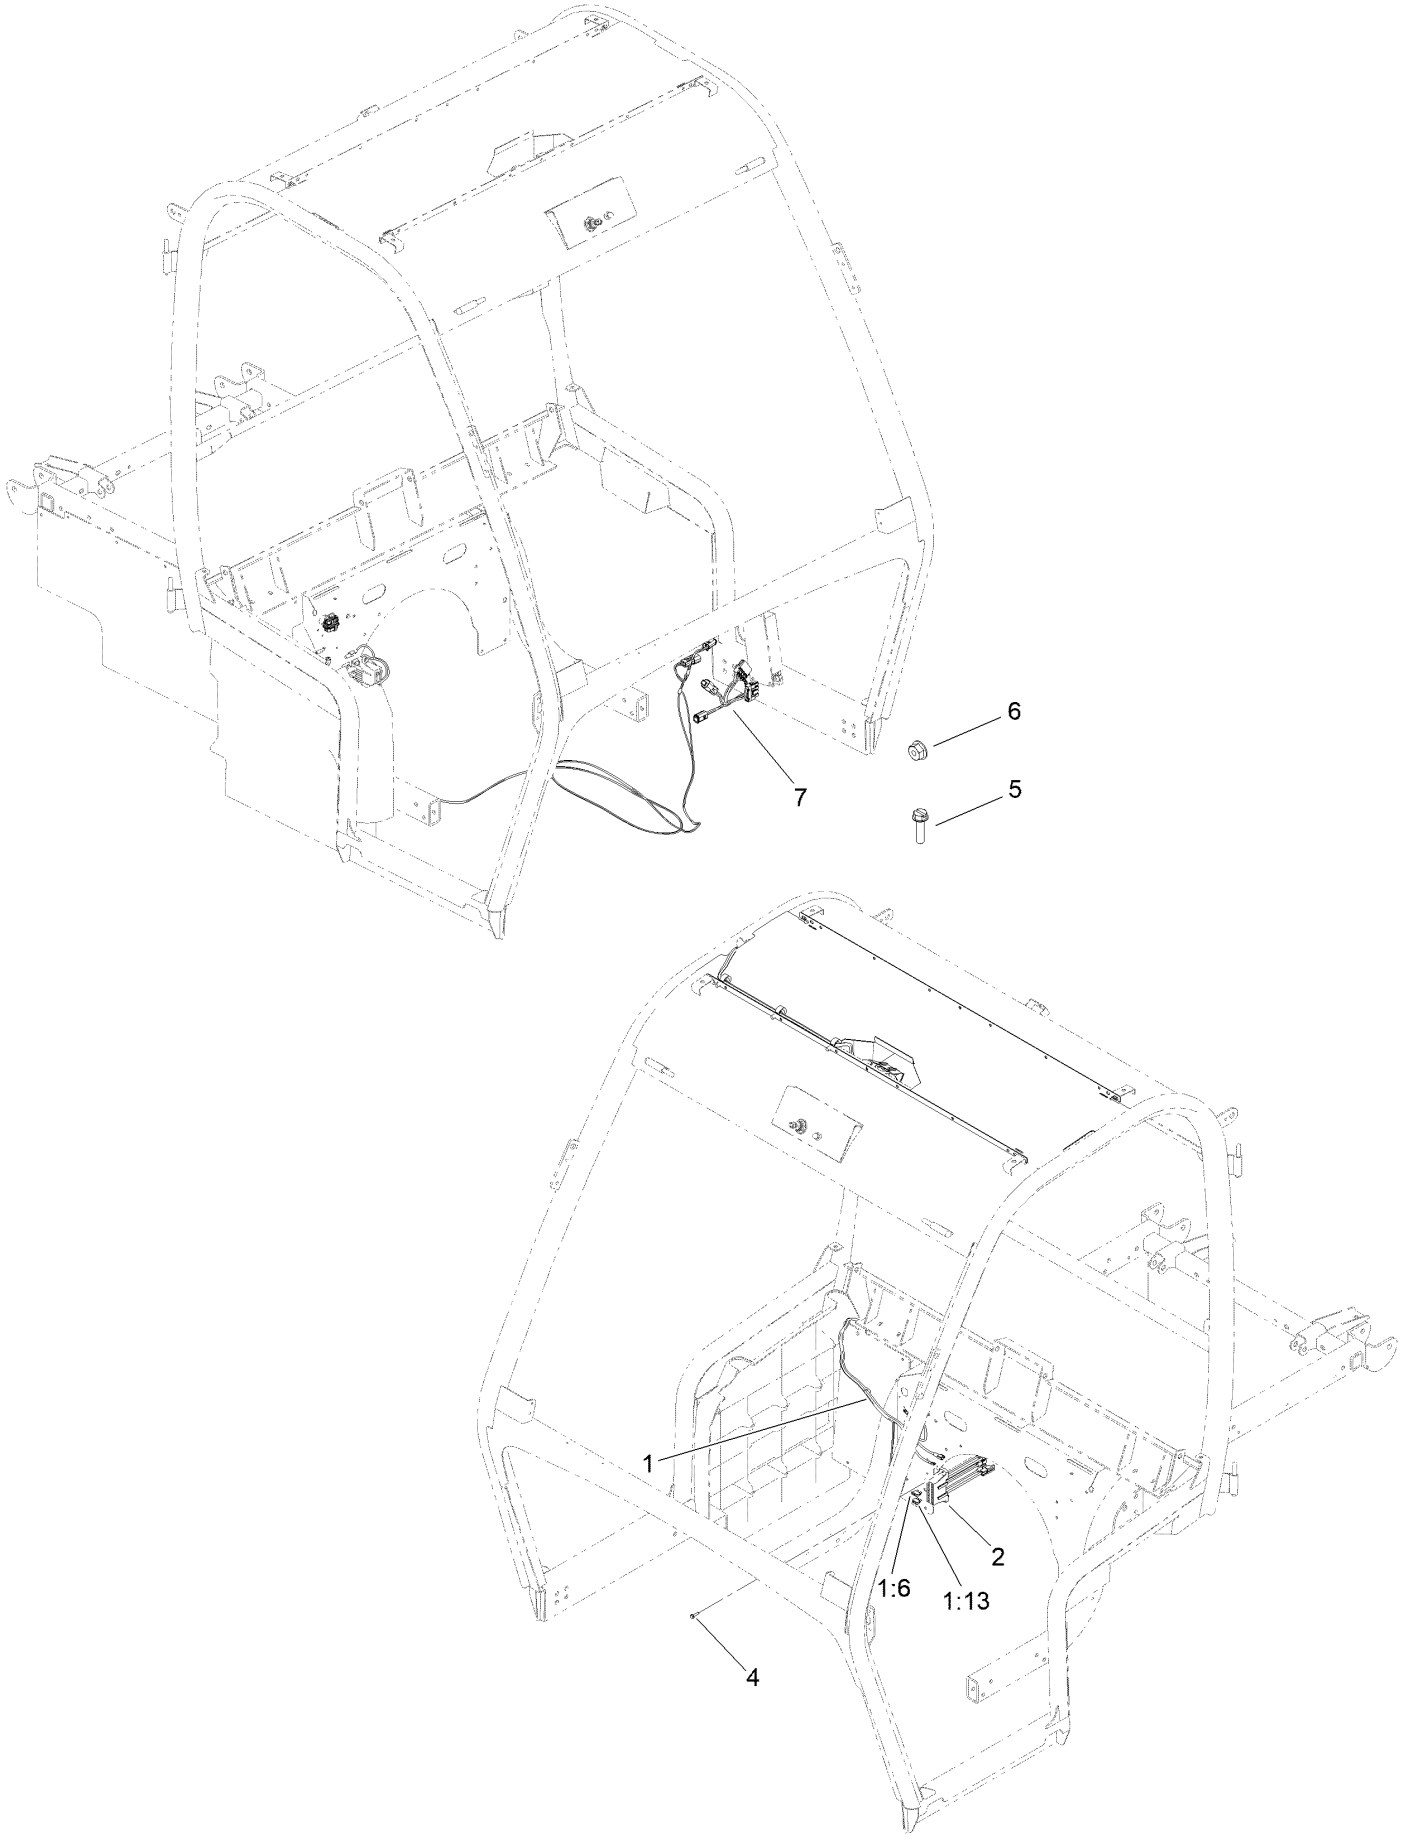

Wire Harness Assembly (continued)

Ref.	Part Number	Qty.	Description
1	122-0730	1	Harness-Wire
1:6	109355	1	Fuse-Blade, 15 Amp
1:13	110928	1	Fuse-Blade, 5 Amp
2	92-2641	1	Block-Fuse
4	100-4351	2	Screw-HWH
5	32105-13	2	Screw-HWH
6	3290-148	2	Nut-HF
7	122-1720	1	Harness-Wire, Cab Adapter



Count on it.